

Installation Instructions & Use Recommendations

FMS Accessories – CHP Repeater Antenna Ground Wire

These instructions must be read carefully and thoroughly **before** beginning work. FMS Solutions, LLC accepts no liability for damage caused by failure to observe the installation instructions or use recommendations.

Installation of this accessory does not change the factory specified load limits for the motorcycle.




Unscrew repeater antenna.

Remove the ring nut and internal tooth lock washer.

Install ½" ground cable ring terminal, then reassemble with internal tooth washer and ring nut. Tighten with ring terminal cable exiting toward support bracket as shown in photo on right.



Run cable along side light head cable – replace cable tie to secure cable to support bracket.

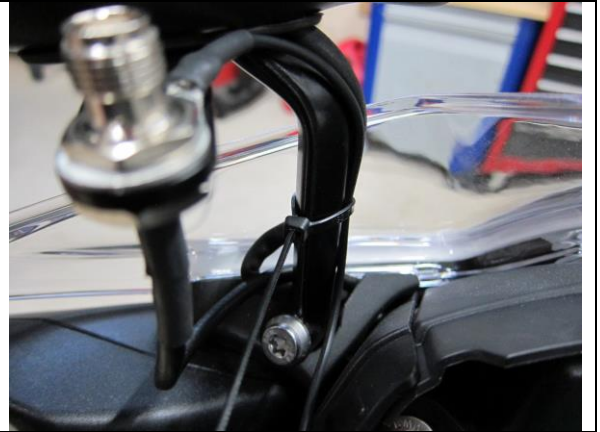

Remove the two T25 head screws holding the speaker cover in place and remove cover – sliding toward the mirror to disengage the slot at the top of the cover.



Route the cable on the seam of the enclosure near the pod support bracket. Route the cable up and into the speaker enclosure as noted at right.



Loosen the lower fairing bracket support bolt on the right side just ahead of the ignition switch as shown at right.



Route the cable under the dashboard to the right side of the fairing bracket as shown at right. Install the ground cable ring terminal along with a flat washer to reduce the likelihood of the ring terminal winding around when the bolt is tightened. Secure bolt with ring terminal wire exit facing forward.



Reinstall the speaker cover and the two T25 head screws holding the speaker cover in place – sliding tab with “hook” into slot at the top – steer the leading edge under the dash cover.

Screw the repeater antenna back onto the mount.



Install a cable tie around the fairing central support to secure the ground cable from moving out of position as shown in the photo at right.

