

INDEX

INDEX - Alphabetical Listing of Electrical Circuits

Automatic Antenna	126
Automatic Climate Control	121
Auxiliary Fan	120
Charging System	106
Cigar Lighter	126
Clock	114
Component Location	201
Cruise Control	109
Engine-Transmission Overload Protection	107
Gauges	114
Ground Distribution	128
Heated Seats	127
Horns	118
Lights	
—Backup	107
—Center Console Illumination	116
—Courtesy	117
—Fog Lights	108
—Glove Box	118
—Hazard	112
—Headlights	108
—Instrument Cluster Illumination	114

Lights (continued)	
—License	111
—Marker	111
—Park	110
—Stop	109
—Tail	110
—Turn Signal	112
—Trunk	111
Power Distribution	102
Power Windows	124
Pre-Glow System	104
Radio	126
Rear Defogger	125
Sliding Roof	125
Start/Stop (Ignition Switch)	105
Tachometer	114
Transmission Kickdown	107
Warning Indicators	114
Warning System	113
Wiper/Washer	119



Fuse-Circuit List


Fuse	Rating (AMPS)	Circuits Protected	Page
1	8(WT)	Automatic Antenna	126
		Clock	115
		Courtesy Lights	117
		Lights: Hazard	112
		Trunk Light	111
		Warning System	113
2	16(PK)	Auxiliary Fan	120
3	16(PK)	Automatic Climate Control	121
4	8(WT)	Backup Lights/Transmission Kickdown	107
		Engine-Transmission Overload	
		Protection	107
		Lights: Turn Signal	112
		Stoplights/Cruise Control	109
		Warning Indicators/Gauges	114
		Warning System	113
5	8(WT)	Center Console Illumination	116
		Instrument Cluster Illumination	115
		Lights: Marker/License	111
		Lights: Park/Tail (RH)	110
		Warning System	113
6	25(BU)	Cigar Lighter	126
		Rear Defogger	125
7	8(WT)	Lights: Park/Tail (LH)	110
8	16(PK)	Headlights	108
		Horns	118
		Wiper/Washer	119

Fuse	Rating	Circuits Protected	Page
9	8(WT)	Automatic Climate Control	121
10	16(PK)	Auxiliary Fan	120
		Sliding Roof	125
11	8(WT)	Headlights (LH High Beam)	108
12	8(WT)	Headlights (RH High Beam)	108
13	16(PK)	Headlight (RH Low Beam)/Fog Lights	108
14	8(WT)	Headlight (RH Low Beam)	108
15	16(PK)	Power Windows	124
16	16(PK)	Power Windows	124
In-Line	2	Automatic Climate Control	121
	8	Heated Seat (Front)	127
	8	Heated Seat (Rear)	127
	8	Radio	126


100
300
SD

POWER DISTRIBUTION

102
300
SD

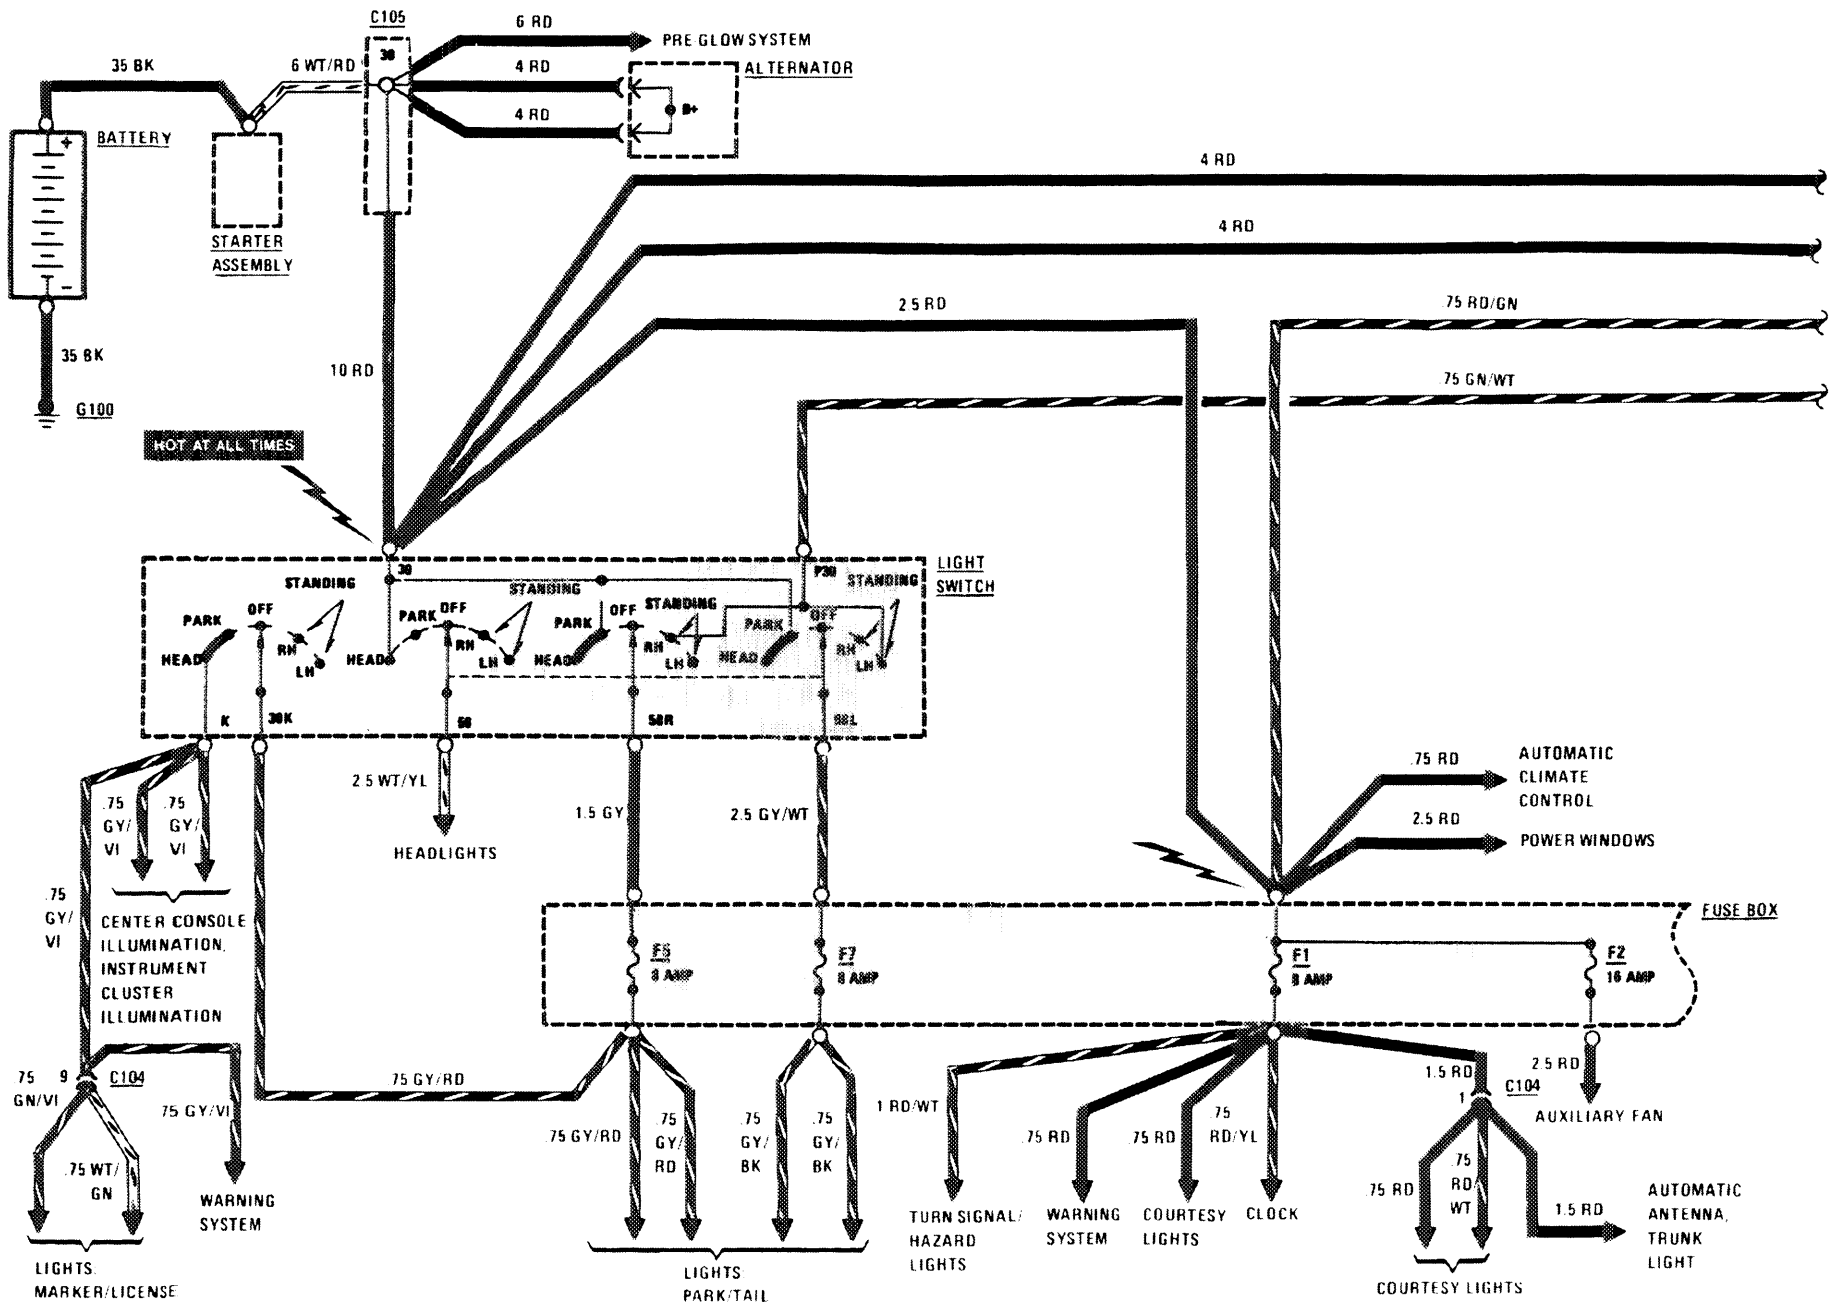


POWER DISTRIBUTION

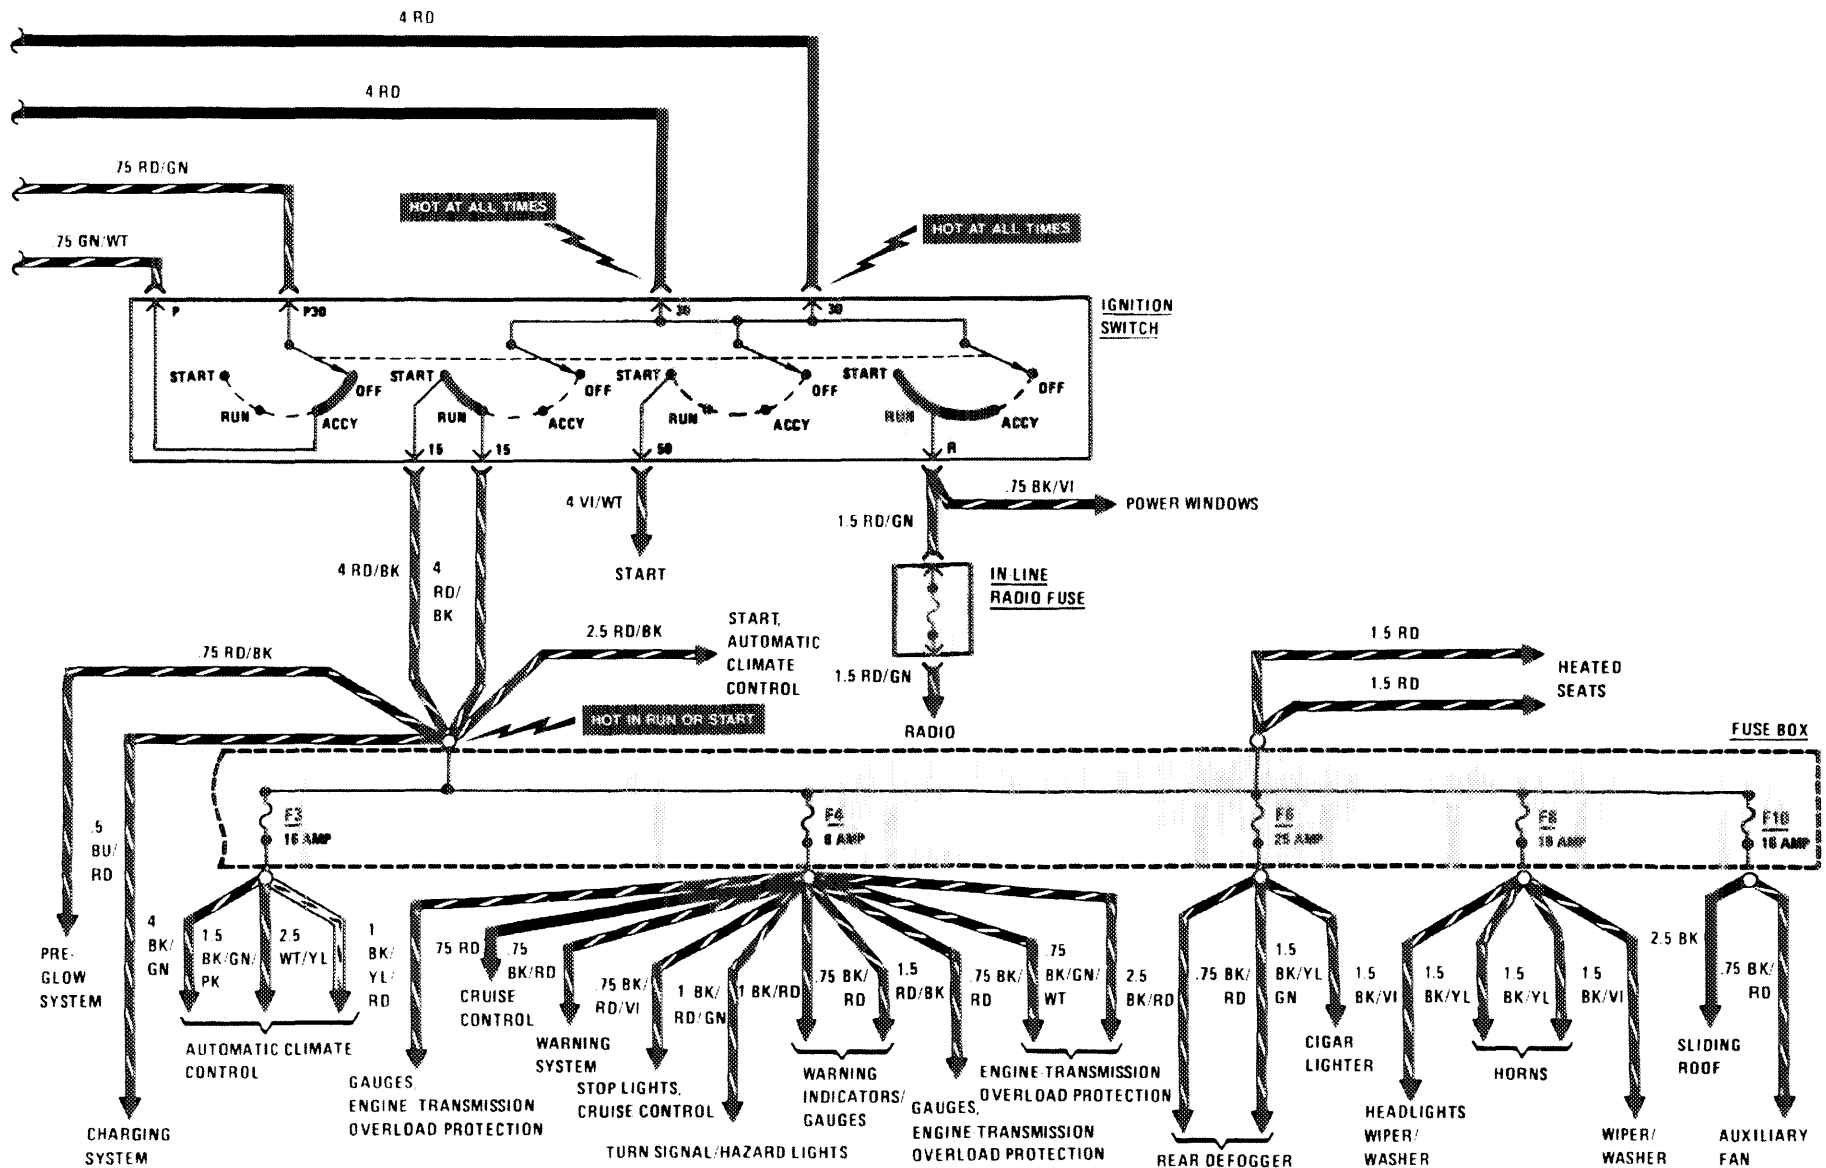


PRE-GLOW SYSTEM

104
300
SD

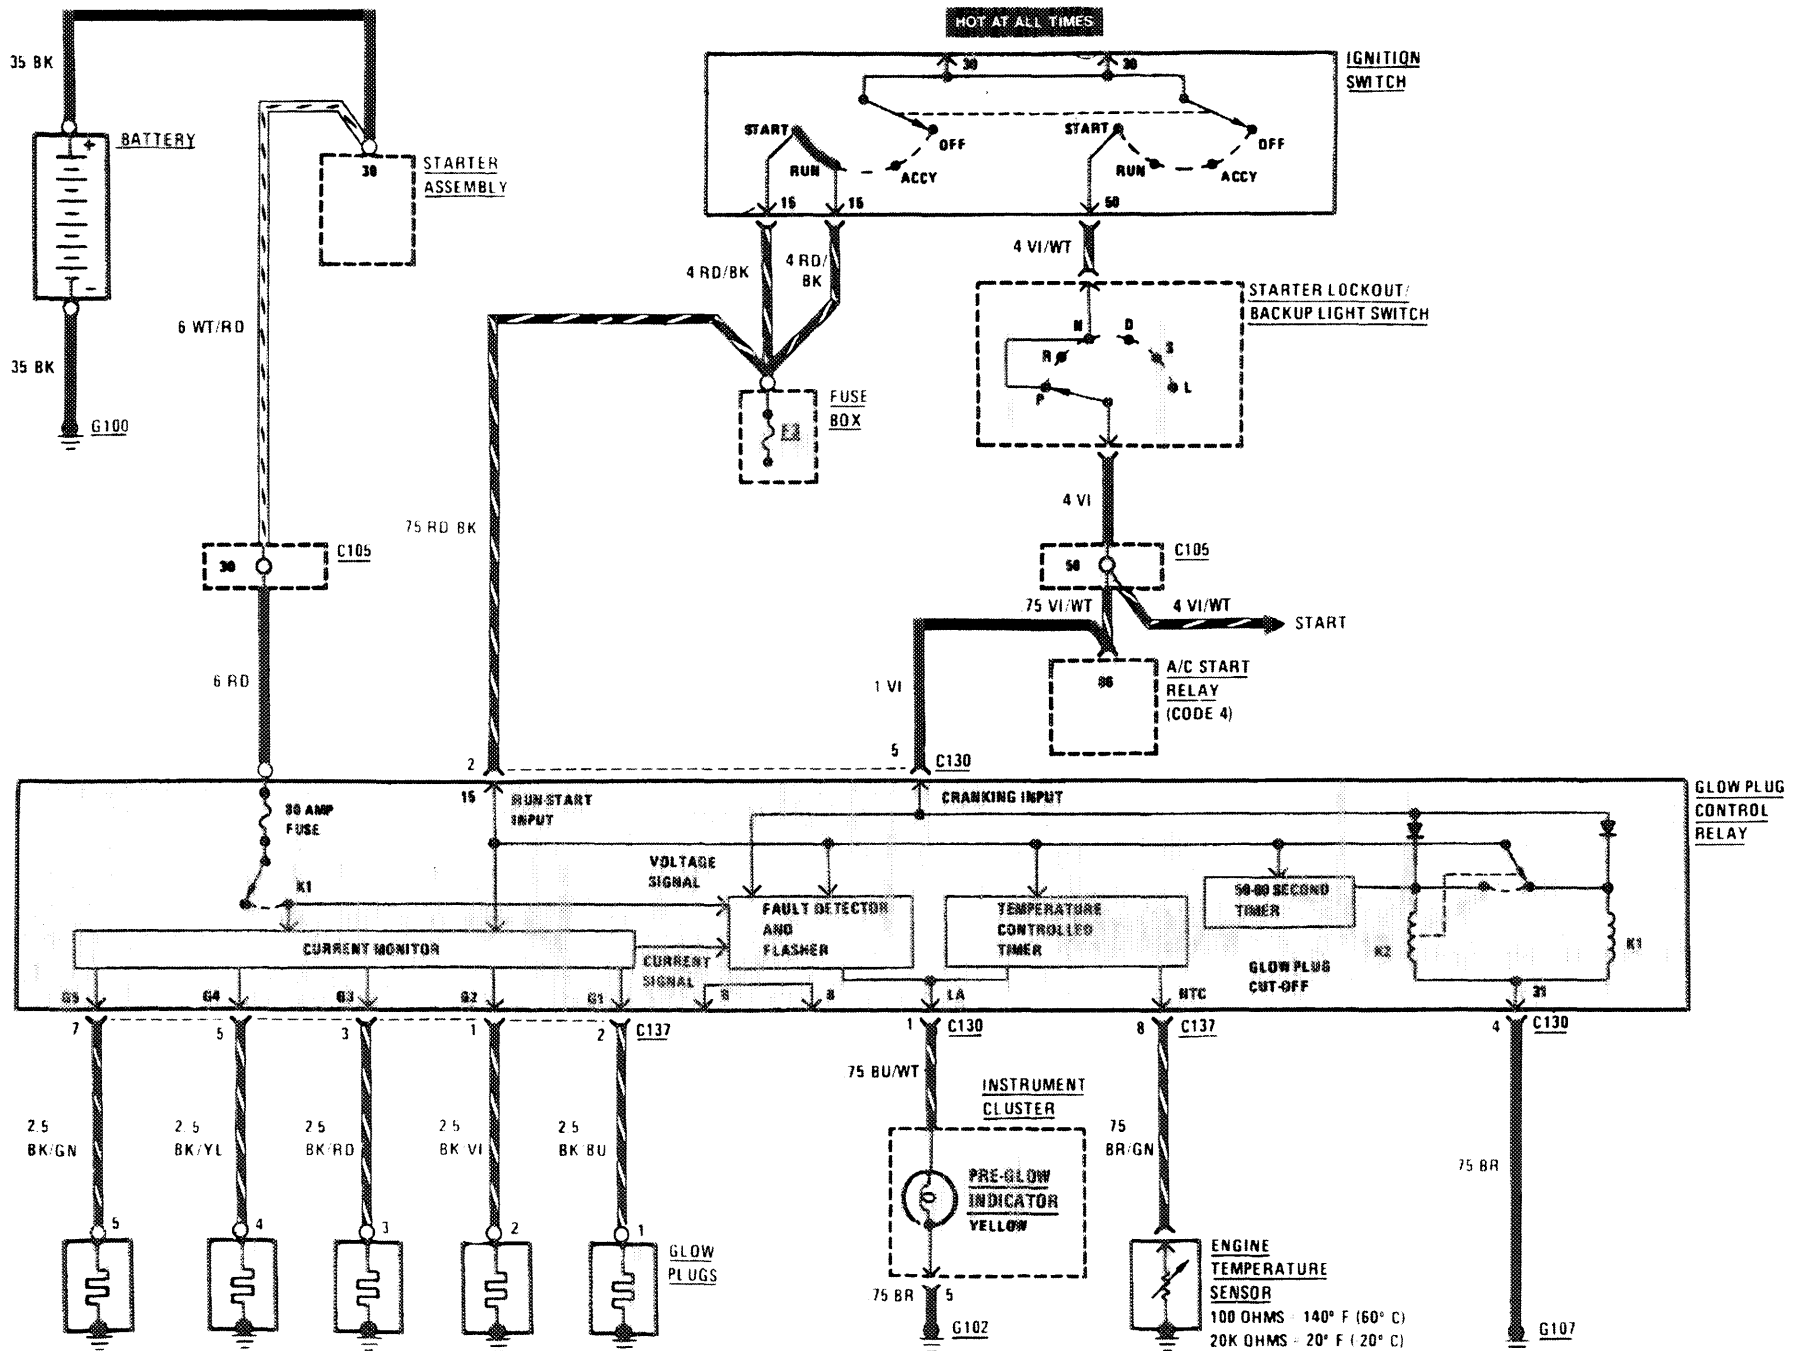


START/STOP (IGNITION SWITCH)

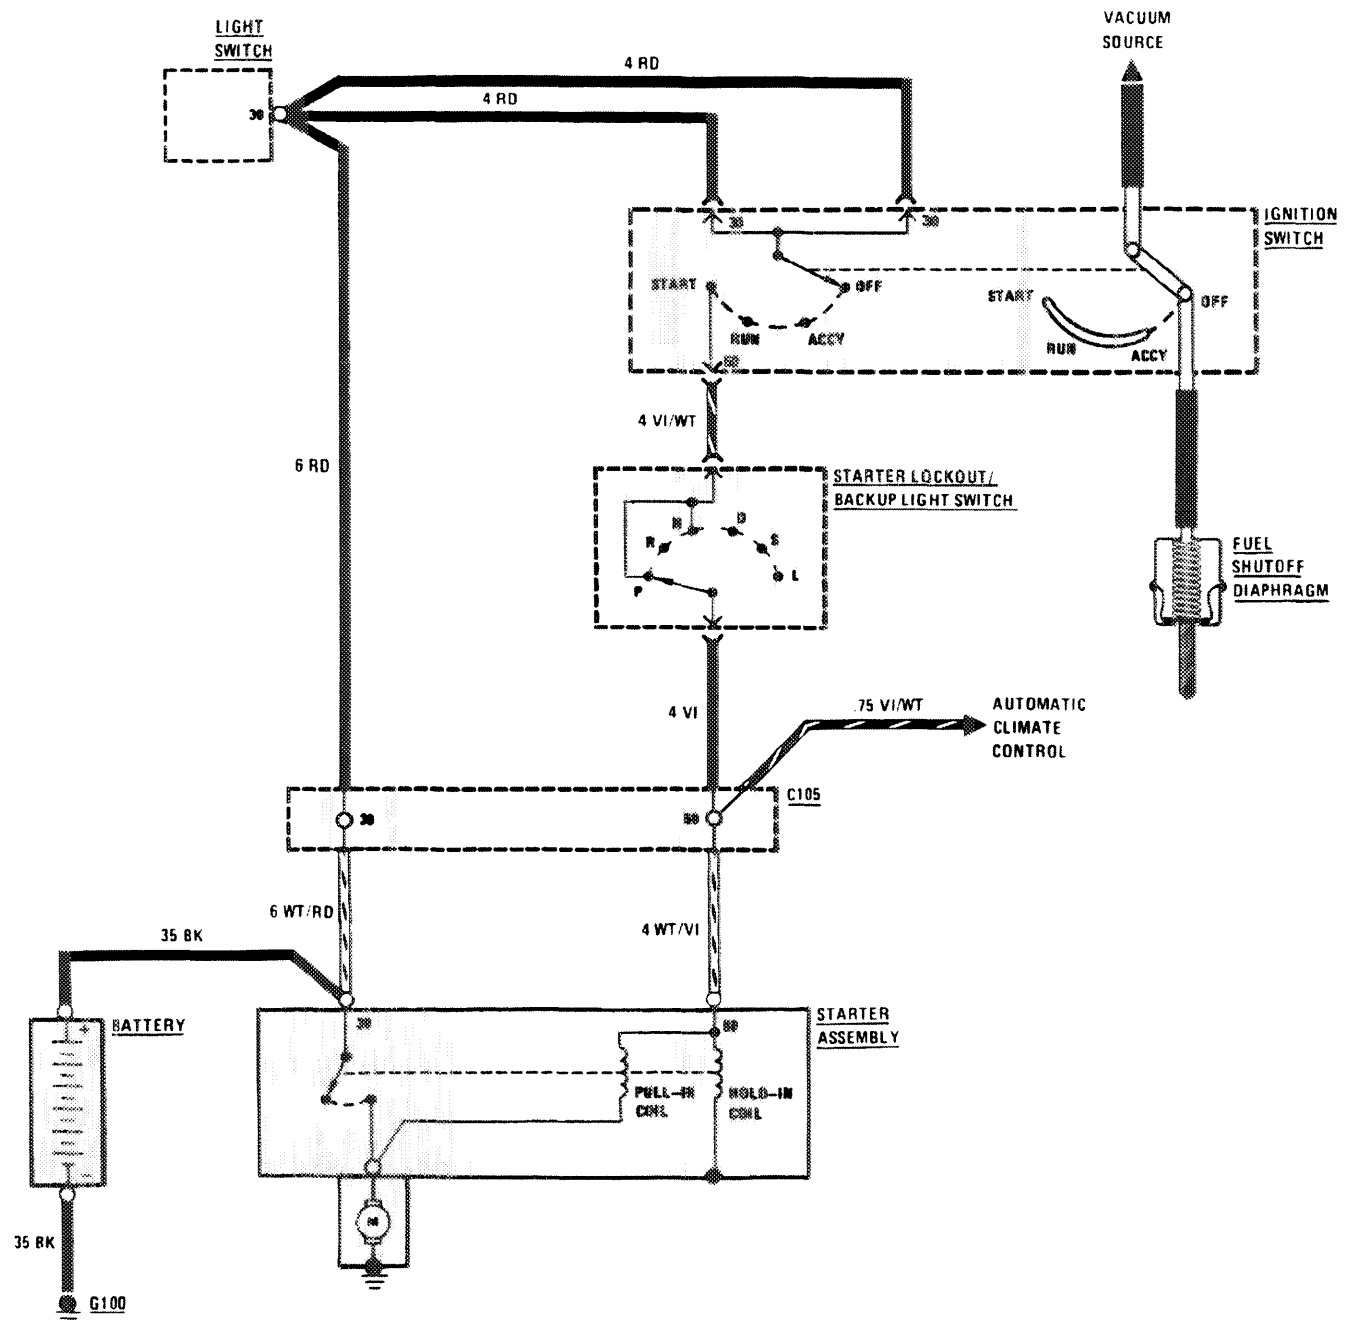


105
300
SD

CHARGING SYSTEM

106
300
SD

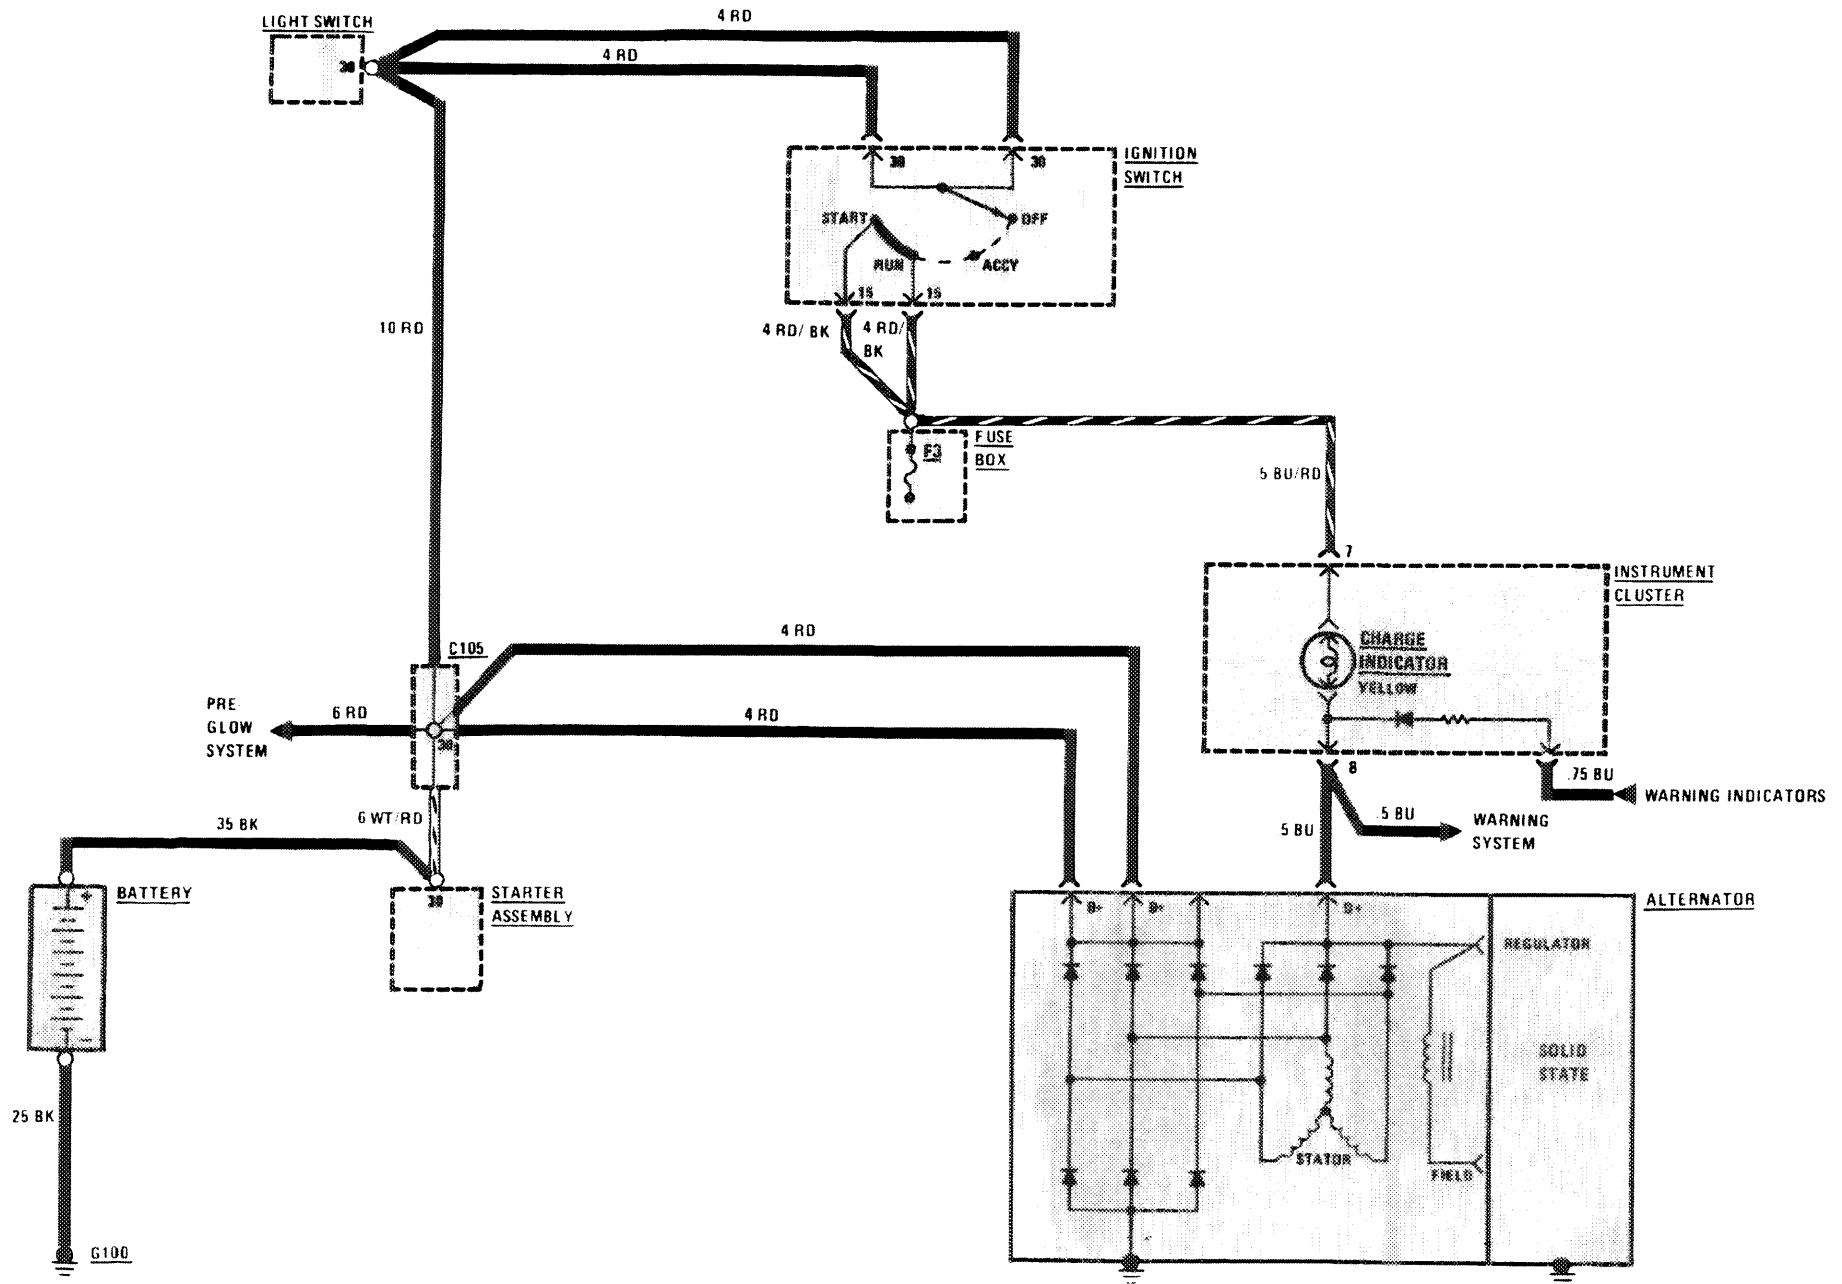


107
300
SD

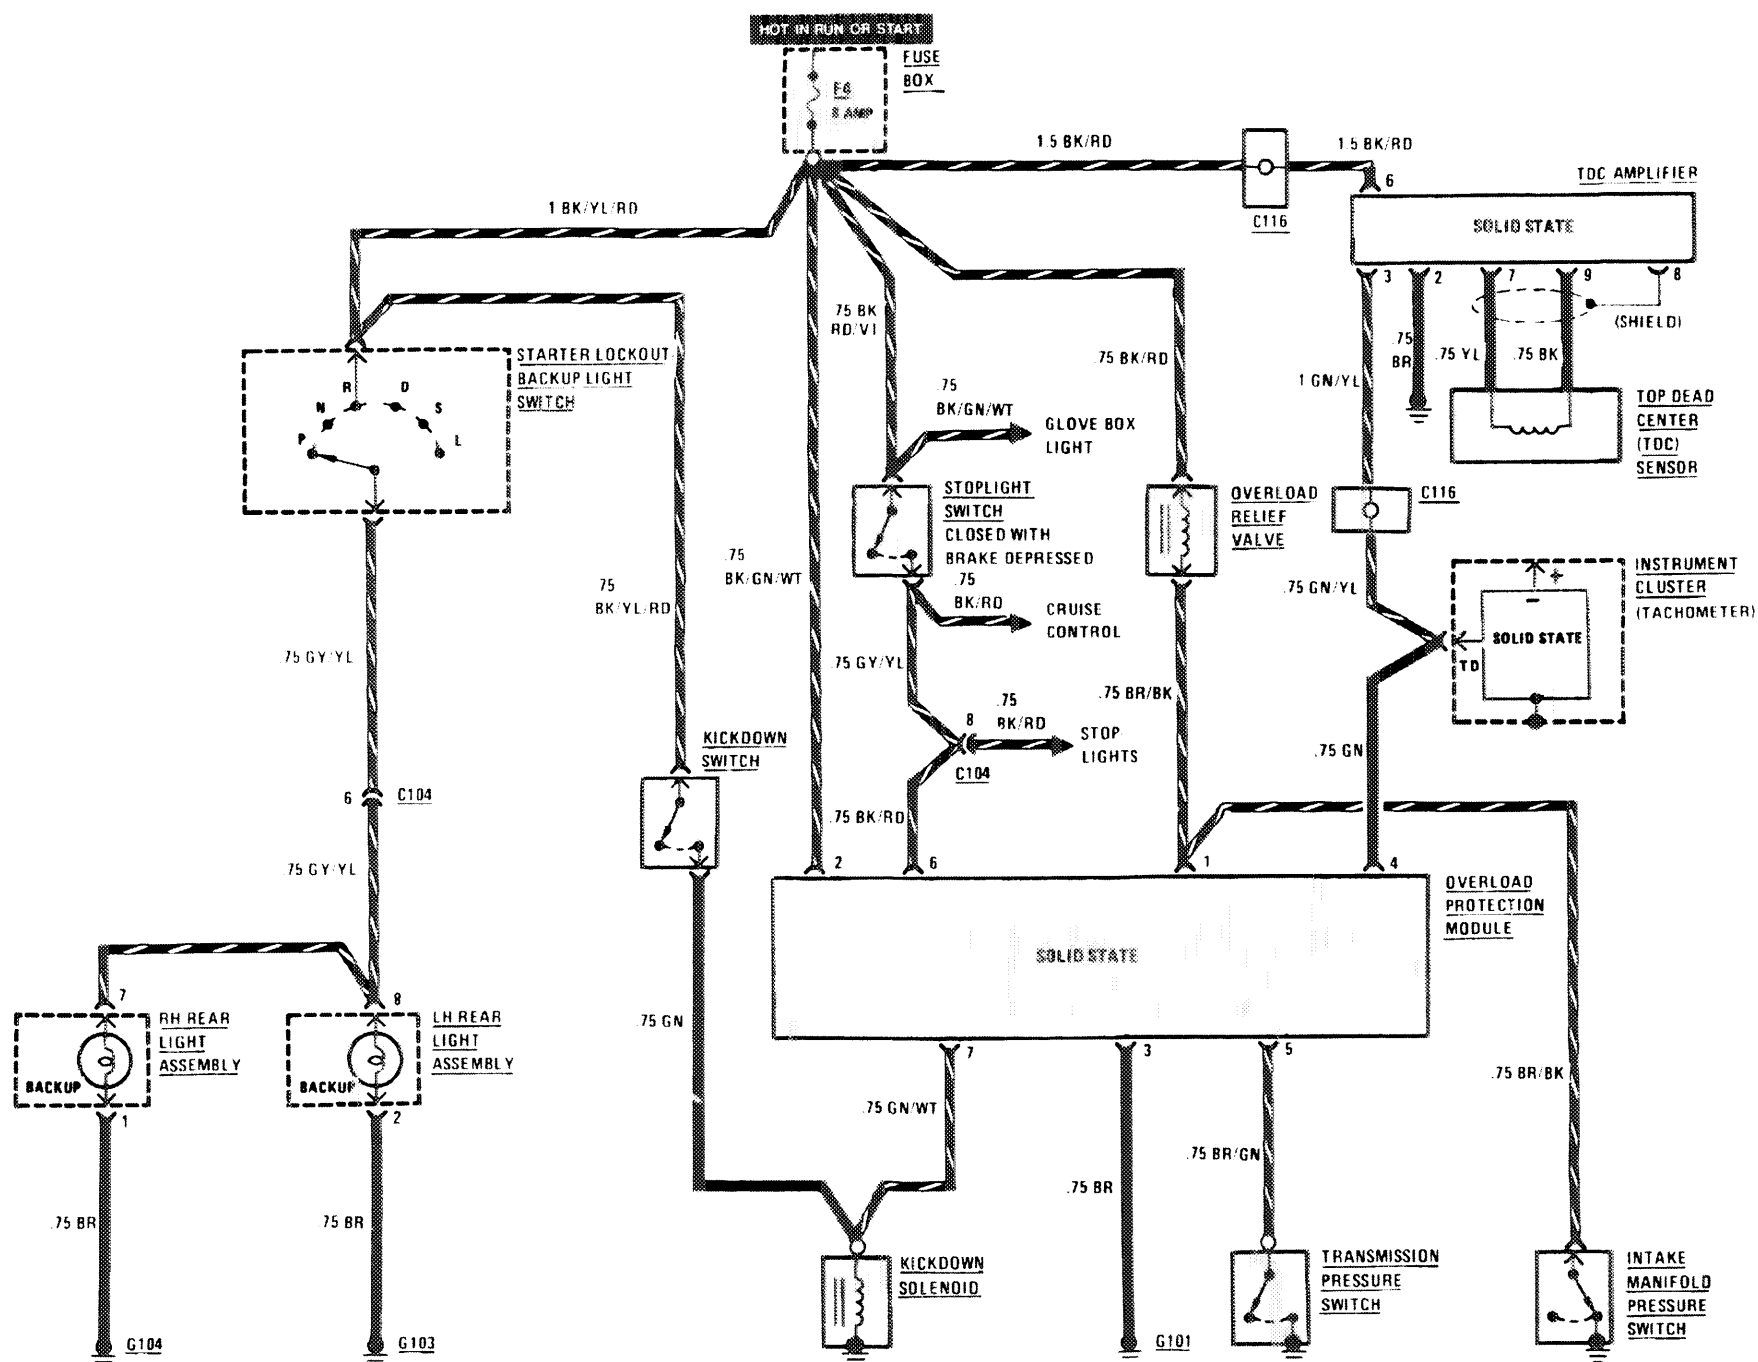


HEADLIGHTS/FOG LIGHTS

108
300
SD

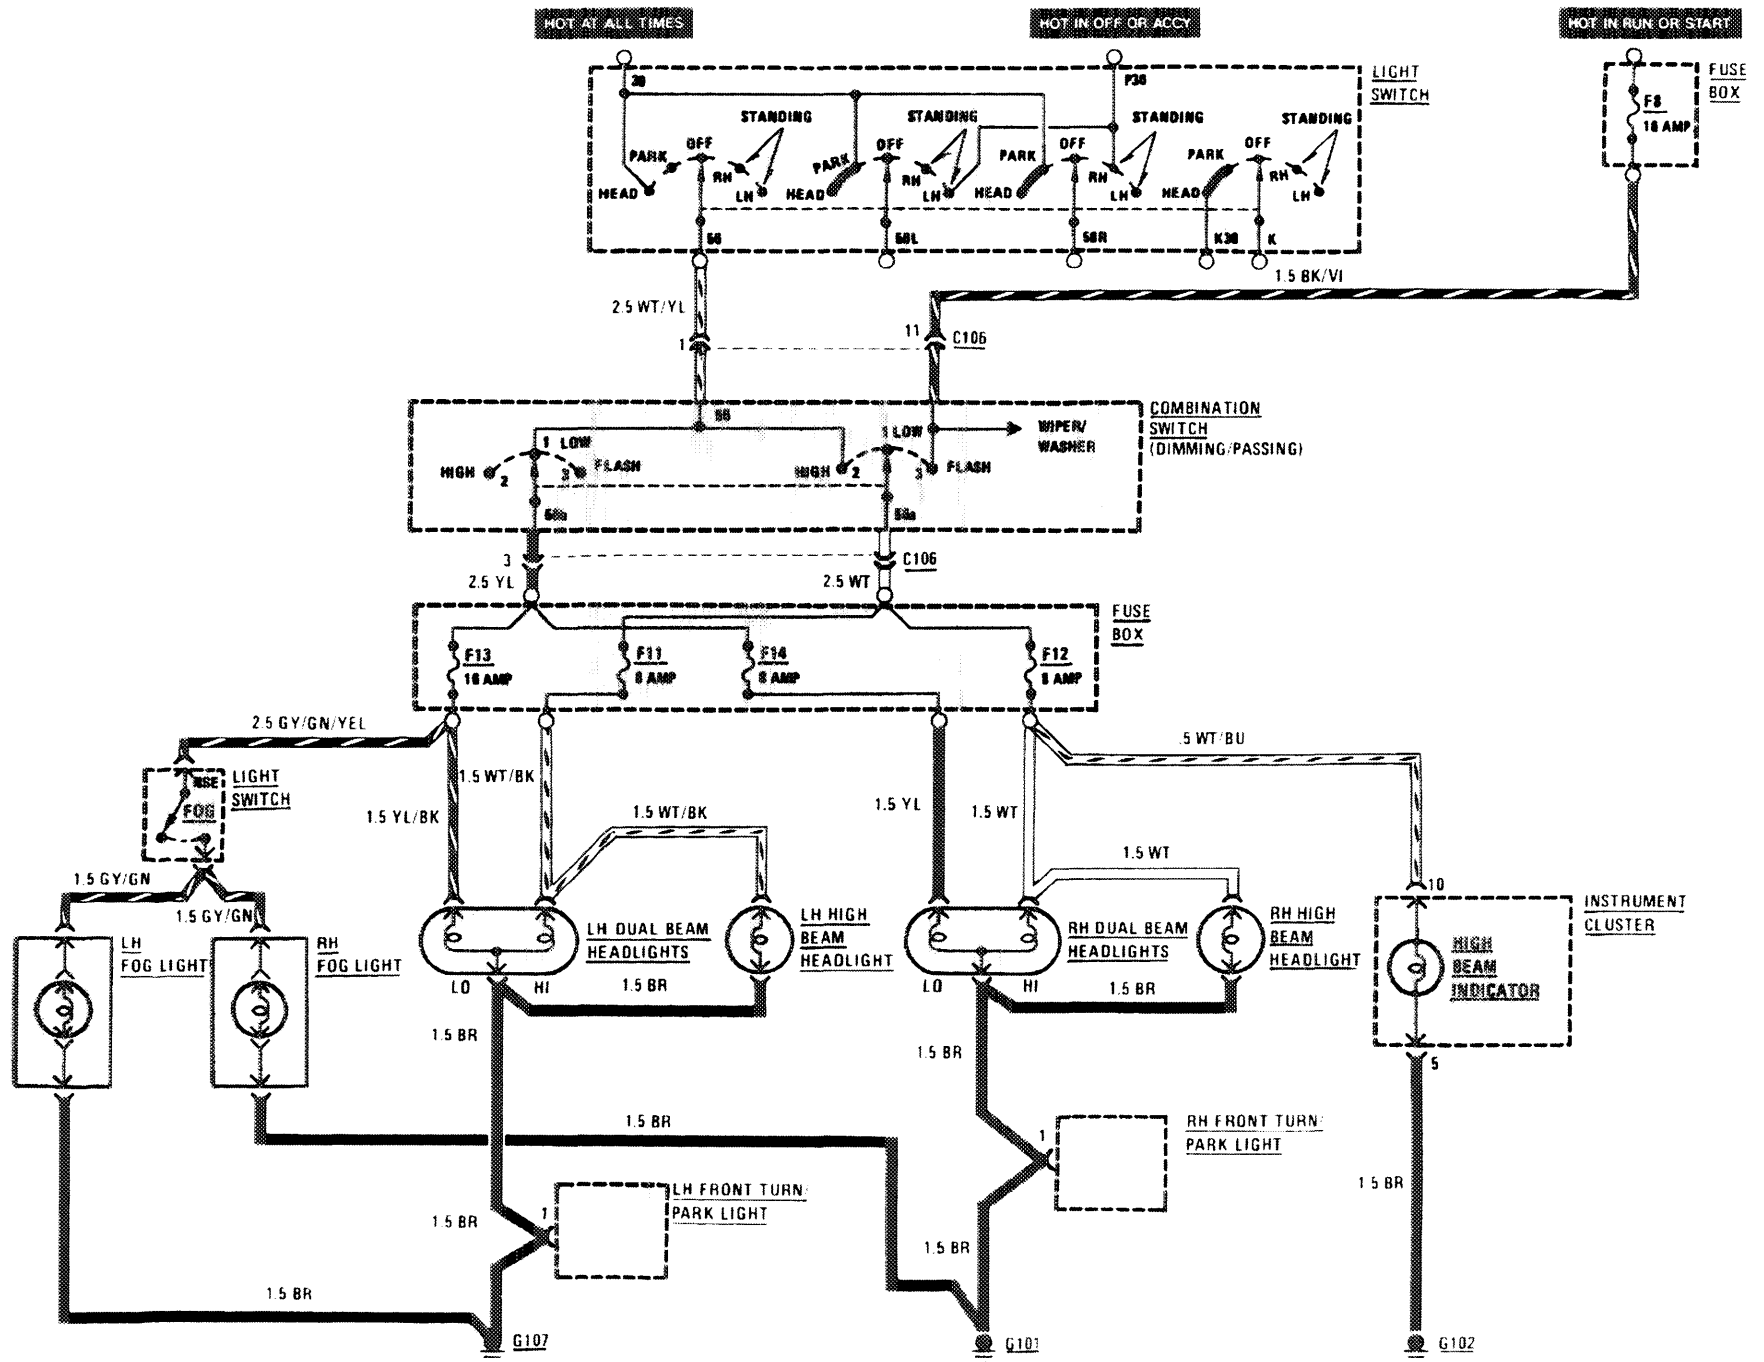


STOPLIGHTS/CRUISE CONTROL

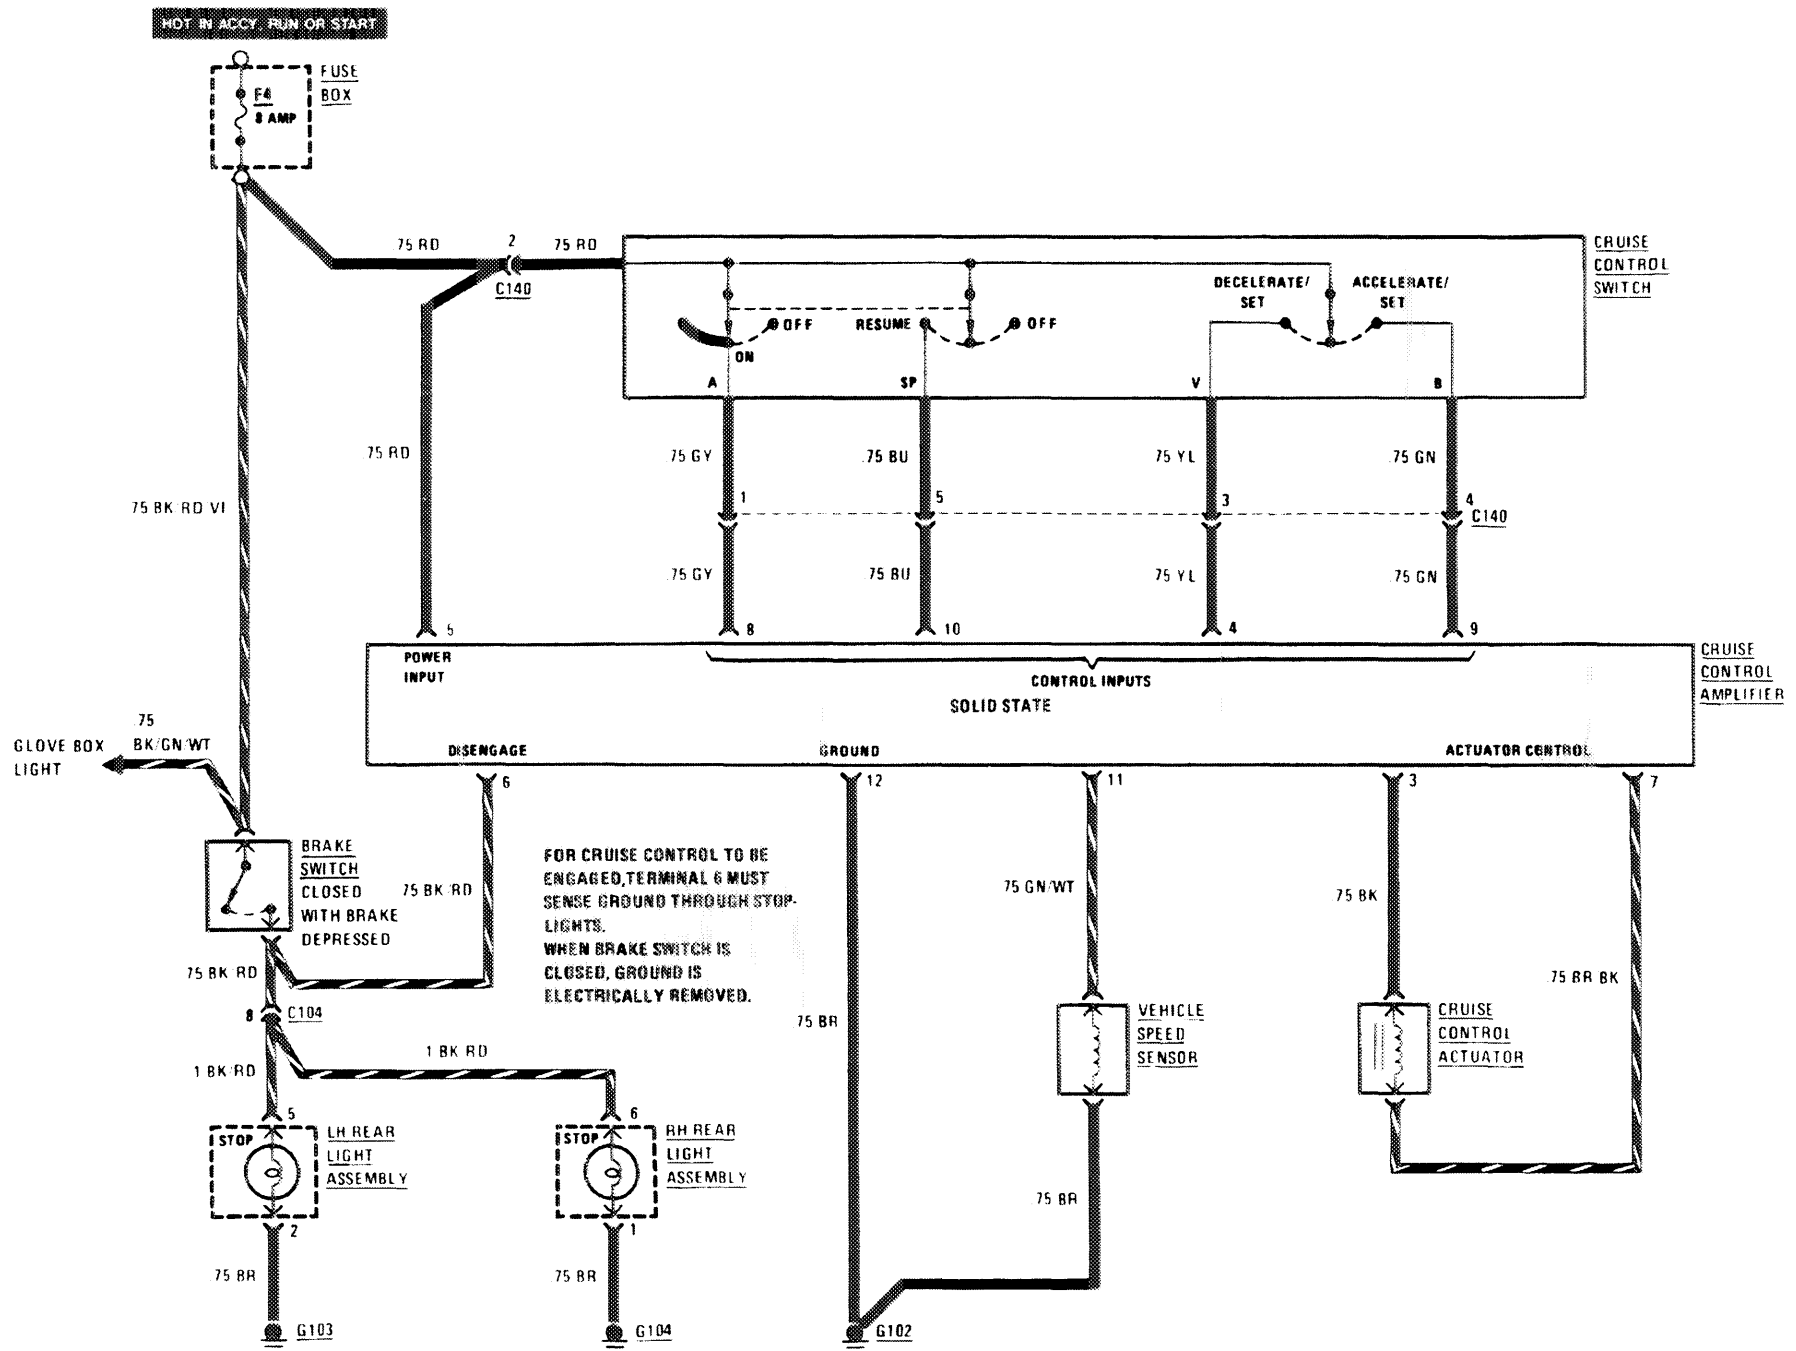


LIGHTS: PARK/TAIL


110
300
SD

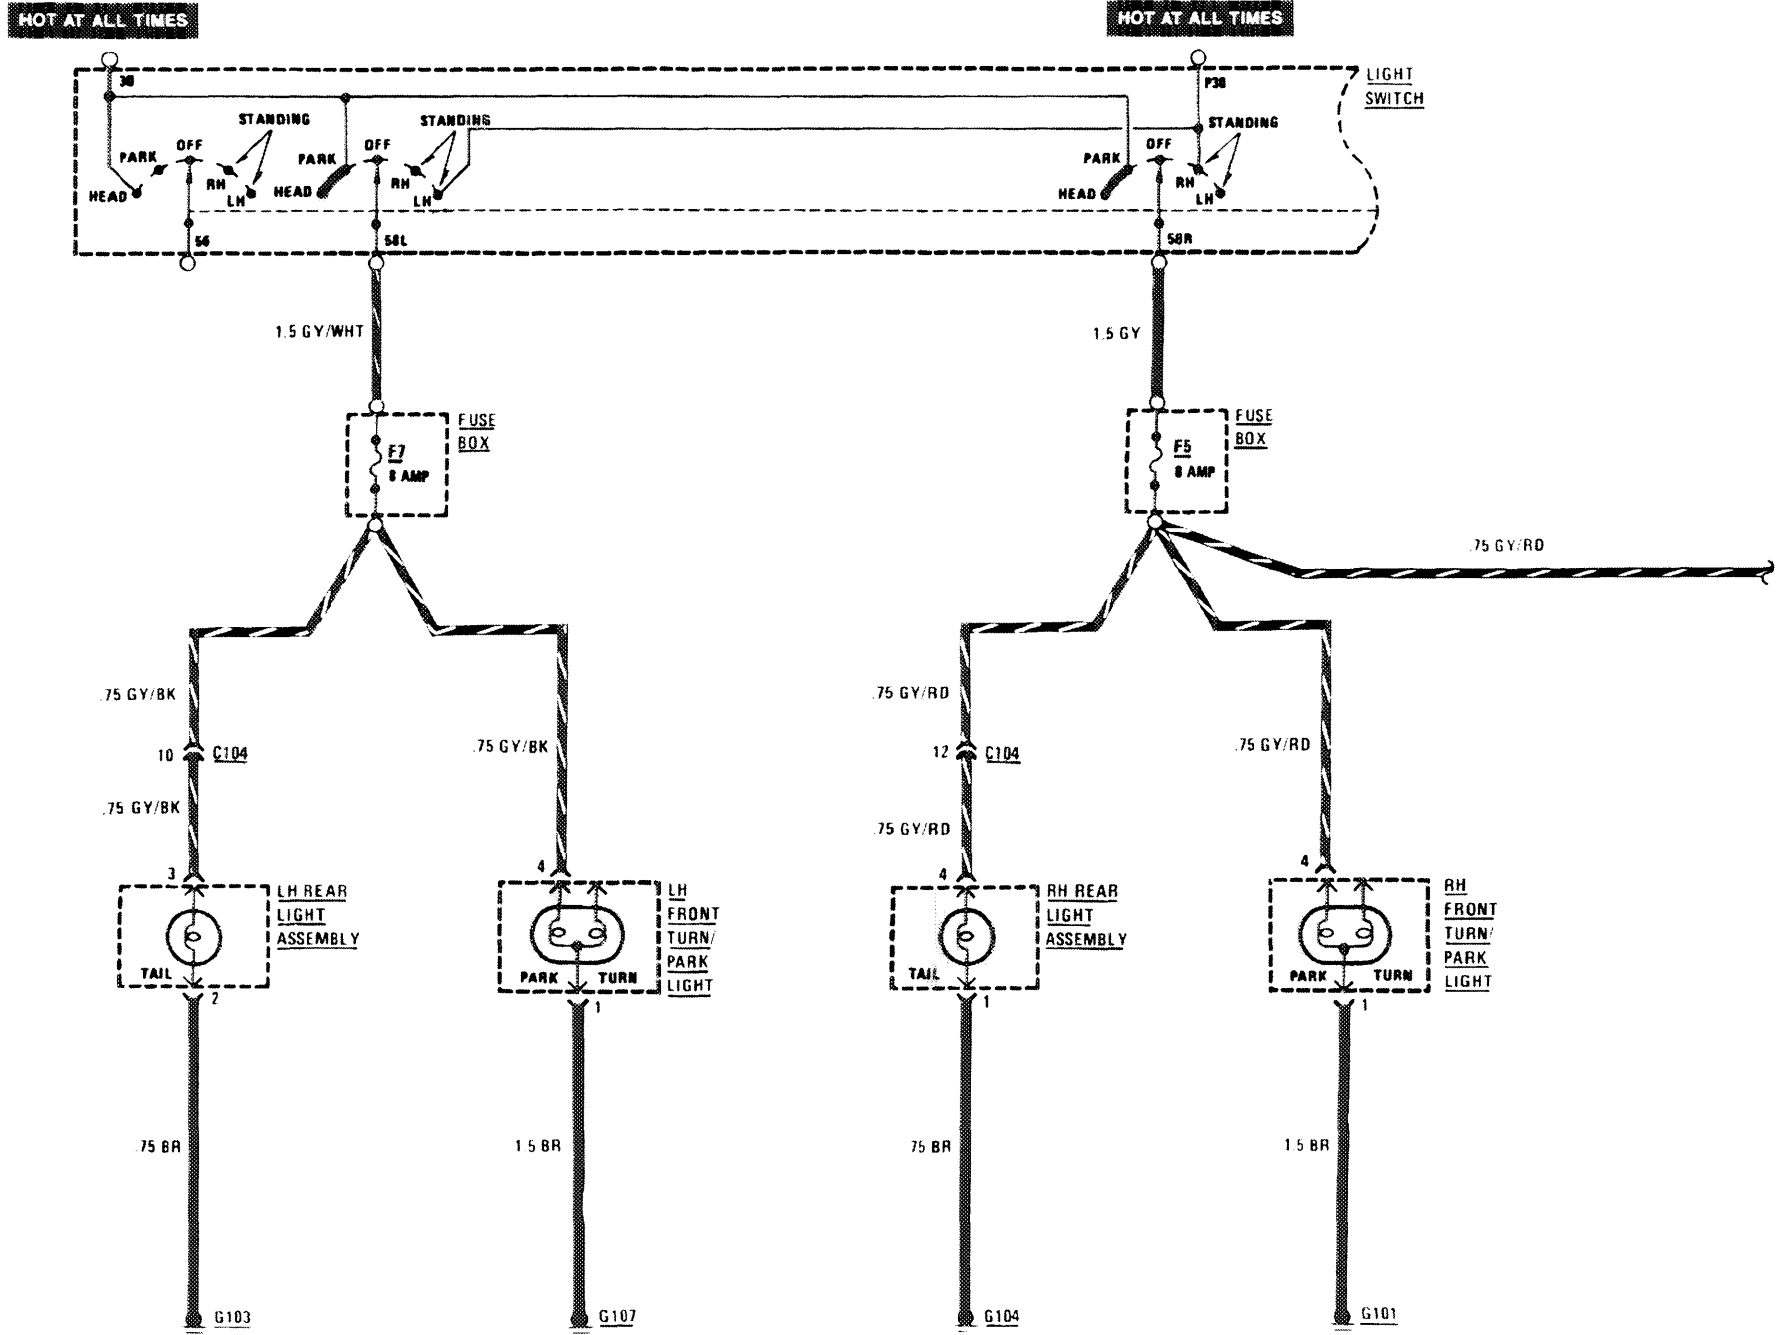


LIGHTS: MARKER/LICENSE/TRUNK

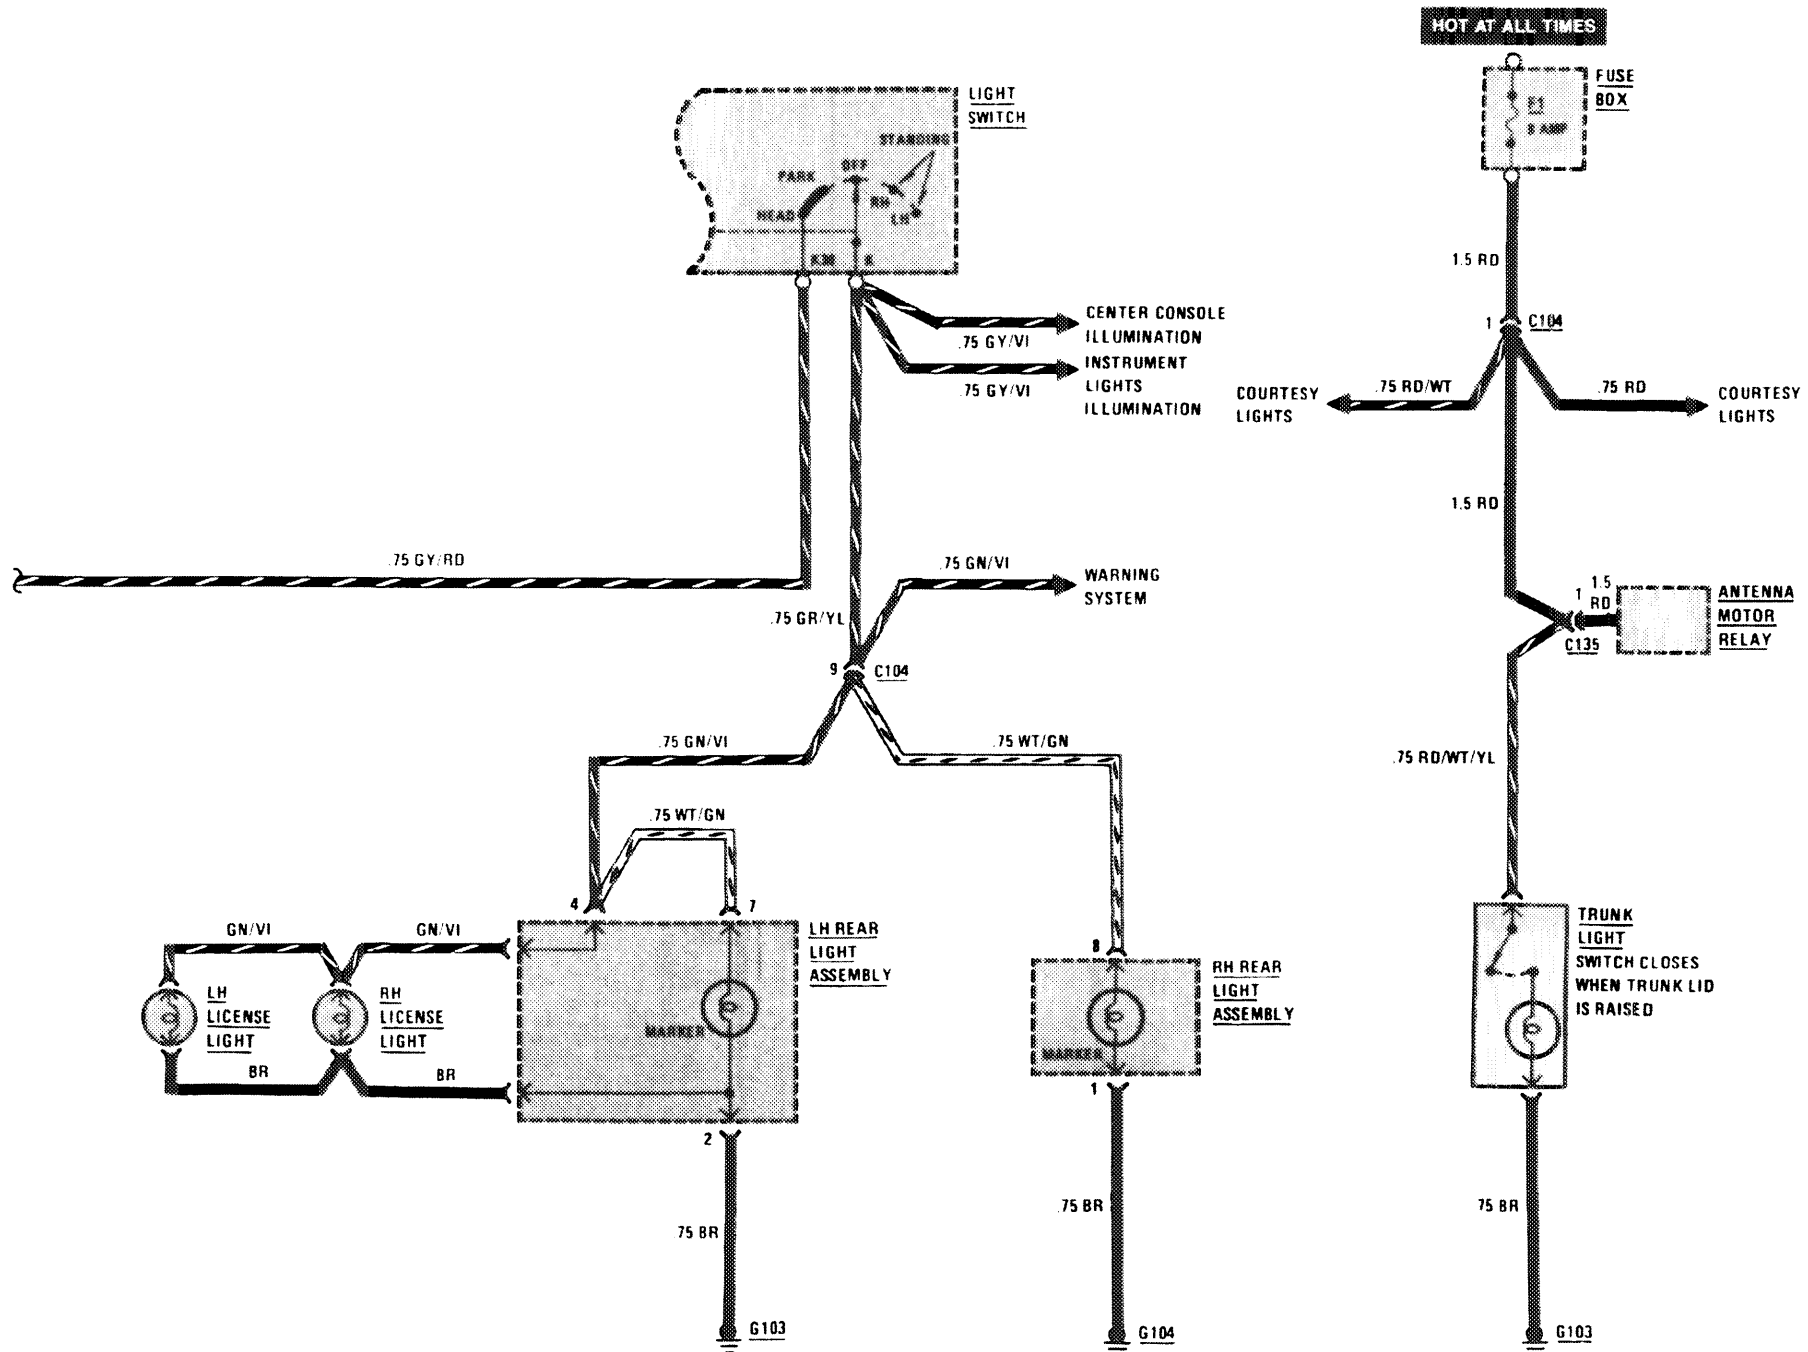

112
300
SD

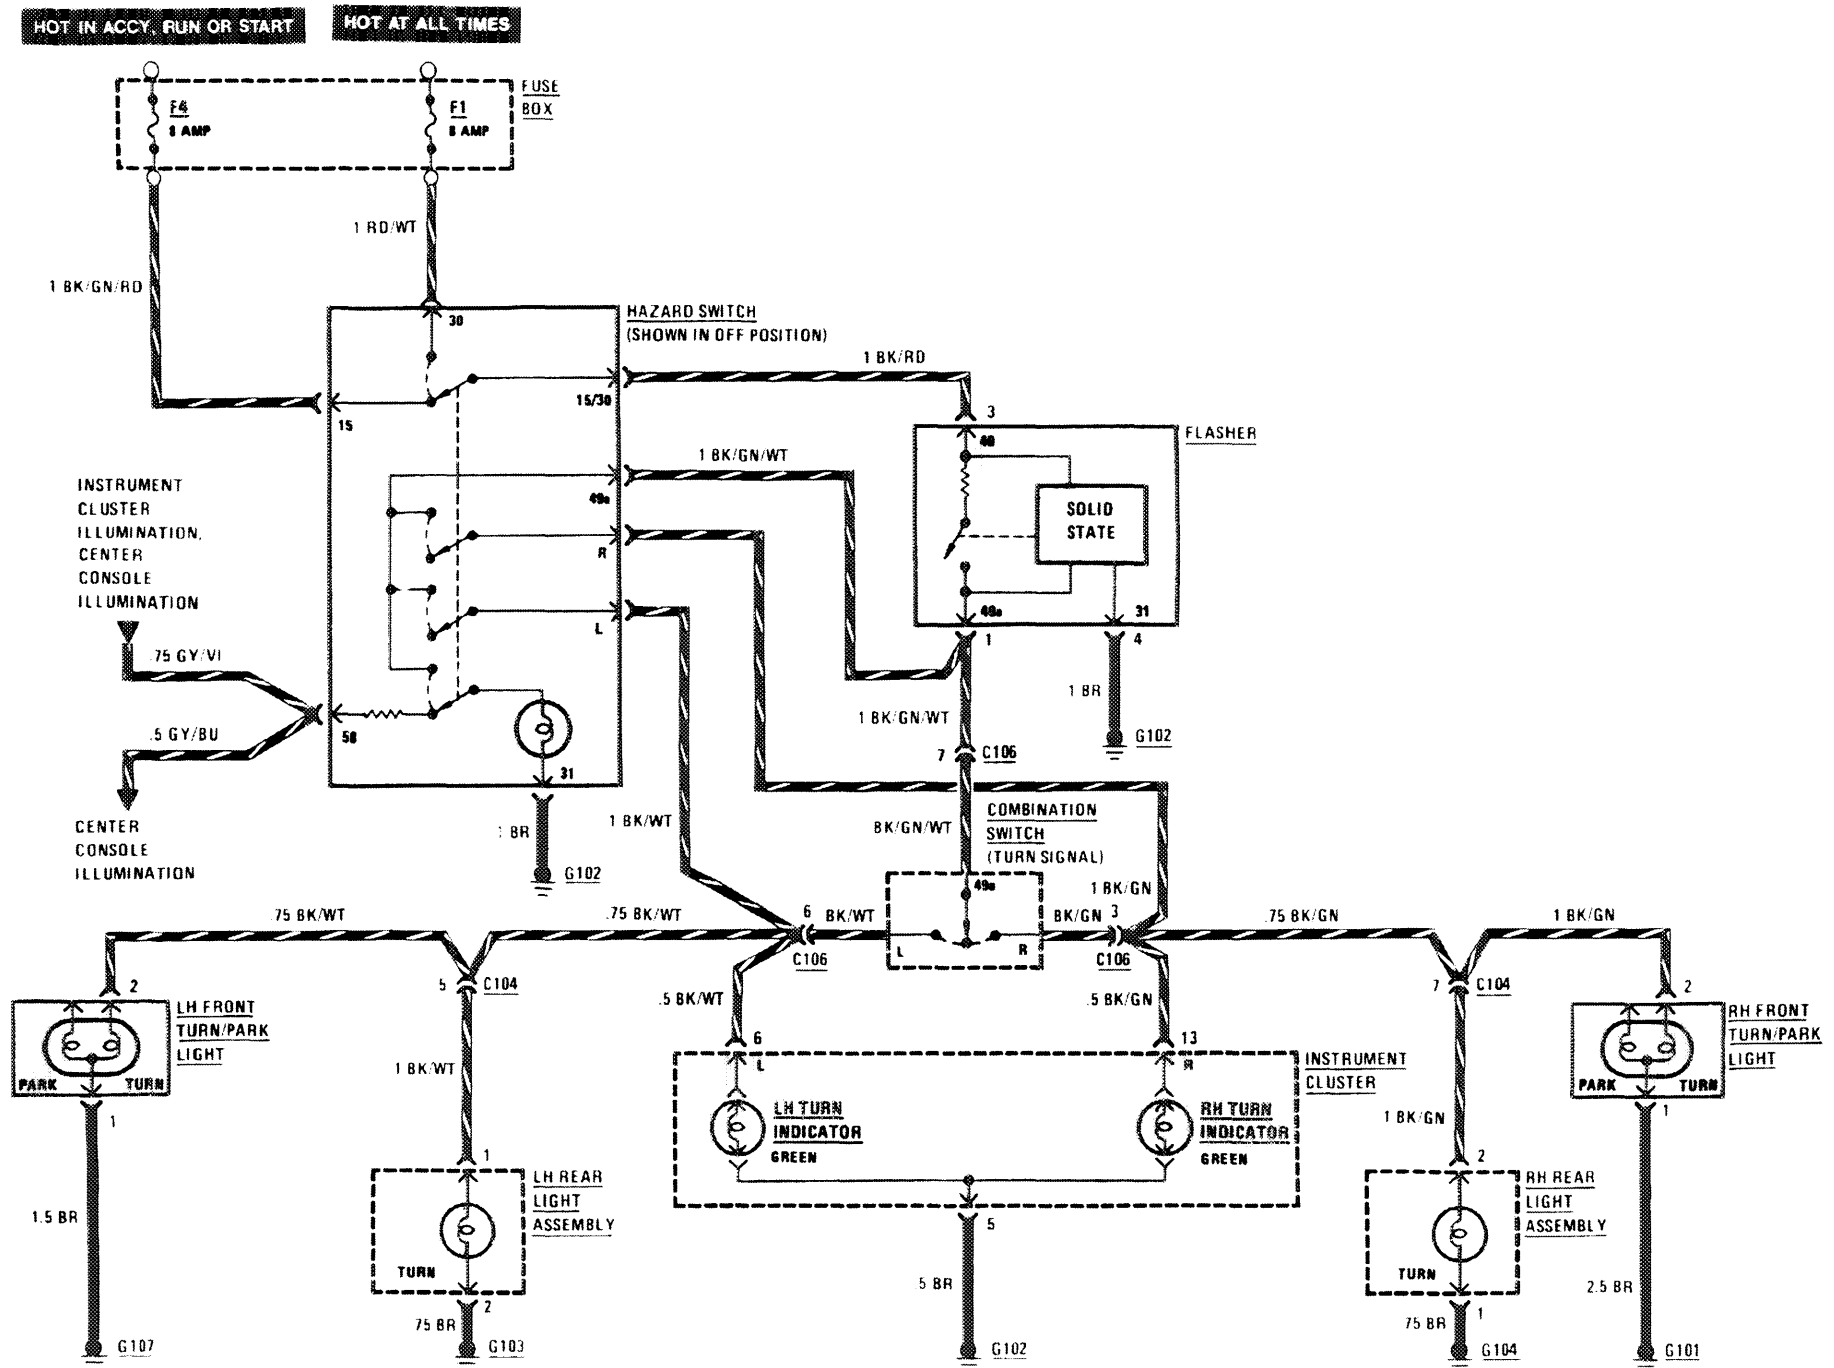


WARNING SYSTEM

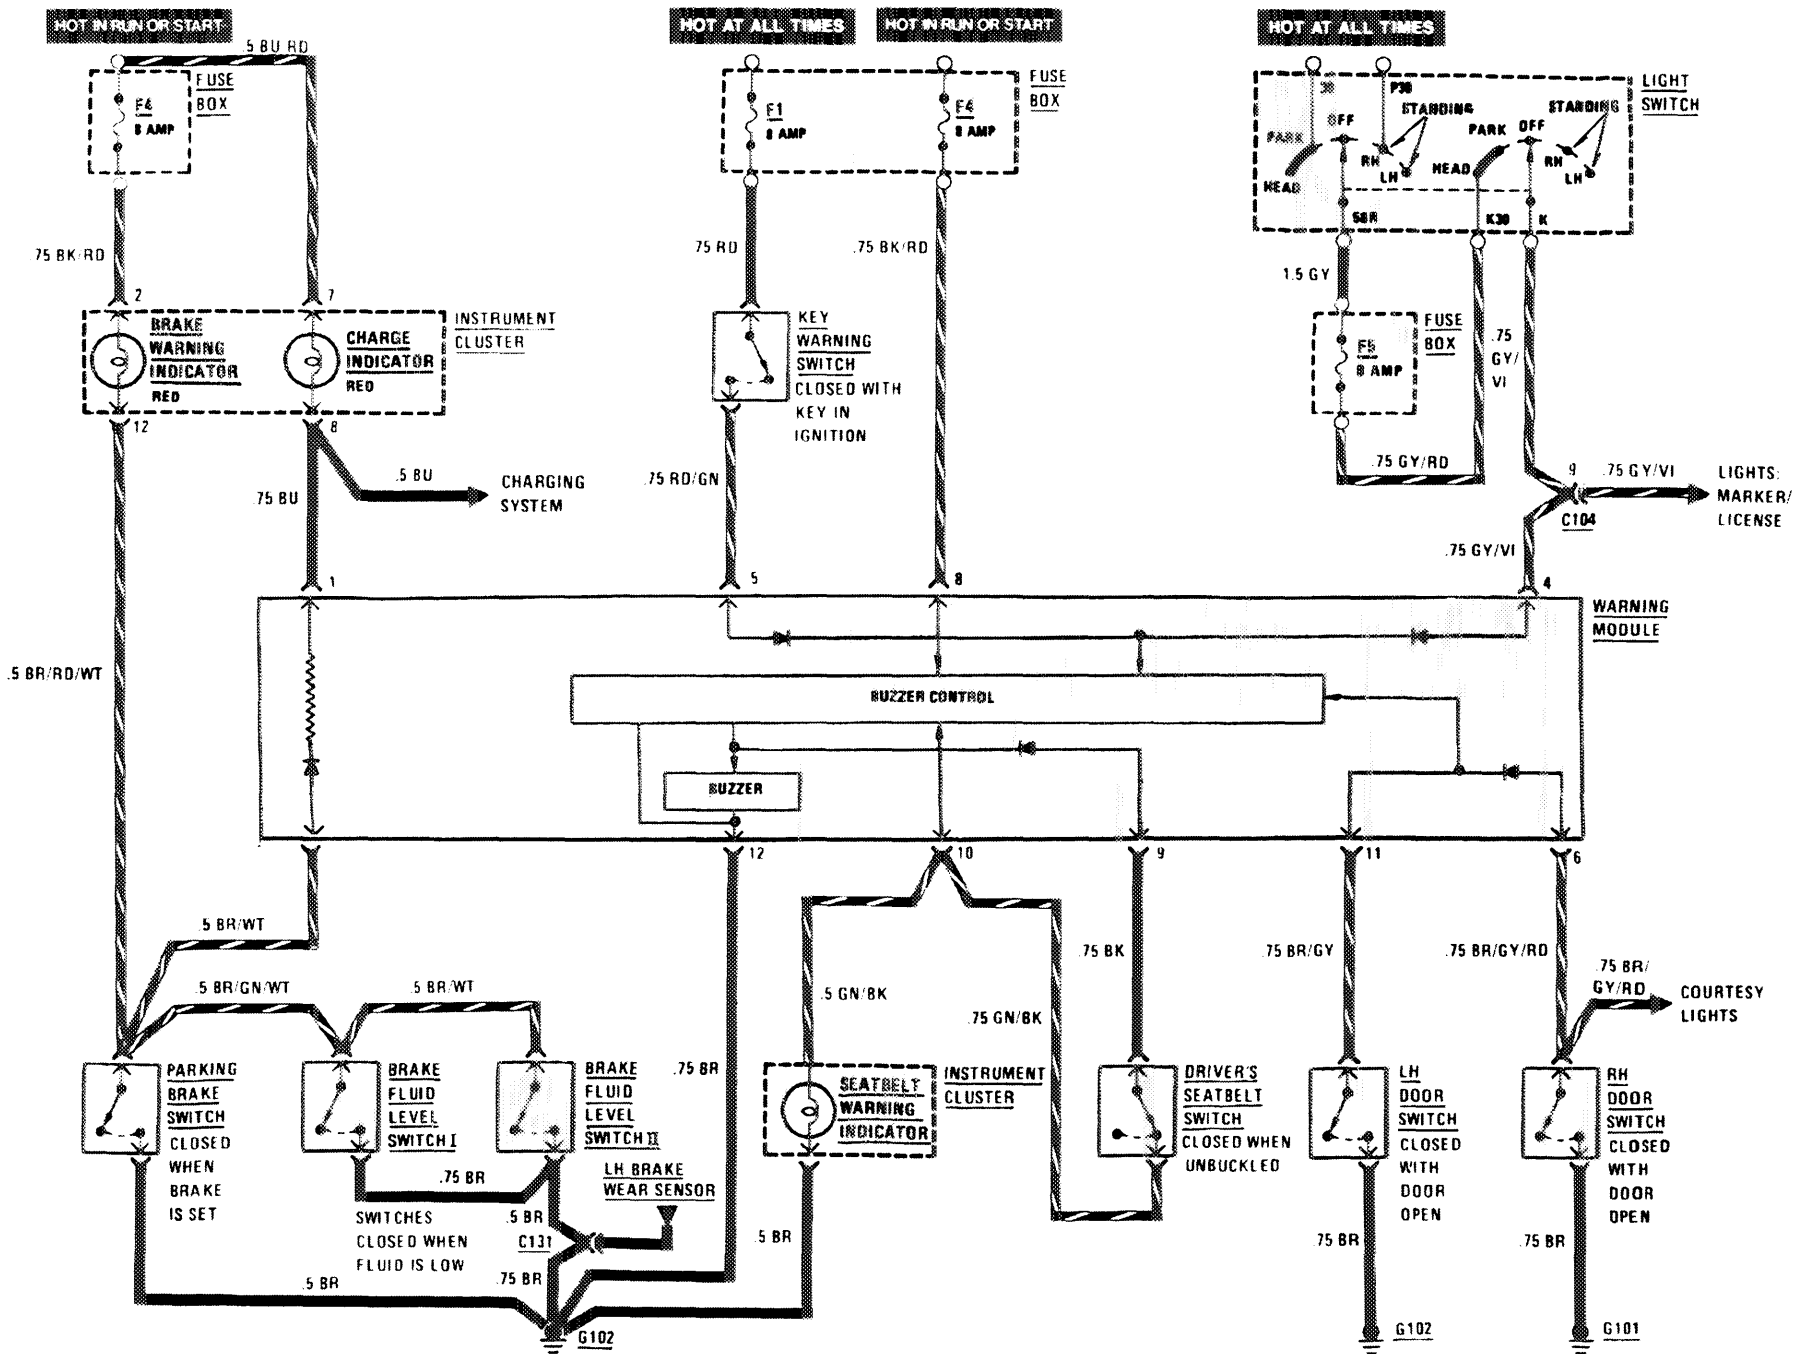


113
300
SD

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

114
300
SD

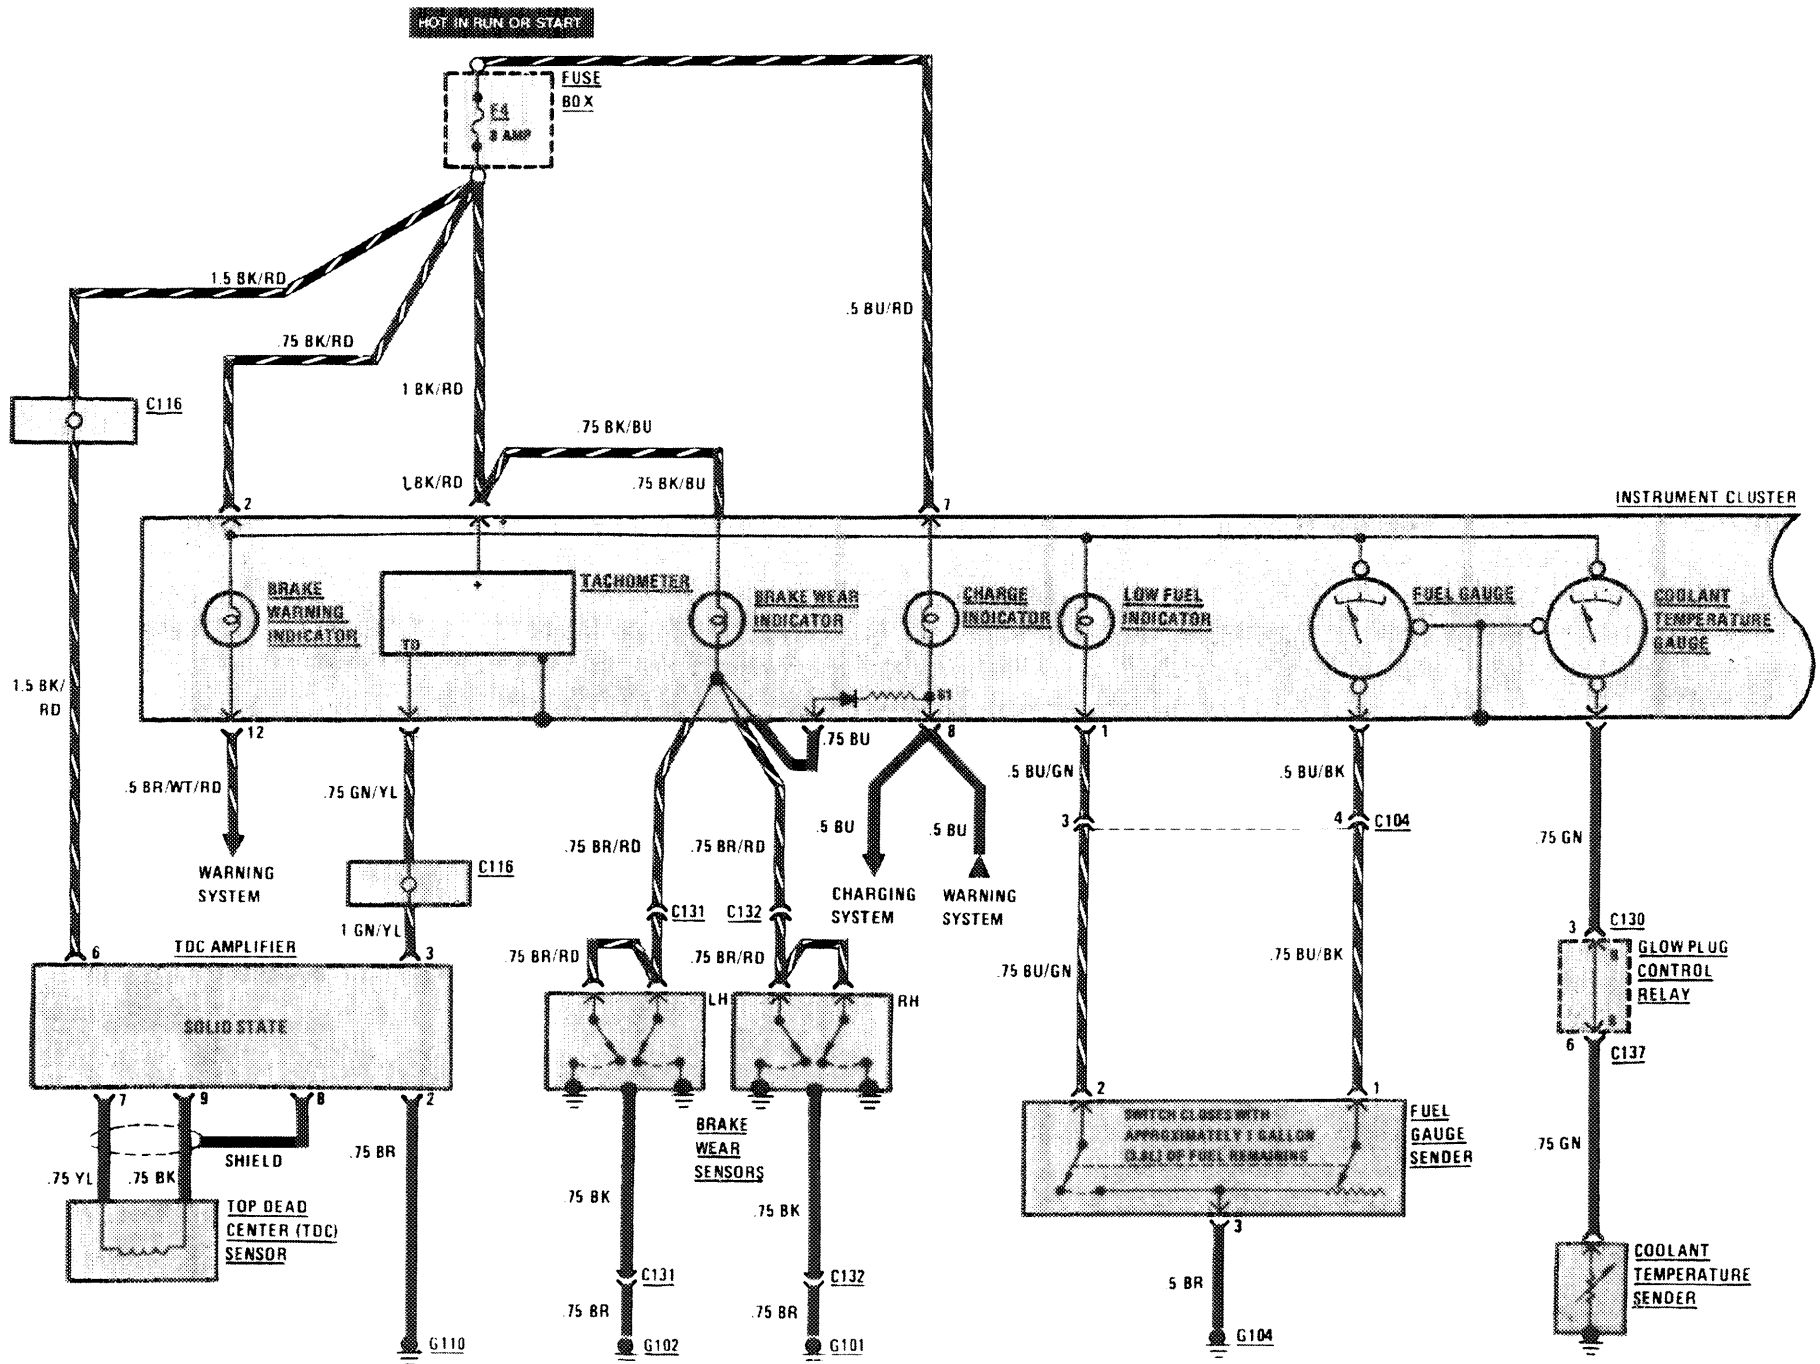


WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

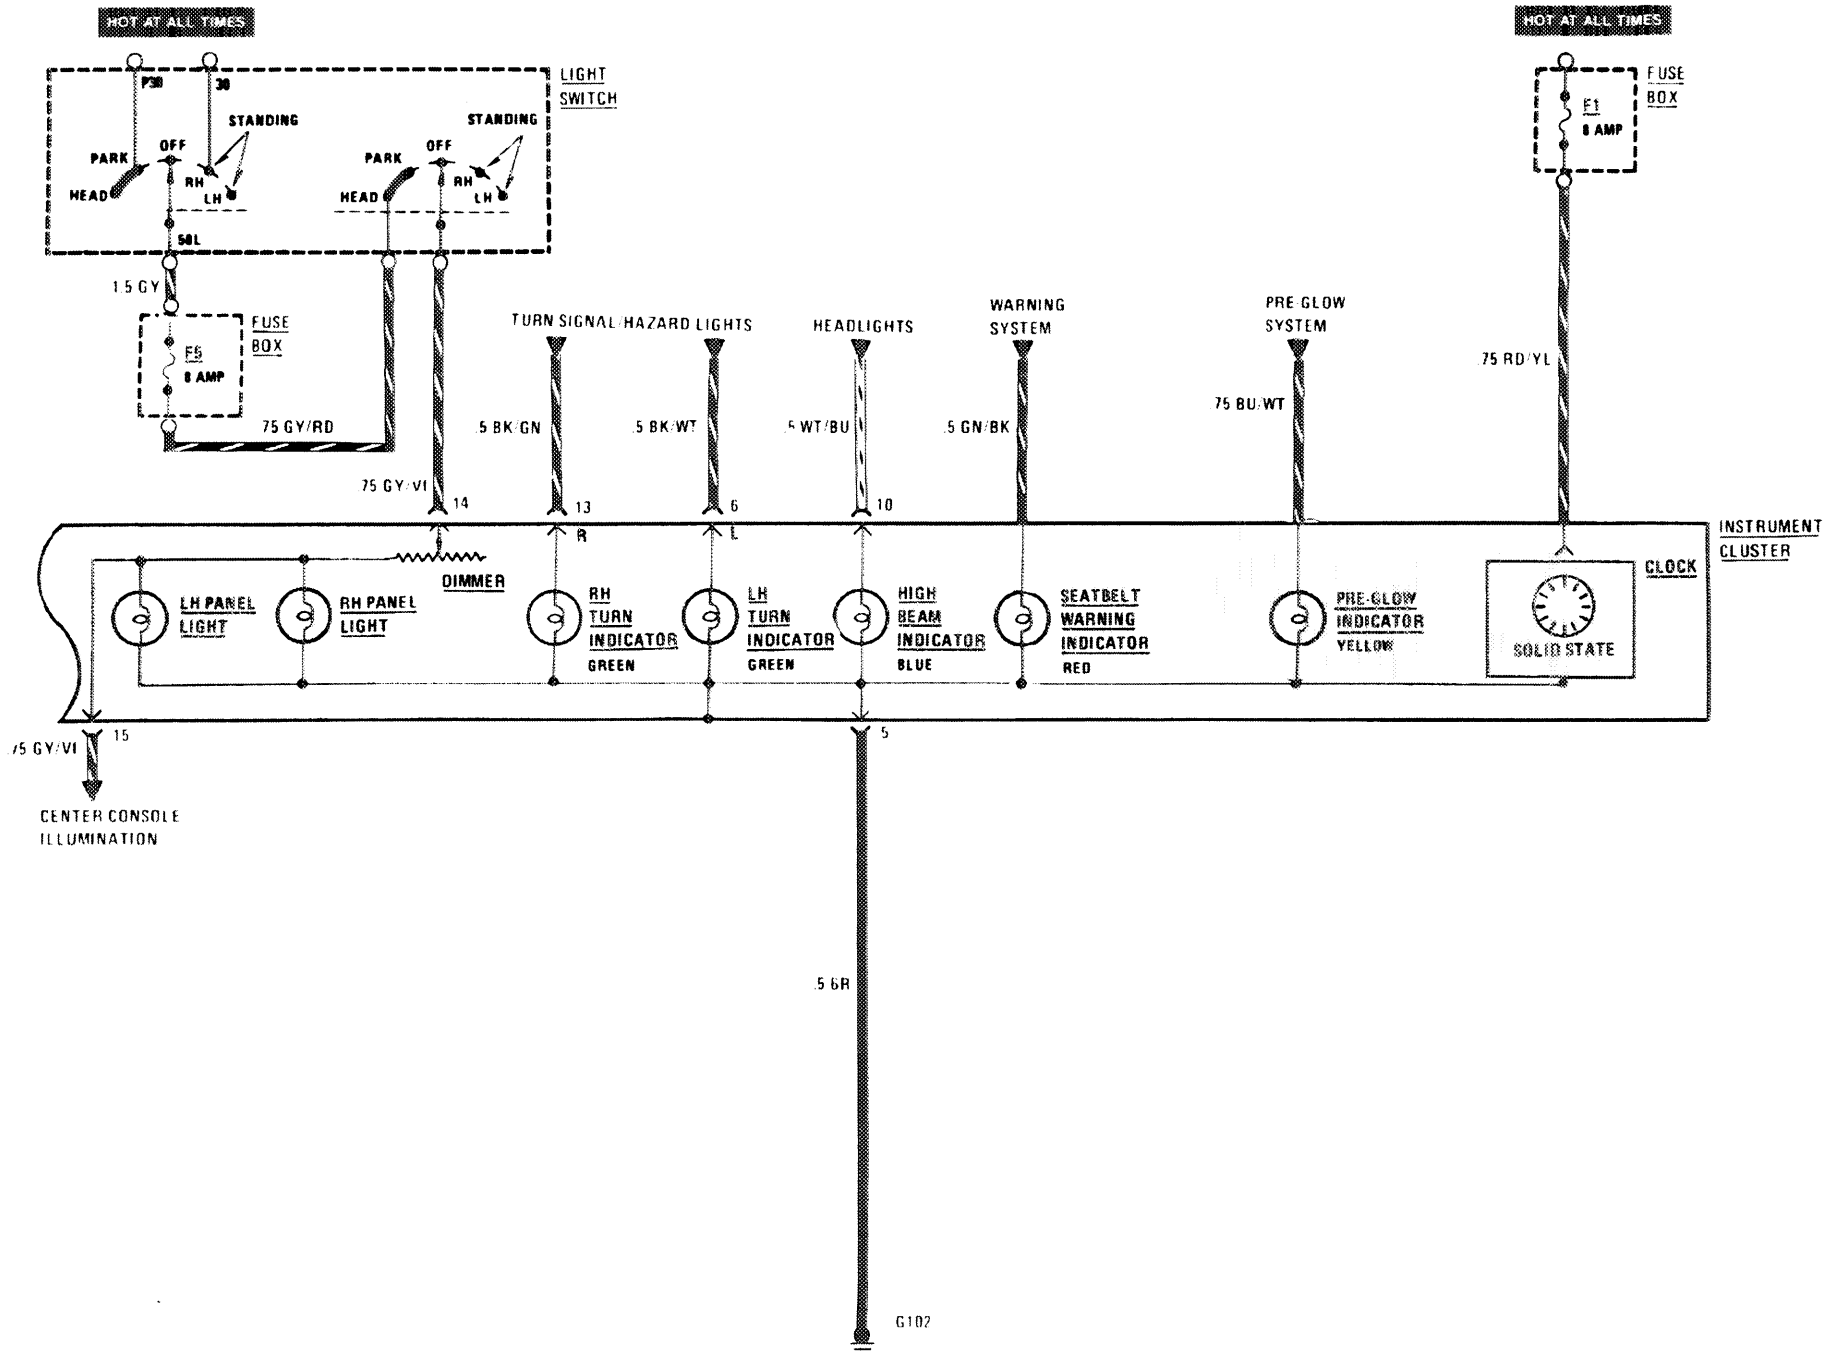


115
300
SD

116
300
SD


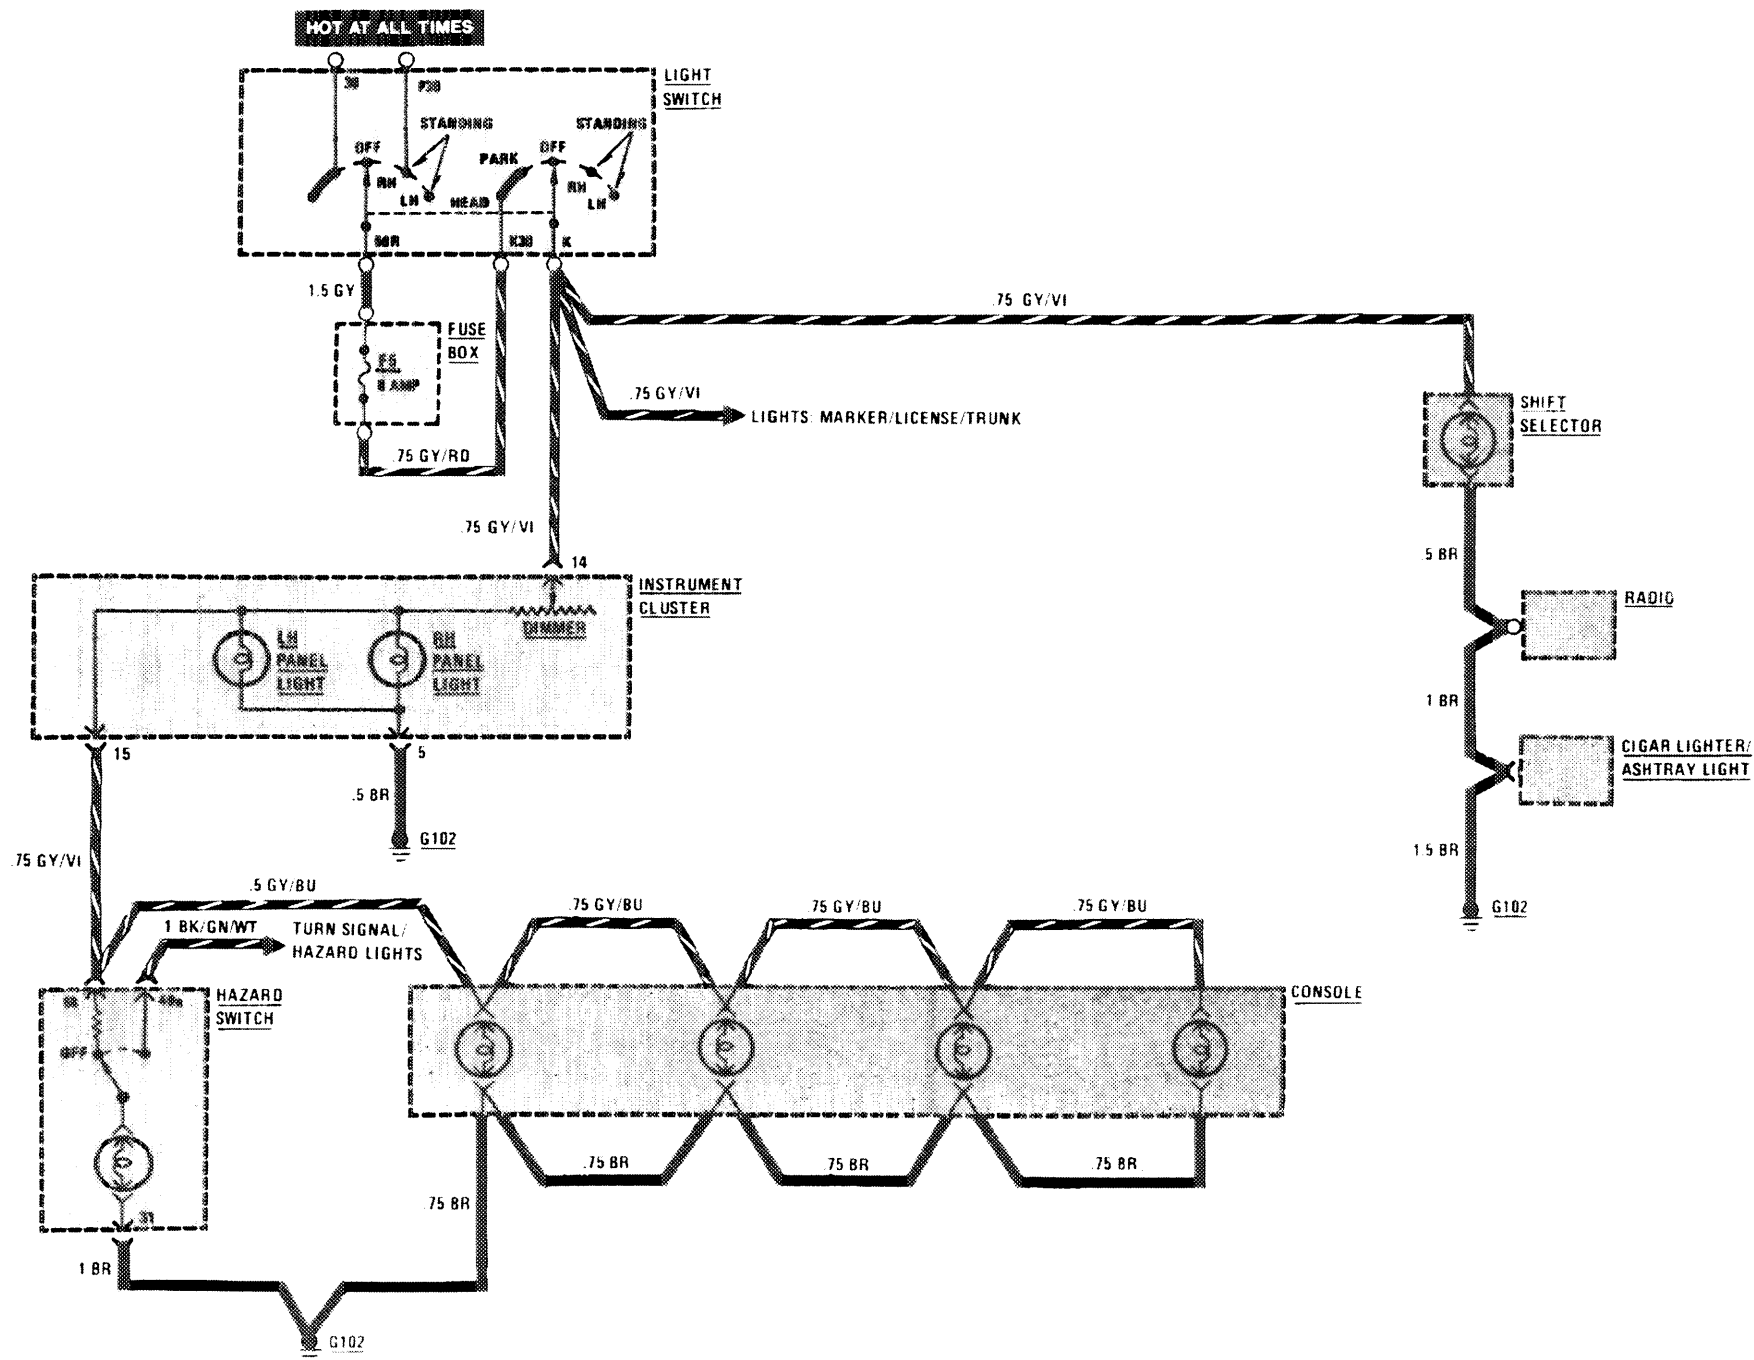


COURTESY LIGHTS

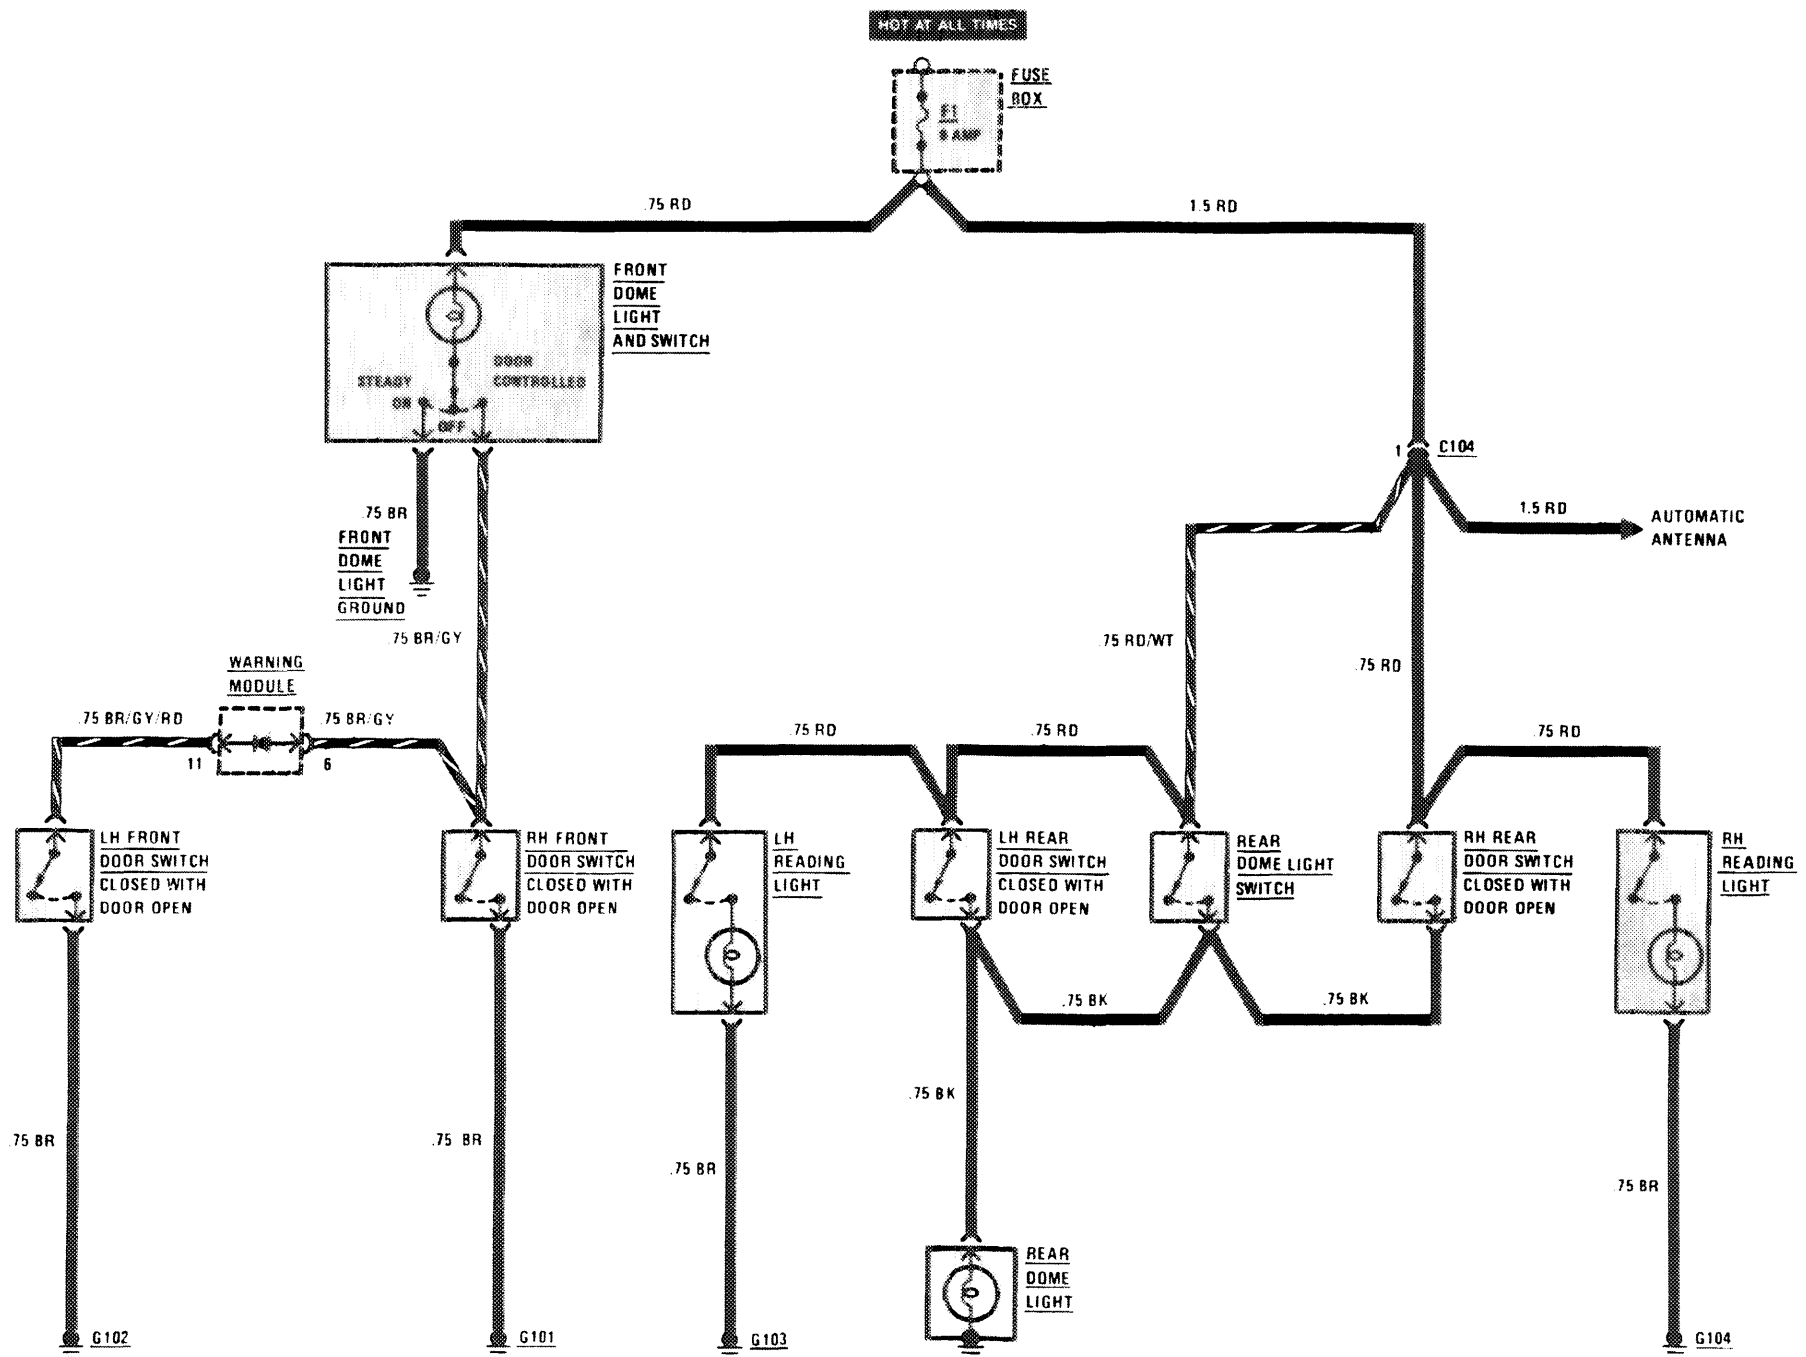


117
300
SD

GLOVE BOX LIGHT/HORNS

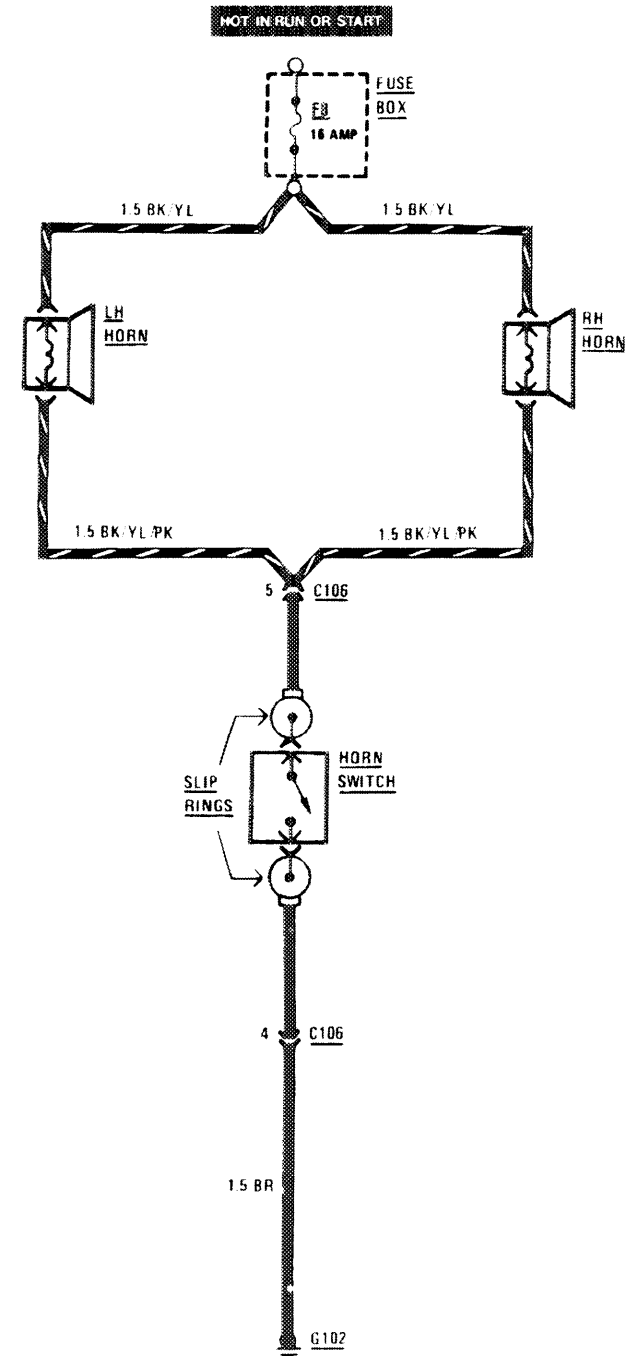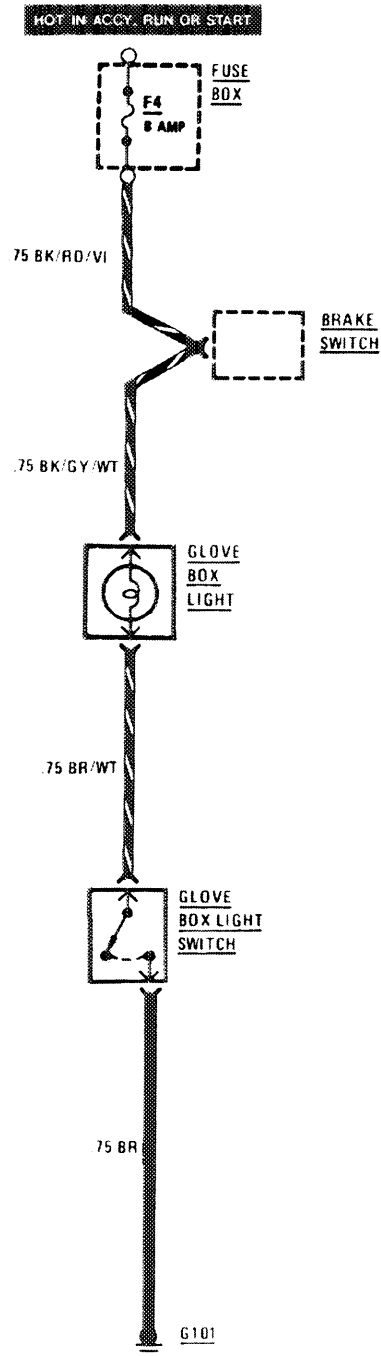


119
300
SD

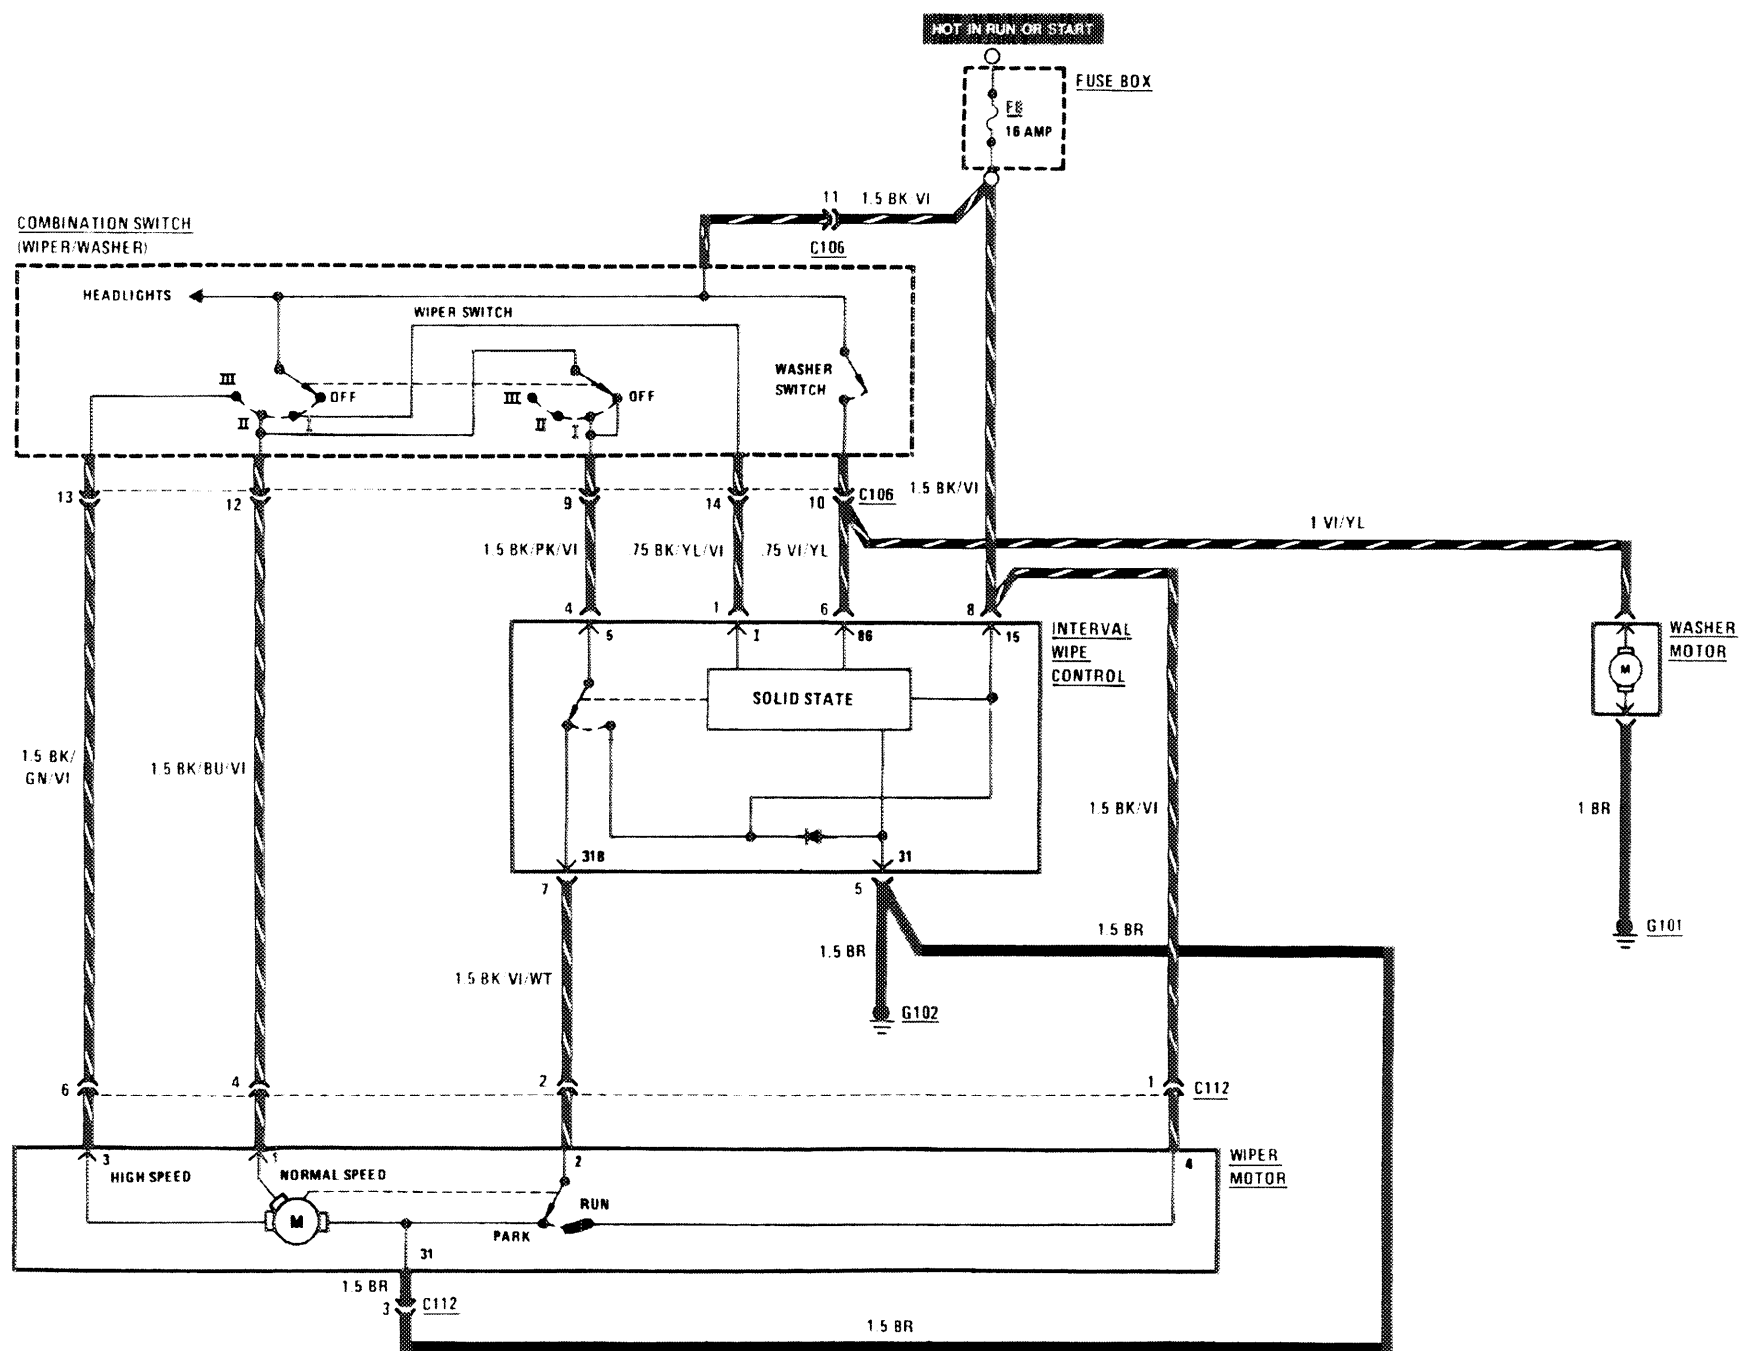


AUXILIARY FAN

120
300
SD

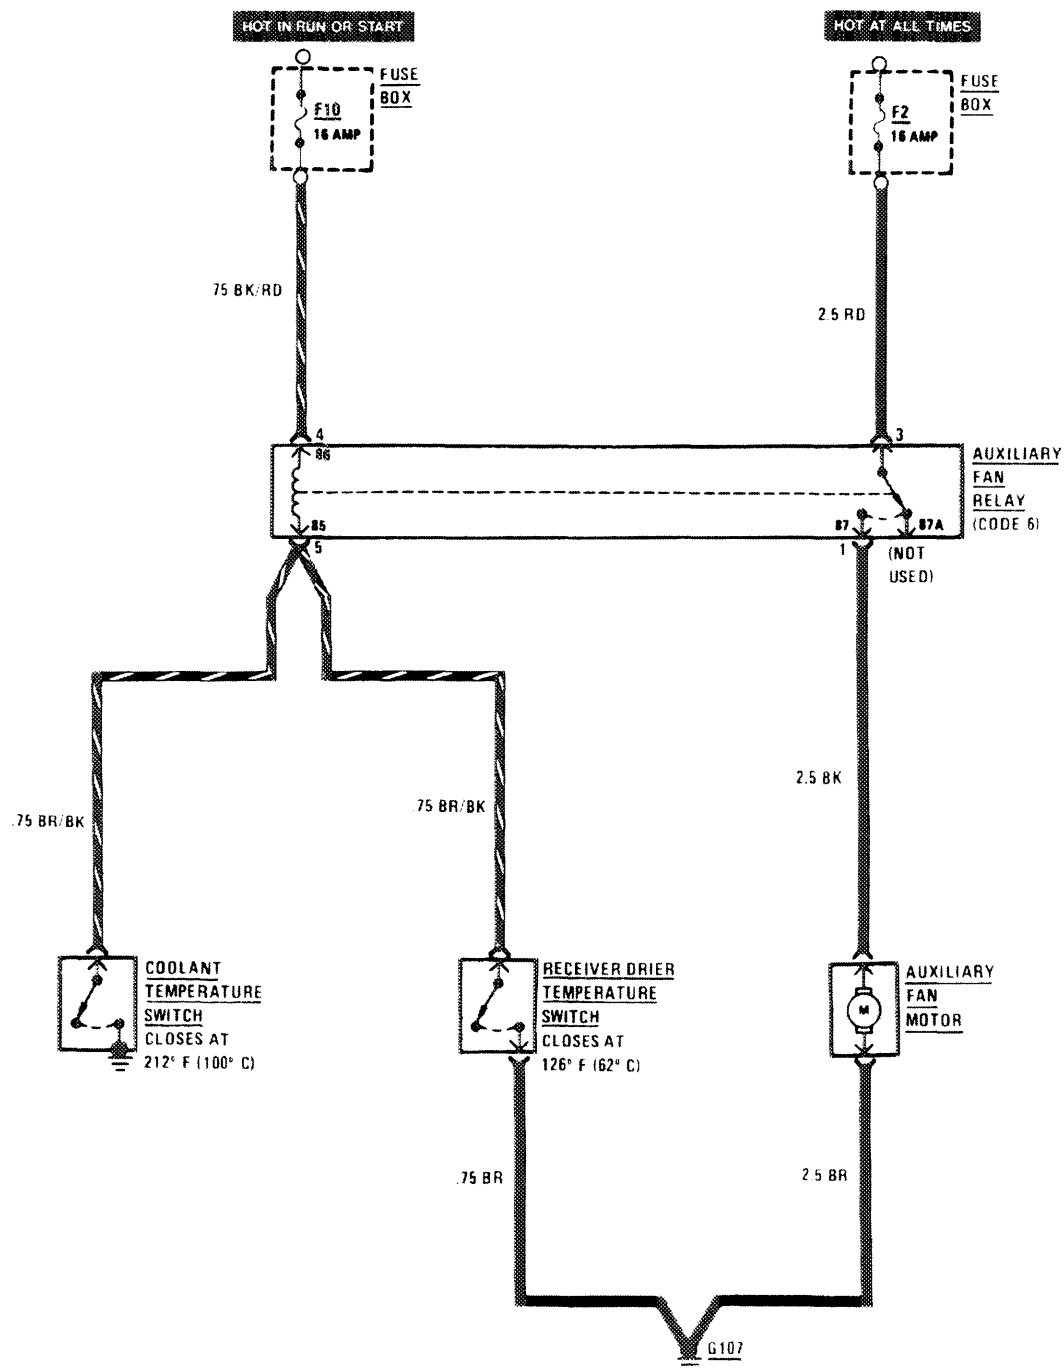


121
300
SD

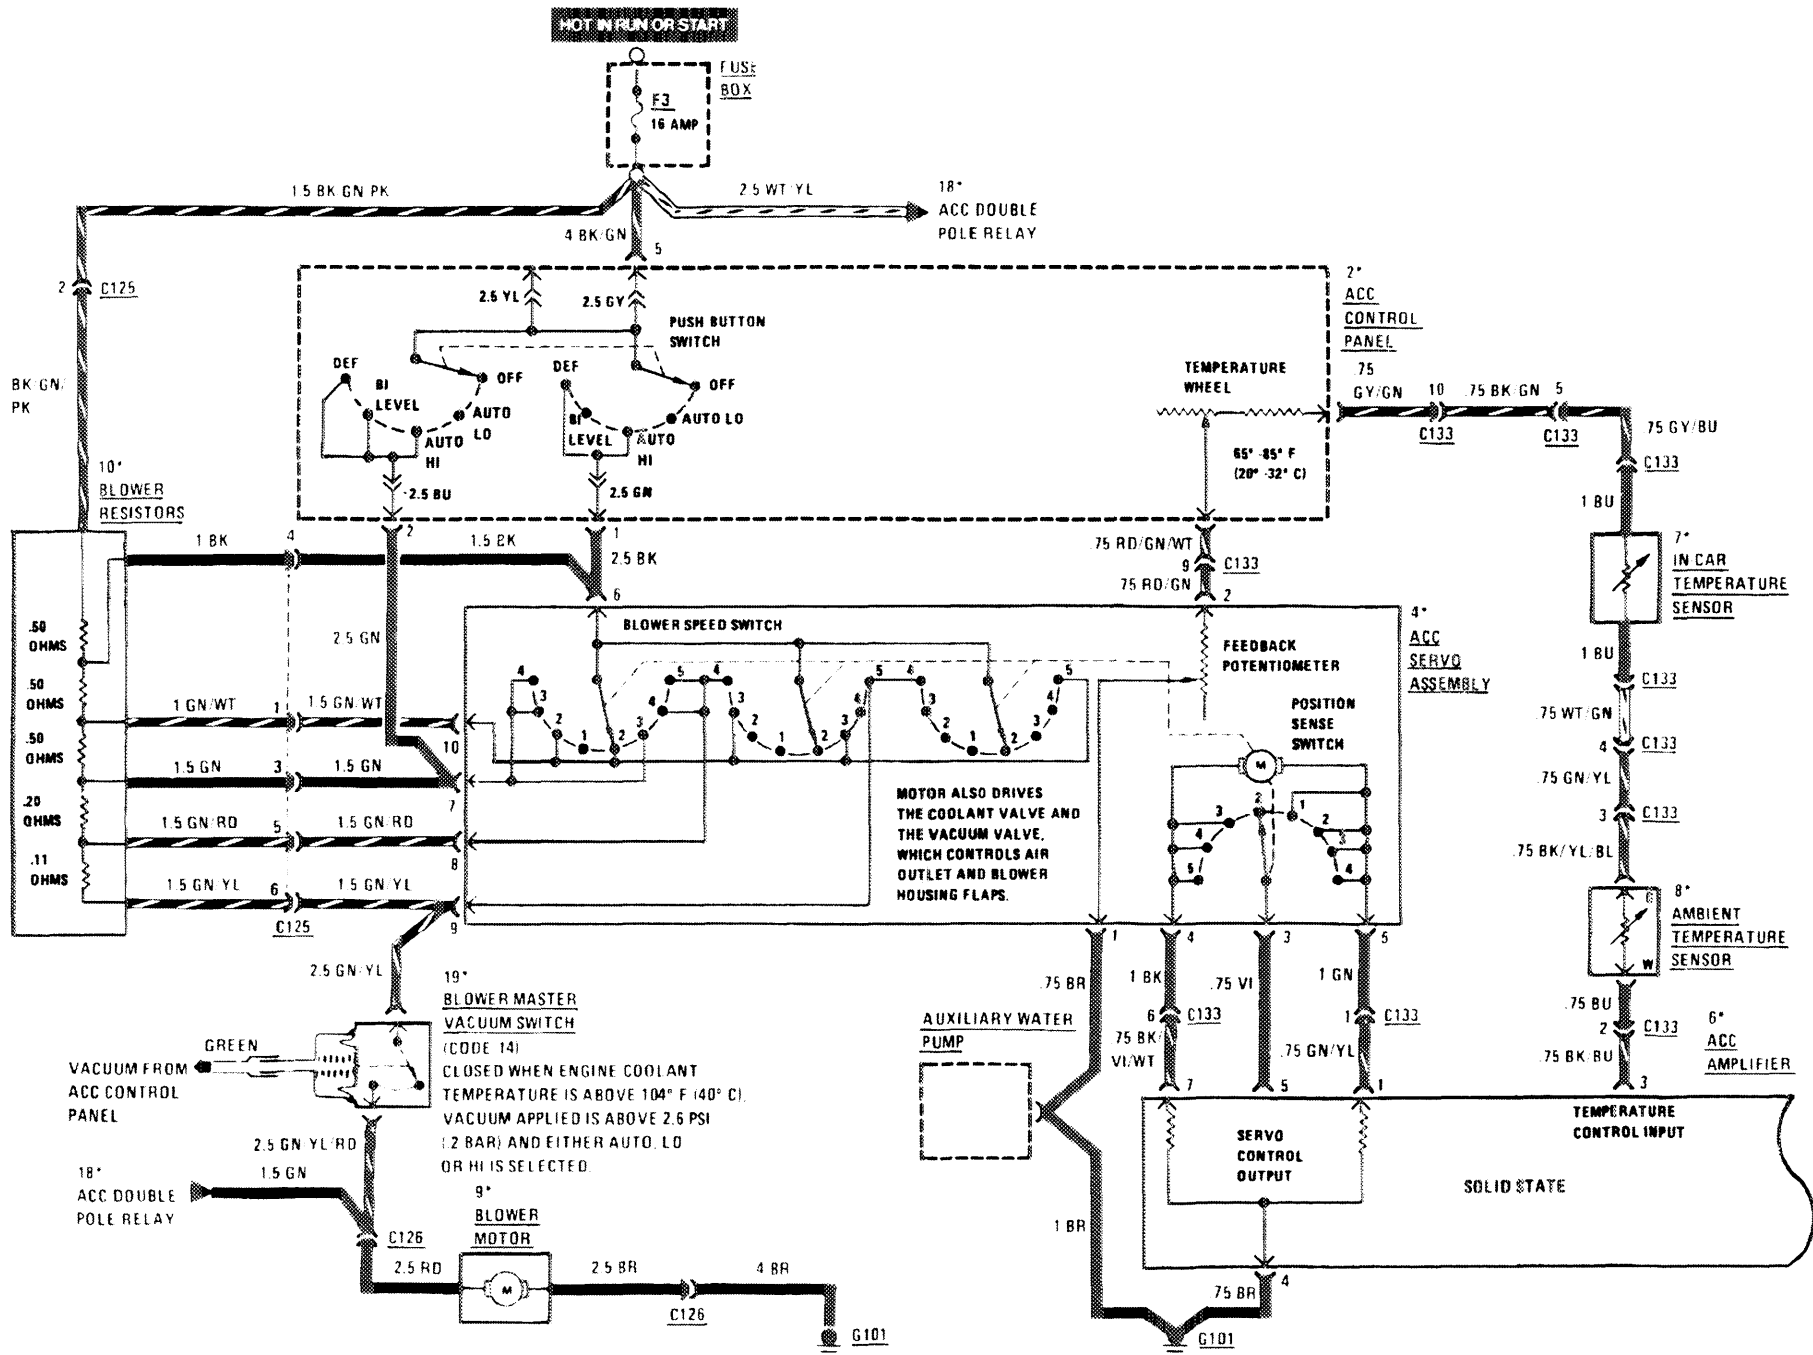


AUTOMATIC CLIMATE CONTROL

122
300
SD

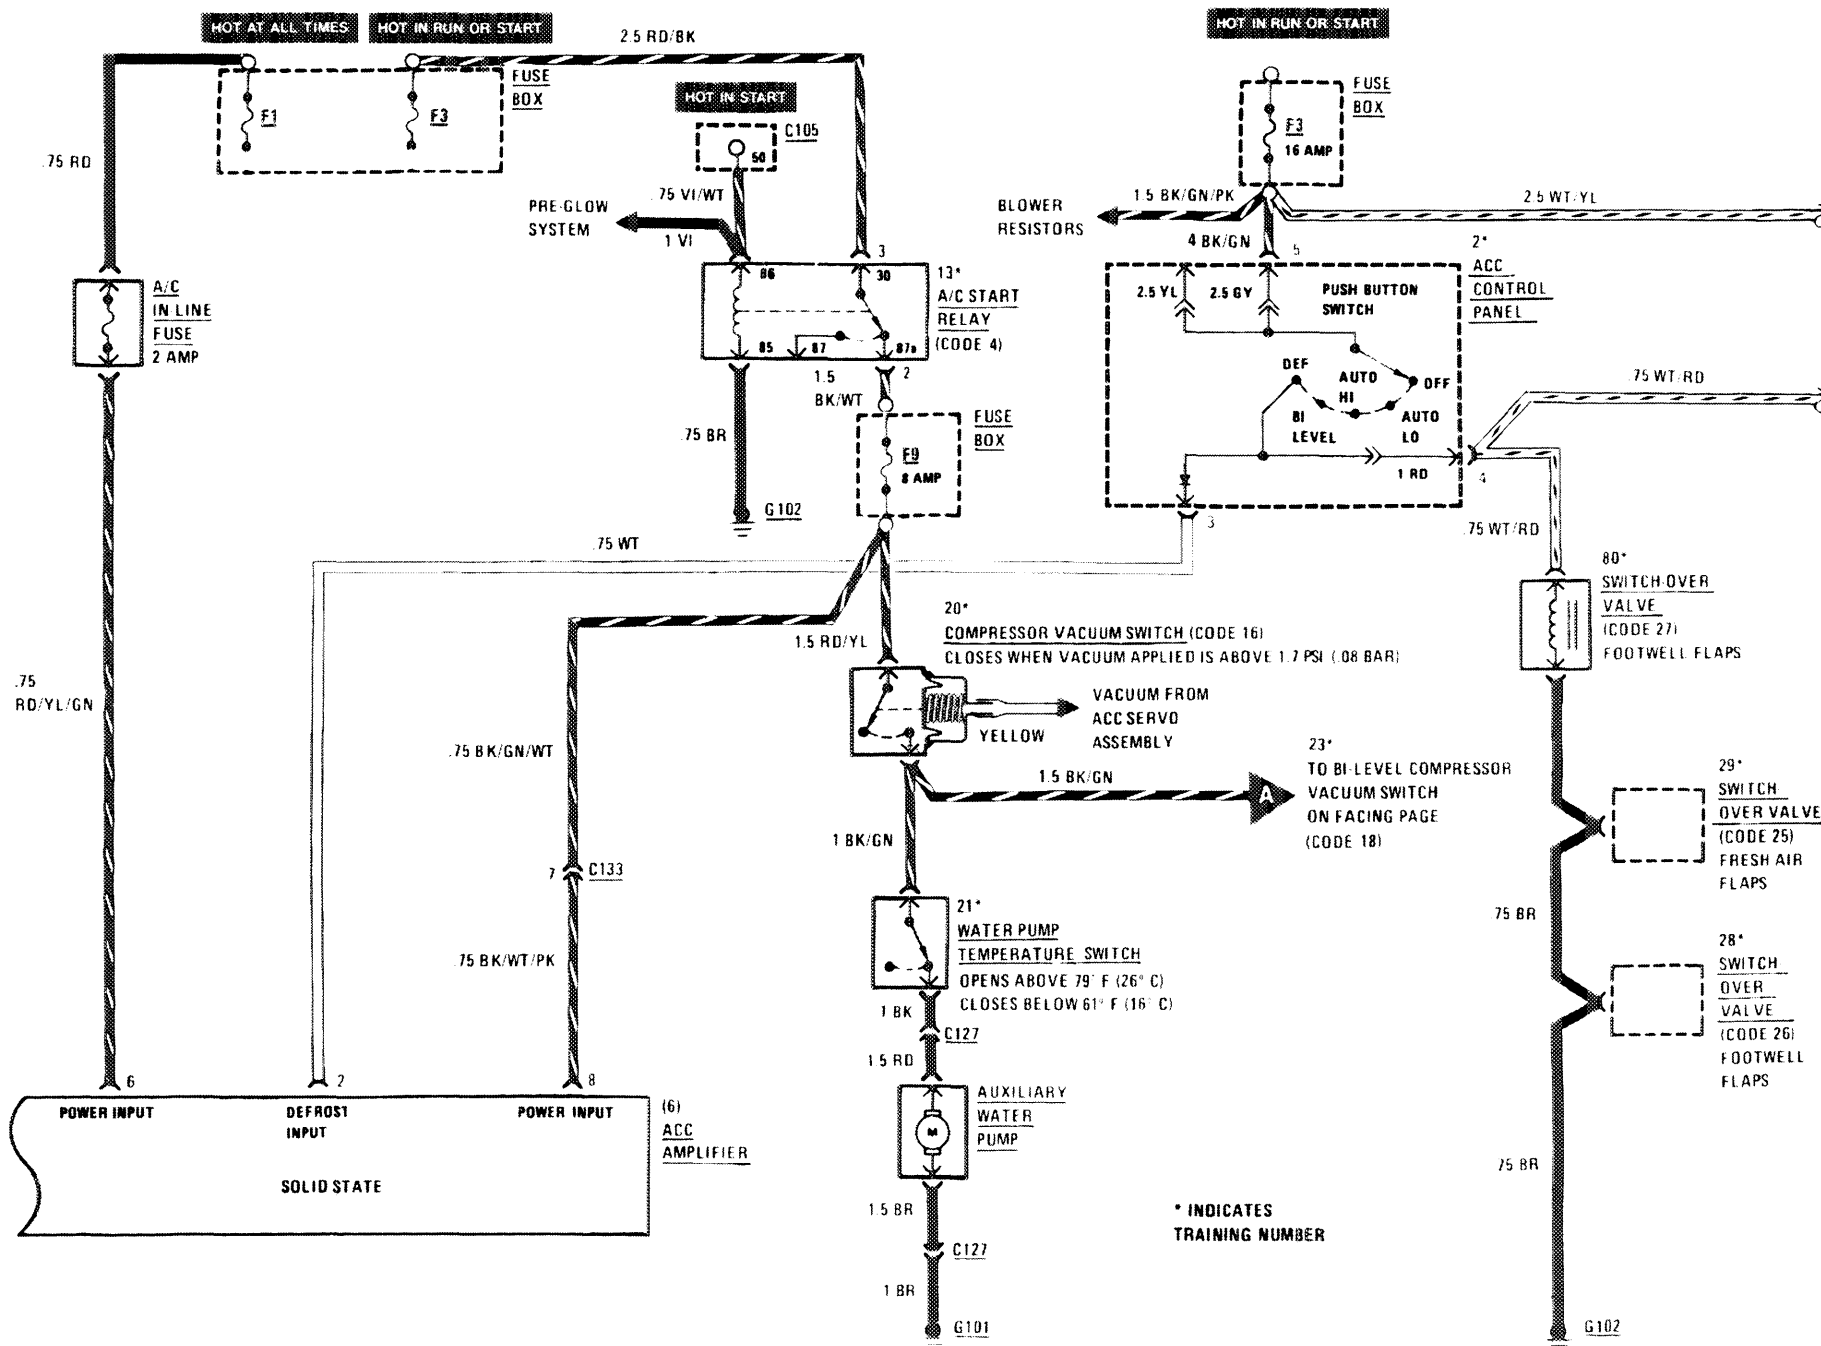


AUTOMATIC CLIMATE CONTROL


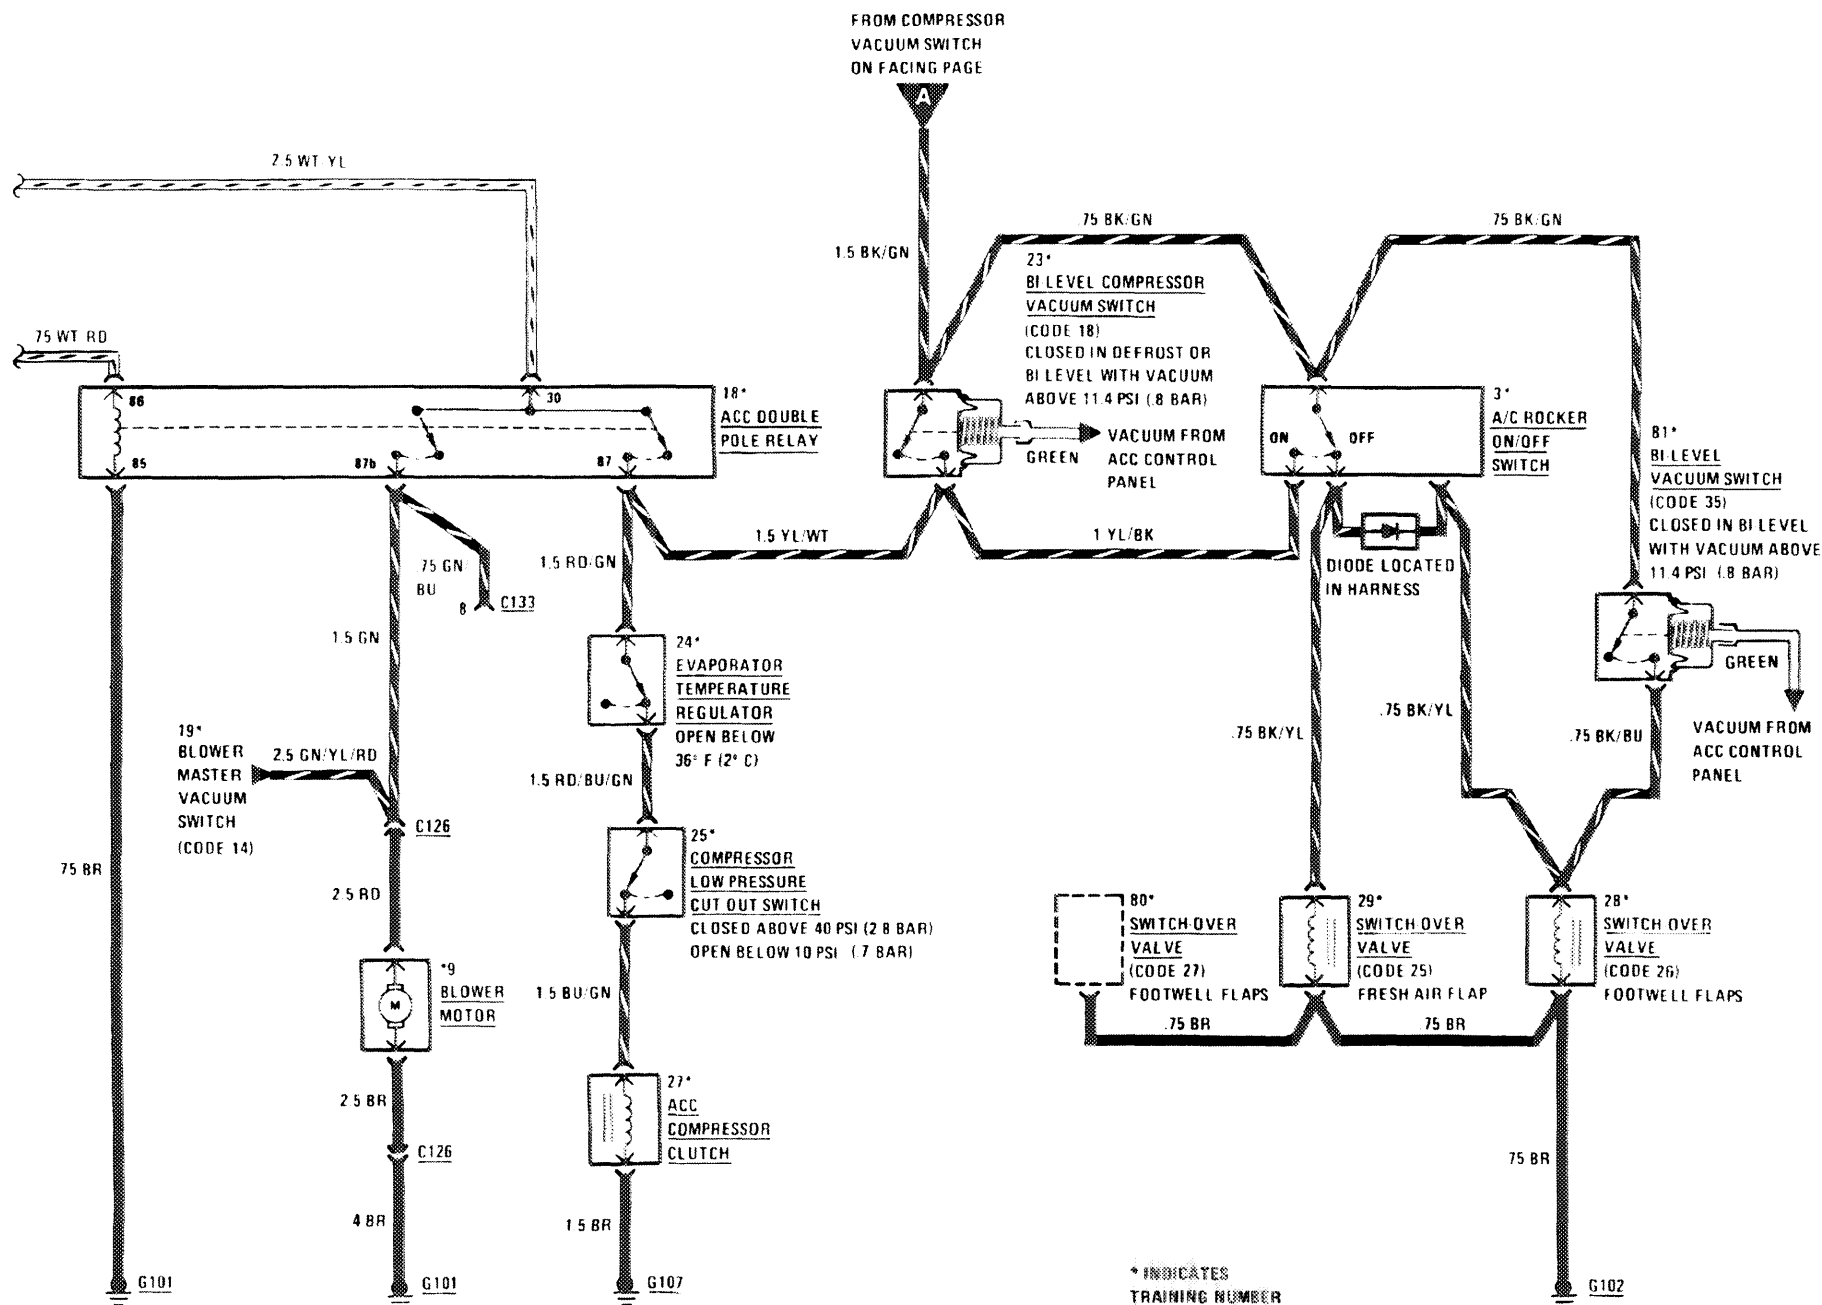


123
300
SD

124
300
SD

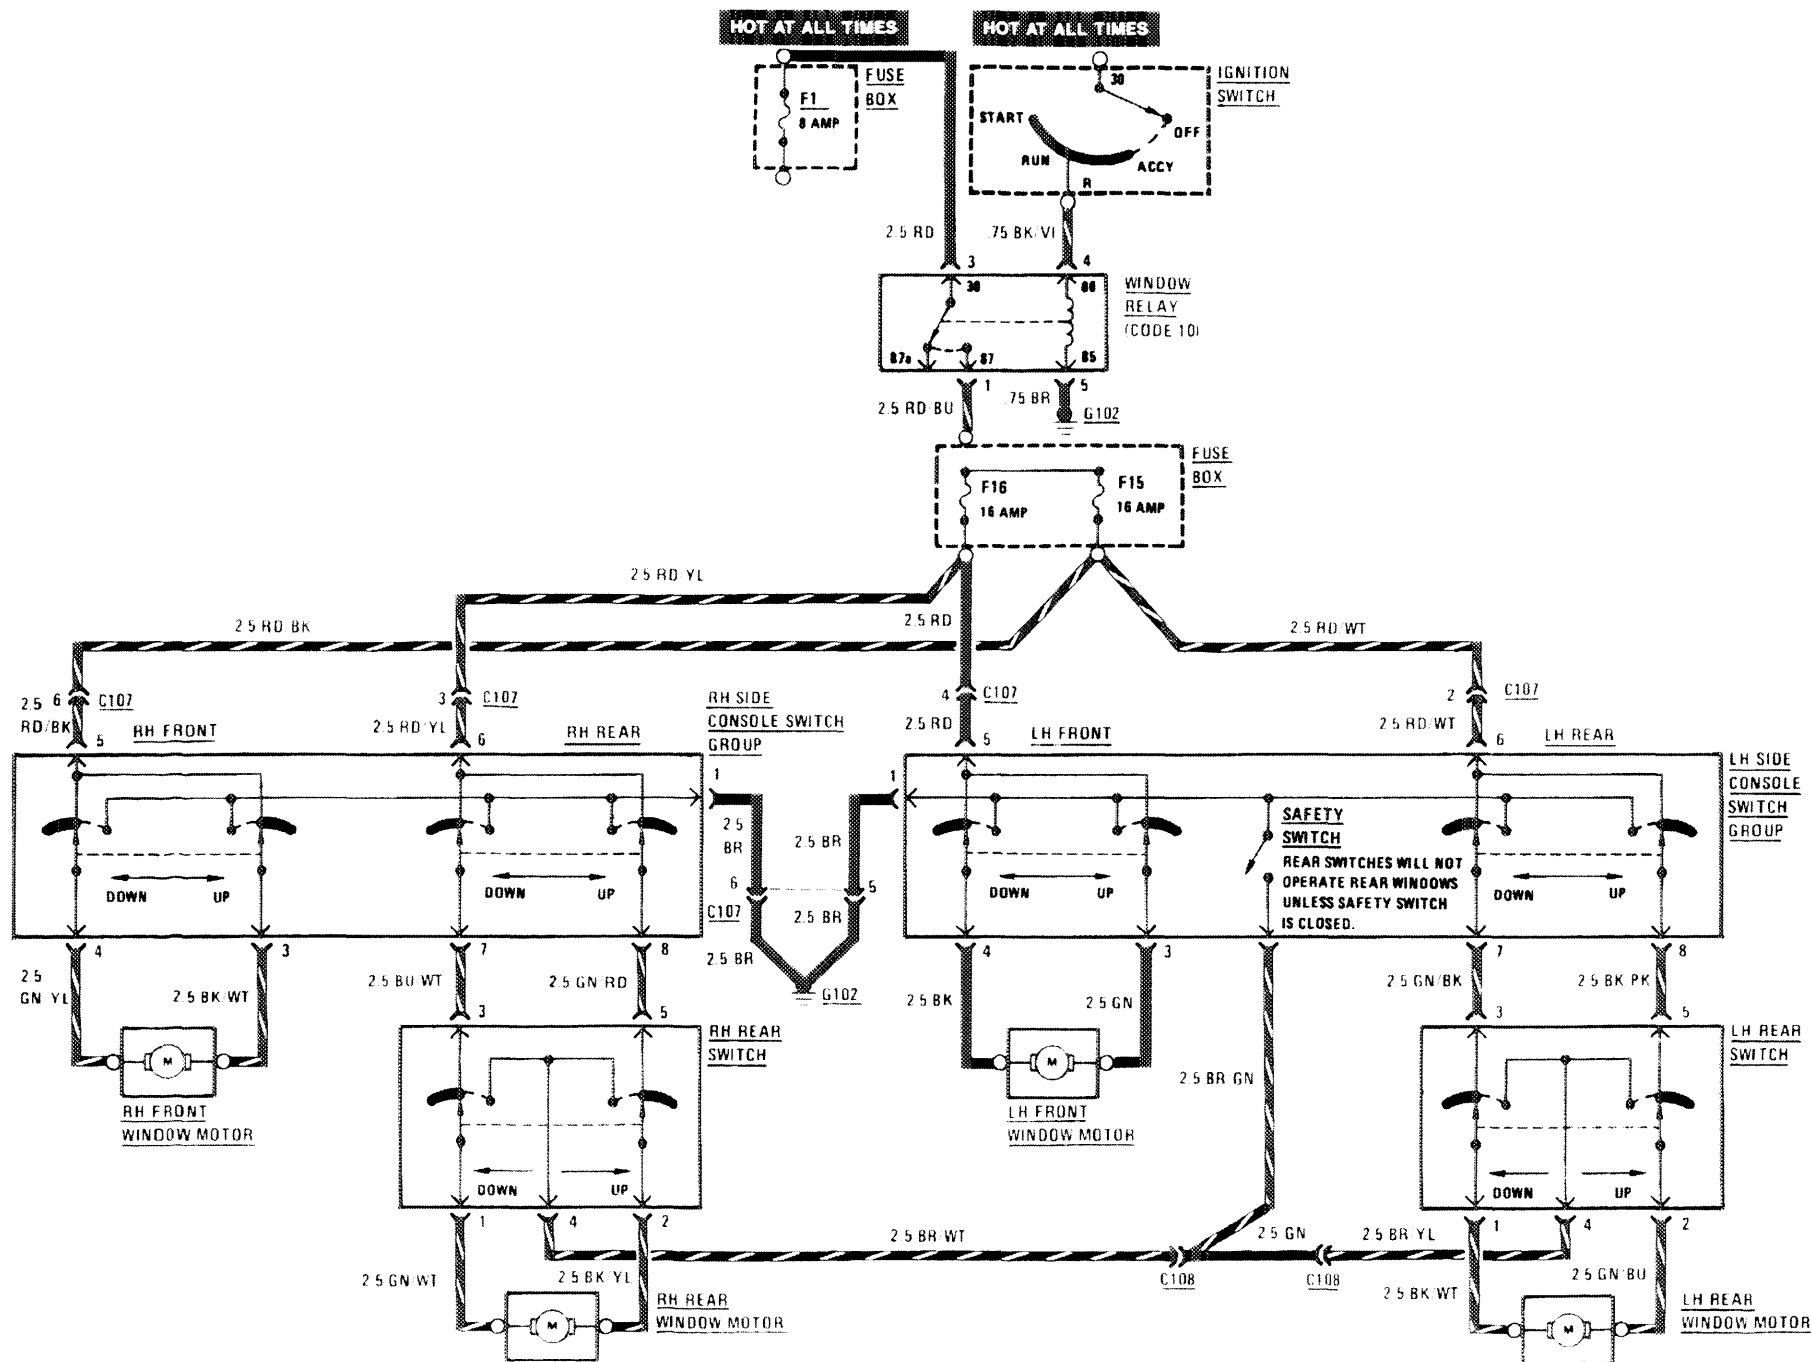


REAR DEFOGGER / SLIDING ROOF

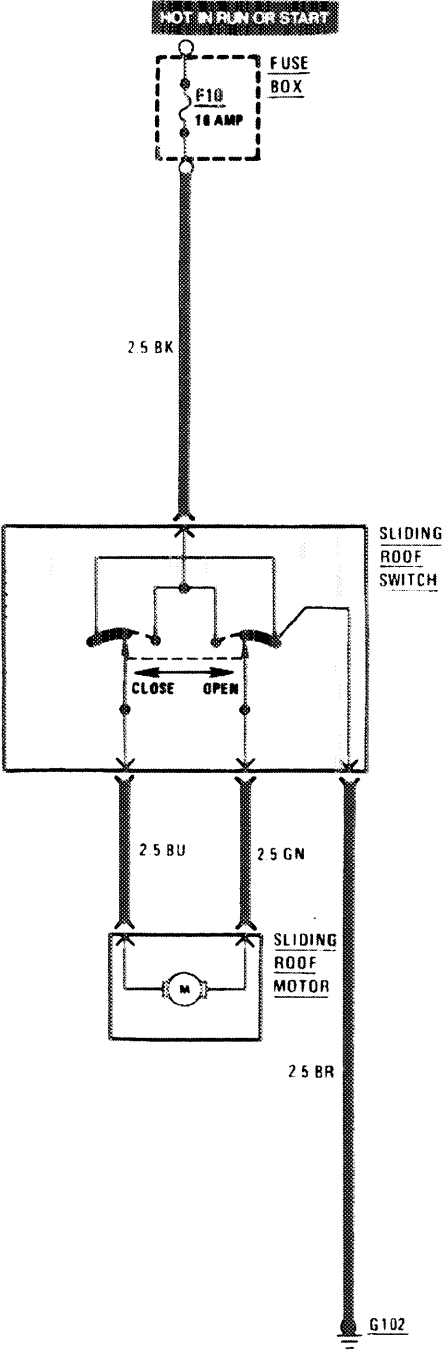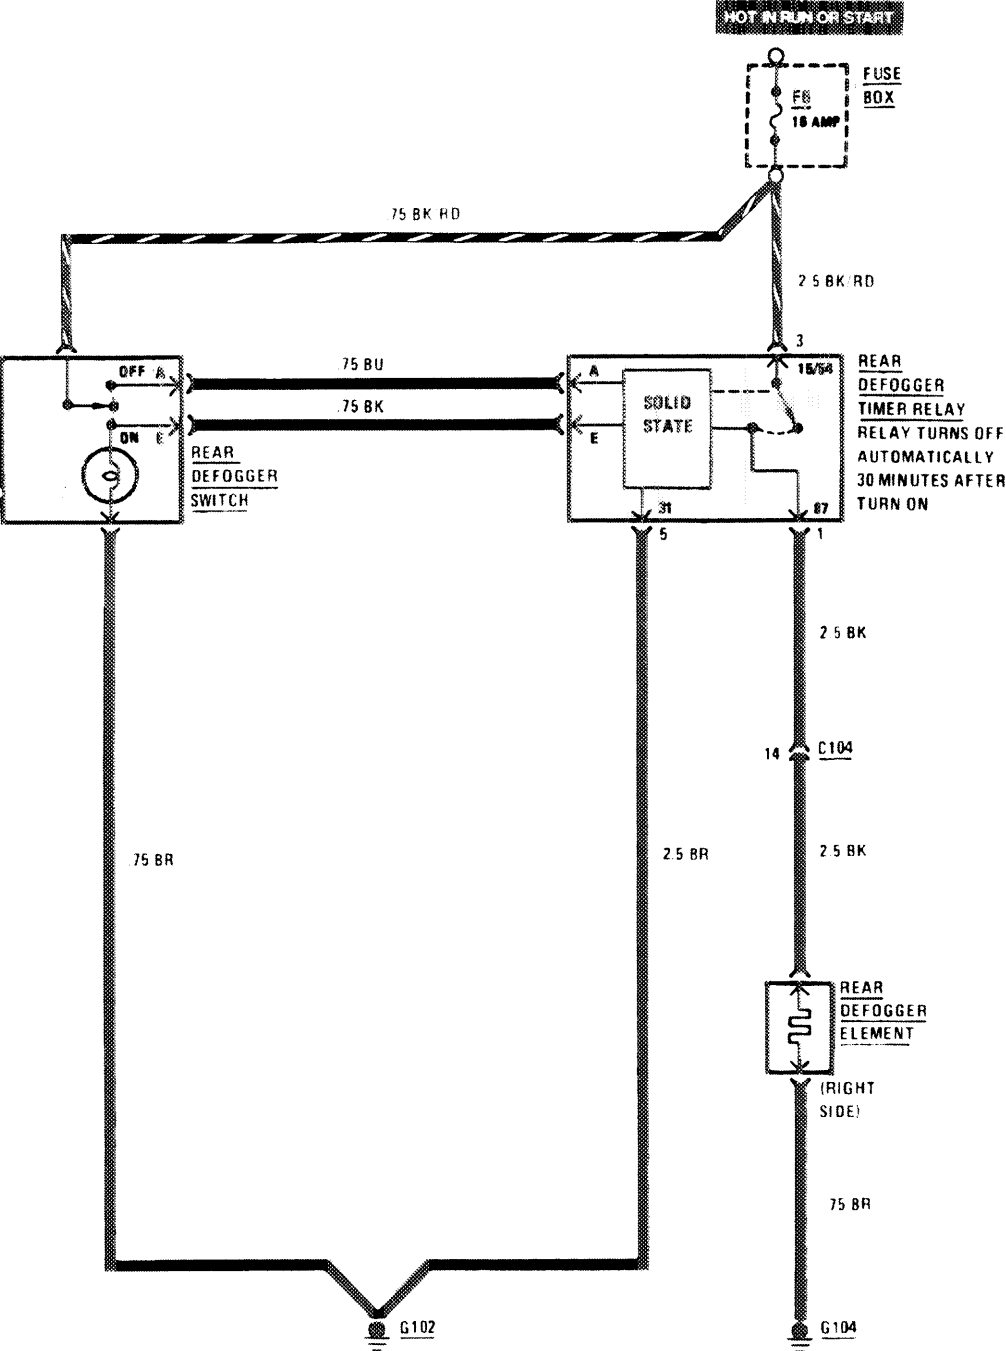


CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

126
300
SD

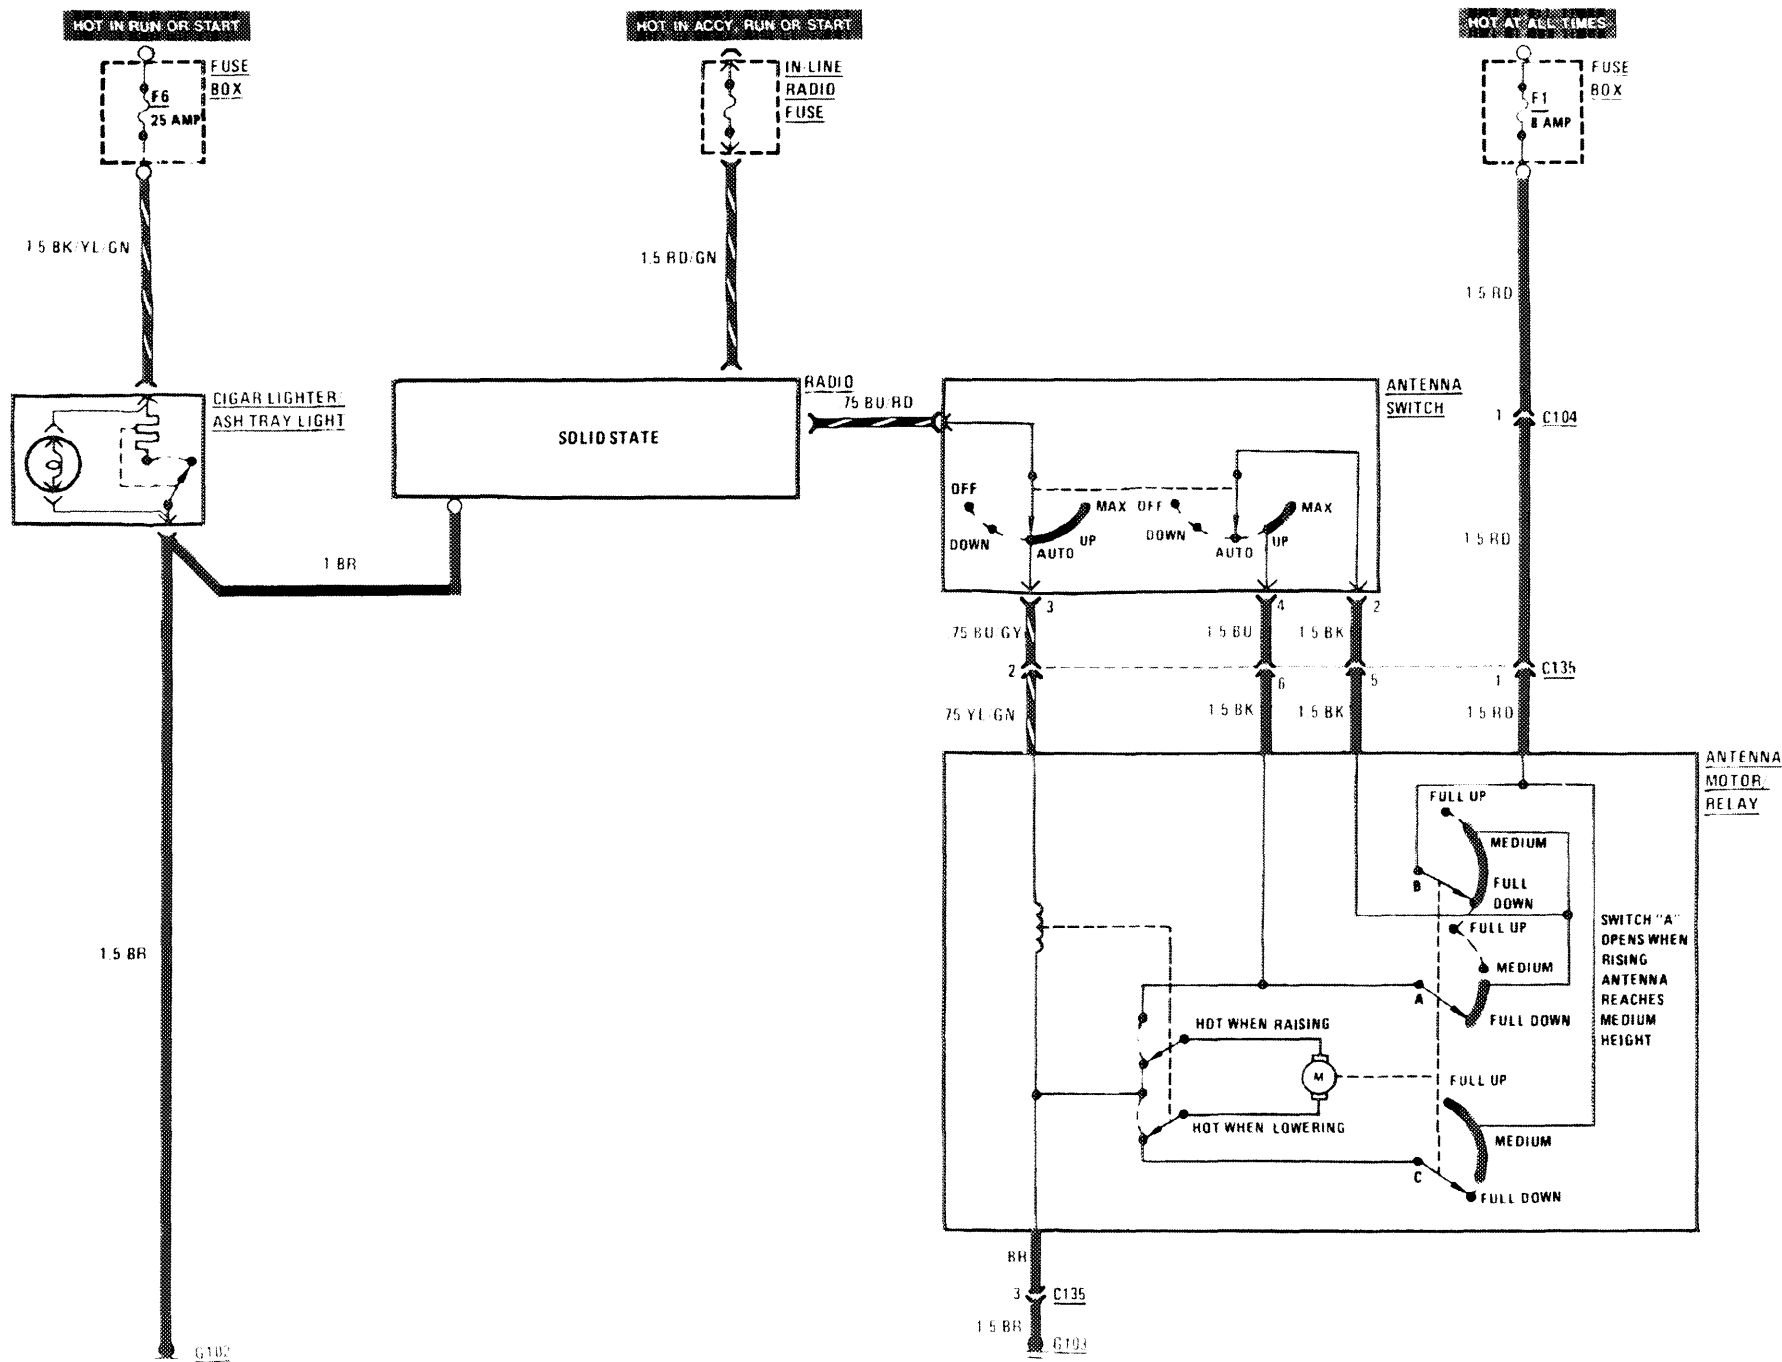


HEATED SEATS

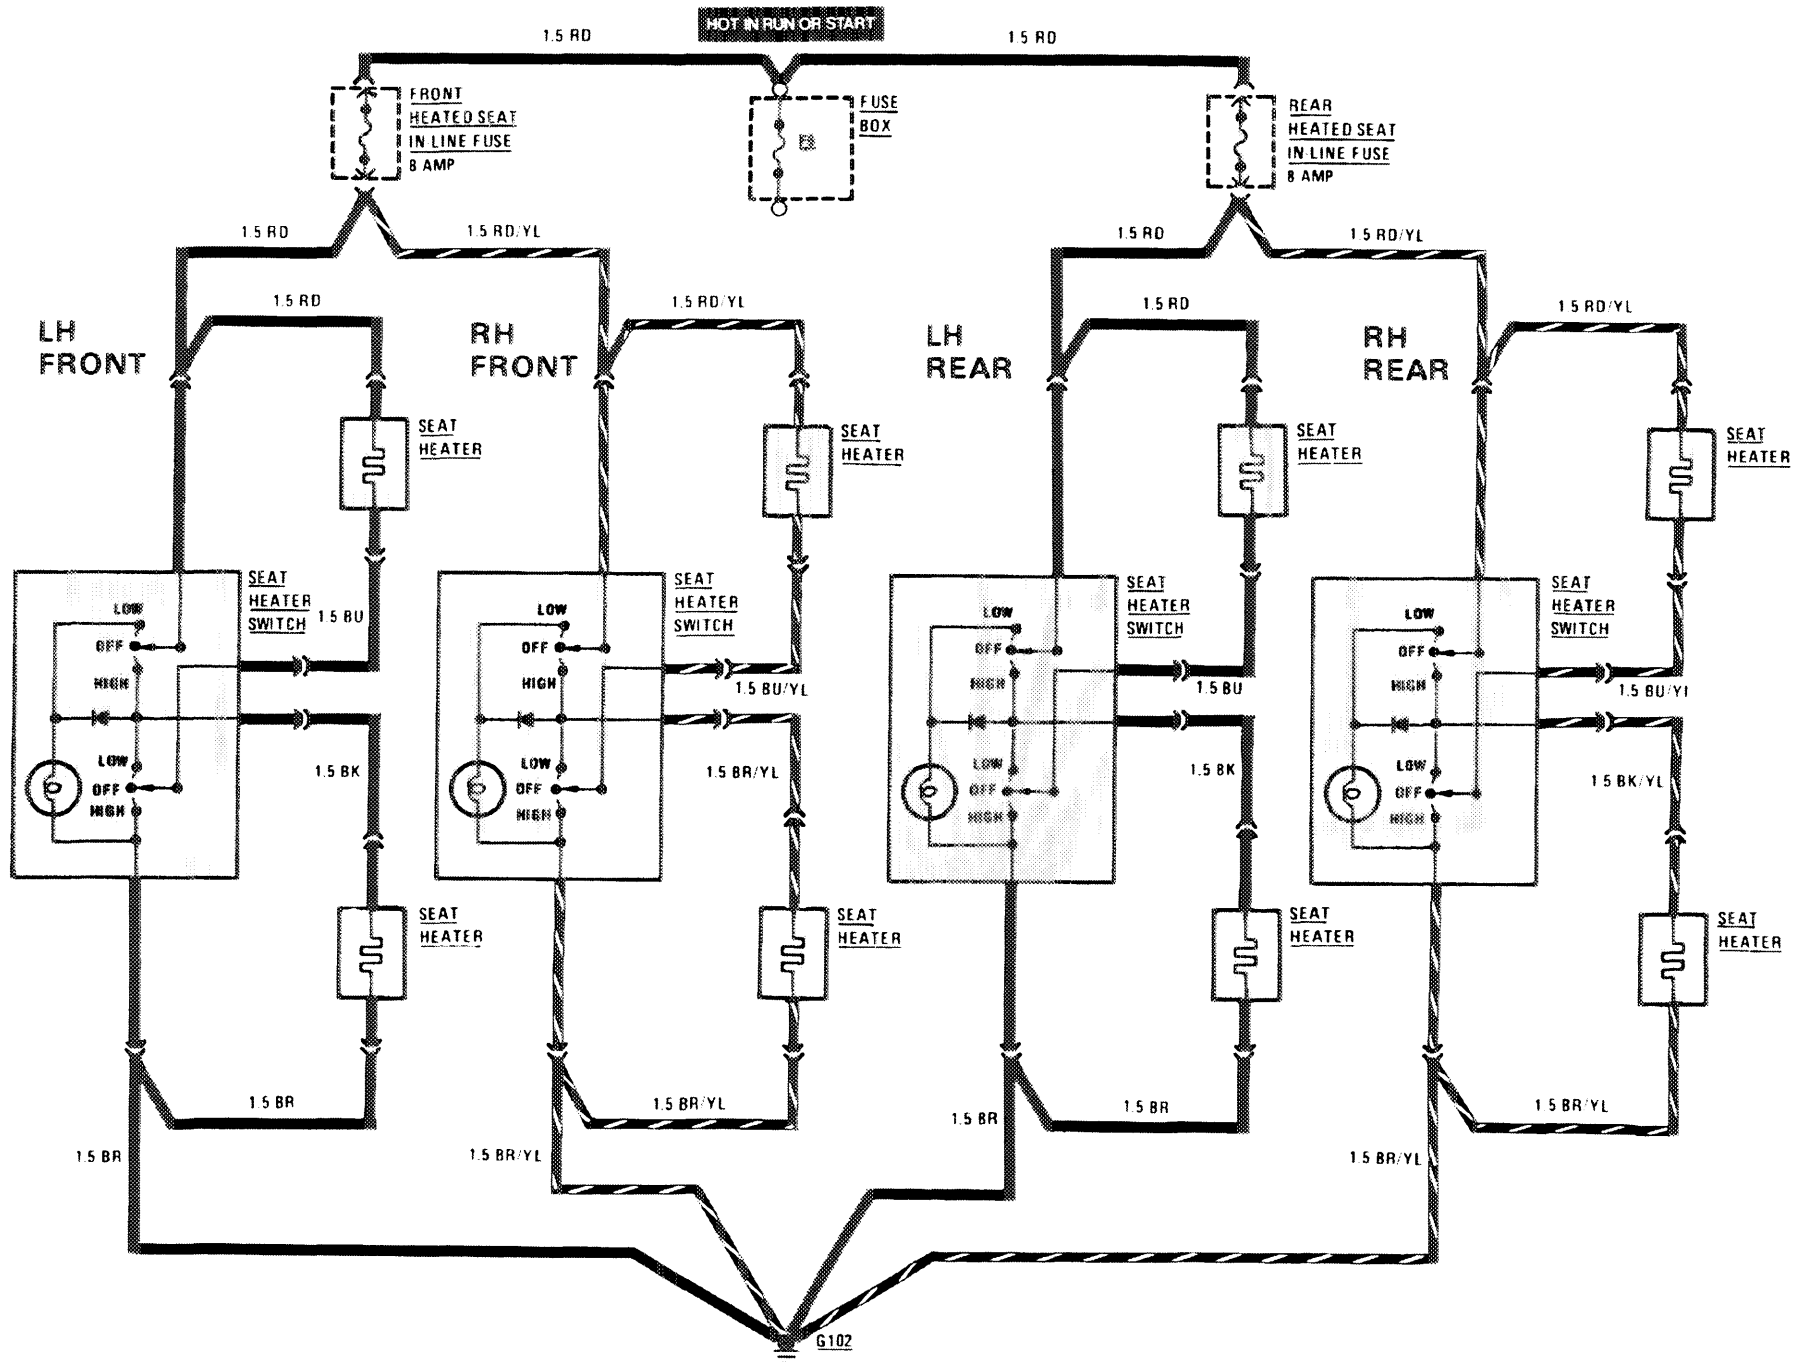


GROUND DISTRIBUTION


128
300
SD

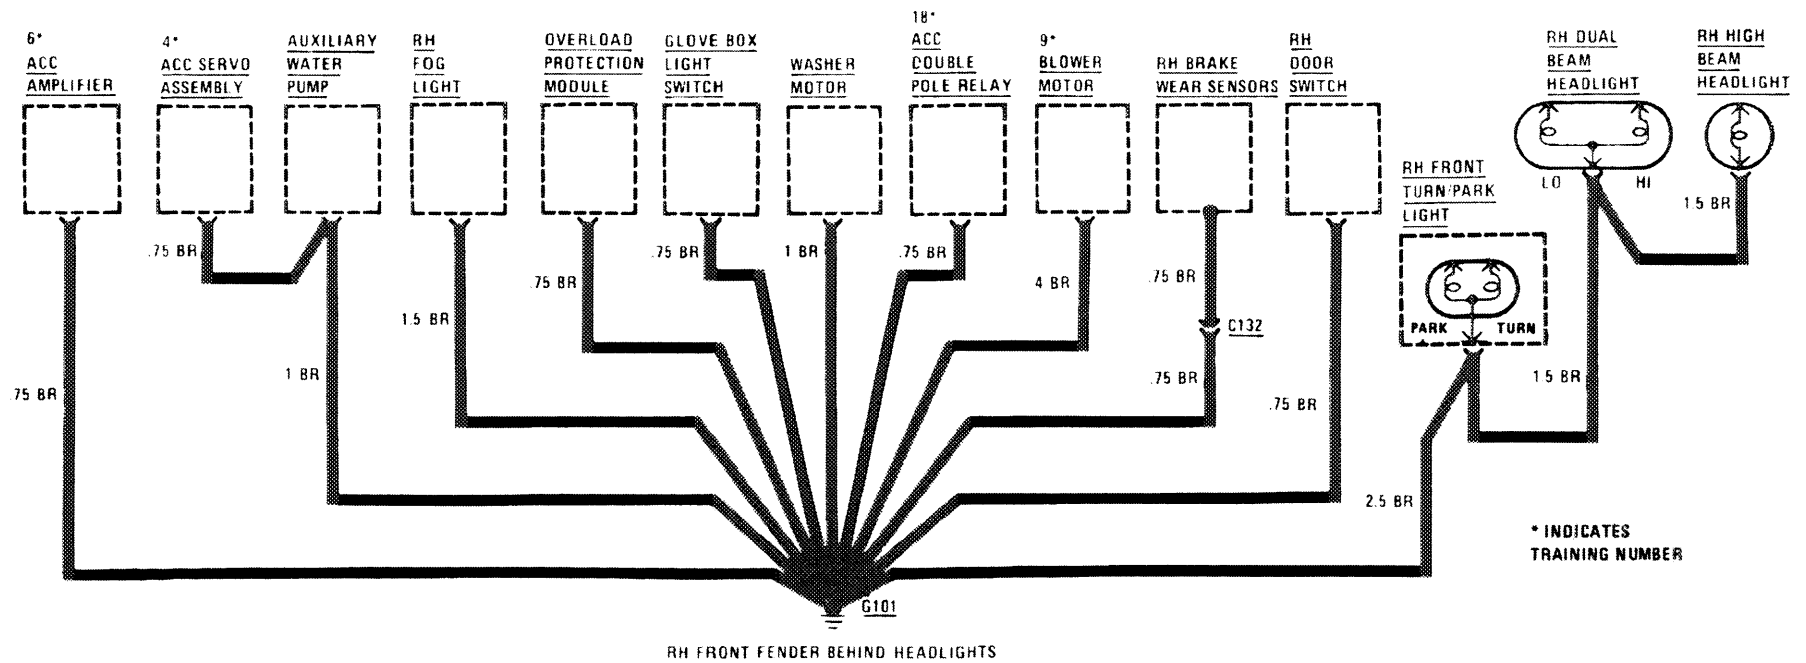

GROUND DISTRIBUTION

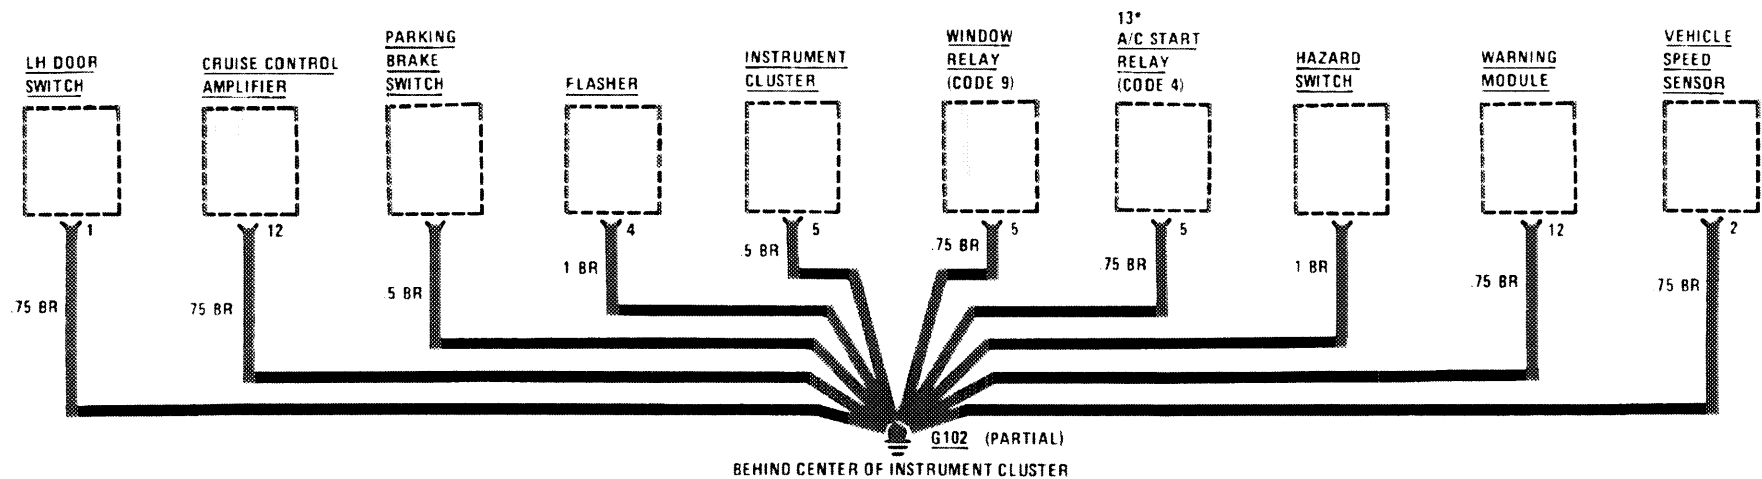

129
300
SD

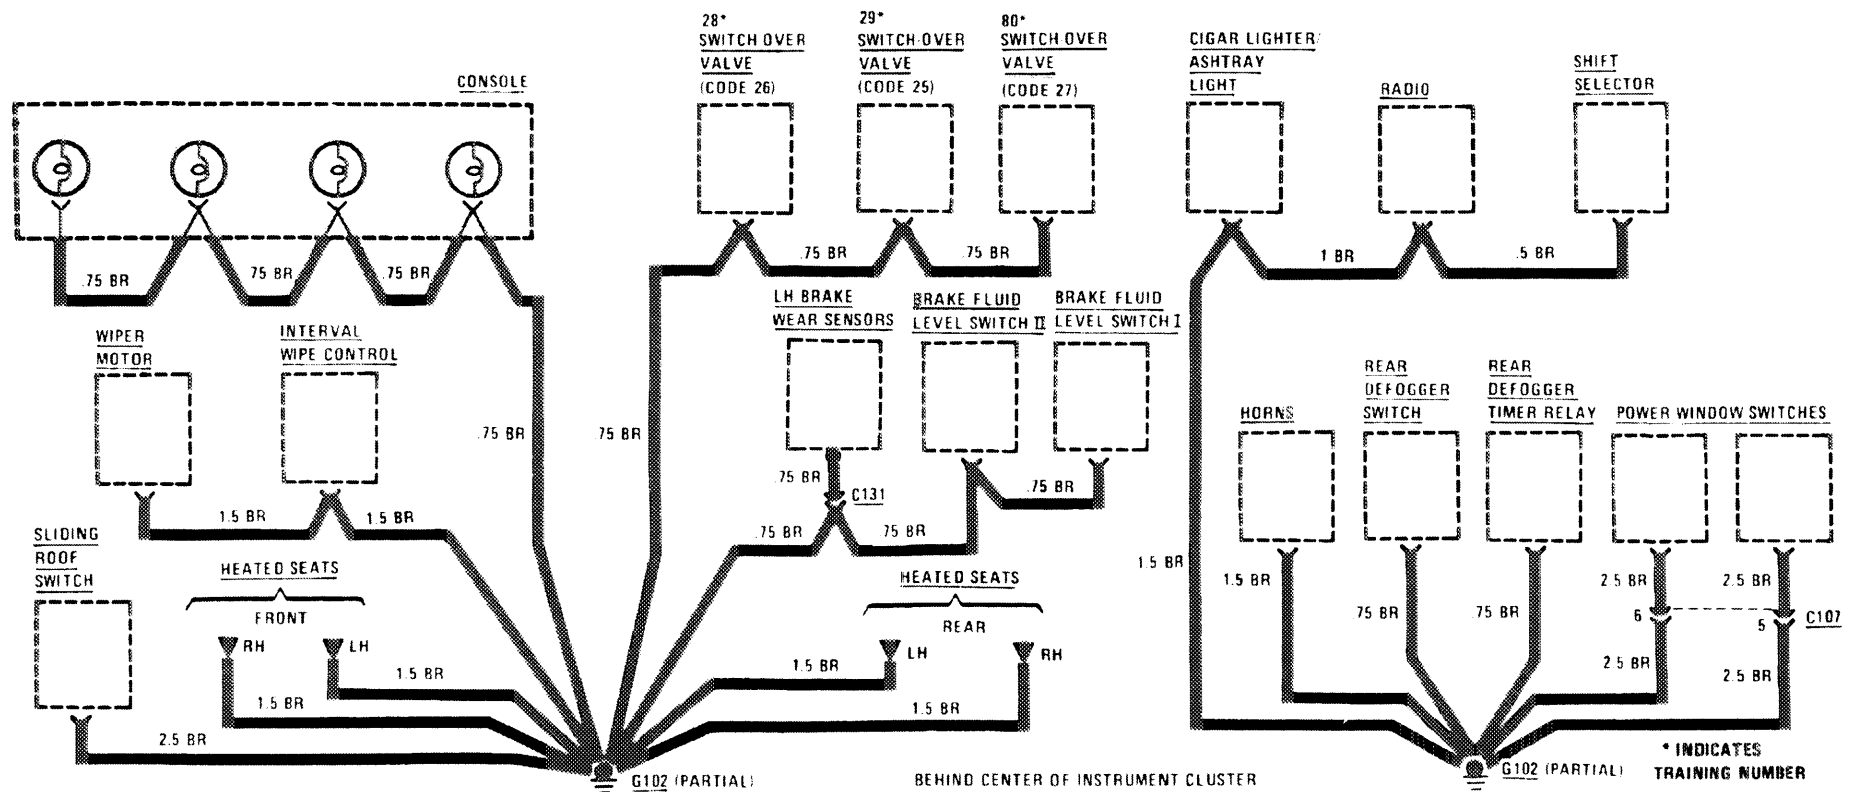

* INDICATES
TRAINING NUMBER

GROUND DISTRIBUTION

130
300
SD

