

MUTLICORE 400 and CTD SHARED TERMINATION PICTURES

Termination on CTD



Termination secured in tray & safety to frame



safety to rosette frame




wires up frame leg




Termination lowered down one side then looped around to other side

Termination on MC400

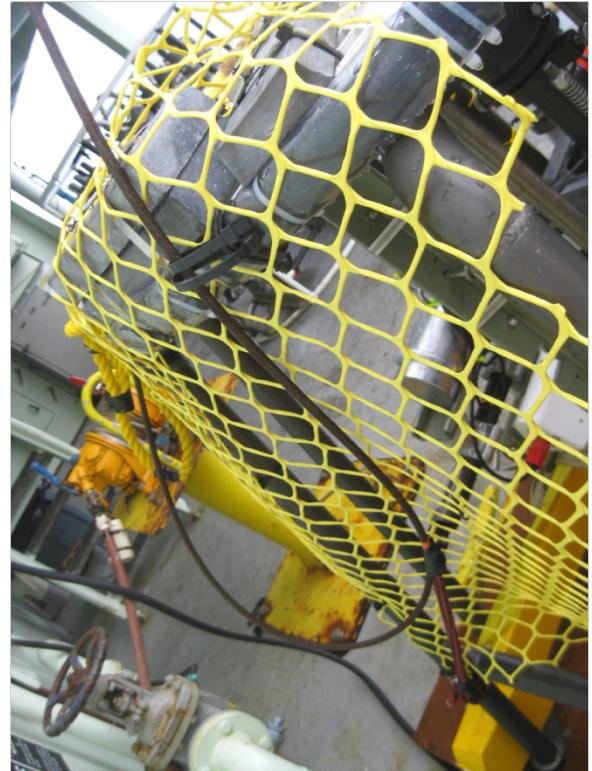



A couple tie wraps on this side - tight

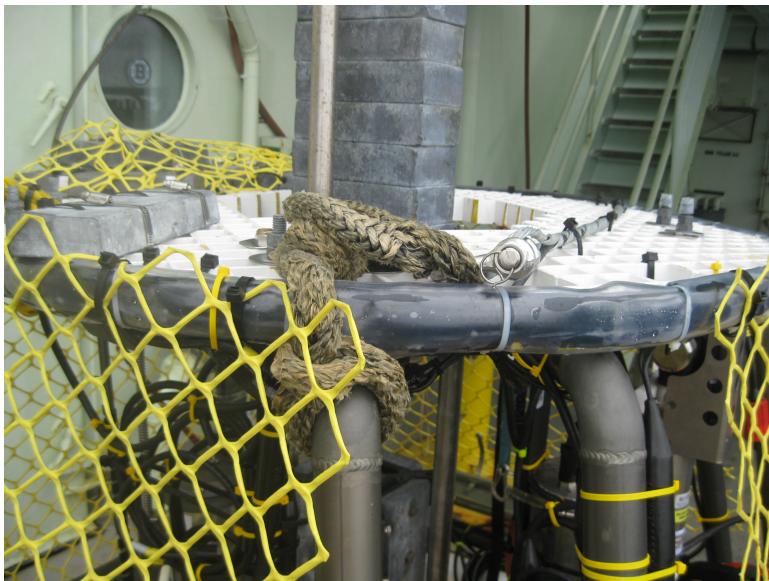

safety rigged to MC frame leg



Need to keep wires clear of where core sampler will be set-up to trigger



Two “guide” tie wraps loosely around wire to guide the portion that the bungee is pulling downward

TERMINATION:

