

4CH USB Video Capture Dongle Software Installation Manual




Step-02: AUTORUN will install the driver first. As the following picture shows:

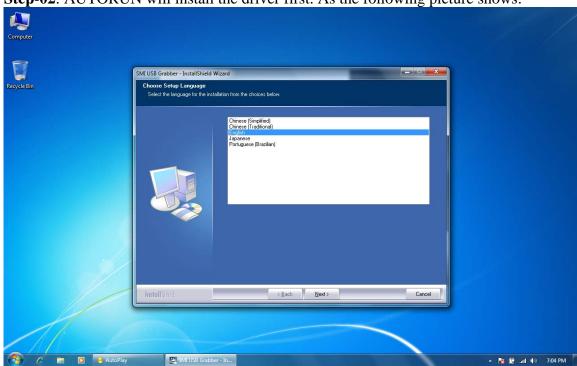

Step-03: Please wait for several seconds until driver installation finish.

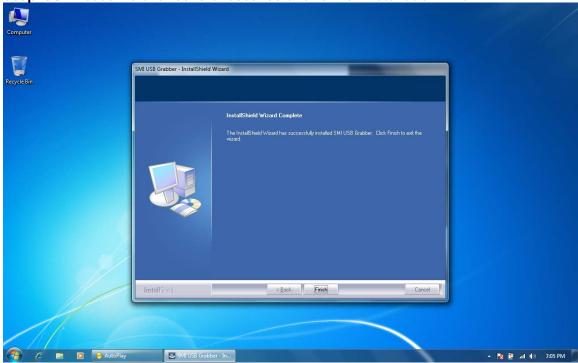


Step-04: Select software Installation

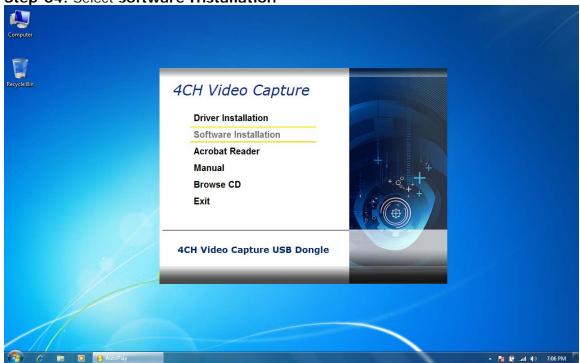


Step-05: Choose Software Language




Step-06: AP Installation....

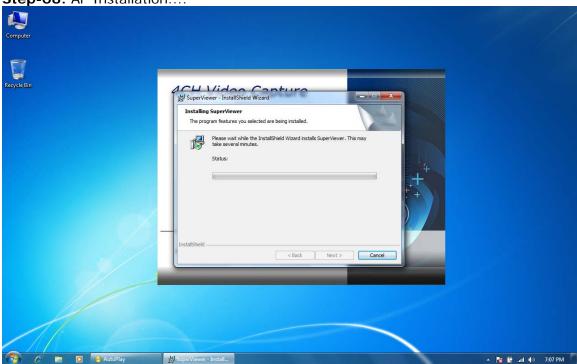

Step-07: Click **Finish** to complete the SuperViewer Installation.

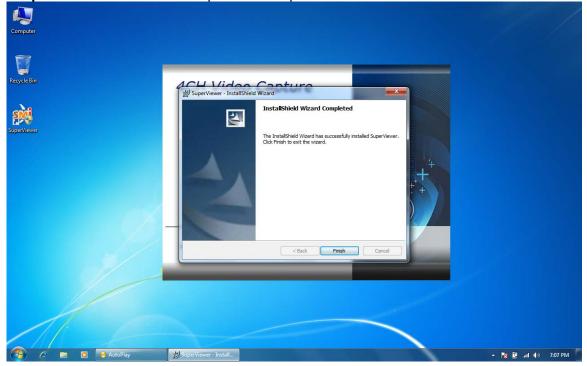


Step-08: Click Exit to complete the installation.

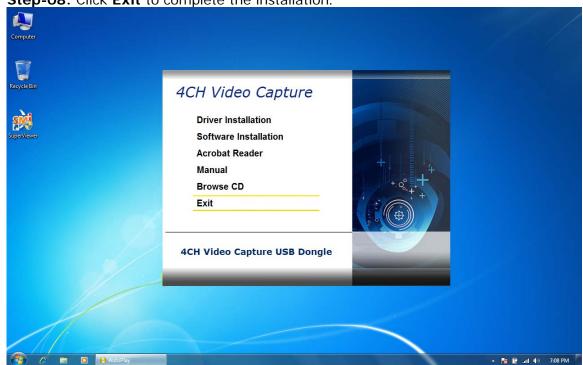



Step-09: Insert The USB dongle, select the it can works now.

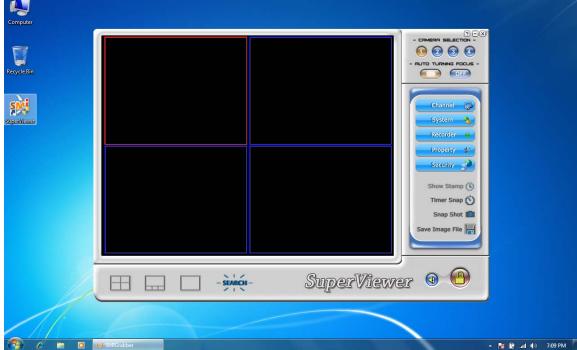

Note: If you want to install the other language software version, please remove the software installed first.

