MANIPULATOR	ADVANTAGES	DISADVANTAGES.
RECTANGULAR	- EASY TO PROGRAM - EASY TO CALCULATE POSITION OF END EFFECTOR. - RIGIDITY - PAYLOAD LIFTING. - WORKSPACE DEFINITION - EASY CONTROL - 1 DEGREE OF FREEDOM PER JOINT	- REACH LIMITATION - REACH IN FRONT - WORKSPACE IS CONTAINED WITHIN JOINTS/ACTUATOR - CAN'T REACH UNDER OBSTACLES. - LARGE FLOOR SPACE.
CYLINDRICAL	- RIGID STRUCTURE - REACH ALL AROUND - SMALLER FOOTPRINT/ OCCUPIES LESS FLOOR SPACE. - REACH UNDER. - RELATIVELY EASY. TO PROGRAM. - REVOLUTE JOINT IS EASY TO SEAL	- INNER WORKSPACE CAN'T BE USED. - DIFFICULT TO REACH AROUND OBSTACLES. - REDUCED PAYLOAD. - LIMIT OF PRECISION AT END OF REACH. - MORE DIFFICULT TO PROGRAM COMPARED WITH RECTANGULAR.
SPHERICAL	- HIGHER REACH / REACH ABOVE ITSELF. - SMALL FOOTPRINT. - MORE FLEXIBLE.	- "DEAD SPACE" IN WORK SPACE. - DIFFICULT TO PROGRAM. - LIMITED PAYLOAD. - CAN'T REACH AROUND OBSTACLE

SCARA.

- CAN REACH AROUND OBSTACLES.
- MORE FLEXIBLE THAN CYLINDRICAL.
- CENTRAL COLUMN PROVIDES RIGIDITY.
- LESS SPACE WASTED.
- SMALL FOOTPRINT.

- LIMITATION ON PAYLOAD.
- DIFFICULT TO PROG.
- 2 POSSIBLE SOLUTION FOR EVER POSITION.

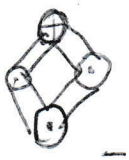

- CAN'T REACH ABOVE
- INNER WORKSPACE CAN'T BE USED.
- CAN'T REACH BELOW.

ANTHROPOMORPHIC.

- HIGHLY FLEXIBLE
- MORE DEXTERITY
- SMALL FOOTPRINT (LARGEST WORKSPACE TO SMALLEST FOOTPRINT).
- BIOMIMETIC ABILITIES.
- CAN REACH AROUND OBSTACLES.
- CAN REACH ABOVE
- SMALL WASTED SPACE IN WORKSPACE

- DIFFICULT TO PROGRAM.
- 2 OR 4 POSSIBLE SOLUTIONS FOR EVERY POSITION.
- PAYLOAD CAN BE LIMITED.
- COMPLEX MANIPULATOR.