WannierBSE

Flexible Tight-Binding Integration

Example 3:

air/MoS_2/air

Solve for excitons in heterostructures using your **own Tight Binding model.**

WannierBSE

Flexible Tight-Binding Integration

Example 3:

air/MoS_2/air

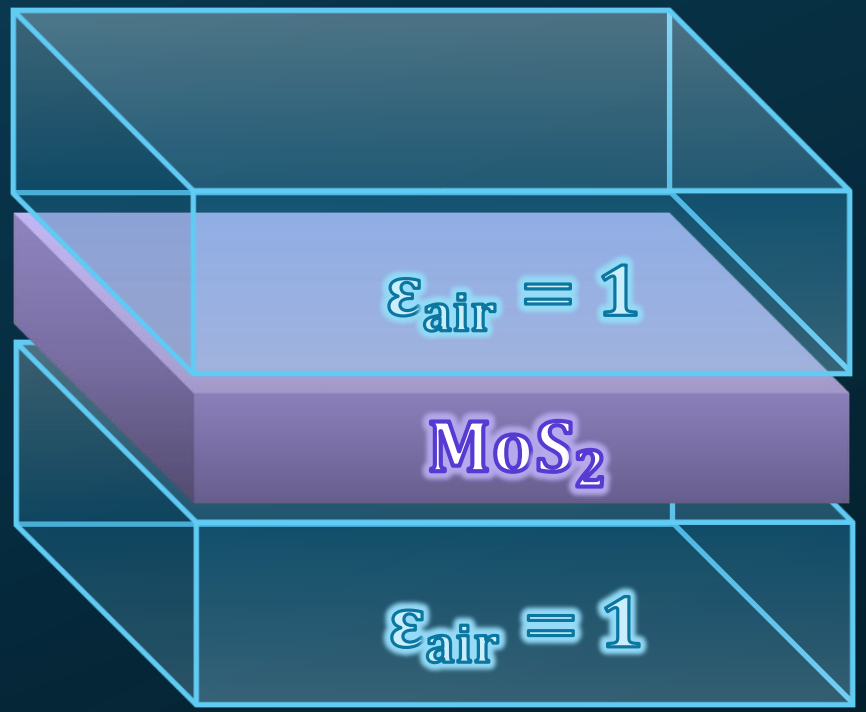

1 **Place your k-mesh and c/v band files into the User_input folder.**

- kmesh.txt
- C*_TB.txt
- v*_TB.txt

2 **Edit the control files in the Parameters folder to define your system.**

- control.txt
- structure.txt
- WF_centers.txt
- dielectric_control.txt

3 **Run the WBSE.m script to start the calculation.**

https://quantum.web.nycu.edu.tw/wannierbse/ wannierbse@gmail.com /in/wannierbse @WannierBSE @WannierBSE