


Item **395 LARGE** – GALVANIZED DRIVING CARRIAGE (CANTILEVER GATE SYSTEM)

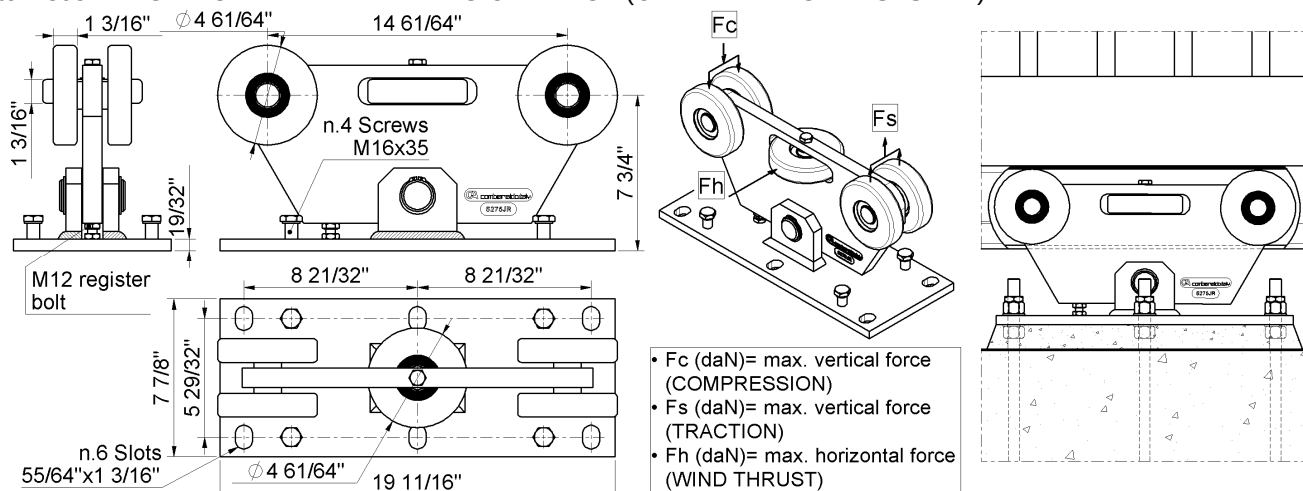

MECHANICAL FEATURES

Fc (Lb)	Fs (Lb)	Fh (Lb)
5214	5214	2607

- Declared forces relate to the bearings static load coefficient (Co). The carriage structure has been oversized to completely ensure held with declared forces.
- Check the supporting structure, it must be adequate to the force transferred by carriages.

APPLICATION RULES

- Build a concrete foundation plinth with anchor draft item 398 drowned in; once cured, place the carriages with opposing register bolts (external side), screw the drafts' nuts.
- Slip the track item 399 (welded in axis to the gate) and centre it on carriages, raise and/or lower the carriages (by adjusting the drafts' nuts) to flat the gate and to balance possible slopes of foundation plinth.
- Unscrew the register bolt to put in contact the wheels to the track (download the weight of the gate from carriages while registering); this operation helps to avoid the pendulum effect generated by the load transfer of the gate during the movement.
- Check the gate slide, it must be fluid and flat in every positions; lock the drafts' nuts and insert the locknut. Seal the carriages with no-retreat mortar to ensure held of compression forces.

CONSTRUCTION MATERIALS

- PLATES: Flat laminated bars S275JR, UNI EN 10025/1-2
- WHEELS: Round laminated bars C45, UNI EN 10083-2
- SPACERS: Drawn round bars 11SMnPb37, UNI EN 10277-3
- WHEELS' PINS: Drawn round bars 11SMnPb37, UNI EN 10277-3
- CARRIAGE'S PIN: Drawn round bars 11SMnPb37, UNI EN 10277-3
- BEARINGS: 6305-2RS, shielded radial one ball ring
- WHEEL'S SCREW: Screw TE M12-8.8 UNI 5737
- SCREWS M16x35: Screw TE cl. 8.8 UNI 5739
- M12 REGISTER BOLT: Screw TE cl. 8.8 UNI 5739, Low nut UNI 5589
- SEEGER: Safety elastic ring (for shafts) Ø1 37/64" DIN471

HOW SUPPLIED

- The carriage is supplied GALVANIZED.
- Galvanized parts have a coating surface of hexavalent chromium-free zinc electroplating, with grade "3" of corrosion resistance according to UNI EN 1670.

MAINTENANCE

- Check every screw's locking and seeger's presence. (at least every 6 months).
- Bearings without maintenance.

PERIODIC CHECKS

- Check the carriage constantly (at least every 12 months) to verify the possible presence of cracks, deformations, lacerations, breaks, wears more than 10% of initial dimension, etc. of every component.
- In case of anomalies, prevent its use and make the product installed to be checked by professional personnel.