Scarlett 2i2 4th Gen Specifications

These specifications allow you to compare your 2i2 4th Gen with other devices and make sure they'll work together. If you're not familiar with these specifications, don't worry you don't need to know this information to use your 2i2 4th Gen with most devices

Performance Specifications

Where possible, we measure all performance figures following AES17.

Supported Sample Rates	44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
Bit Depth	24-bit
Microphone inputs	
Frequency Response	20Hz - 20kHz ± 0.06dB
Dynamic Range (A-weighted)	116dB
THD+N	-100dB (-1dBFS @ 8dB Gain)
Noise EIN (A-Weighted)	-127dBu
Maximum Input Level (at minimum gain)	+16dBu
Gain Range	69dB

Line Inputs

Frequency Response	20Hz - 20kHz ± 0.05dB
Dynamic Range (A-weighted)	115.5dB
THD+N	-100dB (-1dBFS @ 8dB Gain)
Maximum Input Level (at minimum gain)	+22dBu
Gain Range	69dB
Input Impedance	60kΩ

Instrument Inputs

Frequency Response	20Hz - 20kHz ± 0.15dB
Dynamic Range (A-weighted)	113dB
THD+N	-80dB (-1dBFS @ 8dB Gain)
Maximum Input Level (at minimum gain)	+12dBu
Gain Range	62dB
Input Impedance	1MΩ

Line Outputs

Frequency Response	20Hz - 20kHz ± 0.02dB
Dynamic Range (A-weighted)	120dB
THD+N	-109dB
Maximum Output Level	+16dBu
Output impedance	100Ω

Headphone Output

Frequency Response	20Hz - 20kHz ± 0.1dB @ 33Ω/300Ω
Dynamic Range (A-weighted)	112dB @ 33Ω 115dB @ 300Ω
THD+N	-99dB @ 33Ω (Minimum) -108dB @ 300Ω (Minimum)
Maximum Output Level	+2.5dBu into 33Ω +10dBu into 300Ω
Maximum Output Power	32mW into 33Ω 22mW into 300Ω
Output impedance	50Ω

Connectors	Two rear panel Neutrik® XLR connectors Two front panel Neutrik® 6.35mm (1/4”) jack sockets
Mic/Line switching	Automatic Connecting a 6.35mm jack to the front panel disables microphone input.
Phantom Power (48v)	Front panel **48V** (phantom power) button or switch in software
Line/Instrument switching	Front panel **Inst** button or switch in software
Auto Gain	Front panel **Auto** button or switch in software
Clip Safe	Front panel **Safe** button.
AIR function	Front panel **Air** button or switch in software

Analogue Outputs

Balanced Outputs	Two rear-panel Neutrik®6.35mm (1.4") TRS jack sockets
Headphone Output	Front panel stereo 6.35mm (1.4") TRS jack socket
Main Output Level Control	Front panel analogue control with pre-fade output level meter
Headphones Level Control	Front panel analogue control

Other I/O

USB	One USB 2.0 Type-C connector for data and power -  900mA One USB Type-C power connector - **5V DC** 4.5W

Environmental

Operating Temperature	40°C / 104°F Maximum ambient operating temperature

2i2 4th Gen Weight and Dimensions

Width	180mm (7.09")
Depth	117mm (4.60")



A diagram of the 2i2 4th Gen with dimensions.

Scarlett 2i2 channel order

Scarlett 2i2 input channels

Input	Channel
1	Input 1 (Mic/Line/Inst)
2	Input 2 (Mic/Line/Inst)
3	Loopback 1
4	Loopback 2

Scarlett 2i2 output channels

Output	Channel
1	Output Left (Headphones Left)
2	Output Right (Headphones Right)

Outputs 1 and 2 share the same feed as the Headphone Output. Whatever signal is present at the line outputs, you will also hear from the headphone output.

Managing Windows playback and recording channels

Some Windows applications, such as Zoom, Microsoft Teams, OBS Studio, or web browsers, do not support the ASIO driver type used by professional audio software. Instead, they rely on a different style of driver that accesses the channels exposed by Windows in the Sound Settings.

By default, when you connect a Focusrite interface to a Windows computer a single Playback device and a single Recording device appear in non-ASIO applications.

To avoid confusion, using the Focusrite driver, you can **choose which channels Windows should show or hide** to these apps. This won't affect how the interface works in your DAW (like Ableton Live or Cubase), which uses the ASIO driver directly.


Note

The Focusrite driver is installed with Focusrite Control 2 which you can download at any time from:

downloads.focusrite.com


To show the full channel set to non-ASIO applications on Windows:

1. Click the Focusrite Notifier icon in the Windows taskbar. This opens the show/hide window.

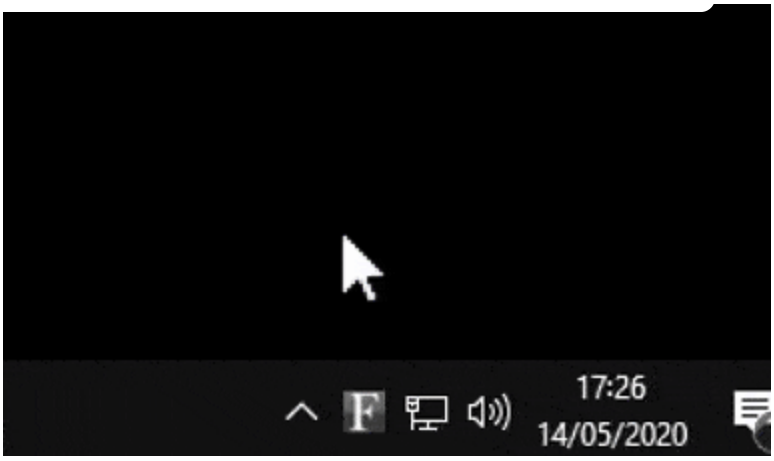

2. Choose the channels you want to show to non-ASIO apps.

   For example if you want to use line inputs 3/4 into streaming software, tick Analogue 3 + 4.

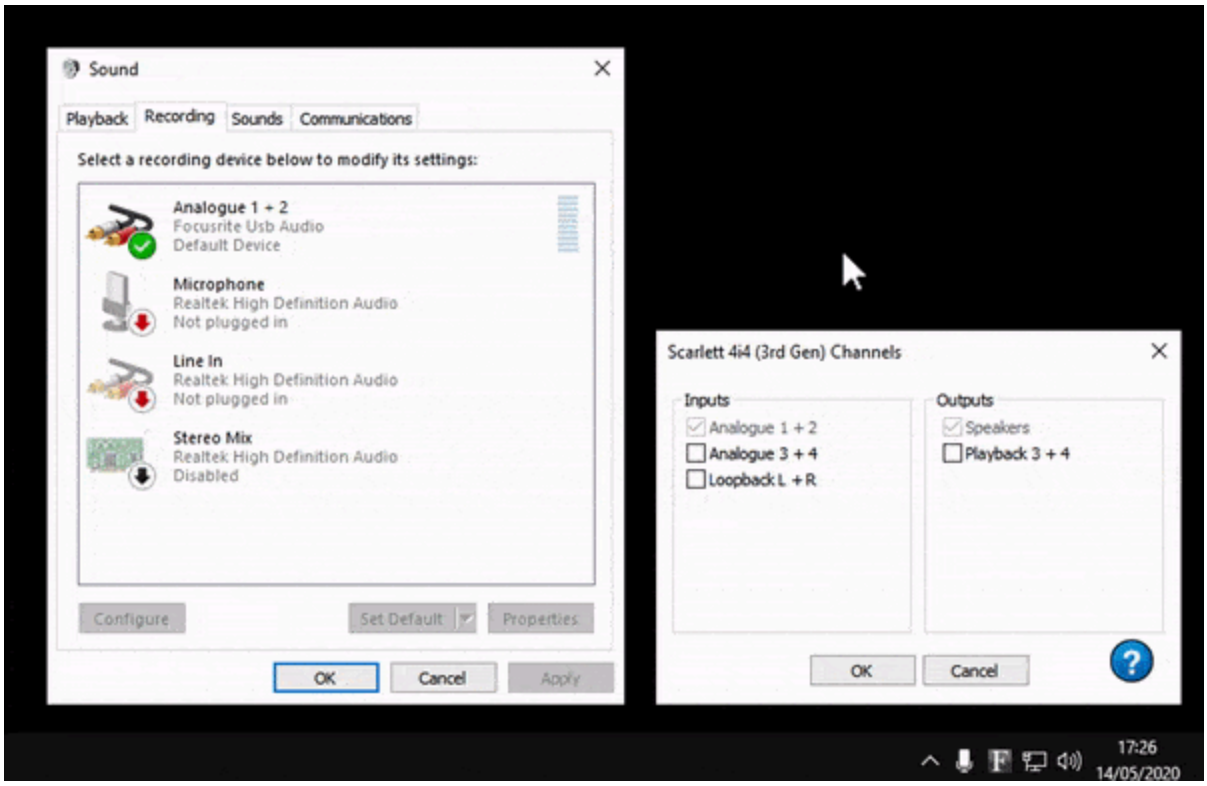

3. Click OK.

4. Open your non-ASIO app, you can now see each pair of input channels.

This does not affect ASIO apps

hidden in Windows Sound Settings.

This means you can hide channels from Zoom or OBS without affecting your DAW setup.

Was this article helpful?

Yes No

62 out of 74 found this helpful

Have more questions? Submit a request

Return to top

Related articles

Using your Scarlett 2i2 4th Gen

Getting started with your Scarlett 2i2 4th Gen

2i2 3rd Gen specifications

Setting up your DAW (Recording Software) with your Scarlett 2i2 4th Gen

Updating Focusrite Control 2 and your 2i2 4th Gen