Scarlett Solo 4th Gen Specifications

These specifications allow you to compare your Solo 4th Gen with other devices and make sure they'll work together. If you're not familiar with these specifications, don't worry you don't need to know this information to use your Solo 4th Gen with most devices

Performance Specifications

Where possible, we measure all performance figures following AES17.

Supported Sample Rates	44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
Bit Depth	24-bit
Microphone inputs	
Frequency Response	20Hz - 20kHz ± 0.06dB
Dynamic Range (A-weighted)	113dB
THD+N	-100dB (-1dBFS @ minimum gain)
Noise EIN (A-Weighted)	-127dBu
Maximum Input Level (at minimum gain)	9.5dBu
Gain Range	57dB

Microphone inputs	
Input Impedance	

Line Inputs	
Frequency Response	20 - 20kHz ± 0.05dB
Dynamic Range (A-weighted)	113dB
THD+N	-100dB (Minimum @ Minimum Gain)
Maximum Input Level (at minimum gain)	22dBu
Gain Range	57dB
Input Impedance	60kΩ

Instrument Inputs	
Frequency Response	20 - 20kHz ± 0.15dB
Dynamic Range (A-weighted)	112dB
THD+N	-80dB (Minimum @ 8dB Gain)
Maximum Input Level (at minimum gain)	+12dBu
Gain Range	57dB
Input Impedance	1MΩ

Line Outputs	
Frequency Response	20 - 20kHz ±0.02dB
Dynamic Range (A-weighted)	120dB
THD+N	-109dB
Maximum Output Level	16dBu
Output impedance	200Ω

Headphone Output	
Frequency Response	20-20kHz ± 0.1dB @ 33Ω / 300Ω
Dynamic Range (A-weighted)	112dB @ 33Ω 115dB @ 300Ω
THD+N	-97dB @ 33Ω (Minimum) -102dB @ 300Ω (Minimum)
Maximum Output Level	2.5dBu into 33Ω 10dBu into 300Ω
Maximum Output Power	32mW into 33Ω 22mW into 300Ω
Output impedance	50Ω

Physical and E

Analogue Inputs

Connectors	One back panel Neutrik XLR input One front panel 6.35mm (1/4") jack input
Phantom Power (48v)	Front panel **48V** (phantom power) button or switch in software
Line/Instrument switching	Front panel **Inst** button or switch in software
AIR function	Front panel **Air** button or switch in software

Analogue Outputs

Balanced Outputs	Two rear-panel 6.35mm (1.4") TRS jack sockets
Headphone Output	Front panel stereo 6.35mm (1.4") TRS jack socket
Main Output Level Control	Front panel analogue control
Headphones Level Control	Front panel analogue control

Other I/O

USB	900mA One USB 2.0 Type-C connector for power and data

Front Panel Indicators

48V	White/Green **48V** LED (depending on the selected channel)
Inst	White/Green **Inst** LED (depending on the selected channel)
Air Mode	White/Green **Air** LED (depending on the selected channel)
USB	Green USB LED
Direct Monitor	White/Green **Direct** LED

Environmental

Operating Temperature	40°C / 104°F Maximum ambient operating temperature

Solo 4th Gen Weight and Dimensions

Weight	382g (0.84lbs)

Products Software Solutions
Support Explore

Height	46.5m
Width	143mm
Depth	96mm (3.78")



A diagram of the Solo 4th Gen with dimensions.

Scarlett Solo channel order

Scarlett Solo input channels

Input	Channel
1	Instrument/Line Input
2	Microphone Input
3	Loopback 1
4	Loopback 2

Scarlett Solo output channels

Output	Channel
1	Output Left (Headphones Left)
2	Output Right (Headphones Right)

Note

Outputs 1 a
is present a

. Whatever signal one output.

Managing Windows playback and recording channels

Some Windows applications, such as Zoom, Microsoft Teams, OBS Studio, or web browsers, do not support the ASIO driver type used by professional audio software. Instead, they rely on a different style of driver that accesses the channels exposed by Windows in the Sound Settings.


By default, when you connect a Focusrite interface to a Windows computer a single Playback device and a single Recording device appear in non-ASIO applications.

To avoid confusion, using the Focusrite driver, you can **choose which channels Windows should show or hide** to these apps. This won't affect how the interface works in your DAW (like Ableton Live or Cubase), which uses the ASIO driver directly.

> **Note**
>
> The Focusrite driver is installed with Focusrite Control 2 which you can download at any time from:
>
> downloads.focusrite.com


To show the full channel set to non-ASIO applications on Windows:

1. Click the Focusrite Notifier icon in the Windows taskbar. This opens the show/hide window.

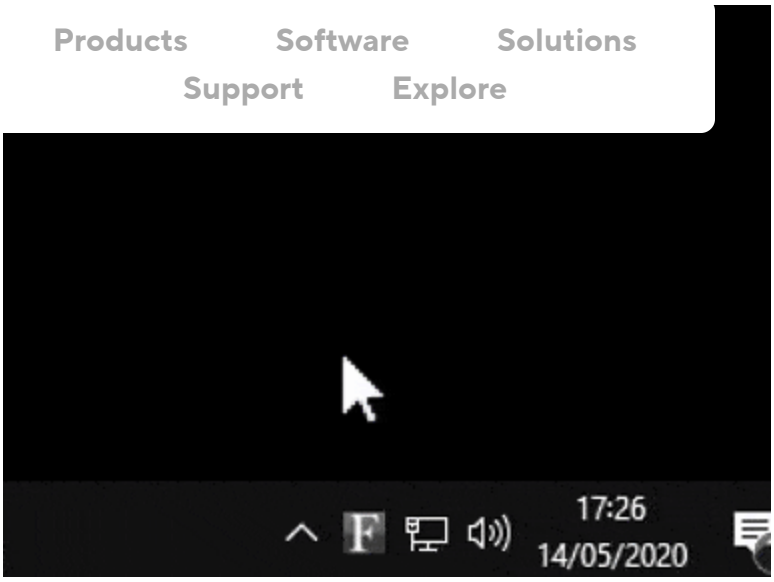

2. Choose the channels you want to show to non-ASIO apps.

   For example if you want to use line inputs 3/4 into streaming software, tick Analogue 3 + 4.

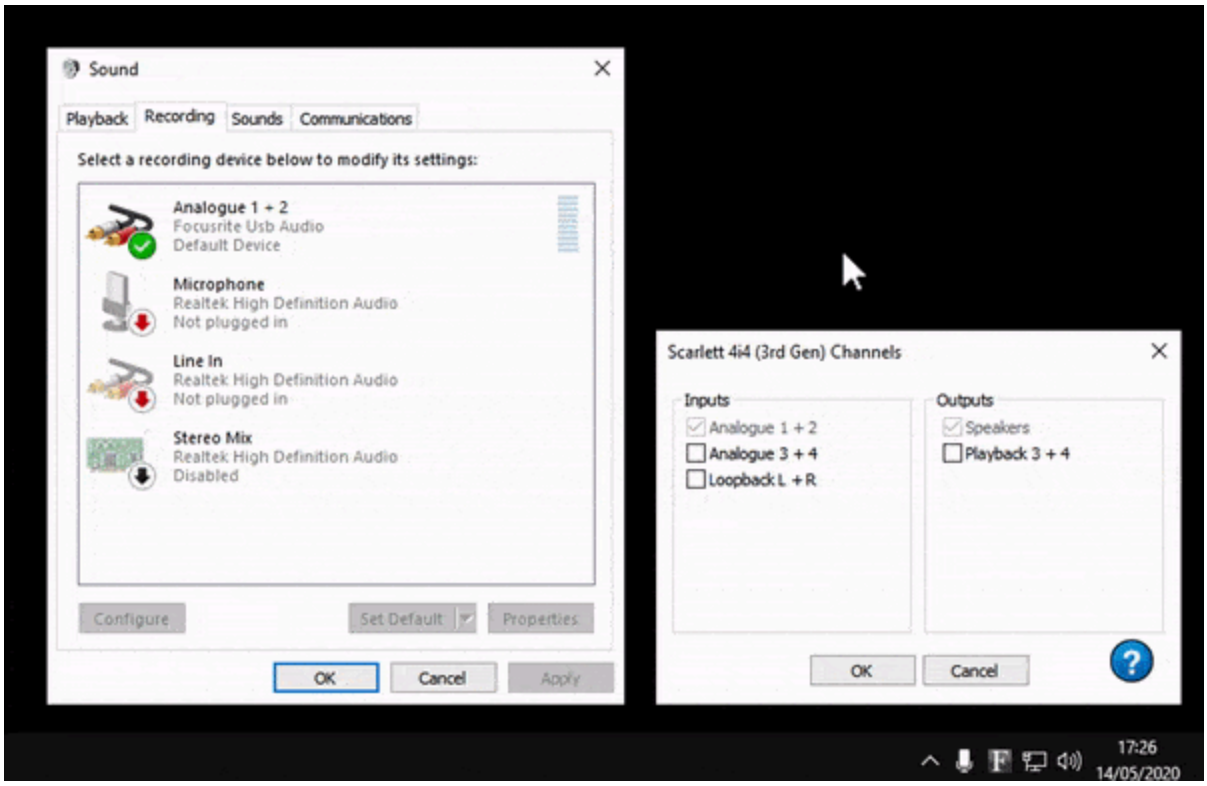

3. Click OK.

4. Open your non-ASIO app, you can now see each pair of input channels.

This does not affect ASIO apps

ASIO-comp Products Software Solutions Live, Cubase, FL Studio, etc.) Support Explore ven if they're hidden in W... Sound Settings.

This means you can hide channels from Zoom or OBS without affecting your DAW setup.

Was this article helpful?

Yes No

16 out of 20 found this helpful

Have more questions? Submit a request

Return to top

Recently viewed articles

Scarlett 2i2 4th Gen Specifications

Related articles

Scarlett Solo 3rd Gen specifications

Using your Scarlett Solo 4th Gen

Getting started with your Scarlett Solo 4th Gen

Setting up your DAW (Recording Software) with your Scarlett Solo 4th Gen

Updating Focusrite Control 2 and your Solo 4th Gen