

## LSM6DSO32: always-on 3-axis accelerometer and 3-axis gyroscope

### Introduction

This document provides usage information and application hints related to ST's [LSM6DSO32 iNEMO 6-axis IMU](#) (inertial measurement unit).

The LSM6DSO32 is a 3-axis digital accelerometer and 3-axis digital gyroscope system-in-package with a digital I<sup>2</sup>C, SPI, and MIPI I3C<sup>SM</sup> serial interface standard output, performing at 0.55 mA in combo high-performance mode. Thanks to the ultralow noise performance of both the gyroscope and the accelerometer, the device combines always-on low-power features with superior sensing precision for an optimal motion experience for the consumer. Furthermore, the accelerometer features smart sleep-to-wake-up (activity) and return-to-sleep (inactivity) functions that allow advanced power saving.

The device has a dynamic user-selectable full-scale acceleration range of ±4/±8/±16/±32 g and an angular rate range of ±125/±250/±500/±1000/±2000 dps.

The LSM6DSO32 can be configured to generate interrupt signals by using hardware recognition of free-fall events, 6D orientation, tap and double-tap sensing, activity or inactivity, and wake-up events.

The availability of a dedicated connection mode to external sensors allows the implementation of the sensor hub functionality.

The LSM6DSO32 is compatible with the requirements of the leading OSs, offering real, virtual, and batch-mode sensors. It has been designed to implement in hardware significant motion, relative tilt, pedometer functions, timestamp, and provides an incredible level of customization: up to 16 embedded finite state machines can be programmed independently for motion detection or gesture recognition such as hard-fall, glance, absolute wrist tilt, shake, double-shake, or pick-up.


The LSM6DSO32 has an integrated smart first-in first-out (FIFO) buffer of up to 9 KB size, allowing dynamic batching of significant data (that is, external sensors, step counter, timestamp, and temperature).

The LSM6DSO32 is available in a small plastic land grid array package (LGA-14L) and it is guaranteed to operate over an extended temperature range from -40°C to +85°C.


The ultrasmall size and weight of the SMD package make it an ideal choice for handheld portable applications such as smartphones, IoT connected devices, and wearables or any other application where reduced package size and weight are required.

## 1 Pin description


Figure 1. Pin connections

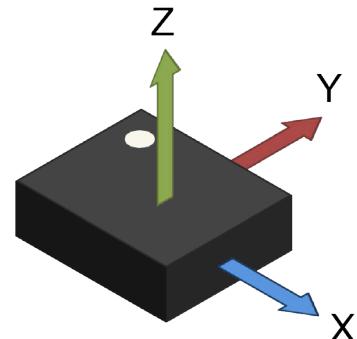

Direction of detectable acceleration (top view)

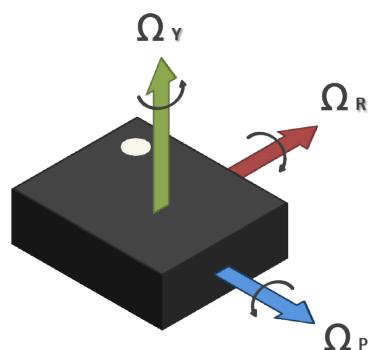

Direction of detectable angular rate (top view)

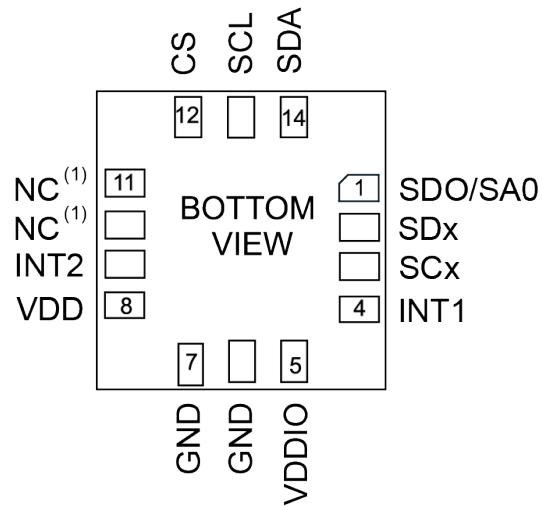

1. Leave pin electrically unconnected and soldered to PCB.

**Table 1. Pin status**

Pin #	Name	Mode 1 function <sup>(1)</sup>	Mode 2 function <sup>(1)</sup>	Pin status mode 1	Pin status mode 2
1	SDO	SPI 4-wire interface serial data output (SDO)	SPI 4-wire interface serial data output (SDO)	Default: input without pull-up Pull-up is enabled if bit SDO_PU_EN = 1 in the PIN_CTRL register.	Default: input without pull-up Pull-up is enabled if bit SDO_PU_EN = 1 in the PIN_CTRL register.
	SA0	I <sup>2</sup> C least significant bit of the device address (SA0) MIPI I3C <sup>SM</sup> least significant bit of the static address (SA0)	I <sup>2</sup> C least significant bit of the device address (SA0) MIPI I3C <sup>SM</sup> least significant bit of the static address (SA0)		
2	SDx	Connect to VDDIO or GND	I <sup>2</sup> C serial data master (MSDA)	Default: input without pull-up Pull-up is enabled if bit SHUB_PU_EN = 1 in the MASTER_CONFIG register.	Default: input without pull-up Pull-up is enabled if bit SHUB_PU_EN = 1 in the MASTER_CONFIG register.
3	SCx	Connect to VDDIO or GND	I <sup>2</sup> C serial clock master (MSCL)	Default: input without pull-up Pull-up is enabled if bit SHUB_PU_EN = 1 in the MASTER_CONFIG register.	Default: input without pull-up Pull-up is enabled if bit SHUB_PU_EN = 1 in the MASTER_CONFIG register.
4	INT1 <sup>(2)</sup>	Programmable interrupt 1 If the device is used as MIPI I3C <sup>SM</sup> pure slave, this pin must be set to 1.	Programmable interrupt 1	Default: input with pull-down Pull-down is disabled if bit PD_DIS_INT1 = 1 in the I3C_BUS_AVB register.	Default: input with pull-down Pull-down is disabled if bit PD_DIS_INT1 = 1 in the I3C_BUS_AVB register.
5	Vdd_IO	Power supply for I/O pins	Power supply for I/O pins		
6	GND	0 V supply	0 V supply		
7	GND	0 V supply	0 V supply		
8	Vdd	Power supply	Power supply		
9	INT2 <sup>(3)</sup>	Programmable interrupt 2 (INT2) / Data enabled (DEN)	Programmable interrupt 2 (INT2) / Data enabled (DEN) / I <sup>2</sup> C master external synchronization signal (MDRDY)	Default: output forced to ground	Default: output forced to ground
10	NC	Leave unconnected	Leave unconnected	Default: input with pull-up	Default: input with pull-up
11	NC	Connect to VDDIO or leave unconnected	Connect to VDDIO or leave unconnected	Default: input with pull-up	Default: input with pull-up
12	CS	I <sup>2</sup> C and MIPI I3C <sup>SM</sup> / SPI mode selection (1: SPI idle mode / I <sup>2</sup> C and MIPI I3C <sup>SM</sup> communication enabled; 0: SPI communication mode / I <sup>2</sup> C and MIPI I3C <sup>SM</sup> disabled)	I <sup>2</sup> C and MIPI I3C <sup>SM</sup> / SPI mode selection (1: SPI idle mode / I <sup>2</sup> C and MIPI I3C <sup>SM</sup> communication enabled; 0: SPI communication mode / I <sup>2</sup> C and MIPI I3C <sup>SM</sup> disabled)	Default: input with pull-up Pull-up is disabled if bit I2C_disable = 1 in the CTRL4_C register and bit I3C_disable = 1 in the CTRL9_XL register.	Default: input with pull-up Pull-up is disabled if bit I2C_disable = 1 in the CTRL4_C register and bit I3C_disable = 1 in the CTRL9_XL register.
13	SCL	I <sup>2</sup> C / MIPI I3C <sup>SM</sup> serial clock (SCL) / SPI serial port clock (SPC)	I <sup>2</sup> C / MIPI I3C <sup>SM</sup> serial clock (SCL) / SPI serial port clock (SPC)	Default: input without pull-up	Default: input without pull-up
14	SDA	I <sup>2</sup> C / MIPI I3C <sup>SM</sup> serial data (SDA) / SPI serial data input (SDI) / 3-wire interface serial data output (SDO)	I <sup>2</sup> C / MIPI I3C <sup>SM</sup> serial data (SDA) / SPI serial data input (SDI) / 3-wire interface serial data output (SDO)	Default: input without pull-up	Default: input without pull-up

- Refer to description in Section 3.7 Connection modes.
- INT1 must be set to 0 or left unconnected during power-on if the I<sup>2</sup>C/SPI interfaces are used. If no interrupt signal is needed on INT1, this pin can be left unconnected.
- If no interrupt signal is needed on INT2, this pin can be left unconnected.

Internal pull-up value is from 30 kΩ to 50 kΩ, depending on VDDIO.

## 2 Registers



**Table 2. Registers**

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
FUNC_CFG_ACCESS	01h	FUNC_CFG_ACCESS	SHUB_REG_ACCESS	0	0	0	0	0	0
PIN_CTRL	02h	0	SDO_PU_EN	1	1	1	1	1	1
FIFO_CTRL1	07h	WTM7	WTM6	WTM5	WTM4	WTM3	WTM2	WTM1	WTM0
FIFO_CTRL2	08h	STOP_ON_WTM	FIFO_COMPRT_RN	0	ODRCHG_EN	0	UNCOPTR_RATE_1	UNCOPTR_RATE_0	WTM8
FIFO_CTRL3	09h	BDR_GY_3	BDR_GY_2	BDR_GY_1	BDR_GY_0	BDR_XL_3	BDR_XL_2	BDR_XL_1	BDR_XL_0
FIFO_CTRL4	0Ah	DEC_TS_BATCH_1	DEC_TS_BATCH_0	ODR_T_BATCH_1	ODR_T_BATCH_0	0	FIFO_MODE2	FIFO_MODE1	FIFO_MODE0
COUNTER_BDR_REG1	0Bh	dataready_pulsed	RST_COUNTER_BDR	TRIG_COUNTER_BDR	0	0	CNT_BDR_TH_10	CNT_BDR_TH_9	CNT_BDR_TH_8
COUNTER_BDR_REG2	0Ch	CNT_BDR_TH_7	CNT_BDR_TH_6	CNT_BDR_TH_5	CNT_BDR_TH_4	CNT_BDR_TH_3	CNT_BDR_TH_2	CNT_BDR_TH_1	CNT_BDR_TH_0
INT1_CTRL	0Dh	DEN_DRDY_flag	INT1_CNT_BDR	INT1_FIFO_FULL	INT1_FIFO_OVR	INT1_FIFO_TH	INT1_BOOT	INT1_DRDY_G	INT1_DRDY_XL
INT2_CTRL	0Eh	0	INT2_CNT_BDR	INT2_FIFO_FULL	INT2_FIFO_OVR	INT2_FIFO_TH	INT2_DRDY_TEMP	INT2_DRDY_G	INT2_DRDY_XL
WHO_AM_I	0Fh	0	1	1	0	1	1	0	0
CTRL1_XL	10h	ODR_XL3	ODR_XL2	ODR_XL1	ODR_XL0	FS1_XL	FS0_XL	LPF2_XL_EN	0
CTRL2_G	11h	ODR_G3	ODR_G2	ODR_G1	ODR_G0	FS1_G	FS0_G	FS_125	0
CTRL3_C	12h	BOOT	BDU	H_LACTIVE	PP_OD	SIM	IF_INC	0	SW_RESET
CTRL4_C	13h	0	SLEEP_G	INT2_on_INT1	0	DRDY_MASK	I2C_disable	LPF1_SEL_G	0
CTRL5_C	14h	XL_ULP_EN	ROUNDING1	ROUNDING0	0	ST1_G	ST0_G	ST1_XL	ST0_XL
CTRL6_C	15h	TRIG_EN	LVL1_EN	LVL2_EN	XL_HM_MODE	USR_OFF_W	FTYPE_2	FTYPE_1	FTYPE_0
CTRL7_G	16h	G_HM_MODE	HP_EN_G	HPM1_G	HPM0_G	0	0	USR_OFF_ON_OUT	0
CTRL8_XL	17h	HPCF_XL2	HPCF_XL1	HPCF_XL0	HP_REF_MODE_XL	FASTSETTL_MODE_XL	HP_SLOPE_XL_EN	0	LOW_PASS_ON_6D
CTRL9_XL	18h	DEN_X	DEN_Y	DEN_Z	DEN_XL_G	DEN_XL_EN	DEN_LH	I3C_disable	0
CTRL10_C	19h	0	0	TIMESTAMP_EN	0	0	0	0	0
ALL_INT_SRC	1Ah	TIMESTAMP_ENDCOUNT	0	SLEEP_CHANGE_IA	D6D_IA	DOUBLE_TAP	SINGLE_TAP	WU_IA	FF_IA
WAKE_UP_SRC	1Bh	0	SLEEP_CHANGE_IA	FF_IA	SLEEP_STATE	WU_IA	X_WU	Y_WU	Z_WU
TAP_SRC	1Ch	0	TAP_IA	SINGLE_TAP	DOUBLE_TAP	TAP_SIGN	X_TAP	Y_TAP	Z_TAP
D6D_SRC	1Dh	DEN_DRDY	D6D_IA	ZH	ZL	YH	YL	XH	XL
STATUS_REG	1Eh	0	0	0	0	0	TDA	GDA	XLDA
OUT_TEMP_L	20h	Temp7	Temp6	Temp5	Temp4	Temp3	Temp2	Temp1	Temp0
OUT_TEMP_H	21h	Temp15	Temp14	Temp13	Temp12	Temp11	Temp10	Temp9	Temp8

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
OUTX_L_G	22h	D7	D6	D5	D4	D3	D2	D1	D0
OUTX_H_G	23h	D15	D14	D13	D12	D11	D10	D9	D8
OUTY_L_G	24h	D7	D6	D5	D4	D3	D2	D1	D0
OUTY_H_G	25h	D15	D14	D13	D12	D11	D10	D9	D8
OUTZ_L_G	26h	D7	D6	D5	D4	D3	D2	D1	D0
OUTZ_H_G	27h	D15	D14	D13	D12	D11	D10	D9	D8
OUTX_L_A	28h	D7	D6	D5	D4	D3	D2	D1	D0
OUTX_H_A	29h	D15	D14	D13	D12	D11	D10	D9	D8
OUTY_L_A	2Ah	D7	D6	D5	D4	D3	D2	D1	D0
OUTY_H_A	2Bh	D15	D14	D13	D12	D11	D10	D9	D8
OUTZ_L_A	2Ch	D7	D6	D5	D4	D3	D2	D1	D0
OUTZ_H_A	2Dh	D15	D14	D13	D12	D11	D10	D9	D8
EMB_FUNC_STATUS_MAINPAGE	35h	IS_FSM_LC	0	IS_SIGMOT	IS_TILT	IS_STEP_DET	0	0	0
FSM_STATUS_A_MAINPAGE	36h	IS_FSM8	IS_FSM7	IS_FSM6	IS_FSM5	IS_FSM4	IS_FSM3	IS_FSM2	IS_FSM1
FSM_STATUS_B_MAINPAGE	37h	IS_FSM16	IS_FSM15	IS_FSM14	IS_FSM13	IS_FSM12	IS_FSM11	IS_FSM10	IS_FSM9
STATUS_MASTER_MAINPAGE	39h	WR_ONCE_DONE	SLAVE3_NACK	SLAVE2_NACK	SLAVE1_NACK	SLAVE0_NACK	0	0	SENS_HUB_ENDOP
FIFO_STATUS1	3Ah	DIFF_FIFO_7	DIFF_FIFO_6	DIFF_FIFO_5	DIFF_FIFO_4	DIFF_FIFO_3	DIFF_FIFO_2	DIFF_FIFO_1	DIFF_FIFO_0
FIFO_STATUS2	3Bh	FIFO_WTM_IA	FIFO_OVR_IA	FIFO_FULL_IA	COUNTER_BDR_IA	FIFO_OVR_LATCHED	0	DIFF_FIFO_9	DIFF_FIFO_8
TIMESTAMP0	40h	T7	T6	T5	T4	T3	T2	T1	T0
TIMESTAMP1	41h	T15	T14	T13	T12	T11	T10	T9	T8
TIMESTAMP2	42h	T23	T22	T21	T20	T19	T18	T17	T16
TIMESTAMP3	43h	T31	T30	T29	T28	T27	T26	T25	T24
TAP_CFG0	56h	0	INT_CLR_ON_READ	SLEEP_STATUS_ON_INT	SLOPE_FDS	TAP_X_EN	TAP_Y_EN	TAP_Z_EN	LIR
TAP_CFG1	57h	TAP_PRIORITY_2	TAP_PRIORITY_1	TAP_PRIORITY_0	TAP_THS_X_4	TAP_THS_X_3	TAP_THS_X_2	TAP_THS_X_1	TAP_THS_X_0
TAP_CFG2	58h	INTERRUPTS_ENABLE	INACT_EN1	INACT_EN0	TAP_THS_Y_4	TAP_THS_Y_3	TAP_THS_Y_2	TAP_THS_Y_1	TAP_THS_Y_0
TAP_THS_6D	59h	D4D_EN	SIXD_THS1	SIXD_THS0	TAP_THS_Z_4	TAP_THS_Z_3	TAP_THS_Z_2	TAP_THS_Z_1	TAP_THS_Z_0
INT_DUR2	5Ah	DUR3	DUR2	DUR1	DUR0	QUIET1	QUIET0	SHOCK1	SHOCK0
WAKE_UP_THS	5Bh	SINGLE_DOUBLE_TAP	USR_OFF_ON_WU	WK_THS5	WK_THS4	WK_THS3	WK_THS2	WK_THS1	WK_THS0
WAKE_UP_DUR	5Ch	FF_DUR5	WAKE_DUR1	WAKE_DUR0	WAKE_THS_W	SLEEP_DUR3	SLEEP_DUR2	SLEEP_DUR1	SLEEP_DUR0
FREE_FALL	5Dh	FF_DUR4	FF_DUR3	FF_DUR2	FF_DUR1	FF_DUR0	FF_THS2	FF_THS1	FF_THS0
MD1_CFG	5Eh	INT1_SLEEP	INT1_	INT1_WU	INT1_FF	INT1_	INT1_6D	INT1_EMB_FUNC	INT1_SHUB



Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
		_CHANGE	SINGLE_TAP			DOUBLE_TAP			
MD2_CFG	5Fh	INT2_SLEEP_CHANGE	INT2_SINGLE_TAP	INT2_WU	INT2_FF	INT2_DOUBLE_TAP	INT2_6D	INT2_EMB_FUNC	INT2_TIMESTAMP
I3C_BUS_AVB	62h	0	0	0	I3C_Bus_Avb_Sel1	I3C_Bus_Avb_Sel0	0	0	PD_DIS_INT1
INTERNAL_FREQ_FINE	63h	FREQ_FINE7	FREQ_FINE6	FREQ_FINE5	FREQ_FINE4	FREQ_FINE3	FREQ_FINE2	FREQ_FINE1	FREQ_FINE0
X_OFs_USR	73h	X_OFs_USR_7	X_OFs_USR_6	X_OFs_USR_5	X_OFs_USR_4	X_OFs_USR_3	X_OFs_USR_2	X_OFs_USR_1	X_OFs_USR_0
Y_OFs_USR	74h	Y_OFs_USR_7	Y_OFs_USR_6	Y_OFs_USR_5	Y_OFs_USR_4	Y_OFs_USR_3	Y_OFs_USR_2	Y_OFs_USR_1	Y_OFs_USR_0
Z_OFs_USR	75h	Z_OFs_USR_7	Z_OFs_USR_6	Z_OFs_USR_5	Z_OFs_USR_4	Z_OFs_USR_3	Z_OFs_USR_2	Z_OFs_USR_1	Z_OFs_USR_0
FIFO_DATA_OUT_TAG	78h	TAG_SENSOR_4	TAG_SENSOR_3	TAG_SENSOR_2	TAG_SENSOR_1	TAG_SENSOR_0	TAG_CNT_1	TAG_CNT_0	TAG_PARITY
FIFO_DATA_OUT_X_L	79h	D7	D6	D5	D4	D3	D2	D1	D0
FIFO_DATA_OUT_X_H	7Ah	D15	D14	D13	D12	D11	D10	D9	D8
FIFO_DATA_OUT_Y_L	7Bh	D7	D6	D5	D4	D3	D2	D1	D0
FIFO_DATA_OUT_Y_H	7Ch	D15	D14	D13	D12	D11	D10	D9	D8
FIFO_DATA_OUT_Z_L	7Dh	D7	D6	D5	D4	D3	D2	D1	D0
FIFO_DATA_OUT_Z_H	7Eh	D15	D14	D13	D12	D11	D10	D9	D8

## 2.1

**Embedded functions registers**

The table given below provides a list of the registers for the embedded functions available in the device and the corresponding addresses. The embedded functions registers are accessible when FUNC\_CFG\_ACCESS is set to 1 in the FUNC\_CFG\_ACCESS register.

**Table 3. Embedded functions registers**

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
PAGE_SEL	02h	PAGE_SEL3	PAGE_SEL2	PAGE_SEL1	PAGE_SEL0	0	0	0	1
EMB_FUNC_EN_A	04h	0	0	SIGN_MOTION_EN	TILT_EN	PEDO_EN	0	0	0
EMB_FUNC_EN_B	05h	0	0	0	PEDO_ADV_EN	FIFO_COMPRESSION_EN	0	0	FSM_EN
PAGE_ADDRESS	08h	PAGE_ADDR7	PAGE_ADDR6	PAGE_ADDR5	PAGE_ADDR4	PAGE_ADDR3	PAGE_ADDR2	PAGE_ADDR1	PAGE_ADDR0
PAGE_VALUE	09h	PAGE_VALUE7	PAGE_VALUE6	PAGE_VALUE5	PAGE_VALUE4	PAGE_VALUE3	PAGE_VALUE2	PAGE_VALUE1	PAGE_VALUE0
EMB_FUNC_INT1	0Ah	INT1_FSM_LC	0	INT1_SIG_MOT	INT1_TILT	INT1_STEP_DETECTOR	0	0	0
FSM_INT1_A	0Bh	INT1_FSM8	INT1_FSM7	INT1_FSM6	INT1_FSM5	INT1_FSM4	INT1_FSM3	INT1_FSM2	INT1_FSM1
FSM_INT1_B	0Ch	INT1_FSM16	INT1_FSM15	INT1_FSM14	INT1_FSM13	INT1_FSM12	INT1_FSM11	INT1_FSM10	INT1_FSM9
EMB_FUNC_INT2	0Eh	INT2_FSM_LC	0	INT2_SIG_MOT	INT2_TILT	INT2_STEP_DETECTOR	0	0	0
FSM_INT2_A	0Fh	INT2_FSM8	INT2_FSM7	INT2_FSM6	INT2_FSM5	INT2_FSM4	INT2_FSM3	INT2_FSM2	INT2_FSM1
FSM_INT2_B	10h	INT2_FSM16	INT2_FSM15	INT2_FSM14	INT2_FSM13	INT2_FSM12	INT2_FSM11	INT2_FSM10	INT2_FSM9
EMB_FUNC_STATUS	12h	IS_FSM_LC	0	IS_SIGMOT	IS_TILT	IS_STEP_DET	0	0	0
FSM_STATUS_A	13h	IS_FSM8	IS_FSM7	IS_FSM6	IS_FSM5	IS_FSM4	IS_FSM3	IS_FSM2	IS_FSM1
FSM_STATUS_B	14h	IS_FSM16	IS_FSM15	IS_FSM14	IS_FSM13	IS_FSM12	IS_FSM11	IS_FSM10	IS_FSM9
PAGE_RW	17h	EMB_FUNC_LIR	PAGE_WRITE	PAGE_READ	0	0	0	0	0
EMB_FUNC_FIFO_CFG	44h	0	PEDO_FIFO_EN	0	0	0	0	0	0
FSM_ENABLE_A	46h	FSM8_EN	FSM7_EN	FSM6_EN	FSM5_EN	FSM4_EN	FSM3_EN	FSM2_EN	FSM1_EN
FSM_ENABLE_B	47h	FSM16_EN	FSM15_EN	FSM14_EN	FSM13_EN	FSM12_EN	FSM11_EN	FSM10_EN	FSM9_EN
FSM_LONG_COUNTER_L	48h	FSM_LC_7	FSM_LC_6	FSM_LC_5	FSM_LC_4	FSM_LC_3	FSM_LC_2	FSM_LC_1	FSM_LC_0
FSM_LONG_COUNTER_H	49h	FSM_LC_15	FSM_LC_14	FSM_LC_13	FSM_LC_12	FSM_LC_11	FSM_LC_10	FSM_LC_9	FSM_LC_8
FSM_LONG_COUNTER_CLEAR	4Ah	0	0	0	0	0	0	FSM_LC_CLEARED	FSM_LC_CLEAR
FSM_OUTS1	4Ch	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS2	4Dh	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS3	4Eh	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS4	4Fh	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS5	50h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS6	51h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS7	52h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
FSM_OUTS8	53h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS9	54h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS10	55h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS11	56h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS12	57h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS13	58h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS14	59h	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS15	5Ah	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
FSM_OUTS16	5Bh	P_X	N_X	P_Y	N_Y	P_Z	N_Z	P_V	N_V
EMB_FUNC_ODR _CFG_B	5Fh	0	1	0	FSM_ODR1	FSM_ODR0	0	1	1
STEP_COUNTER_L	62h	STEP_7	STEP_6	STEP_5	STEP_4	STEP_3	STEP_2	STEP_1	STEP_0
STEP_COUNTER_H	63h	STEP_15	STEP_14	STEP_13	STEP_12	STEP_11	STEP_10	STEP_9	STEP_8
EMB_FUNC_SRC	64h	PEDO_RST_STEP	0	STEP_DETECTED	STEP_COUNT_ DELTA_IA	STEP_OVERFLOW	STEPCOUNTER _BIT_SET	0	0
EMB_FUNC_INIT_A	66h	0	0	SIG_MOT_INIT	TIILT_INIT	STEP_DET_INIT	0	0	0
EMB_FUNC_INIT_B	67h	0	0	0	0	FIFO_COMPR _INIT	0	0	FSM_INIT

## 2.2 Embedded advanced features pages

The table given below provides a list of the registers for the embedded advanced features page 0. These registers are accessible when PAGE\_SEL[3:0] are set to 0000 in the PAGE\_SEL register.



**Table 4. Embedded advanced features registers - page 0**

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
MAG_SENSITIVITY_L	BAh	MAG_SENS7	MAG_SENS6	MAG_SENS5	MAG_SENS4	MAG_SENS3	MAG_SENS2	MAG_SENS1	MAG_SENS0
MAG_SENSITIVITY_H	BBh	MAG_SENS15	MAG_SENS14	MAG_SENS13	MAG_SENS12	MAG_SENS11	MAG_SENS10	MAG_SENS9	MAG_SENS8
MAG_OFFSET_X_L	C0h	MAG_OFFSET_X_7	MAG_OFFSET_X_6	MAG_OFFSET_X_5	MAG_OFFSET_X_4	MAG_OFFSET_X_3	MAG_OFFSET_X_2	MAG_OFFSET_X_1	MAG_OFFSET_X_0
MAG_OFFSET_X_H	C1h	MAG_OFFSET_X_15	MAG_OFFSET_X_14	MAG_OFFSET_X_13	MAG_OFFSET_X_12	MAG_OFFSET_X_11	MAG_OFFSET_X_10	MAG_OFFSET_X_9	MAG_OFFSET_X_8
MAG_OFFSET_Y_L	C2h	MAG_OFFSET_Y_7	MAG_OFFSET_Y_6	MAG_OFFSET_Y_5	MAG_OFFSET_Y_4	MAG_OFFSET_Y_3	MAG_OFFSET_Y_2	MAG_OFFSET_Y_1	MAG_OFFSET_Y_0
MAG_OFFSET_Y_H	C3h	MAG_OFFSET_Y_15	MAG_OFFSET_Y_14	MAG_OFFSET_Y_13	MAG_OFFSET_Y_12	MAG_OFFSET_Y_11	MAG_OFFSET_Y_10	MAG_OFFSET_Y_9	MAG_OFFSET_Y_8
MAG_OFFSET_Z_L	C4h	MAG_OFFSET_Z_7	MAG_OFFSET_Z_6	MAG_OFFSET_Z_5	MAG_OFFSET_Z_4	MAG_OFFSET_Z_3	MAG_OFFSET_Z_2	MAG_OFFSET_Z_1	MAG_OFFSET_Z_0
MAG_OFFSET_Z_H	C5h	MAG_OFFSET_Z_15	MAG_OFFSET_Z_14	MAG_OFFSET_Z_13	MAG_OFFSET_Z_12	MAG_OFFSET_Z_11	MAG_OFFSET_Z_10	MAG_OFFSET_Z_9	MAG_OFFSET_Z_8
MAG_SI_XX_L	C6h	MAG_SI_XX_7	MAG_SI_XX_6	MAG_SI_XX_5	MAG_SI_XX_4	MAG_SI_XX_3	MAG_SI_XX_2	MAG_SI_XX_1	MAG_SI_XX_0
MAG_SI_XX_H	C7h	MAG_SI_XX_15	MAG_SI_XX_14	MAG_SI_XX_13	MAG_SI_XX_12	MAG_SI_XX_11	MAG_SI_XX_10	MAG_SI_XX_9	MAG_SI_XX_8
MAG_SI_XY_L	C8h	MAG_SI_XY_7	MAG_SI_XY_6	MAG_SI_XY_5	MAG_SI_XY_4	MAG_SI_XY_3	MAG_SI_XY_2	MAG_SI_XY_1	MAG_SI_XY_0
MAG_SI_XY_H	C9h	MAG_SI_XY_15	MAG_SI_XY_14	MAG_SI_XY_13	MAG_SI_XY_12	MAG_SI_XY_11	MAG_SI_XY_10	MAG_SI_XY_9	MAG_SI_XY_8
MAG_SI_XZ_L	CAh	MAG_SI_XZ_7	MAG_SI_XZ_6	MAG_SI_XZ_5	MAG_SI_XZ_4	MAG_SI_XZ_3	MAG_SI_XZ_2	MAG_SI_XZ_1	MAG_SI_XZ_0
MAG_SI_XZ_H	CBh	MAG_SI_XZ_15	MAG_SI_XZ_14	MAG_SI_XZ_13	MAG_SI_XZ_12	MAG_SI_XZ_11	MAG_SI_XZ_10	MAG_SI_XZ_9	MAG_SI_XZ_8
MAG_SI YY_L	CCh	MAG_SI YY_7	MAG_SI YY_6	MAG_SI YY_5	MAG_SI YY_4	MAG_SI YY_3	MAG_SI YY_2	MAG_SI YY_1	MAG_SI YY_0
MAG_SI YY_H	CDh	MAG_SI YY_15	MAG_SI YY_14	MAG_SI YY_13	MAG_SI YY_12	MAG_SI YY_11	MAG_SI YY_10	MAG_SI YY_9	MAG_SI YY_8
MAG_SI YZ_L	CEh	MAG_SI YZ_7	MAG_SI YZ_6	MAG_SI YZ_5	MAG_SI YZ_4	MAG_SI YZ_3	MAG_SI YZ_2	MAG_SI YZ_1	MAG_SI YZ_0
MAG_SI YZ_H	CFh	MAG_SI YZ_15	MAG_SI YZ_14	MAG_SI YZ_13	MAG_SI YZ_12	MAG_SI YZ_11	MAG_SI YZ_10	MAG_SI YZ_9	MAG_SI YZ_8
MAG_SI ZZ_L	D0h	MAG_SI ZZ_7	MAG_SI ZZ_6	MAG_SI ZZ_5	MAG_SI ZZ_4	MAG_SI ZZ_3	MAG_SI ZZ_2	MAG_SI ZZ_1	MAG_SI ZZ_0
MAG_SI ZZ_H	D1h	MAG_SI ZZ_15	MAG_SI ZZ_14	MAG_SI ZZ_13	MAG_SI ZZ_12	MAG_SI ZZ_11	MAG_SI ZZ_10	MAG_SI ZZ_9	MAG_SI ZZ_8
MAG_CFG_A	D4h	0	MAG_Y_AXIS2	MAG_Y_AXIS1	MAG_Y_AXIS0	0	MAG_Z_AXIS2	MAG_Z_AXIS1	MAG_Z_AXIS0
MAG_CFG_B	D5h	0	0	0	0	0	MAG_X_AXIS2	MAG_X_AXIS1	MAG_X_AXIS0

**Note:** Hard-iron compensation registers (MAG\_OFFSETx) and soft-iron matrix correction registers (MAG\_SIxx) affect finite state machine data only. When these registers are set to their default values, no compensation is applied.

The following table provides a list of the registers for the embedded advanced features page 1. These registers are accessible when PAGE\_SEL[3:0] are set to 0001b in the PAGE\_SEL register.



**Table 5. Embedded advanced features registers - page 1**

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
FSM_LC_TIMEOUT_L	7Ah	FSM_LC_TIMEOUT7	FSM_LC_TIMEOUT6	FSM_LC_TIMEOUT5	FSM_LC_TIMEOUT4	FSM_LC_TIMEOUT3	FSM_LC_TIMEOUT2	FSM_LC_TIMEOUT1	FSM_LC_TIMEOUT0
FSM_LC_TIMEOUT_H	7Bh	FSM_LC_TIMEOUT15	FSM_LC_TIMEOUT14	FSM_LC_TIMEOUT13	FSM_LC_TIMEOUT12	FSM_LC_TIMEOUT11	FSM_LC_TIMEOUT10	FSM_LC_TIMEOUT9	FSM_LC_TIMEOUT8
FSM_PROGRAMS	7Ch	FSM_N_PROG7	FSM_N_PROG6	FSM_N_PROG5	FSM_N_PROG4	FSM_N_PROG3	FSM_N_PROG2	FSM_N_PROG1	FSM_N_PROG0
FSM_START_ADD_L	7Eh	FSM_START7	FSM_START6	FSM_START5	FSM_START4	FSM_START3	FSM_START2	FSM_START1	FSM_START0
FSM_START_ADD_H	7Fh	FSM_START15	FSM_START714	FSM_START13	FSM_START12	FSM_START11	FSM_START10	FSM_START9	FSM_START8
PEDO_CMD_REG	83h	0	0	0	0	CARRY_COUNT_EN	FP_REJECTION_EN	0	AD_DET_EN
PEDO_DEB_STEPS_CONF	84h	DEB_STEP7	DEB_STEP6	DEB_STEP5	DEB_STEP4	DEB_STEP3	DEB_STEP2	DEB_STEP1	DEB_STEP0
PEDO_SC_DELTAT_L	D0h	PD_SC_7	PD_SC_6	PD_SC_5	PD_SC_4	PD_SC_3	PD_SC_2	PD_SC_1	PD_SC_0
PEDO_SC_DELTAT_H	D1h	PD_SC_15	PD_SC_14	PD_SC_13	PD_SC_12	PD_SC_11	PD_SC_10	PD_SC_9	PD_SC_8

## 2.3 Sensor hub registers

The table given below provides a list of the registers for the sensor hub functions available in the device and the corresponding addresses. The sensor hub registers are accessible when bit SHUB\_REG\_ACCESS is set to 1 in the FUNC\_CFG\_ACCESS register.



**Table 6. Sensor hub registers**

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
SENSOR_HUB_1	02h	SensorHub1_7	SensorHub1_6	SensorHub1_5	SensorHub1_4	SensorHub1_3	SensorHub1_2	SensorHub1_1	SensorHub1_0
SENSOR_HUB_2	03h	SensorHub2_7	SensorHub2_6	SensorHub2_5	SensorHub2_4	SensorHub2_3	SensorHub2_2	SensorHub2_1	SensorHub2_0
SENSOR_HUB_3	04h	SensorHub3_7	SensorHub3_6	SensorHub3_5	SensorHub3_4	SensorHub3_3	SensorHub3_2	SensorHub3_1	SensorHub3_0
SENSOR_HUB_4	05h	SensorHub4_7	SensorHub4_6	SensorHub4_5	SensorHub4_4	SensorHub4_3	SensorHub4_2	SensorHub4_1	SensorHub4_0
SENSOR_HUB_5	06h	SensorHub5_7	SensorHub5_6	SensorHub5_5	SensorHub5_4	SensorHub5_3	SensorHub5_2	SensorHub5_1	SensorHub5_0
SENSOR_HUB_6	07h	SensorHub6_7	SensorHub6_6	SensorHub6_5	SensorHub6_4	SensorHub6_3	SensorHub6_2	SensorHub6_1	SensorHub6_0
SENSOR_HUB_7	08h	SensorHub7_7	SensorHub7_6	SensorHub7_5	SensorHub7_4	SensorHub7_3	SensorHub7_2	SensorHub7_1	SensorHub7_0
SENSOR_HUB_8	09h	SensorHub8_7	SensorHub8_6	SensorHub8_5	SensorHub8_4	SensorHub8_3	SensorHub8_2	SensorHub8_1	SensorHub8_0
SENSOR_HUB_9	0Ah	SensorHub9_7	SensorHub9_6	SensorHub9_5	SensorHub9_4	SensorHub9_3	SensorHub9_2	SensorHub9_1	SensorHub9_0
SENSOR_HUB_10	0Bh	SensorHub10_7	SensorHub10_6	SensorHub10_5	SensorHub10_4	SensorHub10_3	SensorHub10_2	SensorHub10_1	SensorHub10_0
SENSOR_HUB_11	0Ch	SensorHub11_7	SensorHub11_6	SensorHub11_5	SensorHub11_4	SensorHub11_3	SensorHub11_2	SensorHub11_1	SensorHub11_0
SENSOR_HUB_12	0Dh	SensorHub12_7	SensorHub12_6	SensorHub12_5	SensorHub12_4	SensorHub12_3	SensorHub12_2	SensorHub12_1	SensorHub12_0
SENSOR_HUB_13	0Eh	SensorHub13_7	SensorHub13_6	SensorHub13_5	SensorHub13_4	SensorHub13_3	SensorHub13_2	SensorHub13_1	SensorHub13_0
SENSOR_HUB_14	0Fh	SensorHub14_7	SensorHub14_6	SensorHub14_5	SensorHub14_4	SensorHub14_3	SensorHub14_2	SensorHub14_1	SensorHub14_0
SENSOR_HUB_15	10h	SensorHub15_7	SensorHub15_6	SensorHub15_5	SensorHub15_4	SensorHub15_3	SensorHub15_2	SensorHub15_1	SensorHub15_0
SENSOR_HUB_16	11h	SensorHub16_7	SensorHub16_6	SensorHub16_5	SensorHub16_4	SensorHub16_3	SensorHub16_2	SensorHub16_1	SensorHub16_0
SENSOR_HUB_17	12h	SensorHub17_7	SensorHub17_6	SensorHub17_5	SensorHub17_4	SensorHub17_3	SensorHub17_2	SensorHub17_1	SensorHub17_0
SENSOR_HUB_18	13h	SensorHub18_7	SensorHub18_6	SensorHub18_5	SensorHub18_4	SensorHub18_3	SensorHub18_2	SensorHub18_1	SensorHub18_0
MASTER_CONFIG	14h	RST_MASTER_REGS	WRITE_ONCE	START_CONFIG	PASS_THROUGH_MODE	SHUB_PU_EN	MASTER_ON	AUX_SENS_ON1	AUX_SENS_ON0
SLV0_ADD	15h	slave0_add6	slave0_add5	slave0_add4	slave0_add3	slave0_add2	slave0_add1	slave0_add0	rw_0
SLV0_SUBADD	16h	slave0_reg7	slave0_reg6	slave0_reg5	slave0_reg4	slave0_reg3	slave0_reg2	slave0_reg1	slave0_reg0
SLV0_CONFIG	17h	SHUB_ODR1	SHUB_ODR0	0	0	BATCH_EXT_SENS_0_EN	Slave0_numop2	Slave0_numop1	Slave0_numop0
SLV1_ADD	18h	slave1_add6	slave1_add5	slave1_add4	slave1_add3	slave1_add2	slave1_add1	slave1_add0	r_1
SLV1_SUBADD	19h	slave1_reg7	slave1_reg6	slave1_reg5	slave1_reg4	slave1_reg3	slave1_reg2	slave1_reg1	slave1_reg0
SLV1_CONFIG	1Ah	0	0	0	0	BATCH_EXT_SENS_1_EN	Slave1_numop2	Slave1_numop1	Slave1_numop0
SLV2_ADD	1Bh	slave2_add6	slave1_add5	slave1_add4	slave1_add3	slave1_add2	slave1_add1	slave1_add0	r_2
SLV2_SUBADD	1Ch	slave2_reg7	slave2_reg6	slave2_reg5	slave2_reg4	slave2_reg3	slave2_reg2	slave2_reg1	slave2_reg0
SLV2_CONFIG	1Dh	0	0	0	0	BATCH_EXT_SENS_2_EN	Slave2_numop2	Slave2_numop1	Slave2_numop0

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
SLV3_ADD	1Eh	slave3_add6	slave3_add5	slave3_add4	slave3_add3	slave3_add2	slave3_add1	slave3_add0	r_3
SLV3_SUBADD	1Fh	slave3_reg7	slave3_reg6	slave3_reg5	slave3_reg4	slave3_reg3	slave3_reg2	slave3_reg1	slave3_reg0
SLV3_CONFIG	20h	0	0	0	0	BATCH_EXT_SENS_3_EN	Slave3_numop2	Slave3_numop1	Slave3_numop0
DATAWRITE_SLV0	21h	Slave0_dataw7	Slave0_dataw6	Slave0_dataw5	Slave0_dataw4	Slave0_dataw3	Slave0_dataw2	Slave0_dataw1	Slave0_dataw0
STATUS_MASTER	22h	WR_ONCE_DONE	SLAVE3_NACK	SLAVE2_NACK	SLAVE1_NACK	SLAVE0_NACK	0	0	SENS_HUB_ENDOP

### 3 Operating modes

The LSM6DSO32 provides three possible operating configurations:

- Only accelerometer active and gyroscope in power-down or sleep mode
- Only gyroscope active and accelerometer in power-down
- Both accelerometer and gyroscope active with independent ODR

The device offers a wide VDD voltage range from 1.71 V to 3.6 V and a VDDIO range from 1.62 V to 3.6 V. The power-on sequence is not restricted: VDD/VDDIO pins can be either set to power supply level or to ground level (they must not be left floating) and no specific sequence is required for powering them on.

In order to avoid potential conflicts, during the power-on sequence it is recommended to set the lines (on the host side) connected to the device IO pins floating or connected to ground, until VDDIO is set. After VDDIO is set, the lines connected to the IO pins have to be configured according to their default status described in [Table 1. Pin status](#). In order to avoid an unexpected increase in current consumption, the input pins that are not pulled-up/pulled-down must be polarized by the host.

When the VDD power supply is applied, the device performs a 10 ms (maximum) boot procedure to load the trimming parameters. After the boot is completed, both the accelerometer and the gyroscope are automatically configured in power-down mode. To guarantee proper power-off of the device, it is recommended to maintain the duration of the VDD line to GND for at least 100 µs.

The accelerometer and the gyroscope can be configured independently. The accelerometer can be configured in five different power modes: power-down, ultralow-power, low-power, normal, and high-performance mode. The gyroscope can be configured in four different power modes: power-down, low-power, normal, and high-performance mode. They are allowed to have different data rates without any limit. The gyroscope sensor can also be set to sleep mode to reduce its power consumption.

When both the accelerometer and gyroscope are on, the accelerometer is synchronized with the gyroscope, and the data rates of the two sensors are integer multiples of each other.

Referring to the datasheet, the output data rate (ODR\_XL) bits of CTRL1\_XL register, the ultralow-power enable (XL\_ULP\_EN) bit of CTRL5\_C register and the high-performance disable (XL\_HM\_MODE) bit of CTRL6\_C register are used to select the output data rate and the power mode of the accelerometer ([Table 7. Accelerometer ODR and power mode selection](#)).

**Table 7. Accelerometer ODR and power mode selection**

ODR_XL[3:0]	ODR when XL_ULP_EN = 1 and XL_HM_MODE = 0 (gyroscope must be in power- down mode)	ODR when XL_ULP_EN = 0 and XL_HM_MODE = 1	ODR when XL_ULP_EN = 0 and XL_HM_MODE = 0
0000	Power-down	Power-down	Power-down
1011	1.6 Hz (ultralow-power mode)	1.6 Hz (low-power mode)	12.5 Hz (high-performance mode)
0001	12.5 Hz (ultralow-power mode)	12.5 Hz (low-power mode)	12.5 Hz (high-performance mode)
0010	26 Hz (ultralow-power mode)	26 Hz (low-power mode)	26 Hz (high-performance mode)
0011	52 Hz (ultralow-power mode)	52 Hz (low-power mode)	52 Hz (high-performance mode)
0100	104 Hz (ultralow-power mode)	104 Hz (normal mode)	104 Hz (high-performance mode)
0101	208 Hz (ultralow-power mode)	208 Hz (normal mode)	208 Hz (high-performance mode)
0110	Not available	417 Hz (high-performance mode)	417 Hz (high-performance mode)
0111	Not available	833 Hz (high-performance mode)	833 Hz (high-performance mode)
1000	Not available	1.66 kHz (high-performance mode)	1.66 kHz (high-performance mode)
1001	Not available	3.33 kHz (high-performance mode)	3.33 kHz (high-performance mode)
1010	Not available	6.66 kHz (high-performance mode)	6.66 kHz (high-performance mode)

Note: Ultralow-power mode can be selected in accelerometer-only mode. The accelerometer must be set in power-down mode before enabling or disabling ultralow-power mode.

The output data rate (ODR\_G) bits of the CTRL2\_G register and the high-performance disable (G\_HM\_MODE) bit of the CTRL7\_G register are used to select the output data rate and the power mode of the gyroscope sensor (Table 8. Gyroscope ODR and power mode selection).

**Table 8. Gyroscope ODR and power mode selection**

ODR_G[3:0]	ODR when G_HM_MODE = 1	ODR when G_HM_MODE = 0
0000	Power-down	Power-down
0001	12.5 Hz (low-power mode)	12.5 Hz (high-performance mode)
0010	26 Hz (low-power mode)	26 Hz (high-performance mode)
0011	52 Hz (low-power mode)	52 Hz (high-performance mode)
0100	104 Hz (normal mode)	104 Hz (high-performance mode)
0101	208 Hz (normal mode)	208 Hz (high-performance mode)
0110	417 Hz (high-performance mode)	417 Hz (high-performance mode)
0111	833 Hz (high-performance mode)	833 Hz (high-performance mode)
1000	1.66 kHz (high-performance mode)	1.66 kHz (high-performance mode)
1001	3.33 kHz (high-performance mode)	3.33 kHz (high-performance mode)
1010	6.66 kHz (high-performance mode)	6.66 kHz (high-performance mode)

Table 9. Power consumption (typical) shows the typical values of power consumption for the different operating modes.

**Table 9. Power consumption (typical)**

ODR [Hz]	Accelerometer only (at VDD = 1.8 V)	Gyroscope only (at VDD = 1.8 V)	Combo [accelerometer + gyroscope] (at VDD = 1.8 V)
Power-down	-	-	3 µA
Sleep	-	245 µA	-
1.6 Hz (ultralow-power mode)	4.4 µA	-	-
12.5 Hz (ultralow-power mode)	5.5 µA	-	-
26 Hz (ultralow-power mode)	7.0 µA	-	-
52 Hz (ultralow-power mode)	9.5 µA	-	-
104 Hz (ultralow-power mode)	14.5 µA	-	-
208 Hz (ultralow-power mode)	24.5 µA	-	-
1.6 Hz (low-power mode)	4.5 µA	-	-
12.5 Hz (low-power mode)	9.0 µA	255 µA	265 µA
26 Hz (low-power mode)	15 µA	265 µA	280 µA
52 Hz (low-power mode)	26 µA	280 µA	300 µA
104 Hz (normal mode)	45 µA	310 µA	350 µA
208 Hz (normal mode)	85 µA	375 µA	430 µA
12.5 Hz (high-performance mode)	170 µA	450 µA	550 µA
26 Hz (high-performance mode)	170 µA	450 µA	550 µA
52 Hz (high-performance mode)	170 µA	450 µA	550 µA

ODR [Hz]	Accelerometer only (at VDD = 1.8 V)	Gyroscope only (at VDD = 1.8 V)	Combo [accelerometer + gyroscope] (at VDD = 1.8 V)
104 Hz (high-performance mode)	170 µA	450 µA	550 µA
208 Hz (high-performance mode)	170 µA	450 µA	550 µA
417 Hz (high-performance mode)	170 µA	450 µA	550 µA
833 Hz (high-performance mode)	170 µA	450 µA	550 µA
1.66 kHz (high-performance mode)	170 µA	450 µA	550 µA
3.33 kHz (high-performance mode)	170 µA	450 µA	550 µA
6.66 kHz (high-performance mode)	170 µA	450 µA	550 µA

### 3.1

#### Power-down mode

When the accelerometer/gyroscope is in power-down mode, almost all internal blocks of the device are switched off to minimize power consumption. The digital interfaces (I<sup>2</sup>C, MIPI I3C<sup>SM</sup>, and SPI) are still active to allow communication with the device. The content of the configuration registers is preserved and the output data registers are not updated, keeping the last data sampled in memory before going into power-down mode.

### 3.2

#### High-performance mode

In high-performance mode, all accelerometer/gyroscope circuitry is always on and data are generated at the data rate selected through the ODR\_XL/ODR\_G bits.

Data interrupt generation is active.

### 3.3

#### Normal mode

While high-performance mode guarantees the best performance in terms of noise, normal mode further reduces the current consumption. The accelerometer/gyroscope data reading chain is automatically turned on and off to save power. In the gyroscope device, only the driving circuitry is always on.

Data interrupt generation is active.

### 3.4

#### Low-power mode

Low-power mode differs from normal mode in the available output data rates. In low-power mode low-speed ODRs are enabled. Four low-speed ODRs can be chosen for the accelerometer through the ODR\_XL bits: 1.6 Hz, 12.5 Hz, 26 Hz, and 52 Hz. Three low-speed ODRs can be chosen for the gyroscope through the ODR\_G bits: 12.5 Hz, 26 Hz, and 52 Hz.

Data interrupt generation is active.

### 3.5

#### Accelerometer ultralow-power mode

Ultralow-power mode is focused on device power consumption. In ultralow-power mode, low-speed ODRs are enabled. Six low-speed ODRs can be chosen for the accelerometer through the ODR\_XL bits: 1.6 Hz, 12.5 Hz, 26 Hz, 52 Hz, 104 Hz, and 208 Hz. Gyroscope must be set in power-down mode.

Data interrupt generation is active.

### 3.6 Gyroscope sleep mode

While the gyroscope is in sleep mode the circuitry that drives the oscillation of the gyroscope mass is kept active. Compared to gyroscope power-down, turn-on time from sleep mode to low-power/normal/high-performance mode is drastically reduced.

If the gyroscope is not configured in power-down mode, it enters in sleep mode when the sleep mode enable (SLEEP\_G) bit of the CTRL4\_C register is set to 1, regardless of the selected gyroscope ODR.

### 3.7 Connection modes

The device offers two different connection modes, described in detail in this document:

- **Mode 1:** it is the connection mode enabled by default; I<sup>2</sup>C slave interface, MIPI I3C<sup>SM</sup> slave interface, or SPI (3- / 4-wire) serial interface is available.
- **Mode 2:** it is the sensor hub mode; I<sup>2</sup>C slave interface, MIPI I3C<sup>SM</sup> slave interface, or SPI (3- / 4-wire) serial interface and I<sup>2</sup>C master interface for external sensor connections are available. This connection mode is described in [Section 7 Mode 2 - sensor hub mode](#).

### 3.8 Accelerometer bandwidth

The accelerometer sampling chain is represented by a cascade of four main blocks: an analog antialiasing low-pass filter, an ADC converter, a digital low-pass filter (LPF1), and the composite group of digital filters.


[Figure 2. Accelerometer filtering chain](#) shows the accelerometer sampling chain.

The analog signal coming from the mechanical parts is filtered by an analog antialiasing low-pass filter before being converted by the ADC. The antialiasing filter is enabled in high-performance mode only.

The digital LPF1 filter provides different cutoff values based on the accelerometer mode selected:

- ODR / 2 when the accelerometer is configured in high-performance mode
- 700 Hz when the accelerometer is configured in low-power mode
- 3000 Hz when the accelerometer is configured in ultralow-power mode

[Figure 2. Accelerometer filtering chain](#)

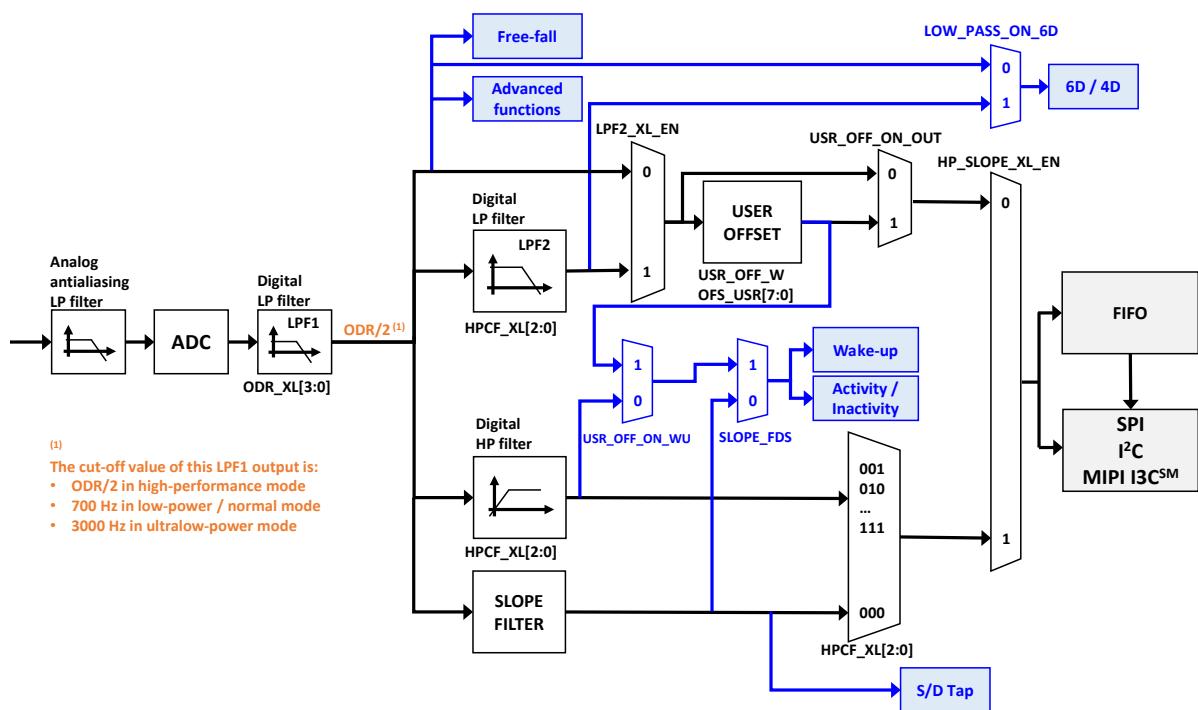

The “Advanced functions” block in the figure above refers to the pedometer, step detector and step counter, significant motion and tilt functions, described in [Section 6 Embedded functions](#), and also includes the finite state machine.

Finally, the composite group of filters composed of a low-pass digital filter (LPF2), a high-pass digital filter, and a slope filter processes the digital signal.

The LPF2\_XL\_EN bit of the CTRL1\_XL register and the CTRL8\_XL register can be used to configure the composite filter group and the overall bandwidth of the accelerometer filtering chain, as shown in [Table 10. Accelerometer bandwidth selection](#). Referring to this table, on the low-pass path side, the Bandwidth columns refer to the LPF1 bandwidth if LPF2\_XL\_EN = 0; they refer to the LPF2 bandwidth if LPF2\_XL\_EN = 1. On the high-pass path side, the Bandwidth columns refer to the slope filter bandwidth if HPCF\_XL[2:0] = 000; they refer to the HP filter bandwidth for all the other configurations.

[Table 10. Accelerometer bandwidth selection](#) also provides the maximum (worst case) settling time in terms of samples to be discarded for the various configurations of the accelerometer filtering chain.

**Table 10. Accelerometer bandwidth selection**

HP_SLOPE_XL_EN	LPF2_XL_EN	HPCF_XL[2:0]	Bandwidth HP	Bandwidth LP	Bandwidth ULP	Max overall settling time <sup>(1)</sup> (samples to be discarded)
0 (Low-pass path)	0	-	ODR / 2	700 Hz	3000 Hz	See <a href="#">Table 12</a>
		000		ODR / 4		See <a href="#">Table 12</a>
		001		ODR / 10		20
		010		ODR / 20		20
		011		ODR / 45		40
		100		ODR / 100		76
		101		ODR / 200		150
		110		ODR / 400		305
		111		ODR / 800		605
1 (High-pass path)	1	-	000	ODR / 4 (slope filter)		See <a href="#">Table 12</a>
			001	ODR / 10		33
			010	ODR / 20		33
			011	ODR / 45		40
			100	ODR / 100		76
			101	ODR / 200		150
			110	ODR / 400		305
			111	ODR / 800		605

1. Settling time @ 99% of the final value, taking into account all output data rates and all operating mode switches

Setting the HP\_SLOPE\_XL\_EN bit to 0, the low-pass path of the composite filter block is selected. If the LPF2\_XL\_EN bit is set to 0, no additional filter is applied; if the LPF2\_XL\_EN bit is set to 1, the LPF2 filter is applied in addition to LPF1 and the overall bandwidth of the accelerometer chain can be set by configuring the HPCF\_XL[2:0] field of the CTRL8\_XL register.

The LPF2 low-pass filter can also be used in the 6D/4D functionality by setting the LOW\_PASS\_ON\_6D bit of the CTRL8\_XL register to 1.

Setting the HP\_SLOPE\_XL\_EN bit to 1, the high-pass path of the composite filter block is selected: the HPCF\_XL[2:0] field is used in order to enable, in addition to the LPF1 filter, either the slope filter usage (when HPCF\_XL[2:0] = 000) or the digital high-pass filter (other HPCF\_XL[2:0] configurations). The HPCF\_XL[2:0] field is also used to select the cutoff frequencies of the HP filter.

The high-pass filter reference mode feature is available for the accelerometer sensor: when this feature is enabled, the current X, Y, Z accelerometer sample is internally stored and subtracted from all subsequent output values. In order to enable the reference mode, both the HP\_REF\_MODE\_XL bit and the HP\_SLOPE\_XL\_EN bit of the CTRL8\_XL register have to be set to 1, and the value of the HPCF\_XL[2:0] field has to be different than 000. When the reference mode feature is enabled, both the LPF2 filter and the HP filter are not available. The first accelerometer output data after enabling the reference mode has to be discarded.

The FASTSETTL\_MODE\_XL bit of the CTRL8\_XL register enables the accelerometer LPF2 or HPF fast-settling mode: the selected filter sets the second sample after writing this bit. This feature applies only upon device exit from power-down mode.


### 3.8.1 Accelerometer slope filter

As shown in [Figure 2. Accelerometer filtering chain](#), the device embeds a digital slope filter, which can also be used for some embedded features such as single/double-tap recognition, wake-up detection and activity/inactivity. The slope filter output data is computed using the following formula:

$$\text{slope}(t_n) = [\text{acc}(t_n) - \text{acc}(t_{n-1})] / 2$$

An example of a slope data signal is illustrated in the following figure.

**Figure 3. Accelerometer slope filter**

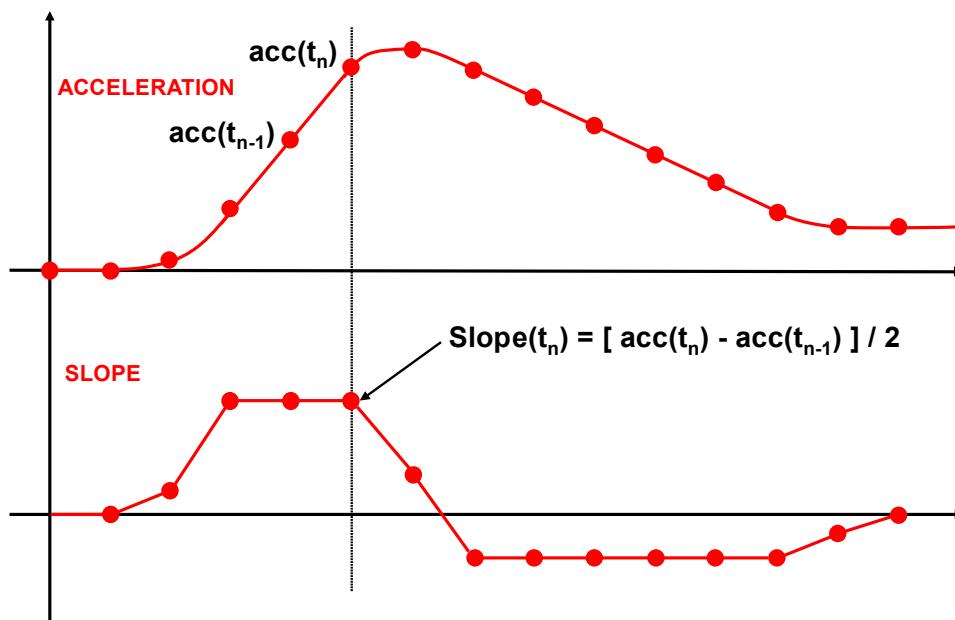

### 3.9

### Accelerometer turn-on/off time

The accelerometer reading chain contains low-pass filtering to improve signal-to-noise performance and to reduce aliasing effects. For this reason, it is necessary to take into account the settling time of the filters when the accelerometer power mode is switched or when the accelerometer ODR is changed.

Accelerometer chain settling time is dependent on the power mode and output data rate selected for the following configurations:

- LPF2 and HP filters disabled
- LPF2 or HP filter enabled with ODR/4 bandwidth selection

For these two possible configurations, the maximum overall turn-on/off in order to switch accelerometer power modes or accelerometer ODR is the one shown below in [Table 11. Accelerometer turn-on/off time \(LPF2 and HP disabled\)](#) and [Table 12. Accelerometer samples to be discarded](#)

Note:

*Accelerometer ODR timing is not impacted by power mode changes (the new configuration is effective after the completion of the current period).*

**Table 11.** Accelerometer turn-on/off time (LPF2 and HP disabled)

Starting mode	Target mode	Max turn-on/off time <sup>(1)</sup>
Power-down	Ultralow-power / low-power / normal	See Table 12
Power-down	High-performance	See Table 12
Low-power / normal	High-performance	See Table 12 + discard 1 additional sample
Ultralow-power / low-power / normal	Ultralow-power / low-power / normal (ODR Change)	See Table 12
High-performance	Low-power / normal	See Table 12 + discard 1 additional sample
High-performance	High-performance @ ODR < 6.66 kHz	Discard 3 samples
High-performance	High-performance @ ODR = 6.66 kHz	Discard 7 samples
Ultralow-power / low-power / normal / high-performance	Power-down	1 µs

1. Settling time @ 99% of the final value

**Table 12.** Accelerometer samples to be discarded

Target mode Accelerometer ODR [Hz]	Number of samples to be discarded (LPF2 and HP filters disabled)	Number of samples to be discarded (LPF2 or HP filter enabled @ODR/4 bandwidth)
1.6 (ultralow-power / low-power)	0 (first sample correct)	1
12.5 (ultralow-power / low-power)	0 (first sample correct)	1
26 (ultralow-power / low-power)	0 (first sample correct)	1
52 (ultralow-power / low-power)	0 (first sample correct)	1
104 (ultralow-power / normal)	0 (first sample correct)	1
208 (ultralow-power / normal)	0 (first sample correct)	1
12.5 (high-performance)	1	2
26 (high-performance)	1	2
52 (high-performance)	1	2
104 (high-performance)	1	2
208 (high-performance)	1	2
417 (high-performance)	1	2
833 (high-performance)	1	2
1667 (high-performance)	4	5
3333 (high-performance)	10	10
6667 (high-performance)	32	30


Overall settling time if LPF2 or HP digital filters are enabled with bandwidth different from ODR/4 has been already indicated in [Table 10. Accelerometer bandwidth selection](#).

### 3.10 Gyroscope bandwidth

The gyroscope filtering chain configuration is shown in Figure 4. Gyroscope digital chain. It is a cascade of three filters: a selectable digital high-pass filter (HPF), a selectable digital low-pass filter (LPF1), and a digital low-pass filter (LPF2).

These three embedded filters are available in high-performance mode only; they are bypassed when the device is configured in low-power / normal mode.

Figure 4. Gyroscope digital chain

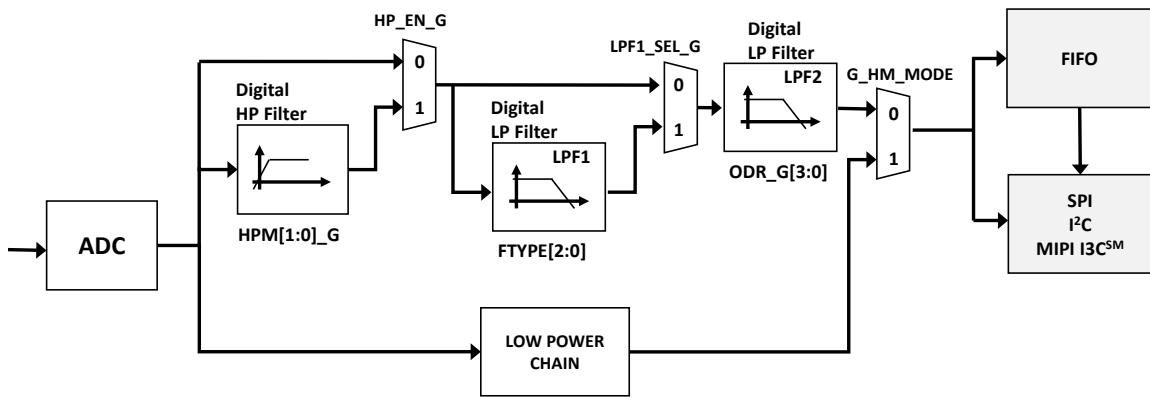

In high-performance mode, the digital HP filter can be enabled by setting the bit HP\_EN\_G of the CTRL7\_G register to 1. The digital HP filter cutoff frequency can be selected through the field HPM\_G[1:0] of the CTRL7\_G register, according to the following table.

Table 13. Gyroscope digital HP filter cutoff selection

HPM_G[1:0]	High-pass filter cutoff frequency [Hz]	Overall maximum settling time [s] <sup>(1)</sup>
00	0.016	45
01	0.065	11
10	0.260	3
11	1.040	0.7

1. Settling time @ 99% of the final value

The digital LPF1 filter can be enabled by setting the LPF1\_SEL\_G bit of the CTRL4\_C register to 1 and its bandwidth can be selected through the field FTYPE\_[2:0] of the CTRL6\_C register.

The digital LPF2 filter cannot be configured by the user and its cutoff frequency depends on the selected gyroscope ODR. When the gyroscope ODR is equal to 6.66 kHz, the LPF2 filter is bypassed.

The overall gyroscope bandwidth for different gyroscope ODR values and for different configurations of the LPF1\_SEL\_G bit of the CTRL4\_C register and FTYPE\_[2:0] of the CTRL6\_C register is summarized in the following table.

Table 14. Gyroscope overall bandwidth selection

Gyroscope ODR [Hz]	LPF1_SEL_G	FTYPE[2:0]	Bandwidth [Hz] (phase delay @ 20 Hz)
12.5	0	-	4.2 (-36° @ 1.3 Hz)
	1	0xx	4.2 (-36° @ 1.3 Hz)
	1	100	4.2 (-36° @ 1.3 Hz)
	1	101	4.2 (-36° @ 1.3 Hz)
	1	110	4.1 (-36° @ 1.3 Hz)

Gyroscope ODR [Hz]	LPF1_SEL_G	FTYPE[2:0]	Bandwidth [Hz] (phase delay @ 20 Hz)
12.5	1	111	3.9 (-36° @ 1.3 Hz)
	0	-	8.3 (-36° @ 2.5 Hz)
	1	0xx	8.3 (-36° @ 2.5 Hz)
	1	100	8.3 (-36° @ 2.5 Hz)
	1	101	8.3 (-36° @ 2.5 Hz)
	1	110	7.8 (-36° @ 2.5 Hz)
	1	111	6.7 (-36° @ 2.5 Hz)
26	0	-	16.6 (-36° @ 5 Hz)
	1	0xx	16.6 (-36° @ 5 Hz)
	1	100	16.7 (-39° @ 5 Hz)
	1	101	16.8 (-43° @ 5 Hz)
	1	110	13.4 (-45° @ 5 Hz)
	1	111	9.7 (-49° @ 5 Hz)
	0	-	33 (-36° @ 10 Hz)
52	1	0xx	33 (-38° @ 10 Hz)
	1	100	33 (-43° @ 10 Hz)
	1	101	31 (-52° @ 10 Hz)
	1	110	19 (-55° @ 10 Hz)
	1	111	11.5 (-64° @ 10 Hz)
	0	-	66.80 (-35.09°)
	1	0xx	67.00 (-39°)
104	1	100	62.40 (-51.03°)
	1	101	43.20 (-68.67°)
	1	110	23.10 (-74.11°)
	1	111	12.20 (-93.61°)
	0	-	135.90 (-17.81°)
	1	000	136.60 (-22.89°)
	1	001	130.50 (-24.98°)
208	1	010	120.30 (-27.38°)
	1	011	137.10 (-21.11°)
	1	100	86.70 (-33.75°)
	1	101	48.00 (-51.39°)
	1	110	24.60 (-56.83°)
	1	111	12.40 (-76.33°)
	0	-	295.50 (-9.17°)
417	1	000	239.20 (-14.25°)
	1	001	192.40 (-16.34°)
	1	010	154.20 (-18.74°)
	1	011	281.80 (-12.47°)
	1	100	96.60 (-25.11°)
	1	101	49.40 (-42.75°)
	1	110	25.00 (-48.19°)
833	1	111	12.50 (-67.69°)
	0	-	1108.10 (-4.85°)
	0	-	1108.10 (-4.85°)
	0	-	1108.10 (-4.85°)
	0	-	1108.10 (-4.85°)
	0	-	1108.10 (-4.85°)
	0	-	1108.10 (-4.85°)

Gyroscope ODR [Hz]	LPF1_SEL_G	FTYPE[2:0]	Bandwidth [Hz] (phase delay @ 20 Hz)
1667	1	000	304.20 (-9.93°)
	1	001	220.70 (-12.02°)
	1	010	166.60 (-14.42°)
	1	011	453.20 (-8.15°)
	1	100	99.60 (-20.79°)
	1	101	49.80 (-38.43°)
	1	110	25.10 (-43.87°)
	1	111	12.50 (-63.37°)
3333	0	-	1320.70 (-2.69°)
	1	000	328.50 (-7.77°)
	1	001	229.60 (-9.86°)
	1	010	170.10 (-12.26°)
	1	011	559.20 (-5.99°)
	1	1xx	Not available
6667	0	-	1441.80 (-1.61°)
	1	000	335.50 (-6.69°)
	1	001	232.00 (-8.78°)
	1	010	171.10 (-11.18°)
	1	011	609.00 (-4.91°)
	1	1xx	Not available

If the gyroscope is configured in low-power / normal mode, the gyroscope filtering chain presented above is bypassed. The bandwidth in low-power / normal mode is indicated in the following table.

**Table 15. Gyroscope low-power / normal mode bandwidth**

Gyroscope ODR [Hz]	Bandwidth [Hz]
12.5	4
26	8
52	15.8
104	31.5
208	61.6

### 3.11 Gyroscope turn-on/off time

Turn-on/off time has to be considered also for the gyroscope sensor when switching its modes or when the gyroscope ODR is changed.

The maximum overall turn-on/off time (with HP filter disabled) in order to switch gyroscope power modes or gyroscope ODR is the one shown in [Table 16. Gyroscope turn-on/off time \(HP disabled\)](#).

**Note:** *The gyroscope ODR timing is not impacted by power mode changes (the new configuration is effective after the completion of the current period).*

**Table 16. Gyroscope turn-on/off time (HP disabled)**

Starting mode	Target mode	Max turn-on/off time <sup>(1)</sup>
Power-down	Sleep	70 ms
Power-down	Low-power / normal	70 ms + discard 1 sample
Power-down	High-performance	70 ms + see <a href="#">Table 17</a> or <a href="#">Table 18</a>
Sleep	Low-power / normal	Discard 1 sample
Sleep	High-performance	See <a href="#">Table 17</a> or <a href="#">Table 18</a>
Low-power / normal	High-performance	Discard 2 samples
Low-power / normal	Low-power / normal (ODR change)	Discard 1 sample
High-performance	Low-power / normal	Discard 1 sample
High-performance	High-performance (ODR change)	Discard 2 samples
Low-power / normal / high-performance	Power-down	1 µs if both accelerometer and gyroscope in PD 300 µs if accelerometer not in PD

1. Settling time @ 99% of the final value

**Table 17. Gyroscope samples to be discarded in (LPF1 disabled)**

Gyroscope ODR	Number of samples to be discarded <sup>(1)</sup>
12.5 Hz	2
26 Hz	3
52 Hz	3
104 Hz	3
208 Hz	3
417 Hz	3
833 Hz	3
1.66 kHz	135
3.33 kHz	270
6.66 kHz	540

1. Settling time @ 99% of the final value

**Table 18. Gyroscope chain settling time (LPF1 enabled)**

FTYPE[2:0]	Maximum settling time @ each ODR [ms] <sup>(1)</sup>
000	3.5
001	4.8
010	6.6
011	2.3
100	11
101	22
110	30
111	60

1. Settling time @ 99% of the final value

When there is a mode change to high-performance mode and the HP filter is enabled, or the HP filter is turned on, the HP filter settling time must be added to [Table 16. Gyroscope turn-on/off time \(HP disabled\)](#). The HP filter settling time is independent from the ODR and is shown in [Table 13. Gyroscope digital HP filter cutoff selection](#).

## 4 Mode 1 - reading output data

### 4.1 Startup sequence

Once the device is powered up, it automatically downloads the calibration coefficients from the embedded flash to the internal registers. When the boot procedure is completed, that is, after approximately 10 milliseconds, the accelerometer and gyroscope automatically enter power-down mode.

To turn on the accelerometer and gather acceleration data through the primary I<sup>2</sup>C / MIPI I3C<sup>SM</sup> / SPI interface, it is necessary to select one of the operating modes through the CTRL1\_XL register.

The following general-purpose sequence can be used to configure the accelerometer:

1. Write INT1\_CTRL = 01h // Accelerometer data-ready interrupt on INT1
2. Write CTRL1\_XL = 60h // Accelerometer = 417 Hz (high-performance mode)

To turn on the gyroscope and gather angular rate data through the primary I<sup>2</sup>C / MIPI I3C<sup>SM</sup> / SPI interface, it is necessary to select one of the operating modes through CTRL2\_G.

The following general-purpose sequence can be used to configure the gyroscope:

1. Write INT1\_CTRL = 02h // Gyroscope data-ready interrupt on INT1
2. Write CTRL2\_G = 60h // Gyroscope = 417 Hz (high-performance mode)

### 4.2 Using the status register

The device is provided with a STATUS\_REG register that should be polled to check when a new set of data is available. The XLDA bit is set to 1 when a new set of data is available at the accelerometer output. The GDA bit is set to 1 when a new set of data is available at the gyroscope output.

For the accelerometer (the gyroscope is similar), the read of the output registers should be performed as follows:

1. Read STATUS\_REG register.
2. If XLDA = 0, then go to 1.
3. Read OUTX\_L\_A.
4. Read OUTX\_H\_A.
5. Read OUTY\_L\_A.
6. Read OUTY\_H\_A.
7. Read OUTZ\_L\_A.
8. Read OUTZ\_H\_A.
9. Data processing
10. Go to 1.

## 4.3

### Using the data-ready signal


The device can be configured to have a hardware signal to determine when a new set of measurement data is available to be read.

For the accelerometer sensor, the data-ready signal is represented by the XLDA bit of the STATUS\_REG register. The signal can be driven to the INT1 pin by setting the INT1\_DRDY\_XL bit of the INT1\_CTRL register to 1 and to the INT2 pin by setting the INT2\_DRDY\_XL bit of the INT2\_CTRL register to 1.

For the gyroscope sensor, the data-ready signal is represented by the GDA bit of the STATUS\_REG register. The signal can be driven to the INT1 pin by setting the INT1\_DRDY\_G bit of the INT1\_CTRL register to 1 and to the INT2 pin by setting the INT2\_DRDY\_G bit of the INT2\_CTRL register to 1.

The data-ready signal rises to 1 when a new set of data has been generated and it is available to be read. The data-ready signal can be either latched or pulsed. If the dataready\_pulsed bit of the COUNTER\_BDR\_REG1 register is set to 0 (default value), then the data-ready signal is latched and the interrupt is reset when the higher byte of one axis is read (29h, 2Bh, 2Dh for the accelerometer; 23h, 25h, 27h for the gyroscope). If the dataready\_pulsed bit of the COUNTER\_BDR\_REG1 register is set to 1, then the data-ready is pulsed and the duration of the pulse observed on the interrupt pins is 75 µs. Pulsed mode is not applied to the XLDA and GDA bits, which are always latched.

**Figure 5. Data-ready signal**

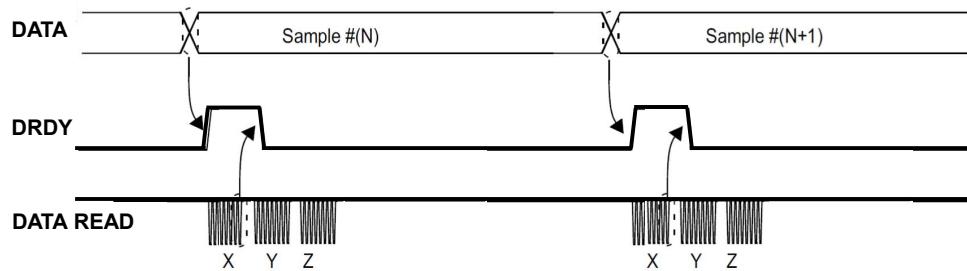

#### 4.3.1

##### DRDY mask functionality

Setting the DRDY\_MASK bit of the CTRL4\_C register to 1, the accelerometer and gyroscope data-ready signals are masked until the settling of the sensor filters is completed.

When FIFO is active and the DRDY\_MASK bit is set to 1, accelerometer/gyroscope invalid samples stored in FIFO can be equal to 7FFFh, 7FFEh or 7FFDh. In this way, a tag is applied to the invalid samples stored in the FIFO buffer so that they can be easily identified and discarded during data post-processing.

*Note:*

*The DRDY\_MASK bit acts only on the accelerometer LPF1 digital filter settling time for every accelerometer ODR and on the gyroscope LPF2 digital filter settling time for gyroscope ODR ≤ 833 Hz.*

## 4.4

### Using the block data update (BDU) feature

If reading the accelerometer/gyroscope data is not synchronized with either the XLDA/GDA bits in the STATUS\_REG register or with the DRDY signal driven to the INT1/INT2 pins, it is strongly recommended to set the BDU (block data update) bit to 1 in the CTRL3\_C register.

This feature avoids reading values (most significant and least significant bytes of output data) related to different samples. In particular, when the BDU is activated, the data registers related to each axis always contain the most recent output data produced by the device, but, in case the read of a given pair (that is, OUTX\_H\_A(G) and OUTX\_L\_A(G), OUTY\_H\_A(G) and OUTY\_L\_A(G), OUTZ\_H\_A(G) and OUTZ\_L\_A(G)) is initiated, the refresh for that pair is blocked until both the MSB and LSB of the data are read.

*Note:*

*BDU only guarantees that the LSB and MSB have been sampled at the same moment. For example, if the reading speed is too slow, X and Y can be read at T1 and Z sampled at T2.*

The BDU feature also acts on the FIFO\_STATUS1 and FIFO\_STATUS2 registers. When the BDU bit is set to 1, it is mandatory to read FIFO\_STATUS1 first and then FIFO\_STATUS2.

## 4.5

## Understanding output data

The measured acceleration data are sent to the OUTX\_H\_A, OUTX\_L\_A, OUTY\_H\_A, OUTY\_L\_A, OUTZ\_H\_A, and OUTZ\_L\_A registers. These registers contain, respectively, the most significant byte and the least significant byte of the acceleration signals acting on the X, Y, and Z axes.

The measured angular rate data are sent to the OUTX\_H\_G, OUTX\_L\_G, OUTY\_H\_G, OUTY\_L\_G, OUTZ\_H\_G, and OUTZ\_L\_G registers. These registers contain, respectively, the most significant byte and the least significant byte of the angular rate signals acting on the X, Y, and Z axes.

The complete output data for the X, Y, Z channels is given by the concatenation OUTX\_H\_A(G) & OUTX\_L\_A(G), OUTY\_H\_A(G) & OUTY\_L\_A(G), OUTZ\_H\_A(G) & OUTZ\_L\_A(G) and it is expressed as a two's complement number.

Both acceleration data and angular rate data are represented as 16-bit numbers.

### 4.5.1

### Examples of output data

Table 19. Content of output data registers vs. acceleration (FS\_XL =  $\pm 4 \text{ g}$ ) provides a few basic examples of the accelerometer data that is read in the data registers when the device is subjected to a given acceleration.

Table 20. Content of output data registers vs. angular rate (FS\_G =  $\pm 250 \text{ dps}$ ) provides a few basic examples of the gyroscope data that is read in the data registers when the device is subjected to a given angular rate.

The values listed in the following tables are given under the hypothesis of perfect device calibration (that is, no offset, no gain error, and so forth).

**Table 19. Content of output data registers vs. acceleration (FS\_XL =  $\pm 4 \text{ g}$ )**

Acceleration values	Register address	
	OUTX_H_A (29h)	OUTX_L_A (28h)
0 g	00h	00h
350 mg	0Bh	34h
1 g	20h	04h
-350 mg	F4h	CCh
-1 g	DFh	FCh

**Table 20. Content of output data registers vs. angular rate (FS\_G =  $\pm 250 \text{ dps}$ )**

Angular rate values	Register address	
	OUTX_H_G (23h)	OUTX_L_G (22h)
0 dps	00h	00h
100 dps	2Ch	A4h
200 dps	59h	49h
-100 dps	D3h	5Ch
-200 dps	A6h	B7h

## 4.6

### Accelerometer offset registers

The device provides accelerometer offset registers (X\_OFS\_USR, Y\_OFS\_USR, Z\_OFS\_USR) which can be used for zero-g offset correction or, in general, to apply an offset to the accelerometer output data.

The accelerometer offset block can be enabled by setting the USR\_OFF\_ON\_OUT bit of the CTRL7\_G register. The offset value set in the offset registers is internally subtracted from the measured acceleration value for the respective axis; internally processed data are then sent to the accelerometer output register and to the FIFO (if enabled). These register values are expressed as an 8-bit word in two's complement and must be in the range [-127, 127].

The weight [g/LSB] to be applied to the offset register values is independent of the accelerometer selected full scale and can be configured using the USR\_OFF\_W bit of the CTRL6\_C register:

- $2^{-10}g/\text{LSB}$  if the USR\_OFF\_W bit is set to 0
- $2^{-6}g/\text{LSB}$  if the USR\_OFF\_W bit is set to 1

## 4.7

### Wraparound functions

The wraparound function can be used to auto address the device registers for a circular burst mode read.

Basically, with a multiple read operation, the address of the register that is being read goes automatically from the first register to the last register of the pattern and then goes back to the first one.

#### 4.7.1

##### FIFO output registers

The wraparound function is automatically enabled when performing a multiple read operation of the FIFO output registers: after reading FIFO\_DATA\_OUT\_Z\_H (7Eh), the address of the next register that is read goes automatically back to FIFO\_DATA\_OUT\_TAG (78h), allowing the user to read many data with a unique multiple read.

#### 4.7.2

##### Sensor output registers

It is possible to apply the wraparound function to the other output registers.

The wraparound function can also be enabled for the following groups of output registers:

- Accelerometer output registers, from OUTX\_L\_A (28h) to OUTZ\_H\_A (2Dh)
- Gyroscope output registers, from OUTX\_L\_G (22h) to OUTZ\_H\_G (27h)
- Gyroscope and accelerometer output registers, from OUTX\_L\_G (22h) to OUTZ\_H\_A (2Dh)

The output register wraparound pattern can be configured using the bits ROUNDING[1:0] of the CTRL5\_C register, as indicated in the following table.

Table 21. Output register wraparound pattern

ROUNDING[1:0]	Wraparound pattern
00	No wraparound
01	Accelerometer only
10	Gyroscope only
11	Gyroscope + accelerometer

## 4.8 DEN (data enable)

The device allows an external trigger level recognition by enabling the TRIG\_EN, LVL1\_EN, LVL2\_EN bits in the CTRL6\_C register.

Four different modes can be selected (see Table 22. DEN configurations):

- Edge-sensitive trigger mode
- Level-sensitive trigger mode
- Level-sensitive latched mode
- Level-sensitive FIFO enable mode

The data enable (DEN) input signal must be driven on the INT2 pin, which is configured as an input pin when one of these modes is enabled.

The DEN functionality is active by default on the gyroscope data only. To extend this feature to the accelerometer data, the bit DEN\_XL\_EN in the CTRL9\_XL register must be set to 1.

The DEN active level is low by default. It can be changed to active-high by setting the bit DEN\_LH in the CTRL9\_XL register to 1.

Table 22. DEN configurations

TRIG_EN	LVL1_EN	LVL2_EN	Function	Trigger type	Action
0	0	0	Data enable off	-	-
1	0	0	Edge-sensitive trigger mode	Edge	Data generation
0	1	0	Level-sensitive trigger mode	Level	Data stamping
0	1	1	Level-sensitive latched mode	Edge	Data stamping
1	1	0	Level-sensitive FIFO enable mode	Level	Data generation in FIFO and stamping


#### 4.8.1 Edge-sensitive trigger mode

Edge-sensitive trigger mode can be enabled by setting the TRIG\_EN bit in CTRL6\_C to 1, and LVL1\_EN, LVL2\_EN bits in the CTRL6\_C register to 0.

Once the edge-sensitive trigger mode is enabled, the FIFO buffer and output registers are filled with the first sample acquired after every rising edge (if DEN\_LH bit is equal to 1) or falling edge (if DEN\_LH bit is equal to 0) of the DEN input signal.

Figure 6 shows, with red circles, the samples acquired after the falling edges (DEN active-low).

Figure 6. Edge-sensitive trigger mode, DEN active-low

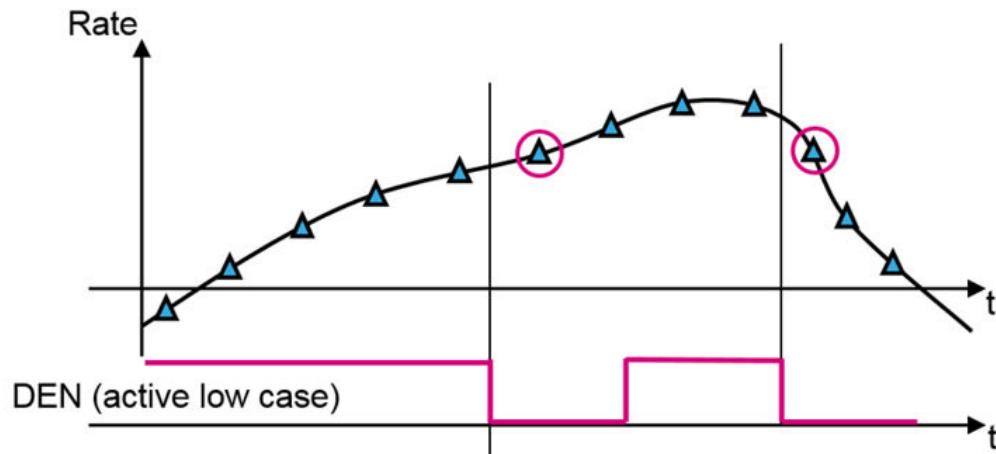

Edge-sensitive trigger mode, when enabled, acts only on the gyroscope output registers. GDA is related only to downsampled data, while the accelerometer output registers and XLDA are updated according to ODR\_XL. If the DEN\_XL\_EN bit is set to 1, the accelerometer sensor is downsampled too. In this case, the gyroscope and accelerometer have to be set in combo mode at the same ODR. The accelerometer standalone mode can be used by setting the gyroscope in power-down.

Note that the DEN level is internally read just before the update of the data registers. If a level change occurs after the read, DEN is acknowledged at the next ODR.

There are three possible configurations for the edge-sensitive trigger in FIFO, described below:

1. Only gyroscope in trigger mode but not saved in FIFO: in this case, FIFO is related only to the accelerometer and works as usual.
2. Only gyroscope in trigger mode and saved in FIFO: in this configuration there are the following limitations in FIFO:
  - Gyroscope batch data rate (BDR\_GY\_[3:0] bits of the FIFO\_CTRL3 register) and gyroscope output data rate (ODR\_G[3:0] of the CTRL2\_G register) must be set to the same value;
  - Configuration-change sensor (CFG-Change) is not allowed (ODRCHG\_EN bit of the FIFO\_CTRL2 register must be set to 0);
  - Timestamp decimation in FIFO is not allowed (DEC\_TS\_BATCH\_[1:0] bits of the FIFO\_CTRL4 register must be set to 00).
3. Gyroscope and accelerometer in trigger mode and saved in FIFO: in this configuration there are the following limitations in FIFO:
  - Gyroscope batch data rate (BDR\_GY\_[3:0] bits of the FIFO\_CTRL3 register) and gyroscope output data rate (ODR\_G[3:0] of the CTRL2\_G register) must be set to the same value.
  - Accelerometer batch data rate (BDR\_XL\_[3:0] bits of the FIFO\_CTRL3 register) and accelerometer output data rate (ODR\_XL[3:0] of the CTRL1\_XL register) must be set to the same value.
  - Gyroscope and accelerometer must be set at the same output data rate, or the gyroscope must be configured in power-down mode.
  - Configuration-change sensor (CFG-Change) is not allowed (ODRCHG\_EN bit of the FIFO\_CTRL2 register must be set to 0).
  - Timestamp decimation in FIFO is not allowed (DEC\_TS\_BATCH\_[1:0] bits of the FIFO\_CTRL4 register must be set to 00).

Edge-sensitive trigger mode allows, for example, the synchronization of the camera frames with the samples coming from the gyroscope for electrical image stabilization (EIS) applications. The synchronization signal from the camera module must be connected to the INT2 pin.

In the example shown below, the FIFO has been configured to store both the gyroscope data and the accelerometer data in the FIFO buffer; when the DEN signal toggles, the data are written to FIFO on the falling edge.

1. Write 44h to FIFO\_CTRL3 // Enable accelerometer and gyroscope in FIFO @ 104 Hz
2. Write 06h to FIFO\_CTRL4 // Set FIFO in continuous mode
3. Write 80h to CTRL6\_C // Enable the edge-sensitive trigger
4. Write E8h to CTRL9\_XL // INT2 pin is switched to input mode (DEN signal)
5. Write 40h to CTRL1\_XL // Extend DEN functionality to accelerometer sensor
6. Write 4Ch to CTRL2\_G // Select DEN active level (active low)
7. Write 40h to CTRL1\_XL // Turn on the accelerometer: ODR\_XL = 104 Hz, FS\_XL = ±4 g
8. Write 4Ch to CTRL2\_G // Turn on the gyroscope: ODR\_G = 104 Hz, FS\_G = ±2000 dps

#### 4.8.2 Level-sensitive trigger mode

Level-sensitive trigger mode can be enabled by setting the LVL1\_EN bit in the CTRL6\_C register to 1, and the TRIG\_EN, LVL2\_EN bits in the CTRL6\_C register to 0.

Once the level-sensitive trigger mode is enabled, the LSB bit of the selected data (in output registers and FIFO) is replaced by 1 if the DEN level is active, or 0 if the DEN level is not active. The selected data can be the X, Y, Z axes of the accelerometer or gyroscope sensor (see [Section 4.8.5 LSB selection for DEN stamping for details](#)).


All data can be stored in the FIFO according to the FIFO settings.

Note that the DEN level is internally read just before the update of the data registers. If a level change occurs after the read, DEN is acknowledged at the next ODR.

If the DEN feature is enabled on the accelerometer sensor by asserting the DEN\_XL\_EN bit of the CTRL9\_XL register, the accelerometer and gyroscope sensors must be configured at the same ODR or the gyroscope must be set in power-down mode.

[Figure 7](#) shows with red circles the samples stored in the FIFO with LSB = 0 (DEN not active) and with blue circles the samples stored in the FIFO with LSB = 1 (DEN active).


**Figure 7. Level-sensitive trigger mode, DEN active-low**

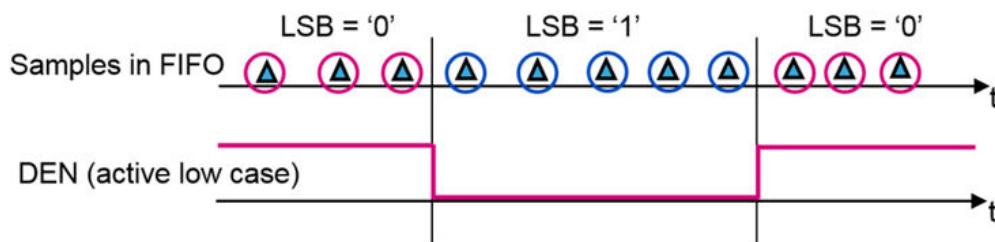

When the level-sensitive trigger mode is enabled, the DEN signal can also be used to filter the data-ready signal on the INT1 pin. INT1 shows data-ready information only when the DEN pin is in the active state. To do this, the bit DEN\_DRDY\_flag of the INT1\_CTRL register must be set to 1. The interrupt signal can be latched or pulsed according to the dataready\_pulsed bit of the COUNTER\_BDR\_REG1 register.

[Figure 8](#) shows an example of data-ready on INT1 when the DEN level is low (active state).

**Figure 8. Level-sensitive trigger mode, DEN active-low, DEN\_DRDY on INT1**

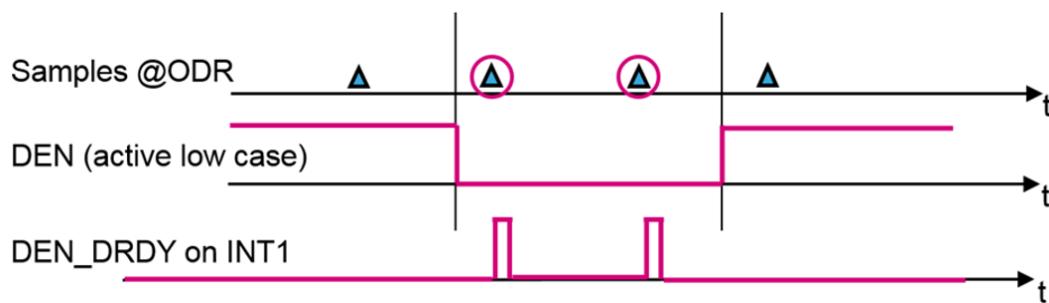

## 4.8.3

**Level-sensitive latched mode**

Level-sensitive latched mode can be enabled by setting the LVL1\_EN and LVL2\_EN bits in the CTRL6\_C register to 1, and the TRIG\_EN bit in the CTRL6\_C register to 0.

When the level-sensitive latched mode is enabled, the LSB bit of the selected data (in output registers and FIFO) is normally set to 0 and becomes 1 only on the first sample after a pulse on the DEN pin.


Note that the DEN level is internally read just before the update of the data registers: if a level change occurs after the read, DEN is acknowledged at the next ODR.

If the DEN feature is enabled on the accelerometer sensor by asserting the DEN\_XL\_EN bit of the CTRL9\_XL register, the accelerometer and gyroscope sensors must be configured at the same ODR or the gyroscope must be set in power-down mode.

Data can be selected through the DEN\_X, DEN\_Y, DEN\_Z, DEN\_XL\_G bits in CTRL9\_XL (see [Section 4.8.5 LSB selection for DEN stamping](#) for details).


[Figure 9](#) shows an example of level-sensitive latched mode with DEN active-low. After the pulse on the DEN pin, the sample with a red circle has the value 1 on the LSB bit. All the other samples have LSB bit 0.

**Figure 9. Level-sensitive latched mode, DEN active-low**

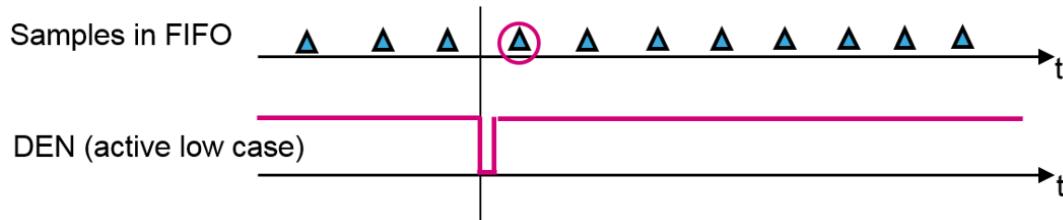

When the level-sensitive latched mode is enabled and the bit DEN\_DRDY\_flag of the INT1\_CTRL register is set to 1, a pulse is generated on the INT1 pin corresponding to the availability of the first sample generated after the DEN pulse occurrence (see [Figure 10](#)).

**Figure 10. Level-sensitive latched mode, DEN active-low, DEN\_DRDY on INT1**

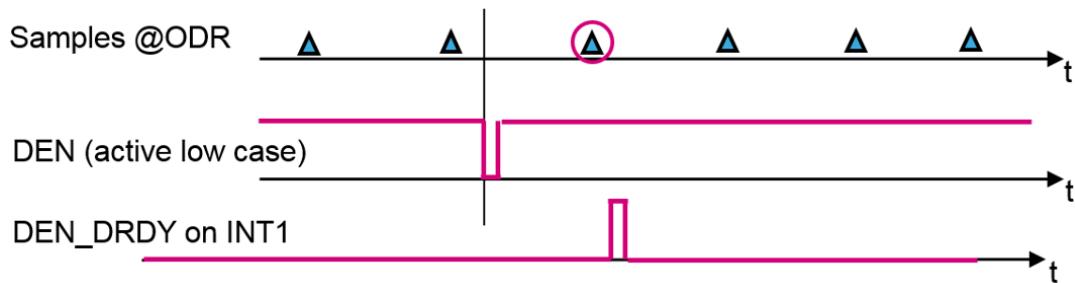

#### 4.8.4 Level-sensitive FIFO enable mode

Level-sensitive FIFO enable mode can be enabled by setting the TRIG\_EN and LVL1\_EN bits in the CTRL6\_C register to 1, and the LVL2\_EN bit in the CTRL6\_C register to 0.

Once the level-sensitive FIFO enable mode is enabled, data is stored in the FIFO only when the DEN pin is equal to the active state.

In this mode, the LSB bit of the selected data (in output registers and FIFO) is replaced by 0 for odd DEN events and by 1 for even DEN events. This feature allows distinguishing the data stored in FIFO during the current DEN active window from the data stored in FIFO during the next DEN active window.


Note that the DEN level is internally read just before the update of the data registers. If a level change occurs after the read, DEN is acknowledged at the next ODR.

If the DEN feature is enabled on the accelerometer sensor by asserting the DEN\_XL\_EN bit of the CTRL9\_XL register, the accelerometer and gyroscope sensors must be configured at the same ODR or the gyroscope must be set in power-down mode.

The selected data can be the X, Y, Z axes of the accelerometer or gyroscope sensor. Data can be selected through the DEN\_X, DEN\_Y, DEN\_Z, DEN\_XL\_G bits in the CTRL9\_XL register (see [Section 4.8.5 LSB selection for DEN stamping](#) for details).

An example of level-sensitive FIFO enable mode is shown in [Figure 11](#). The red circles show the samples stored in the FIFO with LSB bit 0, while the blue circles show the samples with LSB bit 1.

**Figure 11. Level-sensitive FIFO enable mode, DEN active-low**

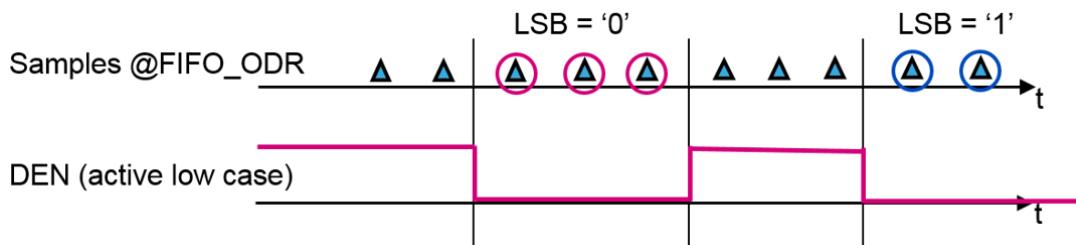

When using level-sensitive FIFO enabled mode, some limitations must be taken into account in the FIFO configuration:

- Gyroscope batch data rate (BDR\_GY\_[3:0] bits of the FIFO\_CTRL3 register) and gyroscope output data rate (ODR\_G[3:0] of the CTRL2\_G register) must be set to the same value.
- Accelerometer batch data rate (BDR\_XL\_[3:0] bits of the FIFO\_CTRL3 register) and accelerometer output data rate (ODR\_XL[3:0] of the CTRL1\_XL register) must be set to the same value if the DEN\_XL\_EN bit of the CTRL9\_XL register is set to 1.
- Configuration-change sensor (CFG-Change) is not allowed (ODRCHG\_EN bit of the FIFO\_CTRL2 register must be set to 0).
- Timestamp decimation in FIFO is not allowed (DEC\_TS\_BATCH\_[1:0] bits of the FIFO\_CTRL4 register must be set to 00).

#### 4.8.5 LSB selection for DEN stamping

When level-sensitive modes (trigger or latched) are used, it is possible to select which LSB have to contain the information related to DEN pin behavior. This information can be stamped on the accelerometer or gyroscope axes in accordance with bits DEN\_X, DEN\_Y, DEN\_Z and DEN\_XL\_G of the CTRL9\_XL register. Setting to 1 the DEN\_X, DEN\_Y, DEN\_Z bits, DEN information is stamped in the LSB of the corresponding axes of the sensor selected with the DEN\_XL\_G bit. By setting DEN\_XL\_G to 0, the DEN information is stamped in the selected gyroscope axes, while by setting DEN\_XL\_G to 1, the DEN information is stamped in the selected accelerometer axes.

By default, the bits are configured to have information on all the gyroscope axes.

## 5 Interrupt generation

Interrupt generation is based on accelerometer data only, so, for interrupt-generation purposes, the accelerometer sensor has to be set in an active operating mode (not in power-down); the gyroscope sensor can be configured in power-down mode since it is not involved in interrupt generation.

The interrupt generator can be configured to detect:

- Free-fall
- Wake-up
- 6D/4D orientation detection
- Single-tap and double-tap sensing
- Activity/inactivity and motion/stationary recognition

The device can also efficiently run the sensor-related features specified in Android, saving power and enabling faster reaction time. The following functions are implemented in hardware using only the accelerometer:

- Significant motion
- Relative tilt
- Pedometer functions
- Timestamp

Moreover, the device can be configured to generate interrupt signals activated by user-defined motion patterns. To do this, up to 16 embedded finite state machines can be programmed independently for motion detection or gesture recognition such as glance, absolute wrist tilt, shake, double-shake, pick-up, and so forth.

The embedded finite state machine feature offers very high customization capabilities starting from scratch or importing gesture recognition programs directly provided by STMicroelectronics. Please refer to the finite state machine application note available on [www.st.com](http://www.st.com).

All these interrupt signals, together with the FIFO interrupt signals, can be independently driven to the INT1 and INT2 interrupt pins or checked by reading the dedicated source register bits.

When the MIPI I3C<sup>SM</sup> interface is used, information about the feature triggering the interrupt event is contained in the in-band interrupt (IBI) frame as described in the datasheet.

The H\_LACTIVE bit of the CTRL3\_C register must be used to select the polarity of the interrupt pins. If this bit is set to 0 (default value), the interrupt pins are active high and they change from low to high level when the related interrupt condition is verified. Otherwise, if the H\_LACTIVE bit is set to 1 (active low), the interrupt pins are normally at high level and they change from high to low when an interrupt condition is reached.

The PP\_OD bit of CTRL3\_C allows changing the behavior of the interrupt pins from push-pull to open drain. If the PP\_OD bit is set to 0, the interrupt pins are in push-pull configuration (low-impedance output for both high and low level). When the PP\_OD bit is set to 1, only the interrupt active state is a low-impedance output.

## 5.1

## Interrupt pin configuration

The device is provided with two pins that can be activated to generate either data-ready or interrupt signals. The functionality of these pins is selected through the MD1\_CFG and INT1\_CTRL registers for the INT1 pin, and through the MD2\_CFG and INT2\_CTRL registers for the INT2 pin.

A brief description of these interrupt control registers is given in the following summary; the default value of their bits is equal to 0, which corresponds to ‘disable’. In order to enable routing a specific interrupt signal to the pin, the corresponding bit has to be set to 1.

**Table 23. INT1\_CTRL register**

b7	b6	b5	b4	b3	b2	b1	b0
DEN_DRDY_flag	INT1_CNT_BDR	INT1_FIFO_FULL	INT1_FIFO_OVR	INT1_FIFO_TH	INT1_BOOT	INT1_DRDY_G	INT1_DRDY_XL

- DEN\_DRDY\_flag: DEN\_DRDY flag interrupt on INT1
- INT1\_CNT\_BDR: FIFO COUNTER\_BDR\_IA interrupt on INT1
- INT1\_FIFO\_FULL: FIFO full flag interrupt on INT1
- INT1\_FIFO\_OVR: FIFO overrun flag interrupt on INT1
- INT1\_FIFO\_TH: FIFO threshold interrupt on INT1
- INT1\_BOOT: boot interrupt on INT1
- INT1\_DRDY\_G: gyroscope data-ready on INT1
- INT1\_DRDY\_XL: accelerometer data-ready on INT1

**Table 24. MD1\_CFG register**

b7	b6	b5	b4	b3	b2	b1	b0
INT1_SLEEP_CHANGE	INT1_SINGLE_TAP	INT1_WU	INT1_FF	INT1_DOUBLE_TAP	INT1_6D	INT1_EMB_FUNC	INT1_SHUB

- INT1\_SLEEP\_CHANGE: activity/inactivity recognition event interrupt on INT1
- INT1\_SINGLE\_TAP: single-tap interrupt on INT1
- INT1\_WU: wake-up interrupt on INT1
- INT1\_FF: free-fall interrupt on INT1
- INT1\_DOUBLE\_TAP: double-tap interrupt on INT1
- INT1\_6D: 6D detection interrupt on INT1
- INT1\_EMB\_FUNC: embedded functions interrupt on INT1 (refer to [Section 6 Embedded functions](#) for more details).
- INT1\_SHUB: sensor hub end operation interrupt on INT1

**Table 25. INT2\_CTRL register**

b7	b6	b5	b4	b3	b2	b1	b0
0	INT2_CNT_BDR	INT2_FIFO_FULL	INT2_FIFO_OVR	INT2_FIFO_TH	INT2_DRDY_TEMP	INT2_DRDY_G	INT2_DRDY_XL

- INT2\_CNT\_BDR: FIFO COUNTER\_BDR\_IA interrupt on INT2
- INT2\_FIFO\_FULL: FIFO full flag interrupt on INT2
- INT2\_FIFO\_OVR: FIFO overrun flag interrupt on INT2
- INT2\_FIFO\_TH: FIFO threshold interrupt on INT2
- INT2\_DRDY\_TEMP: temperature data-ready on INT2
- INT2\_DRDY\_G: gyroscope data-ready on INT2
- INT2\_DRDY\_XL: accelerometer data-ready on INT2

Table 26. MD2\_CFG register

b7	b6	b5	b4	b3	b2	b1	b0
INT2_SLEEP_CHANGE	INT2_SINGLE_TAP	INT2_WU	INT2_FF	INT2_DOUBLE_TAP	INT2_6D	INT2_EMB_FUNC	INT2_TIMESTAMP

- INT2\_SLEEP\_CHANGE: activity/inactivity recognition event interrupt on INT2
- INT2\_SINGLE\_TAP: single-tap interrupt on INT2
- INT2\_WU: wake-up interrupt on INT2
- INT2\_FF: free-fall interrupt on INT2
- INT2\_DOUBLE\_TAP: double-tap interrupt on INT2
- INT2\_6D: 6D detection interrupt on INT2
- INT2\_EMB\_FUNC: embedded functions interrupt on INT2 (refer to [Section 6 Embedded functions](#) for more details).
- INT2\_TIMESTAMP: timestamp overflow alert interrupt on INT2

If multiple interrupt signals are routed to the same pin (INTx), the logic level of this pin is the “OR” combination of the selected interrupt signals. In order to know which event has generated the interrupt condition, the related source registers have to be read:

- WAKE\_UP\_SRC, TAP\_SRC, D6D\_SRC (basic interrupt functions)
- STATUS\_REG (for data-ready signals)
- EMBD\_FUNC\_STATUS\_MAINPAGE / EMB\_FUNC\_SRC (for embedded functions)
- FSM\_STATUS\_A\_MAINPAGE / FSM\_STATUS\_A and FSM\_STATUS\_B\_MAINPAGE / FSM\_STATUS\_B (for finite state machine)
- STATUS\_MASTER\_MAINPAGE / STATUS\_MASTER (for sensor hub)
- FIFO\_STATUS2 (for FIFO)

The ALL\_INT\_SRC register groups the basic interrupts functions event status (6D/4D, free-fall, wake-up, tap, activity/inactivity) in a single register: it is possible to read this register in order to address a subsequent specific source register read.

The INT2\_on\_INT1 pin of the CTRL4\_C register allows driving all the enabled interrupt signals in logic “OR” on the INT1 pin (by setting this bit to 1). When this bit is set to 0, the interrupt signals are divided between the INT1 and INT2 pins.

The basic interrupts have to be enabled by setting the INTERRUPTS\_ENABLE bit in the TAP\_CFG2 register.

The LIR bit of the TAP\_CFG0 register enables the latched interrupt for the basic interrupt functions: when this bit is set to 1 and the interrupt flag is sent to the INT1 pin and/or INT2 pin, the interrupt remains active until the ALL\_INT\_SRC register or the corresponding source register is read, and it is reset at the next ODR cycle. The latched interrupt is enabled on a function only if a function is routed to the INT1 or INT2 pin: if latched mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

Note:

*If latched mode is enabled (LIR = 1), it is not recommended to continuously poll the ALL\_INT\_SRC or the dedicated source registers, because by reading them the embedded functions are internally reset; a synchronous (with interrupt event) read of the source registers is recommended in this case.*


When latched mode is enabled (LIR=1), it is possible to force the immediate reset of the interrupt signal routed to the INT1 or INT2 pin and its corresponding interrupt status bit when ALL\_INT\_SRC (or the related source register) is read. In order to perform this immediate reset, the INT\_CLR\_ON\_READ bit of the TAP\_CFG0 register must be set to 1. When bit INT\_CLR\_ON\_READ is equal to 0, the reset occurs at the next ODR cycle.

## 5.2

**Free-fall interrupt**

Free-fall detection refers to a specific register configuration that allows recognizing when the device is in free-fall: the acceleration measured along all the axes goes to zero. In a real case, a “free-fall zone” is defined around the zero-g level where all the accelerations are small enough to generate the interrupt. Configurable threshold and duration parameters are associated to free-fall event detection. The threshold parameter defines the free-fall zone amplitude; the duration parameter defines the minimum duration of the free-fall interrupt event to be recognized (Figure 12).

Figure 12. Free-fall interrupt

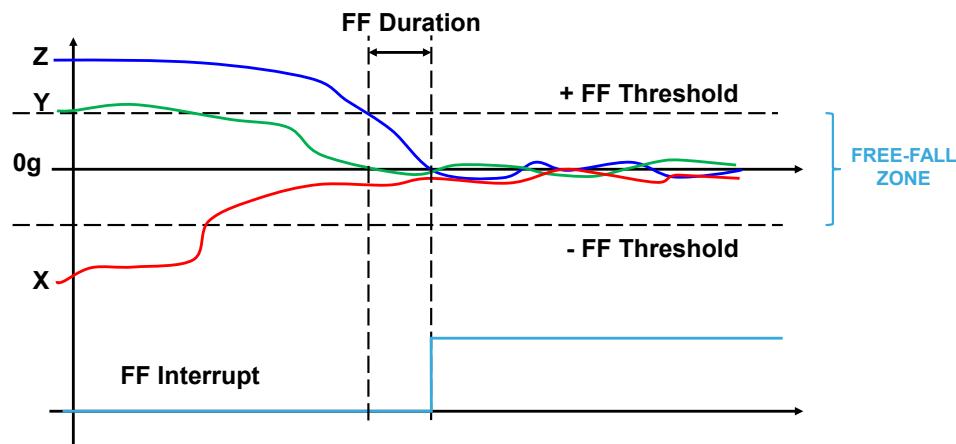

The free-fall interrupt signal can be enabled by setting the INTERRUPTS\_ENABLE bit in the TAP\_CFG2 register to 1 and can be driven to the two interrupt pins by setting the INT1\_FF bit of the MD1\_CFG register to 1 or the INT2\_FF bit of the MD2\_CFG register to 1; it can also be checked by reading the FF\_IA bit of the WAKE\_UP\_SRC register.

If latched mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal is automatically reset when the free-fall condition is no longer verified. If latched mode is enabled and the free-fall interrupt signal is driven to the interrupt pins, once a free-fall event has occurred and the interrupt pin is asserted, it must be reset by reading the WAKE\_UP\_SRC or ALL\_INT\_SRC register. If latched mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

The FREE\_FALL register used to configure the threshold parameter; the unsigned threshold value is related to the value of the FF\_THS[2:0] field value as indicated in Table 27. Free-fall threshold LSB value. The values given in this table are valid for each accelerometer full-scale value.

Table 27. Free-fall threshold LSB value

FREE_FALL - FF_THS[2:0]	Threshold LSB value [mg]
000	312
001	438
010	500
011	Reserved
100	Reserved
101	Reserved
110	Reserved
111	Reserved

Duration time is measured in N/ODR\_XL, where N is the content of the FF\_DUR[5:0] field of the FREE\_FALL / WAKE\_UP\_DUR registers and ODR\_XL is the accelerometer data rate.

A basic software routine for free-fall event recognition is given below.

1. Write 60h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 417 Hz, FS\_XL = ±4 g
2. Write 41h to TAP\_CFG0 // Enable latched mode with reset on read
3. Write 80h to TAP\_CFG2 // Enable interrupt function
4. Write 00h to WAKE\_UP\_DUR // Set event duration (FF\_DUR5 bit)
5. Write 30h to FREE\_FALL // Set FF threshold (FF\_THS[2:0] = 000b)  
// Set six samples event duration (FF\_DUR[5:0] = 000110b)
6. Write 10h to MD1\_CFG // FF interrupt driven to INT1 pin

The sample code exploits a threshold set to 312 mg for free-fall recognition and the event is notified by hardware through the INT1 pin. The FF\_DUR[5:0] field of the FREE\_FALL / WAKE\_UP\_DUR registers is configured like this to ignore events that are shorter than  $6/\text{ODR}_\text{XL} = 6/412 \text{ Hz} \approx 15 \text{ msec}$  in order to avoid false detections.

## 5.3

### Wake-up interrupt

The wake-up feature can be implemented using either the slope filter (see [Section 3.8.1 Accelerometer slope filter](#) for more details) or the high-pass digital filter, as illustrated in [Figure 2. Accelerometer filtering chain](#). The filter to be applied can be selected using the SLOPE\_FDS bit of the TAP\_CFG0 register. If this bit is set to 0 (default value), the slope filter is used; if it is set to 1, the HPF digital filter is used. Moreover, it is possible to configure the wake-up feature as an absolute wake-up with respect to a programmable position. This can be done by setting both the SLOPE\_FDS bit of the TAP\_CFG0 register and the USR\_OFF\_ON\_WU bit of the WAKE\_UP\_THS register to 1. Using this configuration, the input data for the wake-up function comes from the low-pass filter path and the programmable position is subtracted as an offset. The programmable position can be configured through the X\_OFS\_USR, Y\_OFS\_USR and Z\_OFS\_USR registers (refer to [Section 4.6 Accelerometer offset registers](#) for more details).

The wake-up interrupt signal is generated if a certain number of consecutive filtered data exceed the configured threshold ([Figure 13. Wake-up interrupt \(using the slope filter\)](#)).

The unsigned threshold value is defined using the WK\_THS[5:0] bits of the WAKE\_UP\_THS register; the value of 1 LSB of these 6 bits depends on the selected accelerometer full scale and on the value of the WAKE\_THS\_W bit of the WAKE\_UP\_DUR register:


- If WAKE\_THS\_W = 0, 1 LSB =  $\text{FS}_\text{XL} / 2^6$ .
- If WAKE\_THS\_W = 1, 1 LSB =  $\text{FS}_\text{XL} / 2^8$ .

The threshold is applied to both positive and negative data: for wake-up interrupt generation, the absolute value of the filtered data must be bigger than the threshold.

The duration parameter defines the minimum duration of the wake-up event to be recognized; its value is set using the WAKE\_DUR[1:0] bits of the WAKE\_UP\_DUR register: 1 LSB corresponds to  $1/\text{ODR}_\text{XL}$  time, where ODR\_XL is the accelerometer output data rate. It is important to appropriately define the duration parameter to avoid unwanted wake-up interrupts due to spurious spikes of the input signal.

This interrupt signal can be enabled by setting the INTERRUPTS\_ENABLE bit in the TAP\_CFG2 register to 1 and can be driven to the two interrupt pins by setting to 1 the INT1\_WU bit of the MD1\_CFG register or the INT2\_WU bit of the MD2\_CFG register; it can also be checked by reading the WU\_IA bit of the WAKE\_UP\_SRC or ALL\_INT\_SRC register. The X\_WU, Y\_WU, Z\_WU bits of the WAKE\_UP\_SRC register indicate which axes have triggered the wake-up event.

Figure 13. Wake-up interrupt (using the slope filter)

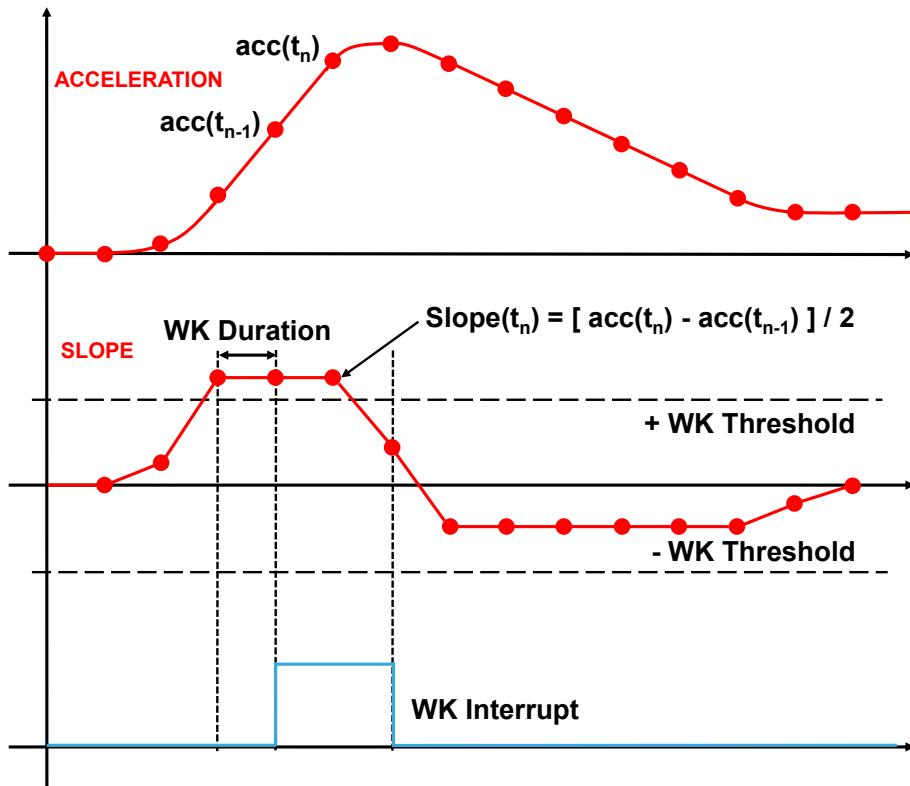

If latched mode is disabled (LIR bit of TAP\_CFG0 is set to 0), the interrupt signal is automatically reset when the filtered data falls below the threshold. If latched mode is enabled and the wake-up interrupt signal is driven to the interrupt pins, once a wake-up event has occurred and the interrupt pin is asserted, it must be reset by reading the WAKE\_UP\_SRC register or the ALL\_INT\_SRC register. The X\_WU, Y\_WU, Z\_WU bits are maintained at the state in which the interrupt was generated until the read is performed, and released at the next ODR cycle. In case the WU\_X, WU\_Y, WU\_Z bits have to be evaluated (in addition to the WU\_IA bit), it is recommended to directly read the WAKE\_UP\_SRC register (do not use the ALL\_INT\_SRC register for this specific case). If latched mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

A basic software routine for wake-up event recognition using the high-pass digital filter is given below.

1. Write 60h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 417 Hz, FS\_XL = ±4 g
2. Write 51h to TAP\_CFG0 // Enable latched mode with reset on read and digital high-pass filter
3. Write 80h to TAP\_CFG2 // Enable interrupt function
4. Write 00h to WAKE\_UP\_DUR // No duration and selection of wake-up threshold weight (1 LSB = FS\_XL / 2<sup>6</sup>)
5. Write 01h to WAKE\_UP\_THS // Set wake-up threshold
6. Write 20h to MD1\_CFG // Wake-up interrupt driven to INT1 pin

Since the duration time is set to zero, the wake-up interrupt signal is generated for each X, Y, Z filtered data exceeding the configured threshold. The WK\_THS field of the WAKE\_UP\_THS register is set to 000001, therefore the wake-up threshold is 62.5 mg (= 1 \* FS\_XL / 2<sup>6</sup>).

If the wake-up functionality is implemented using the slope/high-pass digital filter, it is necessary to consider the settling time of the filter just after this functionality is enabled. For example, when using the slope filter (but a similar consideration can be done for the high-pass digital filter usage) the wake-up functionality is based on the comparison of the threshold value with half of the difference of the acceleration of the current (X, Y, Z) sample and the previous one (refer to [Section 3.8.1 Accelerometer slope filter](#)).

At the very first sample, the slope filter output is calculated as half of the difference of the current sample [for example,  $(X, Y, Z) = (0, 0, 1g)$ ] with the previous one, which is  $(X, Y, Z) = (0, 0, 0)$  since it does not exist. For this reason, on the Z-axis, the first output value of the slope filter is  $(1g - 0)/2 = 500 \text{ mg}$  and it could be higher than the threshold value in which case a spurious interrupt event is generated. The interrupt signal is kept high for 1 ODR then it goes low.

In order to avoid this spurious interrupt generation, multiple solutions are possible. Hereafter are three alternative solutions (for the slope filter case):

- Ignore the first generated wake-up signal;
- Add a wait time higher than 1 ODR before driving the interrupt signal to the INT1/2 pin;
- Initially set a higher ODR (833 Hz) so the first two samples are generated in a shorter period of time, reducing the slope filter latency time, then set the desired ODR (for example, 12.5 Hz) and drive the interrupt signal on the pin, as indicated in the procedure below:

1. Write 00h to WAKE\_UP\_DUR // No duration and selection of wake-up threshold weight (1 LSB = FS\_XL /  $2^6$ )
2. Write 01h to WAKE\_UP\_THS // Set wake-up threshold
3. Write 51h to TAP\_CFG0 // Enable interrupts and apply slope filter; latched mode disabled
4. Write 80h to TAP\_CFG2 // Enable interrupt function
5. Write 70h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 833 Hz, FS\_XL =  $\pm 4 \text{ g}$
6. Wait 4 ms // Insert (reduced) wait time
7. Write 10h to CTRL1\_XL // ODR\_XL = 12.5 Hz
8. Write 20h to MD1\_CFG // Wake-up interrupt driven to INT1 pin

## 5.4

## 6D/4D orientation detection

The device provides the capability to detect the orientation of the device in space, enabling easy implementation of energy-saving procedures and automatic image rotation for mobile devices.

### 5.4.1

### 6D orientation detection

Six orientations of the device in space can be detected; the interrupt signal is asserted when the device switches from one orientation to another. The interrupt is not reasserted as long as the position is maintained.

6D interrupt is generated when, for two consecutive samples, only one axis exceeds a selected threshold and the acceleration values measured from the other two axes are lower than the threshold: the ZH, ZL, YH, YL, XH, XL bits of the D6D\_SRC register indicate which axis has triggered the 6D event.

In more detail:

Table 28. D6D\_SRC register

b7	b6	b5	b4	b3	b2	b1	b0
DEN_DRDY	D6D_IA	ZH	ZL	YH	YL	XH	XL

- D6D\_IA is set high when the device switches from one orientation to another.
- ZH (YH, XH) is set high when the face perpendicular to the Z (Y, X) axis is almost flat and the acceleration measured on the Z (Y, X) axis is positive and in the absolute value bigger than the threshold.
- ZL (YL, XL) is set high when the face perpendicular to the Z (Y, X) axis is almost flat and the acceleration measured on the Z (Y, X) axis is negative and in the absolute value bigger than the threshold.

The SIXD\_THS[1:0] bits of the TAP\_THS\_6D register are used to select the threshold value used to detect the change in device orientation. The threshold values given in the following table are valid for each accelerometer full-scale value.

Table 29. Threshold for 4D/6D function

SIXD_THS[1:0]	Threshold value [degrees]
00	68
01	47
10	Reserved
11	Reserved


The low-pass filter LPF2 can also be used in 6D functionality by setting the LOW\_PASS\_ON\_6D bit of the CTRL8\_XL register to 1.

This interrupt signal can be enabled by setting the INTERRUPTS\_ENABLE bit in the TAP\_CFG2 register to 1 and can be driven to the two interrupt pins by setting to 1 the INT1\_6D bit of the MD1\_CFG register or the INT2\_6D bit of the MD2\_CFG register; it can also be checked by reading the D6D\_IA bit of the D6D\_SRC register.

If latched mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal is active only for 1/ODR\_XL[s] then it is automatically disserted (ODR\_XL is the accelerometer output data rate). If latched mode is enabled and the 6D interrupt signal is driven to the interrupt pins, once an orientation change has occurred and the interrupt pin is asserted, a read of the D6D\_SRC or ALL\_INT\_SRC register clears the request and the device is ready to recognize a different orientation. The XL, XH, YL, YH, ZL, ZH bits are not affected by the LIR configuration: they correspond to the current state of the device when the D6D\_SRC register is read. If latched mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

Referring to the six possible cases illustrated in Figure 14. 6D recognized orientations, the content of the D6D\_SRC register for each position is shown in Table 30. D6D\_SRC register in 6D positions.

Figure 14. 6D recognized orientations

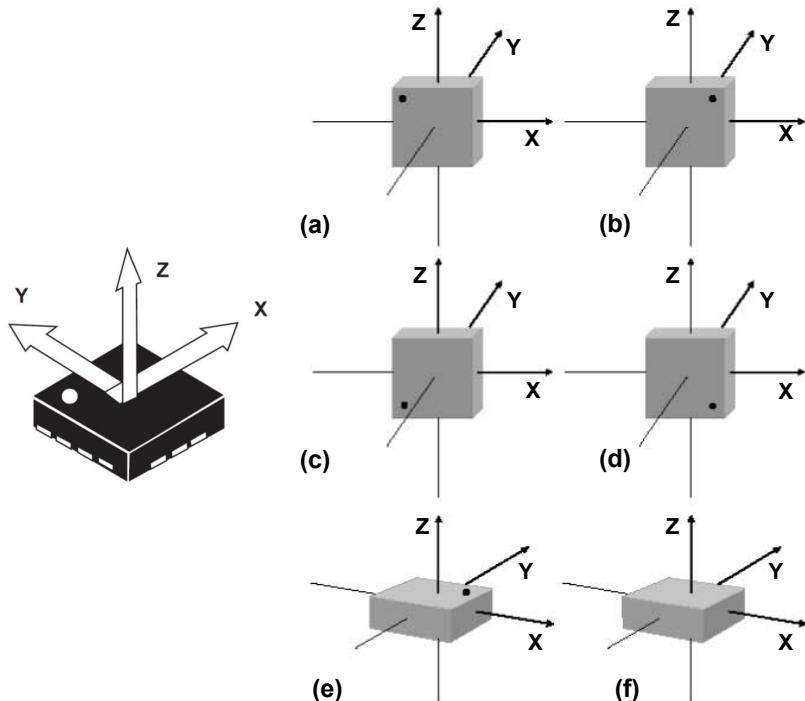

**Table 30. D6D\_SRC register in 6D positions**

Case	D6D_IA	ZH	ZL	YH	YL	XH	XL
(a)	1	0	0	1	0	0	0
(b)	1	0	0	0	0	0	1
(c)	1	0	0	0	0	1	0
(d)	1	0	0	0	1	0	0
(e)	1	1	0	0	0	0	0
(f)	1	0	1	0	0	0	0

A basic software routine for 6D orientation detection is as follows:

1. Write 60h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 417 Hz, FS\_XL = ±4 g
2. Write 41h to TAP\_CFG0 // Enable latched mode with reset on read
3. Write 80h to TAP\_CFG2 // Enable interrupt function
4. Write 00h to TAP\_THS\_6D // Set 6D threshold (SIXD\_THS[1:0] = 00b = 68 degrees)
5. Write 01h to CTRL8\_XL // Enable LPF2 filter to 6D functionality
6. Write 04h to MD1\_CFG // 6D interrupt driven to INT1 pin

#### 5.4.2 4D orientation detection

The 4D direction function is a subset of the 6D function especially defined to be implemented in mobile devices for portrait and landscape computation. It can be enabled by setting the D4D\_EN bit of the TAP\_THS\_6D register to 1. In this configuration, the Z-axis position detection is disabled, therefore reducing position recognition to cases (a), (b), (c), and (d) of [Table 30. D6D\\_SRC register in 6D positions](#).

### 5.5 Single-tap and double-tap recognition

The single-tap and double-tap recognition help to create a man-machine interface with little software loading. The device can be configured to output an interrupt signal on a dedicated pin when tapped in any direction.

If the sensor is exposed to a single input stimulus, it generates an interrupt request on the inertial interrupt pin INT1 and/or INT2. A more advanced feature allows the generation of an interrupt request when a double input stimulus with programmable time between the two events is recognized, enabling a mouse button-like function.

The single-tap and double-tap recognition functions use the slope between two consecutive acceleration samples to detect the tap events; the slope data is calculated using the following formula:

$$\text{slope}(t_n) = [\text{acc}(t_n) - \text{acc}(t_{n-1})] / 2$$

This function can be fully programmed by the user in terms of expected amplitude and timing of the slope data by means of a dedicated set of registers.

Single and double-tap recognition work independently of the selected output data rate. Recommended minimum accelerometer ODR for these functions is 417 Hz.

In order to enable the single-tap and double-tap recognition functions it is necessary to set the INTERRUPTS\_ENABLE bit in TAP\_CFG2 register to 1.

### 5.5.1 Single tap


If the device is configured for single-tap event detection, an interrupt is generated when the slope data of the selected channel exceeds the programmed threshold, and returns below it within the shock time window.

In the single-tap case, if the LIR bit of the TAP\_CFG0 register is set to 0, the interrupt is kept active for the duration of the quiet window. If the LIR bit is set to 1, the interrupt is kept active until the TAP\_SRC or ALL\_INT\_SRC register is read.

The SINGLE\_DOUBLE\_TAP bit of WAKE\_UP\_THS has to be set to 0 in order to enable single-tap recognition only.

In case (a) of [Figure 15. Single-tap event recognition](#) the single-tap event has been recognized, while in case (b) the tap has not been recognized because the slope data falls below the threshold after the shock time window has expired.

[Figure 15. Single-tap event recognition](#)

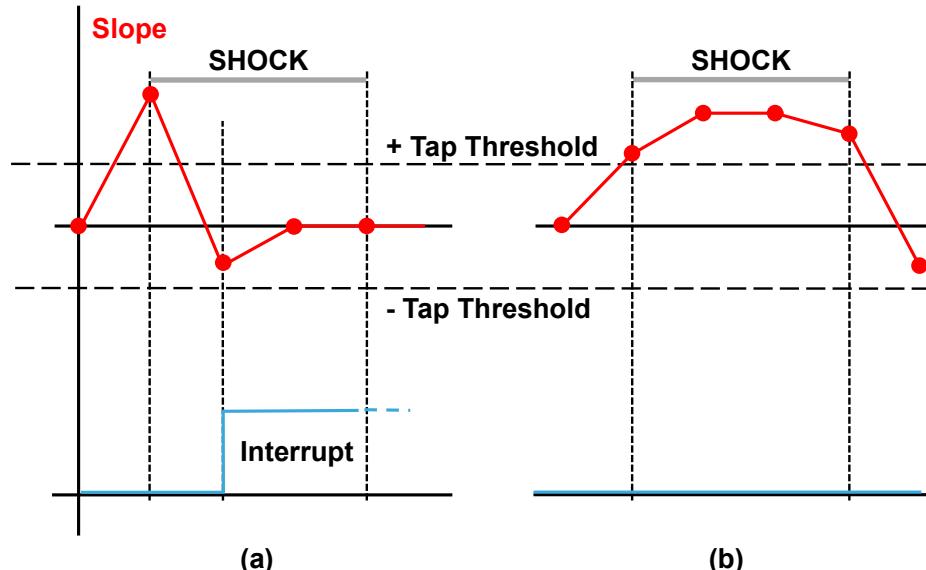

### 5.5.2 Double tap

If the device is configured for double-tap event detection, an interrupt is generated when, after a first tap, a second tap is recognized. The recognition of the second tap occurs only if the event satisfies the rules defined by the shock, the quiet, and the duration time windows.


In particular, after the first tap has been recognized, the second tap detection procedure is delayed for an interval defined by the quiet time. This means that after the first tap has been recognized, the second tap detection procedure starts only if the slope data exceeds the threshold after the quiet window but before the duration window has expired. In case (a) of [Figure 16](#), a double-tap event has been correctly recognized, while in case (b) the interrupt has not been generated because the slope data exceeds the threshold after the window interval has expired.

Once the second tap detection procedure is initiated, the second tap is recognized with the same rule as the first: the slope data must return below the threshold before the shock window has expired.

It is important to appropriately define the quiet window to avoid unwanted taps due to spurious bouncing of the input signal.

In the double-tap case, if the LIR bit of the TAP\_CFG0 register is set to 0, the interrupt is kept active for the duration of the quiet window. If the LIR bit is set to 1, the interrupt is kept active until the TAP\_SRC or ALL\_INT\_SRC register is read.

**Figure 16. Double-tap event recognition (LIR bit = 0)**

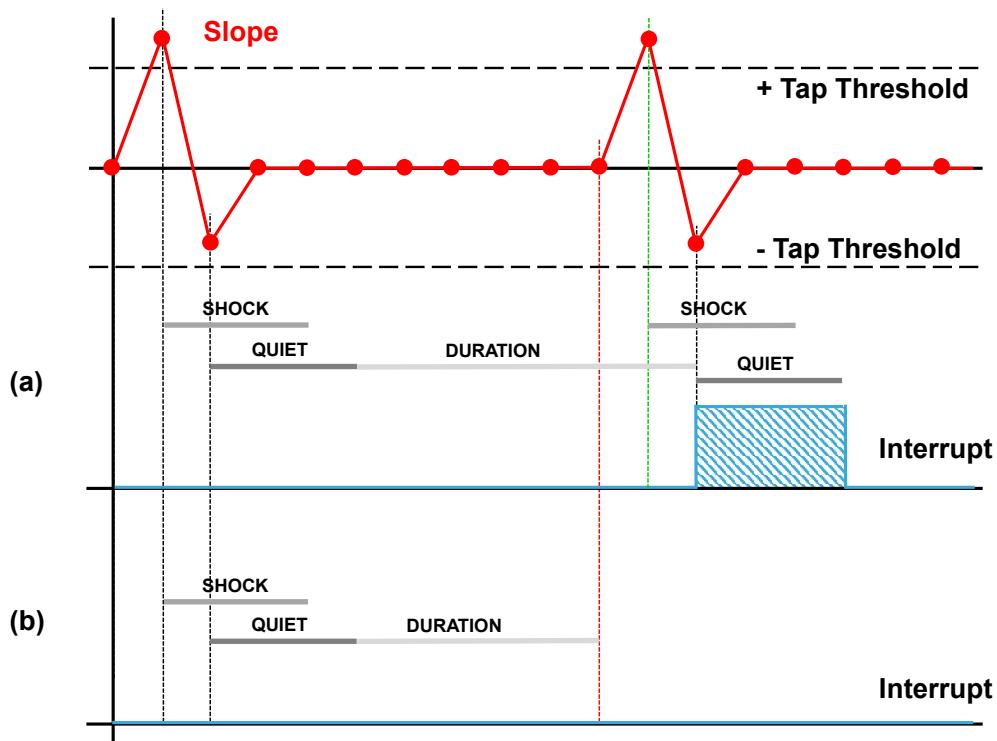

### 5.5.3

### Single-tap and double-tap recognition configuration

The device can be configured to output an interrupt signal when tapped (once or twice) in any direction: the TAP\_X\_EN, TAP\_Y\_EN and TAP\_Z\_EN bits of the TAP\_CFG0 register must be set to 1 to enable the tap recognition on the X, Y, Z directions, respectively. In addition, the INTERRUPTS\_ENABLE bit of the TAP\_CFG2 register has to be set to 1.

Configurable parameters for tap recognition functionality are the tap thresholds (each axis has a dedicated threshold) and the shock, quiet, and duration time windows.

The TAP\_THS\_X[4:0] bits of the TAP\_CFG1 register, the TAP\_THS\_Y[4:0] bits of the TAP\_CFG2 register and the TAP\_THS\_Z[4:0] bits of the TAP\_THS\_6D register are used to select the unsigned threshold value used to detect the tap event on the respective axis. The value of 1 LSB of these 5 bits depends on the selected accelerometer full scale: 1 LSB =  $(FS_{XL})/(2^5)$ . The unsigned threshold is applied to both positive and negative slope data.

Both single-tap and double-tap recognition functions apply to only one axis. If more than one axis are enabled and they are over the respective threshold, the algorithm continues to evaluate only the axis with highest priority. The priority can be configured through the TAP\_PRIORITY\_[2:0] bits of TAP\_CFG1. The following table shows all the possible configurations.

**Table 31. TAP\_PRIORITY\_[2:0] bits configuration**

TAP_PRIORITY_[2:0]	Maximum priority	Middle priority	Minimum priority
000	X	Y	Z
001	Y	X	Z
010	X	Z	Y
011	Z	Y	X
100	X	Y	Z
101	Y	Z	X
110	Z	X	Y
111	Z	Y	X

The shock time window defines the maximum duration of the overcoming threshold event: the acceleration must return below the threshold before the shock window has expired, otherwise the tap event is not detected. The SHOCK[1:0] bits of the INT\_DUR2 register are used to set the shock time window value: the default value of these bits is 00 and corresponds to 4/ODR\_XL time, where ODR\_XL is the accelerometer output data rate. If the SHOCK[1:0] bits are set to a different value, 1 LSB corresponds to 8/ODR\_XL time.


In the double-tap case, the quiet time window defines the time after the first tap recognition in which there must not be any overcoming threshold event. When latched mode is disabled (LIR bit of TAP\_CFG is set to 0), the quiet time also defines the length of the interrupt pulse (in both the single and double-tap case). The QUIET[1:0] bits of the INT\_DUR2 register are used to set the quiet time window value: the default value of these bits is 00 and corresponds to 2/ODR\_XL time, where ODR\_XL is the accelerometer output data rate. If the QUIET[1:0] bits are set to a different value, 1 LSB corresponds to 4/ODR\_XL time.

In the double-tap case, the duration time window defines the maximum time between two consecutive detected taps. The duration time period starts just after the completion of the quiet time of the first tap. The DUR[3:0] bits of the INT\_DUR2 register are used to set the duration time window value: the default value of these bits is 0000b and corresponds to 16/ODR\_XL time, where ODR\_XL is the accelerometer output data rate. If the DUR[3:0] bits are set to a different value, 1 LSB corresponds to 32/ODR\_XL time.

**Figure 17. Single and double-tap recognition (LIR bit = 0)** illustrates a single-tap event (a) and a double-tap event (b). These interrupt signals can be driven to the two interrupt pins by setting to 1 the INT1\_SINGLE\_TAP bit of the MD1\_CFG register or the INT2\_SINGLE\_TAP bit of the MD2\_CFG register for the single-tap case, and setting to 1 the INT1\_DOUBLE\_TAP bit of the MD1\_CFG register or the INT2\_DOUBLE\_TAP bit of the MD2\_CFG register for the double-tap case.

No single/double-tap interrupt is generated if the accelerometer is in inactivity status (see [Section 5.6 Activity/inactivity and motion/stationary recognition](#) for more details).

Figure 17. Single and double-tap recognition (LIR bit = 0)

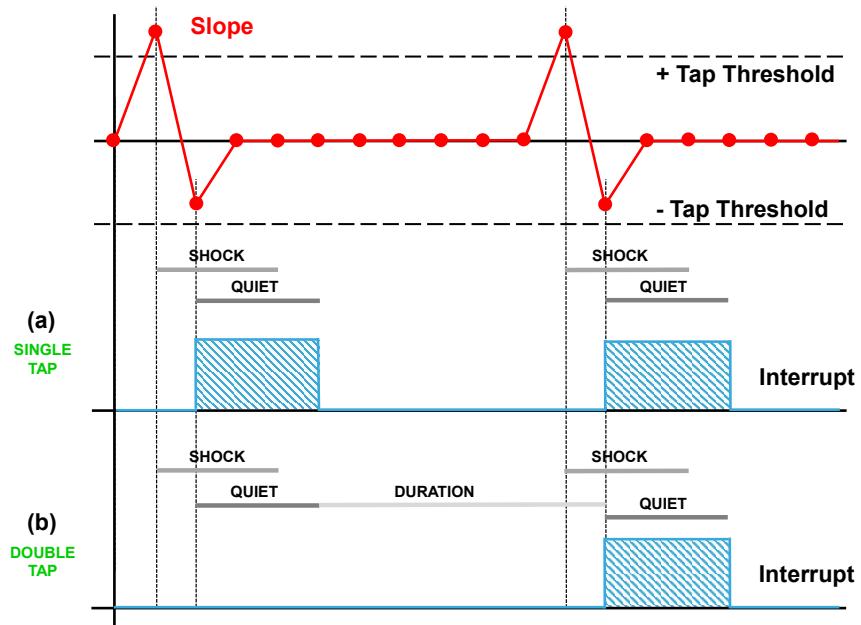

Tap interrupt signals can also be checked by reading the TAP\_SRC (1Ch) register, described in the following table.

Table 32. TAP\_SRC register

b7	b6	b5	b4	b3	b2	b1	b0
0	TAP_IA	SINGLE_TAP	DOUBLE_TAP	TAP_SIGN	X_TAP	Y_TAP	Z_TAP

- TAP\_IA is set high when a single-tap or double-tap event has been detected.
- SINGLE\_TAP is set high when a single tap has been detected.
- DOUBLE\_TAP is set high when a double tap has been detected.
- TAP\_SIGN indicates the acceleration sign when the tap event is detected. It is set low in case of positive sign and it is set high in case of negative sign.
- X\_TAP (Y\_TAP, Z\_TAP) is set high when the tap event has been detected on the X (Y, Z) axis.

Single and double-tap recognition works independently. Setting the SINGLE\_DOUBLE\_TAP bit of the WAKE\_UP\_THS register to 0, only the single-tap recognition is enabled: double-tap recognition is disabled and cannot be detected. When the SINGLE\_DOUBLE\_TAP is set to 1, both single and double-tap recognition are enabled.

If latched mode is enabled and the interrupt signal is driven to the interrupt pins, the value assigned to SINGLE\_DOUBLE\_TAP also affects the behavior of the interrupt signal. When it is set to 0, latched mode is applied to the single-tap interrupt signal; when it is set to 1, latched mode is applied to the double-tap interrupt signal only. The latched interrupt signal is kept active until the TAP\_SRC or ALL\_INT\_SRC register is read. The TAP\_SIGN, X\_TAP, Y\_TAP, Z\_TAP bits are maintained at the state in which the interrupt was generated until the read is performed, and released at the next ODR cycle. In case the TAP\_SIGN, X\_TAP, Y\_TAP, Z\_TAP bits have to be evaluated (in addition to the TAP\_IA bit), it is recommended to directly read the TAP\_SRC register (do not use the ALL\_INT\_SRC register for this specific case). If latched mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

#### 5.5.4 Single-tap example

A basic software routine for single-tap detection is given below.

1. Write 60h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 417 Hz, FS\_XL = ±4 g
2. Write 0Eh to TAP\_CFG0 // Enable tap detection on X, Y, Z-axis
3. Write 04h to TAP\_CFG1 // Set X-axis threshold and axes priority
4. Write 84h to TAP\_CFG2 // Set Y-axis threshold and enable interrupt
5. Write 04h to TAP\_THS\_6D // Set Z-axis threshold
6. Write 06h to INT\_DUR2 // Set quiet and shock time windows
7. Write 00h to WAKE\_UP\_THS // Only single-tap enabled (SINGLE\_DOUBLE\_TAP = 0)
8. Write 40h to MD1\_CFG // Single-tap interrupt driven to INT1 pin

In this example the TAP\_THS\_X[4:0], TAP\_THS\_Y[4:0], and TAP\_THS\_Z[4:0] bits are set to 00100, therefore the tap threshold for each axis is 500 mg ( $= 4 * FS_XL / 2^5$ ).

The SHOCK field of the INT\_DUR2 register is set to 10: an interrupt is generated when the slope data exceeds the programmed threshold, and returns below it within 38.5 ms ( $= 2 * 8 / ODR_XL$ ) corresponding to the shock time window.

The QUIET field of the INT\_DUR2 register is set to 01: since latched mode is disabled, the interrupt is kept high for the duration of the quiet window, therefore 9.6 ms ( $= 1 * 4 / ODR_XL$ ).

#### 5.5.5 Double-tap example

A basic software routine for double-tap detection is given below.

1. Write 60h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 417 Hz, FS\_XL = ±4 g
2. Write 0Eh to TAP\_CFG0 // Enable tap detection on X, Y, Z-axis
3. Write 06h to TAP\_CFG1 // Set X-axis threshold and axes priority
4. Write 86h to TAP\_CFG2 // Set Y-axis threshold and enable interrupt
5. Write 06h to TAP\_THS\_6D // Set Z-axis threshold
6. Write 7Fh to INT\_DUR2 // Set duration, quiet, and shock time windows
7. Write 80h to WAKE\_UP\_THS // Single-tap and double-tap enabled (SINGLE\_DOUBLE\_TAP = 1)
8. Write 08h to MD1\_CFG // Double-tap interrupt driven to INT1 pin

In this example the TAP\_THS\_X[4:0], TAP\_THS\_Y[4:0], and TAP\_THS\_Z[4:0] bits are set to 00110, therefore the tap threshold is 750 mg ( $= 6 * FS_XL / 2^5$ ).

For interrupt generation, during the first and the second tap the slope data must return below the threshold before the shock window has expired. The SHOCK field of the INT\_DUR2 register is set to 11, therefore the shock time is 57.7 ms ( $= 3 * 8 / ODR_XL$ ).

For interrupt generation, after the first tap recognition there must not be any slope data overthreshold during the quiet time window. Furthermore, since latched mode is disabled, the interrupt is kept high for the duration of the quiet window. The QUIET field of the INT\_DUR2 register is set to 11, therefore the quiet time is 28.8 ms ( $= 3 * 4 / ODR_XL$ ).

For the maximum time between two consecutive detected taps, the DUR field of the INT\_DUR2 register is set to 0111, therefore the duration time is 538.5 ms ( $= 7 * 32 / ODR_XL$ ).

## 5.6

## Activity/inactivity and motion/stationary recognition

The working principle of activity/inactivity and motion/stationary embedded functions is similar to wake-up. If no movement condition is detected for a programmable time, an inactivity/stationary condition event is generated. Otherwise, when the accelerometer data exceed the configurable threshold, an activity/motion condition event is generated.

The activity/inactivity recognition function allows reducing system power consumption and developing new smart applications.

When the activity/inactivity recognition function is activated, the device is able to automatically decrease the accelerometer sampling rate to 12.5 Hz (low-power mode) and to automatically increase the accelerometer ODR and bandwidth as soon as the wake-up interrupt event has been detected. This feature can be extended to the gyroscope, with three possible options:

- Gyroscope configurations do not change.
- Gyroscope enters in sleep mode.
- Gyroscope enters in power-down mode.

With this feature the system may be efficiently switched from low-power consumption to full performance and vice versa depending on user-selectable acceleration events, thus ensuring power saving and flexibility.

The maximum allowed accelerometer ODR (configurable through the ODR\_XL [3:0] bits of the CTRL1\_XL register) for using the activity/inactivity feature is 3.3 kHz.

The activity/inactivity recognition function is enabled by setting the INTERRUPTS\_ENABLE bit to 1 and configuring the INACT\_EN[1:0] bits of the TAP\_CFG2 register. If the INACT\_EN[1:0] bits of the TAP\_CFG2 register are equal to 00, the motion/stationary embedded function is enabled. Possible configurations of the inactivity event are summarized in the following table.

**Table 33. Inactivity event configuration**

INACT_EN[1:0]	Accelerometer	Gyroscope
00	Inactivity event disabled	Inactivity event disabled
01	XL ODR = 12.5 Hz (low-power mode)	Gyroscope configuration unchanged
10	XL ODR = 12.5 Hz (low-power mode)	Gyroscope in sleep mode
11	XL ODR = 12.5 Hz (low-power mode)	Gyroscope in power-down mode

The activity/inactivity and motion/stationary recognition functions can be implemented using either the slope filter (see [Section 3.8.1 Accelerometer slope filter](#) for more details) or the high-pass digital filter, as illustrated in [Figure 2. Accelerometer filtering chain](#). The filter to be applied can be selected using the SLOPE\_FDS bit of the TAP\_CFG0 register. If this bit is set to 0 (default value), the slope filter is used; if it is set to 1, the high-pass digital filter is used.

This function can be fully programmed by the user in terms of the expected amplitude and timing of the filtered data by means of a dedicated set of registers ([Figure 18. Activity/inactivity recognition \(using the slope filter\)](#)).

The unsigned threshold value is defined using the WK\_THS[5:0] bits of the WAKE\_UP\_THS register; the value of 1 LSB of these 6 bits depends on the selected accelerometer full scale and on the value of the WAKE\_THS\_W bit of the WAKE\_UP\_DUR register:

- if WAKE\_THS\_W = 0, 1 LSB = FS\_XL / 2<sup>6</sup>.
- if WAKE\_THS\_W = 1, 1 LSB = FS\_XL / 2<sup>8</sup>.

The threshold is applied to both positive and negative filtered data.

When a certain number of consecutive X,Y,Z filtered data is smaller than the configured threshold, the ODR\_XL[3:0] bits of the CTRL1\_XL register are bypassed (inactivity) and the accelerometer is internally set to 12.5 Hz although the content of CTRL1\_XL is left untouched. The gyroscope behavior varies according to the configuration of the INACT\_EN[1:0] bits of the TAP\_CFG2 register. The duration of the inactivity status to be recognized is defined by the SLEEP\_DUR[3:0] bits of the WAKE\_UP\_DUR register: 1 LSB corresponds to 512 / ODR\_XL time, where ODR\_XL is the accelerometer output data rate. If the SLEEP\_DUR[3:0] bits are set to 0000, the duration of the inactivity status to be recognized is equal to 16 / ODR\_XL time.

When the inactivity status is detected, the interrupt is set high for 1/ODR\_XL[s] period then it is automatically deasserted.

When filtered data on one axis becomes bigger than the threshold for a configurable time, the CTRL1\_XL register settings are immediately restored (activity) and the gyroscope is restored to the previous state. The duration of the activity status to be recognized is defined by the WAKE\_DUR[1:0] bits of the WAKE\_UP\_DUR register. 1 LSB corresponds to 1 / ODR\_XL time, where ODR\_XL is the accelerometer output data rate.


When the activity status is detected, the interrupt is set high for 1/ODR\_XL[s] period then it is automatically deasserted.

Once the activity/inactivity detection function is enabled, the status can be driven to the two interrupt pins by setting to 1 the INT1\_SLEEP\_CHANGE bit of the MD1\_CFG register or the INT2\_SLEEP\_CHANGE bit of the MD2\_CFG register; it can also be checked by reading the SLEEP\_CHANGE\_IA bit of the WAKE\_UP\_SRC or ALL\_INT\_SRC register.

The SLEEP\_CHANGE\_IA bit is by default in pulsed mode. Latched mode can be selected by setting the LIR bit of the TAP\_CFG0 register to 1 and the INT1\_SLEEP\_CHANGE of the MD1\_CFG register or INT2\_SLEEP\_CHANGE of the MD2\_CFG register to 1. The SLEEP\_STATE bit of the WAKE\_UP\_SRC register is not affected by the LIR configuration: it corresponds to the current state of the device when the WAKE\_UP\_SRC register is read.

By setting the SLEEP\_STATUS\_ON\_INT bit of the TAP\_CFG0 register to 1, the signal routed to the INT1 or INT2 pins is configured to be the activity/inactivity state (SLEEP\_STATE bit of the WAKE\_UP\_SRC register) instead of the sleep-change signal: it goes high during the inactivity state and it goes low during the activity state. Latched mode is not supported in this configuration.

Figure 18. Activity/inactivity recognition (using the slope filter)

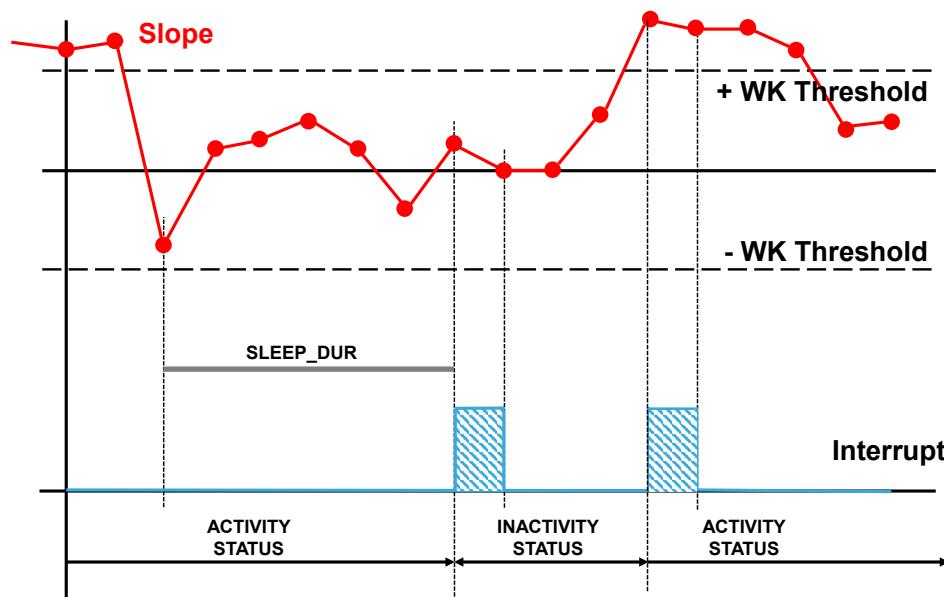

A basic software routine for activity/inactivity detection is as follows:

1. Write 50h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 208 Hz, FS\_XL = ±4 g
2. Write 40h to CTRL2\_G // Turn on the gyroscope  
// ODR\_G = 104 Hz, FS\_G = ±250 dps
3. Write 02h to WAKE\_UP\_DUR // Set duration for inactivity detection  
// Select activity/inactivity threshold resolution and duration
4. Write 01h to WAKE\_UP\_THS // Set activity/inactivity threshold
5. Write 00h to TAP\_CFG0 // Select sleep-change notification  
// Select slope filter
6. Write E0h to TAP\_CFG2 // Enable interrupt  
// Inactivity configuration: accelerometer to 12.5 Hz (LP mode),  
// Gyroscope to power-down mode
7. Write 80h to MD1\_CFG // Activity/inactivity interrupt driven to INT1 pin

In this example the WK\_THS field of the WAKE\_UP\_THS register is set to 000001, therefore the activity/inactivity threshold is 62.5 mg ( $= 1 * \text{FS}_X / 2^6$  since the WAKE\_THS\_W bit of the WAKE\_UP\_DUR register is set to 0). Before inactivity detection, the X, Y, Z slope data must be smaller than the configured threshold for a period of time defined by the SLEEP\_DUR field of the WAKE\_UP\_DUR register: this field is set to 0010, corresponding to 4.92 s ( $= 2 * 512 / \text{ODR}_X$ ). After this period of time has elapsed, the accelerometer ODR is internally set to 12.5 Hz and the gyroscope is internally set to power-down mode.

The activity status is detected and the CTRL1\_XL register settings are immediately restored and the gyroscope is turned on as soon as the slope data of (at least) one axis are bigger than the threshold for one sample, since the WAKE\_DUR[1:0] bits of the WAKE\_UP\_DUR register are configured to 00.

## 5.6.1

### Stationary/motion detection

Stationary/motion detection is a particular case of the activity/inactivity functionality in which no ODR / power mode changes occur when a sleep condition (equivalent to a stationary condition) is detected. Stationary/motion detection is activated by setting the INACT\_EN[1:0] bits of the TAP\_CFG2 register to 00.

## 5.7

### Boot status

After the device is powered up, it performs a 10 ms (maximum) boot procedure to load the trimming parameters. After the boot is completed, both the accelerometer and the gyroscope are automatically configured in power-down mode. During the boot time, the registers are not accessible.

After power-up, the trimming parameters can be reloaded by setting the BOOT bit of the CTRL3\_C register to 1.

No toggle of the device power lines is required and the content of the device control registers is not modified. If the reset to the default value of the control registers is required, it can be performed by setting the SW\_RESET bit of the CTRL3\_C register to 1. When this bit is set to 1, the following registers are reset to their default value:

- FUNC\_CFG\_ACCESS (01h)
- PIN\_CTRL (02h)
- FIFO\_CTRL1 (07h) through FIFO\_CTRL4 (0Ah)
- COUNTER\_BDR\_REG1 (0Bh) and COUNTER\_BDR\_REG2 (0Ch)
- INT1\_CTRL (0Dh) and INT2\_CTRL (0Eh)
- CTRL1\_XL (10h) through CTRL10\_C (19h)
- FIFO\_STATUS1 (3Ah) and FIFO\_STATUS2 (3Bh)
- TAP\_CFG0 (56h) through MD2\_CFG (5Fh)
- I3C\_BUS\_AVB (62h)
- X\_OFS\_USR (73h), Y\_OFS\_USR (74h), and Z\_OFS\_USR (75h)

The SW\_RESET procedure can take 50  $\mu$ s. The status of reset is signaled by the status of the SW\_RESET bit of the CTRL3\_C register. Once the reset is completed, this bit is automatically set low.

The boot status signal is driven to the INT1 interrupt pin by setting the INT1\_BOOT bit of the INT1\_CTRL register to 1. This signal is set high while the boot is running and it is set low again at the end of the boot procedure.

The reboot flow is as follows:

1. Set both accelerometer and gyroscope in power-down mode.
2. Set the INT1\_BOOT bit of the INT1\_CTRL register to 1 [optional].
3. Set the BOOT bit of the CTRL3\_C register to 1.
4. Monitor the reboot status. There are three possibilities:
  - a. Wait 10 ms.
  - b. Monitor the INT1 pin until it returns to 0 (step 2 is mandatory in this case).
  - c. Poll the BOOT bit of CTRL3\_C until it returns to 0.

Reset flow is as follows:

1. Set both the accelerometer and gyroscope in power-down mode.
2. Set the SW\_RESET bit of CTRL3\_C to 1.
3. Monitor the software reset status. There are two possibilities:
  - a. Wait 50  $\mu$ s.
  - b. Poll the SW\_RESET bit of CTRL3\_C until it returns to 0.

In order to avoid conflicts, the reboot and the software reset must not be executed at the same time (do not set to 1 at the same time both the BOOT bit and the SW\_RESET bit of the CTRL3\_C register). The above flows must be performed serially.

## 6 Embedded functions

The device implements in hardware many embedded functions; specific IP blocks with negligible power consumption and high-level performance implement the following functions:

- Pedometer functions (step detector and step counter)
- Significant motion
- Relative tilt
- Timestamp

### 6.1 Pedometer functions: step detector and step counter

A specific IP block is dedicated to pedometer functions: the step detector and the step counter.

Pedometer functions work at 26 Hz and are based on the accelerometer sensor only; consequently, the accelerometer ODR must be set at a value of 26 Hz or higher when using them.

In order to enable the pedometer functions, it is necessary to set the PEDO\_EN bit of the EMB\_FUNC\_EN\_A embedded functions register to 1. The algorithm internal state can be reinitialized by asserting the STEP\_DET\_INIT bit of the EMB\_FUNC\_INIT\_A embedded functions register.

The step counter indicates the number of steps detected by the step detector algorithm after the pedometer function has been enabled. The step count is given by the concatenation of the STEP\_COUNTER\_H and STEP\_COUNTER\_L embedded functions registers and it is represented as a 16-bit unsigned number.

The step count is not reset to zero when the accelerometer is configured in power-down or the pedometer is disabled or reinitialized; it can be reset to zero by setting the PEDO\_RST\_STEP bit of the EMB\_FUNC\_SRC register to 1. After the counter resets, the PEDO\_RST\_STEP bit is automatically set back to 0.

The step detector functionality generates an interrupt every time a step is recognized. In the case of interspersed step sessions, 10 consecutive steps (debounce steps) have to be detected before the first interrupt generation in order to avoid false step detections (debounce functionality).

The number of debounce steps can be modified through the DEB\_STEP[7:0] bits of the PEDO\_DEB\_STEPS\_CONF register in the embedded advanced features registers: basically, it corresponds to the minimum number of steps to be detected before the first step counter increment. 1 LSB of this field corresponds to 1 step, the default value is 10 steps. The debounce functionality restarts after around 1.2 s of device inactivity.

Two additional blocks can be activated to perform real-time recognition of specific conditions and therefore adapt the pedometer operation. They can be activated by setting the PEDO\_ADV\_EN bit to 1 in the EMB\_FUNC\_EN\_B register:

- False-positive rejection block, which can be enabled by setting the FP\_REJECTION\_EN bit of the PEDO\_CMD\_REG embedded advanced features registers to 1. This block performs real-time recognition of walking activity based on statistical data and inhibits the step counter if no walking activity is detected.
- Advanced detection block, which can be enabled by setting the AD\_DET\_EN bit of the PEDO\_CMD\_REG embedded advanced features registers to 1. This block recognizes a low-energy gait (for example, the device held in a hand and very slow step cadence) and automatically switches the internal configurations in order to better adapt the pedometer algorithm to this condition. This block works together with the false-positive rejection block, then also the FP\_REJECTION\_EN bit must be set to 1 as well.

STMicroelectronics provides the tools to generate specific pedometer configurations starting from a set of data-logs with a reference number of steps (Unico GUI on [www.st.com](http://www.st.com)).

The EMB\_FUNC\_SRC embedded functions register contains some read-only bits related to the pedometer function state.

**Table 34. EMB\_FUNC\_SRC embedded functions register**

b7	b6	b5	b4	b3	b2	b1	b0
PEDO_RST_STEP	0	STEP_DETECTED	STEP_COUNT_DELTA_IA	STEP_OVERFLOW	STEP_COUNTER_BIT_SET	0	0

- PEDO\_RST\_STEP: pedometer step counter reset. It can be set to 1 to reset the number of steps counted. It is automatically set back to 0 after the counter reset.
- STEP\_DETECTED: step detector event status. It signals a step detection (after the debounce).

- STEP\_COUNT\_DELTA\_IA: instead of generating an interrupt signal every time a step is recognized, it is possible to generate it if at least one step is detected within a certain time period, defined by setting a value different from 00h in the PEDO\_SC\_DELTAT\_H and PEDO\_SC\_DELTAT\_L embedded advanced features (page 1) registers. It is necessary to set the TIMESTAMP\_EN bit of the CTRL10\_C register to 1 (to enable the timer). The time period is given by the concatenation of PEDO\_SC\_DELTAT\_H and PEDO\_SC\_DELTAT\_L and it is represented as a 16-bit unsigned value with a resolution of 6.4 ms. STEP\_COUNT\_DELTA\_IA goes high (at the end of each time period) if at least one step is counted (after the debounce) within the programmed time period. If the time period is not programmed (PEDO\_SC\_DELTAT = 0), this bit is kept to 0.
- STEP\_OVERFLOW: overflow signal that goes high when the step counter value reaches  $2^{16}$ .
- STEPCOUNTER\_BIT\_SET: step counter event status. It signals an increase in the step counter (after the debounce). If a timer period is programmed in the PEDO\_SC\_DELTAT\_H and PEDO\_SC\_DELTAT\_L embedded advanced features (page 1) registers, this bit is kept to 0.

The step detection interrupt signal can also be checked by reading the IS\_STEP\_DET bit of the EMB\_FUNC\_STATUS embedded functions register or the IS\_STEP\_DET bit of the EMB\_FUNC\_STATUS\_MAINPAGE register.

The IS\_STEP\_DET bit can have different behaviors, as summarized in the table below, depending on the value of the PEDO\_SC\_DELTAT bit in the EMB\_FUNC\_SRC embedded functions register and the CARRY\_COUNT\_EN bit in the PEDO\_CMD\_REG embedded advanced features register.

**Table 35. IS\_STEP\_DET configuration**

PEDO_SC_DELTAT	CARRY_COUNT_EN	IS_STEP_DET
PEDO_SC_DELTAT = 0	0	STEPS COUNTER_BIT_SET
PEDO_SC_DELTAT > 0	0	STEP_COUNT_DELTA_IA
PEDO_SC_DELTAT $\geq$ 0	1	STEP_OVERFLOW

The IS\_STEP\_DET interrupt signal can be driven to the INT1/INT2 interrupt pin by setting the INT1\_STEP\_DETECTOR/INT2\_STEP\_DETECTOR bit of the EMB\_FUNC\_INT1/EMB\_FUNC\_INT2 register to 1. In this case it is mandatory to also enable routing the embedded functions event to the INT1/INT2 interrupt pin by setting the INT1\_EMB\_FUNC/INT2\_EMB\_FUNC bit of the MD1\_CFG/MD2\_CFG register.

The behavior of the interrupt signal is pulsed by default. The duration of the pulse is equal to 1/26 Hz. Latched mode can be enabled by setting the EMB\_FUNC\_LIR bit of the PAGE\_RW embedded functions register to 1. In this case, the interrupt signal is reset by reading the IS\_STEP\_DET bit of the EMB\_FUNC\_STATUS embedded functions register or the IS\_STEP\_DET bit of the EMB\_FUNC\_STATUS\_MAINPAGE register.

The step counter can be batched in FIFO (see [Section 8 First-in, first out \(FIFO\) buffer](#) for details).

A basic software routine that shows how to enable step counter detection is as follows:

1. Write 80h to FUNC\_CFG\_ACCESS // Enable access to embedded functions registers
2. Write 40h to PAGE\_RW // Select write operation mode
3. Write 11h to PAGE\_SEL // Select page 1
4. Write 83h to PAGE\_ADDR // Set embedded advanced features register to be written (PEDO\_CMD\_REG)
5. Write 04h to PAGE\_VALUE // Enable false positive rejection block (FP\_REJECTION\_EN = 1)
6. Write 00h to PAGE\_RW // Write operation mode disabled
7. Write 08h to EMB\_FUNC\_EN\_A // Enable pedometer
8. Write 10h to EMB\_FUNC\_EN\_B // Enable pedometer false-positive rejection block and advanced detection feature block (PEDO\_ADV\_EN = 1)
9. Write 08h to EMB\_FUNC\_INT1 // Step detection interrupt driven to INT1 pin
10. Write 00h to FUNC\_CFG\_ACCESS // Disable access to embedded functions registers
11. Write 02h to MD1\_CFG // Enable routing the embedded functions interrupt
12. Write 28h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 26 Hz, FS\_XL = ±8 g

## 6.2

## Significant motion

The significant motion function generates an interrupt when a 'significant motion', that could be due to a change in user location, is detected. In the device, this function has been implemented in hardware using only the accelerometer.

The significant motion functionality can be used in location-based applications in order to receive a notification indicating when the user is changing location.

The significant motion function works at 26 Hz, so the accelerometer ODR must be set at a value of 26 Hz or higher. It generates an interrupt when the difference between the number of steps counted from its initialization/reset is higher than 10 steps. After an interrupt generation, the algorithm internal state is reset.

In order to enable significant motion detection, it is necessary to set the SIGN\_MOTION\_EN bit of the EMB\_FUNC\_EN\_A embedded functions register to 1. The algorithm can be reinitialized by asserting the SIG\_MOT\_INIT bit of the EMB\_FUNC\_INIT\_A embedded functions register.

*Note:*

*The significant motion feature automatically enables the internal step counter algorithm.*

The significant motion interrupt signal can be driven to the INT1/INT2 interrupt pin by setting the INT1\_SIG\_MOT/INT2\_SIG\_MOT bit of the EMB\_FUNC\_INT1/EMB\_FUNC\_INT2 register to 1. In this case it is mandatory to also enable routing the embedded functions event to the INT1/INT2 interrupt pin by setting the INT1\_EMB\_FUNC/INT2\_EMB\_FUNC bit of the MD1\_CFG/MD2\_CFG register.

The significant motion interrupt signal can also be checked by reading the IS\_SIGMOT bit of the EMB\_FUNC\_STATUS embedded functions register or the IS\_SIGMOT bit of the EMB\_FUNC\_STATUS\_MAINPAGE register.

The behavior of the significant motion interrupt signal is pulsed by default. The duration of the pulse is equal to 1/26 Hz. Latched mode can be enabled by setting the EMB\_FUNC\_LIR bit of the PAGE\_RW embedded functions register to 1: in this case, the interrupt signal is reset by reading the IS\_SIGMOT bit of the EMB\_FUNC\_STATUS embedded functions register or the IS\_SIGMOT bit of the EMB\_FUNC\_STATUS\_MAINPAGE register.

A basic software routine that shows how to enable significant motion detection is as follows:

1. Write 80h to FUNC\_CFG\_ACCESS // Enable access to embedded functions registers
2. Write 20h to EMB\_FUNC\_EN\_A // Enable significant motion detection
3. Write 20h to EMB\_FUNC\_INT1 // Significant motion interrupt driven to INT1 pin
4. Write 80h to PAGE\_RW // Enable latched mode for embedded functions
5. Write 00h to FUNC\_CFG\_ACCESS // Disable access to embedded functions registers
6. Write 02h to MD1\_CFG // Enable routing the embedded functions interrupt
7. Write 20h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 26 Hz, FS\_XL = ±4 g

## 6.3 Relative tilt

The tilt function allows detecting when an activity change occurs (for example, when the phone is in a front pocket and the user goes from sitting to standing or from standing to sitting). In the device, it has been implemented in the hardware using only the accelerometer.

The tilt function works at 26 Hz, so the accelerometer ODR must be set at a value of 26 Hz or higher.


In order to enable the relative tilt detection function, it is necessary to set the TILT\_EN bit of the EMB\_FUNC\_EN\_A embedded functions register to 1. The algorithm can be reinitialized by asserting the TILT\_INIT bit of the EMB\_FUNC\_INIT\_A embedded functions register.

If the device is configured for tilt event detection, an interrupt is generated when the device is tilted by an angle greater than 35 degrees from the start position. The start position is defined as the position of the device when the tilt detection is enabled/re-initialized or the position of the device when the last tilt interrupt was generated.

After this function is enabled or reinitialized, the tilt logic typically requires a 2-second settling time before being able to generate the first interrupt.

In the example shown in [Figure 19. Tilt example](#), tilt detection is enabled when the device orientation corresponds to "start position #0". The first interrupt is generated if the device is rotated by an angle greater than 35 degrees from the start position. After the first tilt detection interrupt is generated, the new start position (#1) corresponds to the position of the device when the previous interrupt was generated (final position #0), and the next interrupt signal is generated as soon as the device is tilted by an angle greater than 35 degrees, entering the blue zone surrounding the start position #1.

**Figure 19. Tilt example**

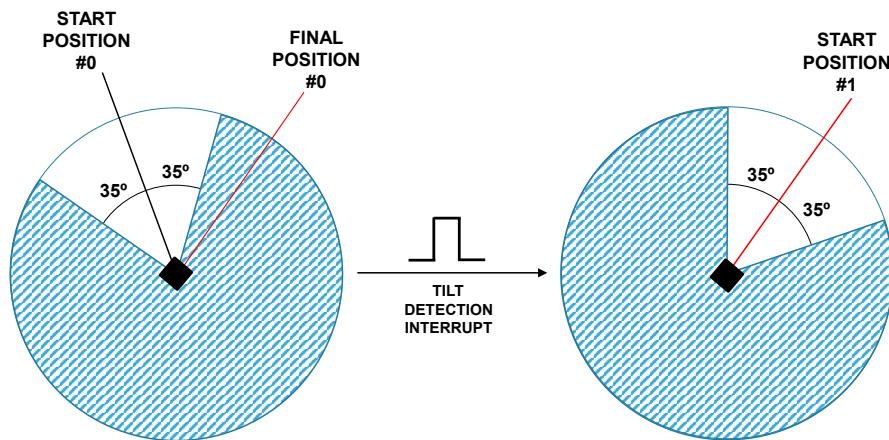

The tilt interrupt signal can be driven to the INT1/INT2 interrupt pin by setting the INT1\_TILT/INT2\_TILT bit of the EMB\_FUNC\_INT1/EMB\_FUNC\_INT2 register to 1. In this case, it is mandatory to also enable routing the embedded functions event to the INT1/INT2 interrupt pin by setting the INT1\_EMB\_FUNC/INT2\_EMB\_FUNC bit of MD1\_CFG/MD2\_CFG register.

The tilt interrupt signal can also be checked by reading the IS\_TILT bit of the EMB\_FUNC\_STATUS embedded functions register or the IS\_TILT bit of the EMB\_FUNC\_STATUS\_MAINPAGE register.

The behavior of the tilt interrupt signal is pulsed by default. The duration of the pulse is equal to 1/26 Hz. Latched mode can be enabled by setting the EMB\_FUNC\_LIR bit of the PAGE\_RW embedded functions register to 1. In this case, the interrupt signal is reset by reading the IS\_TILT bit of the EMB\_FUNC\_STATUS embedded functions register or the IS\_TILT bit of the EMB\_FUNC\_STATUS\_MAINPAGE register.

A basic software routine that shows how to enable the tilt detection function is as follows:

1. Write 80h to FUNC\_CFG\_ACCESS // Enable access to embedded functions registers
2. Write 10h to EMB\_FUNC\_EN\_A // Enable tilt detection
3. Write 10h to EMB\_FUNC\_INT1 // Tilt interrupt driven to INT1 pin
4. Write 80h to PAGE\_RW // Enable latched mode for embedded functions
5. Write 00h to FUNC\_CFG\_ACCESS // Disable access to embedded functions registers
6. Write 02h to MD1\_CFG // Enable routing the embedded functions interrupt
7. Write 20h to CTRL1\_XL // Turn on the accelerometer  
// ODR\_XL = 26 Hz, FS\_XL = ±4 g

## 6.4 Timestamp

Together with sensor data the device can provide timestamp information.

To enable this functionality, the **TIMESTAMP\_EN** bit of the **CTRL10\_C** register has to be set to 1. The time step count is given by the concatenation of the **TIMESTAMP3** & **TIMESTAMP2** & **TIMESTAMP1** & **TIMESTAMP0** registers and is represented as a 32-bit unsigned number.

The nominal timestamp resolution is 25  $\mu$ s. It is possible to get the actual timestamp resolution value through the **FREQ\_FINE[7:0]** bits of the **INTERNAL\_FREQ\_FINE** register, which contains the difference in percentage of the actual ODR (and timestamp rate) with respect to the nominal value.

$$t_{actual}[s] = \frac{1}{40000 \cdot (1 + 0.0015 \cdot FREQ\_FINE)}$$

Similarly, it is possible to get the actual output data rate by using the following formula:

$$ODR_{actual}[Hz] = \frac{6667 + 0.0015 \cdot FREQ\_FINE \cdot 6667}{ODR_{coeff}}$$

where the **ODR<sub>coeff</sub>** values are indicated in the table below.

**Table 36. ODR<sub>coeff</sub> values**

Selected ODR [Hz]	ODR <sub>coeff</sub>
12.5	512
26	256
52	128
104	64
208	32
417	16
833	8
1667	4
3333	2
6667	1

If both the accelerometer and the gyroscope are in power-down mode, the timestamp counter does not work and the timestamp value is frozen at the last value.

When the maximum value 4294967295 LSB (equal to FFFFFFFFh) is reached corresponding to approximately 30 hours, the counter is automatically reset to 00000000h and continues to count. The timer count can be reset to zero at any time by writing the reset value AAh in the **TIMESTAMP2** register.

The **TIMESTAMP\_ENDCOUNT** bit of the **ALL\_INT\_SRC** goes high 6.4 ms before the occurrence of a timestamp overrun condition. This flag is reset when the **ALL\_INT\_SRC** register is read. It is also possible to route this signal to the **INT2** pin (75  $\mu$ s duration pulse) by setting the **INT2\_TIMESTAMP** bit of **MD2\_CFG** to 1.

The timestamp can be batched in FIFO (see [Section 8 First-in, first out \(FIFO\) buffer](#) for details).

## 7 Mode 2 - sensor hub mode

The hardware flexibility of the LSM6DSO32 allows connecting the pins with different mode connections to external sensors to expand functionalities such as adding a sensor hub. When sensor hub mode (mode 2) is enabled, both the primary I<sup>2</sup>C/MIPI I3C<sup>SM</sup>/SPI (3- and 4-wire) slave interface and the I<sup>2</sup>C master interface for the connection of external sensors are available. Mode 2 connection mode is described in detail in the following paragraphs.

### 7.1 Sensor hub mode description

In sensor hub mode (mode 2), up to four external sensors can be connected to the I<sup>2</sup>C master interface of the device. The sensor hub trigger signal can be synchronized with the accelerometer/gyroscope data-ready signal (up to 104 Hz). In this configuration, the sensor hub ODR can be configured through the SHUB\_ODR[1:0] bits of the SLV0\_CONFIG register. Alternatively, an external signal connected to the INT2 pin can be used as the sensor hub trigger. In this second case, the maximum ODR supported for external sensors depends on the number of read / write operations that can be executed between two consecutive trigger signals.


On the sensor hub trigger signal, all the write and read I<sup>2</sup>C operations configured through the registers SLVx\_ADD, SLVx\_SUBADD, SLVx\_CONFIG and DATAWRITE\_SLV0 are performed sequentially from external sensor 0 to external sensor 3 (depending on the external sensors enabled through the AUX\_SENS\_ON[1:0] field in the MASTER\_CONFIG register).

External sensor data can also be stored in FIFO (see [Section 8 First-in, first out \(FIFO\) buffer](#) for details).

If both the accelerometer and the gyroscope are in power-down mode, the sensor hub does not work.

All external sensors have to be connected in parallel to the SDx/SCx pins of the device, as illustrated in [Figure 20. External sensor connections in mode 2](#) for a single external sensor. External pull-up resistors and the external trigger signal connection are optional and depend on the configuration of the registers.

**Figure 20. External sensor connections in mode 2**

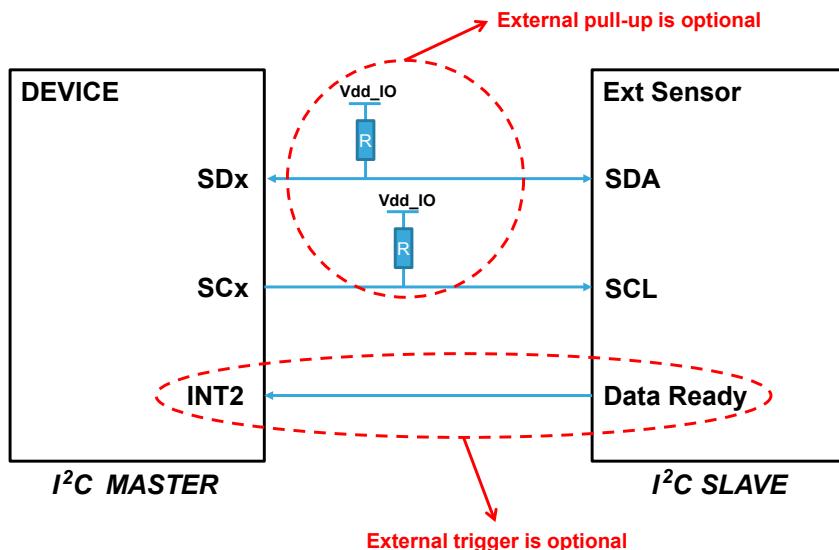

## 7.2

## Sensor hub mode registers

The sensor hub configuration registers and output registers are accessible when the bit SHUB\_REG\_ACCESS of the FUNC\_CFG\_ACCESS register is set to 1. After setting the SHUB\_REG\_ACCESS bit to 1, only sensor hub registers are available. In order to guarantee the correct register mapping for other operations, after the sensor hub configuration or output data reading, the SHUB\_REG\_ACCESS bit of the FUNC\_CFG\_ACCESS register must be set to 0.

The MASTER\_CONFIG register has to be used for the configuration of the I<sup>2</sup>C master interface.

A set of registers SLVx\_ADD, SLVx\_SUBADD, SLVx\_CONFIG is dedicated to the configuration of the four slave interfaces associated to the four connectable external sensors. An additional register, DATAWRITE\_SLV0, is associated to slave #0 only. It has to be used to implement the write operations.

Finally, 18 registers (from SENSOR\_HUB\_1 to SENSOR\_HUB\_18) are available to store the data read from the external sensors.

### 7.2.1

### MASTER\_CONFIG (14h)

This register is used to configure the I<sup>2</sup>C master interface.

Table 37. MASTER\_CONFIG register

b7	b6	b5	b4	b3	b2	b1	b0
RST_MASTER_REGS	WRITE_ONCE	START_CONFIG	PASS_THROUGH_MODE	SHUB_PU_EN	MASTER_ON	AUX_SENS_ON1	AUX_SENS_ON0

- RST\_MASTER\_REGS bit is used to reset the I<sup>2</sup>C master interface, configuration, and output registers. It must be manually asserted and de-asserted.
- WRITE\_ONCE bit is used to limit the write operations on slave 0 to only one occurrence (avoiding to repeat the same write operation multiple times). If this bit is not asserted, a write operation is triggered at each ODR.

Note: The WRITE\_ONCE bit must be set to 1 if the slave 0 is used for reading.

- START\_CONFIG bit selects the sensor hub trigger signal.
  - When this bit is set to 0, the accelerometer/gyroscope sensor has to be active (not in power-down mode) and the sensor hub trigger signal is the accelerometer/gyroscope data-ready signal, with a frequency defined by the SHUB\_ODR\_[1:0] bits of the SLV0\_CONFIG register (up to 104 Hz).
  - When this bit is set to 1, at least one sensor between the accelerometer and the gyroscope has to be active and the sensor hub trigger signal is the INT2 pin. In fact, when both the MASTER\_ON bit and START\_CONFIG bit are set to 1, the INT2 pin is configured as an input signal. In this case, the INT2 pin has to be connected to the data-ready pin of the external sensor (Figure 20. External sensor connections in mode 2) in order to trigger the read/write operations on the external sensor registers. Sensor hub interrupt from INT2 is ‘high-level triggered’ (not programmable).

Note: In the case of external trigger signal usage (START\_CONFIG=1), if the INT2 pin is connected to the data-ready pin of the external sensor (Figure 20. External sensor connections in mode 2) and the latter is in power-down mode, then no data-ready signal can be generated by the external sensor. For this reason, the initial configuration of the external sensor’s register has to be performed using the internal trigger signal (START\_CONFIG=0). After the external sensor is activated and the data-ready signal is available, the external trigger signal can be used by switching the START\_CONFIG bit to 1.

- PASS\_THROUGH\_MODE bit is used to enable/disable the I<sup>2</sup>C interface pass-through. When this bit is set to 1, the main I<sup>2</sup>C line (for example, connected to an external microcontroller) is short-circuited with the auxiliary one, in order to implement a direct access to the external sensor registers. See Section 7.3 Sensor hub pass-through feature for details.
- SHUB\_PU\_EN bit enables/disables the internal pull-up on the I<sup>2</sup>C master line. When this bit is set to 0, the internal pull-up is disabled and the external pull-up resistors on the SDx/SCx pins are required, as shown in Figure 20. External sensor connections in mode 2. When this bit is set to 1, the internal pull-up is enabled (regardless of the configuration of the MASTER\_ON bit) and the external pull-up resistors on the SDx/SCx pins are not required.
- MASTER\_ON bit has to be set to 1 to enable the auxiliary I<sup>2</sup>C master of the device (sensor hub mode). In order to change the sensor hub configuration at runtime or when setting the accelerometer and gyroscope sensor in power-down mode, or when applying the software reset procedure, the I<sup>2</sup>C master must be disabled, followed by a 300 µs wait. The following procedure must be implemented:

1. Turn off the I<sup>2</sup>C master by setting MASTER\_ON = 0.
  2. Wait 300  $\mu$ s.
  3. Change the configuration of the sensor hub registers or set the accelerometer/gyroscope in power-down mode or apply the software reset procedure.
- AUX\_SENS\_ON[1:0] bits have to be set accordingly to the number of slaves to be used. I<sup>2</sup>C transactions are performed sequentially from slave 0 to slave 3. The possible values are:
    - 00: one slave
    - 01: two slaves
    - 10: three slaves
    - 11: four slaves

### 7.2.2 STATUS\_MASTER (22h)

The STATUS\_MASTER register, similarly to the other sensor hub configurations and output registers, can be read only after setting the SHUB\_REG\_ACCESS bit of the FUNC\_CFG\_ACCESS register to 1. The STATUS\_MASTER register is also mapped to the STATUS\_MASTER\_MAINPAGE register, which can be directly read without enabling access to the sensor hub registers.

**Table 38. STATUS\_MASTER / STATUS\_MASTER\_MAINPAGE register**

b7	b6	b5	b4	b3	b2	b1	b0
WR_ONCE_DONE	SLAVE3_NACK	SLAVE2_NACK	SLAVE1_NACK	SLAVE0_NACK	0	0	SENS_HUB_ENDOP

- WR\_ONCE\_DONE bit is set to 1 after a write operation performed with the WRITE\_ONCE bit configured to 1 in the MASTER\_CONFIG register. This bit can be polled in order to check if the single write transaction has been completed.
- SLAVE<sub>x</sub>\_NACK bits are set to 1 if a “not acknowledge” event happens during the communication with the corresponding slave x.
- SENS\_HUB\_ENDOP bit reports the status of the I<sup>2</sup>C master: during the idle state of the I<sup>2</sup>C master, this bit is equal to 1. It goes to 0 during the I<sup>2</sup>C master read/write operations. When a sensor hub routine is completed, this bit automatically goes to 1 and the external sensor data are available to be read from the SENSOR\_HUB\_x registers (depending on the configuration of the SLVx\_ADD, SLVx\_SUBADD, SLVx\_CONFIG registers). Information about the status of the I<sup>2</sup>C master can be driven to the INT1 interrupt pin by setting the INT1\_SHUB bit of the MD1\_CFG register to 1. This signal goes high on a rising edge of the SENS\_HUB\_ENDOP signal and it is cleared only if the STATUS\_MASTER / STATUS\_MASTER\_MAINPAGE register is read.

## 7.2.3

**SLV0\_ADD (15h), SLV0\_SUBADD (16h), SLV0\_CONFIG (17h)**

The sensor hub registers used to configure the I<sup>2</sup>C slave interface associated to the first external sensor are described hereafter.

**Table 39. SLV0\_ADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave0_add6	slave0_add5	slave0_add4	slave0_add3	slave0_add2	slave0_add1	slave0_add0	rw_0

- slave0\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the first external sensor.
- rw\_0 bit configures the read/write operation to be performed on the first external sensor (0: write operation; 1: read operation). The read/write operation is executed when the next sensor hub trigger event occurs.

**Table 40. SLV0\_SUBADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave0_reg7	slave0_reg6	slave0_reg5	slave0_reg4	slave0_reg3	slave0_reg2	slave0_reg1	slave0_reg0

- slave0\_reg[7:0] bits are used to indicate the address of the register of the first external sensor to be written (if the rw\_0 bit of the SLV0\_ADD register is set to 0) or the address of the first register to be read (if the rw\_0 bit is set to 1).

**Table 41. SLV0\_CONFIG register**

b7	b6	b5	b4	b3	b2	b1	b0
SHUB_ODR_1	SHUB_ODR_0	0	0	BATCH_EXT_SENS_0_EN	Slave0_numop2	Slave0_numop1	Slave0_numop0

- SHUB\_ODR\_[1:0] bits are used to configure the sensor hub output data rate when using the internal trigger (accelerometer/gyroscope data-ready signals). The sensor hub output data rate can be configured to four possible values, limited by the ODR of the accelerometer and gyroscope sensors:
  - 00: 104 Hz
  - 01: 52 Hz
  - 10: 26 Hz
  - 11: 12.5 Hz

The maximum allowed value for the SHUB\_ODR\_[1:0] bits corresponds to the maximum ODR between the accelerometer and gyroscope sensors.

- BATCH\_EXT\_SENS\_0\_EN bit is used to enable batching the external sensor associated to slave0 in FIFO.
- Slave0\_numop[2:0] bits are dedicated to defining the number of consecutive read operations to be performed on the first external sensor starting from the register address indicated in the SLV0\_SUBADD register.

## 7.2.4

**SLV1\_ADD (18h), SLV1\_SUBADD (19h), SLV1\_CONFIG (1Ah)**

The sensor hub registers used to configure the I<sup>2</sup>C slave interface associated to the second external sensor are described hereafter.

**Table 42. SLV1\_ADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave1_add6	slave1_add5	slave1_add4	slave1_add3	slave1_add2	slave1_add1	slave1_add0	r_1

- slave1\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the second external sensor.
- r\_1 bit enables/disables the read operation to be performed on the second external sensor (0: read operation disabled; 1: read operation enabled). The read operation is executed when the next sensor hub trigger event occurs.

**Table 43. SLV1\_SUBADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave1_reg7	slave1_reg6	slave1_reg5	slave1_reg4	slave1_reg3	slave1_reg2	slave1_reg1	slave1_reg0

- Slave1\_reg[7:0] bits are used to indicate the address of the register of the second external sensor to be read when the r\_1 bit of the SLV1\_ADD register is set to 1.

**Table 44. SLV1\_CONFIG register**

b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	BATCH_EXT_SENS_1_EN	Slave1_numop2	Slave1_numop1	Slave1_numop0

- BATCH\_EXT\_SENS\_1\_EN bit is used to enable batching the external sensor associated to slave1 in FIFO.
- Slave1\_numop[2:0] bits are dedicated to defining the number of consecutive read operations to be performed on the second external sensor starting from the register address indicated in the SLV1\_SUBADD register.

## 7.2.5

### SLV2\_ADD (1Bh), SLV2\_SUBADD (1Ch), SLV2\_CONFIG (1Dh)

The sensor hub registers used to configure the I<sup>2</sup>C slave interface associated to the third external sensor are described hereafter.

**Table 45. SLV2\_ADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave2_add6	slave2_add5	slave2_add4	slave2_add3	slave2_add2	slave2_add1	slave2_add0	r_2

- slave2\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the third external sensor.
- r\_2 bit enables/disables the read operation to be performed on the third external sensor (0: read operation disabled; 1: read operation enabled). The read operation is executed when the next sensor hub trigger event occurs.

**Table 46. SLV2\_SUBADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave2_reg7	slave2_reg6	slave2_reg5	slave2_reg4	slave2_reg3	slave2_reg2	slave2_reg1	slave2_reg0

- slave2\_reg[7:0] bits are used to indicate the address of the register of the third external sensor to be read when the r\_2 bit of the SLV2\_ADD register is set to 1.

**Table 47. SLV2\_CONFIG register**

b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	BATCH_EXT_SENS_2_EN	Slave2_numop2	Slave2_numop1	Slave2_numop0

- BATCH\_EXT\_SENS\_2\_EN bit is used to enable batching the external sensor associated to slave2 in FIFO.
- Slave2\_numop[2:0] bits are dedicated to defining the number of consecutive read operations to be performed on the third external sensor starting from the register address indicated in the SLV2\_SUBADD register.

### 7.2.6 SLV3\_ADD (1Eh), SLV3\_SUBADD (1Fh), SLV3\_CONFIG (20h)

The sensor hub registers used to configure the I<sup>2</sup>C slave interface associated to the fourth external sensor are described hereafter.

**Table 48. SLV3\_ADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave3_add6	slave3_add5	slave3_add4	slave3_add3	slave3_add2	slave3_add1	slave3_add0	r_3

- slave3\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the fourth external sensor.
- r\_3 bit enables/disables the read operation to be performed on the fourth external sensor (0: read operation disabled; 1: read operation enabled). The read operation is executed when the next sensor hub trigger event occurs.

**Table 49. SLV3\_SUBADD register**

b7	b6	b5	b4	b3	b2	b1	b0
slave3_reg7	slave3_reg6	slave3_reg5	slave3_reg4	slave3_reg3	slave3_reg2	slave3_reg1	slave3_reg0

- slave3\_reg[7:0] bits are used to indicate the address of the register of the fourth external sensor to be read when the r\_3 bit of the SLV3\_ADD register is set to 1.

**Table 50. SLV3\_CONFIG register**

b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	BATCH_EXT_SENS_3_EN	Slave3_numop2	Slave3_numop1	Slave3_numop0

- BATCH\_EXT\_SENS\_3\_EN bit is used to enable batching the external sensor associated to slave3 in FIFO.
- Slave3\_numop[2:0] bits are dedicated to defining the number of consecutive read operations to be performed on the fourth external sensor starting from the register address indicated in the SLV3\_SUBADD register.

### 7.2.7 DATAWRITE\_SLV0 (21h)

**Table 51. DATAWRITE\_SLV0 register**

b7	b6	b5	b4	b3	b2	b1	b0
Slave0_dataw7	Slave0_dataw6	Slave0_dataw5	Slave0_dataw4	Slave0_dataw3	Slave0_dataw2	Slave0_dataw1	Slave0_dataw0

- Slave0\_dataw[7:0] bits are dedicated, when the rw\_0 bit of the SLV0\_ADD register is set to 0 (write operation), to indicate the data to be written to the first external sensor at the address specified in the SLV0\_SUBADD register.

## 7.2.8 SENSOR\_HUB\_x registers

Once the auxiliary I<sup>2</sup>C master is enabled, for each of the external sensors it reads a number of registers equal to the value of the Slavex\_numop (x = 0, 1, 2, 3) field, starting from the register address specified in the SLVx\_SUBADD (x = 0, 1, 2, 3) register. The number of external sensors to be managed is specified in the AUX\_SENS\_ON[1:0] bits of the MASTER\_CONFIG register.

Read data are consecutively stored (in the same order they are read) in the device registers starting from the SENSOR\_HUB\_1 register, as in the example in [Figure 21. SENSOR\\_HUB\\_X allocation example](#); 18 registers, from SENSOR\_HUB\_1 to SENSOR\_HUB\_18, are available to store the data read from the external sensors.

[Figure 21. SENSOR\\_HUB\\_X allocation example](#)


Sensor #1	{ SLV0_SUBADD (16h) = 28h SLV0_CONFIG (17h) – Slave0_numop[2:0] = 3	SENSOR_HUB_1 SENSOR_HUB_2 SENSOR_HUB_3	Value of reg 28h Value of reg 29h Value of reg 2Ah	Sensor #1
Sensor #2	{ SLV1_SUBADD (19h) = 00h SLV1_CONFIG (1Ah) – Slave1_numop[2:0] = 6	SENSOR_HUB_4 SENSOR_HUB_5 SENSOR_HUB_6 SENSOR_HUB_7 SENSOR_HUB_8 SENSOR_HUB_9	Value of reg 00h Value of reg 01h Value of reg 02h Value of reg 03h Value of reg 04h Value of reg 05h	Sensor #2
Sensor #3	{ SLV2_SUBADD (1Ch) = 20h SLV2_CONFIG (1Dh) – Slave2_numop[2:0] = 4	SENSOR_HUB_10 SENSOR_HUB_11 SENSOR_HUB_12 SENSOR_HUB_13	Value of reg 20h Value of reg 21h Value of reg 22h Value of reg 23h	Sensor #3
Sensor #4	{ SLV3_SUBADD (1Fh) = 40h SLV3_CONFIG (20h) – Slave3_numop[2:0] = 5	SENSOR_HUB_14 SENSOR_HUB_15 SENSOR_HUB_16 SENSOR_HUB_17 SENSOR_HUB_18	Value of reg 40h Value of reg 41h Value of reg 42h Value of reg 43h Value of reg 44h	Sensor #4

## 7.3

### Sensor hub pass-through feature

The PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register is used to enable/disable the I<sup>2</sup>C interface pass-through: when it is set to 1, the main I<sup>2</sup>C line (for example, connected to an external microcontroller) is short-circuited with the auxiliary one in order to implement a direct access to the external sensor registers. The pass-through feature for external device configuration can be used only if the I<sup>2</sup>C protocol is used on primary interface. This feature can be used to configure the external sensors.

Figure 22. Pass-through feature

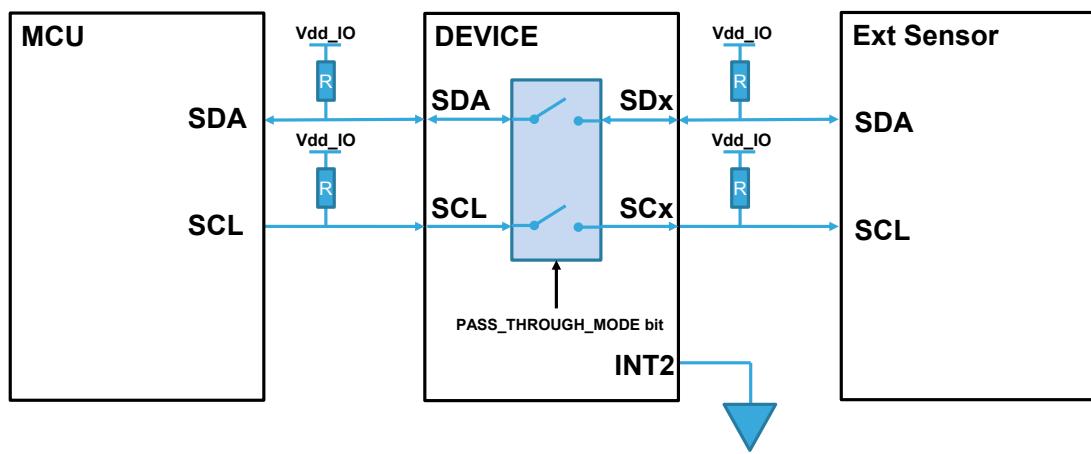

Some limitations must be considered when using the sensor hub and the pass-through feature. Three different scenarios are possible:

1. The sensor hub is used with the START\_CONFIG bit of the MASTER\_CONFIG register set to 0 (internal trigger) and the pass-through feature is not used. There is no limitation on INT2 pin usage.
2. The sensor hub is used with the START\_CONFIG bit of the MASTER\_CONFIG register set to 0 (internal trigger) and the pass-through feature is used. The INT2 pin must be connected to GND. It is not possible to switch to an external trigger configuration (by setting the START\_CONFIG bit to 1) and the INT2 pin cannot be used for the digital interrupts. Specific procedures have to be applied to enable/disable the pass-through feature, which are described in [Section 7.3.1 Enabling the pass-through feature](#) and in [Section 7.3.2 Disabling the pass-through feature](#).
3. The sensor hub is used with the START\_CONFIG bit of the MASTER\_CONFIG register set to 1 (external trigger). The pass-through feature cannot be used. The INT2 pin has to be connected to the data-ready pin of the external sensor (trigger signal) and the procedure below has to be executed to avoid conflicts with the INT2 line:
  - a. Set either the TRIG\_EN or LVL1\_EN or LVL2\_EN bit of the CTRL6\_C register to 1 (to configure the INT2 pin as input pin).
  - b. Configure the external sensors (do not use the pass-through).
  - c. Configure the sensor hub SLAVE<sub>x</sub> registers.
  - d. Set the START\_CONFIG bit of the MASTER\_CONFIG register to 1.
  - e. Set the MASTER\_ON bit of the MASTER\_CONFIG register to 1.
  - f. Reset to 0 the bit in the CTRL6\_C register asserted in step a.

Examples of external sensors configuration without using the pass-through are given in [Section 7.4 Sensor hub mode example](#).

### 7.3.1 Enabling the pass-through feature

When the embedded sensor hub functionality is disabled, the pass-through feature can be enabled at any time by setting the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 1.

When the embedded sensor hub functionality is enabled, a specific procedure has to be followed to enable the pass-through feature in order to prevent I<sup>2</sup>C bus arbitration loss:

1. Set the START\_CONFIG bit of the MASTER\_CONFIG register to 1 in order to disable the sensor hub trigger (an external trigger is enabled, but no trigger can be received on the INT2 pin since it is connected to GND).
2. Wait at least 5 ms (running I<sup>2</sup>C operations will be completed).
3. Set the MASTER\_ON bit of the MASTER\_CONFIG register to 0 in order to disable the embedded sensor hub.
4. Set the START\_CONFIG bit of the MASTER\_CONFIG register to 0 in order to restore the sensor hub trigger.
5. Set the SHUB\_PU\_EN bit of the MASTER\_CONFIG register to 0 in order to disable the I<sup>2</sup>C master pull-up.
6. Set the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 1 in order to enable the pass-through feature.

### 7.3.2 Disabling the pass-through feature

The procedure below has to be used in order to disable the pass-through:

1. Wait for the external microcontroller connected to the main I<sup>2</sup>C line to complete all running I<sup>2</sup>C operations.  
The pass-through must not be disabled in the middle of an I<sup>2</sup>C transaction.
2. Set the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 0.

At this point, the internal I<sup>2</sup>C master pull-up can be restored by setting the SHUB\_PU\_EN bit of the MASTER\_CONFIG register to 1, and the auxiliary I<sup>2</sup>C master can be enabled by setting the MASTER\_ON bit of the MASTER\_CONFIG register to 1.

## 7.4 Sensor hub mode example

The configuration of the external sensors can be performed using the pass-through feature. This feature can be enabled by setting the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 1 and implements a direct access to the external sensor registers, allowing quick configuration.

The code provided below gives basic routines to configure a device in sensor hub mode. Three different snippets of code are provided here, in order to present how to easily perform a one-shot write or read operation, using slave 0, and how to set up slave 0 for continuously reading external sensor data.

The PASS\_THROUGH\_MODE bit is disabled in all these routines, in order to be as generic as possible.

The **one-shot read routine** (using the internal trigger) is described below. For simplicity, the routine uses the accelerometer configured at 104 Hz, without external pull-ups on the I<sup>2</sup>C auxiliary bus.

1. Write 40h to FUNC\_CFG\_ACCESS // Enable access to sensor hub registers
2. Write EXT\_SENS\_ADDR | 01h to SLV0\_ADD // Configure external device address (EXT\_SENS\_ADDR)
3. Write REG to SLV0\_SUBADD // Enable read operation (rw\_0 = 1)
4. Write 01h to SLV0\_CONFIG // Configure address (REG) of the register to be read
5. Write 4Ch to MASTER\_CONFIG // Read one byte, SHUB\_ODR = 104 Hz
6. Write 4Ch to MASTER\_CONFIG // WRITE\_ONCE is mandatory for read
7. Write 00h to FUNC\_CFG\_ACCESS // I<sup>2</sup>C master enabled, using slave 0 only
8. Write 00h to FUNC\_CFG\_ACCESS // I<sup>2</sup>C pull-ups enabled on SDx and SCx
9. Write 00h to FUNC\_CFG\_ACCESS // Disable access to sensor hub registers
10. Read OUTX\_H\_A register // Clear accelerometer data-ready XLDA
11. Poll STATUS\_REG, until XLDA = 1 // Wait for sensor hub trigger
12. Poll STATUS\_MASTER\_MAINPAGE, until SENS\_HUB\_ENDOP = 1 // Wait for sensor hub read transaction
13. Write 40h to FUNC\_CFG\_ACCESS // Enable access to sensor hub registers
14. Write 08h to MASTER\_CONFIG // I<sup>2</sup>C master disable

12. Wait 300 µs
13. Read SENSOR\_HUB\_1 register // Retrieve the output of the read operation
14. Write 00h to FUNC\_CFG\_ACCESS // Disable access to sensor hub registers

The one-shot routine can be easily changed to set up the device for **continuous reading** of external sensor data:

1. Write 40h to FUNC\_CFG\_ACCESS // Enable access to sensor hub registers
2. Write EXT\_SENS\_ADDR | 01h to SLV0\_ADD // Configure external device address (EXT\_SENS\_ADDR)
3. Write REG to SLV0\_SUBADD // Enable read operation (rw\_0 = 1)
4. Write 0xh to SLV0\_CONFIG // Configure address (REG) of the register to be read
5. Write 0xh to SLV0\_CONFIG // Read x bytes (up to six), SHUB\_ODR = 104 Hz
6. Write 4Ch to MASTER\_CONFIG // WRITE\_ONCE is mandatory for read
7. Write 4Ch to MASTER\_CONFIG // I<sup>2</sup>C master enabled, using slave 0 only
8. Write 4Ch to MASTER\_CONFIG // I<sup>2</sup>C pull-ups enabled on SDx and SCx
9. Write 00h to FUNC\_CFG\_ACCESS // Disable access to sensor hub registers

After the execution of step 6, external sensor data are available to be read in the sensor hub output registers.

The **one-shot write routine** (using the internal trigger) is described below. For simplicity, the routine uses the accelerometer configured at 104 Hz, without external pull-ups on the I<sup>2</sup>C auxiliary bus.

1. Write 40h to FUNC\_CFG\_ACCESS // Enable access to sensor hub registers
2. Write EXT\_SENS\_ADDR to SLV0\_ADD // Configure external device address (EXT\_SENS\_ADDR)
3. Write REG to SLV0\_SUBADD // Enable write operation (rw\_0 = 0)
4. Write 00h to SLV0\_CONFIG // Configure address (REG) of the register to be written
5. Write VAL to DATAWRITE\_SLV0 // SHUB\_ODR = 104 Hz
6. Write 4Ch to MASTER\_CONFIG // Configure value (VAL) to be written in REG
7. Write 4Ch to MASTER\_CONFIG // WRITE\_ONCE enabled for single write
8. Write 4Ch to MASTER\_CONFIG // I<sup>2</sup>C master enabled, using slave 0 only
9. Write 4Ch to MASTER\_CONFIG // I<sup>2</sup>C pull-ups enabled on SDx and SCx
10. Poll STATUS\_MASTER,  
until WR\_ONCE\_DONE = 1 // Wait for sensor hub write transaction
11. Write 08h to MASTER\_CONFIG // I<sup>2</sup>C master disabled
12. Wait 300 µs
13. Write 00h to FUNC\_CFG\_ACCESS // Disable access to sensor hub registers

The following sequence configures the LIS2MDL external magnetometer sensor (refer to its datasheet for additional details) in continuous-conversion mode at 100 Hz (enabling temperature compensation, BDU, and offset cancellation features) and reads the magnetometer output registers, saving their values in the SENSOR\_HUB\_1 to SENSOR\_HUB\_6 registers.

1. Write 40h to CTRL1\_XL // Turn on the accelerometer (for trigger signal) at 104 Hz
2. Perform **one-shot read** with  
SLV0\_ADD = 3Dh // Check LIS2MDL WHO\_AM\_I register  
SLV0\_SUBADD = 4Fh // LIS2MDL slave address is 3Ch and rw\_0 = 1
3. Perform **one-shot write** with  
SLV0\_ADD = 3Ch // WHO\_AM\_I register address is 4Fh  
SLV0\_SUBADD = 60h // Write LIS2MDL register CFG\_REG\_A (60h) = 8Ch
4. Perform **one-shot read** with  
SLV0\_ADD = 3Dh // LIS2MDL slave address is 3Ch and rw\_0 = 0
5. Write 40h to FUNC\_CFG\_ACCESS // Enable temperature compensation

```
DATAWRITE_SLV0 = 8Ch          // Enable magnetometer at 100 Hz ODR in continuous mode
4. Perform one-shot write with
   SLV0_ADD = 3Ch             // Write LIS2MDL register CFG_REG_B (61h) = 02h
   SLV0_SUBADD = 61h           // LIS2MDL slave address is 3Ch and rw_0 = 0
   DATAWRITE_SLV0 = 02h         // Enable magnetometer offset-cancellation

5. Perform one-shot write with
   SLV0_ADD = 3Ch             // Write LIS2MDL register CFG_REG_B (62h) = 10h
   SLV0_SUBADD = 62h           // LIS2MDL slave address is 3Ch and rw_0 = 0
   DATAWRITE_SLV0 = 10h         // Enable magnetometer BDU

6. Set up continuous read with
   SLV0_ADD = 3Dh              // LIS2MDL slave address is 3Ch and rw_0 = 1
   SLV0_SUBADD = 68h            // Magnetometer output registers start from 68h
   SLV0_CONFIG = 06h            // Set up a continuous 6-byte read from I2C master interface
```

## 8 First-in, first-out (FIFO) buffer

In order to limit intervention by the host processor and facilitate postprocessing data for event recognition, the LSM6DSO32 embeds a 3 KB (up to 9 KB with the compression feature enabled) first-in, first-out buffer (FIFO).

The FIFO can be configured to store the following data:

- Gyroscope sensor data
- Accelerometer sensor data
- Timestamp data
- Temperature sensor data
- External sensor (connected to sensor hub interface) data
- Step counter (and associated timestamp) data

Saving the data in FIFO is based on FIFO words. A FIFO word is composed of:

- Tag, 1 byte
- Data, 6 bytes

Data can be retrieved from the FIFO through six dedicated registers, from address 79h to 7Eh:  
FIFO\_DATA\_OUT\_X\_L, FIFO\_DATA\_OUT\_X\_H, FIFO\_DATA\_OUT\_Y\_L, FIFO\_DATA\_OUT\_Y\_H,  
FIFO\_DATA\_OUT\_Z\_L, FIFO\_DATA\_OUT\_Z\_H.

The reconstruction of a FIFO stream is a simple task thanks to the FIFO\_TAG field of the FIFO\_DATA\_OUT\_TAG register that allows recognizing the meaning of a word in FIFO. The applications have maximum flexibility in choosing the rate of batching for sensors with dedicated FIFO configurations.

Six different FIFO operating modes can be chosen through the FIFO\_MODE[2:0] bits of the FIFO\_CTRL4 register:

- Bypass mode
- FIFO mode
- Continuous mode
- Continuous-to-FIFO mode
- Bypass-to-continuous mode
- Bypass-to-FIFO mode

To monitor the FIFO status (full, overrun, number of samples stored, and so forth), two dedicated registers are available: FIFO\_STATUS1 and FIFO\_STATUS2.

Programmable FIFO threshold can be set in FIFO\_CTRL1 and FIFO\_CTRL2 using the WTM[8:0] bits.

FIFO full, FIFO threshold, and FIFO overrun events can be enabled to generate dedicated interrupts on the two interrupt pins (INT1 and INT2) through the INT1\_FIFO\_FULL, INT1\_FIFO\_FTH and INT1\_FIFO\_OVR bits of the INT1\_CTRL register, and through the INT2\_FIFO\_FULL, INT2\_FIFO\_FTH and INT2\_FIFO\_OVR bits of the INT2\_CTRL register.

Finally, FIFO embeds a compression algorithm that the user can enable in order to have up to 9 KB data stored in FIFO and take advantage in terms of interface communication length for FIFO flushing and communication power consumption.

## 8.1

### FIFO description and batched sensors

FIFO is divided into 512 words of 7 bytes each. A FIFO word contains one byte with TAG information and 6 bytes of data: the overall FIFO buffer dimension is equal to 3584 bytes and can contain 3072 bytes of data. The TAG byte contains the information indicating which data is stored in the FIFO data field and other useful information.

FIFO is runtime configurable: a metainformation tag can be enabled in order to notify the user if batched sensor configurations have changed.

Moreover, in order to increase its capability, the FIFO embeds a compression algorithm for accelerometer and gyroscope data (refer to [Section 8.10 FIFO compression](#) for further details).

Batched sensors can be classified in three different categories:

1. Main sensors, which are physical sensors:
  - a. Accelerometer sensor
  - b. Gyroscope sensor
2. Auxiliary sensors, which contain information of the status of the device:
  - a. Timestamp sensor
  - b. Configuration-change sensor (CFG-Change)
  - c. Temperature sensor
3. Virtual sensors:
  - a. External sensors read from sensor hub interface
  - b. Step counter sensor

Data can be retrieved from the FIFO through six dedicated registers: FIFO\_DATA\_OUT\_X\_L, FIFO\_DATA\_OUT\_X\_H, FIFO\_DATA\_OUT\_Y\_L, FIFO\_DATA\_OUT\_Y\_H, FIFO\_DATA\_OUT\_Z\_L, FIFO\_DATA\_OUT\_Z\_H.

A write to FIFO can be triggered by three different events:

- Internal data-ready signal (fastest sensor between accelerometer and gyroscope)
- Sensor hub data-ready
- Step detection event

## 8.2

### FIFO registers

The FIFO buffer is managed by:

- Six control registers: FIFO\_CTRL1, FIFO\_CTRL2, FIFO\_CTRL3, FIFO\_CTRL4, COUNTER\_BDR\_REG1, COUNTER\_BDR\_REG2
- Two status registers: FIFO\_STATUS1 and FIFO\_STATUS2
- Seven output registers (tag + data): FIFO\_DATA\_OUT\_TAG, FIFO\_DATA\_OUT\_X\_L, FIFO\_DATA\_OUT\_X\_H, FIFO\_DATA\_OUT\_Y\_L, FIFO\_DATA\_OUT\_Y\_H, FIFO\_DATA\_OUT\_Z\_L, FIFO\_DATA\_OUT\_Z\_H
- Some additional bits to route FIFO events to the two interrupt lines: INT1\_CNT\_BDR, INT1\_FIFO\_FULL, INT1\_FIFO\_OVR, INT1\_FIFO\_TH bits of the INT1\_CTRL register and INT2\_CNT\_BDR, INT2\_FIFO\_FULL, INT2\_FIFO\_OVR, INT2\_FIFO\_TH bits of the INT2\_CTRL register
- Some additional bits for other features:
  - FIFO\_COMPRESS\_EN bit of the EMB\_FUNC\_EN\_B embedded function register in order to enable the FIFO compression algorithm
  - PEDO\_FIFO\_EN bit of the EMB\_FUNC\_FIFO\_CFG register in order to enable step counter batching in FIFO
  - FIFO\_COMPRESS\_INIT bit of the EMB\_FUNC\_INIT\_B embedded function register in order to request a FIFO compression algorithm reinitialization
  - BATCH\_EXT\_SENS\_0\_EN, BATCH\_EXT\_SENS\_1\_EN, BATCH\_EXT\_SENS\_2\_EN, BATCH\_EXT\_SENS\_3\_EN bits of the SLV0\_CONFIG, SLV1\_CONFIG, SLV2\_CONFIG, SLV3\_CONFIG sensor hub registers, which enable the batching in FIFO of the related external sensors

### 8.2.1 FIFO\_CTRL1

The FIFO\_CTRL1 register contains the lower part of the 9-bit FIFO watermark threshold level. For the complete watermark threshold level configuration, consider also the WTM8 bit of the FIFO\_CTRL2 register. 1 LSB value of the FIFO threshold level is referred to as a FIFO word (7 bytes).

The FIFO watermark flag (FIFO\_WTM\_IA bit in the FIFO\_STATUS2 register) rises when the number of bytes stored in the FIFO is equal to or higher than the watermark threshold level.

In order to limit the FIFO depth to the watermark level, the STOP\_ON\_WTM bit must be set to 1 in the FIFO\_CTRL2 register.

**Table 52. FIFO\_CTRL1 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
WTM7	WTM6	WTM5	WTM4	WTM3	WTM2	WTM1	WTM0

### 8.2.2 FIFO\_CTRL2

**Table 53. FIFO\_CTRL2 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
STOP_ON_WTM	FIFO_COMPRT_EN	0	ODRCHG_EN	0	UNCOPTR_RATE_1	UNCOPTR_RATE_0	WTM8

The FIFO\_CTRL2 register contains the upper part of the 9-bit FIFO watermark threshold level (WTM8 bit). For the complete watermark threshold level configuration, consider also the WTM[7:0] bits of the FIFO\_CTRL1 register. The register contains the bit STOP\_ON\_WTM, which allows limiting the FIFO depth to the watermark level.

The FIFO\_CTRL2 register also contains the bits to manage the FIFO compression algorithm for the accelerometer and gyroscope sensors:

- FIFO\_COMPRT\_EN bit allows runtime enabling / disabling of the compression algorithm: if the bit is set to 1, the compression is enabled, otherwise it is disabled.
- UNCOPTR\_RATE\_[1:0] configures the compression algorithm to write noncompressed data at a specific rate. The following table summarizes possible configurations.

**Table 54. Forced non-compressed data write configurations**

UNCOPTR_RATE[1:0]	Forced noncompressed data writes
00	Never
01	Every 8 batch data rate
10	Every 16 batch data rate
11	Every 32 batch data rate

Moreover, the FIFO\_CTRL2 register contains the ODRCHG\_EN bit, which can be set to 1 in order to enable the CFG-Change auxiliary sensor to be batched in FIFO (described in the next sections).

### 8.2.3 FIFO\_CTRL3

**Table 55. FIFO\_CTRL3 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
BDR_GY_3	BDR_GY_2	BDR_GY_1	BDR_GY_0	BDR_XL_3	BDR_XL_2	BDR_XL_1	BDR_XL_0

The FIFO\_CTRL3 register contains the fields to select the write frequency in FIFO for accelerometer and gyroscope sensor data. The selected batch data rate must be equal to or lower than the output data rate configured through the ODR\_XL and ODR\_G fields of the CTRL1\_XL and CTRL2\_G registers.

The following tables indicate all the selectable batch data rates.

**Table 56. Accelerometer batch data rate**

BDR_XL[3:0]	Batch data rate [Hz]
0000	Not batched in FIFO
0001	12.5
0010	26
0011	52
0100	104
0101	208
0110	417
0111	833
1000	1667
1001	3333
1010	6667
1011	1.6

**Table 57. Gyroscope batch data rate**

BDR_GY[3:0]	Batch data rate [Hz]
0000	Not batched in FIFO
0001	12.5
0010	26
0011	52
0100	104
0101	208
0110	417
0111	833
1000	1667
1001	3333
1010	6667
1011	6.5

## 8.2.4 FIFO\_CTRL4

The FIFO\_CTRL4 register contains the fields to select the decimation factor for timestamp batching in FIFO and the batch data rate for the temperature sensor.

The timestamp write rate is configured to the maximum rate between the accelerometer and gyroscope batch data rate divided by the decimation factor specified in the DEC\_TS\_BATCH\_[1:0] field. The programmable decimation factors are indicated in the table below.

**Table 58. Timestamp batch data rate**

DEC_TS_BATCH[1:0]	Timestamp batch data rate [Hz]
00	Not batched in FIFO
01	max(BDR_GY[Hz], BDR_XL[Hz], BDR_SHUB[Hz])
10	max(BDR_GY[Hz], BDR_XL[Hz], BDR_SHUB[Hz]) / 8
11	max(BDR_GY[Hz], BDR_XL[Hz], BDR_SHUB[Hz]) / 32

The temperature batch data rate is configurable through the ODR\_T\_BATCH\_[1:0] field as shown in the table below.

**Table 59. Temperature sensor batch data rate**

ODR_T_BATCH[1:0]	Temperature batch data rate [Hz]
00	Not batched in FIFO
01	1.6
10	12.5
11	52

The FIFO\_CTRL4 register also contains the FIFO operating modes bits. FIFO operating modes are described in Section 8.7 FIFO modes.

**Table 60. FIFO\_CTRL4 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DEC_TS_BATCH_1	DEC_TS_BATCH_0	ODR_T_BATCH_1	ODR_T_BATCH_0	0	FIFO_MODE2	FIFO_MODE1	FIFO_MODE0

## 8.2.5 COUNTER\_BDR\_REG1

Since the FIFO might contain meta-information (that is, the CFG-Change sensor) and the accelerometer and gyroscope data might be compressed, the FIFO provides a way to synchronize reading FIFO on the basis of the accelerometer or gyroscope actual number of samples stored in FIFO: the BDR counter.

The BDR counter can be configured through the COUNTER\_BDR\_REG1 and COUNTER\_BDR\_REG2 registers.

**Table 61. COUNTER\_BDR\_REG1 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
-	RST_COUNTER_BDR	TRIG_COUNTER_BDR	0	0	CNT_BDR_TH_10	CNT_BDR_TH_9	CNT_BDR_TH_8

RST\_COUNTER\_BDR can be asserted to reset the BDR counter: it is automatically reset to zero.

TRIG\_COUNTER\_BDR selects the trigger for the BDR counter: if it is configured to 0, the accelerometer sensor is selected, otherwise the gyroscope sensor is selected.

The user can select the threshold that generates the COUNTER\_BDR\_IA event in the FIFO\_STATUS2 register. Once the internal BDR counter reaches the threshold, the COUNTER\_BDR\_IA bit is set to 1. The threshold is configurable through the CNT\_BDR\_TH\_[10:0] bits. The upper part of the field is contained in the register COUNTER\_BDR\_REG1. One LSB value of the CNT\_BDR\_TH threshold level is referred to as one accelerometer/gyroscope sample (X, Y, and Z data).

## 8.2.6 COUNTER\_BDR\_REG2

The COUNTER\_BDR\_REG2 register contains the lower part of the BDR-counter threshold.

**Table 62. COUNTER\_BDR\_REG2 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
CNT_BDR_TH_7	CNT_BDR_TH_6	CNT_BDR_TH_5	CNT_BDR_TH_4	CNT_BDR_TH_3	CNT_BDR_TH_2	CNT_BDR_TH_1	CNT_BDR_TH_0

## 8.2.7 FIFO\_STATUS1

The FIFO\_STATUS1 register, together with the FIFO\_STATUS2 register, provides information about the number of samples stored in the FIFO. 1 LSB value of the DIFF\_FIFO level is referred to as a FIFO word (7 bytes).

**Table 63. FIFO\_STATUS1 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DIFF_FIFO_7	DIFF_FIFO_6	DIFF_FIFO_5	DIFF_FIFO_4	DIFF_FIFO_3	DIFF_FIFO_2	DIFF_FIFO_1	DIFF_FIFO_0

## 8.2.8 FIFO\_STATUS2

The FIFO\_STATUS2 register, together with the FIFO\_STATUS1 register, provides information about the number of samples stored in the FIFO and about the current status (watermark, overrun, full, BDR counter) of the FIFO buffer.

**Table 64. FIFO\_STATUS2 register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
FIFO_WTM_IA	FIFO_OVR_IA	FIFO_FULL_IA	COUNTER_BDR_IA	FIFO_OVR_LATCHED	0	DIFF_FIFO_9	DIFF_FIFO_8

- FIFO\_WTM\_IA represents the watermark status. This bit goes high when the number of FIFO words (7 bytes each) already stored in the FIFO is equal to or higher than the watermark threshold level. The watermark status signal can be driven to the two interrupt pins by setting to 1 the INT1\_FIFO\_TH bit of the INT1\_CTRL register or the INT2\_FIFO\_TH bit of the INT2\_CTRL register.
- FIFO\_OVR\_IA goes high when the FIFO is completely filled and at least one sample has already been overwritten to store the new data. This signal can be driven to the two interrupt pins by setting to 1 the INT1\_FIFO\_OVR bit of the INT1\_CTRL register or the INT2\_FIFO\_OVR bit of the INT2\_CTRL register.
- FIFO\_FULL\_IA goes high when the next set of data that is stored in FIFO makes the FIFO completely full (that is, DIFF\_FIFO\_9 = 1) or generates a FIFO overrun. This signal can be driven to the two interrupt pins by setting to 1 the INT1\_FIFO\_FULL bit of the INT1\_CTRL register or the INT2\_FIFO\_FULL bit of the INT2\_CTRL register.
- COUNTER\_BDR\_IA represents the BDR-counter status. This bit goes high when the number of accelerometer or gyroscope batched samples (on the base of the selected sensor trigger) reaches the BDR-counter threshold level configured through the CNT\_BDR\_TH\_[10:0] bits of the COUNTER\_BDR\_REG1 and COUNTER\_BDR\_REG2 registers. The COUNTER\_BDR\_IA bit is automatically reset when the FIFO\_STATUS2 register is read. The BDR-counter status can be driven to the two interrupt pins by setting to 1 the INT1\_CNT\_BDR bit of the INT1\_CTRL register or the INT2\_CNT\_BDR bit of the INT2\_CTRL register.
- FIFO\_OVR\_LATCHED, as FIFO\_OVR\_IA, goes high when the FIFO is completely filled and at least one sample has already been overwritten to store the new data. The difference between the two flags is that FIFO\_OVR\_LATCHED is reset when the FIFO\_STATUS2 register is read, whereas FIFO\_OVR\_IA is reset when at least one FIFO word is read. This allows detecting a FIFO overrun condition during reading data from FIFO.
- DIFF\_FIFO\_[9:8] contains the upper part of the number of unread words stored in the FIFO. The lower part is represented by the DIFF\_FIFO\_[7:0] bits in FIFO\_STATUS1. The value of the DIFF\_FIFO\_[9:0] field corresponds to the number of 7-byte words in the FIFO.

Register content is updated synchronously to the FIFO write and read operations.

## Note:

*The BDU feature also acts on the FIFO\_STATUS1 and FIFO\_STATUS2 registers. When the BDU bit is set to 1, it is mandatory to read FIFO\_STATUS1 first and then FIFO\_STATUS2.*

## 8.2.9 FIFO\_DATA\_OUT\_TAG

By reading the FIFO\_DATA\_OUT\_TAG register, it is possible to understand to which sensor the data of the current reading belongs and to check if data are consistent.

**Table 65. FIFO\_DATA\_OUT\_TAG register**

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
TAG_SENSOR_4	TAG_SENSOR_3	TAG_SENSOR_2	TAG_SENSOR_1	TAG_SENSOR_0	TAG_CNT_1	TAG_CNT_0	TAG_PARITY

- TAG\_SENSOR\_[4:0] field identifies the sensors stored in the 6 data bytes (Table 66);
- TAG\_CNT\_[1:0] field identifies the FIFO time slot (described in next sections);
- TAG\_PARITY bit recognizes if the content of the FIFO\_DATA\_OUT\_TAG register is corrupted.

The table below contains all the possible values and associated type of sensor for the TAG\_SENSOR\_[4:0] field.

**Table 66. TAG\_SENSOR field and associated sensor**

TAG_SENSOR_[4:0]	Sensor name	Sensor category	Description
0x01	Gyroscope NC	Main	Gyroscope noncompressed data
0x02	Accelerometer NC	Main	Accelerometer noncompressed data
0x03	Temperature	Auxiliary	Temperature data
0x04	Timestamp	Auxiliary	Timestamp data
0x05	CFG_Change	Auxiliary	Metainformation data
0x06	Accelerometer NC_T_2	Main	Accelerometer noncompressed data batched at two times the previous time slot
0x07	Accelerometer NC_T_1	Main	Accelerometer noncompressed data batched at the previous time slot
0x08	Accelerometer 2xC	Main	Accelerometer 2x compressed data
0x09	Accelerometer 3xC	Main	Accelerometer 3x compressed data
0x0A	Gyroscope NC_T_2	Main	Gyroscope noncompressed data batched at two times the previous time slot
0x0B	Gyroscope NC_T_1	Main	Gyroscope noncompressed data batched at the previous time slot
0x0C	Gyroscope 2xC	Main	Gyroscope 2x compressed data
0x0D	Gyroscope 3xC	Main	Gyroscope 3x compressed data
0x0E	Sensor Hub Slave 0	Virtual	Sensor hub data from slave 0
0x0F	Sensor Hub Slave 1	Virtual	Sensor hub data from slave 1
0x10	Sensor Hub Slave 2	Virtual	Sensor hub data from slave 2
0x11	Sensor Hub Slave 3	Virtual	Sensor hub data from slave 3
0x12	Step Counter	Virtual	Step counter data
0x19	Sensor Hub Nack	Virtual	Sensor hub nack from slave 0/1/2/3

The TAG\_PARITY bit can be used to check the content of the FIFO\_DATA\_OUT\_TAG register. In order to do this, the user can implement the following routine:

1. Read the FIFO\_DATA\_OUT\_TAG register.
2. Count the number of bits equal to 1.
3. If the number of bits equal to 1 is even, then the FIFO\_DATA\_OUT\_TAG content is reliable, otherwise it is unreliable.

### 8.2.10 FIFO\_DATA\_OUT

Data can be retrieved from the FIFO through six dedicated registers, from address 79h to address 7Eh: FIFO\_DATA\_OUT\_X\_L, FIFO\_DATA\_OUT\_X\_H, FIFO\_DATA\_OUT\_Y\_L, FIFO\_DATA\_OUT\_Y\_H, FIFO\_DATA\_OUT\_Z\_L, FIFO\_DATA\_OUT\_Z\_H.

The FIFO output registers content depends on the sensor category and type, as described in the next section.

## 8.3 FIFO batched sensors

As previously described, batched sensors can be classified in three different categories:

- Main sensors
- Auxiliary sensors
- Virtual sensors

In this section, all the details about each category are presented.


## 8.4 Main sensors

Main sensors are LSM6DSO32 device physical sensors: accelerometer and gyroscope. The batch data rate can be configured through the BDR\_XL\_[3:0] and BDR\_GY\_[3:0] fields of the FIFO\_CTRL3 register. The batch data rate must be equal to or lower than the relative sensor output data rate configured through the ODR\_XL[3:0] and ODR\_G[3:0] field of the CTRL1\_XL and CTRL2\_G registers.

The main sensors define the FIFO time base. This means that each one of the other sensors can be associated to a time base slot defined by the main sensors. A batch event of the fastest main sensor also increments the TAG counter (TAG\_CNT field of the FIFO\_DATA\_OUT\_TAG register). This counter is composed of two bits and its value is continuously incremented (from 00 to 11) to identify different time slots.

An example of a batch data rate event is shown in Figure 23. Main sensors and time slot definitions. The BDR\_GY event and BDR\_XL event identify the time in which the corresponding sensor data is written to the FIFO. The evolution of the TAG counter identifies different time slots and its frequency is equivalent to the maximum value between BDR\_XL and BDR\_GY.

**Figure 23. Main sensors and time slot definitions**

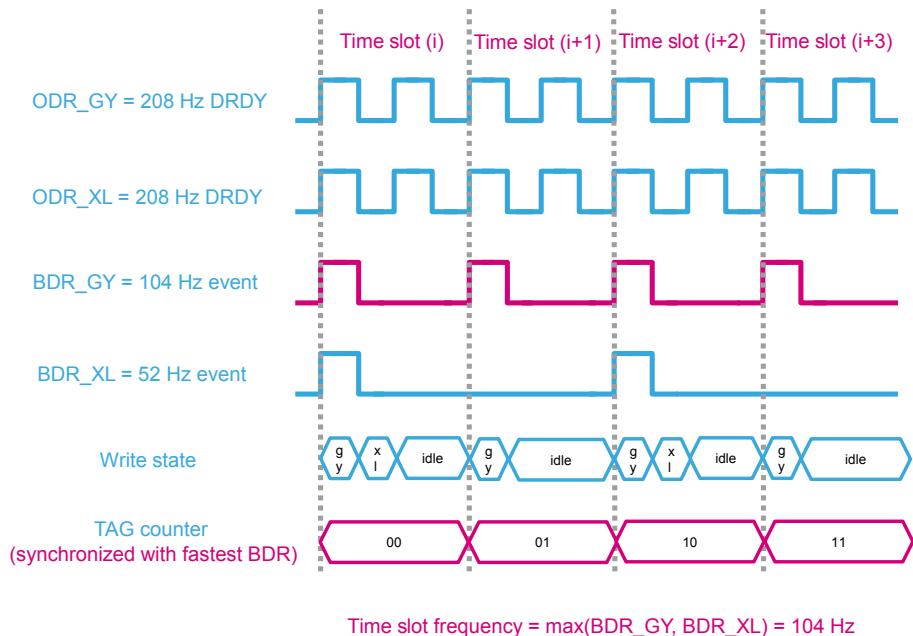

The FIFO word format of the main sensors is presented in the table below, representing the device addresses from 78h to 7Eh.

**Table 67. Main sensors output data format in FIFO**

TAG	X_L	X_H	Y_L	Y_H	Z_L	Z_H
-----	-----	-----	-----	-----	-----	-----

## 8.5

## Auxiliary sensors

Auxiliary sensors are considered as service sensors for the main sensors. Auxiliary sensors include the:

- Temperature sensor (ODR\_T\_BATCH\_[1:0] bits of the FIFO\_CTRL4 register must be configured properly).
- Timestamp sensor: it stores the timestamp corresponding to a FIFO time slot (the TIMESTAMP\_EN bit of the CTRL10\_C register must be set to 1 and the DEC\_TS\_BATCH\_[1:0] bits of the FIFO\_CTRL4 register must be configured properly).
- CFG-Change sensor: it identifies a change in some configuration of the device (ODRCHG\_EN bit of the FIFO\_CTRL2 register must be set to 1).

Auxiliary sensors cannot trigger a write in FIFO. Their registers are written when the first main sensor or the external sensor event occurs (even if they are configured at a higher batch data rate).

The temperature output data format in FIFO is presented in the following table.

**Table 68. Temperature output data format in FIFO**

Data	FIFO_DATA_OUT registers
TEMPERATURE[7:0]	FIFO_DATA_OUT_X_L
TEMPERATURE[15:8]	FIFO_DATA_OUT_X_H
0	FIFO_DATA_OUT_Y_L
0	FIFO_DATA_OUT_Y_H
0	FIFO_DATA_OUT_Z_L
0	FIFO_DATA_OUT_Z_H

The timestamp output data format in FIFO is presented in the following table.

**Table 69. Timestamp output data format in FIFO**

Data	FIFO_DATA_OUT registers
TIMESTAMP[7:0]	FIFO_DATA_OUT_X_L
TIMESTAMP[15:8]	FIFO_DATA_OUT_X_H
TIMESTAMP[23:16]	FIFO_DATA_OUT_Y_L
TIMESTAMP[31:24]	FIFO_DATA_OUT_Y_H
BDR_SHUB	FIFO_DATA_OUT_Z_L[3:0]
0	FIFO_DATA_OUT_Z_L[7:4]
BDR_XL	FIFO_DATA_OUT_Z_H[3:0]
BDR_GY	FIFO_DATA_OUT_Z_H[7:4]

As shown in [Table 69](#), timestamp data contain also some metainformation that can be used to detect a BDR change if the CFG-Change sensor is not batched in FIFO: the batch data rate of both the main sensors and the sensor hub. BDR\_SHUB cannot be configured through a dedicated register. It is the result of the configured sensor hub ODR through the SHUB\_ODR\_[1:0] bits of the SLV0\_CONFIG sensor hub register and the effective trigger sensor output data rate (the fastest between the accelerometer or gyroscope if the internal trigger is used). For the complete description of BDR\_SHUB, refer to the next section about virtual sensors.

CFG-Change identifies a runtime change in the output data rate, the batch data rate, or other configurations of the main or virtual sensors. When a supported runtime change is applied, this sensor is written at the first new main sensor or virtual sensor event followed by a timestamp sensor (also if the timestamp sensor is not batched).

This sensor can be used to correlate data from the sensors to the device timestamp without storing the timestamp each time. It could be used also to notify the user to discard data due to embedded filters settling or to other configuration changes (that is, switching mode, output data rate, and so forth).

CFG-Change output data format in FIFO is presented in the following table.

Table 70. CFG-change output data format in FIFO

Data	FIFO_DATA_OUT registers
LPF1_SEL_G	FIFO_DATA_OUT_X_H[0]
FTYPE[2:0]	FIFO_DATA_OUT_X_H[3:1]
G_HM_MODE	FIFO_DATA_OUT_X_H[4]
FS_125	FIFO_DATA_OUT_X_H[5]
FS[1:0]_G	FIFO_DATA_OUT_X_H[7:6]
LPF2_XL_EN	FIFO_DATA_OUT_Y_L[0]
HPCF_XL_[2:0]	FIFO_DATA_OUT_Y_L[3:1]
XL_HM_MODE	FIFO_DATA_OUT_Y_L[4]
XL_ULP_EN	FIFO_DATA_OUT_Y_L[5]
FS[1:0]_XL	FIFO_DATA_OUT_Y_L[7:6]
BDR_SHUB	FIFO_DATA_OUT_Y_H[3:0]
0	FIFO_DATA_OUT_Y_H[5]
Gyroscope startup <sup>(1)</sup>	FIFO_DATA_OUT_Y_H[6]
FIFO_COMPRT_EN	FIFO_DATA_OUT_Y_H[7]
ODR_XL	FIFO_DATA_OUT_Z_L[3:0]
ODR_GY	FIFO_DATA_OUT_Z_L[7:4]
BDR_XL	FIFO_DATA_OUT_Z_H[3:0]
BDR_GY	FIFO_DATA_OUT_Z_H[7:4]

1. Internal signal that is deasserted when the gyroscope finishes the startup phase (max startup time is 70 ms).

## 8.6 Virtual sensors

Virtual sensors are divided in two different categories:

- External sensors, read from the sensor hub interface
- Step counter sensors

### 8.6.1 External sensors and NACK sensor

Data of up to four external sensors read from the sensor hub (for a maximum of 18 bytes) can be stored in FIFO.

They are continuous virtual sensors with the batch data rate (BDR\_SHUB) corresponding to the current value of the SHUB\_ODR\_[1:0] field in the SLV0\_CONFIG register, if an internal trigger is used (sensor hub read triggered by the accelerometer or gyroscope data-ready signal). This value is limited by the effective trigger sensor output data rate (the fastest between the accelerometer or gyroscope). If external sensors are not batched or an external trigger is used, BDR\_SHUB is set to 0.

The following table shows the possible values of the BDR\_SHUB field.

**Table 71. BDR\_SHUB**

BDR_SHUB	BDR [Hz]
0000	Not batched or external trigger used
0001	12.5
0010	26
0011	52
0100	104

As main sensors, external sensors define the FIFO time base and they can trigger the writing of auxiliary sensors in FIFO (only if they are batched and an external trigger is not used).

It is possible to enable selectively the batching of the different external sensors using the BATCH\_EXT\_SENS\_0\_EN, BATCH\_EXT\_SENS\_1\_EN, BATCH\_EXT\_SENS\_2\_EN, BATCH\_EXT\_SENS\_3\_EN bits of the SLV0\_CONFIG, SLV1\_CONFIG, SLV2\_CONFIG, SLV3\_CONFIG sensor hub registers.

Each external sensor has a dedicated TAG value and 6 bytes reserved for data. External sensors are written in FIFO in the same order of the sensor hub output registers and if the number of bytes read from an external sensor is less than 6 bytes, then free bytes are filled with zeros.

If the communication with one external sensor batched in FIFO fails, the sensor hub writes a NACK sensor instead of the corresponding sensor data in FIFO. A NACK sensor contains the index (numbered from 0 to 3) of the failing slave and has the following output data format.

**Table 72. Nack sensor output data format in FIFO**

Data	FIFO_DATA_OUT registers
Failing slave index	FIFO_DATA_OUT_X_L[1:0]
0	FIFO_DATA_OUT_X_L[7:2]
0	FIFO_DATA_OUT_X_H
0	FIFO_DATA_OUT_Y_L
0	FIFO_DATA_OUT_Y_H
0	FIFO_DATA_OUT_Z_L
0	FIFO_DATA_OUT_Z_H

## 8.6.2 Step counter sensor

Step counter data, with associated timestamp, can be stored in FIFO. It is not a continuous rate sensor: the step detection event triggers its writing in FIFO.

In order to enable the step counter sensor in FIFO, the user should:

1. Enable the step counter sensor (set the PEDO\_EN bit to 1 in the EMB\_FUNC\_EN\_A embedded functions register).
2. Enable step counter batching (set the PEDO\_FIFO\_EN bit to 1 in the EMB\_FUNC\_FIFO\_CFG embedded functions register).

The format of the step counter data read from FIFO is shown in the table below.

**Table 73. Format of step counter output data in FIFO**

Data	FIFO_DATA_OUT registers
STEP_COUNTER[7:0]	FIFO_DATA_OUT_X_L
STEP_COUNTER[15:8]	FIFO_DATA_OUT_X_H
TIMESTAMP[7:0]	FIFO_DATA_OUT_Y_L
TIMESTAMP[15:8]	FIFO_DATA_OUT_Y_H
TIMESTAMP[23:16]	FIFO_DATA_OUT_Z_L
TIMESTAMP[31:24]	FIFO_DATA_OUT_Z_H

## 8.7 FIFO modes

The LSM6DSO32 FIFO buffer can be configured to operate in six different modes, selectable through the FIFO\_MODE\_[2:0] field of the FIFO\_CTRL4 register. The available configurations ensure a high level of flexibility and extend the number of functions usable in application development.

Bypass, FIFO, continuous, continuous-to-FIFO, bypass-to-continuous, and bypass-to-FIFO modes are described in the following paragraphs.

### 8.7.1 Bypass mode

When bypass mode is enabled, the FIFO is not used, the buffer content is cleared, and it remains empty until another mode is selected. Bypass mode is selected when the FIFO\_MODE\_[2:0] bits are set to 000. Bypass mode must be used in order to stop and reset the FIFO buffer when a different mode is intended to be used. Note that by placing the FIFO buffer in bypass mode, the whole buffer content is cleared.

### 8.7.2 FIFO mode

In FIFO mode, the buffer continues filling until it becomes full. Then it stops collecting data and the FIFO content remains unchanged until a different mode is selected.

Follow these steps for FIFO mode configuration:

1. Enable the sensor data to be stored in FIFO with the corresponding batch data rate (if configurable).
2. Set the FIFO\_MODE\_[2:0] bits in the FIFO\_CTRL4 register to 001 to enable FIFO mode.

When this mode is selected, the FIFO starts collecting data. The FIFO\_STATUS1 and FIFO\_STATUS2 registers are updated according to the number of samples stored.

When the FIFO is full, the DIFF\_FIFO\_9 bit of the FIFO\_STATUS2 register is set to 1 and no more data are stored in the FIFO buffer. Data can be retrieved by reading all the FIFO\_DATA\_OUT (from 78h to 7Eh) registers for the number of times specified by the DIFF\_FIFO\_[9:0] bits of the FIFO\_STATUS1 and FIFO\_STATUS2 registers.


Using the FIFO\_WTM\_IA bit of the FIFO\_STATUS2 register, data can also be retrieved when a threshold level (WTM[8:0] in FIFO\_CTRL1 and FIFO\_CTRL2 registers) is reached if the application requires a lower number of samples in the FIFO.

If the STOP\_ON\_WTM bit of the FIFO\_CTRL2 register is set to 1, the FIFO size is limited to the value of the WTM[8:0] bits in the FIFO\_CTRL1 and FIFO\_CTRL2 registers. In this case, the FIFO\_FULL\_IA bit of the FIFO\_STATUS2 register is set high when the number of samples in FIFO reaches or exceeds the WTM[8:0] value on the next FIFO write operation.

Communication speed is not very important in FIFO mode because the data collection is stopped and there is no risk of overwriting data already acquired. Before restarting the FIFO mode, it is necessary to set to bypass mode first in order to completely clear the FIFO content.

**Figure 24. FIFO mode (STOP\_ON\_WTM = 0)** shows an example of FIFO mode usage; the data from just one sensor are stored in the FIFO. In these conditions, the number of samples that can be stored in the FIFO buffer is 512 (with the compression algorithm disabled). The FIFO\_FULL\_IA bit of the FIFO\_STATUS2 register goes high just after the level labeled as 510 to notify that the FIFO buffer will be completely filled at the next FIFO write operation. After the FIFO is full (FIFO\_DIFF\_9 = 1), the data collection stops.

**Figure 24. FIFO mode (STOP\_ON\_WTM = 0)**

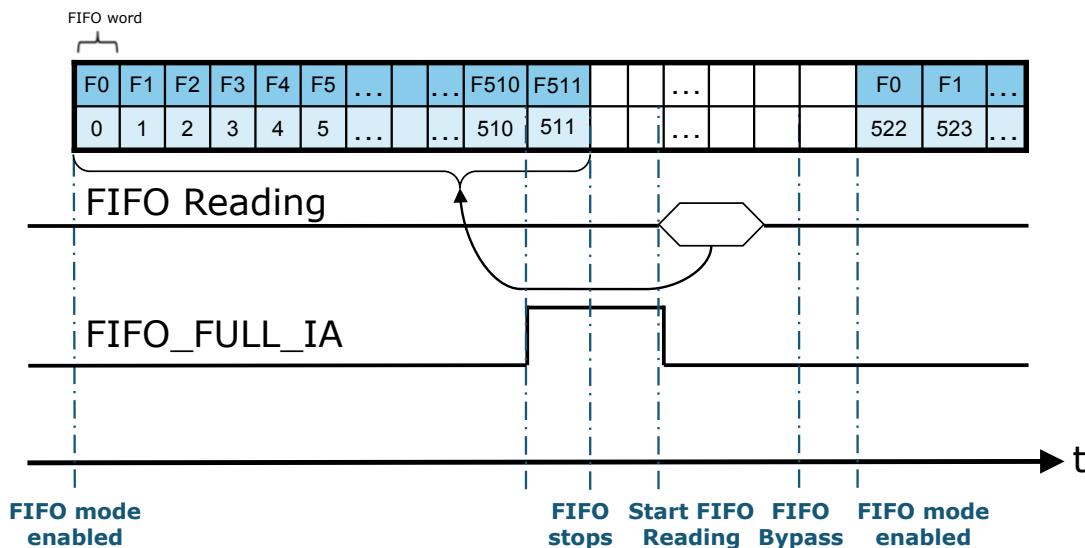

## 8.7.3

**Continuous mode**

In continuous mode, the FIFO continues filling. When the buffer is full, the FIFO index restarts from the beginning, and older data are replaced by the new data. The oldest values continue to be overwritten until a read operation frees FIFO slots. The host processor reading speed is important in order to free slots faster than new data is made available. To stop this configuration, bypass mode must be selected.


Follow these steps for continuous mode configuration (if the accelerometer/gyroscope data-ready is used as the FIFO trigger):

1. Enable the sensor data to be stored in FIFO with the corresponding batch data rate (if configurable).
2. Set the FIFO\_MODE\_[2:0] bits in the FIFO\_CTRL4 register to 110 to enable FIFO mode.

When this mode is selected, the FIFO collects data continuously. The FIFO\_STATUS1 and FIFO\_STATUS2 registers are updated according to the number of samples stored. When the next FIFO write operation makes the FIFO completely full or generates a FIFO overrun, the FIFO\_FULL\_IA bit of the FIFO\_STATUS2 register goes to 1. The FIFO\_OVR\_IA and FIFO\_OVR\_LATCHED bits in the FIFO\_STATUS2 register indicates when at least one FIFO word has been overwritten to store the new data. Data can be retrieved after the FIFO\_FULL\_IA event by reading the FIFO\_DATA\_OUT (from 78h to 7Eh) registers for the number of times specified by the DIFF\_FIFO\_9:0] bits in the FIFO\_STATUS1 and FIFO\_STATUS2 registers. Using the FIFO\_WTM\_IA bit of the FIFO\_STATUS2 register, data can also be retrieved when a threshold level (WTM[8:0] in the FIFO\_CTRL1 and FIFO\_CTRL2 registers) is reached. If the STOP\_ON\_WTM bit of the FIFO\_CTRL2 register is set to 1, the FIFO size is limited to the value of the WTM[8:0] bits in the FIFO\_CTRL1 and FIFO\_CTRL2 registers. In this case, the FIFO\_FULL\_IA bit of the FIFO\_STATUS2 register goes high when the number of samples in FIFO reaches or overcomes the WTM[8:0] value on the next FIFO write operation.

**Figure 25. Continuous mode** shows an example of the continuous mode usage. In the example, data from just one sensor are stored in the FIFO and the FIFO samples are read on the FIFO\_FULL\_IA event and faster than 1 \* ODR so that no data is lost. In these conditions, the number of samples stored is 511.

**Figure 25. Continuous mode**

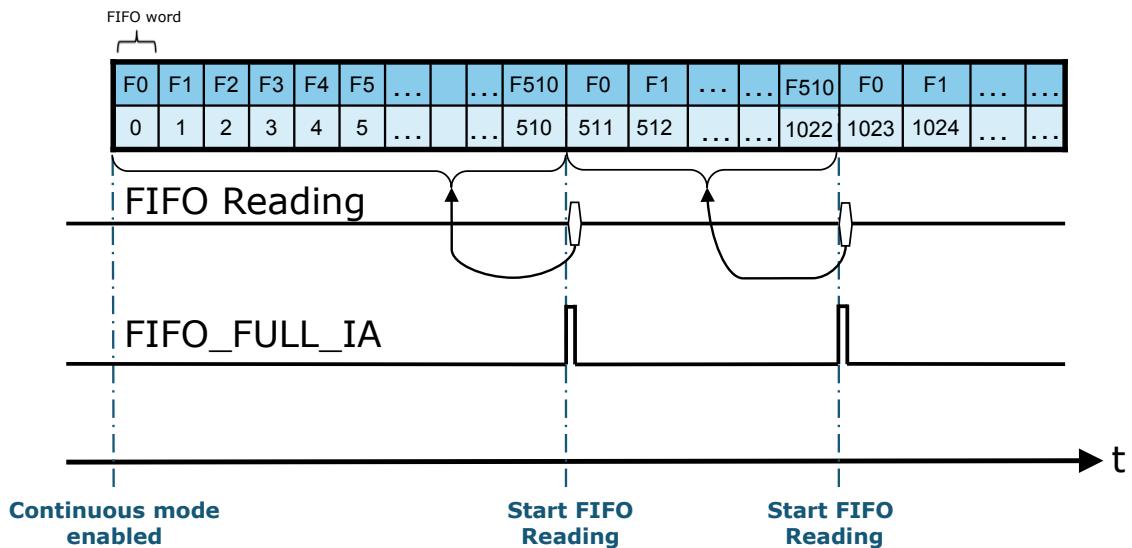

## 8.7.4

**Continuous-to-FIFO mode**


This mode is a combination of the continuous and FIFO modes previously described. In continuous-to-FIFO mode, the FIFO buffer starts operating in continuous mode and switches to FIFO mode when an event condition occurs.

The event condition can be one of the following:

- Single tap: event detection has to be configured and the INT2\_SINGLE\_TAP bit of the MD2\_CFG register has to be set to 1.
- Double tap: event detection has to be configured and the INT2\_DOUBLE\_TAP bit of the MD2\_CFG register has to be set to 1.
- Free-fall: event detection has to be configured and the INT2\_FF bit of the MD2\_CFG register has to be set to 1.
- Wake-up: event detection has to be configured and the INT2\_WU bit of the MD2\_CFG register has to be set to 1.
- 6D: event detection has to be configured and the INT2\_6D bit of the MD2\_CFG register has to be set to 1.

Continuous-to-FIFO mode is sensitive to the edge of the interrupt signal. At the first interrupt event, FIFO changes from continuous mode to FIFO mode and maintains it until bypass mode is set.

**Figure 26. Continuous-to-FIFO mode**

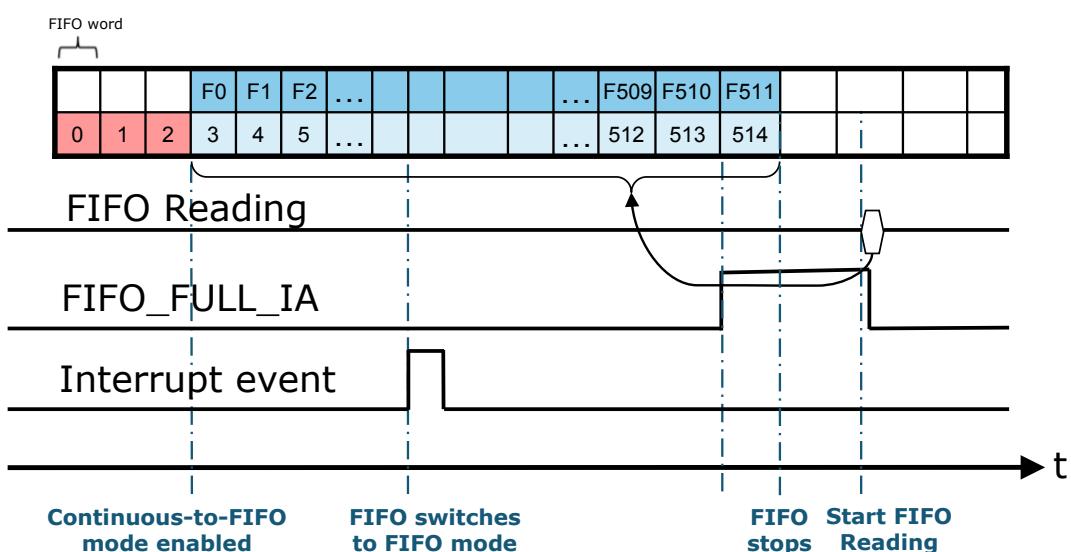

Follow these steps for continuous-to-FIFO mode configuration (if the accelerometer/gyroscope data-ready is used as the FIFO trigger):

1. Configure one of the events as previously described.
2. Enable the sensor data to be stored in FIFO with the corresponding batch data rate (if configurable).
3. Set the FIFO\_MODE[2:0] bits in the FIFO\_CTRL4 register to 011b to enable FIFO Continuous-to-FIFO mode.

In continuous-to-FIFO mode the FIFO buffer continues filling. When the FIFO is full or overrun at the next FIFO write operation, the FIFO\_FULL\_IA bit goes high.

If the STOP\_ON\_WTM bit of the FIFO\_CTRL2 register is set to 1, the FIFO size is limited to the value of the WTM[8:0] bits in the FIFO\_CTRL1 and FIFO\_CTRL2 registers. In this case, the FIFO\_FULL\_IA bit of the FIFO\_STATUS2 register goes high when the number of samples in FIFO reaches or exceeds the WTM[8:0] value on the next FIFO write operation.

When the trigger event occurs, two different cases can be observed:

- If the FIFO buffer is already full, it stops collecting data at the first sample after the event trigger. The FIFO content is composed of the samples collected before the event.
- If the FIFO buffer is not full yet, it continues filling until it becomes full and then it stops collecting data.

Continuous-to-FIFO can be used in order to analyze the history of the samples that have generated an interrupt. The standard operation is to read the FIFO content when the FIFO mode is triggered and the FIFO buffer is full and stopped.

### 8.7.5 Bypass-to-continuous mode

This mode is a combination of the bypass and continuous modes previously described. In bypass-to-continuous mode, the FIFO buffer starts operating in bypass mode and switches to continuous mode when an event condition occurs.

The event condition can be one of the following:

- Single tap: event detection has to be configured and the INT2\_SINGLE\_TAP bit of the MD2\_CFG register has to be set to 1.
- Double tap: event detection has to be configured and the INT2\_DOUBLE\_TAP bit of the MD2\_CFG register has to be set to 1.
- Free-fall: event detection has to be configured and the INT2\_FF bit of the MD2\_CFG register has to be set to 1.
- Wake-up: event detection has to be configured and the INT2\_WU bit of the MD2\_CFG register has to be set to 1.
- 6D: event detection has to be configured and the INT2\_6D bit of the MD2\_CFG register has to be set to 1.

Bypass-to-continuous mode is sensitive to the edge of the interrupt signal: at the first interrupt event, FIFO changes from bypass mode to continuous mode and maintains it until bypass mode is set.


Follow these steps for bypass-to-continuous mode configuration (if the accelerometer / gyroscope data-ready is used as the FIFO trigger):

1. Configure one of the events as previously described.
2. Enable the sensor data to be stored in FIFO with the corresponding batch data rate (if configurable).
3. Set the FIFO\_MODE[2:0] bits in the FIFO\_CTRL4 register to 100 to enable FIFO bypass-to-continuous mode.

Once the trigger condition appears and the buffer switches to continuous mode, the FIFO buffer continues filling. When the next stored set of data makes the FIFO full or overrun, the FIFO\_FULL\_IA bit is set high.

Bypass-to-continuous can be used in order to start the acquisition when the configured interrupt is generated.

Figure 27. Bypass-to-continuous mode

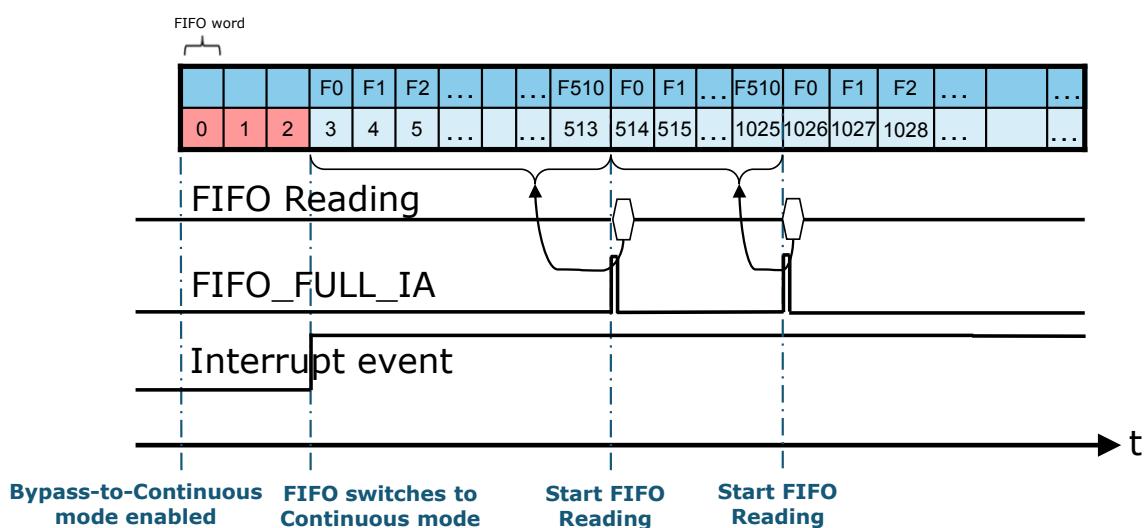

### 8.7.6 Bypass-to-FIFO mode

This mode is a combination of the bypass and FIFO modes previously described. In bypass-to-FIFO mode, the FIFO buffer starts operating in bypass mode and switches to FIFO mode when an event condition occurs.

The event condition can be one of the following:

- Single tap: event detection has to be configured and the INT2\_SINGLE\_TAP bit of the MD2\_CFG register has to be set to 1.
- Double tap: event detection has to be configured and the INT2\_DOUBLE\_TAP bit of the MD2\_CFG register has to be set to 1.
- Free-fall: event detection has to be configured and the INT2\_FF bit of the MD2\_CFG register has to be set to 1.
- Wake-up: event detection has to be configured and the INT2\_WU bit of the MD2\_CFG register has to be set to 1.
- 6D: event detection has to be configured and the INT2\_6D bit of the MD2\_CFG register has to be set to 1.

Bypass-to-FIFO mode is sensitive to the edge of the interrupt signal. At the first interrupt event, FIFO changes from bypass mode to FIFO mode and maintains it until bypass mode is set.


Follow these steps for bypass-to-FIFO mode configuration (if the accelerometer / gyroscope data-ready is used as the FIFO trigger):

1. Configure one of the events as previously described.
2. Enable the sensor data to be stored in FIFO with the corresponding batch data rate (if configurable).
3. Set the FIFO\_MODE\_[2:0] bits in the FIFO\_CTRL4 register to 111 to enable FIFO bypass-to-FIFO mode.

Once the trigger condition appears and the buffer switches to FIFO mode, the FIFO buffer starts filling. When the next stored set of data makes the FIFO full or overrun, the FIFO\_FULL\_IA bit is set high and the FIFO stops.

Bypass-to-FIFO can be used in order to analyze the history of the samples that have generated an interrupt.

Figure 28. Bypass-to-FIFO mode

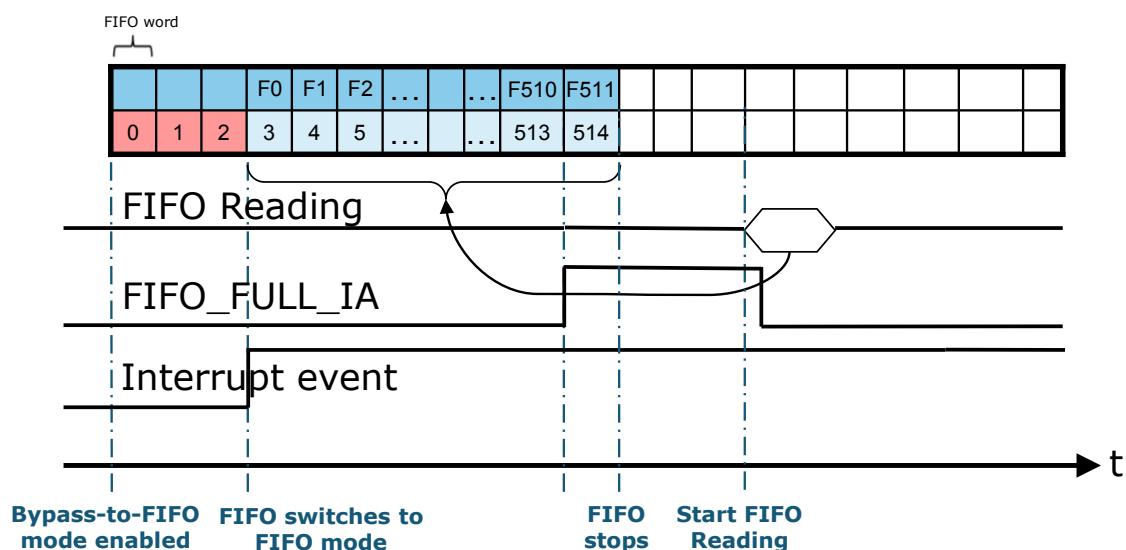

## 8.8

## Retrieving data from the FIFO

When FIFO is enabled and the mode is different from bypass, reading the FIFO output registers return the oldest FIFO sample set. Whenever these registers are read, their content is moved to the SPI/I<sup>2</sup>C/MIPI I3C<sup>SM</sup> output buffer.

FIFO slots are ideally shifted up one level in order to release room for a new sample, and the FIFO output registers load the current oldest value stored in the FIFO buffer.

The recommended way to retrieve data from the FIFO is the following:

1. Read the FIFO\_STATUS1 and FIFO\_STATUS2 registers to check how many words are stored in the FIFO. This information is contained in the DIFF\_FIFO\_[9:0] bits.
2. For each word in FIFO, read the FIFO word (tag and output data) and interpret it on the basis of the FIFO tag.
3. Go to step 1.

The entire FIFO content is retrieved by performing a certain number of read operations from the FIFO output registers until the buffer becomes empty (DIFF\_FIFO\_[9:0] bits of the FIFO\_STATUS1 and FIFO\_STATUS2 register are equal to 0).

It is recommended to avoid reading from FIFO when it is empty.

FIFO output data must be read with multiple of 7 bytes reads starting from the FIFO\_DATA\_OUT\_TAG register. The wraparound function from address FIFO\_DATA\_OUT\_Z\_H to FIFO\_DATA\_OUT\_TAG is done automatically in the device, in order to allow reading many words with a unique multiple read operation.

## 8.9

### FIFO watermark threshold

The FIFO threshold is a functionality of the LSM6DSO32 FIFO that can be used to check when the number of samples in the FIFO reaches a defined watermark threshold level.

The bits WTM[8:0] in the FIFO\_CTRL1 and FIFO\_CTRL2 registers contain the watermark threshold level. The resolution of the WTM[8:0] field is 7 bytes, corresponding to a complete FIFO word. So, the user can select the desired level in a range between 0 and 511.

The bit FIFO\_WTM\_IA in the FIFO\_STATUS2 register represents the watermark status. This bit is set high if the number of words in the FIFO reaches or exceeds the watermark level. FIFO size can be limited to the threshold level by setting the STOP\_ON\_WTM bit in the FIFO\_CTRL2 register to 1.

Figure 29. FIFO threshold (STOP\_ON\_WTM = 0)

$$\text{WTM}[8:0] = 21$$

$$\text{STOP\_ON\_WTM} = 0$$

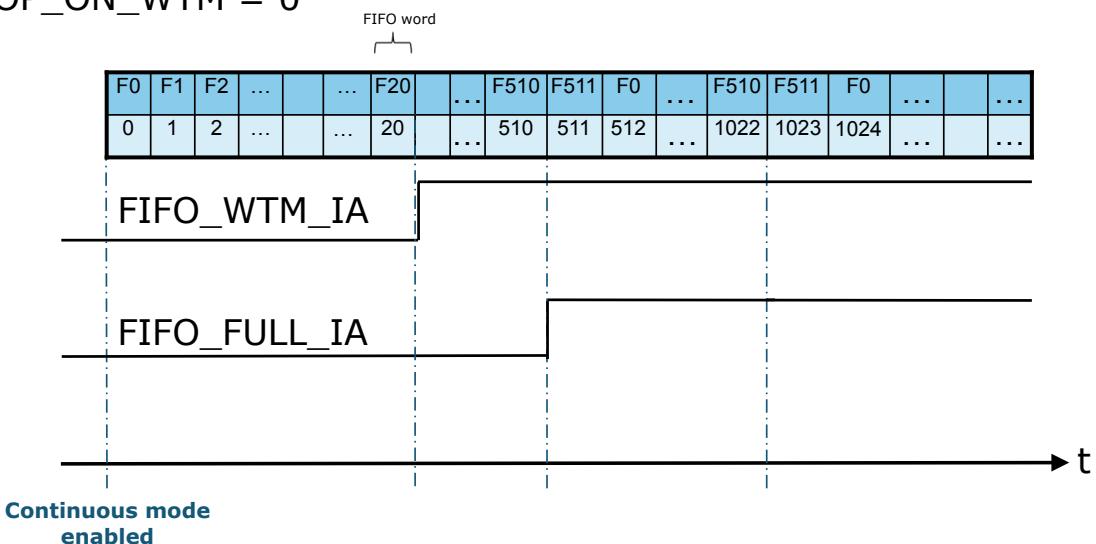


Figure 29. FIFO threshold (STOP\_ON\_WTM = 0) shows an example of FIFO threshold level usage when just accelerometer (or gyroscope) data are stored. The STOP\_ON\_WTM bit set to 0 in the FIFO\_CTRL2 register. The threshold level is set to 21 through the WTM[8:0] bits. The FIFO\_WTM\_IA bit of the FIFO\_STATUS2 register rises after the 21<sup>st</sup> level has been reached (21 words in the FIFO). Since the STOP\_ON\_WTM bit is set to 0, the FIFO does not stop at the 21<sup>st</sup> set of data, but keeps storing data until the FIFO\_FULL\_IA flag is set high.

**Figure 30. FIFO threshold (STOP\_ON\_WTM = 1) in FIFO mode**

WTM[8:0] = 21  
STOP\_ON\_WTM = 1


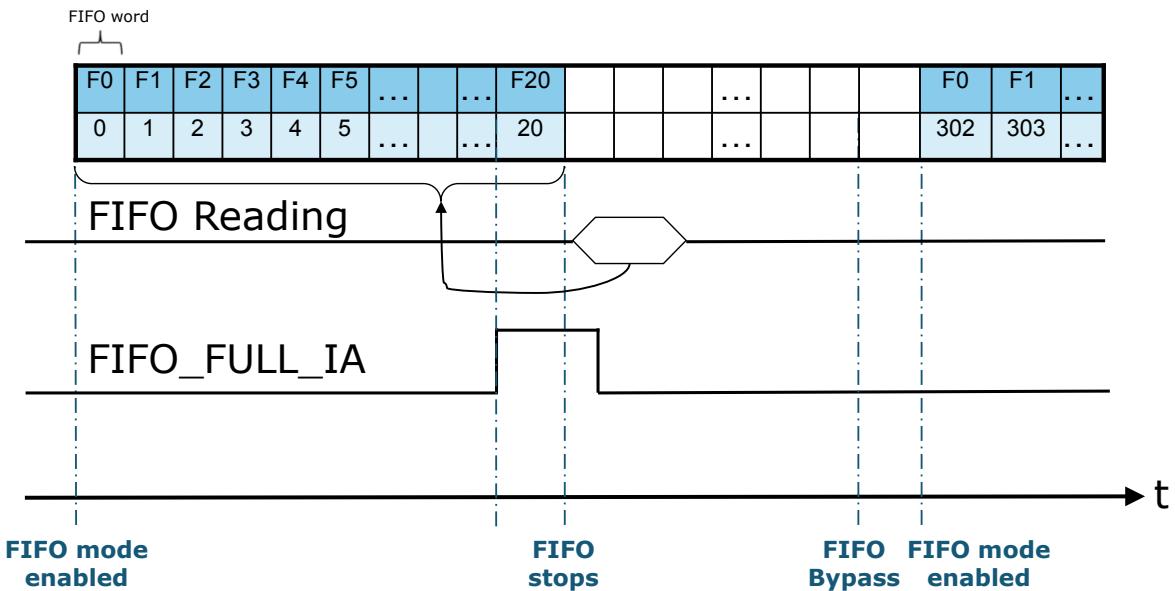


Figure 30. FIFO threshold (STOP\_ON\_WTM = 1) in FIFO mode shows an example of FIFO threshold level usage in FIFO mode with the STOP\_ON\_WTM bit set to 1 in the FIFO\_CTRL2 register. Just accelerometer (or gyroscope) data are stored in this example. The threshold level is set to 21 through the WTM[8:0] bits and defines the current FIFO size. In FIFO mode, data are stored in the FIFO buffer until the FIFO is full. The FIFO\_FULL\_IA bit of the FIFO\_STATUS2 register rises when the next data stored in the FIFO generates the FIFO full or overrun condition. The FIFO\_WTM\_IA bit of the FIFO\_STATUS2 register goes high when the FIFO is full.

**Figure 31. FIFO threshold (STOP\_ON\_WTM = 1) in continuous mode**

WTM[8:0] = 21  
STOP\_ON\_WTM = 1

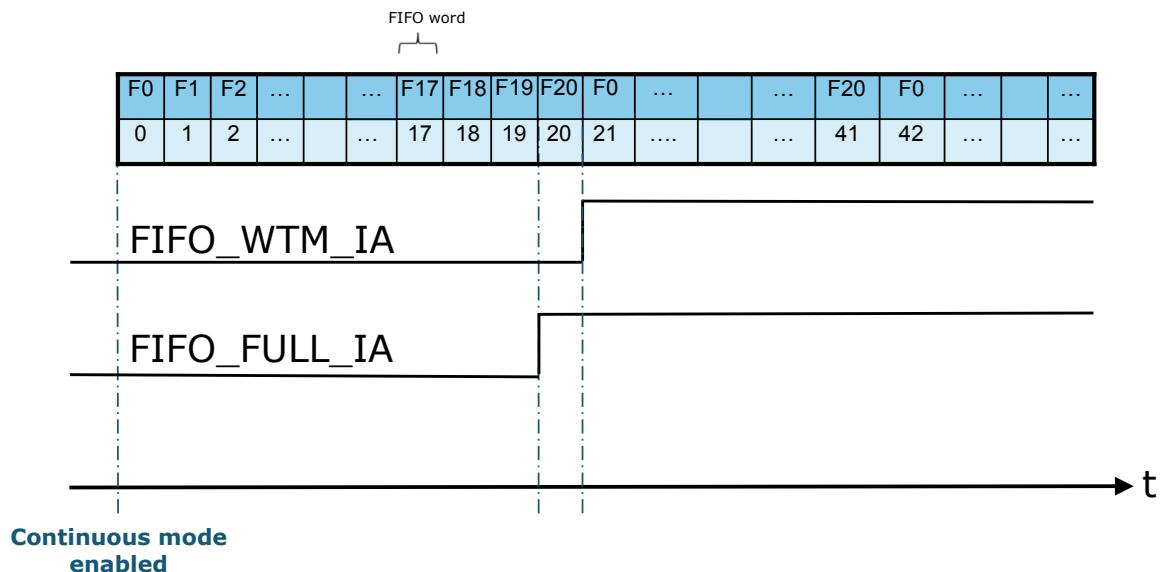

**Figure 31. FIFO threshold (STOP\_ON\_WTM = 1) in continuous mode** shows an example of FIFO threshold level usage in continuous mode with the STOP\_ON\_WTM bit set to 1 in the FIFO\_CTRL2 register. Just accelerometer (or gyroscope) data are stored in this example. The threshold level is set to 21 through the WTM[8:0] bits. The FIFO\_FULL\_IA bit of the FIFO\_STATUS2 register rises when the next data stored in the FIFO makes the FIFO full. The FIFO\_WTM\_IA bit of the FIFO\_STATUS2 goes high when the FIFO is full. If data are not retrieved from FIFO, new data (labeled as sample 21) override the older data stored in FIFO (labeled as sample F0).

8.10

## FIFO compression

FIFO compression is an embedded algorithm that allows storing up to three times the number of accelerometer and gyroscope data in FIFO. The compression algorithm automatically analyzes the slope of the sensor waveform and applies the compression of data in FIFO on the basis of the slope (difference between two consecutive samples).

FIFO compression can be enabled on accelerometer and gyroscope data in FIFO by setting both the FIFO\_COMPR\_EN bit in the EMB\_FUNC\_EN\_B embedded function register and the FIFO\_COMPR\_RT\_EN bit in the FIFO\_CTRL2 register. When active, the compression affects both accelerometer and gyroscope data and the level of compression is independent.

Accelerometer and gyroscope batch data rate (BDR) can be configured independently, but the compression algorithm is not supported in the following configurations:

- Both accelerometer and gyroscope are batched in FIFO and  $\max(ODR_{XL}, ODR_G) \geq 1.66$  kHz.
  - Accelerometer only or gyroscope only is batched in FIFO and  $\max(ODR_{XL}, ODR_G) \geq 3.33$  kHz

EIO compression supports three different levels of compression:

- NC, noncompressed, if the difference between the actual and previous data is higher than 128 LSB: one sensor sample is stored in one FIFO word.
  - 2xC, low compression, if the difference between the actual and previous data is between 16 and 128 LSB: two sensor samples are stored in one FIFO word.
  - 3xC, high compression, if the difference between the actual and previous data is less than 16 LSB: three sensor samples are stored in one FIFO word.

### 8.10.1 Time correlation

There are five different tags (for each main sensor) depending on the degree of compression:

- NC, noncompressed, associated to the actual time slot
- NC\_T\_2, noncompressed, associated to two times the previous time slot
- NC\_T\_1, noncompressed, associated to the previous time slot
- 2xC, low compression
- 3xC, high compression

All NC tags are useful in understanding the time slot correlation. By decoding the sensor tag, it is possible to understand the time frame in which the data was generated.

At the first batch event, the compression algorithm writes a noncompressed word (NC) in FIFO. After that, the algorithm analyzes the slope of the waveforms and three FIFO entries are possible:

- 3xC data written, which contains  $\text{diff}(i)$ ,  $\text{diff}(i - 1)$  and  $\text{diff}(i - 2)$
- 2xC data written, which contains  $\text{diff}(i - 1)$  and  $\text{diff}(i - 2)$
- NC\_T\_2 data written, which contains  $\text{data}(i - 2)$

Noncompressed tag sensor NC\_T\_1 could be written when a configuration change occurs or when the user wants to temporarily disable the runtime FIFO compression by deasserting the FIFO\_COMPR\_RT\_EN bit in the FIFO\_CTRL2 register.

The table below summarizes the data and time slot associated for each tag.

**Table 74. FIFO compression tags and associated data**

Tag sensor	Time slot data
NC	$\text{data}(i)$
NC_T_1	$\text{data}(i - 1)$
NC_T_2	$\text{data}(i - 2)$
2xC	$\text{diff}(i - 2)$ , $\text{diff}(i - 1)$
3xC	$\text{diff}(i - 2)$ , $\text{diff}(i - 1)$ , $\text{diff}(i)$

As shown in [Table 74](#), using FIFO compression introduces a latency of 2 / BDR, since the compression acts on a window of three BDR.

## 8.10.2 Data format

A FIFO word of compressed data contains the information of its slope with respect to its previous data:

$$data(i) = diff(i) + data(i - 1)$$

Thus, the last decoded data,  $data(i-1)$  in the formula above, must be saved when performing the decompression task.

The following table summarizes the output data format in FIFO for 2xC compressed data.

**Table 75. 2xC compressed data output data format in FIFO**

Data	Formula
diffx(i - 2)	8bit_signed(FIFO_DATA_OUT_X_L)
diffy(i - 2)	8bit_signed(FIFO_DATA_OUT_X_H)
diffz(i - 2)	8bit_signed(FIFO_DATA_OUT_Y_L)
diffx(i - 1)	8bit_signed(FIFO_DATA_OUT_Y_H)
diffy(i - 1)	8bit_signed(FIFO_DATA_OUT_Z_L)
diffz(i - 1)	8bit_signed(FIFO_DATA_OUT_Z_H)

The following table summarizes the output data format in FIFO for 3xC compressed data.

**Table 76. 3xC compressed data output data format in FIFO**

Data	Formula
diffx(i - 2)	5bit_signed(FIFO_DATA_OUT_X[4:0])
diffy(i - 2)	5bit_signed(FIFO_DATA_OUT_X[9:5])
diffz(i - 2)	5bit_signed(FIFO_DATA_OUT_X[14:10])
diffx(i - 1)	5bit_signed(FIFO_DATA_OUT_Y[4:0])
diffy(i - 1)	5bit_signed(FIFO_DATA_OUT_Y[9:5])
diffz(i - 1)	5bit_signed(FIFO_DATA_OUT_Y[14:10])
diffx(i)	5bit_signed(FIFO_DATA_OUT_Z[4:0])
diffy(i)	5bit_signed(FIFO_DATA_OUT_Z[9:5])
diffz(i)	5bit_signed(FIFO_DATA_OUT_Z[14:10])

In the table above:

- $FIFO\_DATA\_OUT\_X[15:0] = FIFO\_DATA\_OUT\_X\_L + FIFO\_DATA\_OUT\_X\_H \ll 8$
- $FIFO\_DATA\_OUT\_Y[15:0] = FIFO\_DATA\_OUT\_Y\_L + FIFO\_DATA\_OUT\_Y\_H \ll 8$
- $FIFO\_DATA\_OUT\_Z[15:0] = FIFO\_DATA\_OUT\_Z\_L + FIFO\_DATA\_OUT\_Z\_H \ll 8$

### 8.10.3

#### Disabling FIFO compression at runtime

The FIFO compression introduces a latency of 2 / BDR in the writing of the sensor in FIFO. Using FIFO compression is not indicated when the user wants to flush FIFO with low latency.

In case both high latency and low latency can be used, FIFO can be configured in the more convenient way also at runtime.

The FIFO\_COMPR\_RT\_EN bit can be changed at runtime in order to move from an enabled compression algorithm to a disabled compression algorithm (without latency). The switching is managed as a device configuration change. FIFO writes the CFG-Change sensor at the first BDR event after the change. In that case, all data not yet stored are written at the same time slot with the tag NC, NC\_T\_2 or NC\_T\_1.

The table below shows an example of a runtime disabled compression algorithm. In this case, a main sensor, CFG-Change sensor, and timestamp sensor are supposed to be batched in FIFO. FIFO compression is runtime disabled between time instant  $t(i-1)$  and time instant  $t(i)$ . As explained above, all data that are not yet stored are written to the same slot preceded by the CFG-Change and timestamp sensors.

**Table 77. Example of disabled runtime compression**

Time	FIFO_COMPR_RT_EN	Sensor	FIFO_DATA_OUT
...	1	...	...
$t(i-3)$	1	3xC	diff(i-5), diff(i-4), diff(i-3)
$t(i-2)$	1	-	-
$t(i-1)$	1	-	-
Async event	0	-	-
$t(i)$	0	CFG_Change	CFG-change data
		Timestamp	Timestamp data
		NC_T_2	data(i-2)
		NC_T_1	data(i-1)
		NC	data(i)
$t(i+1)$	0	NC	data(i+1)
$t(i+2)$	0	NC	data(i+2)

### 8.10.4

#### CFG-Change sensor with FIFO compression enabled

When a change of configuration is applied to the device, the application processor must discriminate the data of previous configurations with the data of the new configuration. For this task, the same approach as the FIFO\_COMPR\_RT\_EN change is applied as shown in the table below. In this case, a main sensor, CFG-Change sensor, and timestamp sensor are supposed to be batched in FIFO. A new device configuration is applied between time instant  $t(i-1)$  and time instant  $t(i)$ . As explained, all data that are not yet stored are written to the same slot preceded by the CFG-Change and timestamp sensors. After that, the FIFO compression algorithm restarts to operate as expected.

**Table 78.** Example of device configuration change with FIFO compression enabled

Time	FIFO_COMPR_RT_EN	Sensor	FIFO_DATA_OUT
...	1	...	...
$t(i-3)$	1	3xC	diff(i-5), diff(i-4), diff(i-3)
$t(i-2)$	1	-	-
$t(i-1)$	1	-	-
Async event (CFG-Change)	1	-	-
$t(i)$	1	CFG_Change	CFG-Change data
		Timestamp	Timestamp data
		NC_T_2	data(i-2)
		NC_T_1	data(i-1)
		NC	data(i)
$t(i+1)$	1	-	-
$t(i+2)$	1	-	-
$t(i+3)$	1	3xC	diff(i+1), diff(i+2), diff(i+3)

### 8.10.5

#### Non-compressed data rate

A compression algorithm can be configured in order to guarantee writing of noncompressed data with a certain periodicity (8, 16, 32 BDR events) through the UNCOPTR\_RATE\_[1:0] field in FIFO\_CTRL2.

The usage of the noncompressed data rate in FIFO can be useful for data reconstruction when there is a possibility of FIFO overrun events: if an overrun occurs and the reference noncompressed data is overwritten, it is not possible to reconstruct the current data until new noncompressed data is written in FIFO.

UNCOPTR\_RATE\_[1:0] configures the compression algorithm to write noncompressed data at a specific rate, in order to be sure to have at least one noncompressed data every 8, 16 or 32 samples.

**Table 79.** UNCOPTR\_RATE configuration

UNCOPTR_RATE_[1:0]	NC data write
00	NC data is not forced
01	NC data each 8 BDR
10	NC data each 16 BDR
11	NC data each 32 BDR

### 8.10.6

#### FIFO compression initialization

When FIFO is set in bypass mode, the compression algorithm must be reinitialized by asserting the FIFO\_COMPR\_INIT bit in the EMB\_FUNC\_INIT\_B embedded functions register.

## 8.10.7

**FIFO compression example**

The following table provides a basic numerical example of the data that could be read from the FIFO when the compression feature is enabled. In this example, the accelerometer sensor only is stored in FIFO and it is configured with a full scale of  $\pm 4\text{ g}$ .

**Table 80. FIFO compression example**

Time [n/ODR]	FIFO_DATA_OUT registers							Data analysis				
	TAG_SENSOR_[4:0]	X_L	X_H	Y_L	Y_H	Z_L	Z_H	Compression	Acceleration X [LSB]	Acceleration Y [LSB]	Acceleration Z [LSB]	Latency [n/ODR]
0	0x02	0xC6	0x00	0xC9	0xFE	0x0C	0x1C	NC	198	-311	7180	0
3	0x06	0xDC	0x00	0x9A	0xFE	0xE1	0x1F	NC_T_2	220	-358	8161	2
4	0x09	0x40	0xF0	0xCC	0x0A	0xE7	0xEB	3xC	220	-356	8157	2
									232	-366	8159	1
									239	-367	8153	0
7	0x09	0xB9	0x10	0x3D	0xF8	0x3A	0x00	3xC	232	-362	8157	2
									229	-361	8155	1
									223	-360	8155	0
10	0x08	0xF9	0xFE	0x04	0x10	0x02	0x01	2xC	216	-362	8159	2
									232	-360	8160	1
12	0x09	0x83	0x04	0x21	0xF4	0x55	0x03	3xC	235	-356	8161	2
									236	-355	8158	1
									225	-361	8158	0

At the first batch event, the compression algorithm writes a noncompressed word (NC) without latency in FIFO. After that, the algorithm analyzes the slope of the waveforms and three possible FIFO entries are possible: 3xC, 2xC, NC\_T\_2. Noncompressed words with the NC\_T\_1 tag are not present in this example since there is no runtime configuration change.

The second sample stored in FIFO is a noncompressed word with latency of two samples (NC\_T\_2): this FIFO entry contains the entire accelerometer data (without any compression).

Then, since the accelerometer data slope is low, the compression algorithm starts to compress accelerometer data: accelerometer data should be reconstructed starting from the latest sample just before the current one (the first compressed data is expressed as the difference from the NC\_T\_2 data, the second compressed data is expressed as the difference from the first compressed data, and so on).

As shown in the example, the compression algorithm works with a three-level depth buffer: if a 2xC compression level is written in FIFO, only the previous data (latency 1) and two times the previous data (latency 2) are stored in the FIFO word.

From the example, the benefit of FIFO compression is also shown. The samples are written in FIFO at interlaced ODR, thus limiting intervention by the host processor even more than normal FIFO usage.

## 8.11 Timestamp correlation

It is possible to reconstruct the timestamp of a FIFO stream with three different approaches:

- Basic, using only timestamp sensor information
- Memory-saving, based on the TAG\_CNT field in FIFO\_DATA\_OUT\_TAG
- Hybrid, based on combined usage of the TAG\_CNT field and decimated timestamp sensor

The basic approach guarantees the highest precision in timestamp reconstruction but wastes a lot of memory space available in FIFO. The timestamp sensor is written in FIFO at each time slot. If the overrun condition occurs, the correct procedure to retrieve the data from FIFO is to discard each data read before a new timestamp sensor.

The memory-saving approach uses only the TAG\_CNT information and, when the TAG\_CNT value increases, the timestamp stored at the software layer should be updated as follows:

$$\text{timestamp} = \text{timestamp}(i - 1) + \frac{1}{\max(BDR_XL, BDR_GY, BDR_SHUB)}$$

The memory-saving approach allows the user to maximize the data stored in FIFO. With this method, all the timestamp correlation is forwarded to the application processor.

This approach is not recommended when the overrun condition can occur.

The hybrid approach is a trade-off and a combination of the two previous solutions. The timestamp is configured to be written in FIFO with decimation. When the TAG\_CNT value increases, the timestamp stored at the software layer should be updated as in the memory-saving approach, while when the timestamp sensor is read, the timestamp stored at the software layer should be realigned with the correct value from the sensor.

## 9 Temperature sensor

The device is provided with an internal temperature sensor that is suitable for ambient temperature measurement. If both the accelerometer and the gyroscope sensors are in power-down mode, the temperature sensor is off.

The maximum output data rate of the temperature sensor is 52 Hz and its value depends on how the accelerometer and gyroscope sensors are configured:

- If the gyroscope is in power-down mode:
  - If the accelerometer is configured in ultralow-power or low-power mode and its ODR is lower than 52 Hz, the temperature data rate is equal to the configured accelerometer ODR;
  - The temperature data rate is equal to 52 Hz for all other accelerometer configurations.
- If the gyroscope is not in power-down mode, the temperature data rate is equal to 52 Hz, regardless of the accelerometer and gyroscope configuration.

For the temperature sensor, the data-ready signal is represented by the TDA bit of the STATUS\_REG register. The signal can be driven to the INT2 pin by setting the INT2\_DRDY\_TEMP bit of the INT2\_CTRL register to 1.

The temperature data is given by the concatenation of the OUT\_TEMP\_H and OUT\_TEMP\_L registers and it is represented as a number of 16 bits in two's complement format with a sensitivity of 256 LSB/°C. The output zero level corresponds to 25°C.

Temperature sensor data can also be stored in FIFO with a configurable batch data rate (see [Section 8 First-in, first out \(FIFO\) buffer](#) for details).

### 9.1 Example of temperature data calculation

The following table provides a few basic examples of the data that is read from the temperature data registers at different ambient temperature values. The values listed in this table are given under the hypothesis of perfect device calibration (that is, no offset, no gain error, and so forth).

**Table 81. Output data registers content vs. temperature**

Temperature values	Register address	
	OUT_TEMP_H (21h)	OUT_TEMP_L (20h)
0°C	E7h	00h
25°C	00h	00h
50°C	19h	00h

## 10 Self-test

The embedded self-test functions allow checking the device functionality without moving it.

### 10.1 Accelerometer self-test

When the accelerometer self-test is enabled, an actuation force is applied to the sensor, simulating a definite input acceleration. In this case, the sensor outputs exhibit a change in their DC levels, which are related to the selected full scale through the sensitivity value.

The self-test function is off when the ST[1:0]\_XL bits of the CTRL5\_C register are programmed to 00; it is enabled when the ST[1:0]\_XL bits are set to 01 (positive sign self-test) or 10 (negative sign self-test).


When the accelerometer self-test is activated, the sensor output level is given by the algebraic sum of the signals produced by the acceleration acting on the sensor and by the electrostatic test-force.

The complete accelerometer self-test procedure is indicated in [Figure 32. Accelerometer self-test procedure](#).

Figure 32. Accelerometer self-test procedure



# Accelerometer self-test

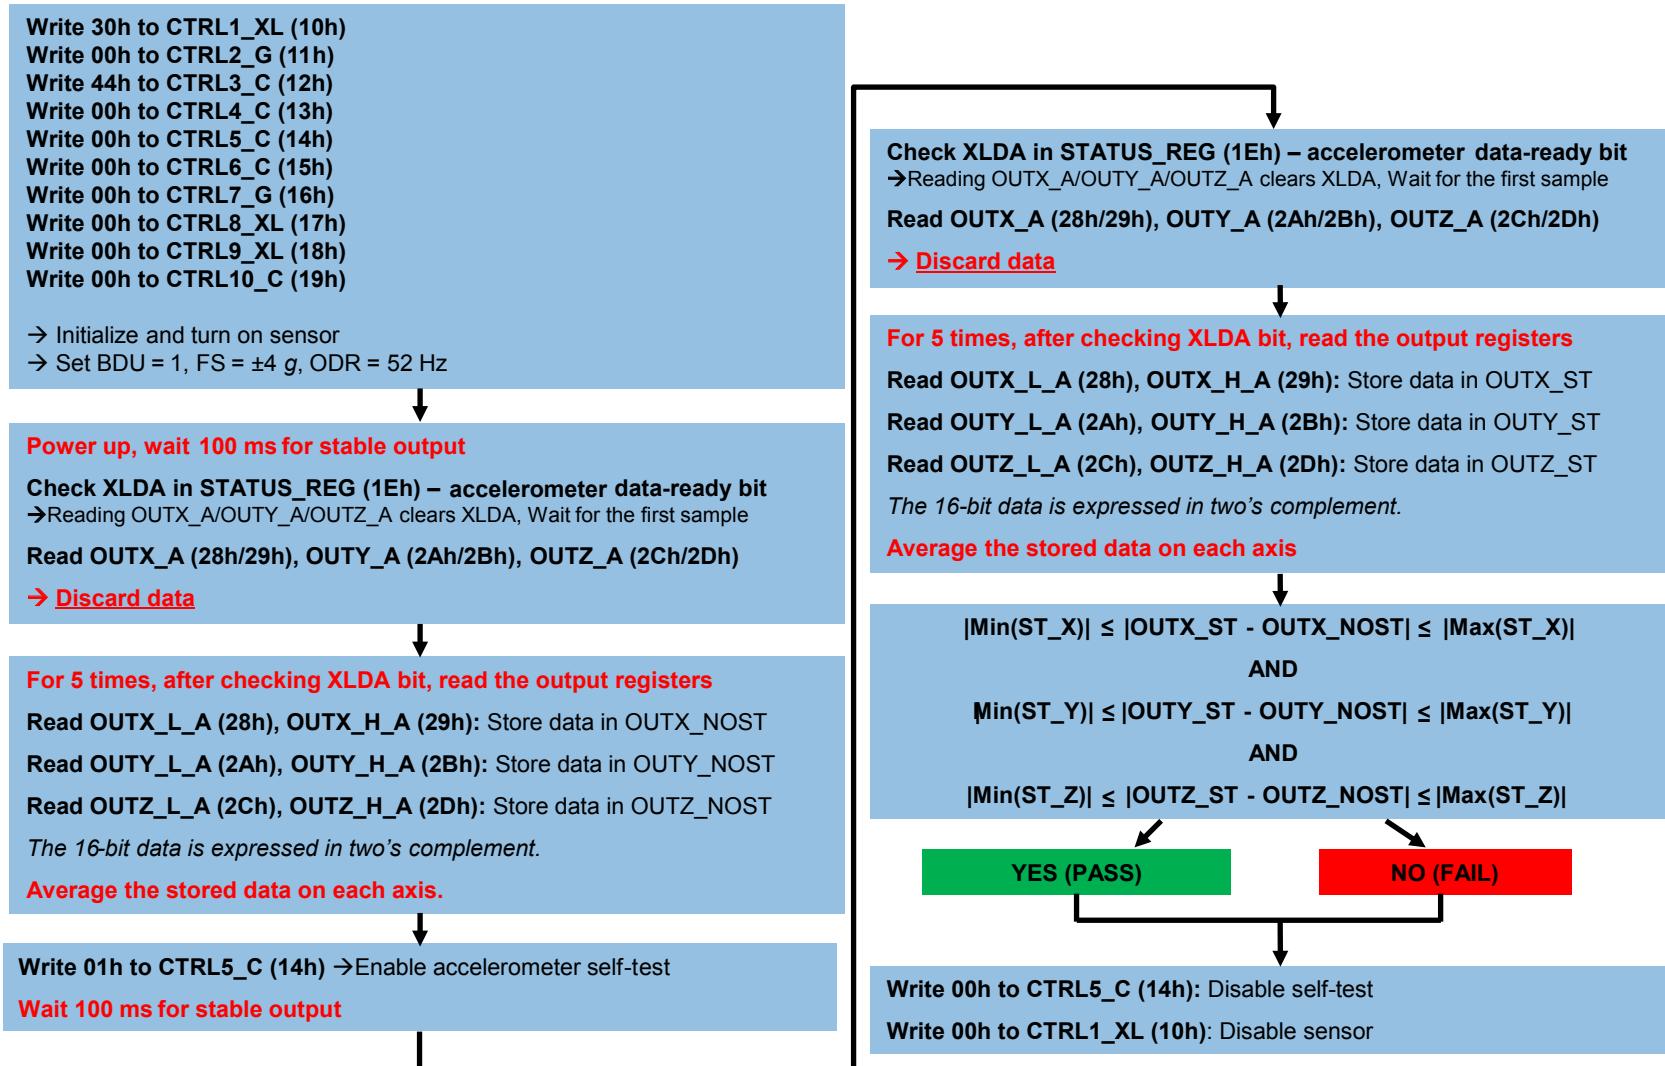

## 10.2 Gyroscope self-test

The gyroscope self-test allows testing the mechanical and electrical parts of the gyroscope sensor. When it is activated, an equivalent Coriolis signal is emulated at the input of the ASIC front-end and the sensor output exhibits an output change.


The self-test function is off when the ST[1:0]\_G bits of the CTRL5\_C register are programmed to 00; it is enabled when the ST[1:0]\_G bits are set to 01 (positive sign self-test) or 11 (negative sign self-test).

When the gyroscope self-test is active, the sensor output level is given by the algebraic sum of the signals produced by the angular rate acting on the sensor and by the electrostatic test-force.

The complete gyroscope self-test procedure is indicated in [Figure 33. Gyroscope self-test procedure](#).

Figure 33. Gyroscope self-test procedure

# Gyroscope self-test

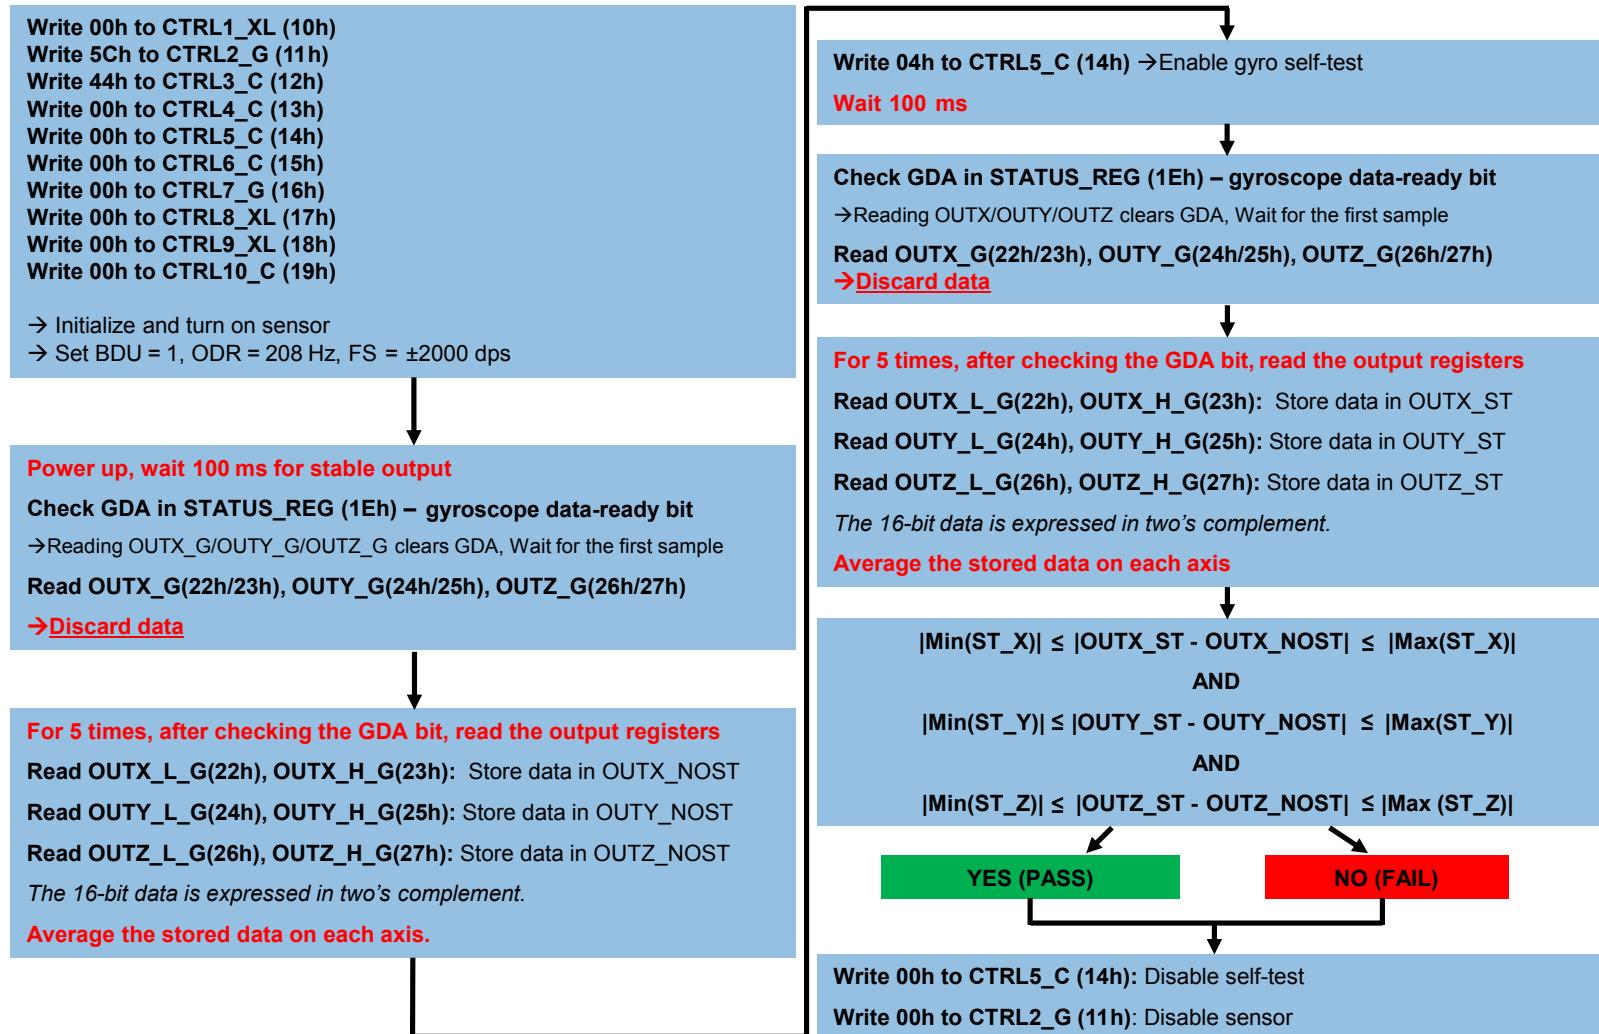

## Revision history

**Table 82. Document revision history**

Date	Version	Changes
12-Jun-2020	1	Initial release
23-Aug-2023	2	Added Note below Table 4. Embedded advanced features registers - page 0 Minor textual updates

## Contents

<b>1</b>	<b>Pin description</b>	<b>2</b>
<b>2</b>	<b>Registers</b>	<b>4</b>
<b>2.1</b>	Embedded functions registers	7
<b>2.2</b>	Embedded advanced features pages	9
<b>2.3</b>	Sensor hub registers	11
<b>3</b>	<b>Operating modes</b>	<b>13</b>
<b>3.1</b>	Power-down mode	15
<b>3.2</b>	High-performance mode	15
<b>3.3</b>	Normal mode	15
<b>3.4</b>	Low-power mode	15
<b>3.5</b>	Accelerometer ultralow-power mode	15
<b>3.6</b>	Gyroscope sleep mode	16
<b>3.7</b>	Connection modes	16
<b>3.8</b>	Accelerometer bandwidth	16
<b>3.8.1</b>	Accelerometer slope filter	19
<b>3.9</b>	Accelerometer turn-on/off time	19
<b>3.10</b>	Gyroscope bandwidth	21
<b>3.11</b>	Gyroscope turn-on/off time	24
<b>4</b>	<b>Mode 1 - reading output data</b>	<b>26</b>
<b>4.1</b>	Startup sequence	26
<b>4.2</b>	Using the status register	26
<b>4.3</b>	Using the data-ready signal	27
<b>4.3.1</b>	DRDY mask functionality	27
<b>4.4</b>	Using the block data update (BDU) feature	27
<b>4.5</b>	Understanding output data	28
<b>4.5.1</b>	Examples of output data	28
<b>4.6</b>	Accelerometer offset registers	29
<b>4.7</b>	Wraparound functions	29
<b>4.7.1</b>	FIFO output registers	29
<b>4.7.2</b>	Sensor output registers	29
<b>4.8</b>	DEN (data enable)	30
<b>4.8.1</b>	Edge-sensitive trigger mode	31
<b>4.8.2</b>	Level-sensitive trigger mode	33
<b>4.8.3</b>	Level-sensitive latched mode	34
<b>4.8.4</b>	Level-sensitive FIFO enable mode	35

4.8.5	LSB selection for DEN stamping . . . . .	35
<b>5</b>	<b>Interrupt generation . . . . .</b>	<b>36</b>
5.1	Interrupt pin configuration . . . . .	37
5.2	Free-fall interrupt . . . . .	39
5.3	Wake-up interrupt . . . . .	40
5.4	6D/4D orientation detection . . . . .	42
5.4.1	6D orientation detection . . . . .	42
5.4.2	4D orientation detection . . . . .	44
5.5	Single-tap and double-tap recognition . . . . .	44
5.5.1	Single tap . . . . .	45
5.5.2	Double tap . . . . .	46
5.5.3	Single-tap and double-tap recognition configuration . . . . .	47
5.5.4	Single-tap example . . . . .	49
5.5.5	Double-tap example . . . . .	49
5.6	Activity/inactivity and motion/stationary recognition . . . . .	50
5.6.1	Stationary/motion detection . . . . .	52
5.7	Boot status . . . . .	53
<b>6</b>	<b>Embedded functions . . . . .</b>	<b>54</b>
6.1	Pedometer functions: step detector and step counter . . . . .	54
6.2	Significant motion . . . . .	57
6.3	Relative tilt . . . . .	58
6.4	Timestamp . . . . .	60
<b>7</b>	<b>Mode 2 - sensor hub mode . . . . .</b>	<b>61</b>
7.1	Sensor hub mode description . . . . .	61
7.2	Sensor hub mode registers . . . . .	62
7.2.1	MASTER_CONFIG (14h) . . . . .	62
7.2.2	STATUS_MASTER (22h) . . . . .	63
7.2.3	SLV0_ADD (15h), SLV0_SUBADD (16h), SLV0_CONFIG (17h) . . . . .	64
7.2.4	SLV1_ADD (18h), SLV1_SUBADD (19h), SLV1_CONFIG (1Ah) . . . . .	65
7.2.5	SLV2_ADD (1Bh), SLV2_SUBADD (1Ch), SLV2_CONFIG (1Dh) . . . . .	66
7.2.6	SLV3_ADD (1Eh), SLV3_SUBADD (1Fh), SLV3_CONFIG (20h) . . . . .	67
7.2.7	DATAWRITE_SLV0 (21h) . . . . .	67
7.2.8	SENSOR_HUB_x registers . . . . .	68
7.3	Sensor hub pass-through feature . . . . .	69
7.3.1	Enabling the pass-through feature . . . . .	70
7.3.2	Disabling the pass-through feature . . . . .	70
7.4	Sensor hub mode example . . . . .	70

<b>8</b>	<b>First-in, first-out (FIFO) buffer</b>	<b>73</b>
<b>8.1</b>	FIFO description and batched sensors	74
<b>8.2</b>	FIFO registers	74
<b>8.2.1</b>	FIFO_CTRL1	75
<b>8.2.2</b>	FIFO_CTRL2	75
<b>8.2.3</b>	FIFO_CTRL3	76
<b>8.2.4</b>	FIFO_CTRL4	77
<b>8.2.5</b>	COUNTER_BDR_REG1	78
<b>8.2.6</b>	COUNTER_BDR_REG2	78
<b>8.2.7</b>	FIFO_STATUS1	78
<b>8.2.8</b>	FIFO_STATUS2	79
<b>8.2.9</b>	FIFO_DATA_OUT_TAG	79
<b>8.2.10</b>	FIFO_DATA_OUT	80
<b>8.3</b>	FIFO batched sensors	81
<b>8.4</b>	Main sensors	81
<b>8.5</b>	Auxiliary sensors	82
<b>8.6</b>	Virtual sensors	84
<b>8.6.1</b>	External sensors and NACK sensor	84
<b>8.6.2</b>	Step counter sensor	85
<b>8.7</b>	FIFO modes	85
<b>8.7.1</b>	Bypass mode	85
<b>8.7.2</b>	FIFO mode	86
<b>8.7.3</b>	Continuous mode	87
<b>8.7.4</b>	Continuous-to-FIFO mode	88
<b>8.7.5</b>	Bypass-to-continuous mode	89
<b>8.7.6</b>	Bypass-to-FIFO mode	90
<b>8.8</b>	Retrieving data from the FIFO	91
<b>8.9</b>	FIFO watermark threshold	92
<b>8.10</b>	FIFO compression	94
<b>8.10.1</b>	Time correlation	95
<b>8.10.2</b>	Data format	96
<b>8.10.3</b>	Disabling FIFO compression at runtime	97
<b>8.10.4</b>	CFG-Change sensor with FIFO compression enabled	98
<b>8.10.5</b>	Non-compressed data rate	98
<b>8.10.6</b>	FIFO compression initialization	98
<b>8.10.7</b>	FIFO compression example	99
<b>8.11</b>	Timestamp correlation	100

---

<b>9</b>	<b>Temperature sensor .....</b>	<b>101</b>
<b>9.1</b>	Example of temperature data calculation .....	101
<b>10</b>	<b>Self-test .....</b>	<b>102</b>
<b>10.1</b>	Accelerometer self-test .....	102
<b>10.2</b>	Gyroscope self-test .....	104
	<b>Revision history .....</b>	<b>106</b>
	<b>List of tables .....</b>	<b>111</b>
	<b>List of figures.....</b>	<b>113</b>

## List of tables

<b>Table 1.</b>	Pin status . . . . .	3
<b>Table 2.</b>	Registers . . . . .	4
<b>Table 3.</b>	Embedded functions registers . . . . .	7
<b>Table 4.</b>	Embedded advanced features registers - page 0 . . . . .	9
<b>Table 5.</b>	Embedded advanced features registers - page 1 . . . . .	10
<b>Table 6.</b>	Sensor hub registers . . . . .	11
<b>Table 7.</b>	Accelerometer ODR and power mode selection . . . . .	13
<b>Table 8.</b>	Gyroscope ODR and power mode selection . . . . .	14
<b>Table 9.</b>	Power consumption (typical) . . . . .	14
<b>Table 10.</b>	Accelerometer bandwidth selection . . . . .	17
<b>Table 11.</b>	Accelerometer turn-on/off time (LPF2 and HP disabled) . . . . .	20
<b>Table 12.</b>	Accelerometer samples to be discarded . . . . .	20
<b>Table 13.</b>	Gyroscope digital HP filter cutoff selection . . . . .	21
<b>Table 14.</b>	Gyroscope overall bandwidth selection . . . . .	21
<b>Table 15.</b>	Gyroscope low-power / normal mode bandwidth . . . . .	23
<b>Table 16.</b>	Gyroscope turn-on/off time (HP disabled) . . . . .	24
<b>Table 17.</b>	Gyroscope samples to be discarded in (LPF1 disabled) . . . . .	24
<b>Table 18.</b>	Gyroscope chain settling time (LPF1 enabled) . . . . .	25
<b>Table 19.</b>	Content of output data registers vs. acceleration (FS_XL = ±4 g) . . . . .	28
<b>Table 20.</b>	Content of output data registers vs. angular rate (FS_G = ±250 dps) . . . . .	28
<b>Table 21.</b>	Output register wraparound pattern . . . . .	29
<b>Table 22.</b>	DEN configurations . . . . .	30
<b>Table 23.</b>	INT1_CTRL register . . . . .	37
<b>Table 24.</b>	MD1_CFG register . . . . .	37
<b>Table 25.</b>	INT2_CTRL register . . . . .	37
<b>Table 26.</b>	MD2_CFG register . . . . .	38
<b>Table 27.</b>	Free-fall threshold LSB value . . . . .	39
<b>Table 28.</b>	D6D_SRC register . . . . .	42
<b>Table 29.</b>	Threshold for 4D/6D function . . . . .	43
<b>Table 30.</b>	D6D_SRC register in 6D positions . . . . .	44
<b>Table 31.</b>	TAP_PRIORITY_[2:0] bits configuration . . . . .	47
<b>Table 32.</b>	TAP_SRC register . . . . .	48
<b>Table 33.</b>	Inactivity event configuration . . . . .	50
<b>Table 34.</b>	EMB_FUNC_SRC embedded functions register . . . . .	54
<b>Table 35.</b>	IS_STEP_DET configuration . . . . .	55
<b>Table 36.</b>	ODR <sub>coeff</sub> values . . . . .	60
<b>Table 37.</b>	MASTER_CONFIG register . . . . .	62
<b>Table 38.</b>	STATUS_MASTER / STATUS_MASTER_MAINPAGE register . . . . .	63
<b>Table 39.</b>	SLV0_ADD register . . . . .	64
<b>Table 40.</b>	SLV0_SUBADD register . . . . .	64
<b>Table 41.</b>	SLV0_CONFIG register . . . . .	64
<b>Table 42.</b>	SLV1_ADD register . . . . .	65
<b>Table 43.</b>	SLV1_SUBADD register . . . . .	65
<b>Table 44.</b>	SLV1_CONFIG register . . . . .	65
<b>Table 45.</b>	SLV2_ADD register . . . . .	66
<b>Table 46.</b>	SLV2_SUBADD register . . . . .	66
<b>Table 47.</b>	SLV2_CONFIG register . . . . .	66
<b>Table 48.</b>	SLV3_ADD register . . . . .	67
<b>Table 49.</b>	SLV3_SUBADD register . . . . .	67
<b>Table 50.</b>	SLV3_CONFIG register . . . . .	67
<b>Table 51.</b>	DATAWRITE_SLV0 register . . . . .	67
<b>Table 52.</b>	FIFO_CTRL1 register . . . . .	75
<b>Table 53.</b>	FIFO_CTRL2 register . . . . .	75

---

<a href="#">Table 54.</a>	Forced non-compressed data write configurations . . . . .	75
<a href="#">Table 55.</a>	FIFO_CTRL3 register . . . . .	76
<a href="#">Table 56.</a>	Accelerometer batch data rate . . . . .	76
<a href="#">Table 57.</a>	Gyroscope batch data rate . . . . .	76
<a href="#">Table 58.</a>	Timestamp batch data rate . . . . .	77
<a href="#">Table 59.</a>	Temperature sensor batch data rate . . . . .	77
<a href="#">Table 60.</a>	FIFO_CTRL4 register . . . . .	77
<a href="#">Table 61.</a>	COUNTER_BDR_REG1 register . . . . .	78
<a href="#">Table 62.</a>	COUNTER_BDR_REG2 register . . . . .	78
<a href="#">Table 63.</a>	FIFO_STATUS1 register . . . . .	78
<a href="#">Table 64.</a>	FIFO_STATUS2 register . . . . .	79
<a href="#">Table 65.</a>	FIFO_DATA_OUT_TAG register . . . . .	79
<a href="#">Table 66.</a>	TAG_SENSOR field and associated sensor . . . . .	80
<a href="#">Table 67.</a>	Main sensors output data format in FIFO . . . . .	81
<a href="#">Table 68.</a>	Temperature output data format in FIFO . . . . .	82
<a href="#">Table 69.</a>	Timestamp output data format in FIFO . . . . .	82
<a href="#">Table 70.</a>	CFG-change output data format in FIFO . . . . .	83
<a href="#">Table 71.</a>	BDR_SHUB . . . . .	84
<a href="#">Table 72.</a>	Nack sensor output data format in FIFO . . . . .	84
<a href="#">Table 73.</a>	Format of step counter output data in FIFO . . . . .	85
<a href="#">Table 74.</a>	FIFO compression tags and associated data . . . . .	95
<a href="#">Table 75.</a>	2xC compressed data output data format in FIFO . . . . .	96
<a href="#">Table 76.</a>	3xC compressed data output data format in FIFO . . . . .	96
<a href="#">Table 77.</a>	Example of disabled runtime compression . . . . .	97
<a href="#">Table 78.</a>	Example of device configuration change with FIFO compression enabled . . . . .	98
<a href="#">Table 79.</a>	UNCOPTR_RATE configuration . . . . .	98
<a href="#">Table 80.</a>	FIFO compression example . . . . .	99
<a href="#">Table 81.</a>	Output data registers content vs. temperature . . . . .	101
<a href="#">Table 82.</a>	Document revision history . . . . .	106

## List of figures

<b>Figure 1.</b>	Pin connections . . . . .	2
<b>Figure 2.</b>	Accelerometer filtering chain . . . . .	16
<b>Figure 3.</b>	Accelerometer slope filter. . . . .	19
<b>Figure 4.</b>	Gyroscope digital chain . . . . .	21
<b>Figure 5.</b>	Data-ready signal . . . . .	27
<b>Figure 6.</b>	Edge-sensitive trigger mode, DEN active-low . . . . .	31
<b>Figure 7.</b>	Level-sensitive trigger mode, DEN active-low . . . . .	33
<b>Figure 8.</b>	Level-sensitive trigger mode, DEN active-low, DEN_DRDY on INT1 . . . . .	33
<b>Figure 9.</b>	Level-sensitive latched mode, DEN active-low . . . . .	34
<b>Figure 10.</b>	Level-sensitive latched mode, DEN active-low, DEN_DRDY on INT1. . . . .	34
<b>Figure 11.</b>	Level-sensitive FIFO enable mode, DEN active-low. . . . .	35
<b>Figure 12.</b>	Free-fall interrupt . . . . .	39
<b>Figure 13.</b>	Wake-up interrupt (using the slope filter) . . . . .	41
<b>Figure 14.</b>	6D recognized orientations . . . . .	43
<b>Figure 15.</b>	Single-tap event recognition . . . . .	45
<b>Figure 16.</b>	Double-tap event recognition (LIR bit = 0) . . . . .	46
<b>Figure 17.</b>	Single and double-tap recognition (LIR bit = 0) . . . . .	48
<b>Figure 18.</b>	Activity/inactivity recognition (using the slope filter) . . . . .	51
<b>Figure 19.</b>	Tilt example . . . . .	58
<b>Figure 20.</b>	External sensor connections in mode 2 . . . . .	61
<b>Figure 21.</b>	SENSOR_HUB_X allocation example . . . . .	68
<b>Figure 22.</b>	Pass-through feature. . . . .	69
<b>Figure 23.</b>	Main sensors and time slot definitions . . . . .	81
<b>Figure 24.</b>	FIFO mode (STOP_ON_WTM = 0) . . . . .	86
<b>Figure 25.</b>	Continuous mode . . . . .	87
<b>Figure 26.</b>	Continuous-to-FIFO mode . . . . .	88
<b>Figure 27.</b>	Bypass-to-continuous mode. . . . .	89
<b>Figure 28.</b>	Bypass-to-FIFO mode . . . . .	90
<b>Figure 29.</b>	FIFO threshold (STOP_ON_WTM = 0) . . . . .	92
<b>Figure 30.</b>	FIFO threshold (STOP_ON_WTM = 1) in FIFO mode . . . . .	93
<b>Figure 31.</b>	FIFO threshold (STOP_ON_WTM = 1) in continuous mode . . . . .	94
<b>Figure 32.</b>	Accelerometer self-test procedure. . . . .	103
<b>Figure 33.</b>	Gyroscope self-test procedure . . . . .	105

**IMPORTANT NOTICE – READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to [www.st.com/trademarks](http://www.st.com/trademarks). All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2023 STMicroelectronics – All rights reserved