


PCB substrate:  $\epsilon_r$  vs loss tangent  $\tan \delta$  (at 1 GHz)

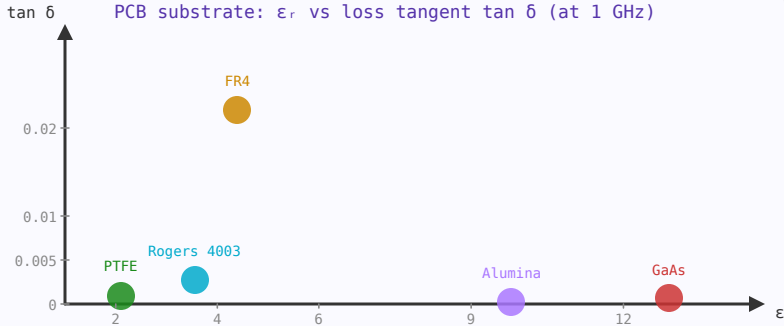

Lower-left = best RF performance (low  $\epsilon_r$ , low loss). FR4 gets lossy above 1 GHz.