


Rectangular waveguide TE_{10} E-field pattern

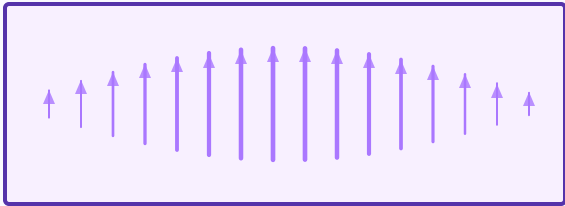

|-----|

a (broad dimension)

$f_{\text{cutoff}} = c/(2a)$. TE_{10} is the dominant mode; operate between f_c and $2f_c$.