Magnatech International

RB-2

ROTARY BRAIDER

24 Carrier
Parts Section

Magnatech International, Inc.
17 East Meadow Avenue
Robesonia, PA 19551
Phone: (610) 693-8866
Fax: (610) 693-8816
E-Mail: info @magnatech-int.com
Web Address: http://www.magnatech-int.com

209-EN RB2 Parts_24
REV: 08/2022


Table of Contents

Main Assembly – B6-90107-4 7
Main Assembly – B6-90107-4 8
Change Gear Box Assembly – B6-90103-1 15
Change Gear Box BOM – B6-90103-1 16
Bearing Cartridge Input Shaft – B6-90014 17
Bearing Cartridge Output Shaft Assembly – B6-90036 18
Change Gear Box Door Assembly – B690207 19
Outer Carrier Bracket Assembly – B6-90051 – Detail 1 20
Outer Carrier Bracket Assembly – B6-90051 – Detail 2 21
Outer Carrier Bracket BOM – B6-90051 22
Actuator Linkage Assembly – Main – B6-90250-1 23
Actuator Linkage Assembly – Detail 1 – B6-90250-1 24
Actuator Linkage Assembly – Detail 2 – B6-90250-1 25
Actuator Linkage Assembly – Detail 3 – B6-90250-1 26
Actuator Linkage BOM – B6-90250-1 27
Actuator Lever Assembly – B6-90108-2 28
Drive Finger Segment Assembly – with Lube Fitting – Front –B6-90262 29
Drive Finger Segment Assembly – with Lube Fitting – Rear – B6-90262 30
Drive Finger Segment BOM – with Lube Fitting – B6-90262 31
Driver Finger Segment Assembly – Front - B6-90052-2 32
Drive Finger Assembly BOM – B6-90052-2 34
Ring Gear Lubrication Detail 35
DX Block Assembly / BOM – B6-90259 36
Drive Finger Plunger Crank Assembly – B6-90043 37
Drive Finger Plunger Crank Assembly – B6-90176 38
Power Former Assembly, Standard – Main – B6-90180 39
Power Former Assembly, Standard – Detail 1 – B6-90180 40
Power Former Assembly, Standard – Detail 2 – B6-90180 41
Power Former, Standard BOM – B6-90180 43


Power Former, Standard BOM – B6-90180 (continued) 44
Power Former, Standard BOM – B6-90180 (continued) 45
Power Former Gear Box Assembly 46
Power Former Gearbox BOM 47
Power Former Gearbox Cross Reference 48
Split "Bull" Gear Assembly – B6-90109-1 49
Strand Rest Assembly – B6-90081-1 50
Product Guide Assembly – B6-90106-1 51
Product Guide BOM – B6-90106-1 52
Product Guide BOM – B6-90106-1 (continued) 53
Product Guide Support Tube – B6-90017 54
Product Guide Plunger – B6-90201 55
Track Oiler Assembly – Inner Track – B6-90879-1 56
Track Oiler BOM – Inner Track – B6-90879-1 57
Track Oiler Assembly – Outer Track – B6-90880-1 58
Track Oiler BOM – Outer Track – B6-90880-1 59
Track Oiler Assembly – Inner Track – B6-90311 60
Track Oiler BOM – Inner Track – B6-90311 61
Track Oiler Assembly – Outer Track – B6-90312 62
Track Oiler BOM – Outer Track – B6-90312 63
Gallows Stop-Motion Assembly – B6-92233 64
Gallows Stop-Motion Assembly – B6-92233 65
Gallows Stop-Motion Assembly – B6-92233 66
Gallows Stop-Motion BOM – B6-92233 67
Gallows Stop-Motion BOM – B6-92233 (continued) 68
Track Oiler Actuator Assembly – B6-90349 69
Track Oiler Actuator Assembly – B6-90276 70
Outer Carrier Assembly – 24 Carrier – Detail 1 –B6-90850 71
Outer Carrier Assembly – 24 Carrier – Detail 2 –B6-90850 72
Outer Carrier Assembly – 24 Carrier – Detail 3 –B6-90850 73
Baler Bar, Outer Assembly – B6-90280 77

Inner Carrier BOM – 24 Carrier – B6-90851.....82
Compensator Arm Assembly – B6-90244 85
Baler Bar, Inner Assembly – B6-90281.....87
High Torque Clutch Assembly – B6-90719 88
High Torque Clutch BOM – B6-90719.....89

Main Assembly – B6-90107-4

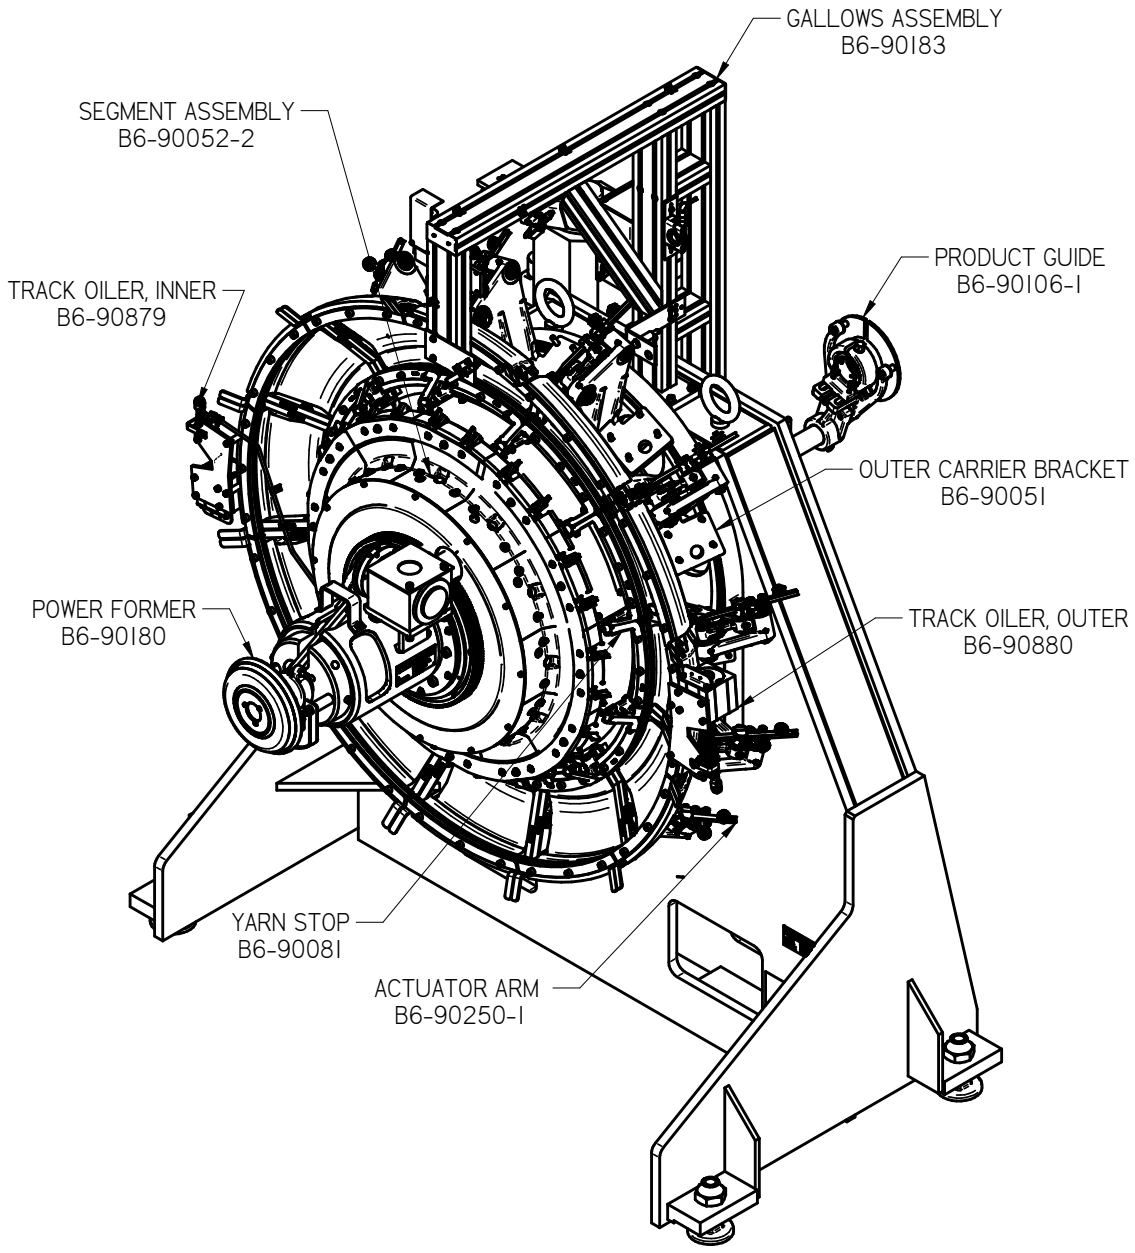

Main Assembly – B6-90107-4

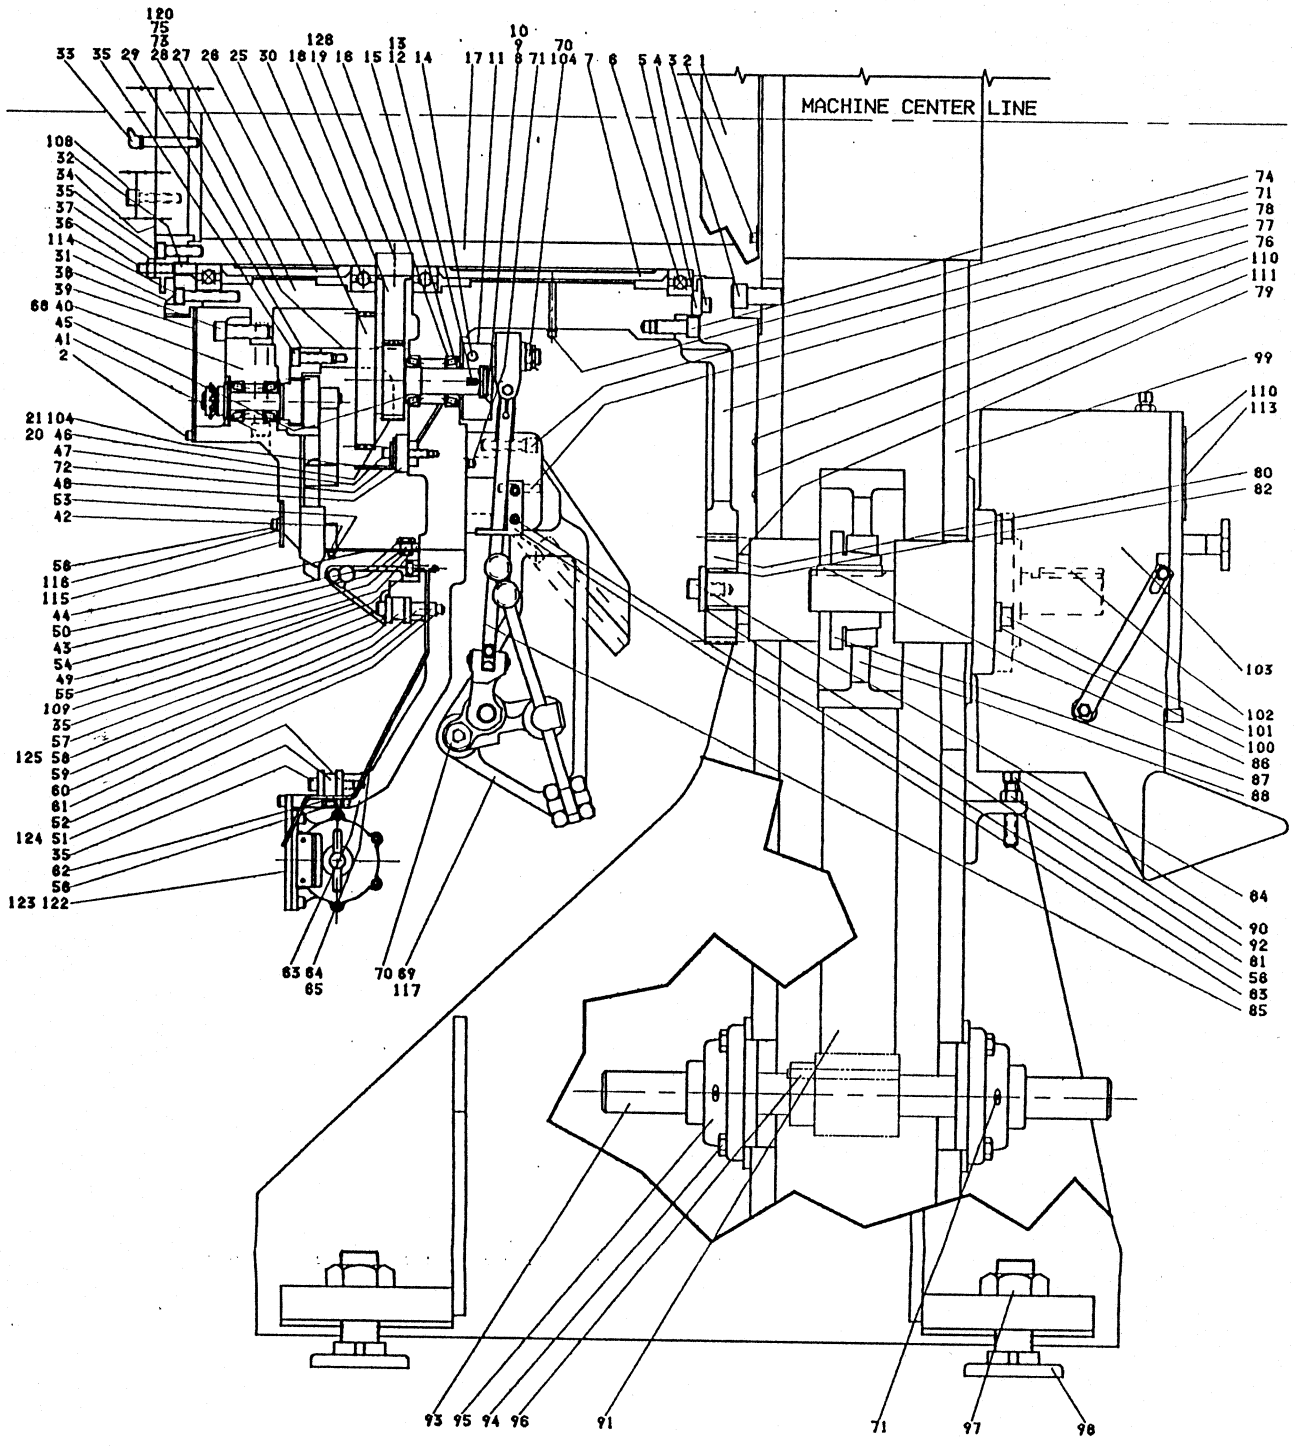

DECK ASSEMBLY
(24 CARRIER B6-90107-4)

NO.	PART NO.	PART NAME
	B6-90107-4	RB-2 24-C Deck Unit
1	B6-698	Ring Gear Cover
2	137-352	Socket Head Cap Screw 1/4-20 x 3/8
3	137-172	Socket Head Cap Screw 5/8-11 x 1 1/2
4	137-17	Socket Head Cap Screw 3/8-16 x 1
5	B6-478	Bearing Clamp
6	904-408	Bearing
7	B6-38-1	Bearing Spacer
8	150-16	Bearing Locknut TN02
9	151-22	Bearing Lockwasher TW102
10	151-23	Keyed Washer
11	B6-1184	Crank Collar
12	B6-1185	Key for Crank Collar
13	141-614	Set Screw 3/8-16 x 3/4 - Loc-Wel
14	137-18	Socket Head Cap Screw 3/8-16 x 1 1/4
15	904-410	Bearing Cone
16	904-395	Bearing Cup
17	B6-66-1	Trunion
18	B6-1112-2	Stationary Ring Gear
19	B6-67-1	Key for Stationary Ring Gear
20	FB-117	Washer
21	B6-90256	Grease Deflector
25	B6-1180	Compound Gear
26	B6-37-1	Bearing Spacer
27	B6-1111-2	Inner Turntable Hub
28	B6-351	Support Bracket for Ring Gear
29	B6-350-2	Ring Gear for Escapement Drive
30	904-407	Bearing
31	B6-906	Ring Gear for Power Former
32	B6-700	Clamping Ring for Bearing
33	48-975	Grease Fitting
34	B6-918	Locking Ring for Trunion Bearing
35	137-321	Socket Head Cap Screw 3/8-16 x 1 1/2
36	141-38	Headless Set Screw 3/8-16 x 1 1/2
37	90-67	Hex Nut 3/8-16
38	137-196	Socket Head Cap Screw 1/2-13 x 1 3/4
39	B6-348	Cover Section
40	B6-90052-2	Drive Finger Assembly

RB-2 Rotary Braider - 24-CARRIER MACHINE

Parts List - PLATE 1

NO.	PART NO.	PART NAME
	B6-90107-4	RB-2 24-C Deck Unit *(continued)*
41	137-178	Socket Head Cap Screw 1/2-13 x 4
42	H-2	Washer
43	B6-1050	Spacer Nut
44	B6-368-1	Side Cover Section
45	904-454	Bearing Cone
46	B6-1181	Axle Pinion Gear
47	137-362	Socket Head Cap Screw 5/16-18 x 1 1/2
48	B6-370	Inner Grease Ring
49	B6-369-1	Felt Wiper Section
50	B6-1048	Clamp Ring for Wiper
51	B6-727-3	Center Piece for Outer Track
52	B6-726-4	Upper & Lower Outer Track
53	137-345	Socket Head Cap Screw #10-24 x 1/2
54	136-2	Hex Head Cap Screw 1/4-20 x 1/2
55	B6-90081-1	Strand Rest
	B6-479-1	Left Side Piece
	B6-480-1	Right Side Piece
	B6-481	Mounting Rail
	B6-1144	Stop Pin
	H-3	Spacer Washer
	137-365	Socket Head Cap Screw 1/4-20 x 1 1/4
	137-335	Socket Head Cap Screw 1/4-20 x 3/4
56	137-334	Socket Head Cap Screw 1/4-20 x 1/2
57	B6-728-3	Upper & Lower Inner Track
58	B6-729-3	Center Piece for Inner Track
59	B6-735	Spacer for Strand Guide
60	B6-736	Spacer for Strand Guide
61	137-365	Socket Head Cap Screw 1/4-20 x 1 1/4
62	B6-737	Washer for Strand Guide
63	B6-732	Outer Turntable
64	B6-733-5	Strand Guide - Right Hand
65	B6-734-5	Strand Guide - Left Hand
68	B6-90262	Segment With Lube Port for Ring Gear
69	B6-90051	Mounting Bracket Assembly
70	90-208	Flexloc Nut 5/8-18
71	48-54	Grease Fitting
72	B6-1064	Bridge Support For Ring Gear
73	104-354	Dowel Pin 1/4 Dia x 1

RB-2 Rotary Braider - 24-CARRIER MACHINE

Parts List - PLATE 1

NO.	PART NO.	PART NAME
	B6-90107-4	RB-2 24-C Deck Unit *(continued)*
74	137-30	Socket Head Cap Screw 1/2-13 x 1 1/4
75	104-431	Dowel Pin 1/4 Dia x 1 1/2
76	B6-90109-1	Main Drive Gear Assembly
77	104-507	Dowel Pin 5/16 Dia x 1 1/2
78	137-366	Socket Head Cap Screw 1/2-13 x 2
79	B6-269	Rear Clamp Washer
80	B6-623-1	Drive Pinion
81	B6-277-1	Front Clamp Washer
82	B6-405	Key for Drive Pinion
83	B6-371-1	Guard for Connecting Rod
84	137-30	Socket Head Cap screw 1/2-13 x 1 1/4
85	B6-90250-1	Actuating Linkage Assembly
86	B6-406	Key for 60T Timing Pulley
87	900-49	Bushing 1 5/8 Bore
88	906-384	Timing Belt Pulley
90	139-80	Square Head Set Screw 1/2-13 x 3
91	11-200	Timing Belt
92	90-179	Hex Nut 1/2-13
93	B6-540	Deck Drive Shaft
94	136-63	Hex Head Cap Screw 1/2-13 x 1 3/4
95	904-392	Flange Bearing 1 5/8 Bore
96	B6-407	Key for Driving Pulley
97	90-182	Hex Nut 1 1/2-12
98	B1-2177-1	Adjustable Foot for Frame
99	B6-90356	Deck Frame
100	B6-585	Washer for Gearbox
101	137-122	Socket Head Cap Screw 1/2-13 x 2
102	75-33	Key 3/8 Square x 2 1/2
103	B6-90103-1	Gearbox
	B6-90014	Input Shaft Brg Cartridge Assembly - Includes:
	B6-252-1	Input Shaft
	B6-254	Bearing Cartridge
	150-6	Bearing Locknut
	151-8	Bearing Lockwasher
	193-703	Retaining Ring
	217-40	Oil Seal
	904-167	Ball Brg With Wide Inner Race
	904-473	Radial Ball Bearing

RB-2 Rotary Braider - 24-CARRIER MACHINE

Parts List - PLATE 1

NO.	PART NO.	PART NAME
	B6-90107-4	RB-2 24-C Deck Unit *(continued)*
	B6-90036	Output Shaft Brg Cartridge Assembly - Includes:
	B6-255	Bearing Cartridge
	B6-355-1	Output Shaft
	150-6	Bearing Locknut
	151-8	Bearing Lockwasher
	193-703	Retaining Ring
	217-40	Oil Seal
	904-373	Radial Ball Bearing
	904-386	Roller Bearing and Outer Race
	904-387	Inner Race for Roller Bearing
	48-60	Grease Fitting
	B6-90207	Gearbox Cover - Includes:
	B6-1052	Cover
	B6-1053	Gasket
	B6-511	Knob
	B6-674	Spacer
	B6-684	Clamp Screw
	104-291	Roll Pin 3/32 x 5/8 Lg.
	B6-249	Gasket for Bearing Cartridge
	B6-1051	Gearbox
104	B6-645	Bearing Spacer
108	137-369	Socket Head Cap Screw 1/2-13 x 3 1/2
109	137-335	Socket Head Cap Screw 1/4-20 x 3/4
110	113-102	Drive Screw
111	B6-617	Machine Identification Tag
113	B1-6336	Caution Tag
114	137-373	Socket Head Cap Screw 3/8-16 x 2 1/4
115	B6-1043-2	Strand Guard
116	H-3	Washer
117	137-321	Outer Carrier Mounting Screw
120	137-18	Socket Head Cap Screw 3/8-16 x 1 1/4
122	B6-90289	Oiler for Inner Track (See List Below)
123	B6-90290	Oiler for Outer Track (See List Next Page)
124	B6-1253-3	Center Outer Track With Oiler
125	B6-1254-3	Center Inner Track With Oiler
126	137-337	Socket Head Cap Screw 5/16-18 x 1 1/4 (Loc-Wel)

RB-2 Rotary Braider - 24-CARRIER MACHINE

Parts List - PLATE 1


NO.	PART NO.	PART NAME
	B6-90107-4	RB-2 24-C Deck Unit *(continued)*
		Parts for B6-90289 Inner Track Oiler:
	B6-1260	Spacer for Mounting Plate
	137-36	Socket Head Cap Screw 5/16-18 x 2 1/4
	B6-90287	Reservoir Assembly
	137-130	Socket Head Cap Screw 5/16-18 x 1/2
	48-825	Connector
	48-972	Check Valve
	B6-1270	1/4 Dia. Plastic Tube
	48-969	Connector
	90-209	Locking Nut 1/4-20
	48-962	2-Way Valve
	H-3	Washer
	137-141	Socket Head Cap Screw 1/4-20 x 2
	B6-1262	Lever Stop
	137-334	Socket Head Cap Screw 1/4-20 x 1/2
	B6-1321	Mounting Plate
	B6-1252	1/4 Dia. Tube
	48-965	Connector
	48-340	Elbow
	48-209	Compression Bushing
	48-210	Compression Sleeve
	B6-1251	Delivery Tube
	137-330	Socket Head Cap Screw #10-32 x 3/8 (Loc-Wel)
	48-970	Retaining Clip
	48-963	Elbow
		Parts for B6-90290 Outer Track Oiler:
	B6-1260	Spacer for Mounting Plate
	137-36	Socket Head Cap Screw 5/16-18 x 2 1/4
	B6-90287	Reservoir Assembly
	137-130	Socket Head Cap Screw 5/16-18 x 1/2
	48-825	Connector
	48-972	Check Valve
	B6-1270	1/4 Dia. Plastic Tube
	48-969	Connector
	90-209	Locking Nut 1/4-20

RB-2 Rotary Braider - 24-CARRIER MACHINE

Parts List - PLATE 1

NO.	PART NO.	PART NAME
	B6-90107-4	RB-2 24-C Deck Unit *(continued)*
		Parts for B6-90290 Outer Track Oiler:
	48-962	2-Way Valve
	H-3	Washer
	137-141	Socket Head Cap Screw 1/4-20 x 2
	B6-1262	Lever Stop
	137-334	Socket Head Cap Screw 1/4-20 x 1/2
	B6-1321	Mounting Plate
	B6-1251	1/4 Dia. Tube
	48-964	Reducer Bushing
	48-209	Compression Bushing
	48-210	Compression Sleeve
	48-340	Elbow


Change Gear Box Assembly – B6-90103-1

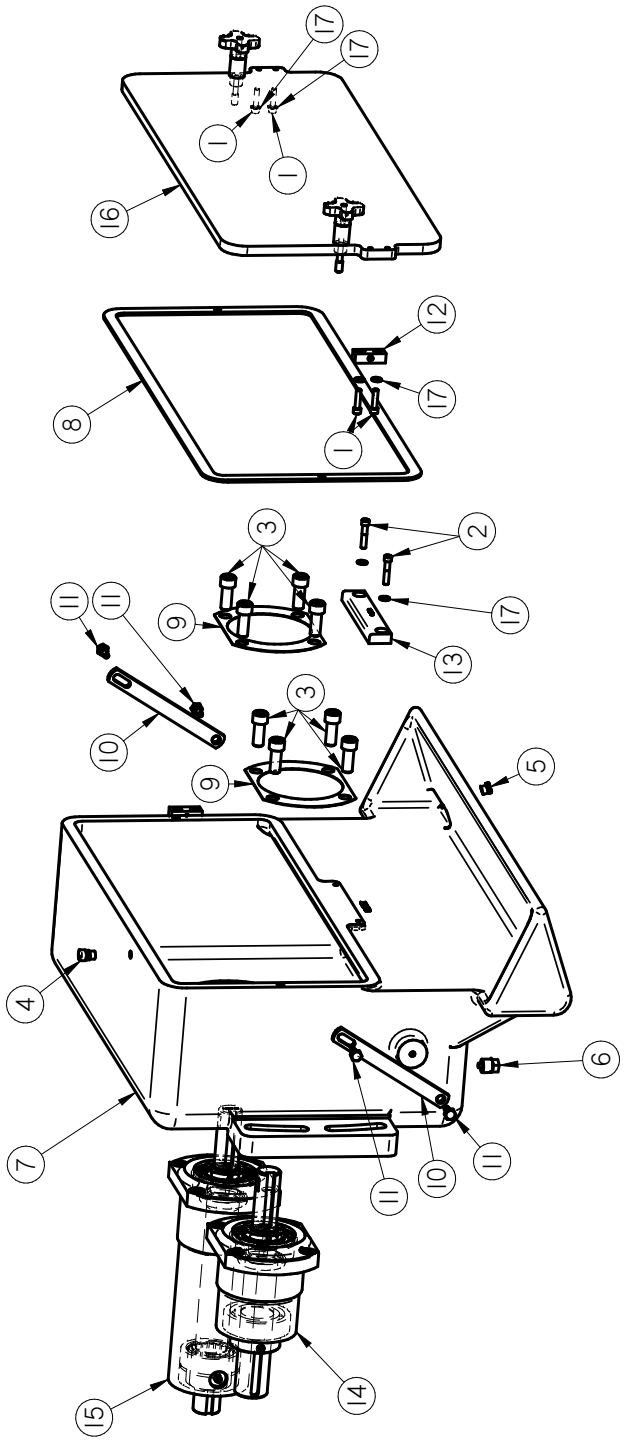

Change Gear Box BOM – B6-90103-1


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-007	SCREW,SOC HD CAP 1/4-20 X 1	4	PC
2	137-008	SCREW, SOC HD CAP 1/4-20 X 1-1/4	2	PC
3	137-030	SCREW,SOC HD CAP 1/2-13 X 1-1/4	8	PC
4	48-854	FITTING,AIR VENT A#301370 1/8PTF	1	PC
5	747-073	FITTING,PLUG HEX 1/8-27	1	PC
6	747-126	FITTING,PLUG DRAIN 3/8NPTF	1	PC
7	B6-1051	BOX, GEAR	1	PC
8	B6-1053	GASKET,GEAR BOX COVER	1	PC
9	B6-249	GASKET,BEARING CARTRIDGE	2	PC
10	B6-505	LINK,FOR GEAR BOX COVER	2	PC
11	B6-506	STUD,SHOULDER, FOR GEAR BOX COVER	4	PC
12	B6-507	BLOCK,HINGE, GEAR BOX COVER	2	PC
13	B6-738-1	SUPPORT, FOR GEAR BOX COVER	1	PC
14	B6-90014	BEARING,CARTRIDGE ASS'Y (INPUT SHAFT)	1	PC
15	B6-90036	BEARING,CARTRIDGE,OUTPUT SHAFT,24C	1	PC
16	B6-90207	COVER,CHANGE GEAR BOX	1	PC
17	H-9	WASHER 1/2 O.D. .266 I.D. .049 THICK	6	PC

Bearing Cartridge Input Shaft – B6-90014

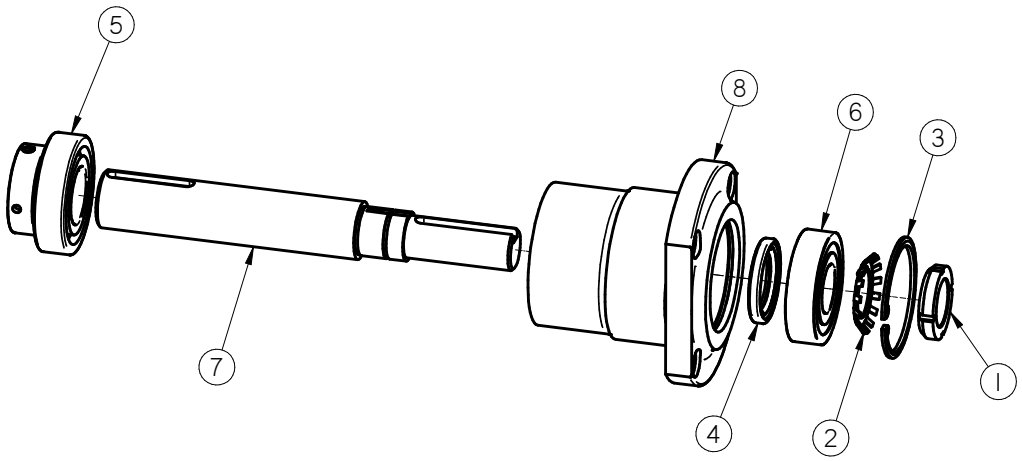


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	150-006	LOCKNUT,BEARING N-7	1	PC
2	151-008	WASHER,BEARING LOCK W-07	1	PC
3	193-703	RING,RET INTERNAL 3-33/64	1	PC
4	217-040	SEAL,OIL 1.631D 2.380D .31W	1	PC
5	904-167	BRG,BALL 1.631D 3.350D 1.19LG	1	PC
6	904-473	BRG,BALL 1.381D 3.150D .83LG	1	PC
7	B6-252-1	SHAFT,INPUT	1	PC
8	B6-254	CARTRIDGE,BEARING, (INPUT SHAFT)	1	PC

Bearing Cartridge Output Shaft Assembly – B6-90036

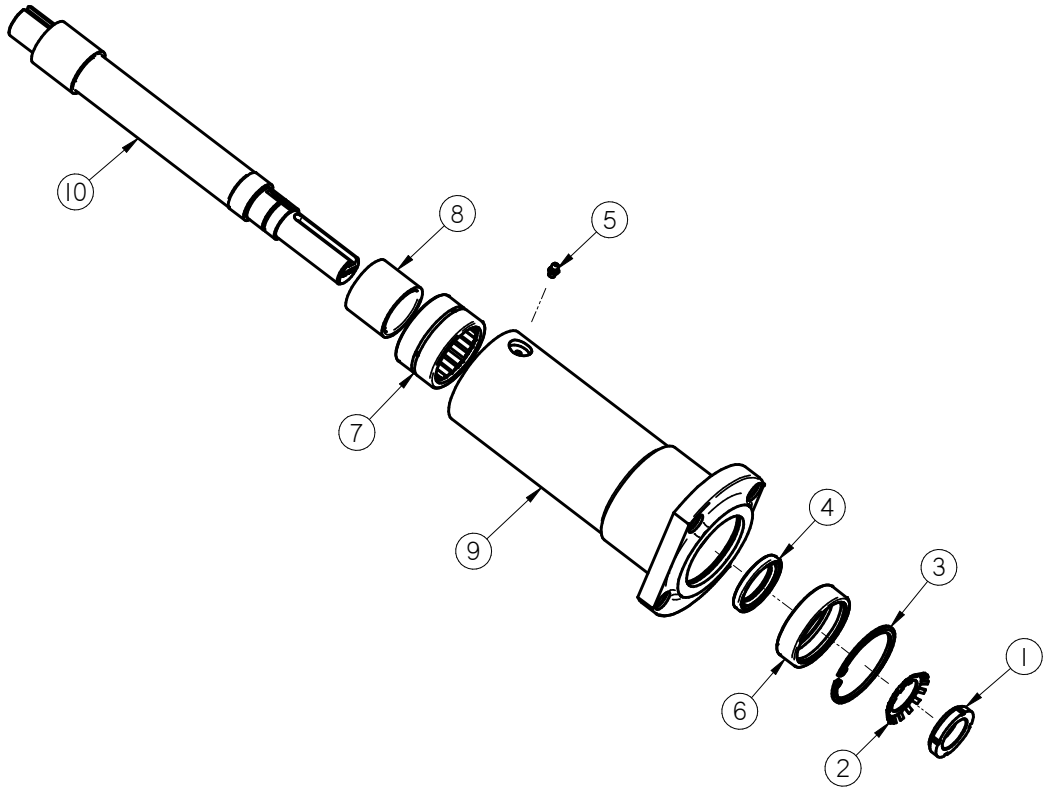


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	150-006	LOCKNUT,BEARING N-7	1	PC
2	151-008	WASHER,BEARING LOCK W-07	1	PC
3	193-703	RING,RET INTERNAL 3-33/64	1	PC
4	217-040	SEAL,OIL 1.631D 2.380D .31W	1	PC
5	48-060	FITTING,GREASE A#1641-B 1/4-28	1	PC
6	904-373	BRG,BALL 1.381D 3.150D .83LG	1	PC
7	904-386	BRG,ROLLER 1.751D 3.000D 1.75LG	1	PC
8	904-387	BRG,RACE 1.881D 2.250D 1.76LG	1	PC
9	B6-255	CARTRIDGE,BEARING, (OUTPUT SHAFT)	1	PC
10	B6-355-1	SHAFT,OUTPUT	1	PC

Change Gear Box Door Assembly – B690207

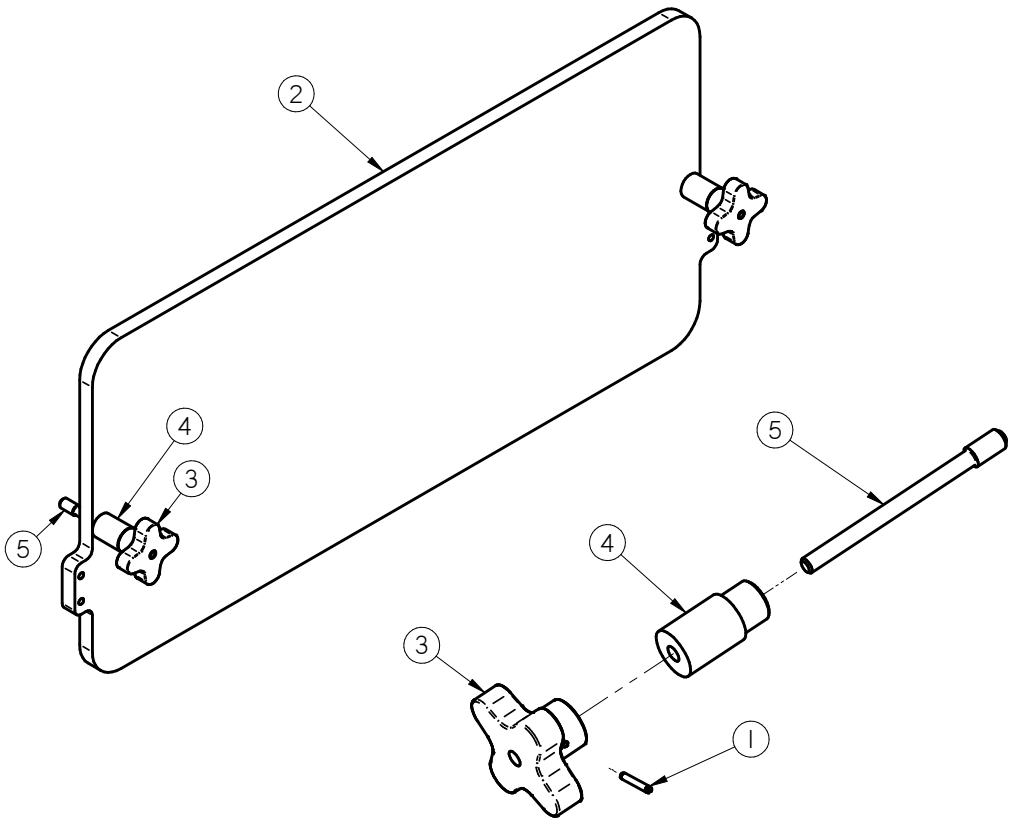


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	104-291	PIN,ROLL .094 X 5/8	2	PC
2	B6-1052	COVER, CHANGE GEAR BOX	1	PC
3	B6-511	HANDLE,GEAR BOX COVER	2	PC
4	B6-674	SPACER, FOR HANDLE GEAR BOX COVER	2	PC
5	B6-684	SCREW,CLAMP,GEAR BOX COVER	2	PC

Outer Carrier Bracket Assembly – B6-90051 – Detail 1

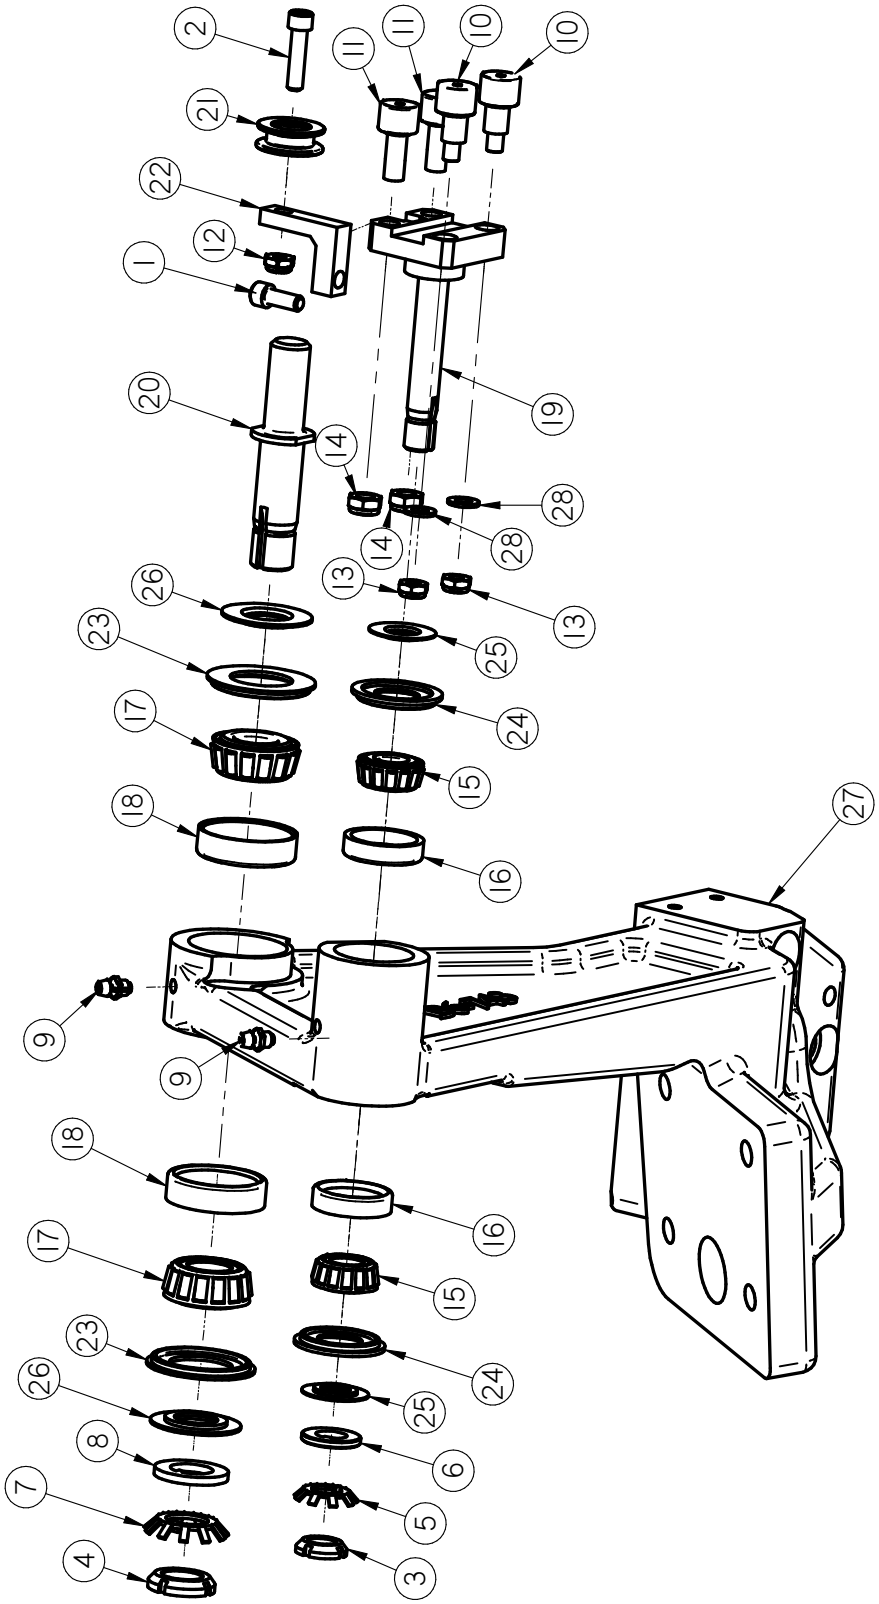


Outer Carrier Bracket Assembly – B6-90051 – Detail 2

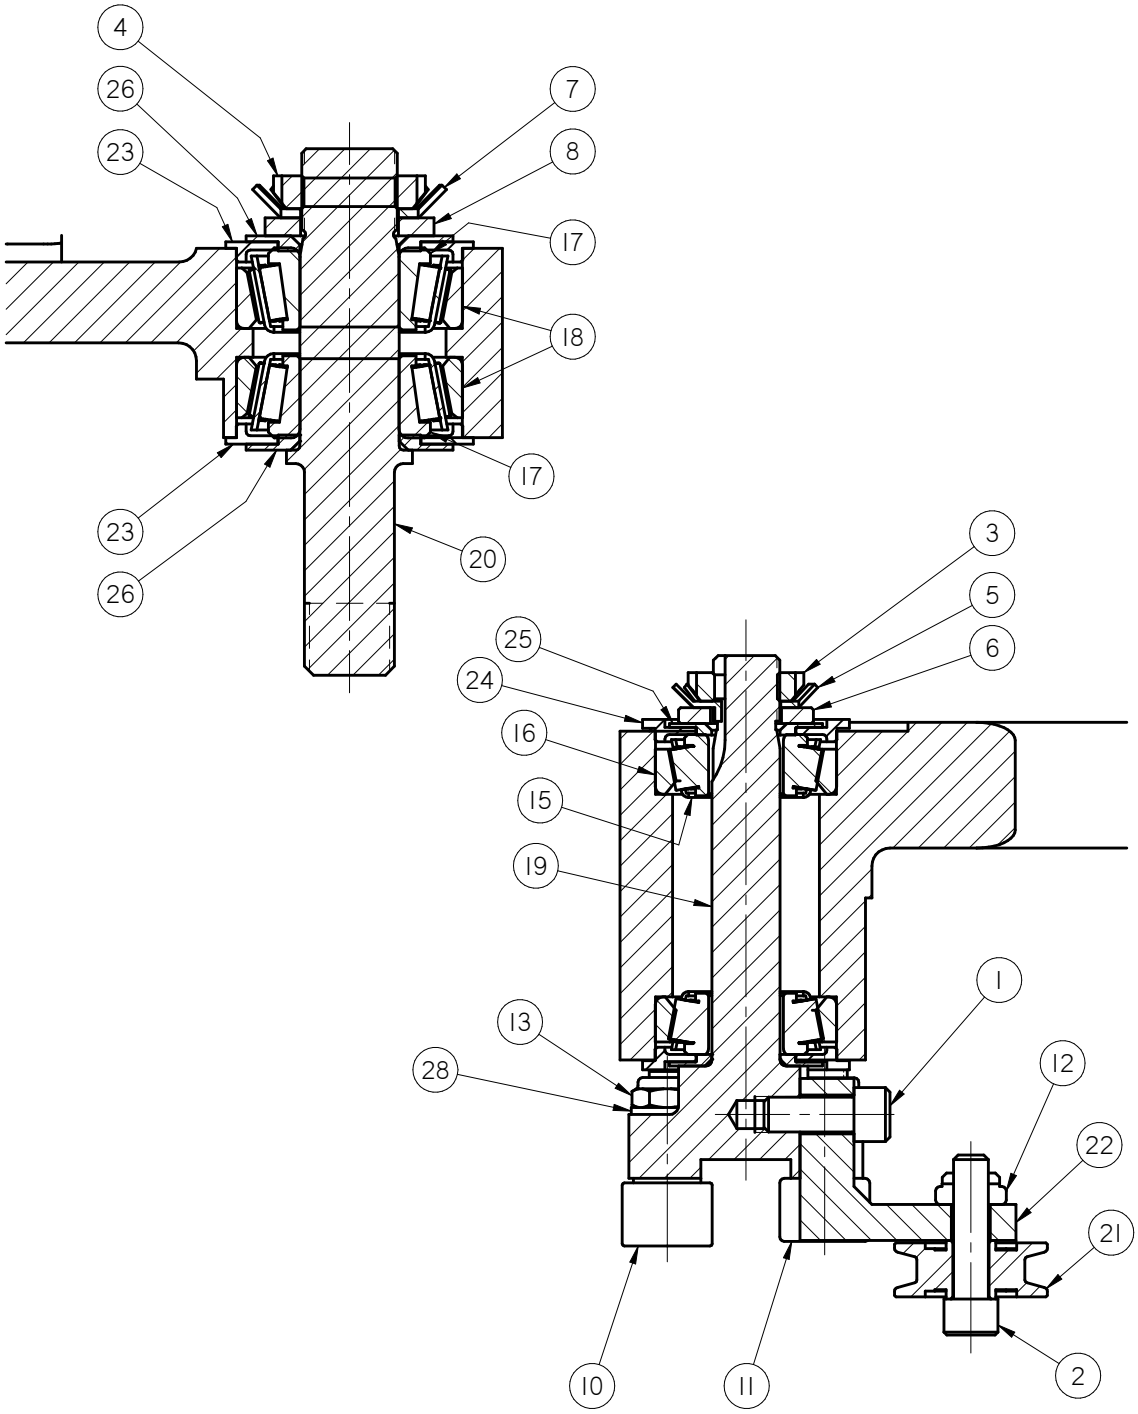


Outer Carrier Bracket BOM – B6-90051


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-005	SCREW,SOC HD CAP 1/4-20 X 5/8	1	PC
2	137-007	SCREW,SOC HD CAP 1/4-20 X 1	1	PC
3	150-011	LOCKNUT,BEARING TN01	1	PC
4	150-012	LOCKNUT,BEARING TN03	1	PC
5	151-013	WASHER,BEARING LOCK TW-101	1	PC
6	151-014	WASHER,BEARING LOCK K91501	1	PC
7	151-015	WASHER,BEARING LOCK	1	PC
8	151-016	WASHER,BEARING LOCK K91503	1	PC
9	48-954	FITTING,GREASE 1/4-28	2	PC
10	57-230	BRG,CAM FOLLOWER 5/8 DIA	2	PC
11	57-271	BRG,CAM FOLLOWER 5/8 DIA	2	PC
12	90-209	NUT,SELF-LOCKING 1/4 -20	1	PC
13	90-217	NUT,SELF-LOCKING 1/4 -28	2	PC
14	90-218	NUT,SELF-LOCKING 5/16-24	2	PC
15	904-378	BRG,CONE .471D A2047	2	PC
16	904-379	BRG,CUP 1.26 OD A2126	2	PC
17	904-380	BRG,CONE .691D	2	PC
18	904-381	BRG,CUP 1.57 OD	2	PC
19	B6-181-1	STUD,STATIONARY PIVOT	1	PC
20	B6-260	STUD,PIVOT, FOR YARN ACTUATOR LEVER	1	PC
21	B6-386-2	ROLLER, STRAND	1	PC
22	B6-414-2	BRACKET,YARN GUIDE ROLLER ON ACT LEVE	1	PC
23	B6-550	WASHER,SEAL F/TIMKEN ROLLER BEARING	2	PC
24	B6-551	WASHER,SEAL F/TIMKEN ROLLER BEARING	2	PC
25	B6-582	WASHER,F/ROLLER BEARING SEAL(SMALL)	2	PC
26	B6-583	WASHER,F/ROLLER BEARING SEAL(LARGE)	2	PC
27	B6-743	BRACKET,MOUNTING, F/YRN ACTUAT.&OUT. CAR	1	PC
28	H-9	WASHER 1/2 O.D. .266 I.D. .049 THICK	2	PC

Actuator Linkage Assembly – Main – B6-90250-1

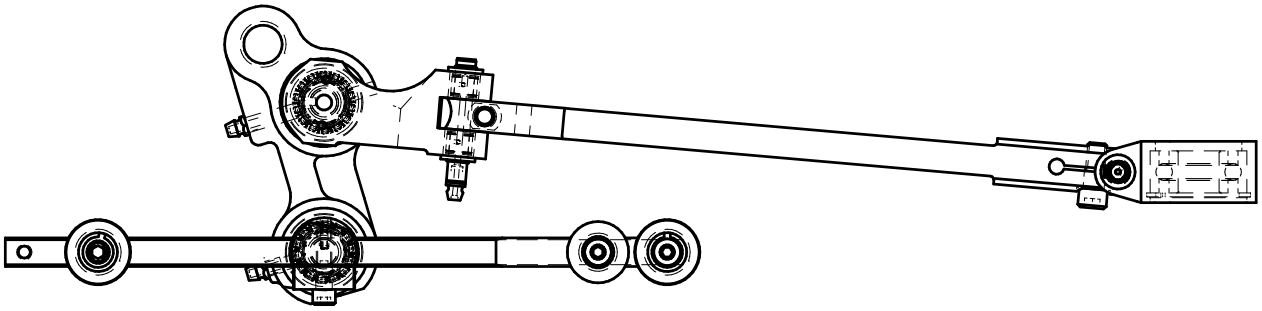


DETAIL 2

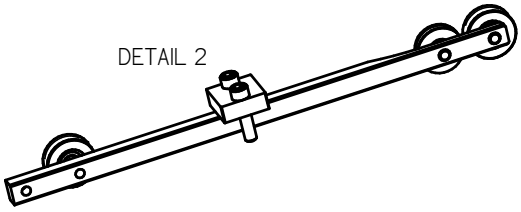

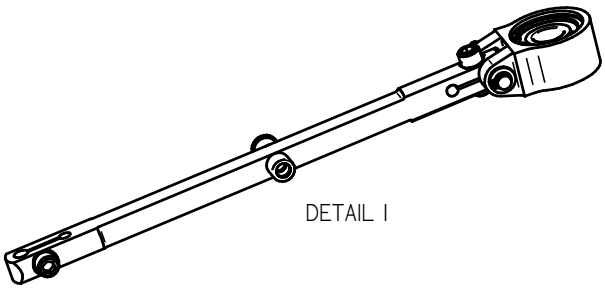


DETAIL 1

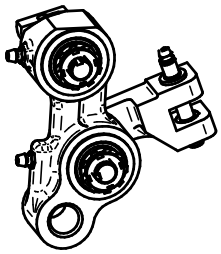


DETAIL 3


Actuator Linkage Assembly – Detail 1 – B6-90250-1

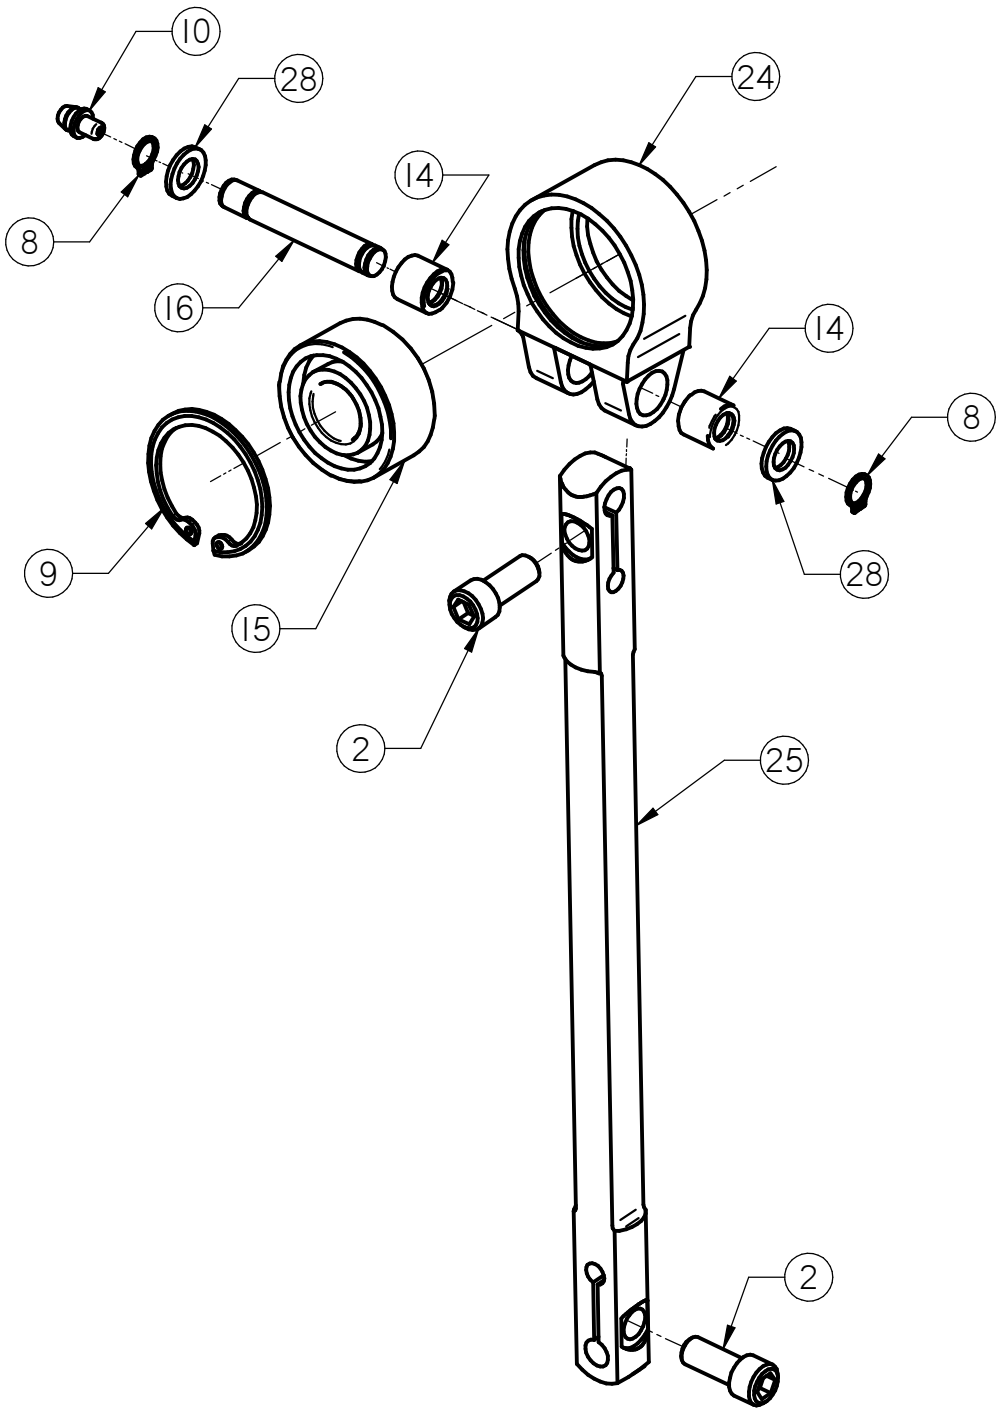

Actuator Linkage Assembly – Detail 2 – B6-90250-1

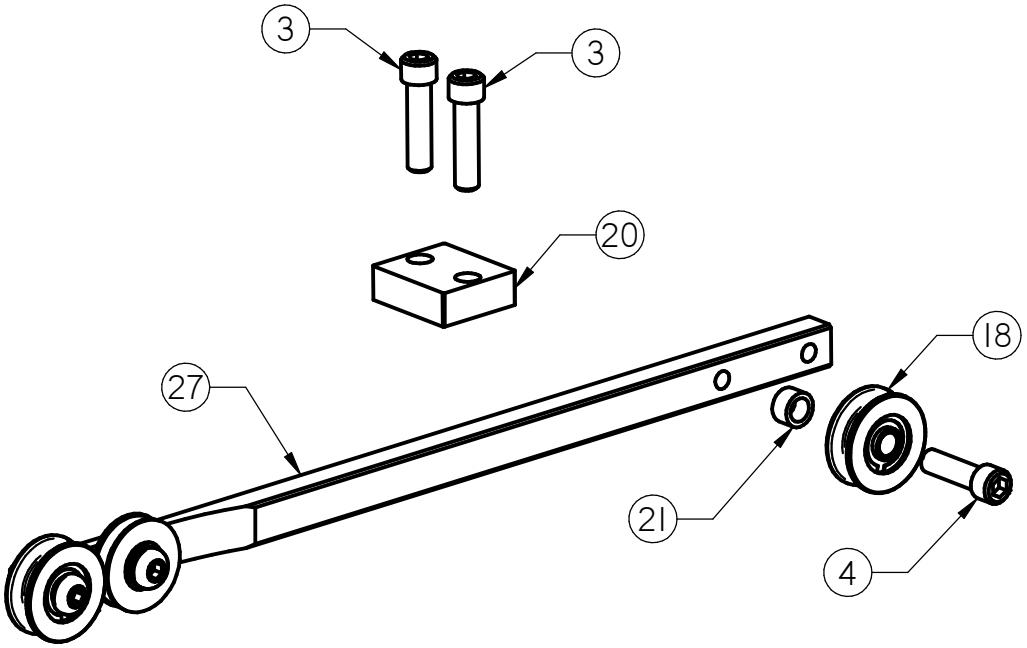


Actuator Linkage Assembly – Detail 3 – B6-90250-1

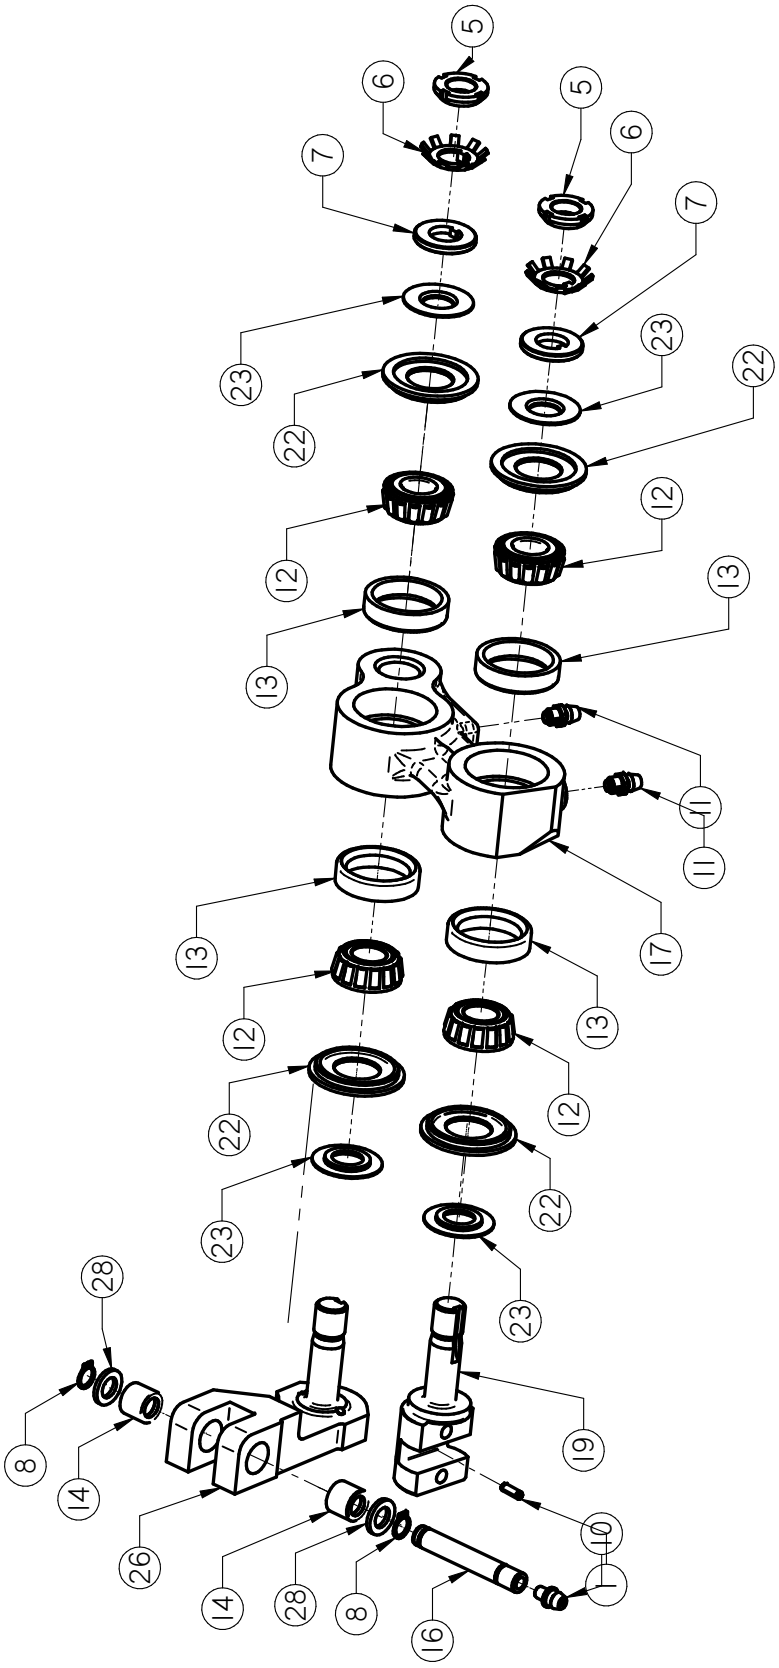

Actuator Linkage BOM – B6-90250-1


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	104-282	PIN,ROLL .125 X 3/8	1	PC
2	137-340	SCREW,SOC HD CAP 5/16-18 X 3/4	2	PC
3	137-360	SCREW,SOC HD CAP 1/4-28 X 1	2	PC
4	137-361	SCREW,SOC HD CAP 1/4-20 X 7/8	1	PC
5	150-011	LOCKNUT,BEARING TN01	2	PC
6	151-013	WASHER,BEARING LOCK TW-101	2	PC
7	151-014	WASHER,BEARING LOCK K91501	2	PC
8	193-203	RING,RET EXTERNAL 5/16	4	PC
9	193-701	RING,RET INTERNAL 1-37/64	1	PC
10	48-063	FITTING,GREASE A#1728-B 3/16 DR	2	PC
11	48-954	FITTING,GREASE 1/4-28	2	PC
12	904-378	BRG,CONE .471D A2047	4	PC
13	904-379	BRG,CUP 1.26 OD A2126	4	PC
14	904-382	BRG,NEEDLE .311D .500D .44LG	4	PC
15	904-417	BRG,BALL .671D 1.570D .69LG	1	PC
16	B6-1077-1	PIN,CLEVIS,ACTUATING LINKAGE	2	PC
17	B6-332	LEVER,YARN ACTUATING, 24 CARR. MACHINE	1	PC
18	B6-386-2	ROLLER, STRAND	1	PC
19	B6-425	STUD,CLAMP,YARN ACTUATOR LEVER	1	PC
20	B6-426-1	PLATE,CLAMP,YARN ACTUATOR LEVER	1	PC
21	B6-499	SPACER,ROLLER	1	PC
22	B6-551	WASHER,SEAL F/TIMKEN ROLLER BEARING	4	PC
23	B6-582	WASHER,F/ROLLER BEARING SEAL(SMALL)	4	PC
24	B6-644-1	END,ROD, AT CRANK-BALL BEARINGS	1	PC
25	B6-709	ROD,CONNECTING,ACTUATOR MOTION	1	PC
26	B6-710-1	YOKE,ROD	1	PC
27	B6-90108-2	LEVER,ACTUATOR	1	PC
28	F-381	WASHER	4	PC

Actuator Lever Assembly – B6-90108-2

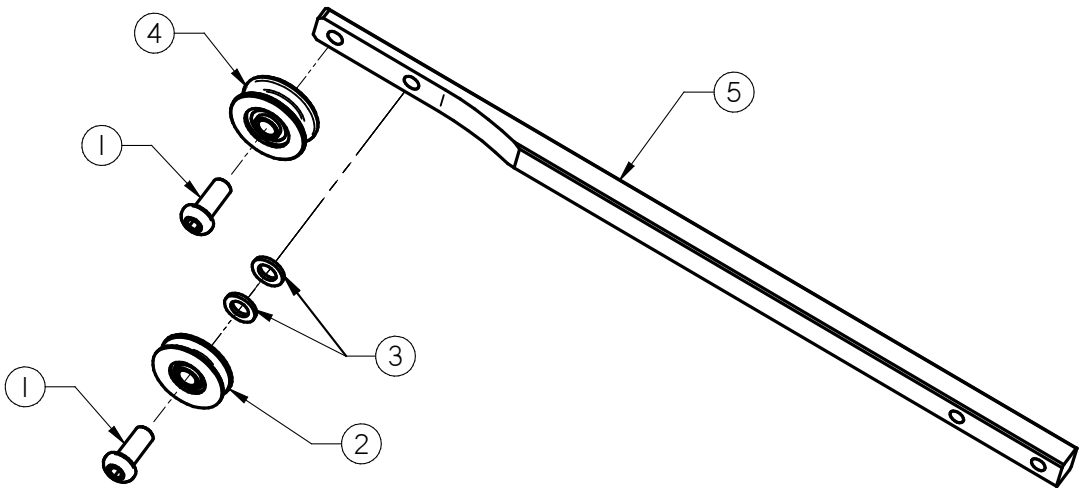


Item Number	PART NO.	DESCRIPTION	Quantity	
1	152-032	SCREW,BUTTON SOC HD CAP 1/4-28 X 5/8	2	PC
2	B1-2581	ROLLER	1	PC
3	B6-1243	SPACER,ROLLER	2	PC
4	B6-386-2	ROLLER, STRAND	1	PC
5	B6-673-2	ARM,STRAND ACTUATOR	1	PC

Drive Finger Segment Assembly – with Lube Fitting – Front –B6-90262

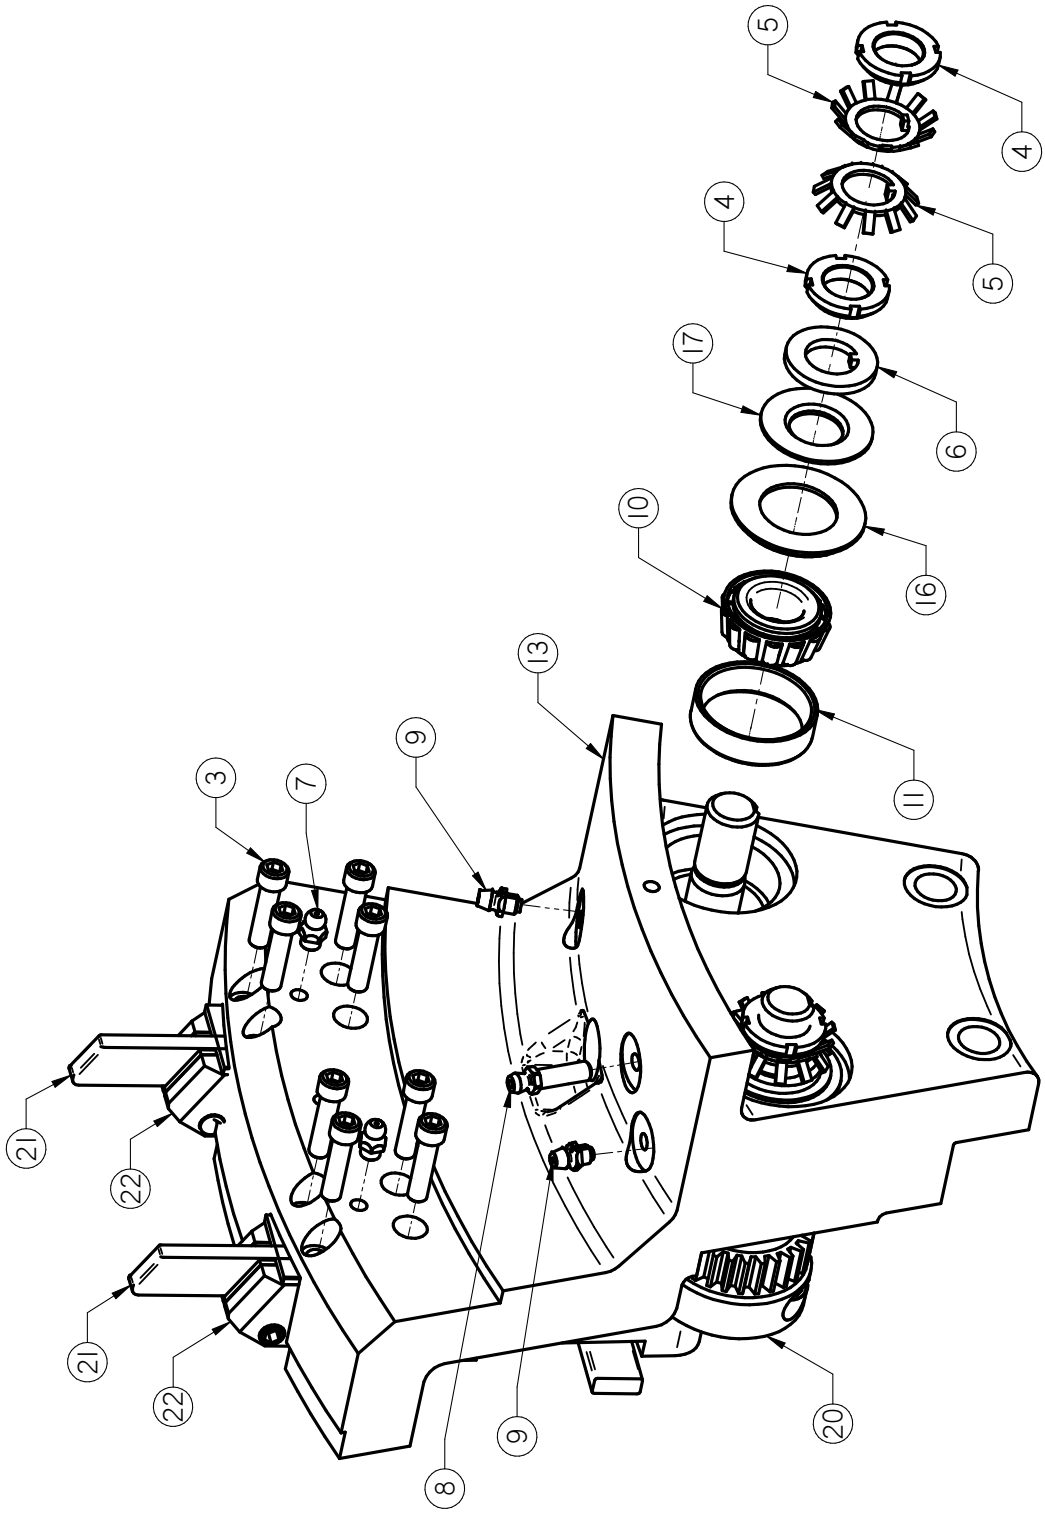


Drive Finger Segment Assembly – with Lube Fitting – Rear – B6-90262

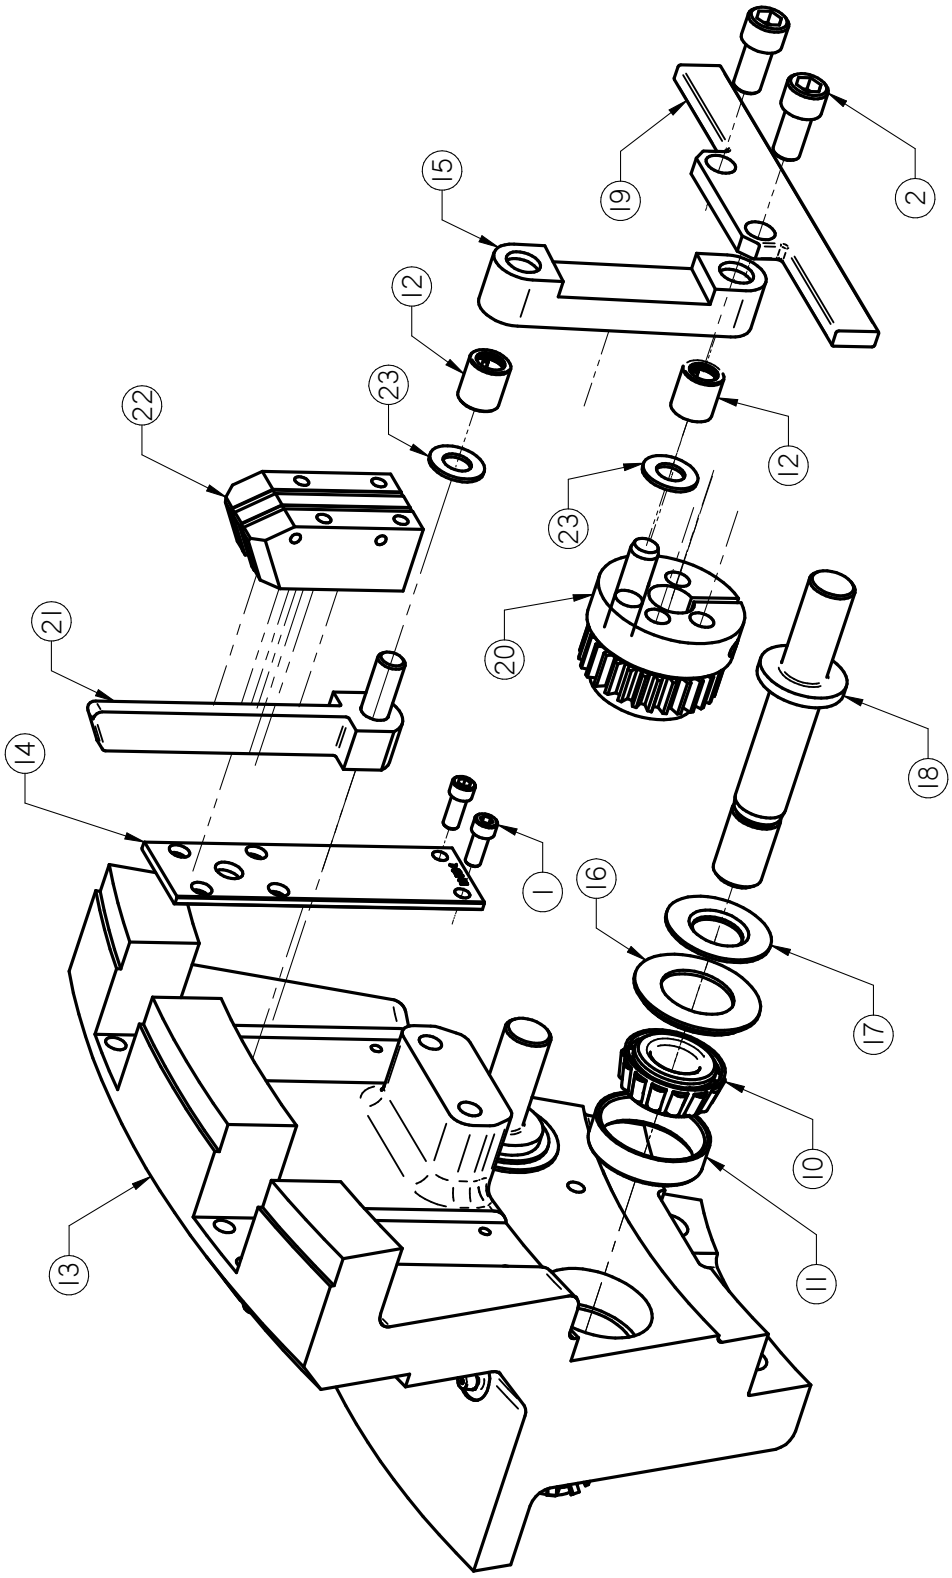


Drive Finger Segment BOM – with Lube Fitting – B6-90262

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-345	SCREW,SOC HD CAP 10-24 X 1/2	4	PC
2	137-346	SCREW,SOC HD CAP 3/8-16 X 3/4	2	PC
3	137-363	SCREW,SOC HD CAP 1/4-20 X 1	8	PC
4	150-012	LOCKNUT,BEARING TN03	4	PC
5	151-015	WASHER,BEARING LOCK	4	PC
6	151-016	WASHER,BEARING LOCK K91503	2	PC
7	48-060	FITTING,GREASE A#1641-B 1/4-28	2	PC
8	48-437	FITTING,GREASE B#1698 1/4-28	1	PC
9	48-954	FITTING,GREASE 1/4-28	2	PC
10	904-380	BRG,CONE .691D	4	PC
11	904-381	BRG,CUP 1.57 OD	4	PC
12	904-393	BRG,NEEDLE .38ID .560D .63LG	4	PC
13	B6-1197	SEGMENT,DRIVE PLUNGER,24C	1	PC
14	B6-340-1	PLATE,DRIVE PLUNGER WEAR	2	PC
15	B6-343-1	LINK,CONNECTING,24C	2	PC
16	B6-550	WASHER,SEAL F/TIMKEN ROLLER BEARING	4	PC
17	B6-583	WASHER,F/ROLLER BEARING SEAL(LARGE)	4	PC
18	B6-584	SHAFT,FOR ECCENTRIC	2	PC
19	B6-723	RET. PLATE,F/DRIVE PLUNGER CONNECT. LINK	1	PC
20	B6-90043	CRANK,DRIVE PLUNGER, 24C	2	PC
21	B6-90176	PLUNGER ,16,20,24C	2	PC
22	B6-90259	BLOCK,DX SLIDE,16,20,24C	2	PC
23	B6-905-1	WASHER, FOR CONNECTING LINK	4	PC

Driver Finger Segment Assembly – Front - B6-90052-2

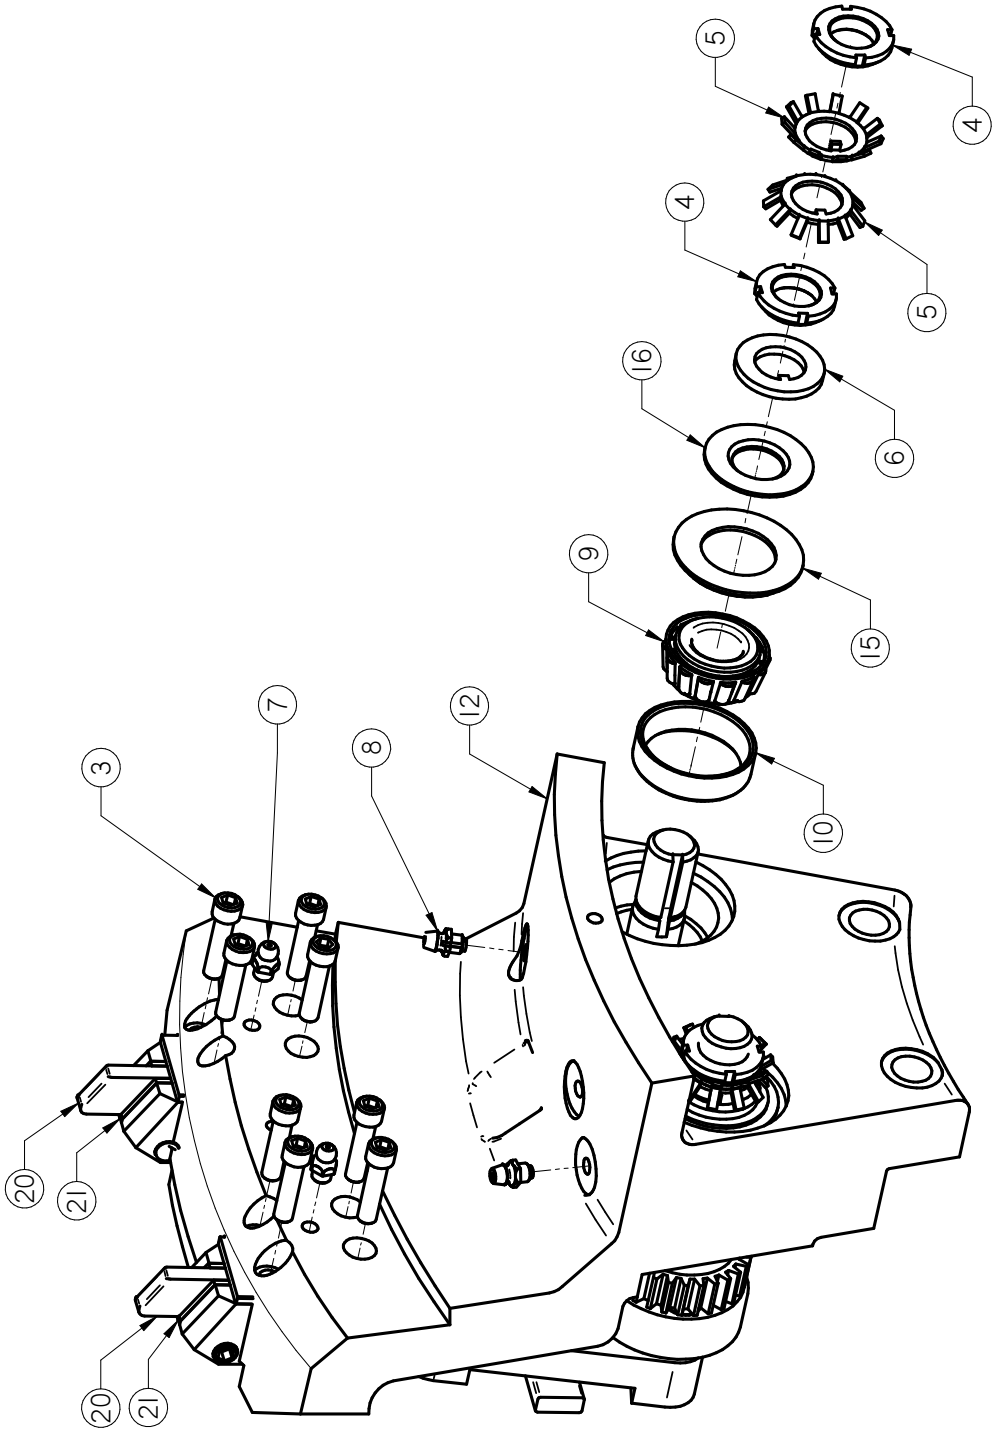


Drive Finger Assembly – Rear – B6-90052-2

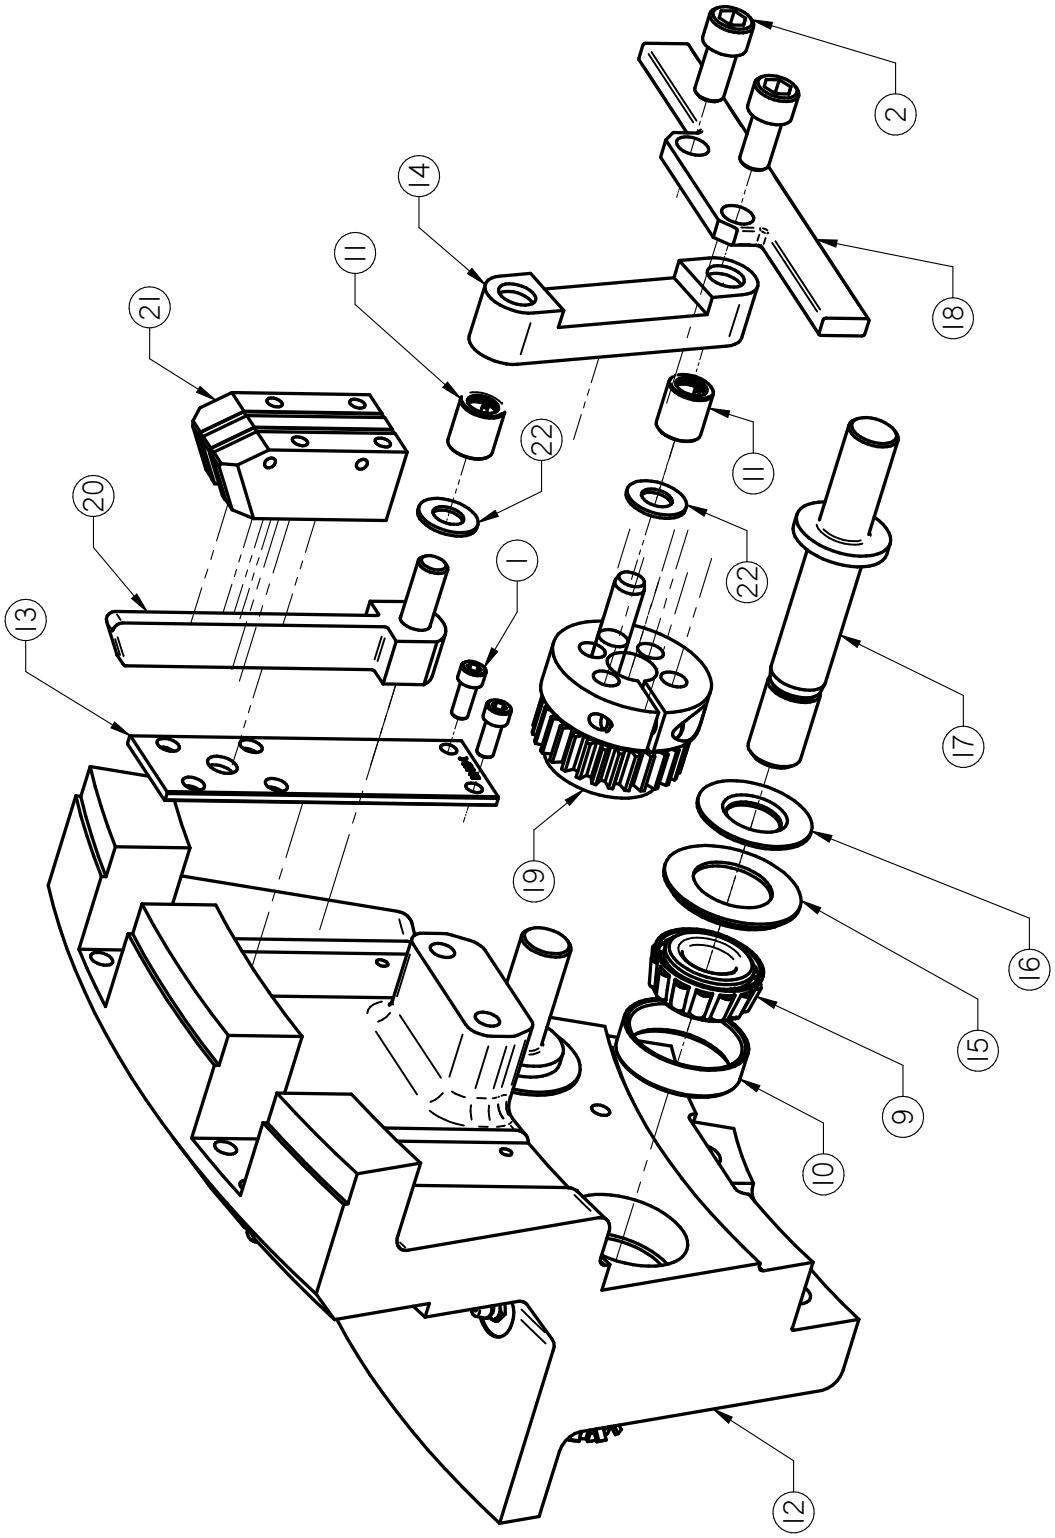

Drive Finger Assembly BOM – B6-90052-2

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-345	SCREW,SOC HD CAP 10-24 X 1/2	4	PC
2	137-346	SCREW,SOC HD CAP 3/8-16 X 3/4	2	PC
3	137-363	SCREW,SOC HD CAP 1/4-20 X 1	8	PC
4	150-012	LOCKNUT,BEARING TN03	4	PC
5	151-015	WASHER,BEARING LOCK	4	PC
6	151-016	WASHER,BEARING LOCK K91503	2	PC
7	48-060	FITTING,GREASE A#1641-B 1/4-28	2	PC
8	48-954	FITTING,GREASE 1/4-28	2	PC
9	904-380	BRG,CONE .691D	4	PC
10	904-381	BRG,CUP 1.57 OD	4	PC
11	904-393	BRG,NEEDLE .381D .560D .63LG	4	PC
12	B6-1197	SEGMENT,DRIVE PLUNGER,24C	1	PC
13	B6-340-1	PLATE,DRIVE PLUNGER WEAR	2	PC
14	B6-343-1	LINK,CONNECTING,24C	2	PC
15	B6-550	WASHER,SEAL F/TIMKEN ROLLER BEARING	4	PC
16	B6-583	WASHER,F/ROLLER BEARING SEAL(LARGE)	4	PC
17	B6-584	SHAFT,FOR ECCENTRIC	2	PC
18	B6-723	RET. PLATE,F/DRIVE PLUNGER CONNECT. LINK	1	PC
19	B6-90043	CRANK,DRIVE PLUNGER, 24C	2	PC
20	B6-90176	PLUNGER ,16,20,24C	2	PC
21	B6-90259	BLOCK,DX SLIDE,16,20,24C	2	PC
22	B6-905-1	WASHER, FOR CONNECTING LINK	4	PC


Ring Gear Lubrication Detail

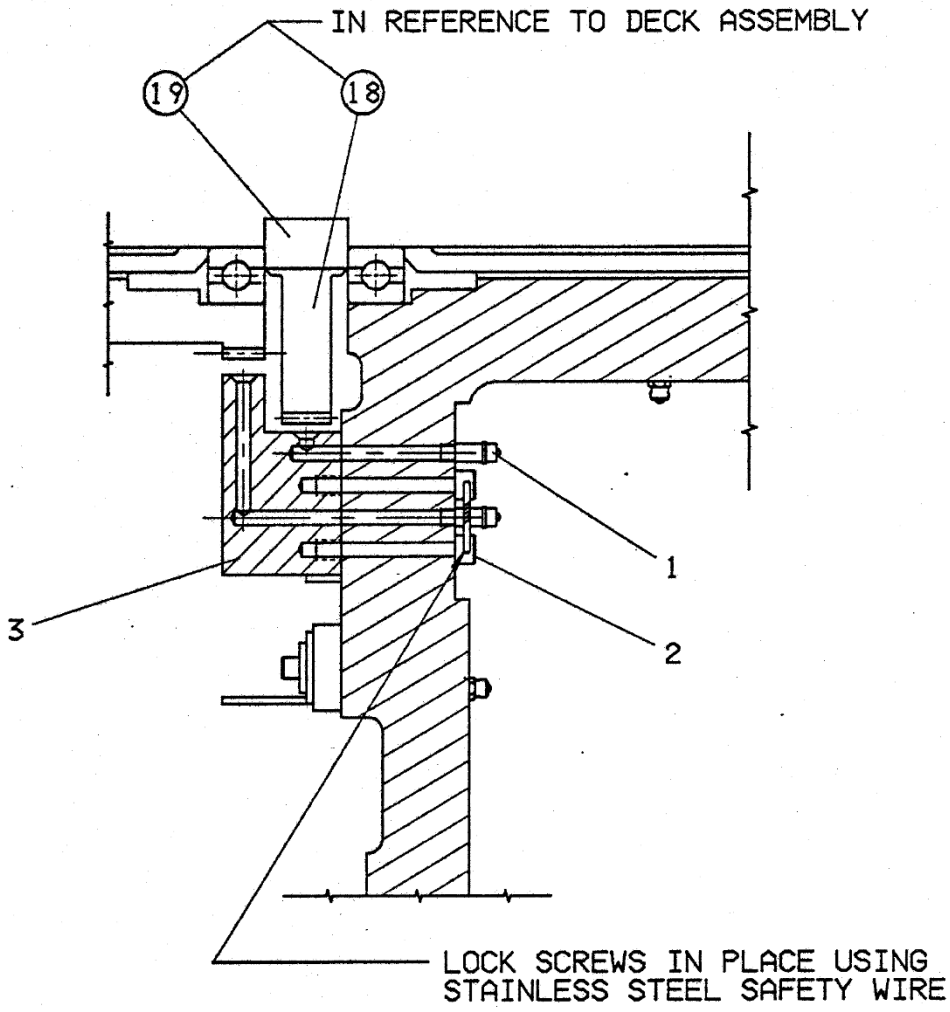

ITEM NO.	PART NO.	PART NAME
1	48-976	ALEMITE FITTING #1680-B
2	137-376	SOC HD CAP SC 3/8-16 X 2-1/2
3	B6-1207	LUBRICATION MANIFOLD


RING GEAR LUBRICATION MANIFOLD FOR 20 & 24 CARRIER MACHINE

DX Block Assembly / BOM – B6-90259

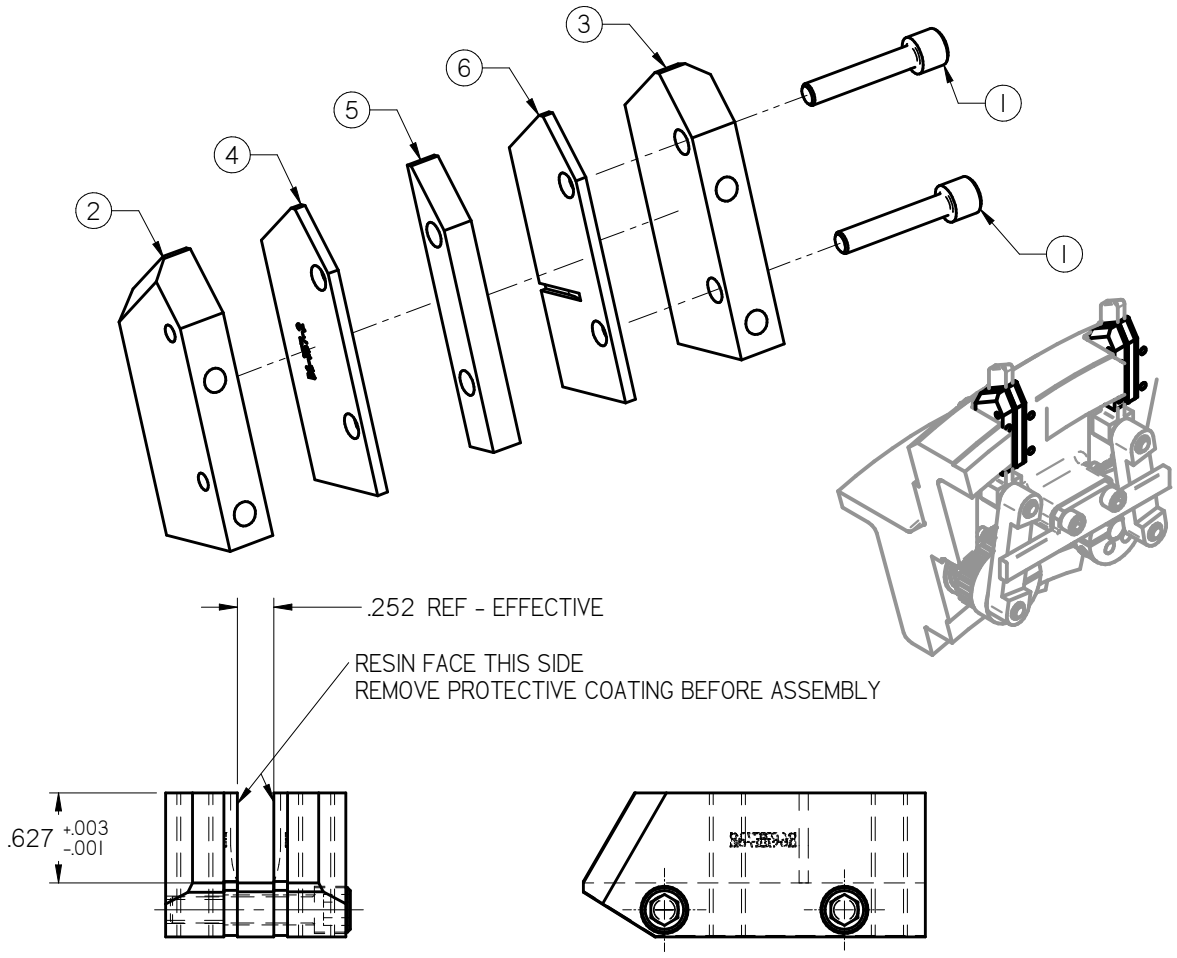


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-339	SCREW,SOC HD CAP 10-24 X 1	2	PC
2	B6-1198	SIDE,LEADING,"DX" BLOCK	1	PC
3	B6-1199	TRAILING SIDE,FOR "DX" BLOCK	1	PC
4	B6-357-2	DX BEARINGSTRIP, FOR LEADING EDGE	1	PC
5	B6-358-1	DX SLIDE BLOCK SEPARATOR PIECE	1	PC
6	B6-359-2	DX BEARING STRIP, FOR TRAILING EDGE	1	PC

Drive Finger Plunger Crank Assembly – B6-90043

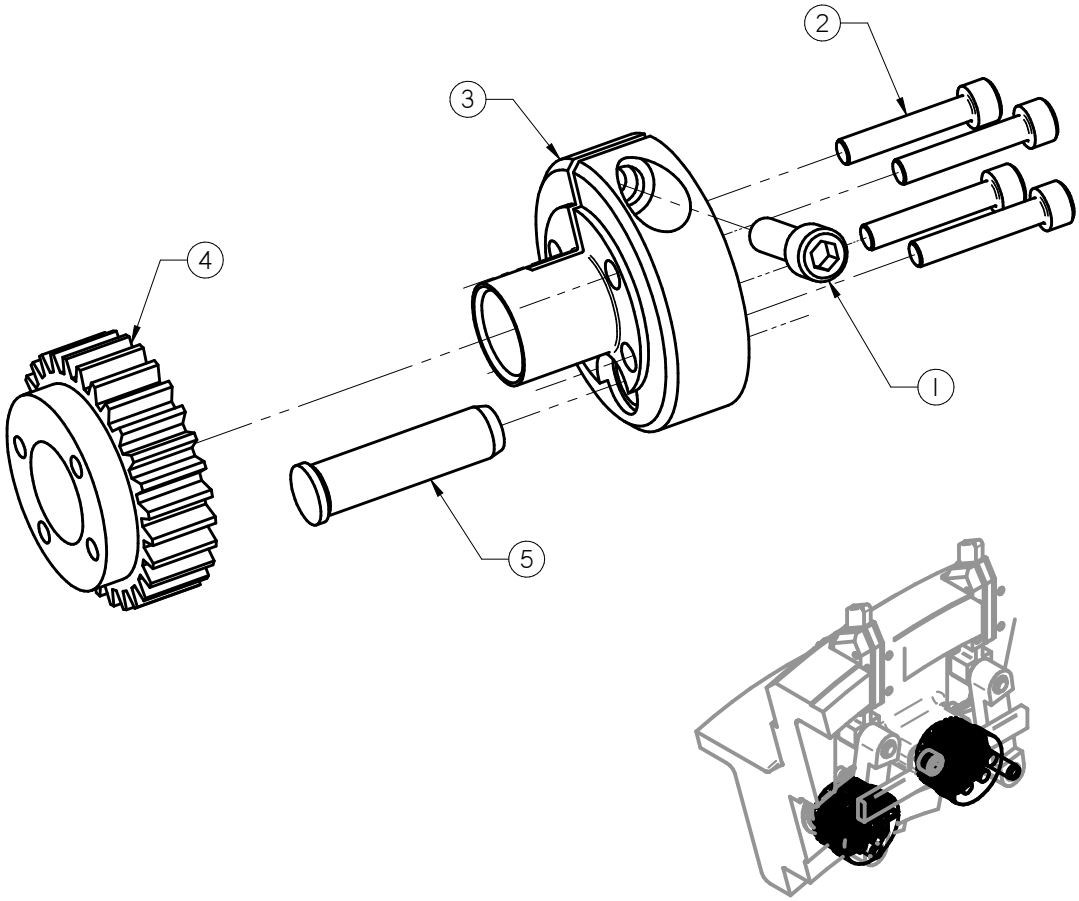


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-335	SCREW,SOC HD CAP 1/4-20 X 3/4	1	PC
2	137-338	SCREW,SOC HD CAP 10-32 X 1	4	PC
3	B6-342	ECCENTRIC, 24C	1	PC
4	B6-624-2	GEAR,PLUNGER 24C & 36C	1	PC
5	B6-746-2	PIN,F/ECCENTRIC COLLAR & PLUNGER	1	PC

Drive Finger Plunger Crank Assembly – B6-90176

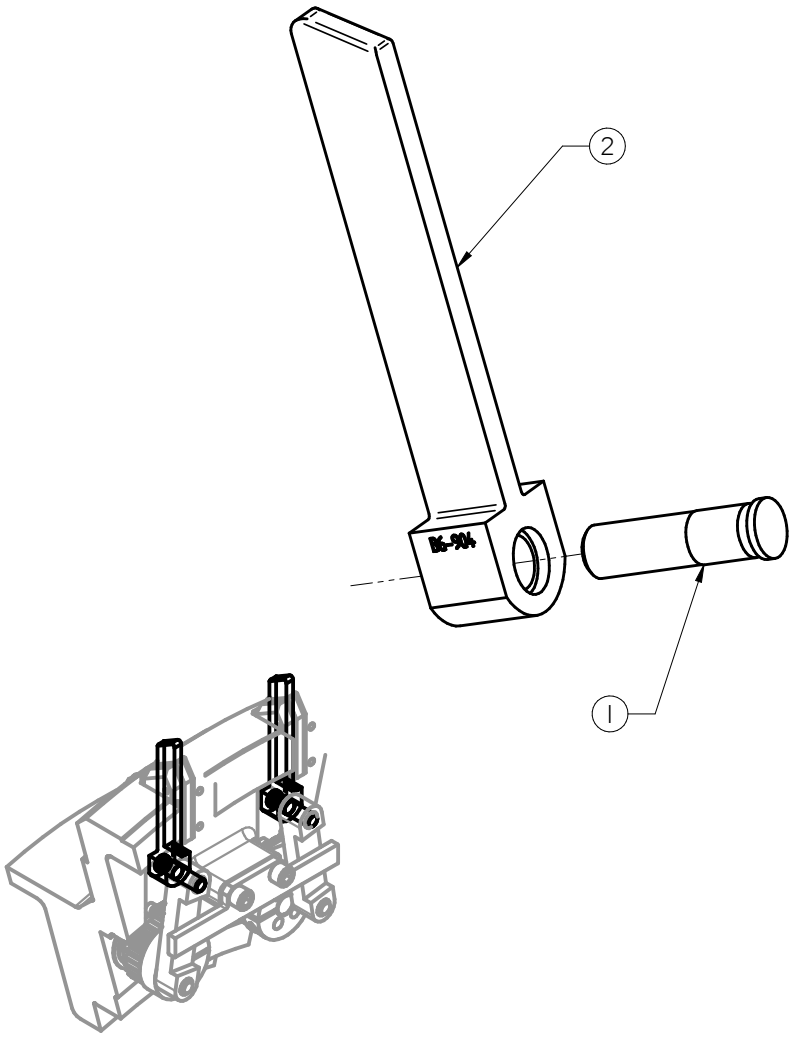


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	B6-903-2	PIN,DRIVE FINGER	1	PC
2	B6-904	PLUNGER,DRIVE, 16, 20, 24C	1	PC


Power Former Assembly, Standard – Main – B6-90180

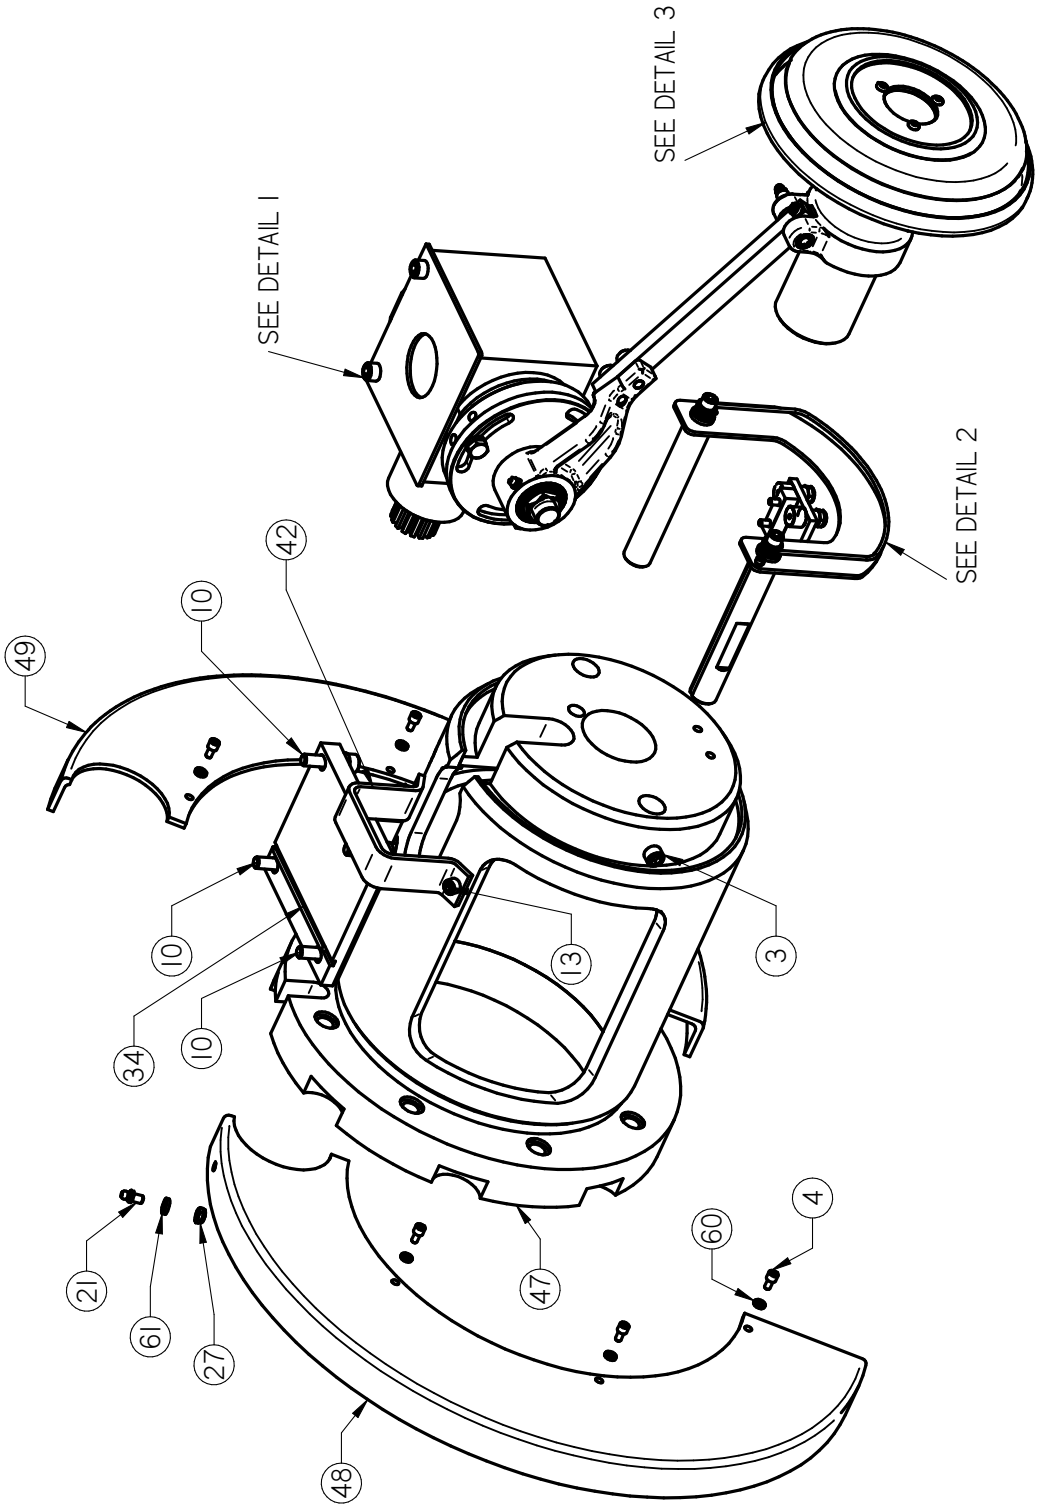


Power Former Assembly, Standard – Detail 1 – B6-90180

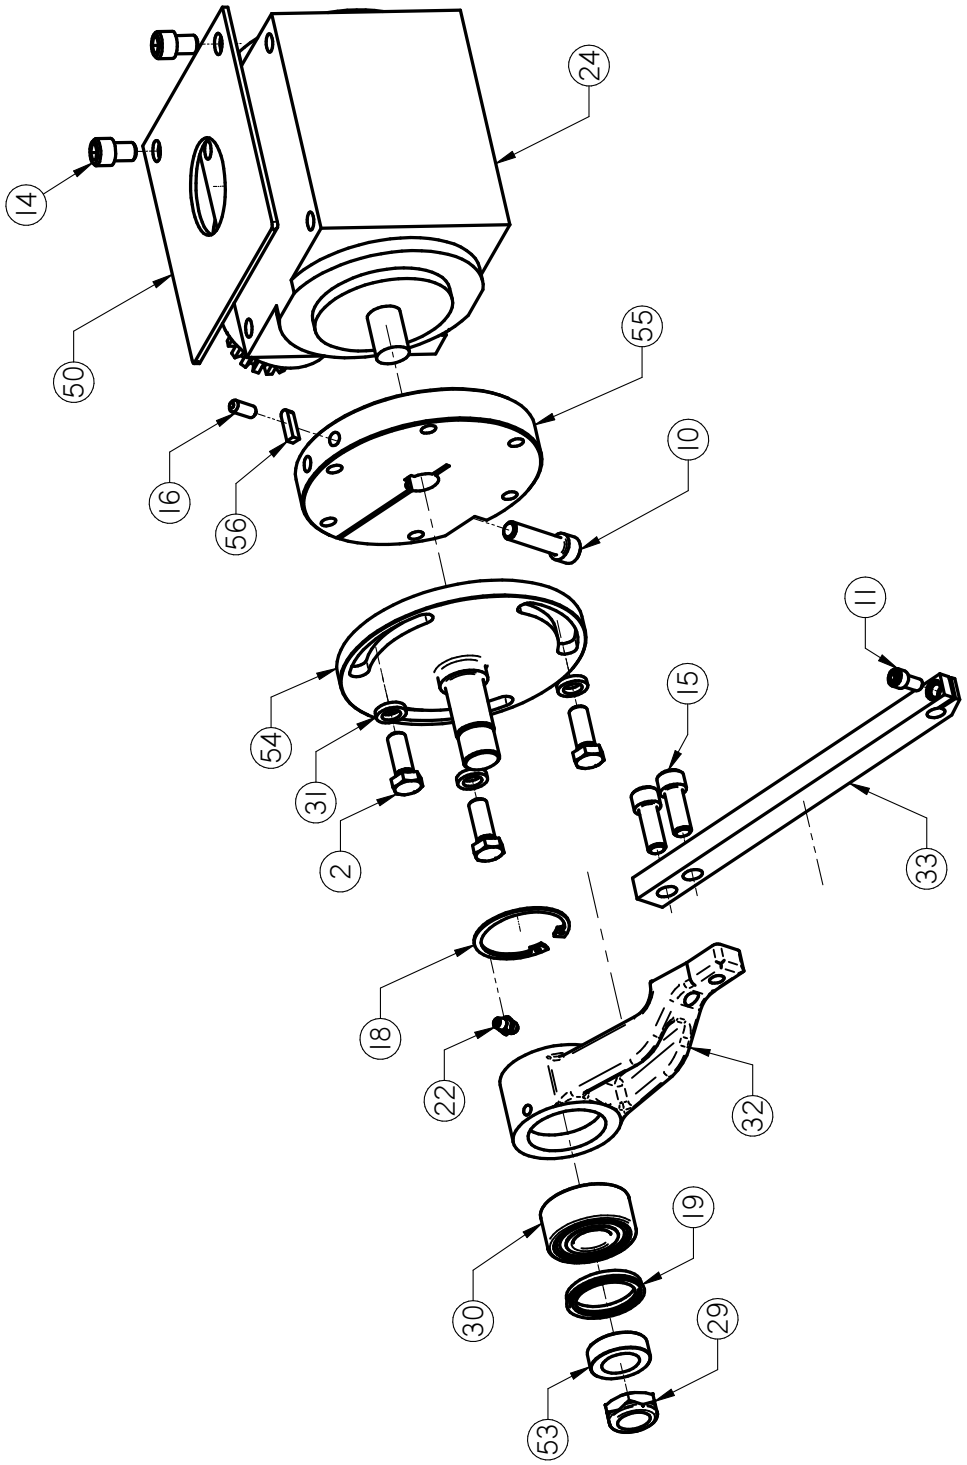

Power Former Assembly, Standard – Detail 2 – B6-90180

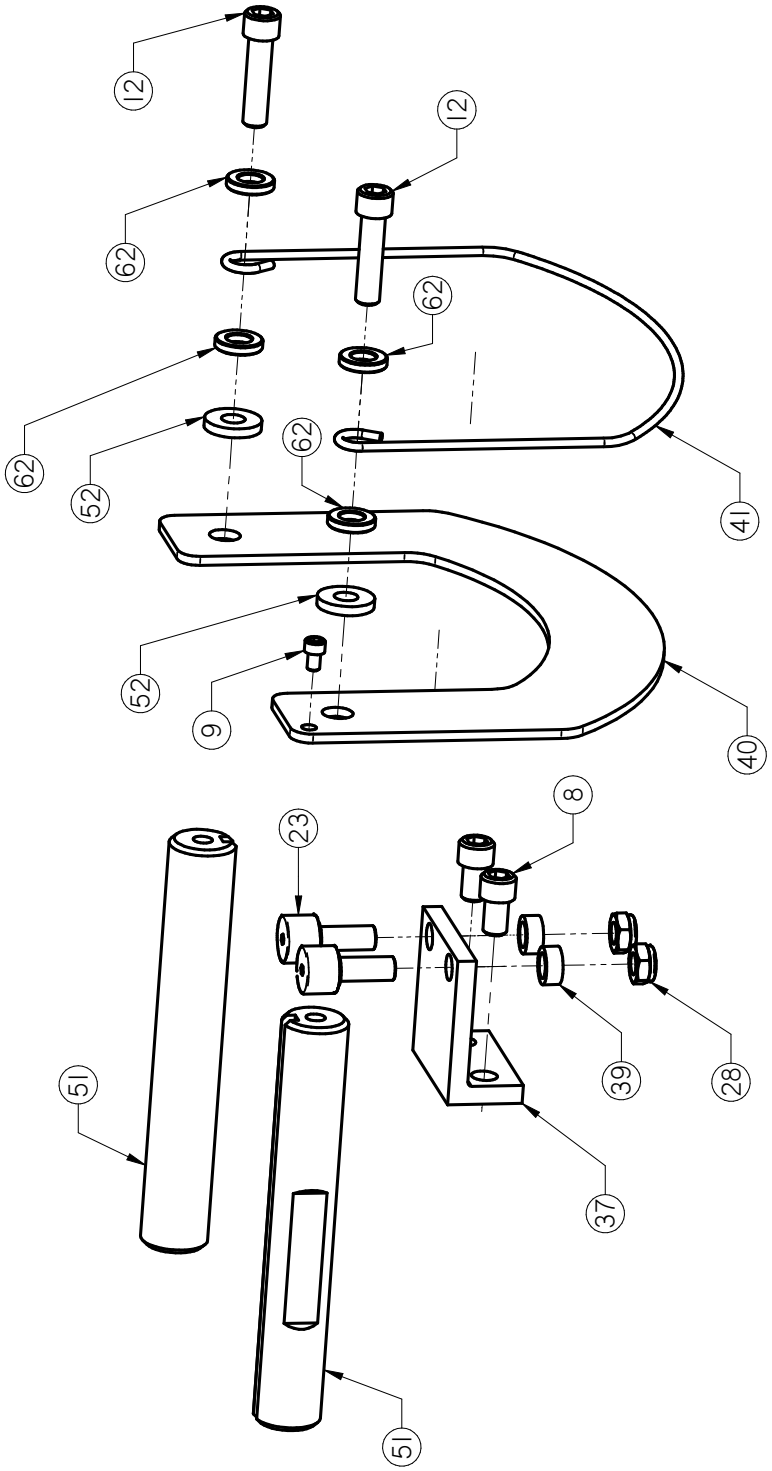

Power Former Assembly, Standard – Detail 3 – B6-90180

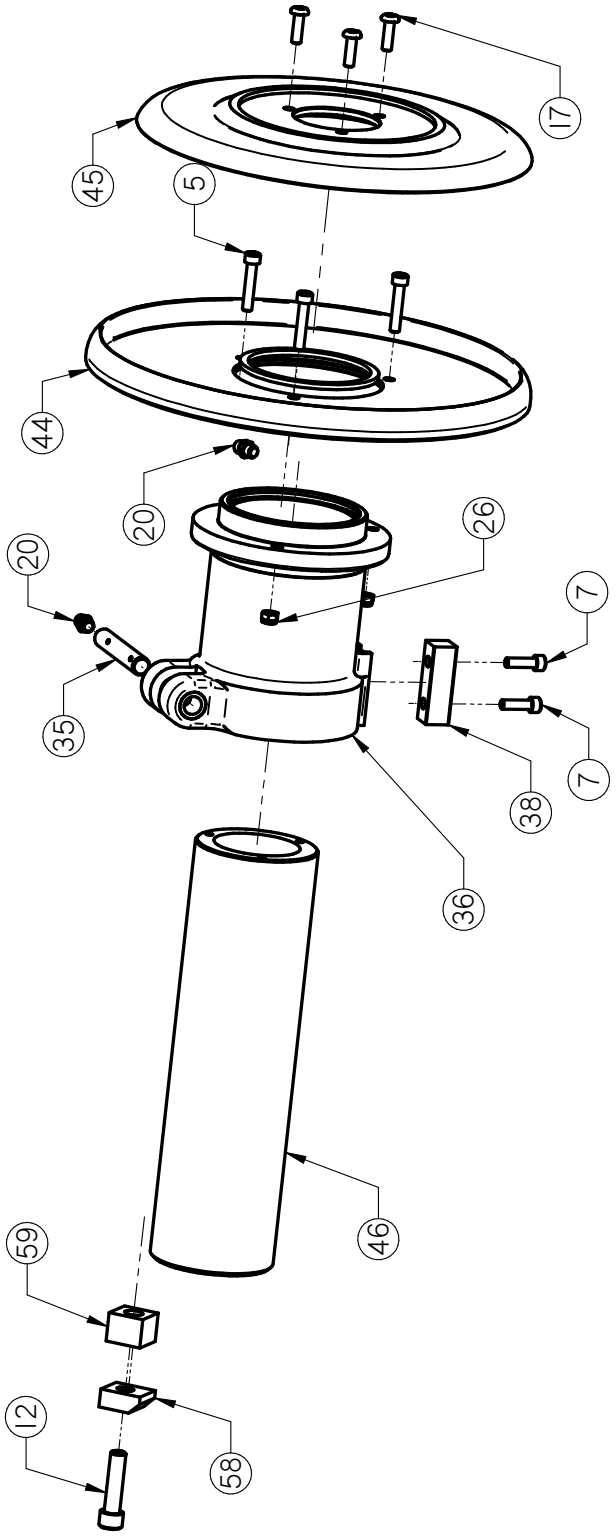

Power Former, Standard BOM – B6-90180

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	113-102	SCREW,ROUND HEAD DRIVE,STEEL,TYPE "U"	4	PC
2	136-323	SCREW,HEX HD CAP 3/8-16 X 1	3	PC
3	137-016	SCREW,SOC HD CAP 3/8-16 X 3/4	2	PC
4	137-043	SCREW,SOC HD CAP 10-24 X 3/8	6	PC
5	137-048	SCREW,SOC HD CAP 10-24 X 1	3	PC
6	137-079	SCREW,SOC HD CAP 3/8-16 X 1-3/4	1	PC
7	137-091	SCREW,SOC HD CAP 10-24 X 5/8	2	PC
8	137-130	SCREW,SOC HD CAP 5/16-18 X 1/2	2	PC
9	137-303	SCREW,SOC HD CAP 8-32 X 1/4	1	PC
10	137-321	SCREW,SOC HD CAP 3/8-16 X 1-1/2	5	PC
11	137-334	SCREW,SOC HD CAP 1/4-20 X 1/2	1	PC
12	137-337	SCREW,SOC HD CAP 5/16-18 X 1-1/4	3	PC
13	137-340	SCREW,SOC HD CAP 5/16-18 X 3/4	2	PC
14	137-359	SCREW,SOC HD CAP 3/8-16 X 1/2	2	PC
15	137-368	SCREW,SOC HD CAP 3/8-16 X 1	2	PC
16	141-181	SCREW,SET HEX SOC CUP 1/4-20 X 5/8	1	PC
17	152-026	SCREW,BUTTON SOC HD CAP 10-24 X 5/8	3	PC
18	193-716	RING,RET INTERNAL 1-27/32	1	PC
19	217-080	SEAL,OIL 1.251D 1.630D .19W	1	PC
20	48-060	FITTING,GREASE A#1641-B 1/4-28	2	PC
21	48-061	FITTING,GREASE A#1652-B 1/4-28	1	PC
22	48-954	FITTING,GREASE 1/4-28	1	PC
23	57-271	BRG,CAM FOLLOWER 5/8 DIA	2	PC
24	57-327	GEAR BOX	1	PC
25	57-402	SEAL,PISTON ROD SCRAPER	2	PC
26	90-100	NUT,SELF-LOCKING 10 -24	3	PC
27	90-217	NUT,SELF-LOCKING 1/4 -28	1	PC


Power Former, Standard BOM – B6-90180 (continued)

Item Number	PART NO.	DESCRIPTION	Quantity	UM
28	90-218	NUT,SELF-LOCKING 5/16-24	2	PC
29	90-222	NUT,HEX 3/4-16	1	PC
30	904-443	BRG,BALL .791D 1.850D .81LG	1	PC
31	B6-1023	WASHER,FOR P.F. PLATE (GEAR BOX)	3	PC
32	B6-1058	END,ROD, FOR POWER FORMER ECCENTRIC	1	PC
33	B6-1060-1	ROD,CONNECTING	1	PC
34	B6-1082	KEY,POWER FORMER GEAR BOX	1	PC
35	B6-1084-1	PIN,ROD END, ON POWER FORMER	1	PC
36	B6-1105	SLEEVE, FOR POWER FORMER,20 & 24 CARRIER	1	PC
37	B6-1107	BRACKET,CAM ROLLER,POWER FORMER	1	PC
38	B6-1108	RAIL,POWER FORMER SLEEVE GUIDE	1	PC
39	B6-1109	SPACER, FOR CAM FOLLOWER	2	PC
40	B6-1126	PLATE,DETECTOR,STRAND BUILD-UP	1	PC
41	B6-1127	WIRE,CONTACT,FOR STRAND BUILD UP,DETECT	1	PC
42	B6-1339	GUARD,CONNECTING ROD,P/F WITH LARGE I.D.	1	PC
43	B6-1659	WASHER	4	PC
44	B6-878	DISC,RECIPROCATING, FOR POWER FORMER	1	PC
45	B6-879	DISC,STATIONARY, FOR POWER FORM	1	PC
46	B6-880	TUBE,MOUNTING,F.STATION.DISC F/POWER FMR	1	PC
47	B6-90102	HOUSING,SUPPORT,FORM RING & P. FORMER	1	PC
48	B6-915	COVER,L.H., F/POWER FORMER RING GEAR	1	PC
49	B6-916	COVER,RIGHT HAND,F/POWER FRMER RING GEAR	1	PC
50	B6-922-1	GUARD,F/TOP OF GEAR BOX/POWER FORMER	1	PC
51	B6-947	SUPPORT,DETECTOR	2	PC
52	B6-948	BUSHING,PROBE	4	PC
53	B6-983	SPACER,BEARING LOCKNUT,F/B.BEAR. P.F.ECC	1	PC
54	B6-984	ECCENTRIC,W/3/8 THROW F/B.BEARING P.F.	1	PC

Power Former, Standard BOM – B6-90180 (continued)

Item Number	PART NO.	DESCRIPTION	Quantity	UM
55	B6-985	FLANGE,DRIVE,BALL BRG ECC,POWER FORMER	1	PC
56	B6-991	KEY,POWER FORMER DRIVE FLANGE	1	PC
57	B6-992-1	NAMEPLATE, FOR POWER FORMER MECHANISM	1	PC
58	B6-994	PLATE,STOP, F/MOUNT. TUBE,F/POWER FORMER	1	PC
59	B6-995	PLATE,MOUNTING TUBE GUIDE	1	PC
60	H-2	WASHER	6	PC
61	H-3	WASHER	1	PC
62	H-4612	WASHER	4	PC


Power Former Gear Box Assembly

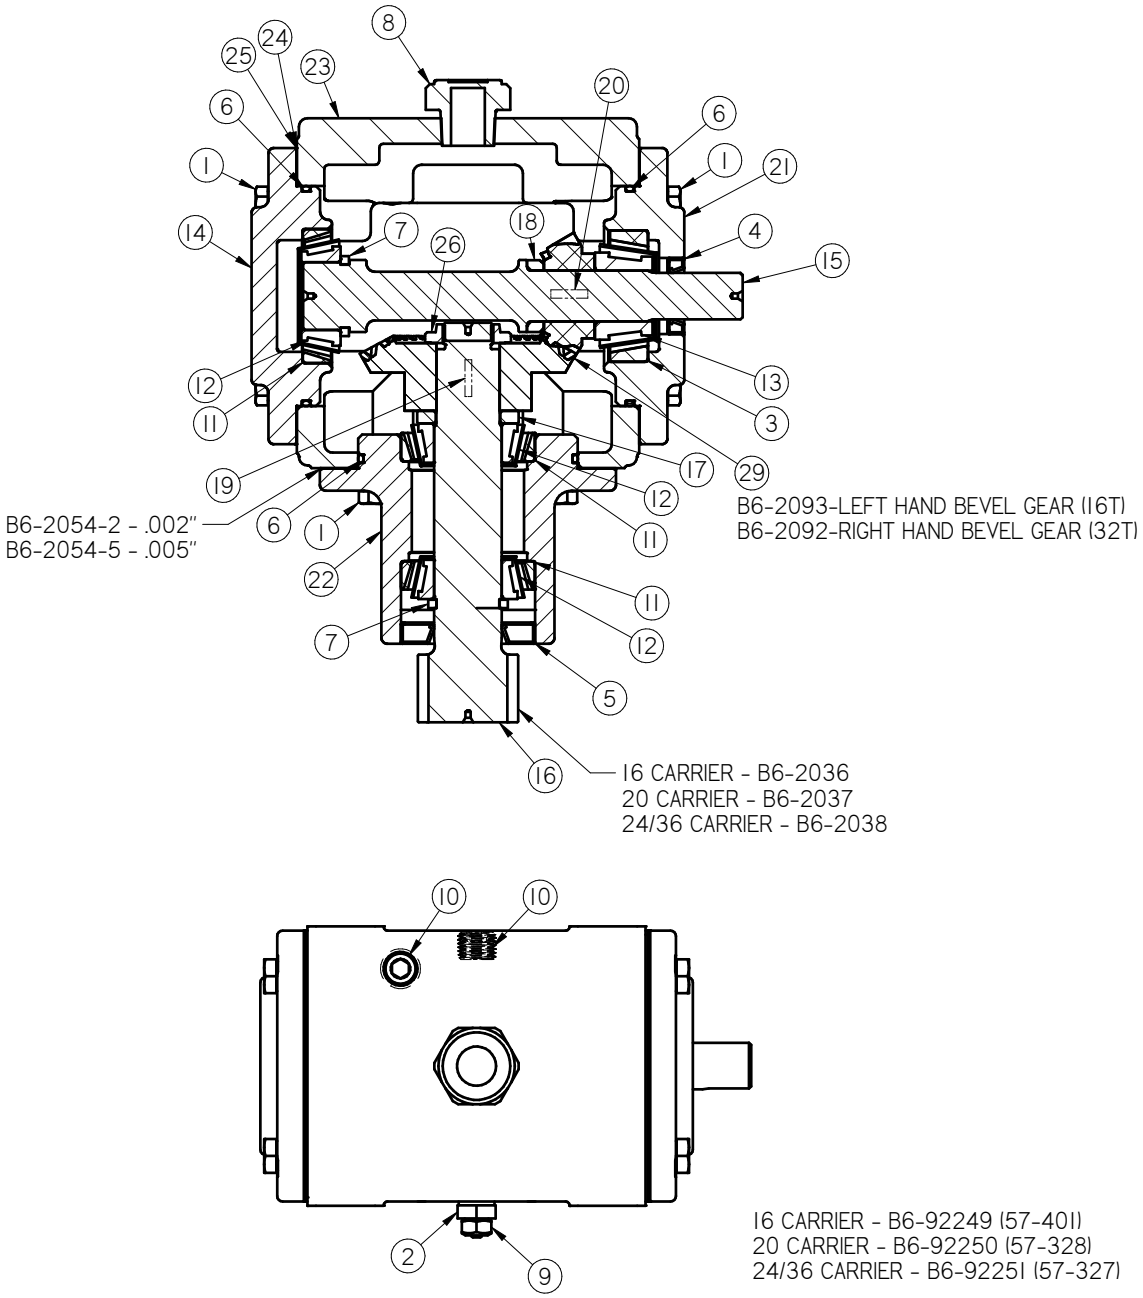


Power Former Gearbox BOM

Item Number	PART NO.	DESCRIPTION	Quantity	U M
1	136-014	SCREW,HEX HD CAP 5/16-18 X 3/4	12	PC
2	48-964	FITTING,BUSHING 1/4NPT X 1/8NPT	1	PC
3	57-370	CUP,BEARING TIMKEN #09195	1	PC
4	57-381	GEAR BOX SEAL .69 ID X 1.13 OD X .25 W	1	PC
5	57-382	GEAR BOX SEAL 1.00 ID X 1.99 OD X ..31W	1	PC
6	58-083	SEAL,O-RING 2.987ID 3.1930D .103 W	3	PC
7	58-084	RING, RET. EXTERNAL 1	2	PC
8	58-085	FITTING, SIGHT GAGE GITS #04052	1	PC
9	58-086	FITTING,VENT PLUG 1/8 NPT	1	PC
10	747-113	PIPE PLUG 1/4 NPT	2	PC
11	904-395	CUP,BEARING	3	PC
12	904-701	CONE,BEARING #L44643	3	PC
13	904-702	CONE,BEARING TIMKEN #09078	1	PC
14	B6-2034	GEARBOX,PF,CLOSED CAP	1	PC
15	B6-2035	SHAFT,CROSS, FOR PF GEARBOX	1	PC
16	B6-2038	SHAFT,PINION,PF GEARBOX, 24/36C	1	PC
17	B6-2039	SPACER,PINION SHAFT	1	PC
18	B6-2040	SPACER,CROSS-SHAFT	1	PC
19	B6-2041	KEY,PINION SHAFT, PF GEARBOX	1	PC
20	B6-2042	KEY,CROSS SHAFT, PF GEARBOX	1	PC
21	B6-2043	GEARBOX,PF,OPEN CAP	1	PC
22	B6-2044	GEARBOX,PF,PINION HOUSING	1	PC
23	B6-2045	POWER FORMER GEAR BOX HOUSING	1	PC
24	B6-2054-002	SHIM, P.F.GEARBOX .002 THICK	3	PC
25	B6-2054-005	SHIM, P.F.GEARBOX .005 THICK	3	PC
26	B6-2055	NUT,HEX FLEXLOC 3/4-16	1	PC
27	B6-2092	GEAR,SPIRAL BEVEL 32T 10P RH (SEE B6-92276)	0	PC
28	B6-2093	GEAR,SPIRAL BEVEL 16T 10P LH (SEE B6-92276)	0	PC
29	B6-92276	GEAR SET, SPIRAL BEVEL 16T - 32T	1	PC

Power Former Gearbox Cross Reference

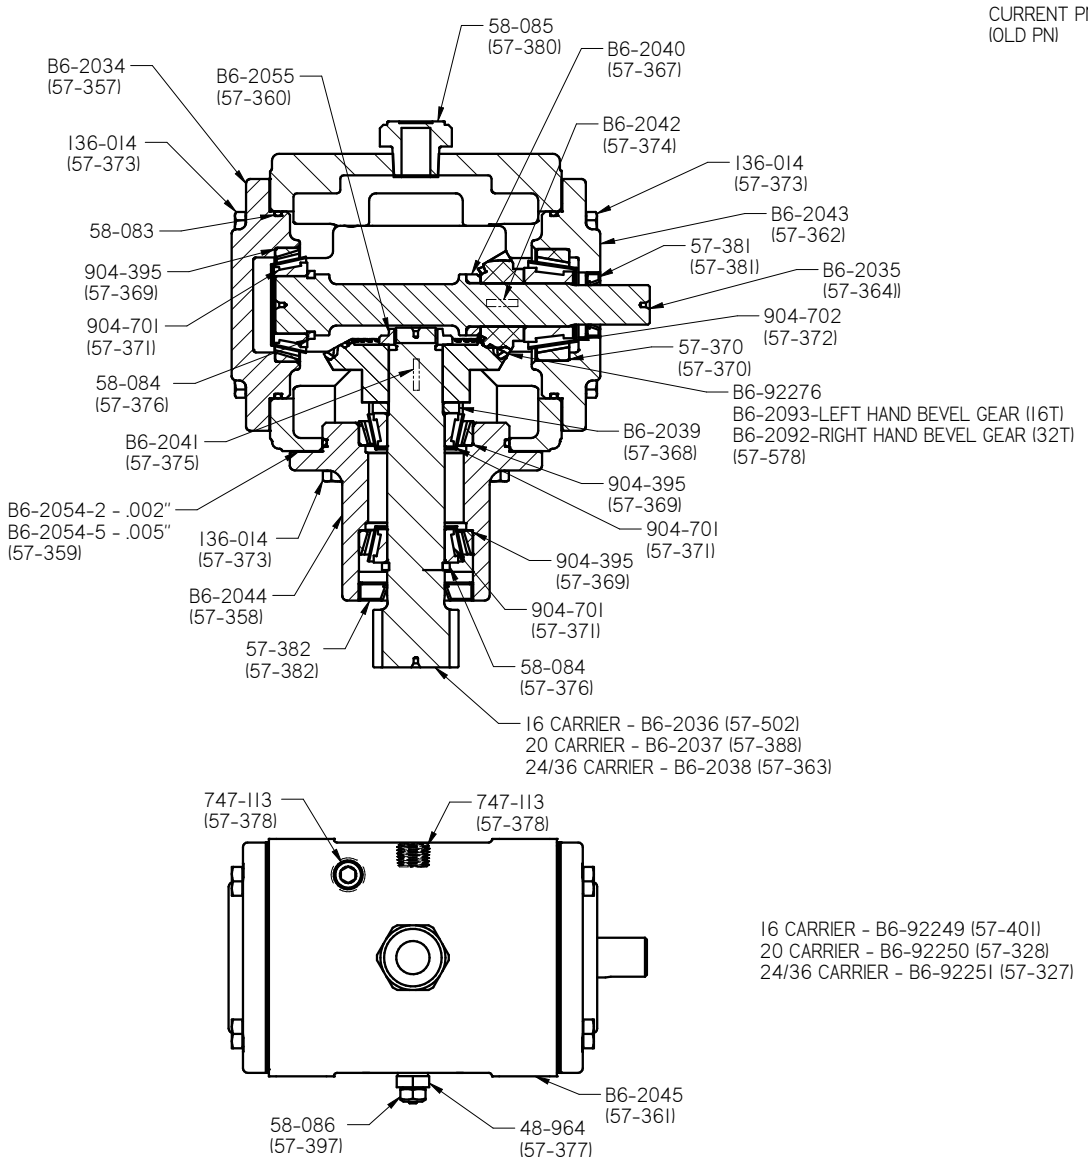


Split “Bull” Gear Assembly – B6-90109-1

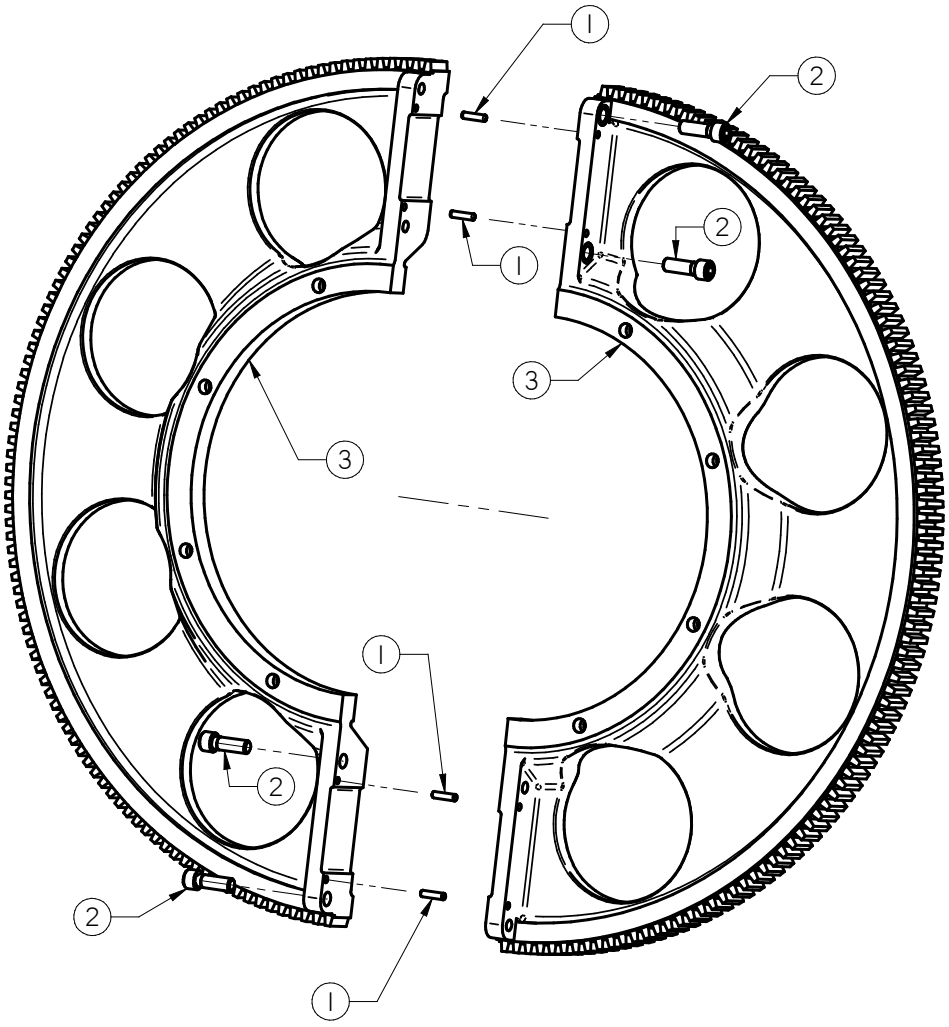


Item Number	PART NO.	DESCRIPTION	Quantity	
1	104-354	PIN,DOWEL .250 X 1	4	PC
2	137-367	SCREW,SOC HD CAP 1/2-13 X 1-1/2	4	PC
3	B6-744-1	SPLIT MAIN DRIVE GEAR HALF	2	PC

Strand Rest Assembly – B6-90081-1

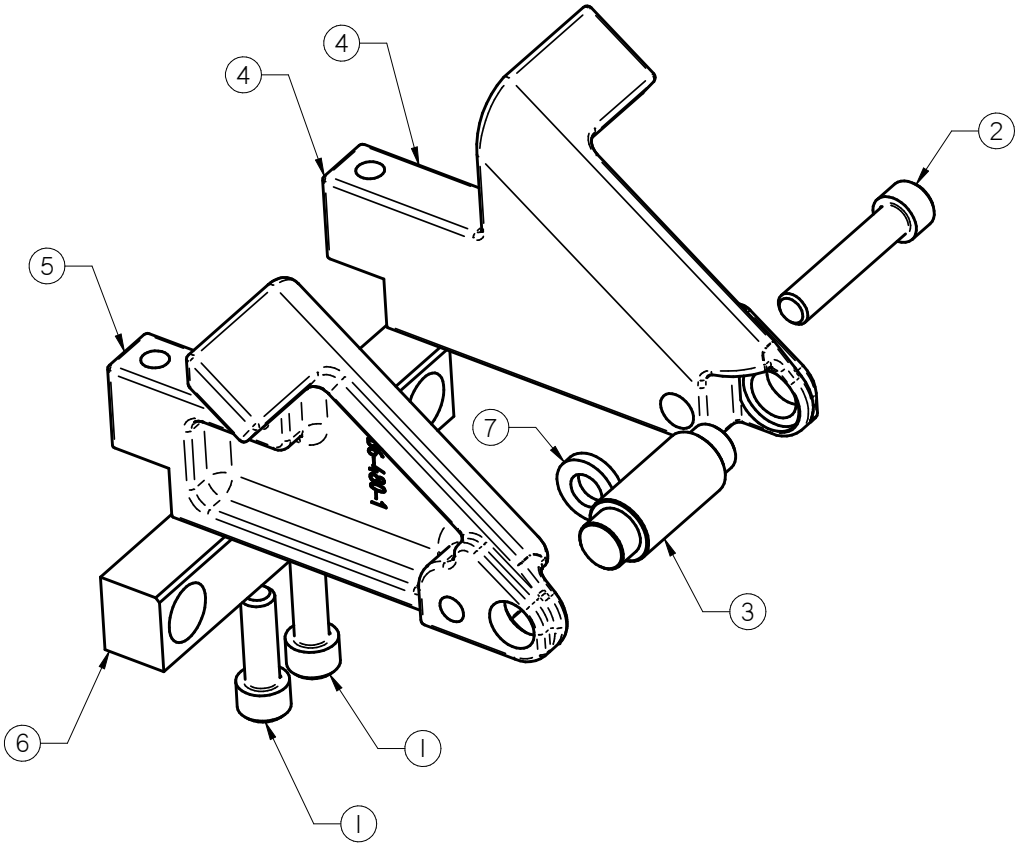

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-335	SCREW,SOC HD CAP 1/4-20 X 3/4	2	PC
2	137-365	SCREW,SOC HD CAP 1/4-20 X 1-1/4	1	PC
3	B6-1144	PIN,REST	1	PC
4	B6-479-1	PIECE,LEFT SIDE, FOR YARN STOP	1	PC
5	B6-480-1	PIECE,RIGHT SIDE, FOR YARN STOP	1	PC
6	B6-481	RAIL,MOUNTING, FOR YARN STOP	1	PC
7	H-3	WASHER	1	PC

Product Guide Assembly – B6-90106-1

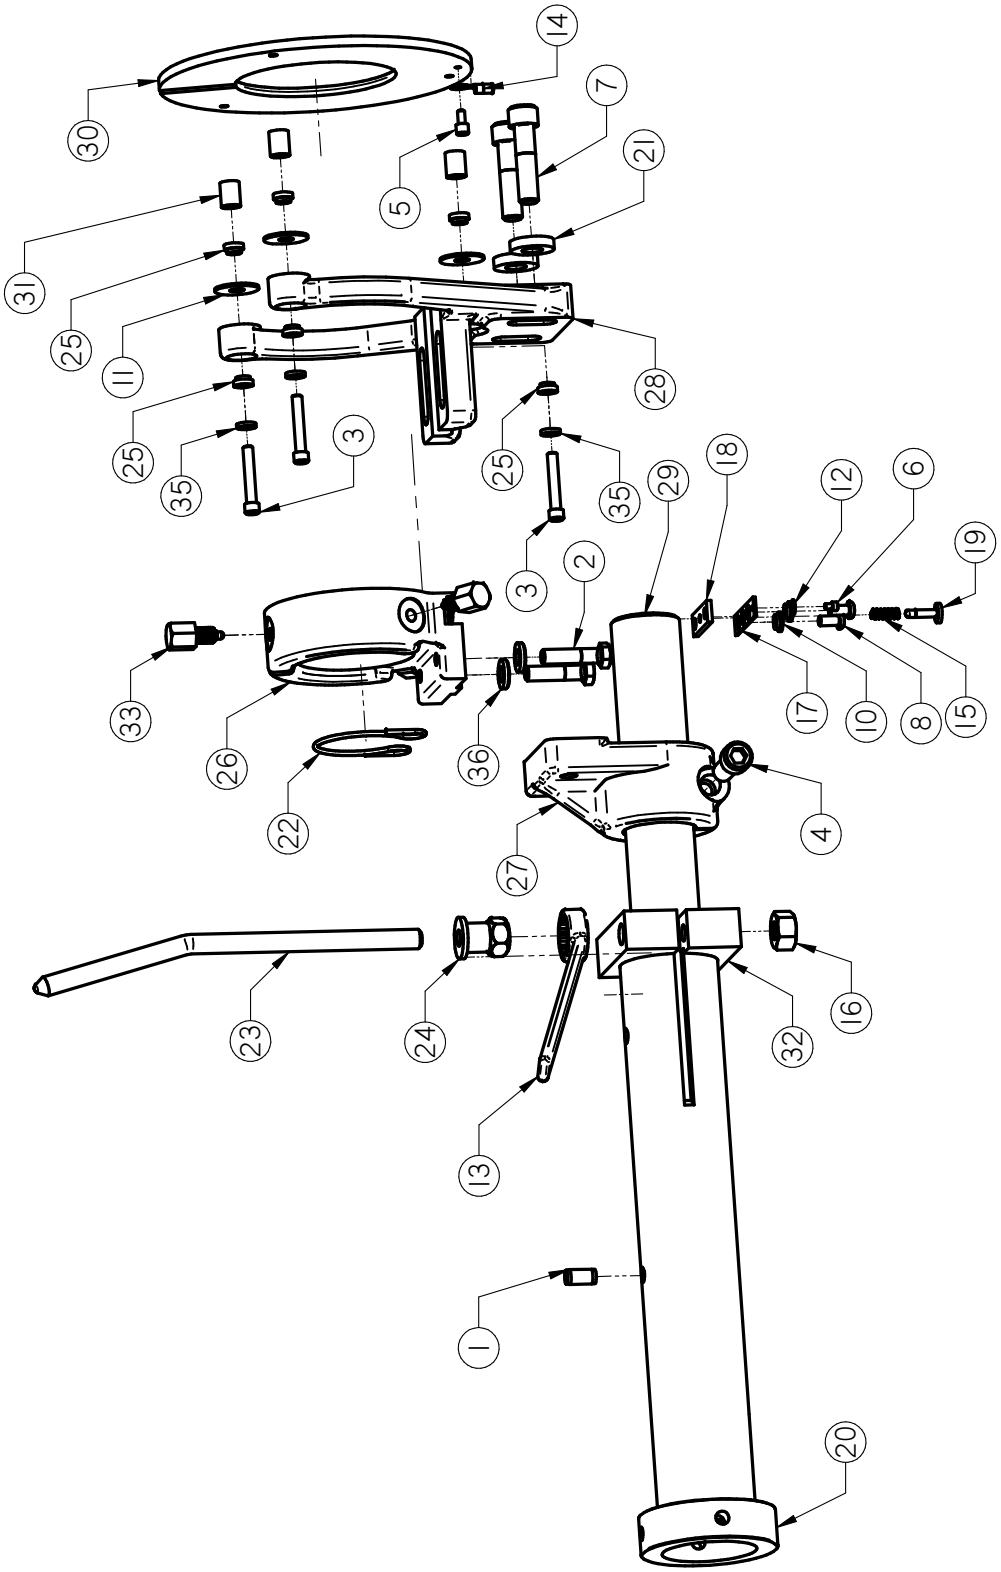


Product Guide BOM – B6-90106-1


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	104-517	PIN,ROLL .375 X 3/4	1	PC
2	136-033	SCREW,HEX HD CAP 3/8-16 X 1-1/2	2	PC
3	137-009	SCREW, SOC HD CAP 1/4-20 X 1-1/2	3	PC
4	137-031	SCREW,SOC HD CAP 1/2-13 X 1-1/2	1	PC
5	137-043	SCREW,SOC HD CAP 10-24 X 3/8	1	PC
6	137-095	SCREW,SOC HD CAP 6-32 X 3/16	1	PC
7	137-122	SCREW,SOC HD CAP 1/2-13 X 2	2	PC
8	152-011	SCREW,BUTTON SOC HD CAP 1/4-20 X 1/2	2	PC
9	193-299	RING,RET EXTERNAL 3/16	1	PC
10	193-355	WASHER,SHOULDER .271D .500D .06	2	PC
11	193-357	WASHER,FLAT NYLON .381D 1.130D .06	3	PC
12	193-427	WASHER,FLAT .161D .380D .03	1	PC
13	194-304	TOOL,BOX WRENCH 7/8	1	PC
14	504-027	E,LUG INSULATED RING 16-14 WIRE	2	PC
15	57-265	SPRING,COMP .02WIRE DIA .240D .81LG	1	PC
16	90-015	NUT,HEX HEAVY 1/2 -13	1	PC
17	B6-1161	PLATE, CONTACT, MISSING BUSHING SENSOR	1	PC
18	B6-1162	RETAINER,SPRING & INSULATING STRIP	1	PC
19	B6-1163	PLUNGER,BUSHING DETECTOR	1	PC
20	B6-268	RING,LOCKING	1	PC
21	B6-585	WASHER,FOR GEAR BOX	2	PC
22	B6-685	CLIP,RETAINING, FOR SPLIT BUSHING	1	PC
23	B6-739	HOOK,STRING-UP	1	PC
24	B6-740	NUT,SPECIAL, FOR PRODUCT GUIDE	1	PC
25	B6-748	WASHER,INSULATING	6	PC
26	B6-759-2	BRACKET	1	PC
27	B6-760	BRACKET,SUPPORT	1	PC

Product Guide BOM – B6-90106-1 (continued)

Item Number	PART NO.	DESCRIPTION	Quantity	UM
28	B6-761	BRACKET,SUPPORT	1	PC
29	B6-762	TUBE,SUPPORT	1	PC
30	B6-853	RING,CONTACT	1	PC
31	B6-854	SPACER	3	PC
32	B6-90017	SUPPORT,TUBE	1	PC
33	B6-90201	PLUNGER,PRODUCT GUIDE DETENT	3	PC
34	F-118	WASHER,FLAT .375 OD, .203 ID, .042 THK	1	PC
35	H-3	WASHER	3	PC
36	H-4	SPACER	2	PC

Product Guide Support Tube – B6-90017

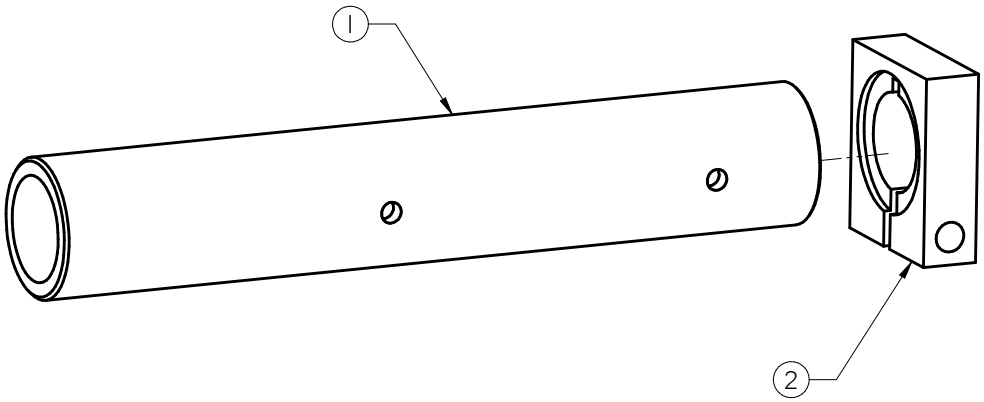


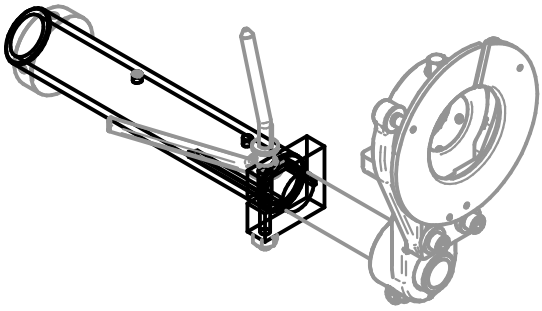


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	B6-265	SUPPORT, TUBE	1	PC
2	B6-266	BLOCK, TUBE SUPPORT	1	PC

NOTE: PARTS NOT FOR INDIVIDUAL SALE. PURCHASE AS B6-90017 WELDMENT.


Product Guide Plunger – B6-90201

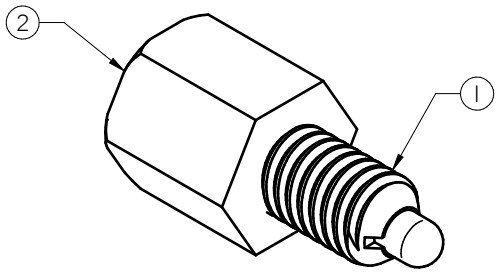

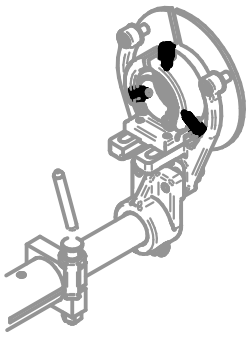

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	57-294	SPRING,PLUNGER 3/8-16 X 1-1/8	1	PC
2	B6-1033	NUT,SPECIAL, FOR DETENT PLUNGER	1	PC


Track Oiler Assembly – Inner Track – B6-90879-1

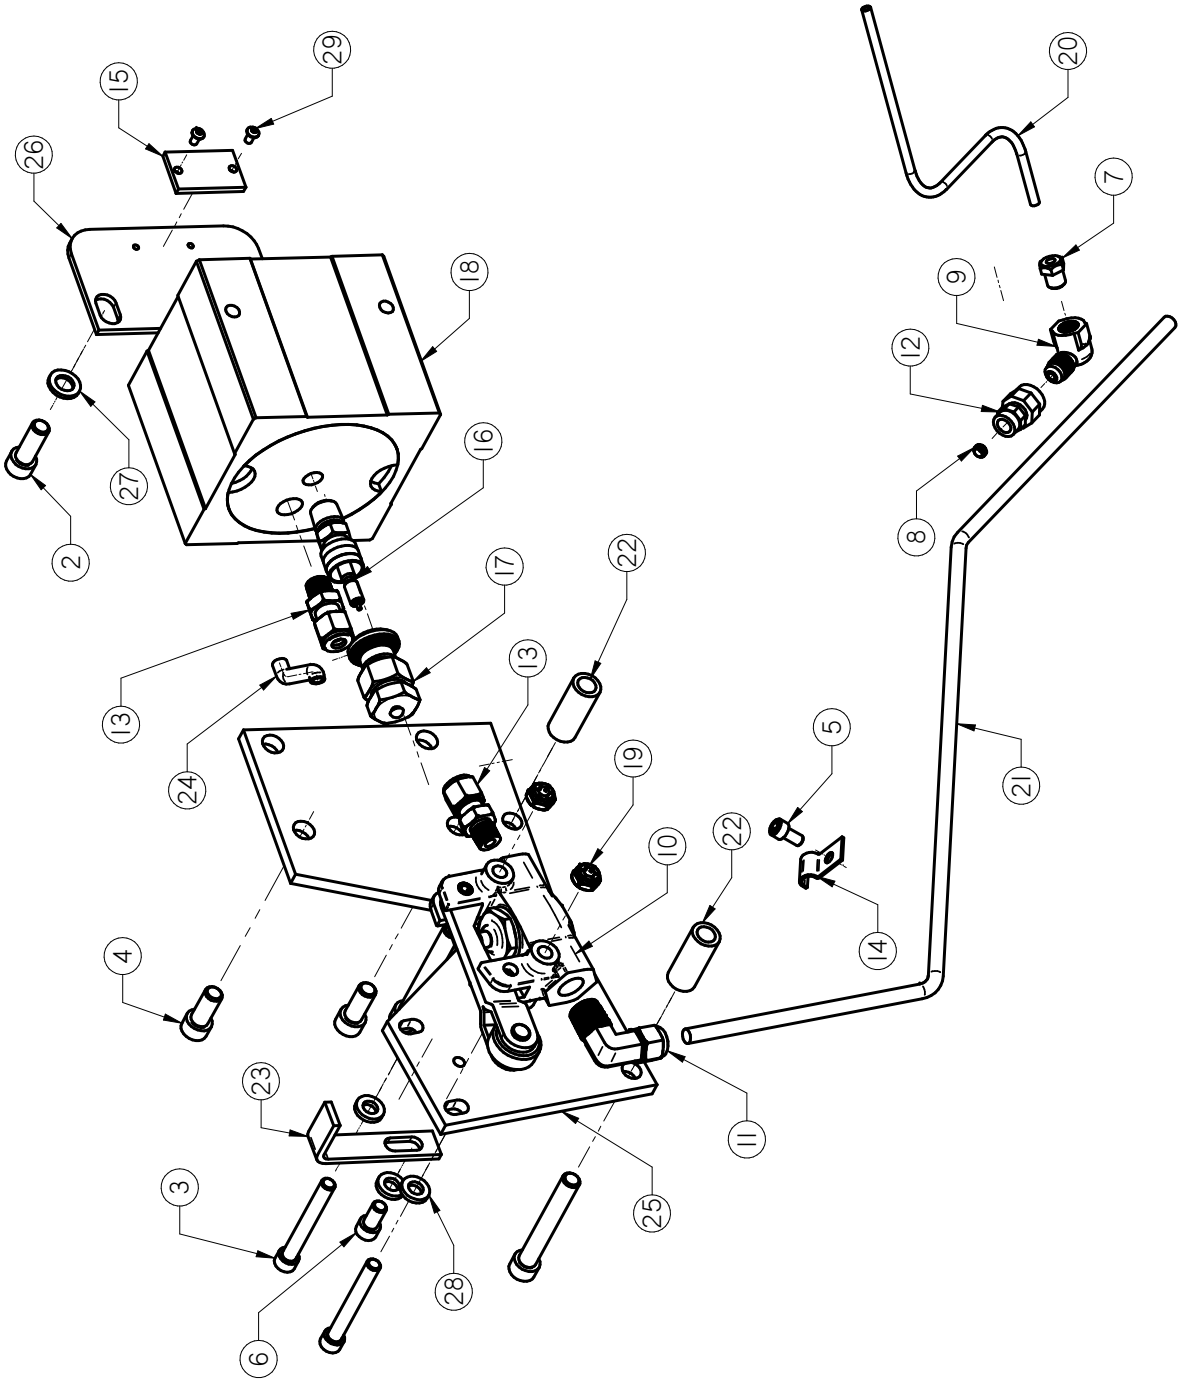

Track Oiler BOM – Inner Track – B6-90879-1

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-036	SCREW,SOC HD CAP 5/16-18 X 2-1/4	2	PC
2	137-088	SCREW,SOC HD CAP 5/16-18 X 7/8	2	PC
3	137-141	SCREW,SOC HD CAP 1/4-20 X 2	2	PC
4	137-319	SCREW, SOCKET HEAD CAP 5/16-18 x 3/4	2	PC
5	137-330	SCREW,SOC HD CAP 10-32 X 3/8	1	PC
6	137-334	SCREW,SOC HD CAP 1/4-20 X 1/2	1	PC
7	48-209	FITTING,COMP BUSHING B#B-1371 5/32	1	PC
8	48-210	FITTING,COMP SLEEVE BIJUR #B8272 5/32	1	PC
9	48-340	FITTING,ADAPTOR	1	PC
10	48-962	FITTING,VALVE 2-WAY POPPET 1/4NPT	1	PC
11	48-963	FITTING,ELBOW 1/4T X 1/4NPT	1	PC
12	48-965	FITTING,ADAPTOR 1/4T X 1/8NPT	1	PC
13	48-969	FITTING,CONNECTOR 1/4T X 1/4P	2	PC
14	48-970	FITTING,CLIP F/1/4 DIA TUBING	1	PC
15	566-460	E,SWITCH,REFLECTOR 20MM SQ. POLARIZED	1	PC
16	57-992	QUICK COUPLING - MALE	1	PC
17	57-994	QUICK COUPLING - DUST CAP	1	PC
18	58-079	RESERVOIR, REPLACES 57-990	1	PC
19	90-209	NUT,SELF-LOCKING 1/4 -20	2	PC
20	B6-1251	TUBING,5/32 DIA.,ADAPTER TO TRACK	1	PC
21	B6-1252	TUBING,PLASTIC,1/4 DIA.,VALVE TO ADAPTER	1	PC
22	B6-1260	SPACER, FOR TRACK OILER MOUNTING PLATE	2	PC
23	B6-1262	STOP, FOR VALVE LEVER ARM	1	PC
24	B6-1270	TUBE,PLASTIC,OIL SUPPLY,TRACK OILER	1	PC
25	B6-1982	PLATE,MOUNTING, F/AUTO. TRACK OILER(EXT)	1	PC
26	B6-1988	PLATE, MOUNTING FOR REFLECTOR	1	PC
27	F-381	WASHER	2	PC
28	H-3	WASHER	3	PC
29	MM152-03006	SCREW,BUTTON SOC HD CAP M 3 X .5 X 6	2	PC


Track Oiler Assembly – Outer Track – B6-90880-1

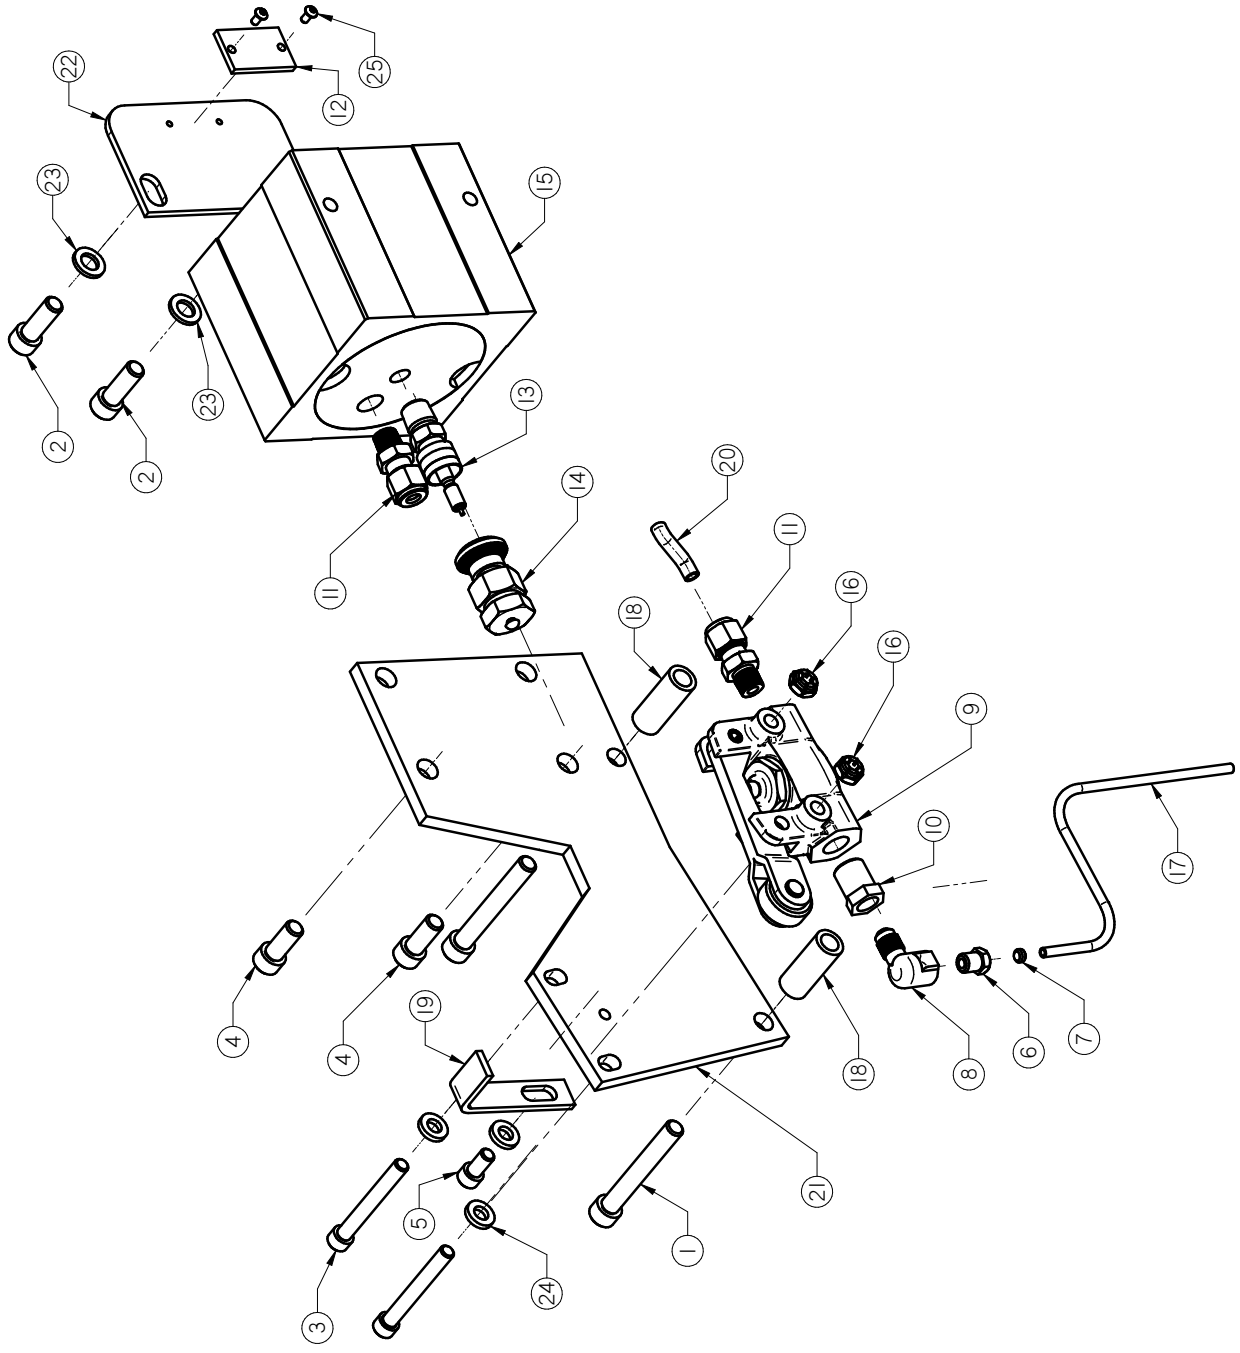

Track Oiler BOM – Outer Track – B6-90880-1

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-036	SCREW,SOC HD CAP 5/16-18 X 2-1/4	2	PC
2	137-088	SCREW,SOC HD CAP 5/16-18 X 7/8	2	PC
3	137-141	SCREW,SOC HD CAP 1/4-20 X 2	2	PC
4	137-319	SCREW, SOCKET HEAD CAP 5/16-18 x 3/4	2	PC
5	137-334	SCREW,SOC HD CAP 1/4-20 X 1/2	1	PC
6	48-209	FITTING,COMP BUSHING B#B-1371 5/32	1	PC
7	48-210	FITTING,COMP SLEEVE BIJUR #B8272 5/32	1	PC
8	48-340	FITTING,ADAPTOR	1	PC
9	48-962	FITTING,VALVE 2-WAY POPPET 1/4NPT	1	PC
10	48-964	FITTING,BUSHING 1/4NPT X 1/8NPT	1	PC
11	48-969	FITTING,CONNECTOR 1/4T X 1/4P	2	PC
12	566-460	E,SWITCH,REFLECTOR 20MM SQ. POLARIZED	1	PC
13	57-992	QUICK COUPLING - MALE	1	PC
14	57-994	QUICK COUPLING - DUST CAP	1	PC
15	58-079	RESERVOIR, REPLACES 57-990	1	PC
16	90-209	NUT,SELF-LOCKING 1/4 -20	2	PC
17	B6-1251	TUBING,5/32 DIA.,ADAPTER TO TRACK	1	PC
18	B6-1260	SPACER, FOR TRACK OILER MOUNTING PLATE	2	PC
19	B6-1262	STOP, FOR VALVE LEVER ARM	1	PC
20	B6-1270	TUBE,PLASTIC,OIL SUPPLY,TRACK OILER	1	PC
21	B6-1982	PLATE,MOUNTING, F/AUTO. TRACK OILER(EXT)	1	PC
22	B6-1988	PLATE, MOUNTING FOR REFLECTOR	1	PC
23	F-381	WASHER	2	PC
24	H-3	WASHER	3	PC
25	MM152-03006	SCREW,BUTTON SOC HD CAP M 3 X .5 X 6	2	PC


Track Oiler Assembly – Inner Track – B6-90311

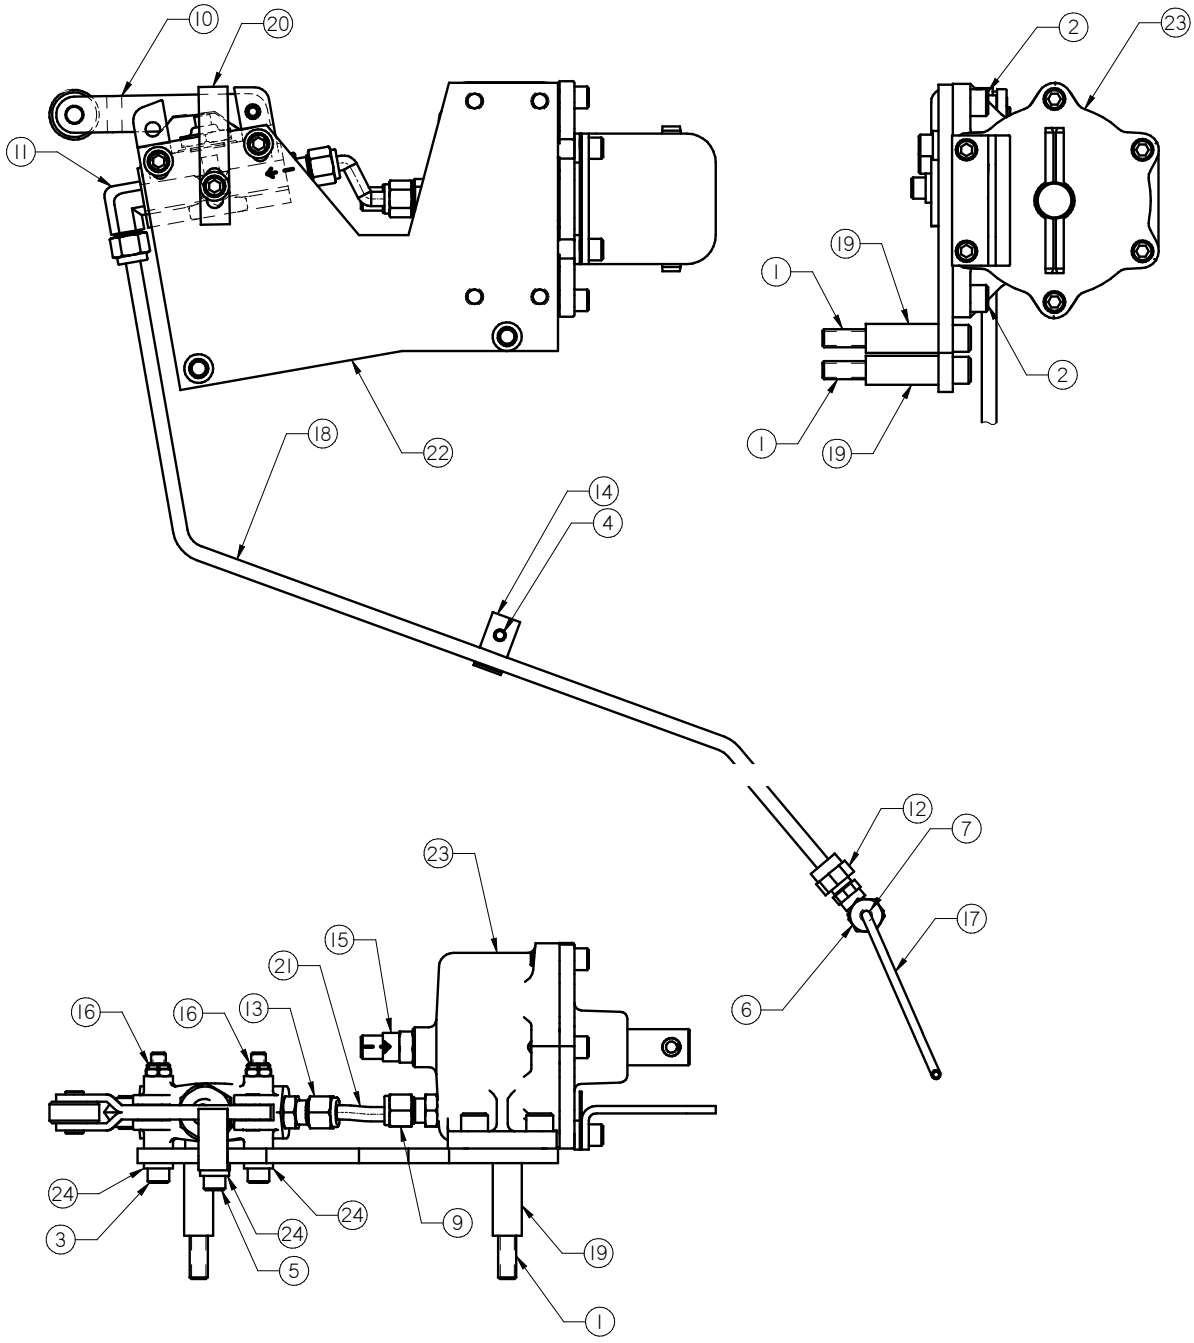

Track Oiler BOM – Inner Track – B6-90311

Item Number	PART NO.	DESCRIPTION	Quantity	
1	137-036	SCREW,SOC HD CAP 5/16-18 X 2-1/4	2	PC
2	137-130	SCREW,SOC HD CAP 5/16-18 X 1/2	4	PC
3	137-141	SCREW,SOC HD CAP 1/4-20 X 2	2	PC
4	137-330	SCREW,SOC HD CAP 10-32 X 3/8	1	PC
5	137-334	SCREW,SOC HD CAP 1/4-20 X 1/2	1	PC
6	48-209	FITTING,COMP BUSHING B#B-1371 5/32	1	PC
7	48-210	FITTING,COMP SLEEVE BIJUR #B8272 5/32	1	PC
8	48-340	FITTING,ADAPTOR	1	PC
9	48-825	FITTING,ADAPTOR 1/4T X 1/8P	1	PC
10	48-962	FITTING,VALVE 2-WAY POPPET 1/4NPT	1	PC
11	48-963	FITTING,ELBOW 1/4T X 1/4NPT	1	PC
12	48-965	FITTING,ADAPTOR 1/4T X 1/8NPT	1	PC
13	48-969	FITTING,CONNECTOR 1/4T X 1/4P	1	PC
14	48-970	FITTING,CLIP F/1/4 DIA TUBING	1	PC
15	48-972	FITTING,CHECK VALVE 1/8 NPT	1	PC
16	90-209	NUT,SELF-LOCKING 1/4 -20	2	PC
17	B6-1251	TUBING,5/32 DIA.,ADAPTER TO TRACK	1	PC
18	B6-1252	TUBING,PLASTIC,1/4 DIA.,VALVE TO ADAPTER	1	PC
19	B6-1260	SPACER, FOR TRACK OILER MOUNTING PLATE	2	PC
20	B6-1262	STOP, FOR VALVE LEVER ARM	1	PC
21	B6-1270	TUBE,PLASTIC,OIL SUPPLY,TRACK OILER	1	PC
22	B6-1321	PLATE,MOUNTING, F/AUTO. TRACK OILER(REVD	1	PC
23	B6-90287	RESERVOIR	1	PC
24	H-3	WASHER	3	PC


Track Oiler Assembly – Outer Track – B6-90312

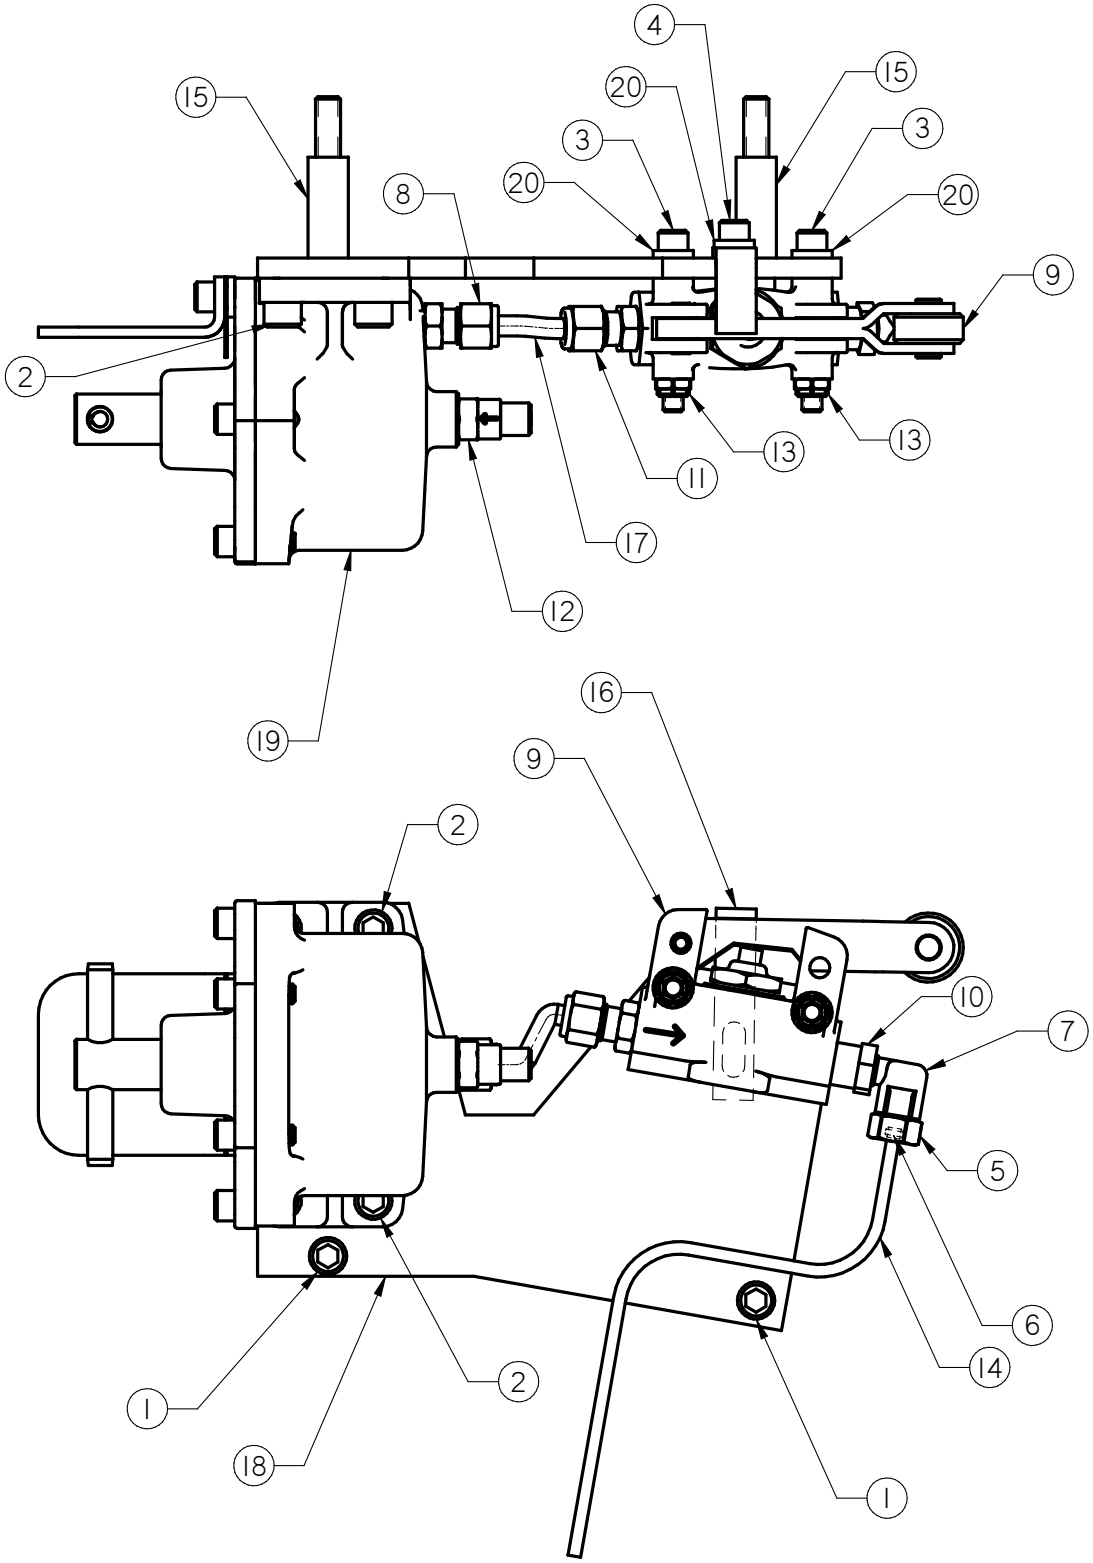


Track Oiler BOM – Outer Track – B6-90312

Item Number	PART NO.	DESCRIPTION	Quantity	
1	137-036	SCREW,SOC HD CAP 5/16-18 X 2-1/4	2	PC
2	137-130	SCREW,SOC HD CAP 5/16-18 X 1/2	4	PC
3	137-141	SCREW,SOC HD CAP 1/4-20 X 2	2	PC
4	137-334	SCREW,SOC HD CAP 1/4-20 X 1/2	1	PC
5	48-209	FITTING,COMP BUSHING B#B-1371 5/32	1	PC
6	48-210	FITTING,COMP SLEEVE BIJUR #B8272 5/32	1	PC
7	48-340	FITTING,ADAPTOR	1	PC
8	48-825	FITTING,ADAPTOR 1/4T X 1/8P	1	PC
9	48-962	FITTING,VALVE 2-WAY POPPET 1/4NPT	1	PC
10	48-964	FITTING,BUSHING 1/4NPT X 1/8NPT	1	PC
11	48-969	FITTING,CONNECTOR 1/4T X 1/4P	1	PC
12	48-972	FITTING,CHECK VALVE 1/8 NPT	1	PC
13	90-209	NUT,SELF-LOCKING 1/4 -20	2	PC
14	B6-1251	TUBING,5/32 DIA.,ADAPTER TO TRACK	1	PC
15	B6-1260	SPACER, FOR TRACK OILER MOUNTING PLATE	2	PC
16	B6-1262	STOP, FOR VALVE LEVER ARM	1	PC
17	B6-1270	TUBE,PLASTIC,OIL SUPPLY,TRACK OILER	1	PC
18	B6-1321	PLATE,MOUNTING, F/AUTO. TRACK OILER(REVD	1	PC
19	B6-90287	RESERVOIR	1	PC
20	H-3	WASHER	3	PC


Gallows Stop-Motion Assembly – B6-92233

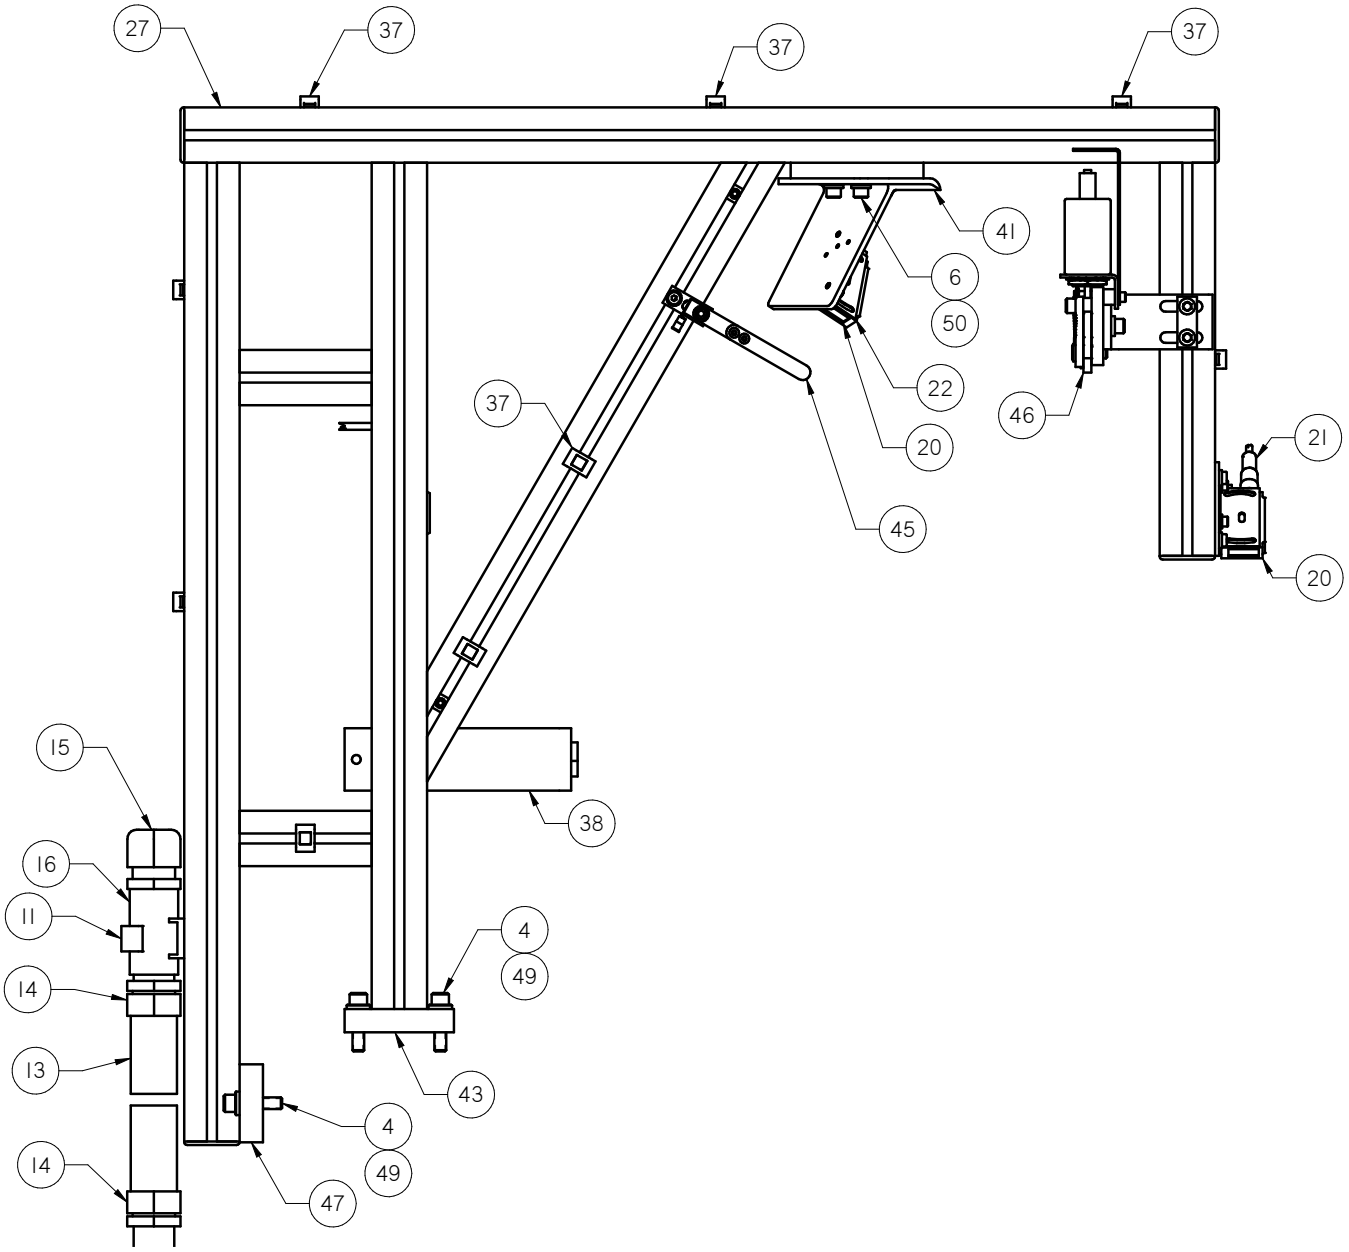

Gallows Stop-Motion Assembly – B6-92233

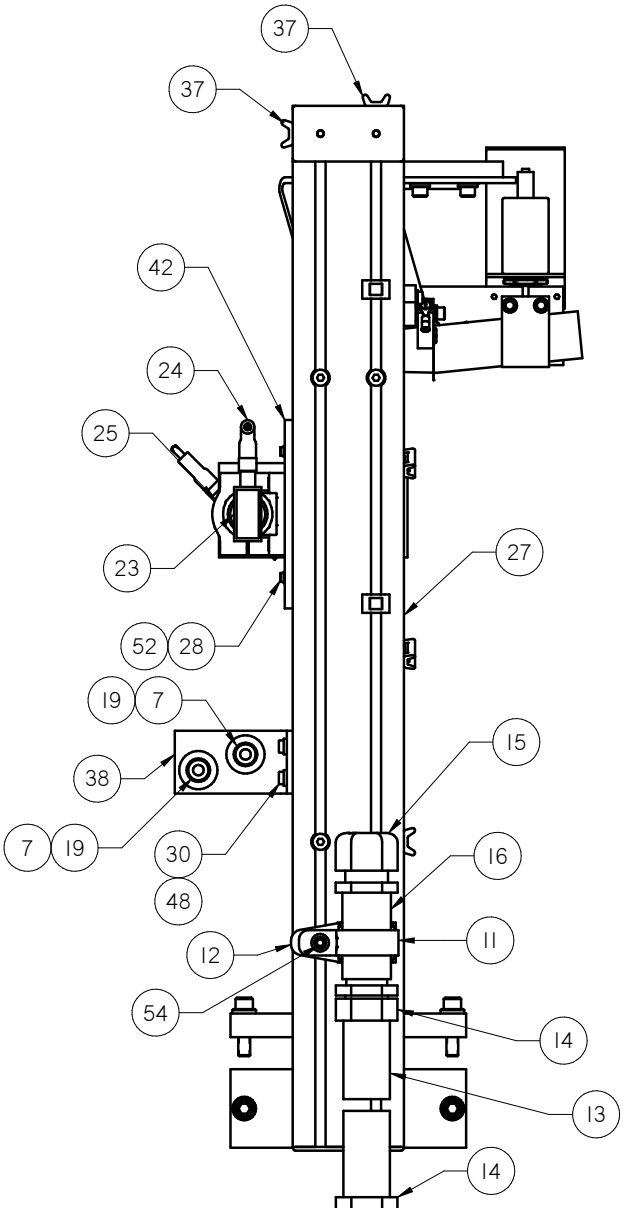


REAR

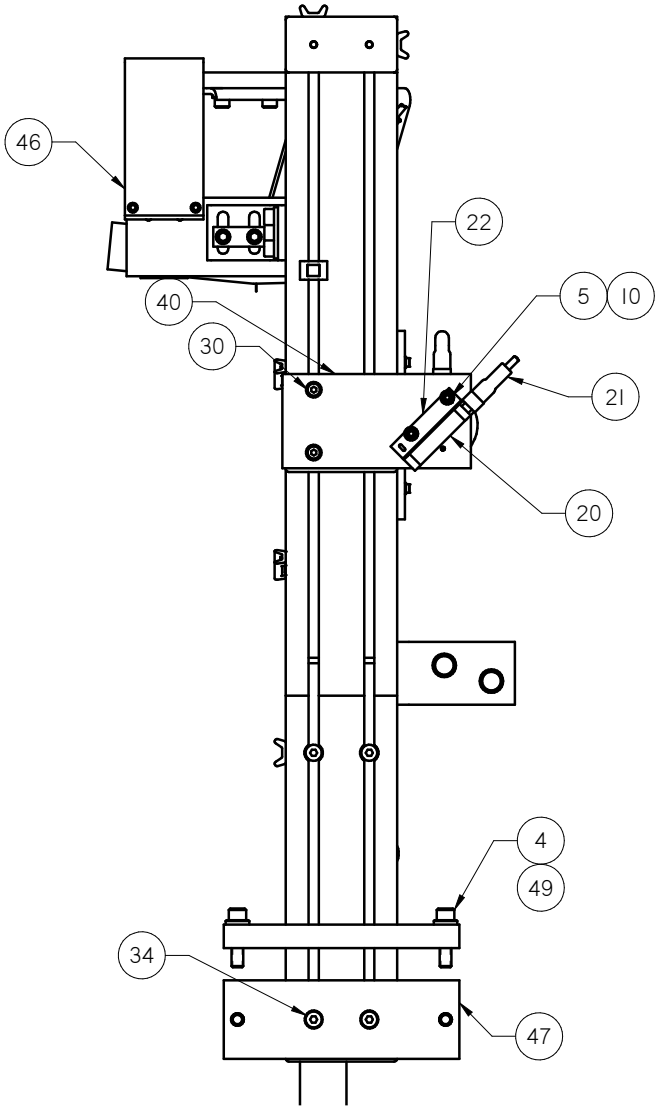

FRONT

Gallows Stop-Motion Assembly – B6-92233

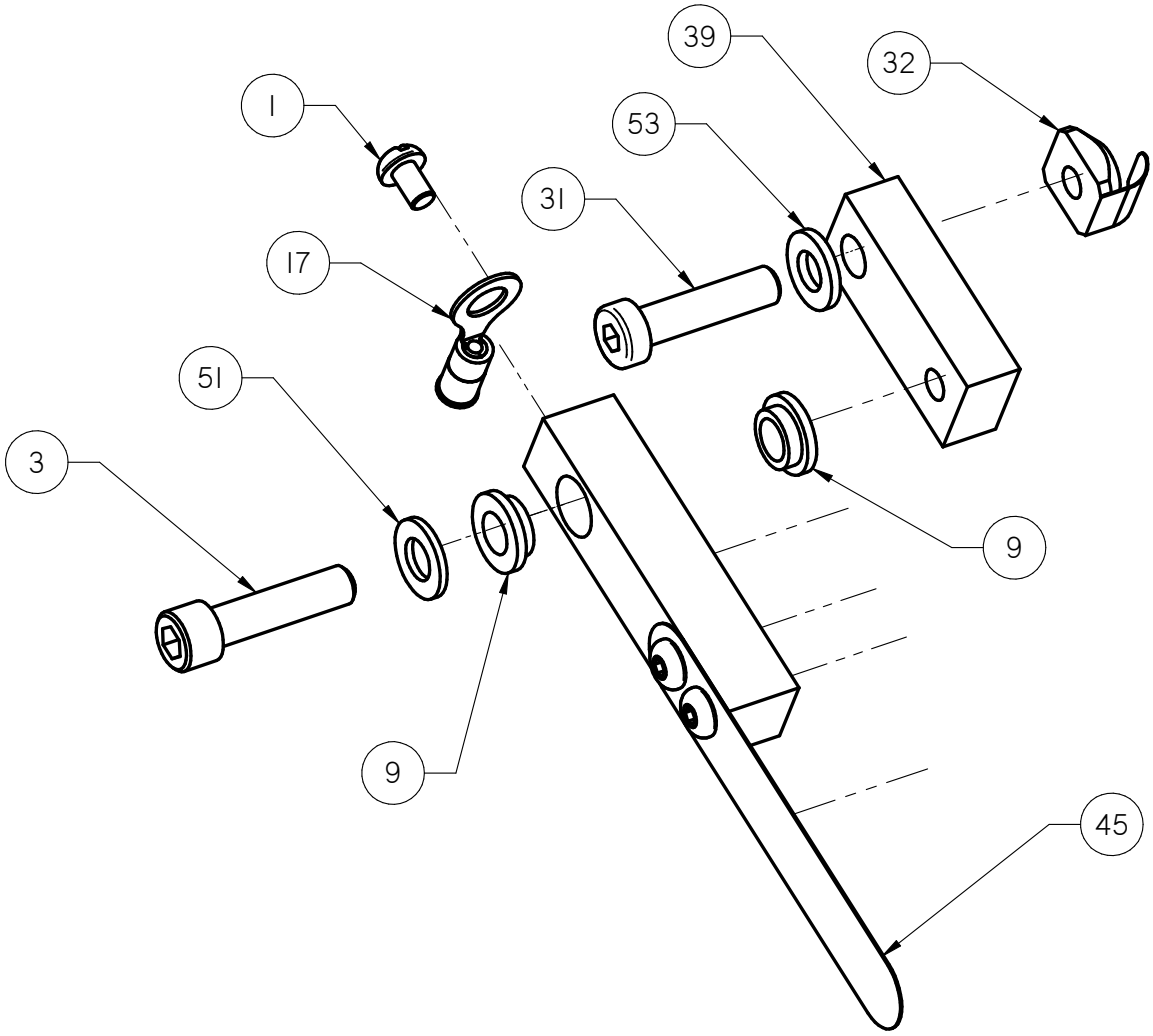


Gallows Stop-Motion BOM – B6-92233

ITEM NO.	PART NO.	DESCRIPTION	QTY.	UM
1	135-403	SCREW,RD HD MACHINE 8-32 X 1/4	1	PC
2	137-003	SCREW,SOC HD CAP 1/4-20 X 1/2	2	PC
3	137-007	SCREW,SOC HD CAP 1/4-20 X 1	1	PC
4	137-019	SCREW,SOC HD CAP 3/8-16 X 1-1/2	6	PC
5	137-117	SCREW,SOC HD CAP 8-32 X 5/16	4	PC
6	137-340	SCREW,SOC HD CAP 5/16-18 X 3/4	2	PC
7	193-097	WASHER,LOCK 3/4	2	PC
8	193-302	WASHER,COMPRESSION .26ID .560D .04	1	PC
9	193-355	WASHER,SHOULDER .27ID .500D .06	2	PC
10	193-402	WASHER,FLAT .19ID .440D .05	4	PC
11	425-123	E,CLAMP 1-1/4 PIPE	1	PC
12	425-124	E,CLAMP BACK 1 1/4	1	PC
13	434-006	E,CONDUIT SEALTITE EF 1	4	FT
14	435-074	E,CONNECTOR STR ST/MALE 1	2	PC
15	435-286	E,CONNECTOR STR CORD GRIP .71-1. 1	1	PC
16	439-011	E,CONNECTOR COUPLING 1	1	PC
17	504-039	E,LUG INSULATED RING 16-14 WIRE	1	PC
18	550-343	E,MISC TY-RAP T&B #TY525 (LARGE)	19	PC
19	566-177	E,SWITCH,PROX 12-24VDC 18MM NON-FLUSH	2	PC
20	566-294	E,SWITCH,PHOTO ELECTRICAL,24VDC,DARK OP.	2	PC
21	566-295	E,CABLE,W/QUICK DISCONNECT F/566-294 5M	2	PC
22	566-296	E,BRACKET,TILT MOUNTING ASSY,F/ 566-294	2	PC
23	566-384	E,SWITCH,RETROREFLECTIVE LASER,24V,D/LO	1	PC
24	566-385	E,SWITCH,QUICK DISCONNECT CABLE,90,5M	1	PC
25	566-458	E,SWITCH, MTG BRACKET FOR 30MM LASER	1	PC
26	595-078	E,WIRE,SPECIAL BLACK	8	FT
27	60-233	FRAME, SENSOR MOUNTING	1	PC

Gallows Stop-Motion BOM – B6-92233 (continued)


ITEM NO.	PART NO.	DESCRIPTION	QTY.	UM
28	60-236	SCREW,SOC HD CAP M4 X 0.7 X 20	2	PC
29	60-237	NUT,SQUARE M4	2	PC
30	60-239	SCREW,SOC HD CAP M6 X 1.0 X 20	4	PC
31	60-240	SCREW,SOC HD CAP M6 X 1.0 X 25	1	PC
32	60-241	NUT,SQUARE M6	6	PC
33	60-242	SCREW,SOC HD CAP M8 X 1.25 X 20	4	PC
34	60-243	SCREW,SOC HD CAP M8 X 1.25 X 25	2	PC
35	60-244	SCREW,SOC HD CAP M8 X 1.25 X 30	2	PC
36	60-245	NUT,SQUARE M8	8	PC
37	60-246	CLIP,CABLE	10	PC
38	B6-1436	BRACKET	1	PC
39	B6-1442	BLOCK,ADJUSTING STOP MOTION	1	PC
40	B6-1775	BRACKET,MOUNTING, F/PHOTO EYE, INNER CAR	1	PC
41	B6-1776	BRACKET,MOUNTING, F/PHOTO EYE, OUTER CAR	1	PC
42	B6-1954	BRACKET, LASER SENSOR, LOW OIL	1	PC
43	B6-893-2	PLATE,TOP MOUNTING	1	PC
44	B6-895-1	PLATE,SENSOR SUPPORT	1	PC
45	B6-90267	SENSOR,CARRIER STOP MOTION	1	PC
46	B6-90349	OPERATOR,AUTO. TRACK OILER	1	PC
47	B6-924-2	PLATE,REAR MOUNTING	1	PC
48	H-3	WASHER	4	PC
49	H-4	SPACER	6	PC
50	H-4612	WASHER	2	PC
51	H-9	WASHER	1	PC
52	MF193-04000	WASHER,FLAT M 4	2	PC
53	MF193-06000	WASHER,FLAT M 6	1	PC
54	MM137-06030	SCREW,SOC HD CAP M 6 X 1 X 30	1	PC


Track Oiler Actuator Assembly – B6-90349

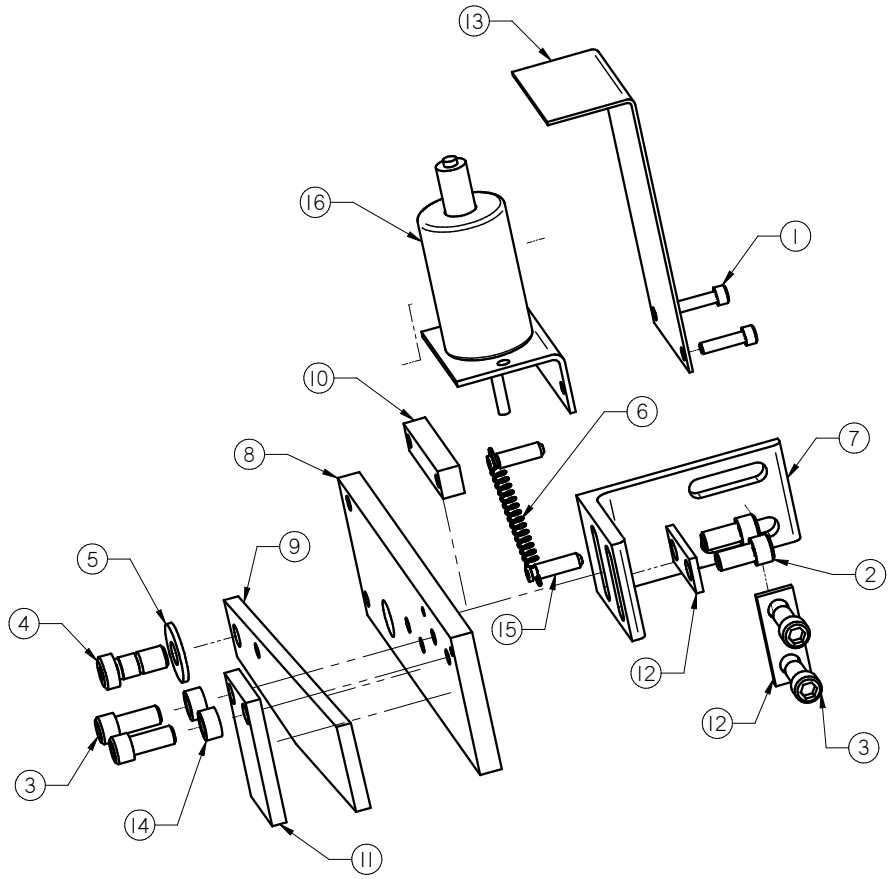

Item Number	PART NO.	DESCRIPTION	Quantity	
1	137-001	SCREW,SOC HD CAP 10-24 X 3/4	2	PC
2	137-084	SCREW,SOC HD CAP 5/16-18 X 5/8	2	PC
3	137-340	SCREW,SOC HD CAP 5/16-18 X 3/4	4	PC
4	153-529	SCREW,SHOULDER SOC HD 3/8DIA X 3/8	1	PC
5	193-432	WASHER,FLAT .391D 1.000D .09	1	PC
6	57-316	SPRING,TENSION .037 WIRE DIA .250D 1.75LG	1	PC
7	B6-1396	BRACKET,MOUNTING	1	PC
8	B6-1397	PLATE,MOUNTING	1	PC
9	B6-1398	CAM,TRACK OILER	1	PC
10	B6-1399	SPACER	1	PC
11	B6-1400	PLATE,GUIDE	1	PC
12	B6-1401	PLATE,CLAMP	2	PC
13	B6-1402	GUARD,SOLENOID	1	PC
14	B6-276	SPACER	2	PC
15	B6-781	PIN,SPRING	2	PC
16	B6-90361	SOLENOID,OILER	1	PC


Track Oiler Actuator Assembly – B6-90276

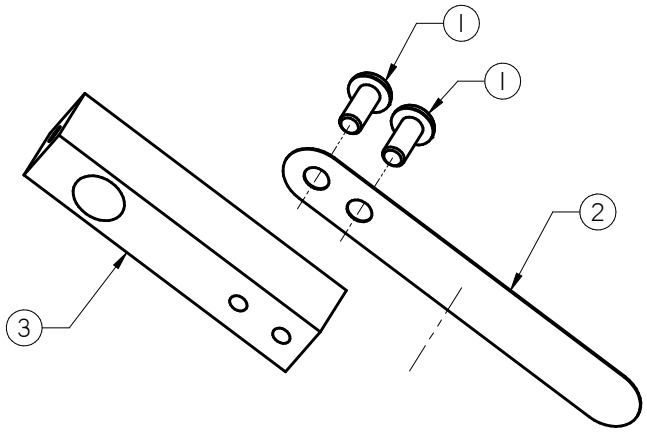

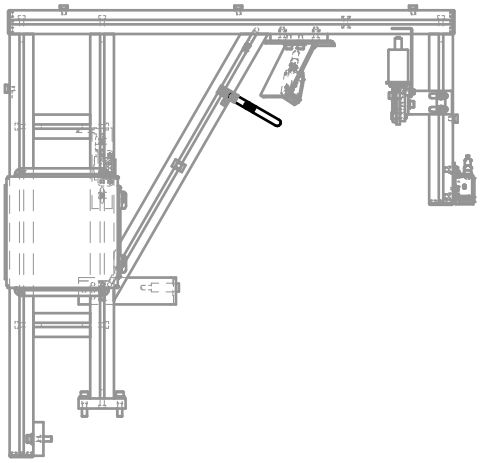


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	152-004	SCREW,BUTTON SOC HD CAP 8-32 X 3/8	2	PC
2	B6-1216	PROBE,FLEXIBLE, FOR SENSOR ARM	1	PC
3	B6-1217	BLOCK,MOUNTING, SENSOR ARM	1	PC


Outer Carrier Assembly – 24 Carrier – Detail 1 –B6-90850

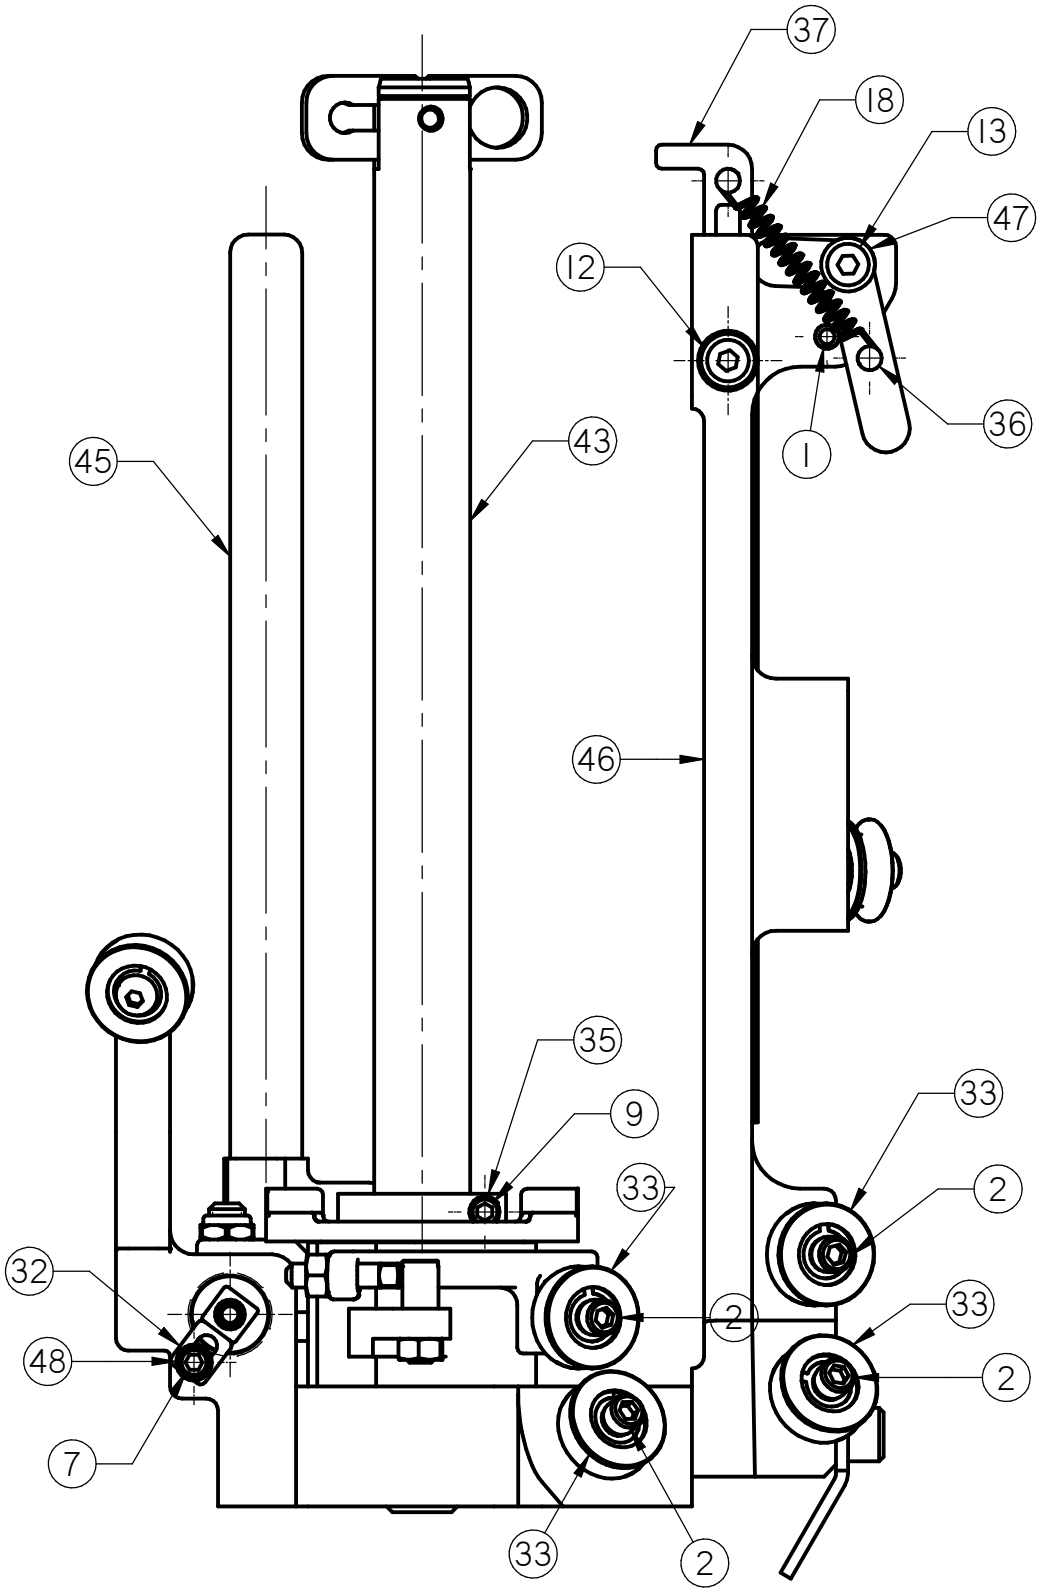

Outer Carrier Assembly – 24 Carrier – Detail 2 –B6-90850

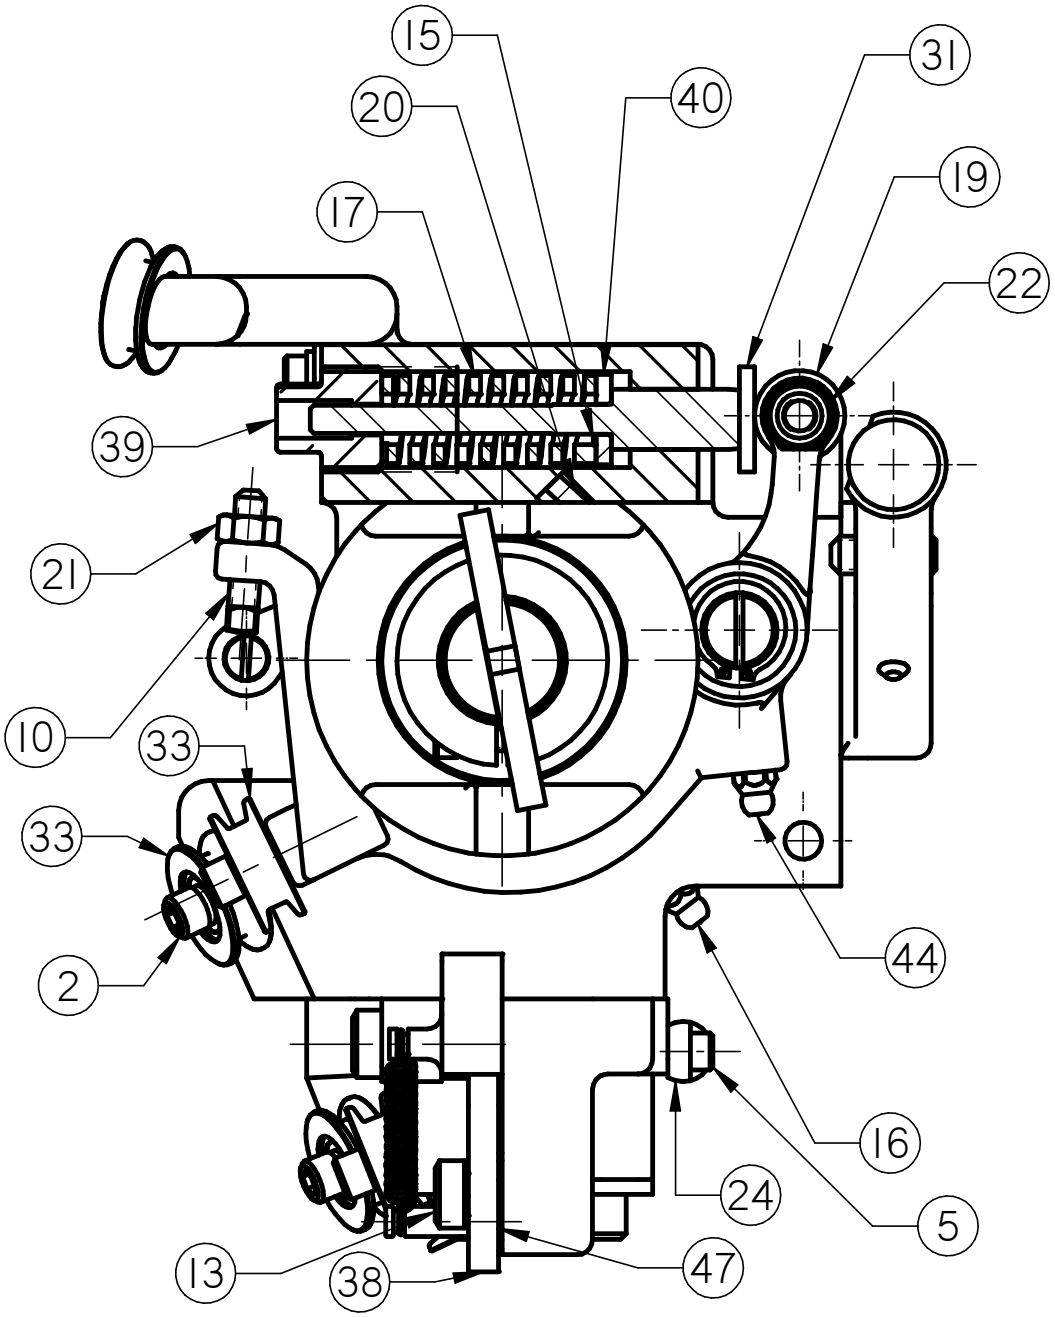

Outer Carrier Assembly – 24 Carrier – Detail 3 –B6-90850

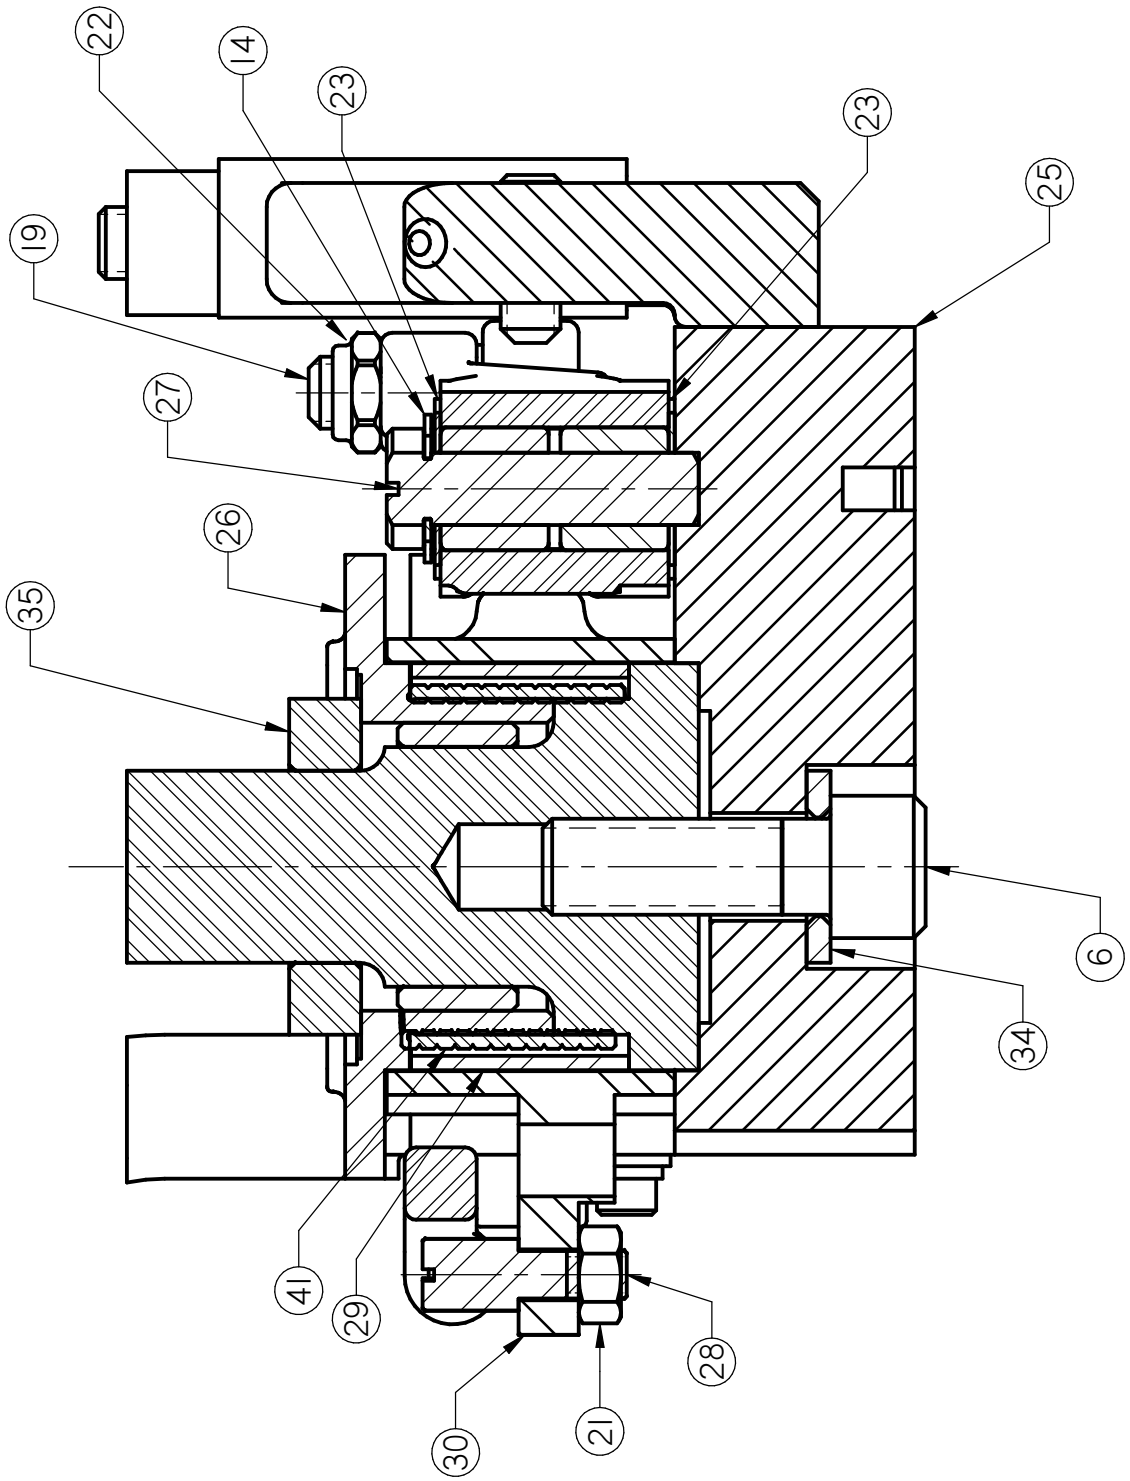


Outer Carrier BOM – 24 Carrier –B6-90850

Item Number	PART NO.	DESCRIPTION	Quantity	U M
1	104-283	PIN,ROLL .250 X 7/8	1	PC
2	137-006	SCREW,SOC HD CAP 1/4-20 X 3/4	5	PC
3	137-015	SCREW, SOC HD CAP 5/16-18 X 1-1/4	1	PC
4	137-021	SCREW,SOC HD CAP 3/8-16 X 2-1/4	2	PC
5	137-068	SCREW,SOC HD CAP 10-24 X 1/2	2	PC
6	137-322	SCREW,SOC HD CAP 1/2-20 X 1-1/2	1	PC
7	137-330	SCREW,SOC HD CAP 10-32 X 3/8	1	PC
8	137-340	SCREW,SOC HD CAP 5/16-18 X 3/4	2	PC
9	137-350	SCREW,SOC HD CAP 10-24 X 3/4	1	PC
10	139-168	SCREW, SET SQUARE HEAD 1/4-20 X 1 LG	1	PC
11	152-013	SCREW,BUTTON SOC HD CAP 1/4-20 X 3/4	1	PC
12	153-509	SCREW,SHOULDER SOC HD 3/8DIA X 1	1	PC
13	153-529	SCREW,SHOULDER SOC HD 3/8DIA X 3/8	1	PC
14	193-211	RING,RET EXTERNAL 5/8	1	PC
15	193-214	RING,RET EXTERNAL 1/4	1	PC
16	48-060	FITTING,GREASE A#1641-B 1/4-28	1	PC
17	57-277	SPRING, COMPRESSION,GR/BL 3/4 X 3/8 X 2	1	PC
18	57-316	SPRING,TENSION .037 WIRE DIA .250D 1.75LG	1	PC
19	57-332	CAM FOLLOWER CFL-3/4-SB	1	PC
20	57-334	SPRING, COMPRESSION .03 X .30 X 1.5	1	PC
21	90-223	NUT,SELF-LOCKING 1/4 -20	2	PC
22	90-224	NUT,SELF-LOCKING 3/8 -24	1	PC
23	B1-2876	SPACER WASHER	2	PC
24	B6-1001-1	BAR,BALER,OUTER CARRIER	1	PC
25	B6-1054	BASE FOR OUTER CARRIER	1	PC
26	B6-1102	ROTATING CLUTCH HUB	1	PC
27	B6-1138	COMPENSATOR PIVOT	1	PC

Outer Carrier BOM – 24 Carrier –B6-90850 (continued)


Item Number	PART NO.	DESCRIPTION	Quantity	U M
28	B6-1139	STUD,BUMPER,CLUTCH HOUSING	1	PC
29	B6-1151	CLUTCH SPRING GUIDE	1	PC
30	B6-1204	HOUSING, CLUTCH RELEASE	1	PC
31	B6-1588	TENSION SPRING PLUNGER	1	PC
32	B6-278-1	PLATE, LOCK	1	PC
33	B6-386-2	ROLLER, STRAND	6	PC
34	B6-447	WASHER	1	PC
35	B6-544	COLLAR, SPLIT SET	1	PC
36	B6-781	PIN,SPRING	1	PC
37	B6-783-2	PAWL, BOBBIN RETAINER	1	PC
38	B6-784-1	LEVER, BOBBIN RETAINER	1	PC
39	B6-82	PLUG, TENSION SPRING ADJUSTING	1	PC
40	B6-83	WASHER, TENSION SPRING	1	PC
41	B6-87-7	CLUTCH SPRING, RB-2	1	PC
42	B6-883-1	PICK-UP,SWITCH, FOR EMPTY BOBBIN DETECT	1	PC
43	B6-90124	BOBBIN POST ASSEMBLY, RB-2, OUTER	1	PC
44	B6-90243	COMPENSATOR ARM ASSEMBLY	1	PC
45	B6-90280	BAR,BALER,AUX,OUTER CARRIER	1	PC
46	B6-937	BALER, OUTER CARRIER	1	PC
47	F-617	WASHER, FLAT 3/8 X 9/16 X .03	1	PC
48	H-2	WASHER	1	PC

Outer Carrier Compensator Arm Assembly– B6-90243

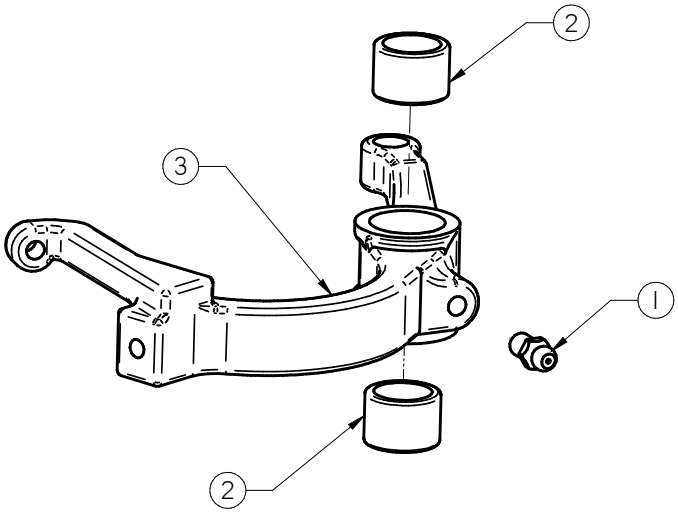


Item Number	PART NO.	DESCRIPTION	Quantity	
1	48-061	FITTING,GREASE A#1652-B 1/4-28	1	PC
2	904-450	BEARING, NEEDLE 13/16 OD X 5/8 ID X 9/16 LG	2	PC
3	B6-1135	COMPENSATOR ARM	1	PC

Baler Bar, Outer Assembly – B6-90280

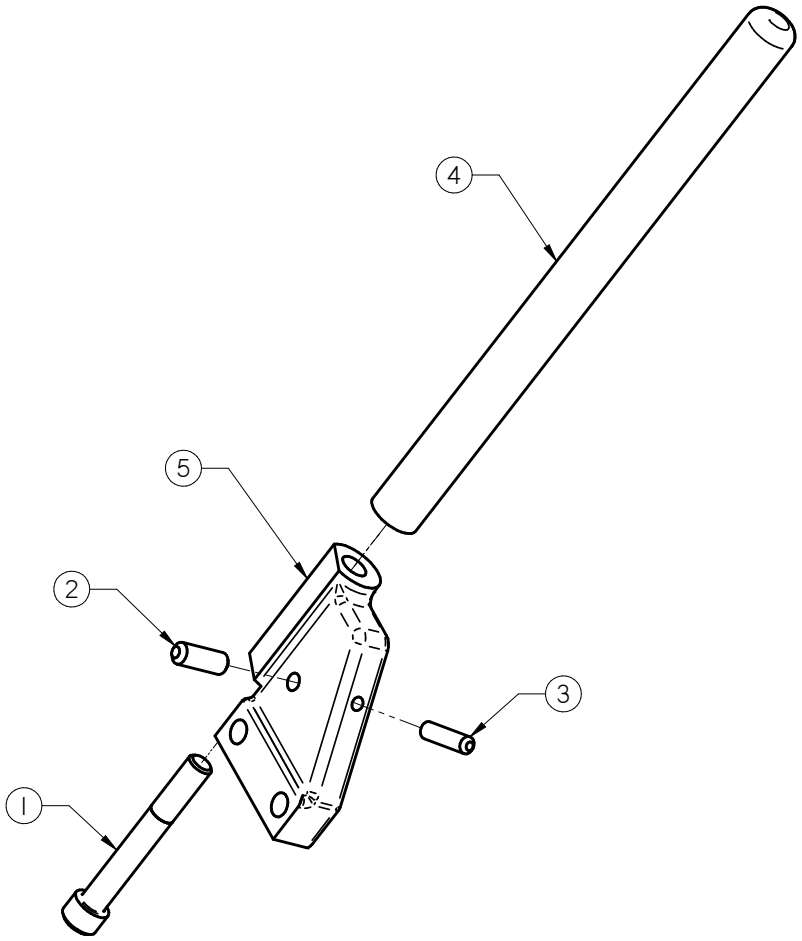


Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-379	SCREW,SOC HD CAP 3/8-16 X 2-3/4	1	PC
2	141-537	SCREW,SET HEX SOC CUP 5/16-18 X 7/8	1	PC
3	141-626	SCREW,SET HEX SOC FLAT 1/4-20 X 1	1	PC
4	B6-1212-1	BAR,AUXILIARY BALER,F/INNER & OUTER CARR	1	PC
5	B6-1213	BRACKET, MOUNTING FOR AUX. BALER	1	PC

Outer Carrier Bobbin Post Assembly – B6-90124

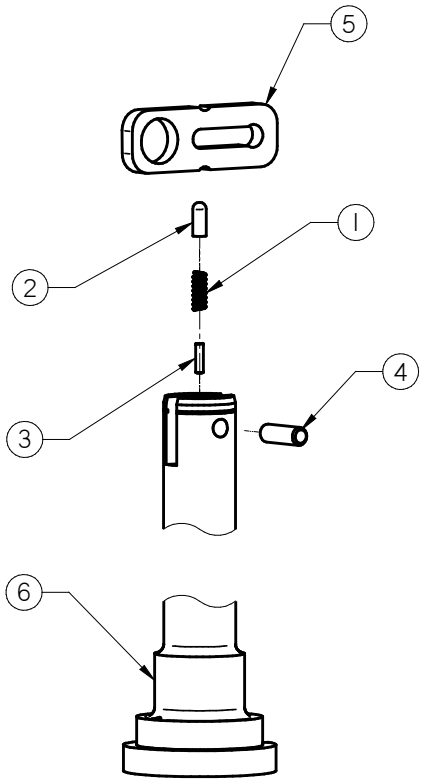


Item Number	PART NO.	DESCRIPTION	Quantity	
1	50-793	SPRING, COMPRESSION .180 X 11/16 X .032	1	PC
2	B1-6077-1	PLUNGER,BOBBIN LOCK	1	PC
3	B1-6277	PIN, SPRING STOP	1	PC
4	B6-1120	PIN,BOBBIN LOCK (SOLAR T.S.)	1	PC
5	B6-778-5	LOCK,BOBBIN,RB-2 & 225-11	1	PC
6	B6-780	BOBBIN POST, RB-2, OUTER	1	PC


Inner Carrier Assembly – 24 Carrier – Detail 1 – B6-90851

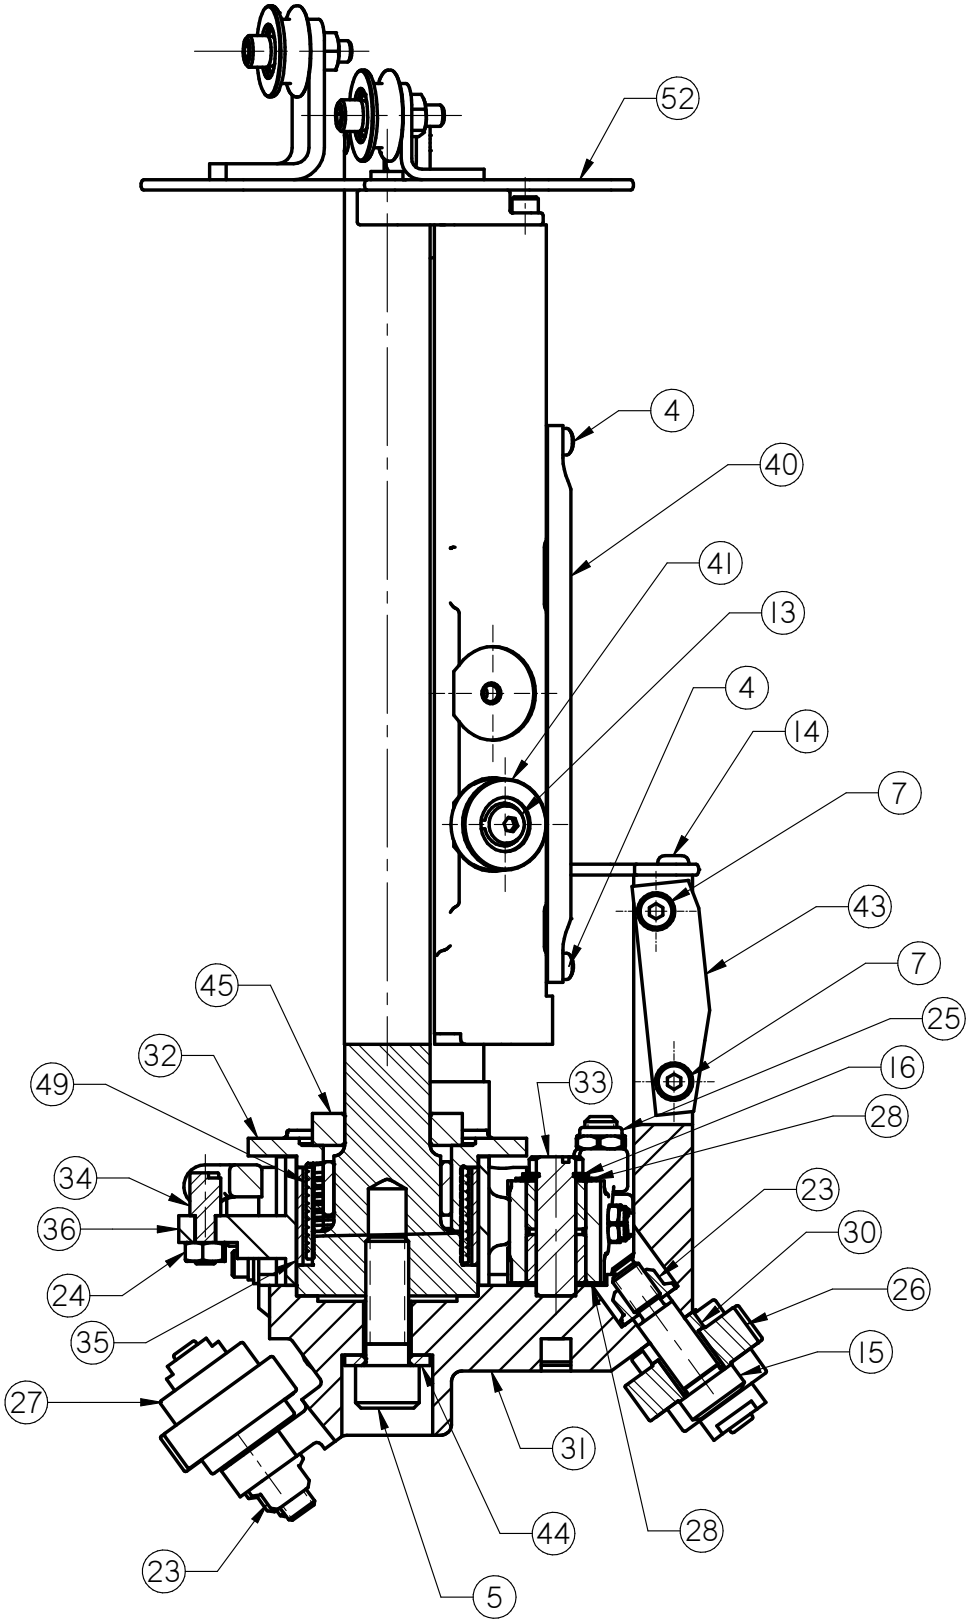

Inner Carrier Assembly – 24 Carrier – Detail 2 – B6-90851

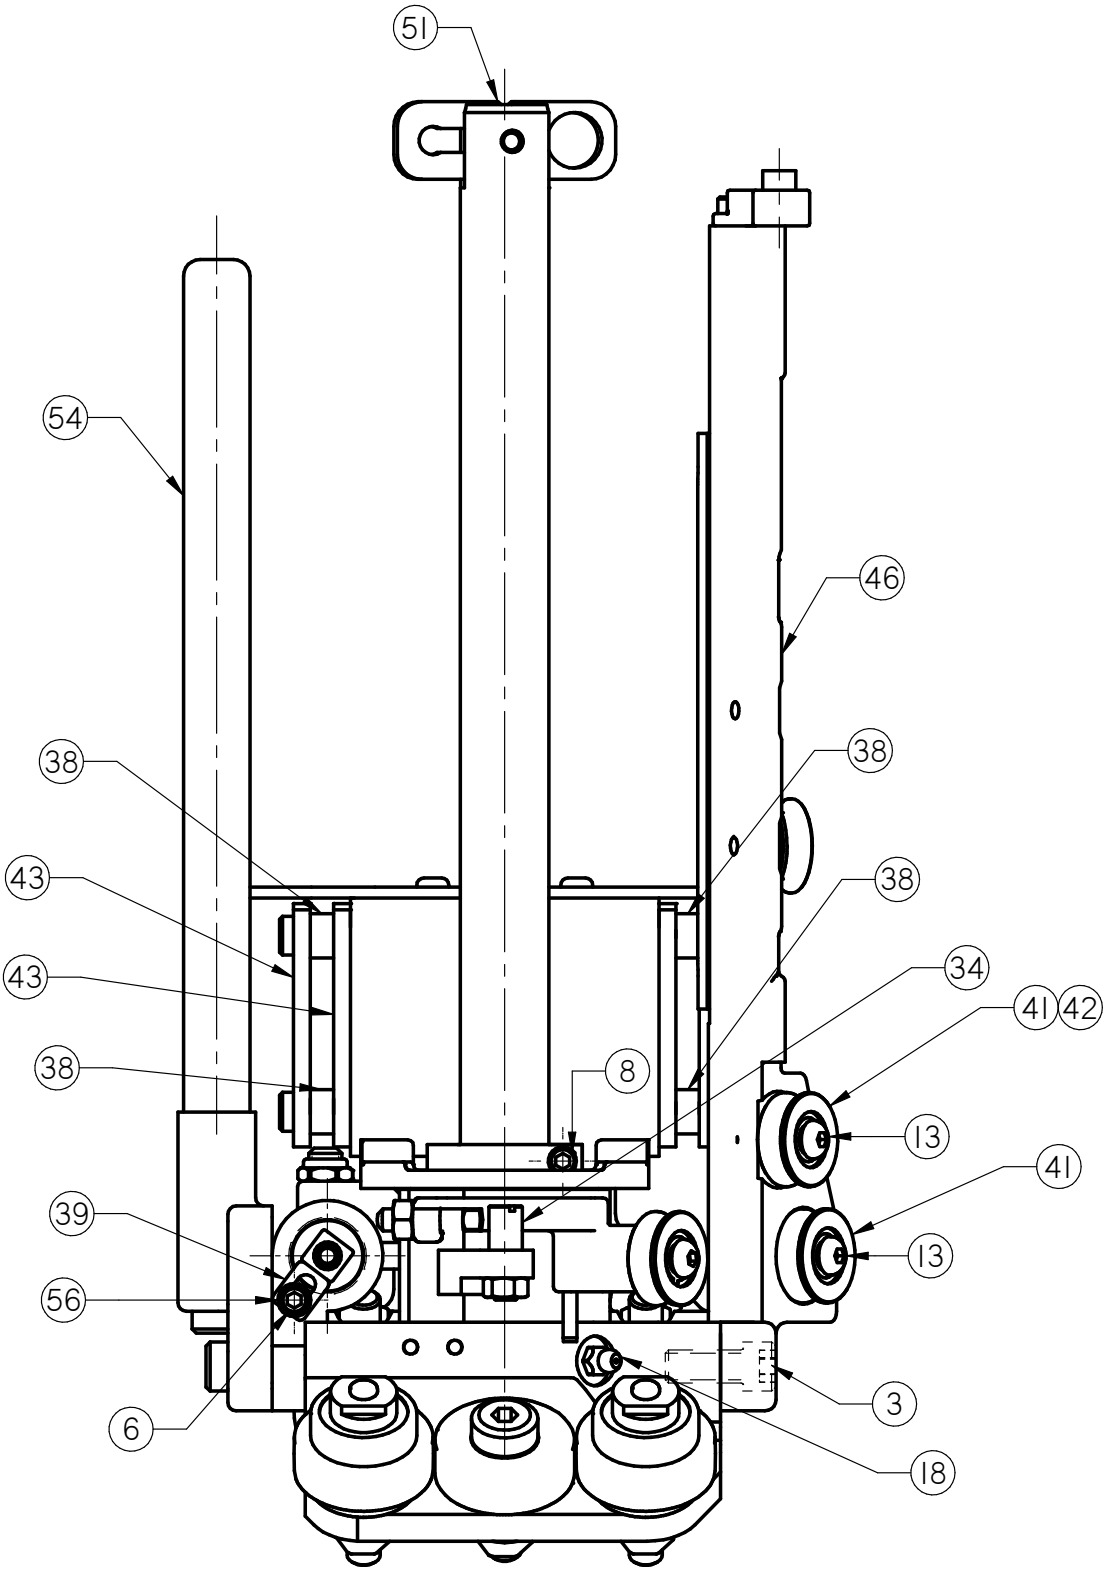

Inner Carrier Assembly – 24 Carrier – Detail 3 – B6-90851

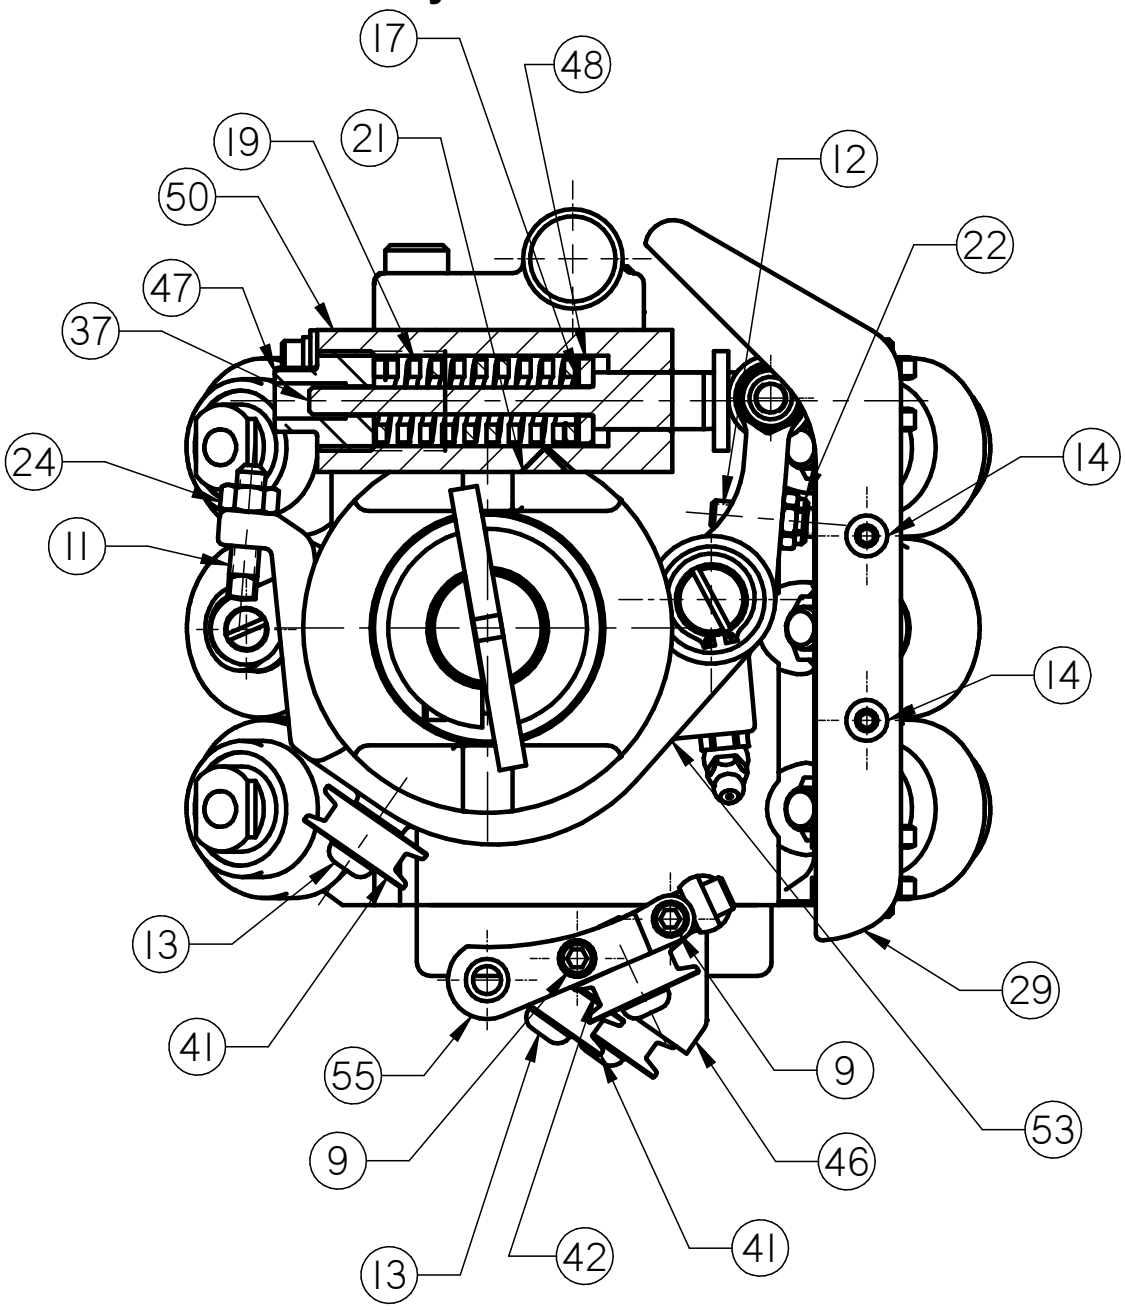


Inner Carrier BOM – 24 Carrier – B6-90851

Item Number	PART NO.	DESCRIPTION	Quantity	U M
1	137-012	SCREW,SOC HD CAP 5/16-18 X 1	1	PC
2	137-018	SCREW,SOC HD CAP 3/8-16 X 1-1/4	1	PC
3	137-131	SCREW,SOC HD CAP 3/8-16 X 7/8	2	PC
4	137-202	SCREW,SOC HD CAP 10-32 X 1/2	2	PC
5	137-322	SCREW,SOC HD CAP 1/2-20 X 1-1/2	1	PC
6	137-330	SCREW,SOC HD CAP 10-32 X 3/8	1	PC
7	137-331	SCREW,SOC HD CAP LOW 5/16-18 X 1-1/4	4	PC
8	137-350	SCREW,SOC HD CAP 10-24 X 3/4	1	PC
9	137-353	SCREW,SOC HD CAP 10-32 X 1/2	2	PC
10	137-368	SCREW,SOC HD CAP 3/8-16 X 1	1	PC
11	139-168	SCREW, SET SQUARE HEAD 1/4-20 X 1 LG	1	PC
12	141-622	SCREW,SET HEX SOC FLAT 1/4-20 X 1	1	PC
13	152-013	SCREW,BUTTON SOC HD CAP 1/4-20 X 3/4	4	PC
14	152-027	SCREW,BUTTON SOC HD CAP 10-32 X 3/8	2	PC
15	153-510	SCREW,SHOULDER SOC HD 1/2DIA X 1	2	PC
16	193-211	RING,RET EXTERNAL 5/8	1	PC
17	193-214	RING,RET EXTERNAL 1/4	1	PC
18	48-060	FITTING,GREASE A#1641-B 1/4-28	1	PC
19	57-277	SPRING, COMPRESSION,GR/BL 3/4 X 3/8 X 2	1	PC
20	57-332	CAM FOLLOWER CFL-3/4-SB	1	PC
21	57-334	SPRING, COMPRESSION .03 X .30 X 1.5	1	PC
22	90-209	NUT,SELF-LOCKING 1/4 -20	1	PC
23	90-214	NUT,FLANGE 3/8-16	6	PC
24	90-223	NUT,SELF-LOCKING 1/4 -20	2	PC
25	90-224	NUT,SELF-LOCKING 3/8 -24	1	PC
26	904-452	TRACK ROLLER	2	PC
27	904-456	TRACK ROLLER	4	PC
28	BI-2876	SPACER WASHER	2	PC

Inner Carrier BOM – 24 Carrier – B6-90851 (continued)


Item Number	PART NO.	DESCRIPTION	Quantity	U M
29	B6-1041-2	STRAND DEFLECTOR	1	PC
30	B6-1042	BUSHING	2	PC
31	B6-1097	BASE,CARRIER,REDESIGNED,INNER,20 & 24 CR	1	PC
32	B6-1102	ROTATING CLUTCH HUB	1	PC
33	B6-1138	COMPENSATOR PIVOT	1	PC
34	B6-1139	STUD,BUMPER,CLUTCH HOUSING	1	PC
35	B6-1151	CLUTCH SPRING GUIDE	1	PC
36	B6-1204	HOUSING, CLUTCH RELEASE	1	PC
37	B6-1588	TENSION SPRING PLUNGER	1	PC
38	B6-276	SPACER	4	PC
39	B6-278-1	PLATE, LOCK	1	PC
40	B6-304-1	BAR,BALER,INNER CARRIER	1	PC
41	B6-386-2	ROLLER, STRAND	4	PC
42	B6-434	SPACER, ROLLER	1	PC
43	B6-445	DRIVE PLATE FOR RB-2	4	PC
44	B6-447	WASHER	1	PC
45	B6-544	COLLAR, SPLIT SET	1	PC
46	B6-604	MOUNT, ROLLER & BALER, FOR INNER CARRIER	1	PC
47	B6-82	PLUG, TENSION SPRING ADJUSTING	1	PC
48	B6-83	WASHER, TENSION SPRING	1	PC
49	B6-87-7	CLUTCH SPRING, RB-2	1	PC
50	B6-89	TENSION SPRING HOUSING	1	PC
51	B6-90123	BOBBIN POST ASSEMBLY, RB-2, INNER	1	PC
52	B6-90177-1	CAP ASSEMBLY	1	PC
53	B6-90244	COMPENSATOR ARM - INNER	1	PC
54	B6-90281	BAR,BALER,AUX,INNER CARRIER	1	PC
55	B6-925-3	EYE BRACKET	1	PC
56	H-2	WASHER	1	PC

Bobbin Post Assembly – Inner Carrier – B6-90123

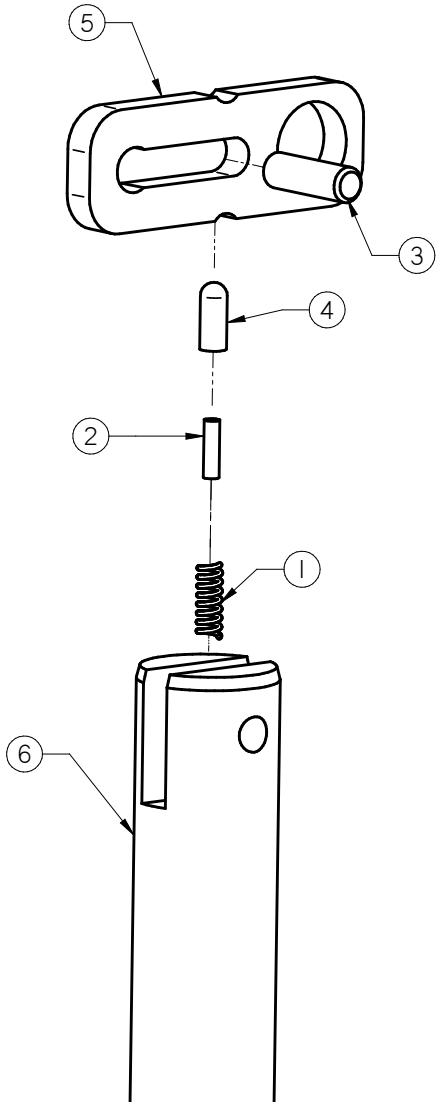


Item Number	PART NO.	DESCRIPTION	Quantity	
1	50-793	SPRING, COMPRESSION .180 X 11/16 X .032	1	
2	B1-6277	PIN, SPRING STOP	1	
3	B6-1120	PIN,BOBBIN LOCK (SOLAR T.S.)	1	PC
4	B6-6077-1	PIN, BOBBIN LOCK	1	
5	B6-778-5	BOBBIN LOCK	1	
6	B6-779	BOBBIN POST, RB-2, INNER	1	

Compensator Arm Assembly – B6-90244

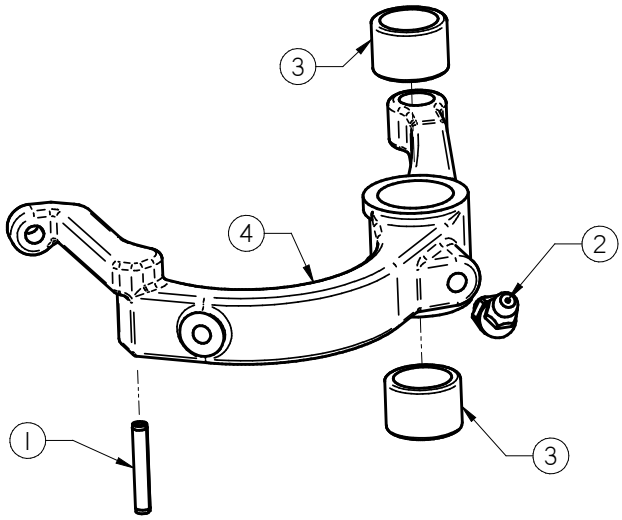


Item Number	PART NO.	DESCRIPTION	Quantity	
1	104-422	PIN,ROLL .156 X 1	1	PC
2	48-058	FITTING,GREASE A#1637-B1 45DEG 1/4-28	1	PC
3	904-450	BEARING, NEEDLE 13/16 OD X 5/8 ID X 9/16 LG	2	PC
4	B6-1136	COMPENSATOR ARM - INNER CARRIER	1	PC

Bobbin Cap Assembly – B6-90177-1

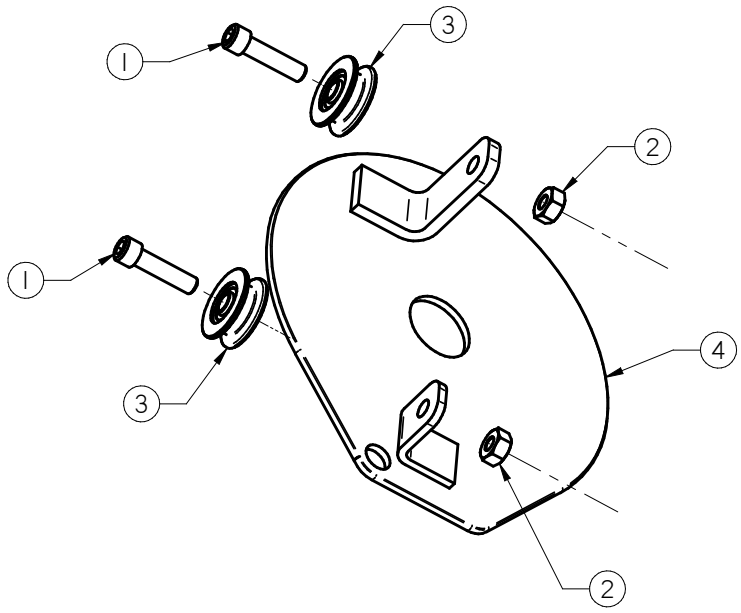


Item Number	PART NO.	DESCRIPTION	Quantity	
1	137-363	SCREW,SOC HD CAP 1/4-20 X 1	2	PC
2	90-223	NUT,SELF-LOCKING 1/4 -20	2	PC
3	B6-386-2	ROLLER, STRAND	2	PC
4	B6-607-5	YARN & WIRE DEFLECTOR	1	PC

Baler Bar, Inner Assembly – B6-90281

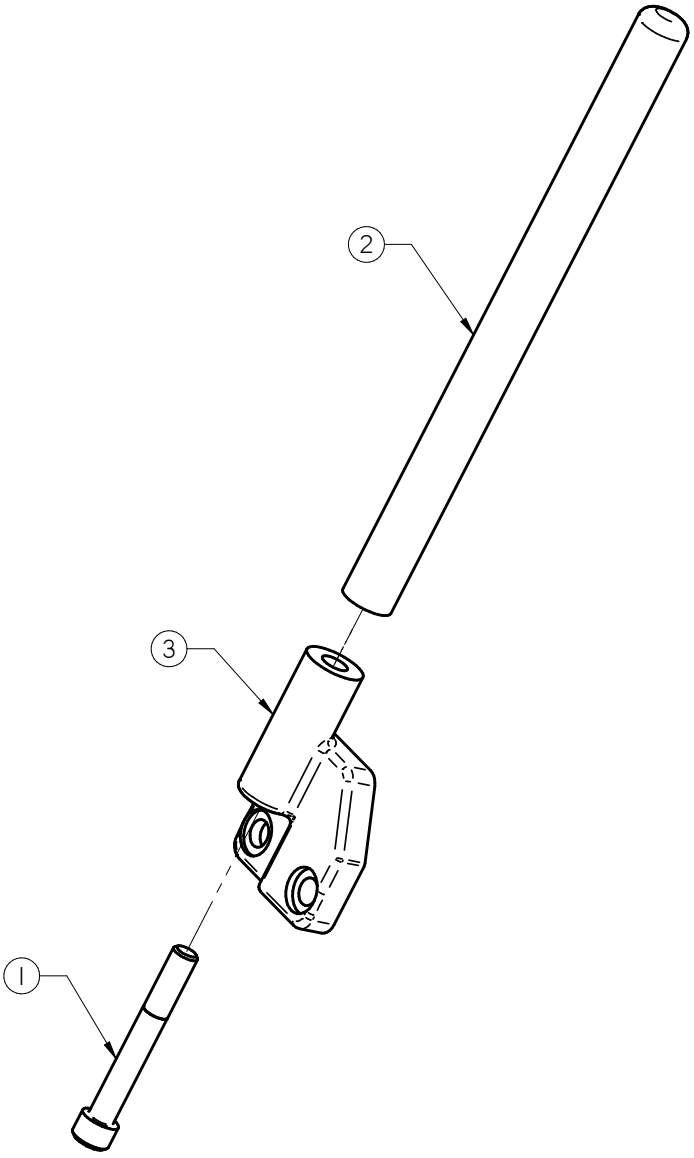

Item Number	PART NO.	DESCRIPTION	Quantity	UM
1	137-379	SCREW,SOC HD CAP 3/8-16 X 2-3/4	1	PC
2	B6-1212-1	BAR,AUXILIARY BALER,F/INNER & OUTER CARR	1	PC
3	B6-1214	BRACKET,MTG FOR AUX BALER BAR - INNER	1	PC

High Torque Clutch Assembly – B6-90719

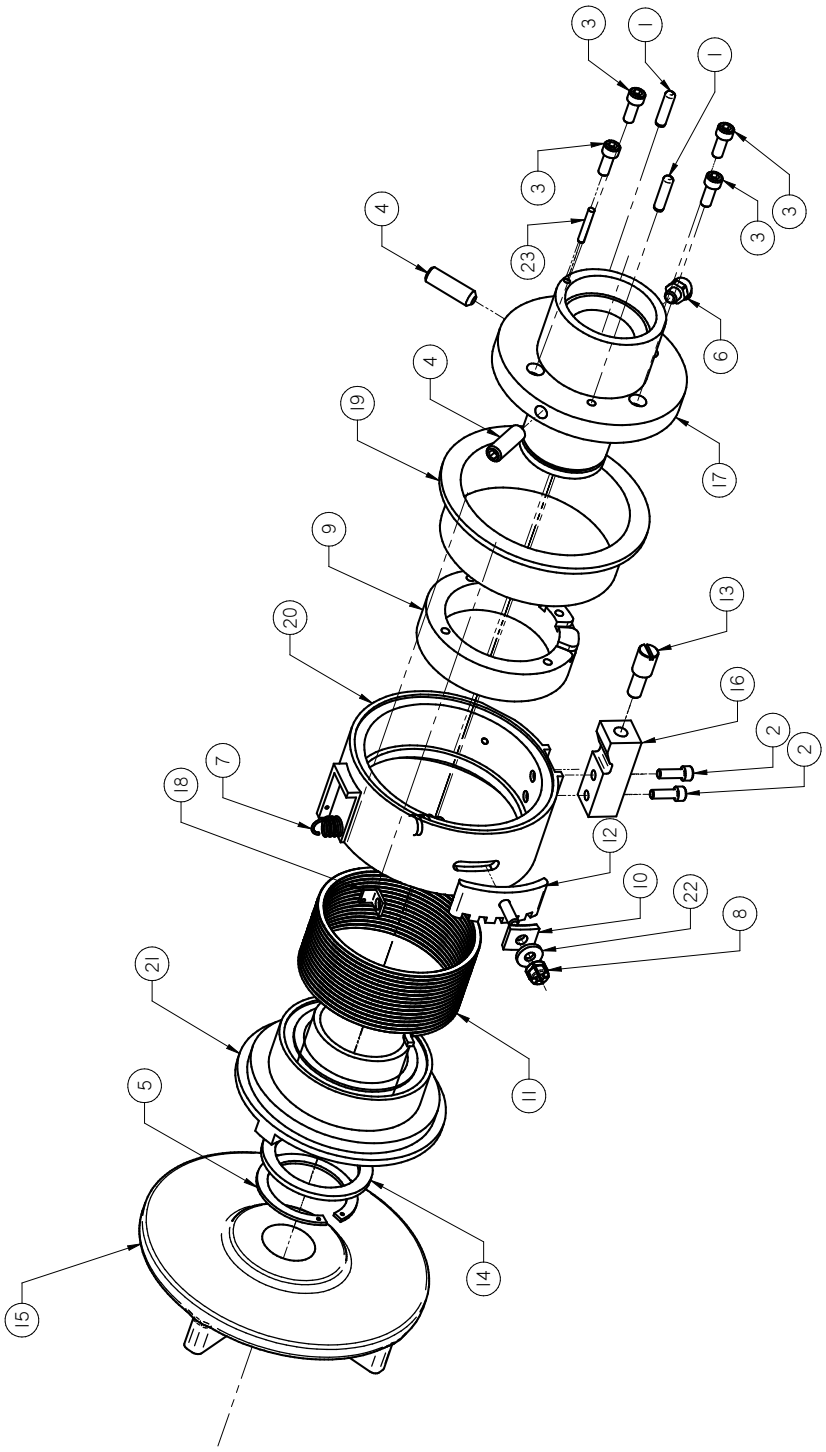

High Torque Clutch BOM – B6-90719

Item Number	PART NO.	DESCRIPTION	Quantity	
1	104-456	PIN,DOWEL .187 X 3/4	2	PC
2	137-086	SCREW,SOC HD CAP 8-32 X 1/2	2	PC
3	137-348	SCREW,SOC HD CAP 10-32 X 1/2	4	PC
4	141-633	SCREW,SET HEX SOC CUP 5/16-18 X 1	2	PC
5	193-943	RING,RET EXTERNAL 1-5/8	1	PC
6	48-065	FITTING,GREASE A#1637-B1 45DEG 1/4-28	1	PC
7	57-787	SPRING, EXTENSION	1	
8	90-200	NUT,SELF-LOCKING CAD-PLATED 10-32	1	PC
9	B5-141	HUB,STATIONARY	1	PC
10	B5-151	WASHER,CURVED	1	PC
11	B5-16-3	SPRING,CLUTCH, OUTER	1	PC
12	B5-90035	HOLDER,TANG	1	PC
13	B6-1139	STUD,BUMPER,CLUTCH HOUSING	1	PC
14	B6-1833	WASHER	1	PC
15	B6-1835	BOBBIN SPACER	0	PC
16	B6-1836	CASING TRIP BLOCK	1	PC
17	B6-1837	HUB,STATIONARY	1	PC
18	B6-1851	BRACKET,SPRING	1	PC
19	B6-1852	HOUSING,LOWER CLUTCH	1	PC
20	B6-90720	CLUTCH CASING ASSEMBLY	1	PC
21	B6-90721	HUB,MOVABLE	1	PC
22	H-6138	WASHER 1/2 X 3/16 X 070	1	PC
23	MD104-03020	PIN,DOWEL M3 X 20	1	PC