



Onsite Installation Requirements

This document outlines the requirements to connect a service laptop to a Pure FlashArray and the associated Hardware and Software requirements involved.

Hardware Requirements

- Service Laptop with USB or Serial Port
- Serial DB9 Null Modem Cable (Female to Female)
- USB to Serial Converter (Male)
- Console Breakout Cable (Provided with FlashArray)
- If Serial Connection is not possible, a KVM 'crash cart' can be used instead.


Software Requirements

- Terminal Emulator
- Putty.exe on Windows
- Zoom or Similar Remote Conferencing Tool
- Internet Access

How to Connect

We will be creating a connection between your Service Laptop and the FlashArray using a Serial connection and a Terminal Emulator.

We will be connecting to the KVM port on CT0 to begin the installation. During the installation, you may be required to move the connection to CT1.

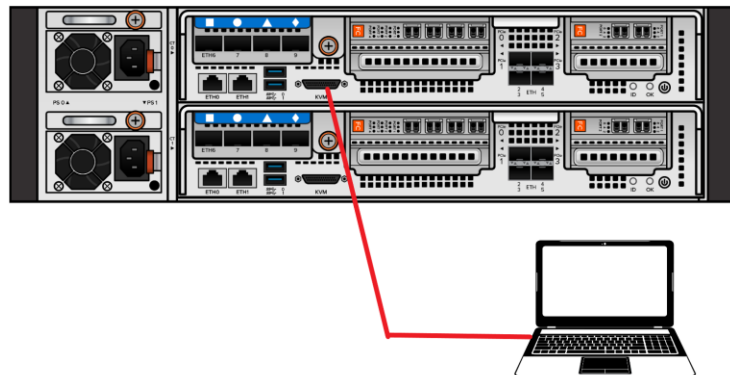

Physical Components

The cables we require to make this initial connection are displayed below.

USB to Serial Converter Cable	Serial DB9 Null Modem Cable (Female to Female)	Console Breakout Cable (Provided with FlashArray)
-------------------------------	--	---




Cable Connections

1. Connect the USB end of the USB to Serial Converter Cable into our Service Laptop.
2. Connect the Serial end of the USB to Serial Converter Cable into one end of the Serial DB9 Null Modem Cable.
3. Connect the other end of the Serial DB9 Null Modem Cable into the Console Breakout Cable's Serial Port.
4. Connect the KVM end of the Console Breakout Cable into the top controller on the FlashArray.

Establish Connection (Windows Users)


Once we are physically cabled between the Service Laptop and the FlashArray we are ready to establish a connection to the device.

1. We need to establish which COM port the Service Laptop has assigned to your USB Port.
2. Open Device Manager on your Service Laptop and click on Ports (COM & LPT).
 - a. Your Port should be listed as shown below – in the example we are assigned COM4.

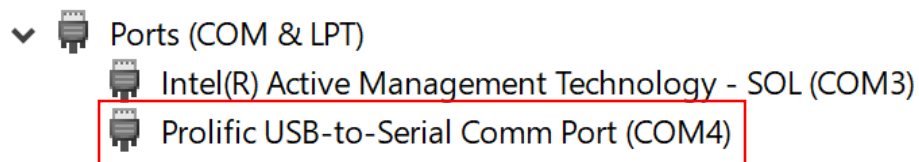


We are ready to open our Terminal Emulator. In the example we are using Putty.exe.

3. Power up the FlashArray by inserting the power cables into the 2 PSU ports as highlighted below.

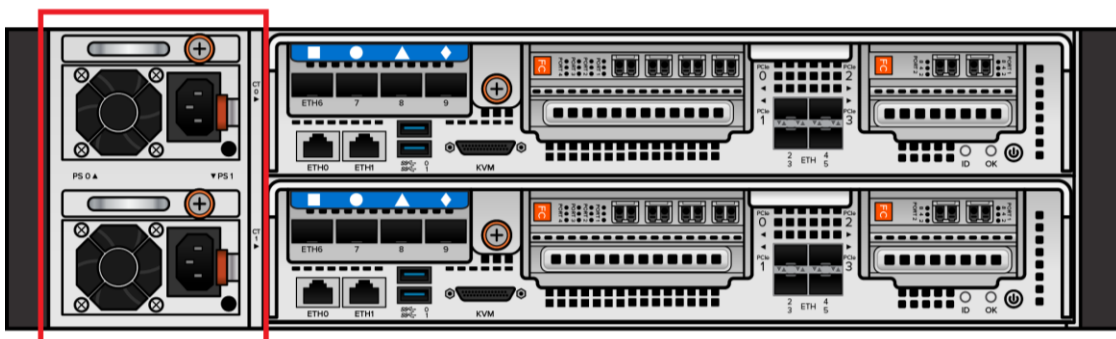


4. Open your Terminal Emulator, in this example Putty.exe

5. Click on Serial.

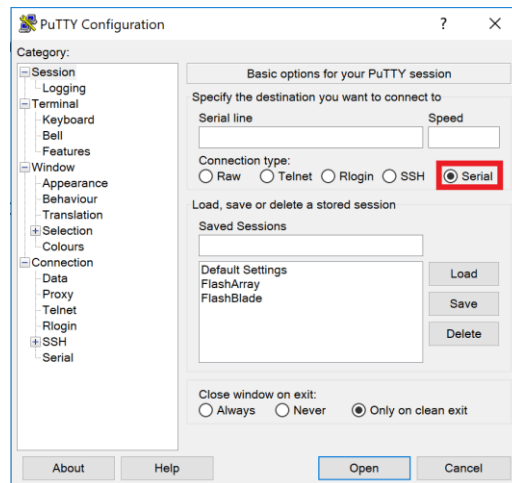


This will auto populate the boxes above, Serial line & Speed.

6. Amend these entries to use the COM port you ascertained earlier and use 115200 as the Speed (Baud Rate)

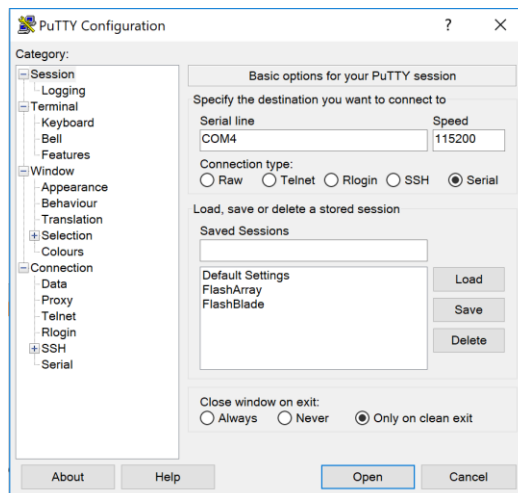

7. Click Open and this will open your Terminal Emulator Session with the FlashArray.

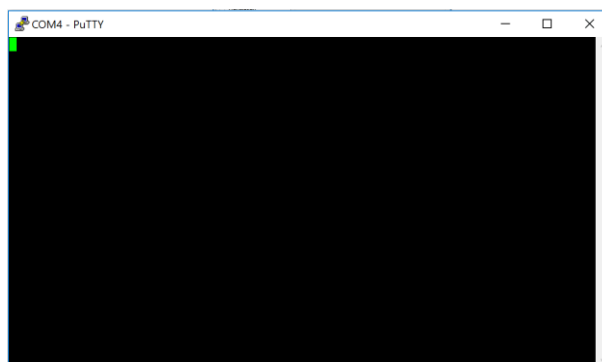

You are now able to login to the FlashArray with support from your assigned remote engineer to conduct the installation.


The remote engineer may ask for your assistance moving the Console Breakout Cable from CT0 to CT1 as the installation progresses. This is a non-disruptive task.

Establish Connection (Mac Users)

Once you have inserted the cables as detailed above, follow these steps to establish a connection on Mac devices.

Open Utilities ->Terminal and run:

screen /dev/tty.usbserial 115200; example below.

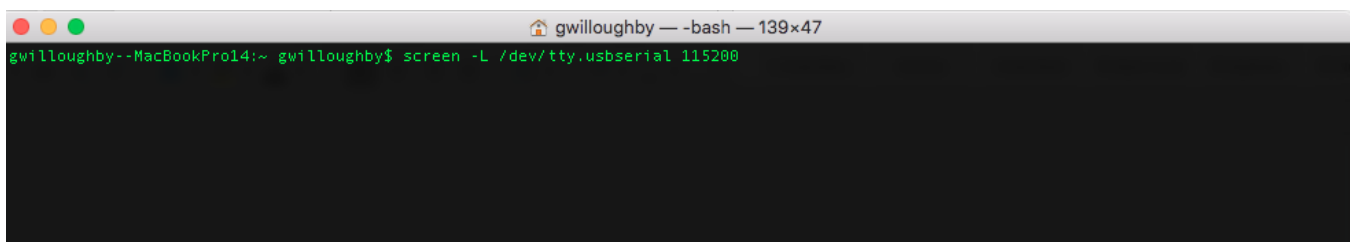A screenshot of a Mac Terminal window. The title bar shows the user 'gwilloughby' and the window size '139x47'. The terminal text shows the prompt 'gwilloughby--MacBookPro14:~ gwilloughby\$' followed by the command 'screen -L /dev/tty.usbserial 115200' which has been entered.

Appendix

N.B. When you first install your USB to Serial Converter Cable – you may be required to install drivers for the cable to be recognized. This is normal practice.

If your operating system is unable to download the drivers automatically please navigate to the following link to download them manually.

Prolific USB Driver:

http://www.prolific.com.tw/US/ShowProduct.aspx?p_id=225&pcid=41

Install the driver manually by right clicking on the COM port in Device Manager and selecting Update Driver.

Navigate to the directory you downloaded the file to and selecting the driver you downloaded.