TANDARD ARRIVAL CI


STANDARD ARRIVAL CHART RNAV (GNSS) -INSTRUMENT (STAR)

ACC 134.2 APP 124.05 119.3 TWR 118.6 / 118.25

TRANSITION ALTITUDE 11 000ft

D-ATIS AP ID-WSSS 128.025

SINGAPORE/Singapore Changi RWY 02L/C/R KARTO TWO ALPHA ARRIVAL KARTO 2A

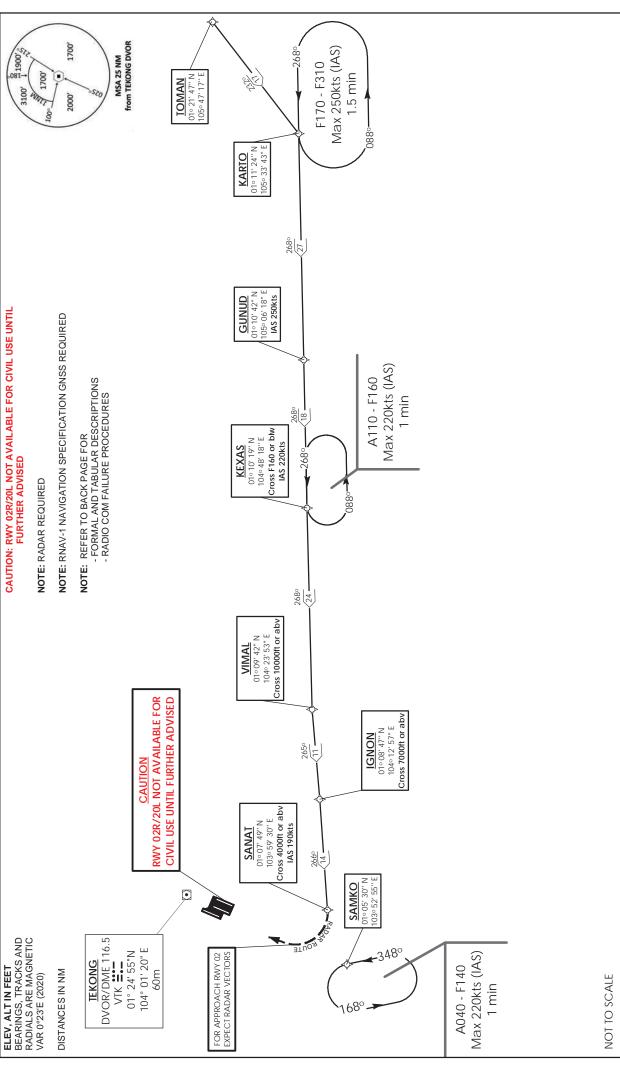

KARTO 2A (STAR) RNAV GNSS RWY 02L/02C/02R - DESCRIPTIONS

Formal & Abbreviated Descriptions

Formal Description	Abbreviated Description	Path Terminator	Fly-Over required
From TOMAN.	TOMAN -	IF	N
To KARTO, turn right.	KARTO [R] -	TF	N
To GUNUD, speed 250kts	GUNUD [K250] -	TF	N
To KEXAS at or below FL160, speed 220kts.	KEXAS [FL160-; K220] -	TF	N
To VIMAL at or above 10000ft, turn left.	VIMAL [A100+; L] -	TF	N
To IGNON at or above 7000ft, turn right.	IGNON [A070+; R] -	TF	N
To SANAT at or above 4000ft, speed 190kts.	SANAT [A040+; K190]	TF	N

Tabular Descriptions

Path Term	Waypoint Name	Fly-Over	Course °M(°T)	Distance (NM)	Turn Direction	Altitude	Speed Limit	Navigation Spec
IF	TOMAN	1	-	-	-	-	-	RNAV1
TF	KARTO	1	232(232.4)	17.0	R	ı	1	RNAV1
TF	GUNUD		268(268.4)	27.0	-	-	K250	RNAV1
TF	KEXAS	-	268(268.4)	18.0	1	FL160-	K220	RNAV1
TF	VIMAL	-	268(268.4)	24.0	L	A100+	-	RNAV1
TF	IGNON	-	265(265.4)	11.0	R	A070+	-	RNAV1
TF	SANAT	-	266(266.4)	14.0	-	A040+	K190	RNAV1

Radio Communications Failure Procedure

1	SET TRANSPONDER TO MODE A/C CODE 7600				
2	When cleared via KARTO 2A by Singapore ATC				
	(a)	Maintain last assigned flight level or altitude and proceed on KARTO 2A to SANAT,			
		then direct to SAMKO			
	(b)	From SAMKO commence descent and carry out appropriate landing procedure for			
		RWY 02 as close as possible to EAT or ETA			
	(c)	If unable to effect a landing, refer to Singapore AIP for missed approach procedure			
3	No clearance or instruction received from Singapore ATC				
	-	Refer to Singapore AIP for radio communications failure procedure			