INSTRUMENT APPROACH CHART-ICAO

ZSWZ/WNZ

VAR5.5°W

5L-4

AD ELEV 5.1
THR ELEV 5.1

WENZHOU/Longwan

ILS/DME y RWY21

D-ATIS	Wenzhou Approach			Wenzhou Tower
	APP01	APP02	APP03	TWR
127.05	119.625 (132.15)	120.25 (132.15)	127.975 (132.15)	118.875 (118.2)

LOC	Final Apch Crs	FAF	MISSED APPROACH
IWZ 108.7	214°	D9.3 IWZ 900(895)	Climb straight ahead to D10.1WNZ at 500 or above, turn RIGHT to DST at 900 or above, across DST join the holding pattern and climb to 1500 or above, across DST approach again; or follow ATC instructions.

TL 3600
TA 3000
3300(QNH≥1031hPa)
2700(QNH≤979hPa)

Note:1.Circling E of RWY only.
2.Missed approach turning MAX IAS210kt.

1950
WNZ
1200
1600
MSA 25NM

BEARINGS ARE MAGNETIC.
ALTITUDES, ELEVATIONS AND HEIGHTS IN METERS.
ALL DISTANCES IN NAUTICAL MILES.

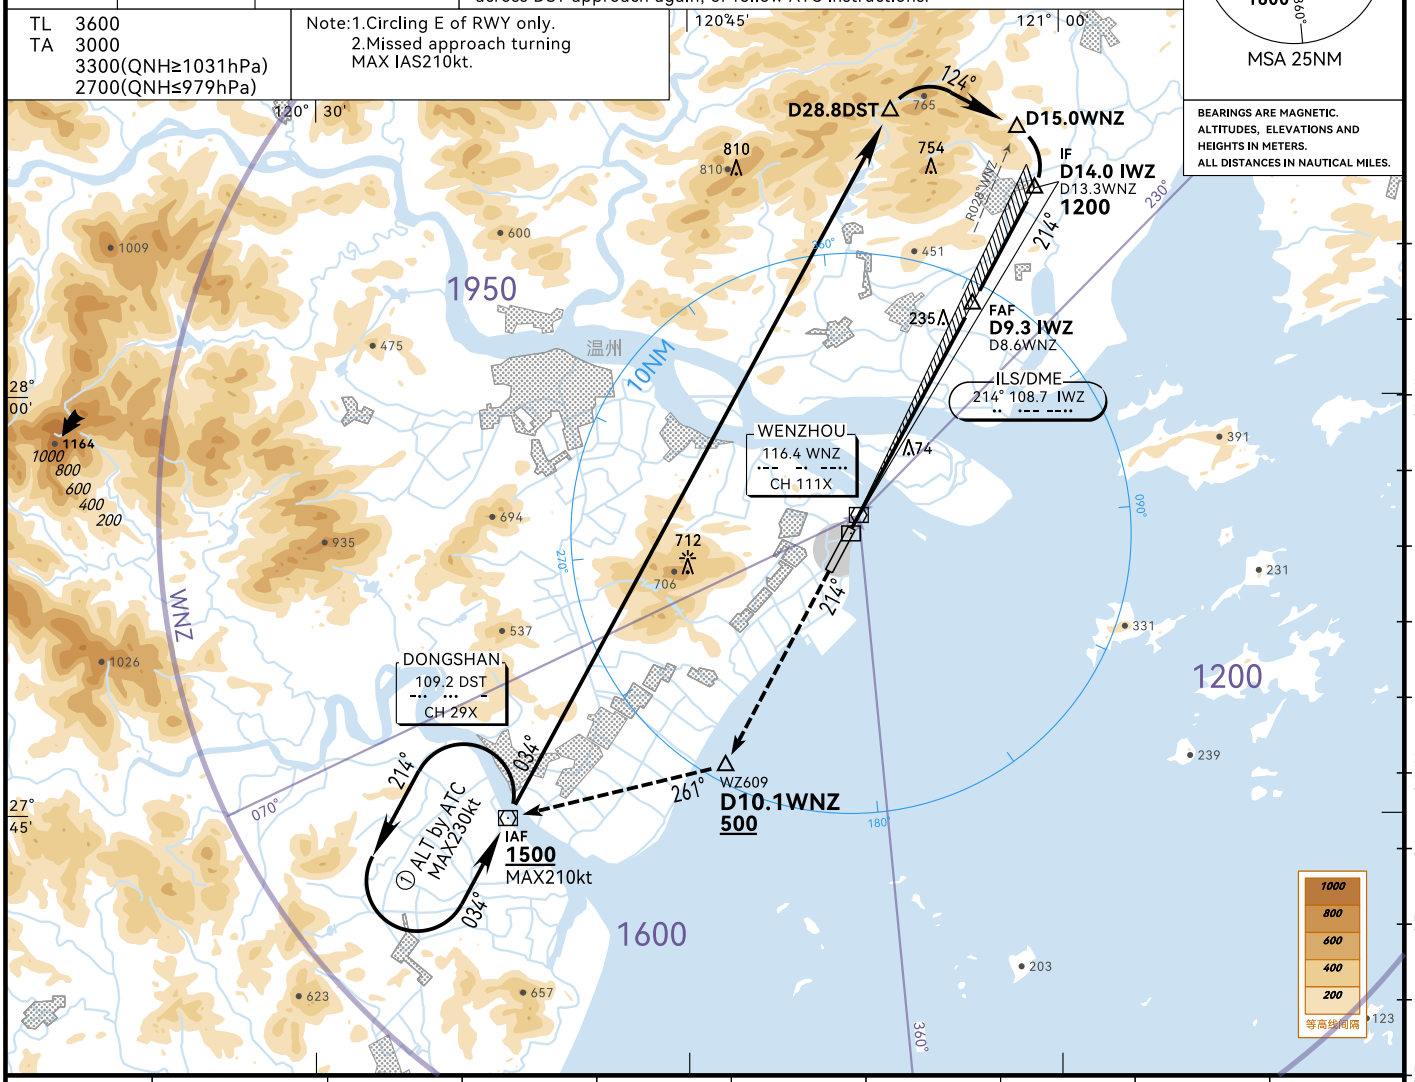

GP INOP	DME (IWZ)	3	4	5	6	7	8	9
	ALT	295	392	489	586	683	780	877

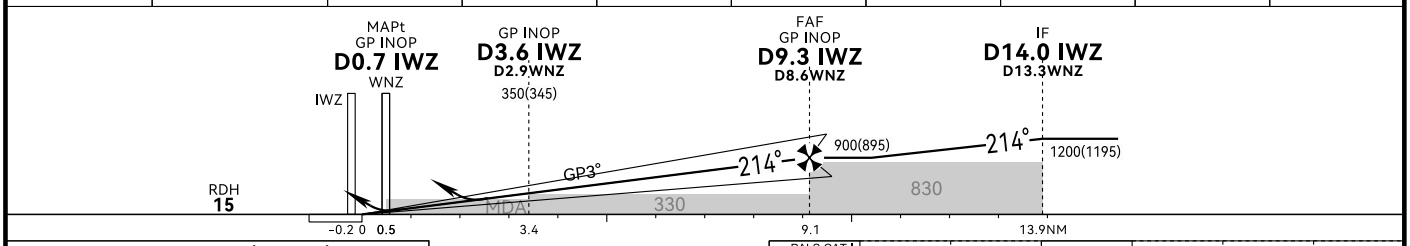

FAF-MAPt 8.6NM (GP INOP)						
GS kt	80	100	120	140	160	180
min:sec	6:27	5:10	4:18	3:41	3:14	2:52
GP 3.0°m/s	2.1	2.7	3.3	3.8	4.3	4.9

PALS CAT I						
PAPI	500	D10.1 WNZ	210kt MAX RT	261°	DST 109.2	900
	↑ &			&	&	

	ILS/DME				GP INOP			CIRCLING			ILS HUD Special CAT I			
	DA(H)	OCA(H)	RVR	VIS	MDA(H)	OCA(H)	VIS	MDA(H)	OCA(H)	VIS	(DH)	(OCH)	(RA)	RVR
A	66(60)	66(60)	800	800	240(235)	235(230)	3800	260(255)	250(245)	4000	(45)	(45)	(47)	450
B														
C					240(235)	235(230)	4000	290(285)	280(275)	4400				
D					240(235)	235(230)	4200	290(285)	280(275)	4800				

Changes: New chart.