

- *Dimensions may not be accurate, sanding may be required*
- *1 1/4 pvc is required*
- *A dremel with a cutting wheel is recommended*
- *preform at your own risk*

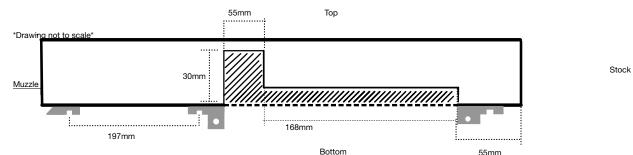

Half length dart, Single stage

(Looking at left side)

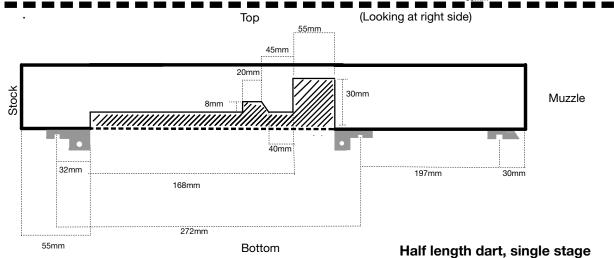



(Looking at bottom side)

Left

