


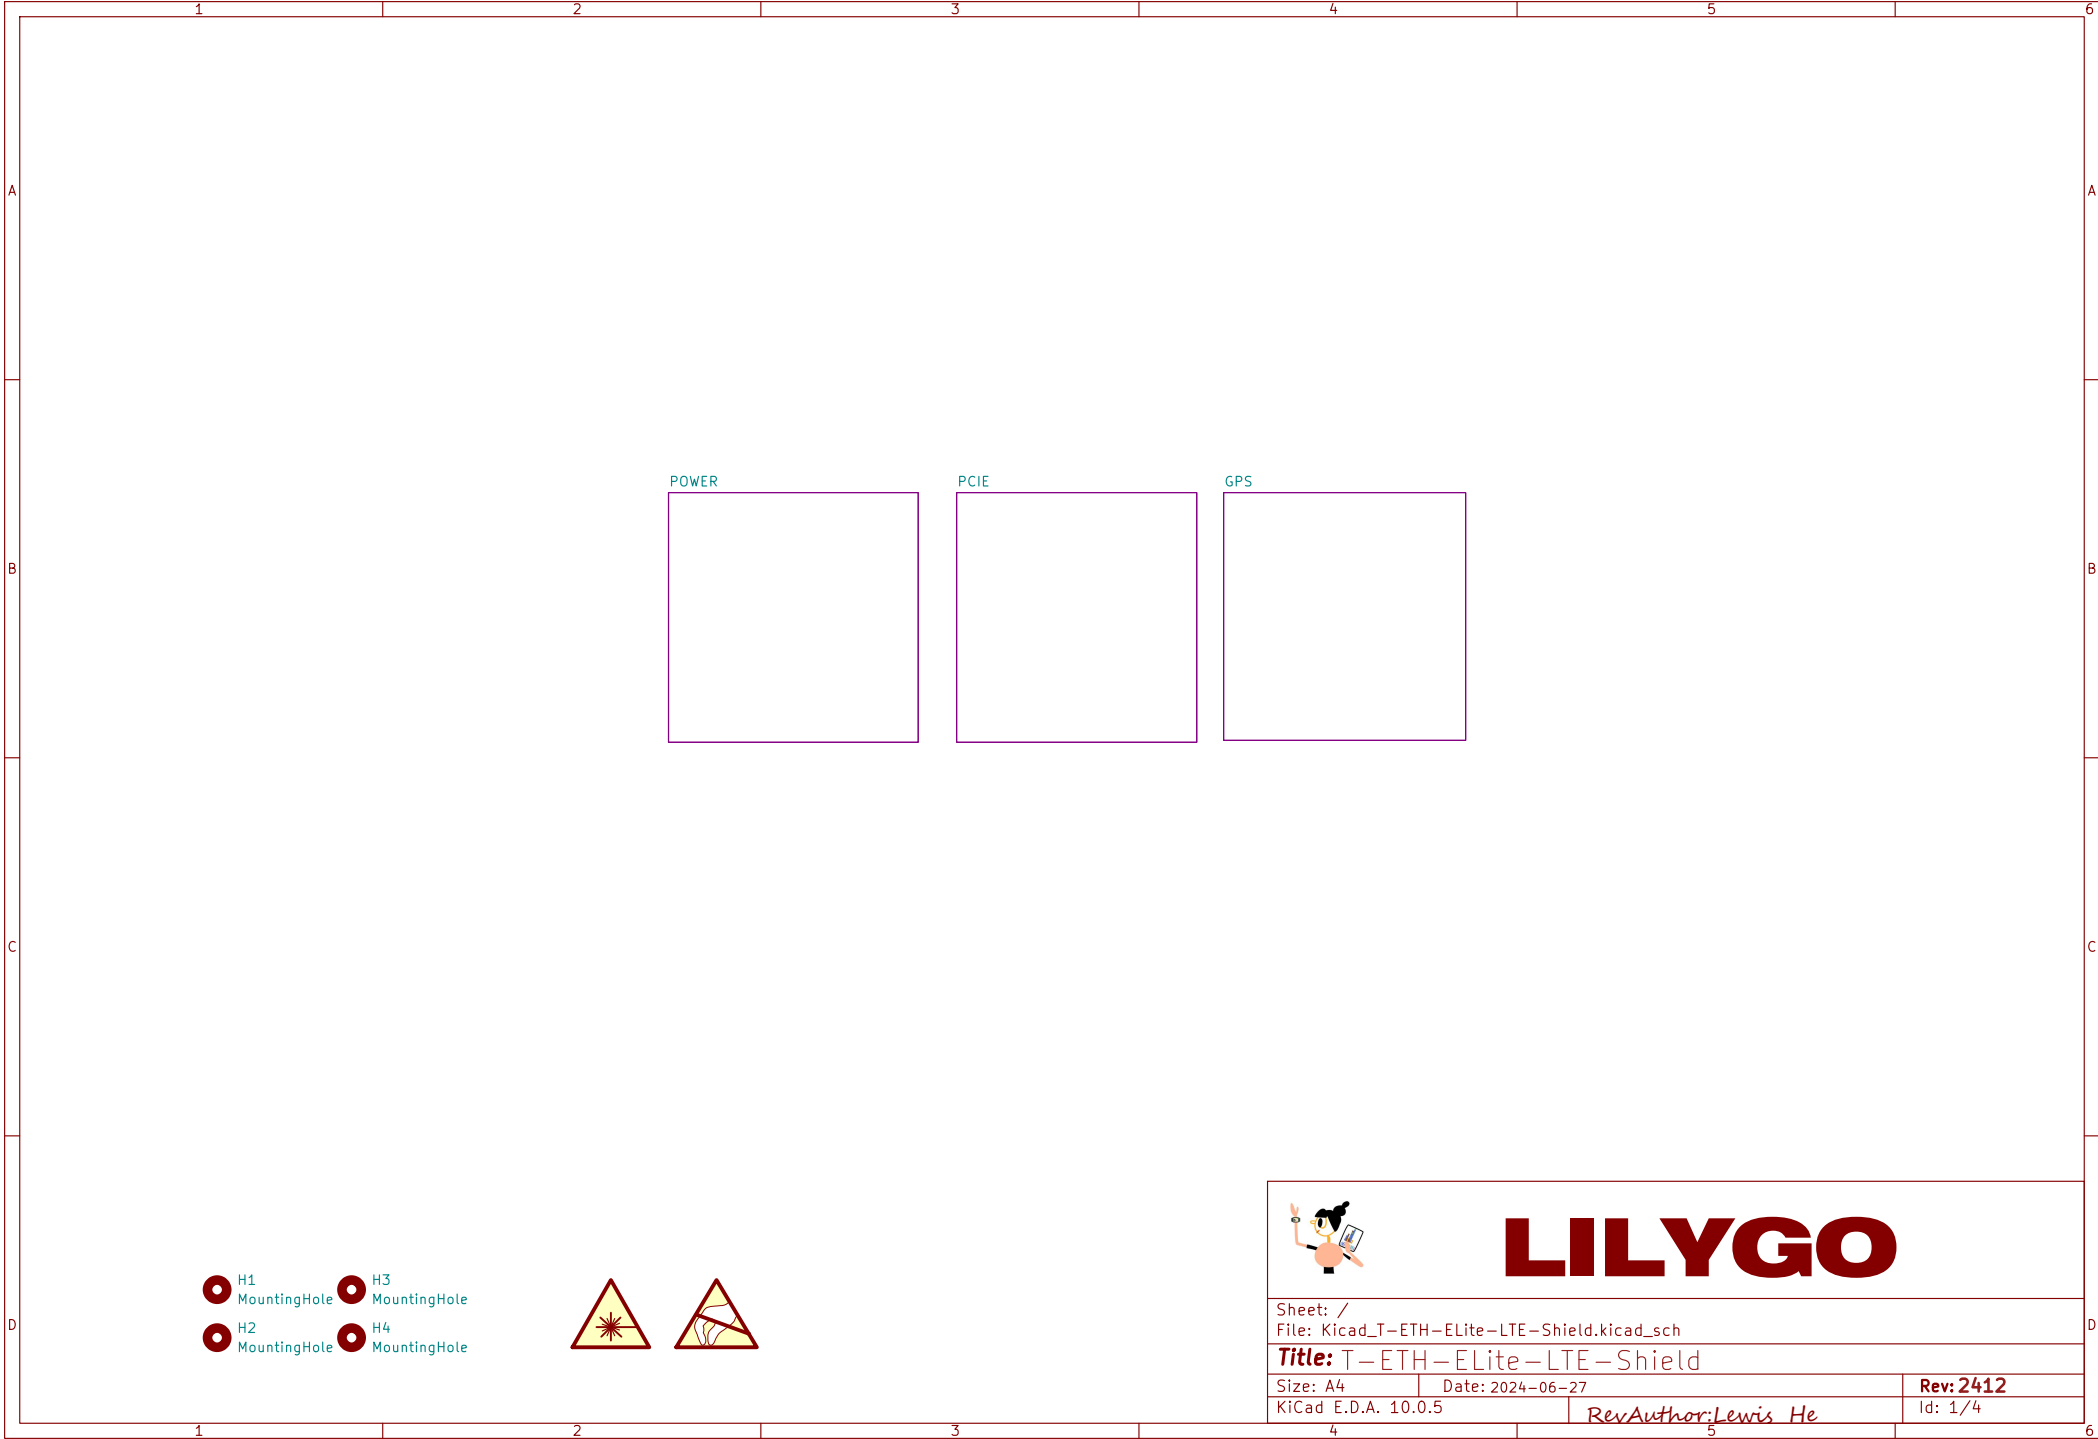
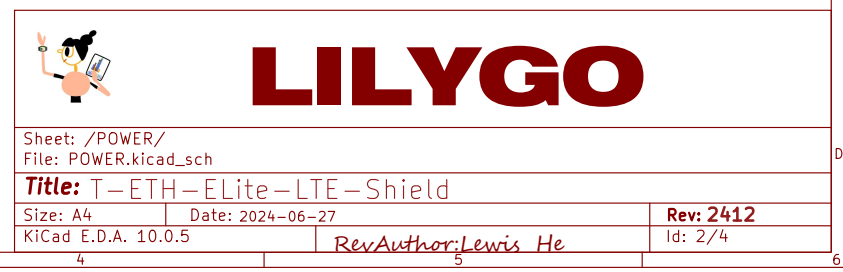
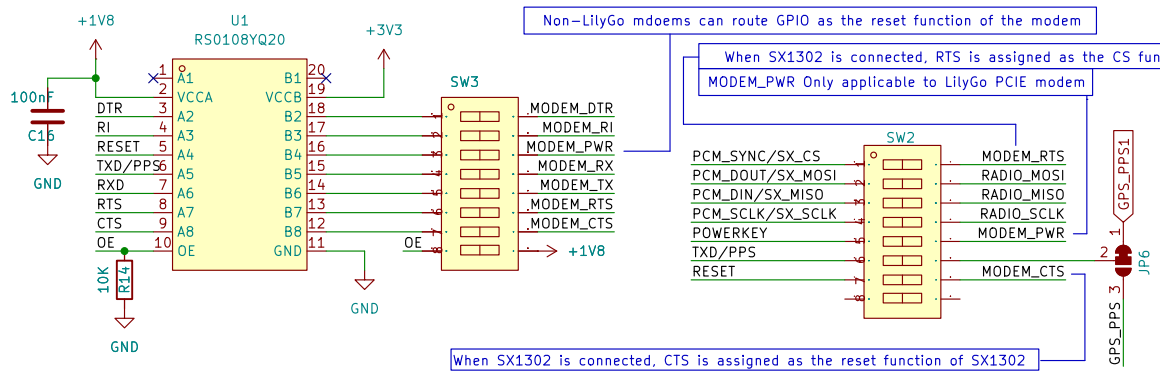
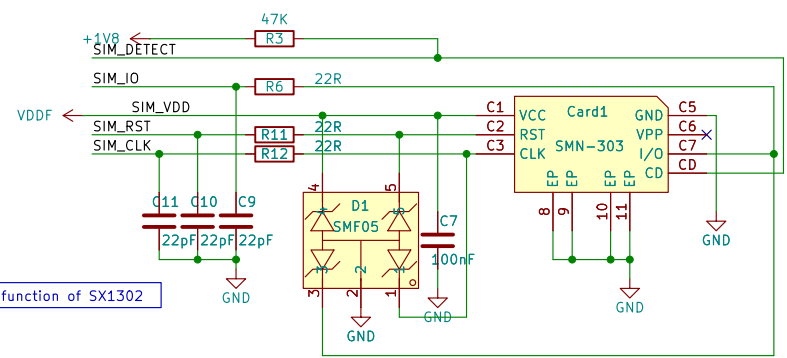


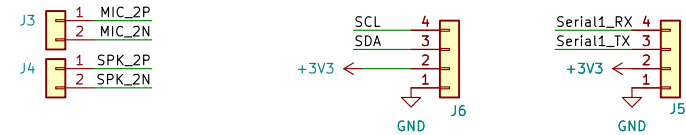

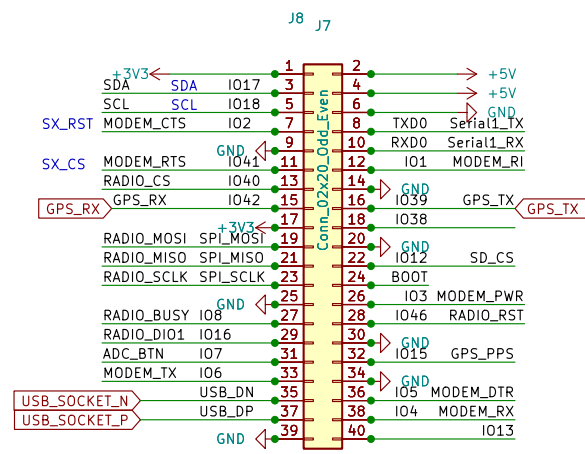

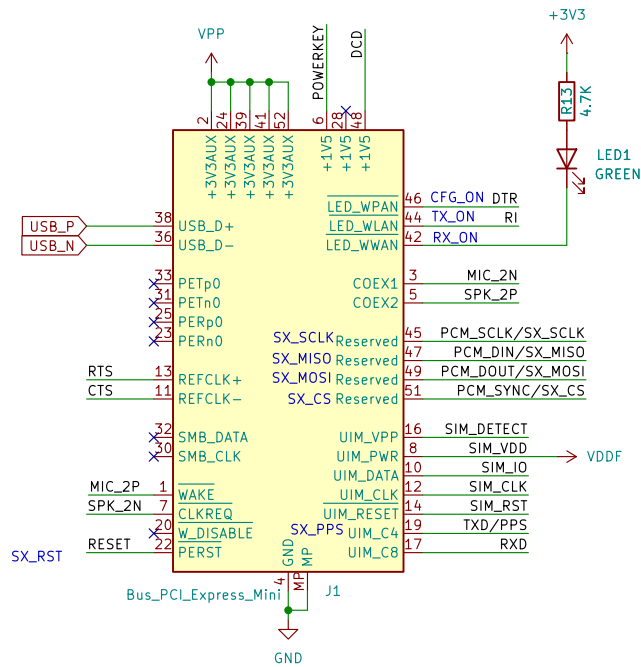

LILYGO

Sheet: /PCIE/
File: PCIE.kicad_sch

Title: T-ETH-Elite-LTE-Shield


Size: A4 Date: 2024-06-27
KiCad E.D.A. 10.0.5 RevAuthor: Lewis He Id: 3/4

Non-LilyGo mdoems can route GPIO as the reset function of the modem

When SX1302 is connected, RTS is assigned as the CS function of SX1302

MODEM_PWR Only applicable to LilyGo PCIe modem

When SX1302 is connected, CTS is assigned as the reset function of SX1302

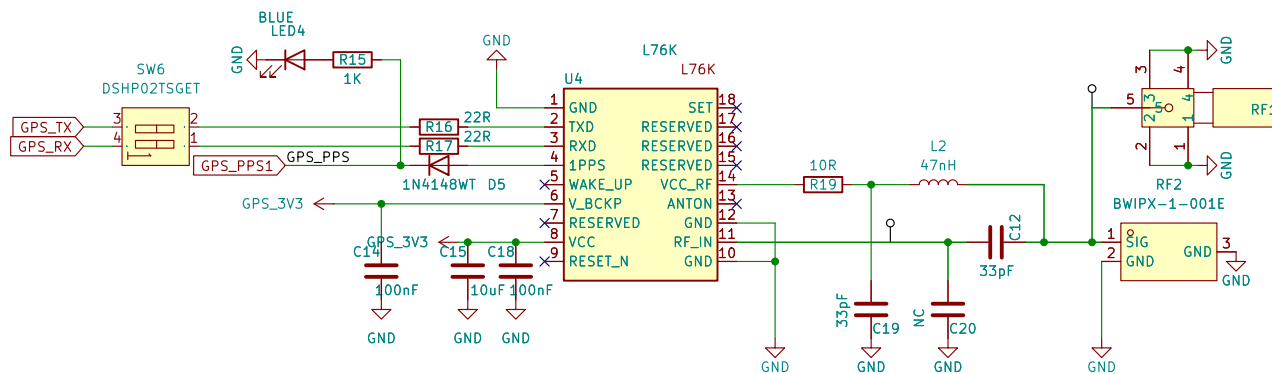

LILYGO

Sheet: /GPS/
File: GPS.kicad_sch

Title: T-ETH-Elite-LTE-Shield

Size: A4

Date: 2024-06-27

Rev: 2412

KiCad E.D.A. 10.0.5

RevAuthor: Lewis He

Id: 4/4