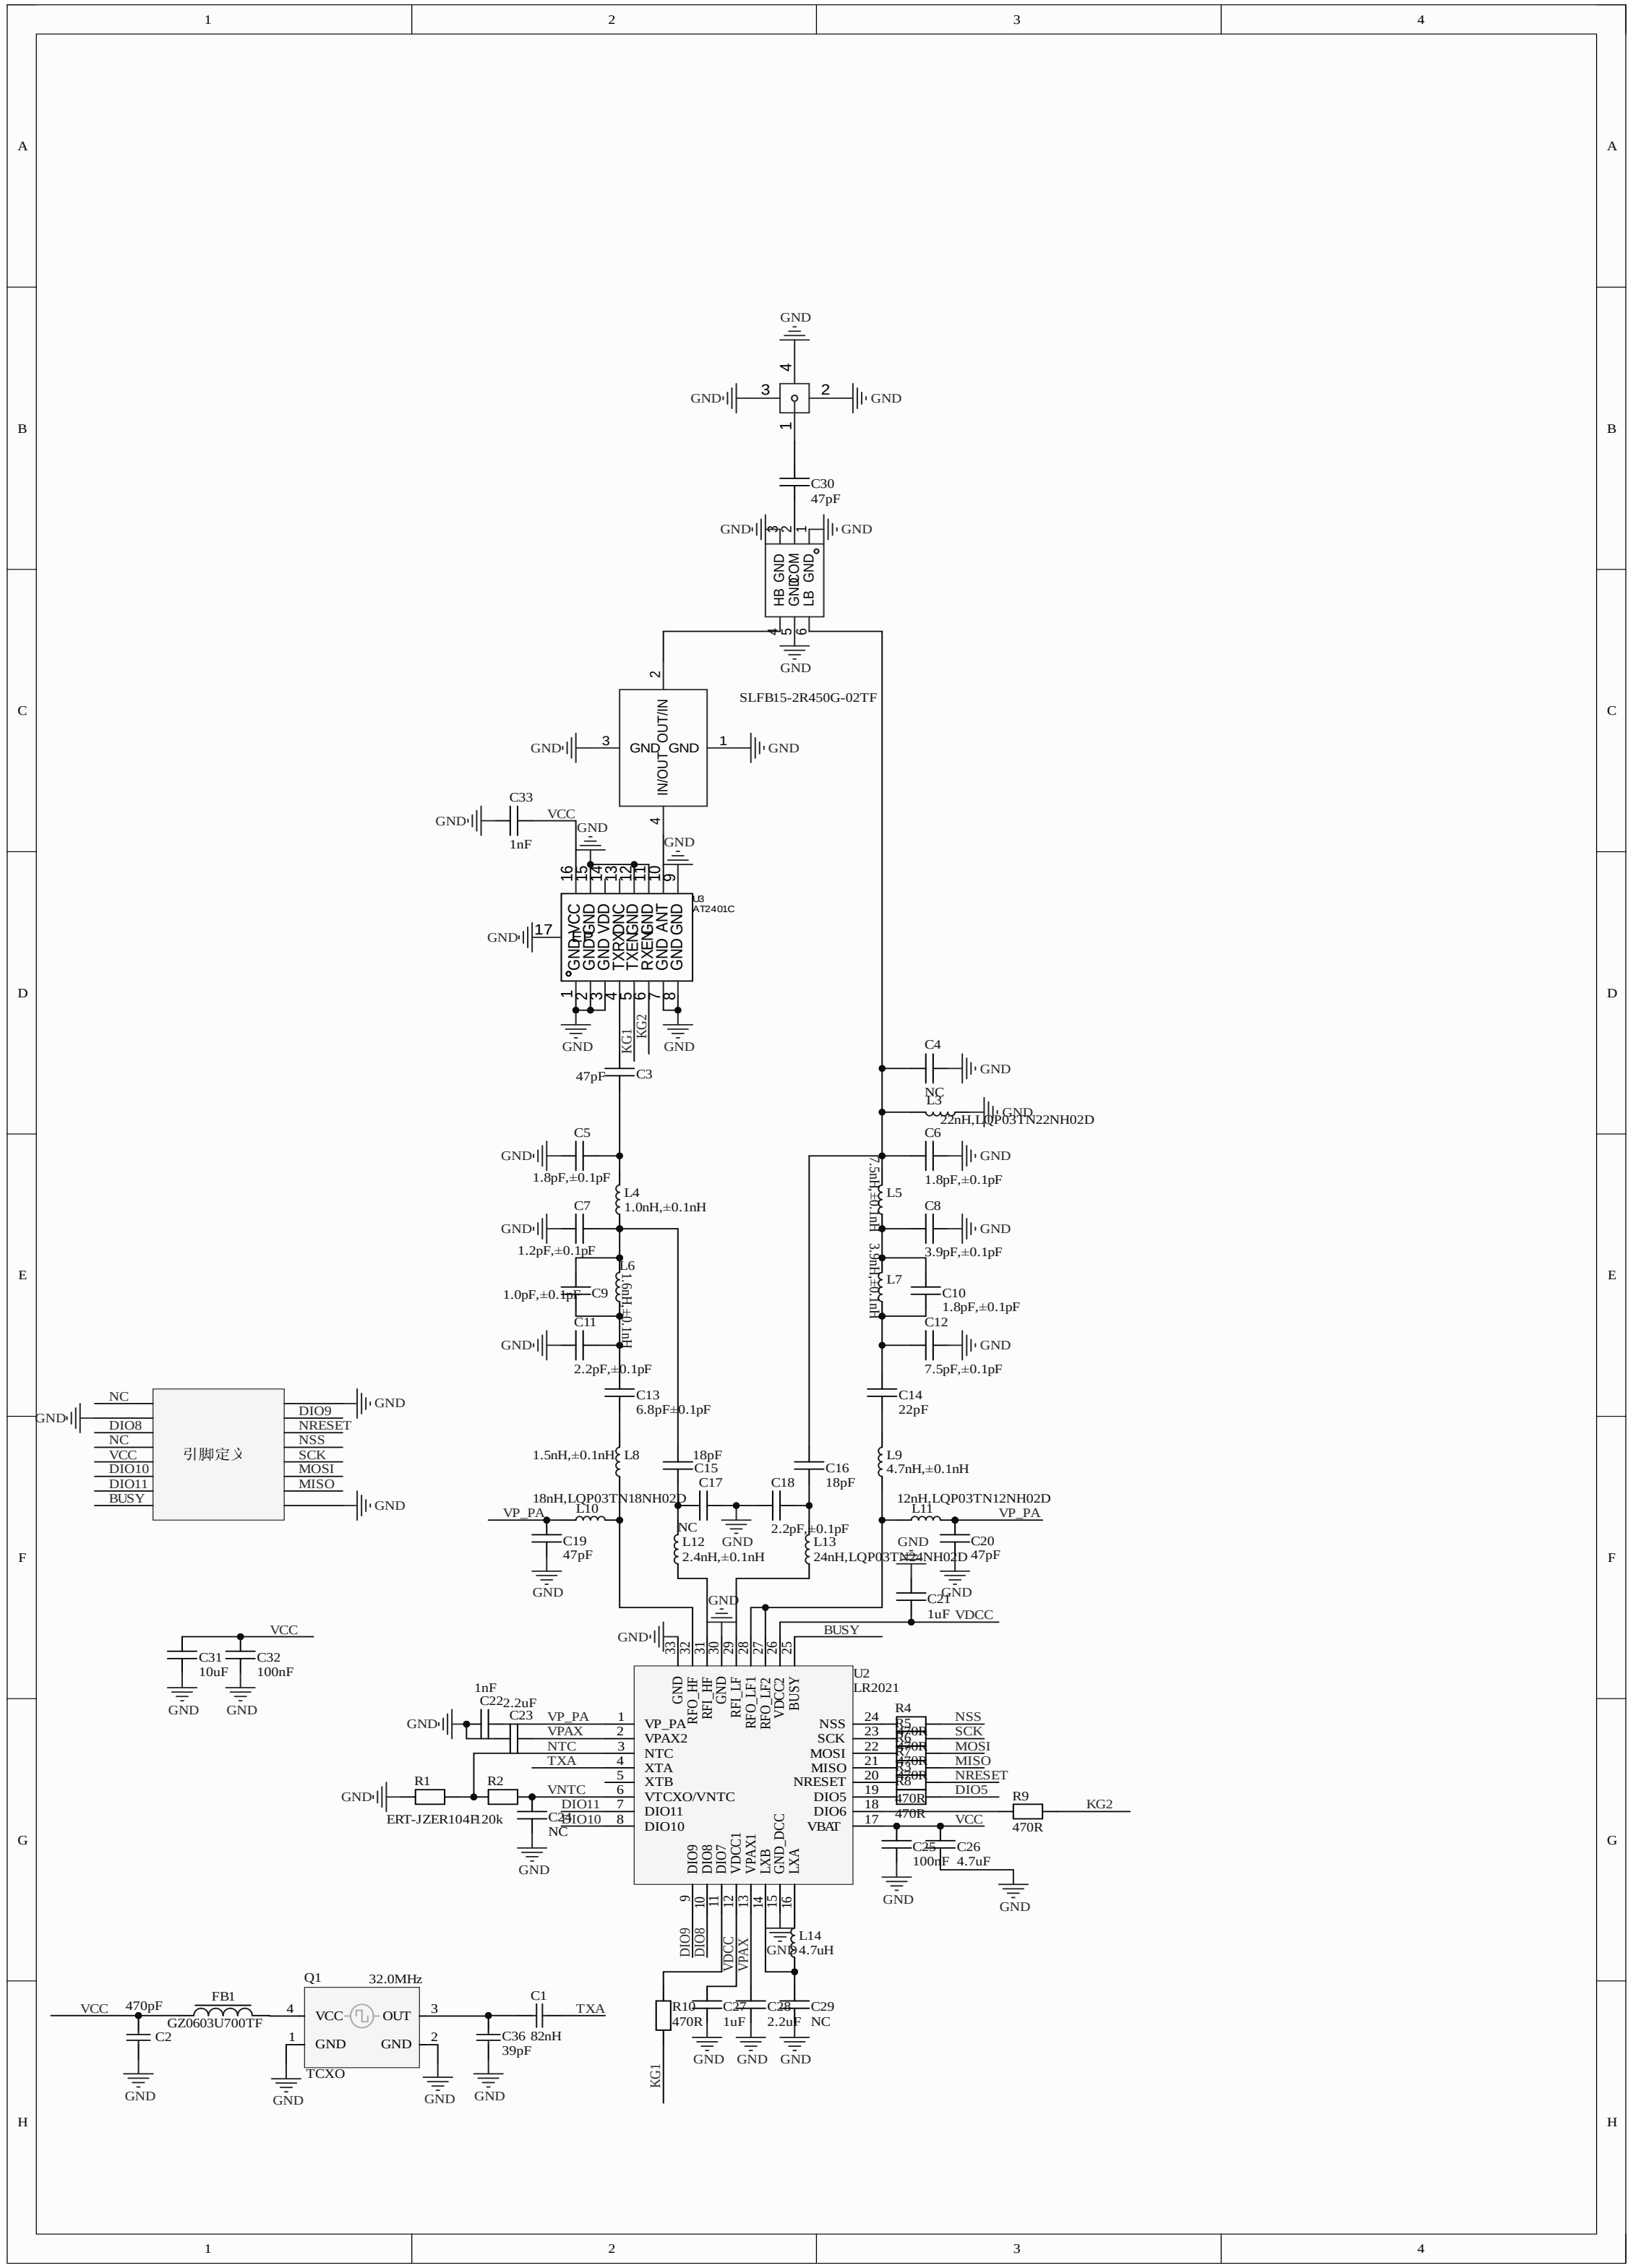
1
2
3
4
A
B
C
D
E
F
G
H
GND
4
3
2
1
GND
GND
C30
47pF
GND
GND
3
2
1
HB GND
GND COM
LB GND
4
5
6
GND
SLFB15-2R450G-02TF
2
GND
3
IN/OUT
OUT/IN
GND
GND
1
GND
4
C33
GND
VCC
1nF
GND
GND
U3
AT2401C
17
GND
VCC
GND
GND
GND
VDD
TXRX
DNC
TXEN
GND
RXEN
GND
GND
ANT
GND
GND
GND
GND
KG1
KG2
47pF
C3
C4
GND
NC
L3
GND
22nH,LQP03TN22NH02D
C5
GND
1.8pF,±0.1pF
L4
1.0nH,±0.1nH
C7
GND
1.2pF,±0.1pF
L6
1.6nH,±0.1nH
1.0pF,±0.1pF
C9
C11
GND
2.2pF,±0.1pF
C13
6.8pF±0.1pF
1.5nH,±0.1nH
L8
18pF
C15
C6
GND
1.8pF,±0.1pF
7.5nH,±0.1nH
L5
C8
GND
3.9pF,±0.1pF
3.9nH,±0.1nH
L7
C10
1.8pF,±0.1pF
C12
GND
7.5pF,±0.1pF
C14
22pF
L9
4.7nH,±0.1nH
C16
18pF
C17
C18
18nH,LQP03TN18NH02D
VP_PA
L10
C19
47pF
GND
NC
L12
2.4nH,±0.1nH
GND
2.2pF,±0.1pF
L13
24nH,LQP03TN24NH02D
12nH,LQP03TN12NH02D
L11
VP_PA
GND
C20
47pF
GND
C21
1uF
VDCC
BUSY
GND
GND
NC
DIO8
NC
VCC
DIO10
DIO11
BUSY
引脚定义
DIO9
NRESET
NSS
SCK
MOSI
MISO
GND
GND
VCC
C31
10uF
C32
100nF
GND
GND
U2
LR2021
33
32
31
30
29
28
27
26
25
GND
RFO_HF
RFI_HF
GND
RFI_LF
RFO_LF1
RFO_LF2
VDCC2
BUSY
1nF
C22
2.2uF
C23
GND
VP_PA
VPAX
NTC
TXA
VNTC
DIO11
DIO10
1
2
3
4
5
6
7
8
VP_PA
VPAX2
NTC
XTA
XTB
VTCXO/VNTC
DIO11
DIO10
GND
R1
R2
ERT-JZER104F
120k
C24
NC
GND
NSS
SCK
MOSI
MISO
NRESET
DIO5
DIO6
VBAT
24
23
22
21
20
19
18
17
R4
R5
R6
R7
R3
R8
470R
470R
470R
470R
470R
470R
470R
NSS
SCK
MOSI
MISO
NRESET
DIO5
R9
470R
KG2
VCC
C25
100nF
C26
4.7uF
GND
GND
DIO9
DIO8
DIO7
VDCC1
VPAX1
LXB
GND_DCC
LXA
9
10
11
12
13
14
15
16
DIO9
DIO8
VDCC
VPAX
GND
L14
4.7uH
R10
470R
C27
1uF
C28
2.2uF
C29
NC
GND
GND
GND
KG1
VCC
470pF
C2
GND
FB1
GZ0603U700TF
4
Q1
32.0MHz
VCC
OUT
GND
GND
1
2
3
TCXO
GND
GND
C1
TXA
C36
82nH
39pF
GND