

RF-A Series Digital Refrigerated Dryers



02250201-297 R01

Subject to EAR, ECCN EAR99 and related export control restrictions."

NOTE

RF-A Series Digital Refrigerated Dryers

RF-A Series Digital Refrigerated Dryers


NOTE

RF-A Series Digital Refrigerated Dryers

V1: Bypass valve
A20 : Electronic timer-drain supply (Optional)
K20: Drain supply test relay
A21: Drain test
A11 : Remote control running lamp (green)
A13 : Remote control stand-by lamp (red)
A41 : Remote control alarm contact
PT1 : Inlet air temperature sensor (PT100)
PT2 : Heat exchanger temperature sensor (PT100)
PT3 : Low pressure line sensor (PT100)
PT4 : High pressure line sensor (PT100)
PT5 : Ambient temperature sensor (PT100)
PT6 : Condenser outlet temperature sensor (PT100)
B16 : Computer/Communication connection (RS 485)
B17 : Dew point analog output (4-20mA/32°F-212°F)
HP indicates high pressure
LP indicates low pressure
TH indicates thermal

F10, F11 : Control circuit protection
S2: Limit Switch
S5 : Remote control start button
S7 : Remote control stop button
S3 : Emergency Button
P1 : Overload protector of compressor
P2 : Overload protector of compressor
P10 : Overload protector of fan motor
P11 : Overload protector of fan motor
P12 : Overload protector of fan motor
S31: Fan heat thermal 1
S32: Fan heat thermal 2
S33: Fan heat thermal 3
S34: Fan heat thermal 4
S35: Fan heat thermal 5
S36: Fan heat thermal 6
EMR4 : Phase protection relay
S8 : Remote control contact
S9 : Obstruction for manual on/off
S15 : Service contact
S10 : Fan pressure switch
S12 : High Pressure safety switch
S13 : Low Pressure safety switch
Q1 : Compressor motor contactor
Q2 : Compressor motor contactor
Q10 : Fan motor contactor
Q11 : Fan motor contactor
Q12 : Fan motor contactor

11.13 WIRING DIAGRAM—RF-A-7300 (460-3-60, 400-3-50) CONTROL

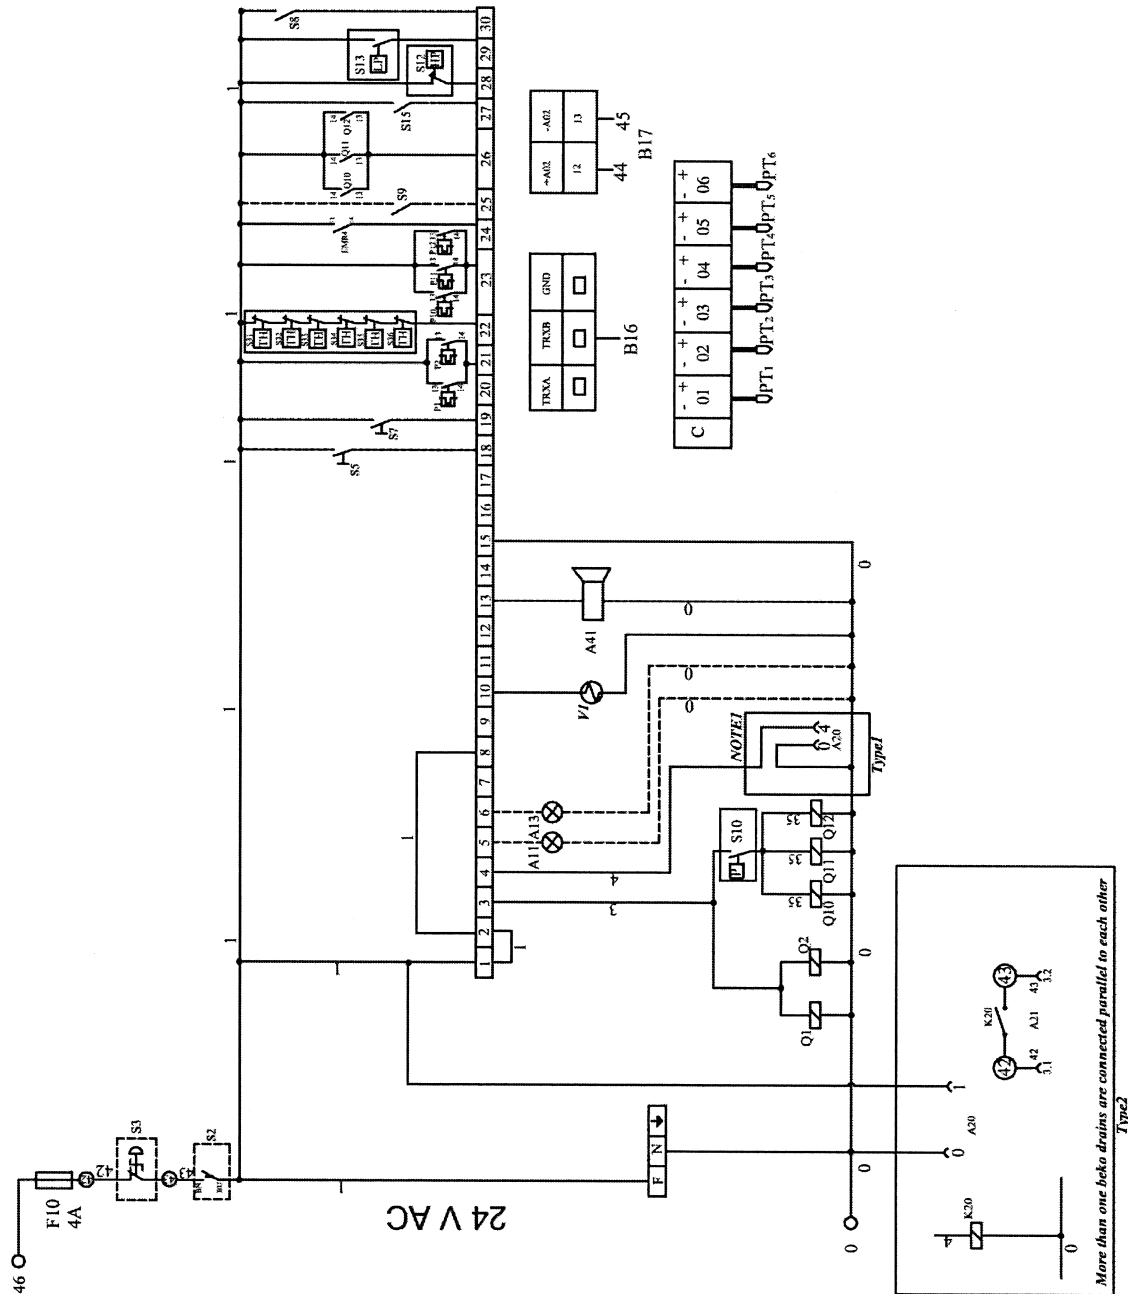

MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-7300	02250225-600	400V/3Ph/50Hz	AIR COOLING
	02250225-574	460V/3Ph/60Hz	AIR COOLING

ELECTRICAL SPECIFICATIONS

MODEL	COMPRESSOR	FAN
	UN 400V/3Ph/50	UN 400V/3Ph/50
RF-A-7300	FLA 26.9 A 7.55 kW (x2)	FLA 0.9 A 0.55 Kw (x6)

MODEL	COMPRESSOR	FAN
	UN 460V/3Ph/60	UN 460V/3Ph/60
RF-A-7300	FLA 25 A 9.40 kW (x2)	FLA 2 A 1.2 kW (x6)


MODEL	ELECTRICAL SUPPLY LINE 3 PHASE + PROTECTION EARTH
RF-A-7300	CABLE SIZE 4G 35 mm

CURRENT AUTOMATIC CIRCUIT BREAKER
(UL-4-489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC

A1 : Control circuit transformer
A30 : Compressor heater1
A31 : Compressor heater2
X1 : Mains supply connection terminal block
B15 : Control circuit supply
EMR4 : Phase protection relay
F1, F2 : A01 primary protection
F3, F4 : A30 overload protection
Q1 : Compressor contactor
Q2 : Compressor contactor
Q10 : Fan contactor
Q11 : Fan contactor
Q12 : Fan contactor
M1: Compressor motor1
M2: Compressor motor2
M10 : Fan motor1
M11 : Fan motor2
M12 : Fan motor3
M13 : Fan motor4
M14 : Fan motor5
M15 : Fan motor6
P1 : Overload protector of compressor1
P2: Overload protector of compressor2
P10 : Overload protector of fan motor
P11 : Overload protector of fan motor
P12 : Overload protector of fan motor


11.12 WIRING DIAGRAM—RF-A-7300 (460-3-60, 400-3-50) POWER

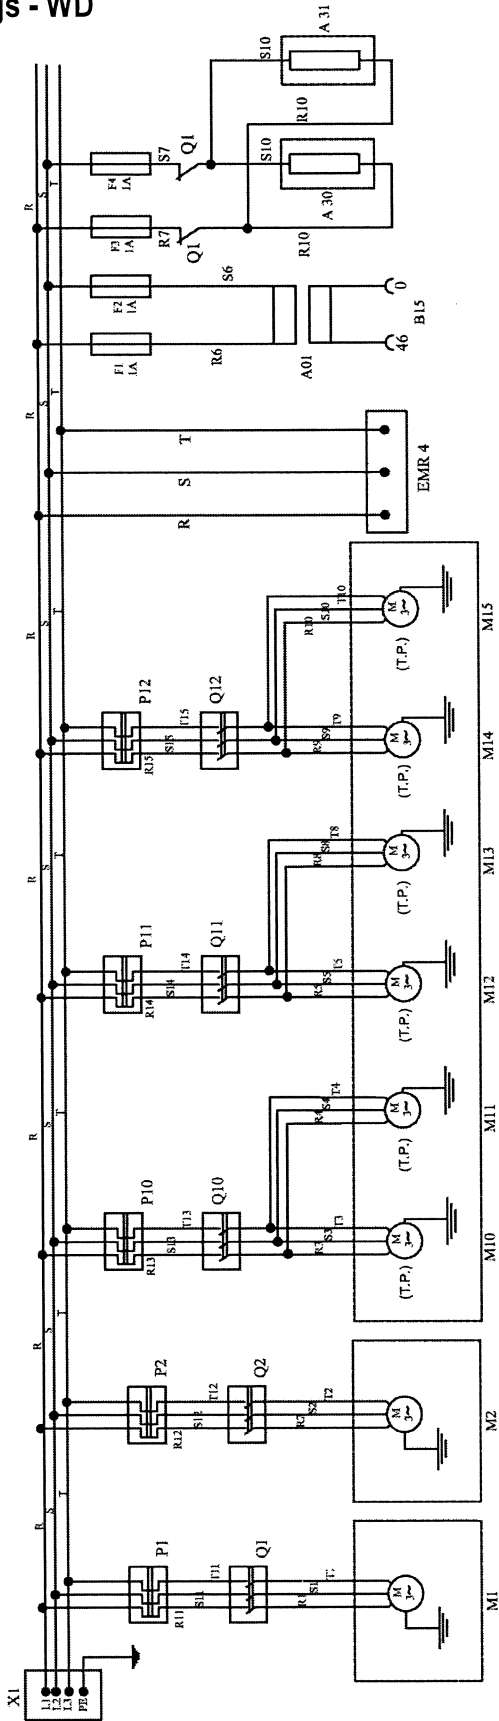

A21: Drain test
A11 : Remote control running lamp (green)
A13 : Remote control stand-by lamp (red)
A41 : Remote control alarm contact
PT1 : Inlet air temperature sensor (PT100)
PT2 : Heat exchanger temperature sensor (PT100)
PT3 : Low pressure line sensor (PT100)
PT4 : High pressure line sensor (PT100)
PT5 : Ambient temperature sensor (PT100)
PT6 : Condenser outlet temperature sensor (PT100)
B16 : Computer/Communication connection (RS 485)
B17 : Dew point analog output (4-20mA/32°F-212°F)
HP indicates high pressure
LP indicates low pressure
TH indicates thermal

F10, F11 : Control circuit protection
S2: Limit switch
S5 : Remote control start button
S7 : Remote control stop button
S3 : Emergency Button
P1 : Overload protector of compressor
P2 : Overload protector of compressor
P10 : Overload protector of fan motor
P11 : Overload protector of fan motor
P12: Overload protector of fan motor
S31: Fan heat thermal 1
S32: Fan heat thermal 2
S33: Fan heat thermal 3
S34: Fan heat thermal 4
EMR4 : Phase protection relay
S8 : Remote control contact
S9 : Obstruction for manual on/off
S15 : Service contact
S10 : Fan pressure switch
S12 : High Pressure safety switch
S13 : Low Pressure safety switch
Q1 : Compressor motor contactor
Q2 : Compressor motor contactor
Q10 : Fan motor1 contactor
Q11 : Fan motor2 contactor
Q12 : Fan motor3 contactor
V1: Bypass valve
A20 : Electronic timer-drain supply (Optional)
K20: Drain supply test relay

11.11 RF-A-5200 – RF-A-6100 (460-3-60,400-3-50) CONTROL

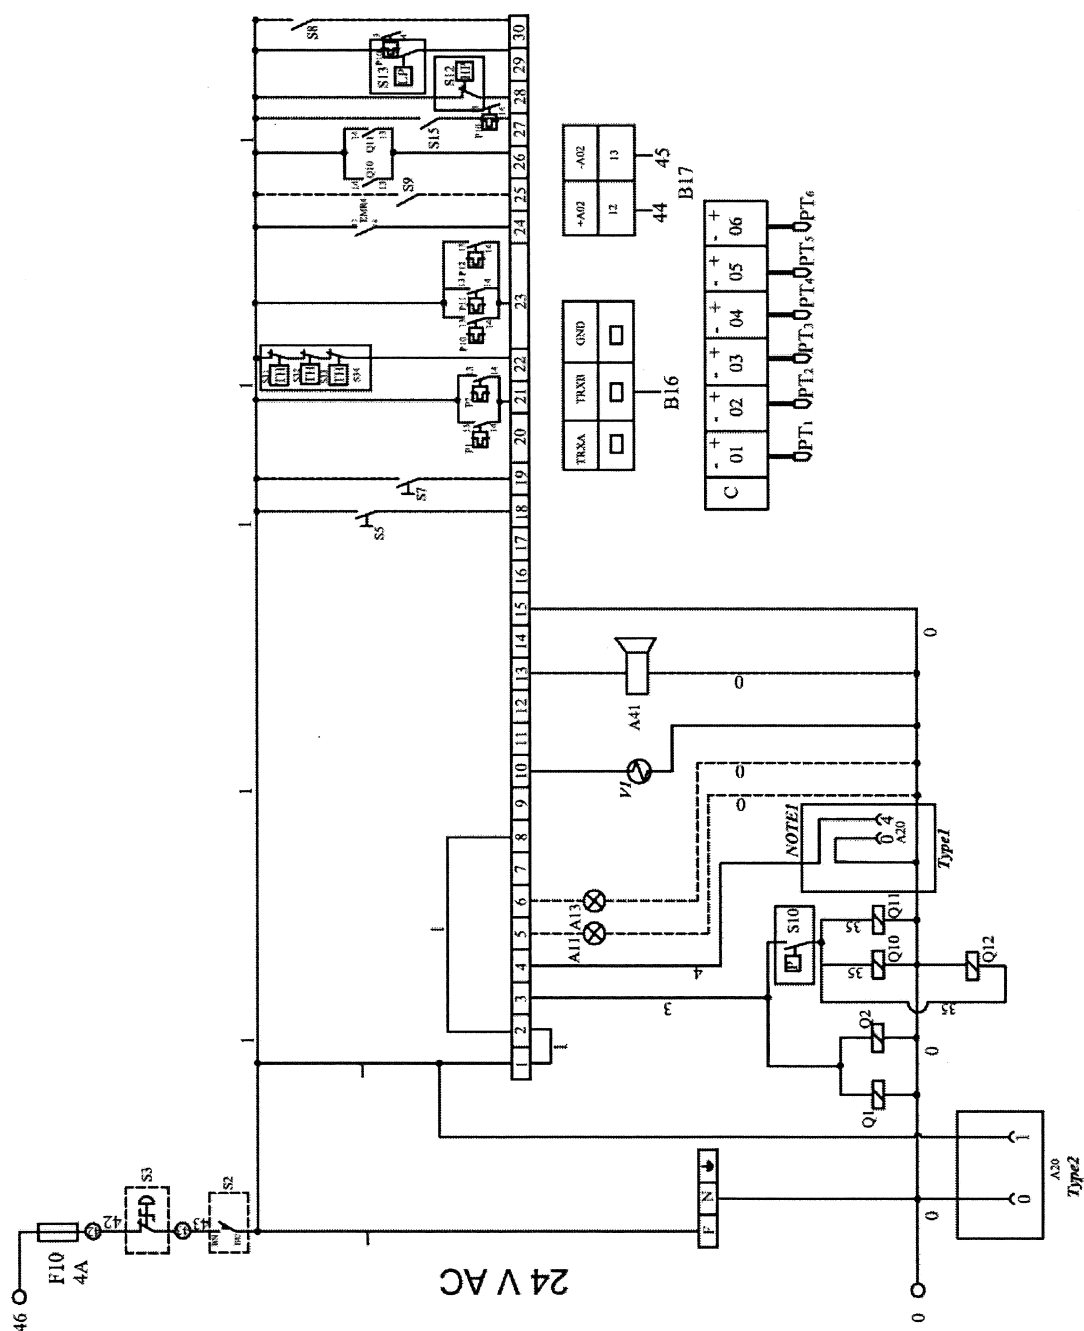

MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-5200	02250225-598	400V/3Ph/50Hz	AIR COOLING
	02250225-572	460V/3Ph/60Hz	AIR COOLING
	02250225-599	400V/3Ph/50Hz	AIR COOLING
RF-A-6100	02250225-573	460V/3Ph/60Hz	AIR COOLING

ELECTRICAL SPECIFICATIONS

MODEL	COMPRESSOR	FAN MOTOR
RF-A-5200	UN 400V/3Ph/50Hz	UN 400V/3Ph/50Hz
	FLA 22.4 A 6.22 Kw (x2)	FLA 0.9 A 0.55 kW (x3)
	FLA 22.4 A 6.25 kW (x2)	FLA 0.9 A 0.55 kW (x3)

MODEL	COMPRESSOR	FAN MOTOR
RF-A-5200	UN 460V/3Ph/60Hz	UN 460V/3Ph/60Hz
	FLA 22.4 A 7.81 kW (x2)	FLA 2 A 1.2 kW (x3)
	FLA 22.4 A 7.86 kW (x2)	FLA 2 A 1.2 kW (x3)


MODEL	ELECTRICAL SUPPLY LINE 3 PHASE + PROTECTION EARTH
RF-A-5200 – RF-A-6100	CABLE SIZE 4G12AWG

A1 : Control circuit transformer
A30 : Compressor heater1
A31 : Compressor heater2
X1 : Mains supply connection terminal block
B15 : Control circuit supply
PSR : Phase sequence relay
F1, F2 : A01 primary protection
F3, F4 : A30 overload protection
Q1 : Compressor contactor
Q2 : Compressor contactor
Q10 : Fan motor1 contactor
Q11 : Fan motor2 contactor
Q12 : Fan motor3 contactor
M1: Compressor motor1
M2: Compressor motor 2
M10 : Fan motor1
M11 : Fan motor2
M12 : Fan motor3
P1 : Overload protector of compressor1
P2: Overload protector of compressor2
P10 : Overload protector of fan motor
P11 : Overload protector of fan motor

S01 MAIN PROTECTION AND DISCONNECTING MEANS
SHALL BE PROVIDED BY THE INSTALLER OF RESIDUAL
CURRENT AUTOMATIC CIRCUIT BREAKER
(UL-489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC


11.10 WIRING DIAGRAM— RF-A-5200 – RF-A-6100 (460-3-60,400-3-50) POWER

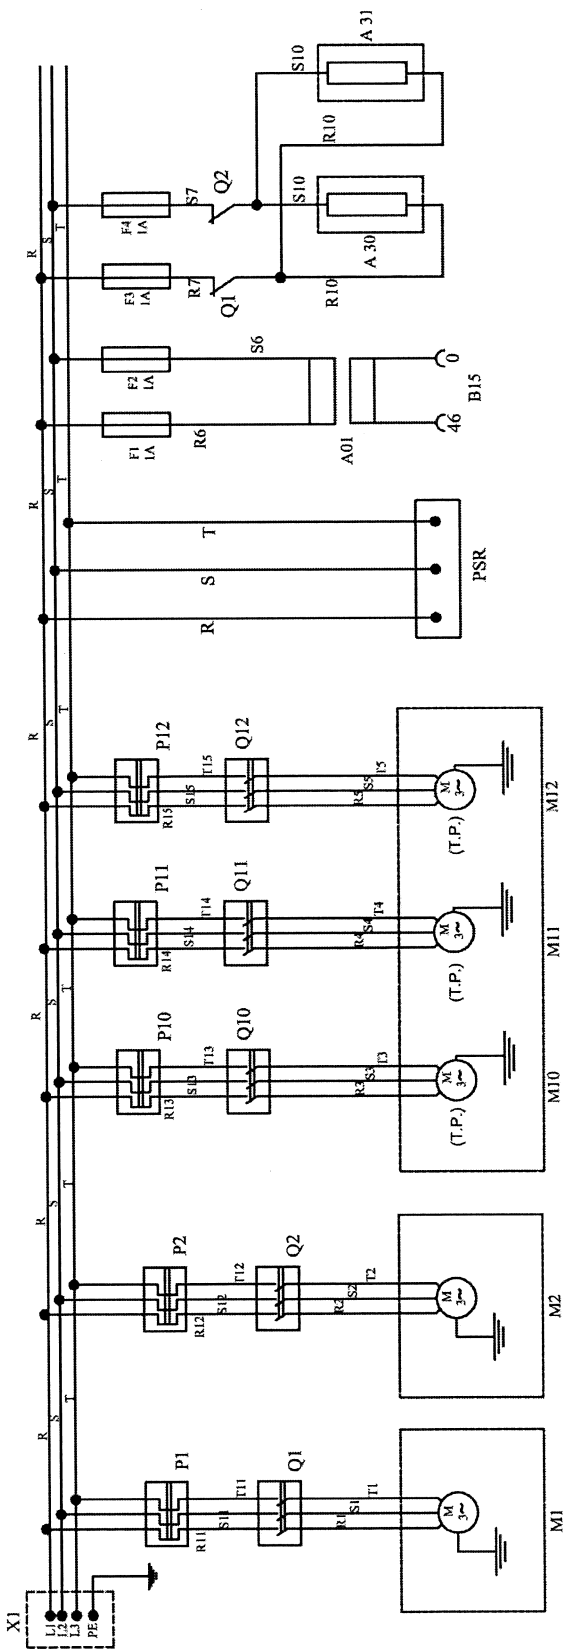

A25: Compressor heat thermal supply
A20 : Electronic timer-drain supply (Optional)
A11 : Remote control running lamp (green)
A13 : Remote control stand-by lamp (red)
A41 : Remote control alarm contact
PT1 : Inlet air temperature sensor (PT100)
PT2 : Heat exchanger temperature sensor (PT100)
PT3 : Low pressure line sensor (PT100)
PT4 : High pressure line sensor (PT100)
PT5 : Ambient temperature sensor (PT100)
PT6 : Condenser outlet temperature sensor (PT100)
B16 : Computer/Communication connection (RS 485)
B17 : Dew point analog output (4-20mA/32°F-212°F)
HP indicates high pressure
LP indicates low pressure
TH indicates thermal

F10, F11 : Control circuit protection
S2: Limit switch
S5 : Remote control start button
S7 : Remote control stop button
S3 : Emergency button
P1 : Overload protector of compressor
P2: Compressor thermal protection
P10 : Overload protector of fan motor1
P11 : Overload protector of fan motor2
P12 : Overload protector of fan motor3
S31: Fan heat thermal 1
S32: Fan heat thermal 2
S33: Fan heat thermal 3
EMR4 : Phase protection relay
S8 : Remote control contact
S9 : Obstruction for manual on/off
S15 : Service contact
S10 : Fan pressure switch
S12 : High pressure safety switch
S13 : Low pressure safety switch
Q1 : Compressor motor contactor
Q10 : Fan motor1 contactor
Q11 : Fan motor2 contactor
Q12 : Fan motor3 contactor
V1: Bypass valve
K20: Drain supply test relay
A21: Drain test
A25: Compressor heat thermal supply
A20 : Electronic timer-drain supply (Optional)

11.9 WIRING DIAGRAM—RF-A 4600 (460-3-60, 400-3-50) CONTROL

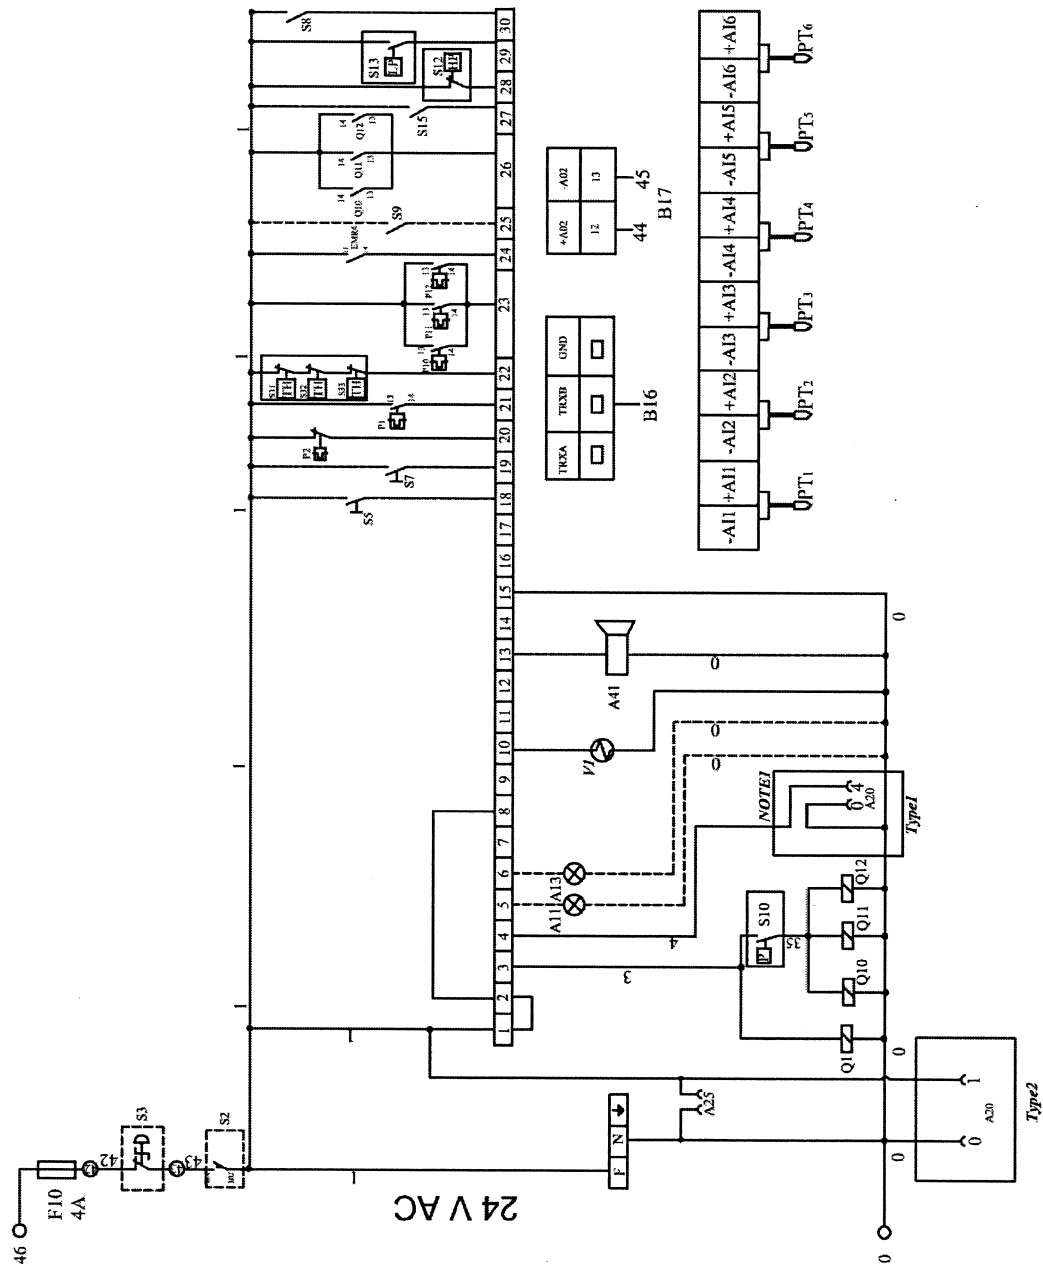

A1 : Control circuit transformer
A30 : Compressor heater
X1 : Mains supply connection terminal block
B15 : Control circuit supply
PSR : Phase sequence relay
F1, F2 : A01 primary protection
F3, F4 : A30 overload protection
Q1 : Compressor contactor
Q10 : Fan motor1 contactor
Q11: Fan motor2 contactor
Q12 : Fan motor3 contactor
M1: Compressor motor
M10 : Fan motor1
M11 : Fan motor2
M12 : Fan motor3
P1 : Overload protector of compressor
P10 : Overload protector of fan motor1
P11 : Overload protector of fan motor2
P12 : Overload protector of fan motor3

MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-4600	02250225-571	400V/3Ph/50Hz	AIR COOLING
	02250225-597	460V/3Ph/60Hz	AIR COOLING

ELECTRICAL SPECIFICATIONS


MODEL	COMPRESSOR	FAN MOTOR
	UN 400V/3Ph/50	UN 400V/3Ph/50
	FLA 30.1 A 10.05 kW	FLA 0.9 A 0.55 Kw (x3)
	COMPRESSOR	FAN MOTOR
	UN 460V/3Ph/60	UN 460V/3Ph/60
	FLA 30.1 A 12.40 kW	FLA 2 A 1.2 kW (x3)

MODEL	ELECTRICAL SUPPLY LINE 3 PHASE + PROTECTION EARTH
	CABLE SIZE 4G12AWG
RF-A-4600	

S01 MAIN PROTECTION AND DISCONNECTING MEANS
SHALL BE PROVIDED BY THE INSTALLER OF RESIDUAL
CURRENT AUTOMATIC CIRCUIT BREAKER
(UL-4-489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC


11.8 WIRING DIAGRAM—RF-A-4600 (460-3-60, 400-3-50) POWER

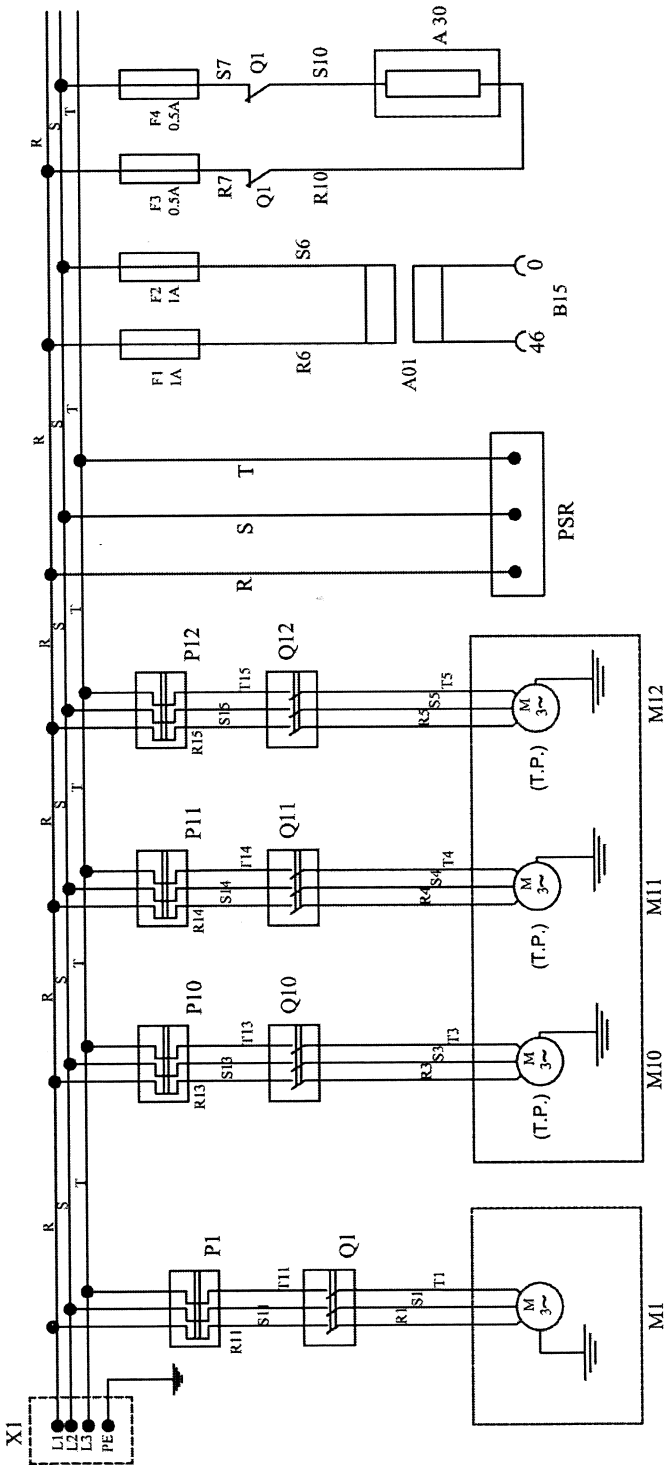

PT5 : Ambient temperature sensor (PT100)
PT6 : Condenser outlet temperature sensor (PT100)
B16 : Computer/Communication connection (RS 485)
B17 : Dew point analog output (4-20mA/32°F-212°F)
HP indicates high pressure
LP indicates low pressure
TH indicates thermal

F10, F11 : Control circuit protection
S5 : Remote control start button
S7 : Remote control stop button
S3 : Emergency button
S16: Filter service contact
P1 : Overload protector of compressor
P10 : Overload protector of fan motor
S31: Fan heat thermal 1
S32: Fan heat thermal 2
PSR : Phase sequence relay
S8 : Remote control contact
S9 : Obstruction for manual on/off
S15 : Service contact
S10 : Fan pressure switch
S12 : High Pressure safety switch
S13 : Low Pressure safety switch
Q1 : Compressor motor contactor
Q10 : Fan motor1 contactor
Q11: Fan motor2 contactor
A20 : Electronic timer-drain supply (Optional)
K20: Drain supply test relay
A21:Drain test
A11 : Remote control running lamp (green)
A13 : Remote control stand-by lamp (red)
A41 : Remote control alarm contact
PT1 : Inlet air temperature sensor (PT100)
PT2 : Heat exchanger temperature sensor (PT100)
PT3 : Low pressure line sensor (PT100)
PT4 : High pressure line sensor (PT100)

11.7 WIRING DIAGRAM— RF-A-3000 - RF-A-4000 (460-3-60, 400-3-50) CONTROL

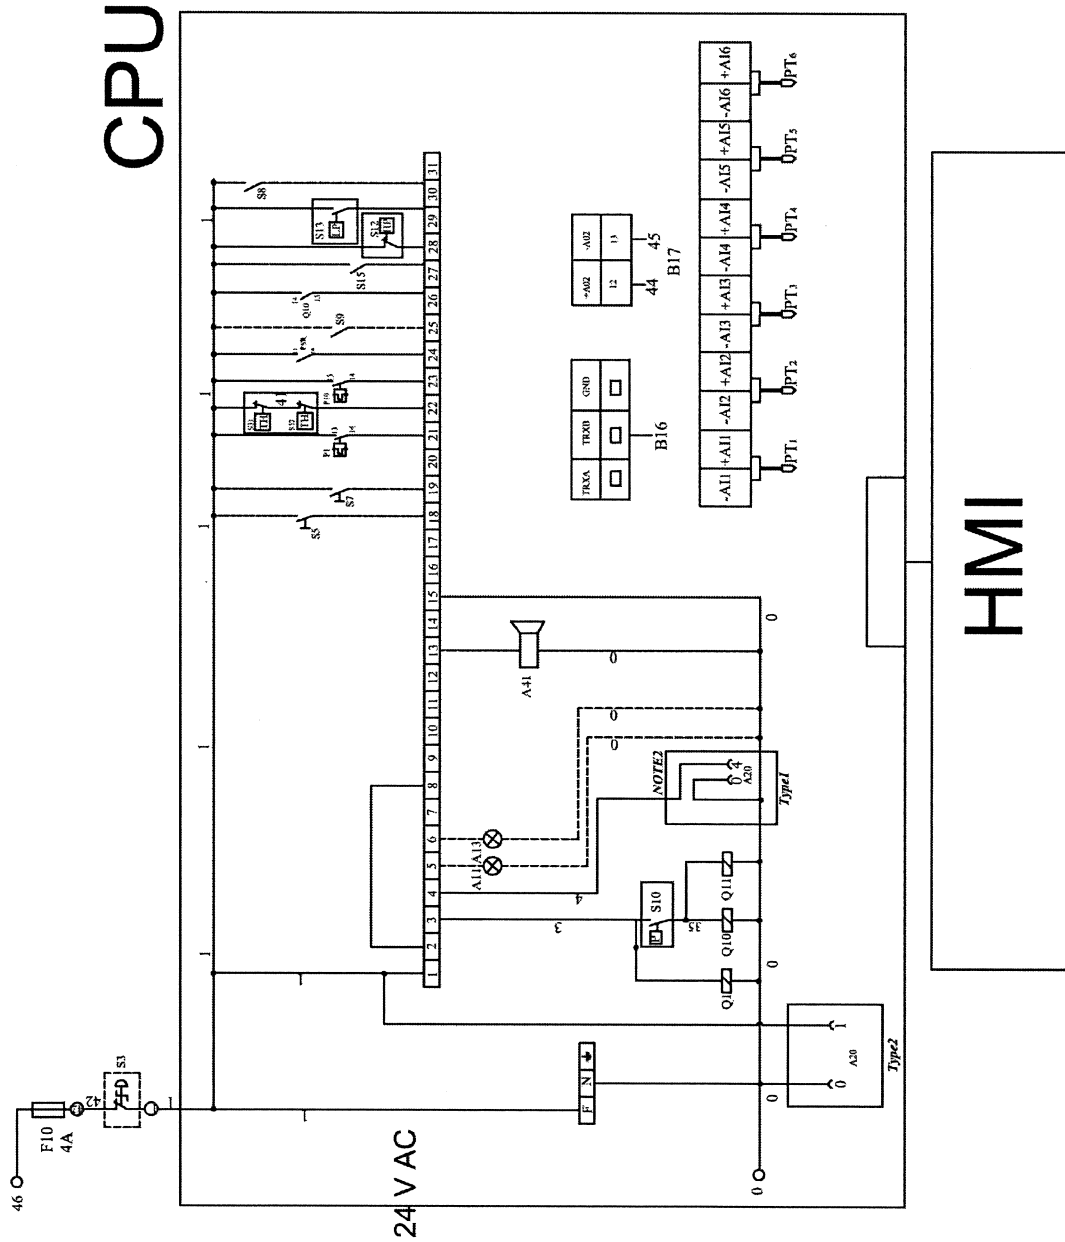

MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-3000	02250225-594	400V/3Ph/50Hz	AIR COOLING
	02250225-568	460V/3Ph/60Hz	AIR COOLING
	02250225-595	400V/3Ph/50Hz	AIR COOLING
RF-A-3460	02250225-569	460V/3Ph/60Hz	AIR COOLING
	02250225-596	400V/3Ph/50Hz	AIR COOLING
RF-A-4000	02250225-570	460V/3Ph/60Hz	AIR COOLING

ELECTRICAL SPECIFICATIONS

MODEL	COMPRESSOR	FAN MOTOR
RF-A-3000	UN 400V/3Ph/50Hz	UN 400V/3Ph/50Hz
	FLA 22.4 A 6.25 kW	FLA 0.9 A 0.55 kW (x2)
	FLA 26.9 A 7.55 kW	FLA 0.9 A 0.55 kW (x2)
RF-A-4000	FLA 30.1 A 9.99 kW	FLA 0.9 A 0.55 kW (x2)

MODEL	COMPRESSOR	FAN MOTOR
RF-A-3000	UN 460V/3Ph/60Hz	UN 460V/3Ph/60Hz
	FLA 22.4 A 7.86 kW	FLA 2 A 1.2 kW (x2)
	FLA 25 A 9.40 kW	FLA 2 A 1.2 kW (x2)
RF-A-4000	FLA 30.1 A 12.40 kW	FLA 2 A 1.2 kW (x2)


MODEL	ELECTRICAL SUPPLY LINE 3 PHASE + PROTECTION EARTH CABLE SIZE
RF-A-3000 -4000	4G12AWG

A1 : Control circuit transformer
A30 : Compressor heater
X1 : Mains supply connection terminal block
B15 : Control circuit supply
PSR : Phase sequence relay
F1, F2 : A01 primary protection
F3, F4 : A30 overload protection
Q1 : Compressor contactor
Q10 : Fan motor1 contactor
Q11: Fan motor2 contactor
M1: Compressor motor
M10 : Fan motor1
M11 : Fan motor2
P1 : Overload protector of compressor
P10 : Overload protector of fan motor 10
P11: Overload protector of fan motor 11

S01 MAIN PROTECTION AND DISCONNECTING MEANS
SHALL BE PROVIDED BY THE INSTALLER OF RESIDUAL
CURRENT AUTOMATIC CIRCUIT BREAKER
(UL-489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC

11.6 WIRING DIAGRAM— RF-A-3000 - RF-A-4000 (460-3-60, 400-3-50) POWER

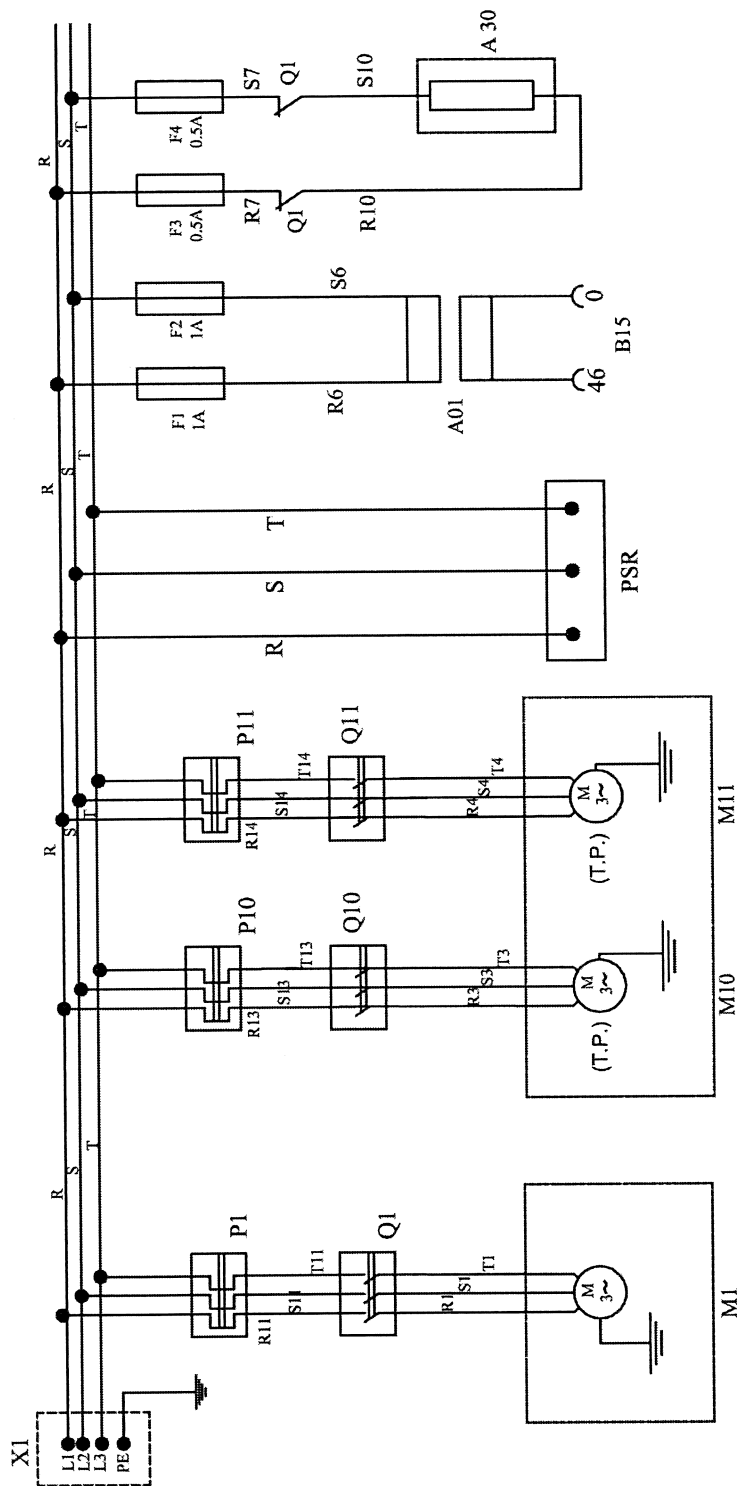


USE COPPER CONDUCTOR ONLY AT 167 °F

MAX. SET 15%

EV3: Controller
SP: Power supply
AL: Alarm contacts
A20: Drain supply
DR: Drain valve relay
PSR: Phase sequence relay
F10: Control circuit fuse
Q1: Compressor contactor
Q10: Fan motor contactor
K01: Compressor relay
K30: Alarm relay
S10: Fan pressure switch
S11: High pressure switch
S12: Low pressure switch
S20: High temperature switch
S21: Fan motor thermostat (optional)
S22: Fan motor thermostat (optional)
S16: Filter service contact (optional)
P: Compressor motor overload protector
PT: Temperature sensor (PT100)
HP indicates high pressure
LP indicates low pressure
TH indicates thermal

11.5 WIRING DIAGRAM— RF-A-800 - RF-A-2300 (460-3-60, 400-3-50) CONTROL

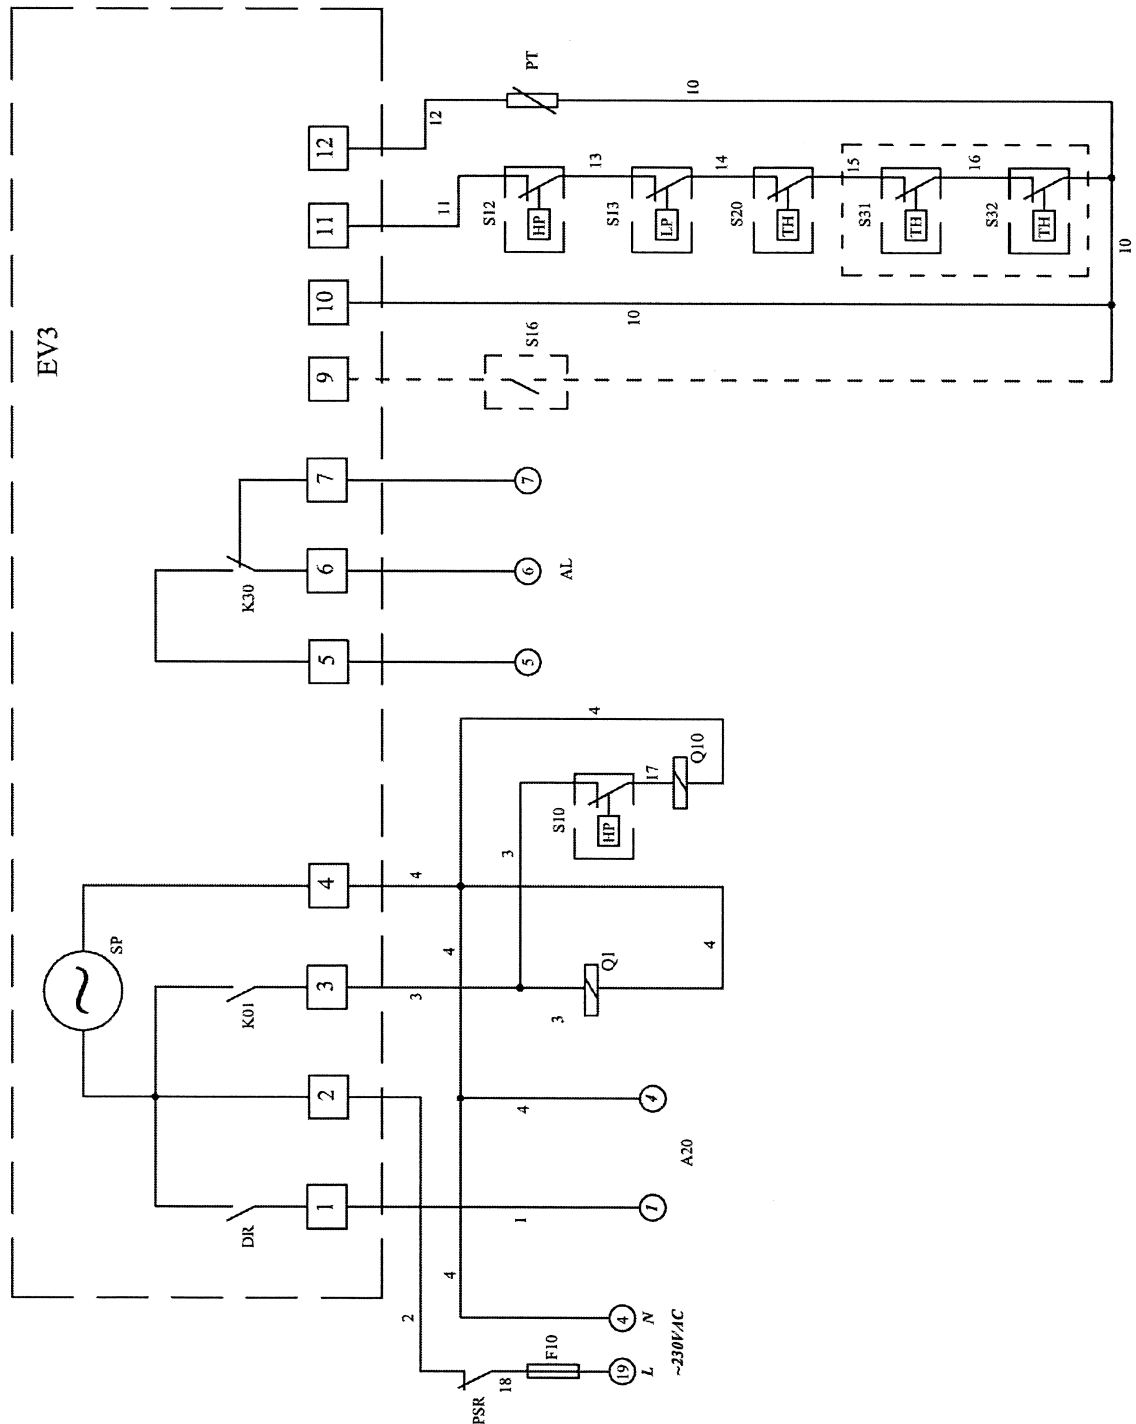

A1 : Control circuit transformer
A30 : Compressor heater
X1 : Mains supply connection terminal block
B15 : Control circuit supply
EMR4 : Phase protection relay
F1, F2 : A01 primary protection
F3, F4 : A30 overload protection
Q1 : Compressor contactor
Q10 : Fan contactor
M1 : Compressor motor
M10 : Fan motor1
M11 : Fan motor2

S01 MAIN PROTECTION AND DISCONNECTING MEANS SHALL BE PROVIDED BY THE INSTALLER OF RESIDUAL CURRENT AUTOMATIC CIRCUIT BREAKER (UL-489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC

MODEL	ELECTRICAL SUPPLY LINE 3 PHASE + PROTECTION EARTH
RF-A-800 -	CABLE SIZE
RF-A-1000	4G2.5mm
RF-A-1460 - 2300	4G4mm


MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-800	02250225-588	400V/3Ph/50Hz	AIR COOLING
	02250225-562	460V/3Ph/60Hz	AIR COOLING
RF-A-1000	02250225-589	400V/3Ph/50Hz	AIR COOLING
	02250225-563	460V/3Ph/60Hz	AIR COOLING
RF-A-1460	02250225-590	400V/3Ph/50Hz	AIR COOLING
	02250225-564	460V/3Ph/60Hz	AIR COOLING
RF-A-1600	02250225-591	400V/3Ph/50Hz	AIR COOLING
	02250225-565	460V/3Ph/60Hz	AIR COOLING
RF-A-2000	02250225-592	400V/3Ph/50Hz	AIR COOLING
	02250225-566	460V/3Ph/60Hz	AIR COOLING
RF-A-2300	02250225-593	400V/3Ph/50Hz	AIR COOLING
	02250225-567	460V/3Ph/60Hz	AIR COOLING

ELECTRICAL SPECIFICATIONS

MODEL	COMPRESSOR	FAN MOTOR
RF-A-800	UN 400V/3Ph/50	UN 400V/3Ph/50
	FLA 7.1 A 2.04 kW	FLA 0.37 A 0.17 kW
RF-A-1000	FLA 9 A 2.45 kW	FLA 0.37 A 0.17 kW
	FLA11.5 A 3.88 kW	FLA 0.31 A 0.19 kW
RF-A-1460	FLA11.5 A 3.89 kW	FLA 0.31 A 0.19 kW
	FLA14.1 A 4.34 kW	FLA 0.58 A 0.34 kW
RF-A-2000	FLA17.9 A 5.08 kW	FLA 0.58 A 0.34 kW

MODEL	COMPRESSOR	FAN MOTOR
RF-A-800	UN 460V/3Ph/60	UN 460V/3Ph/60
	FLA 7.1 A 2.45kW	FLA 0.46 A 0.30 kW
RF-A-1000	FLA 9 A 2.90 kW	FLA 0.79 A 0.30 kW
	FLA11.5 A 4.04 kW	FLA 0.74 A 0.44 kW
RF-A-1460	FLA11.5 A 4.70 kW	FLA 0.74 A 0.44 kW
	FLA14.1 A 5.30 kW	FLA 0.74 A 0.44 kW
RF-A-2000	FLA17.9 A 6.23 kW	FLA 1.40 A 0.82 kW

11.4 WIRING DIAGRAM— RF-A-800 - RF-A-2300 (460-3-60, 400-3-50) POWER

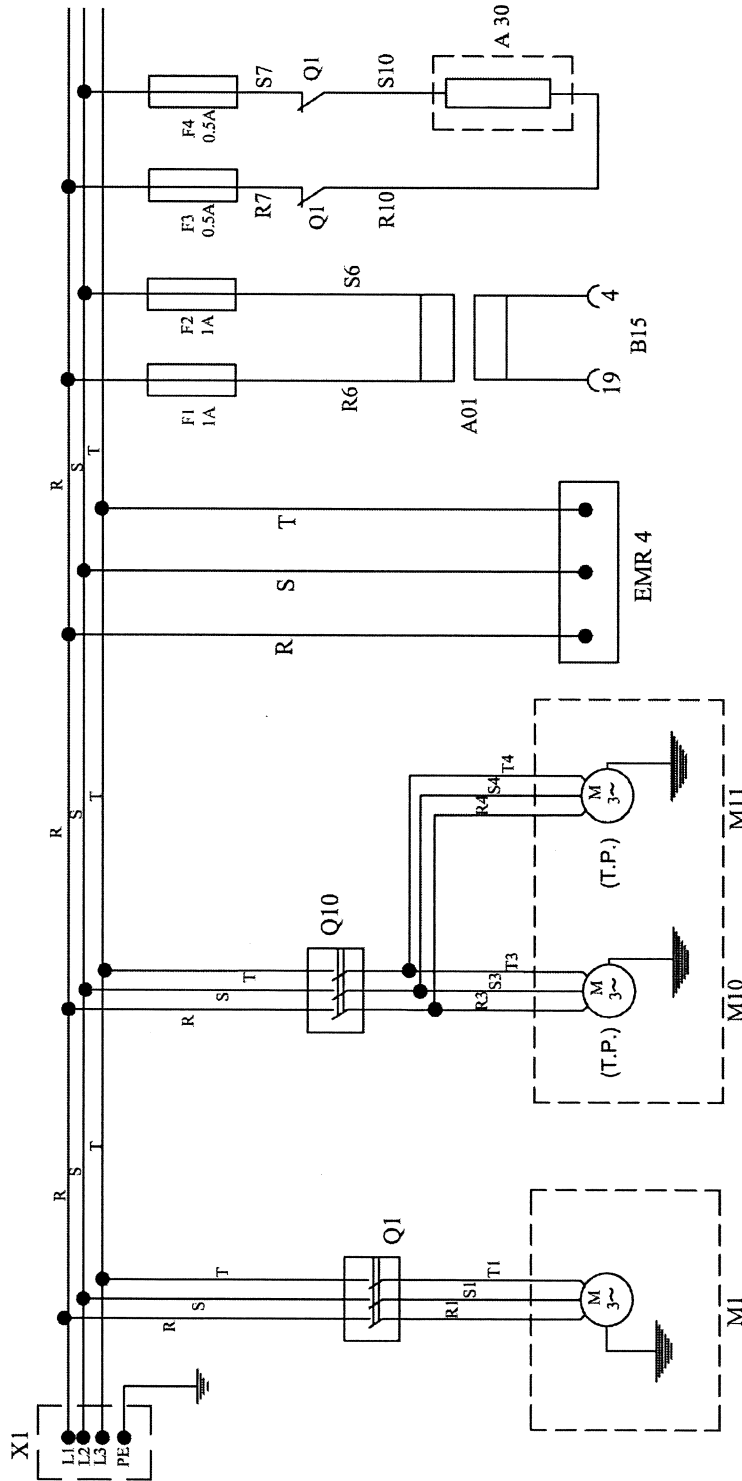

USE COPPER CONDUCTOR ONLY AT 167 °F

MAX. SET 15%

EV3: Controller
SP: Power supply
AL: Alarm contact
A20: Drain supply
DR: Drain valve relay
A31: Bleeder resistor
A40-1: Start capacitor
A40-2: Run capacitor
K01: Compressor start relay
K02: Compressor motor contactor
K30: Alarm relay
S10: Fan pressure switch
S11: High pressure switch
S16: Filter service contact (optional)
M01: Compressor motor
M10: Fan motor
P: Compressor motor overload protector
PT: Temperature sensor (PT100)
HP indicates high pressure

S01 MAIN PROTECTION AND DISCONNECTING MEANS
SHALL BE PROVIDED BY THE INSTALLER OF RESIDUAL
CURRENT AUTOMATIC CIRCUIT BREAKER
(UL-4-489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC


MODEL	ELECTRICAL SUPPLY LINE	
	3 PHASE + PROTECTION EARTH	
RF-A-125 - RF-A-650	CABLE SIZE 4G12AWG	

MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-125	02250225-581	230V/1Ph/50Hz	AIR COOLING
	02250225-555	230V/1Ph/60Hz	AIR COOLING
RF-A-175	02250225-582	230V/1Ph/50Hz	AIR COOLING
	02250225-556	230V/1Ph/60Hz	AIR COOLING
RF-A-210	02250225-583	230V/1Ph/50Hz	AIR COOLING
	02250225-557	230V/1Ph/60Hz	AIR COOLING
RF-A-275	02250225-584	230V/1Ph/50Hz	AIR COOLING
	02250225-558	230V/1Ph/60Hz	AIR COOLING
RF-A-350	02250225-585	230V/1Ph/50Hz	AIR COOLING
	02250225-559	230V/1Ph/60Hz	AIR COOLING
RF-A-500	02250225-586	230V/1Ph/50Hz	AIR COOLING
	02250225-560	230V/1Ph/60Hz	AIR COOLING
RF-A-650	02250225-587	230V/1Ph/50Hz	AIR COOLING
	02250225-561	230V/1Ph/60Hz	AIR COOLING

ELECTRICAL SPECIFICATIONS

MODEL	COMPRESSOR	FAN MOTOR
	UN 230V/1Ph/50Hz	UN 230V/1Ph/50Hz
RF-A-125	FLA 4.5 A 0.620 kW	FLA 0.68 A 0.095 kW
RF-A-175	FLA 5.6 A 0.870 kW	FLA 0.68 A 0.095 kW
RF-A-210	FLA 5.1 A 0.996 kW	FLA 0.68 A 0.095 kW
RF-A-275	FLA 5.1 A 1.033 kW	FLA 0.68 A 0.095 kW
RF-A-350	FLA 5.8 A 1.120 kW	FLA 0.68 A 0.095 kW
RF-A-500	FLA 7.8 A 1.579 kW	FLA 0.73 A 0.165 kW
RF-A-650	FLA 9.8 A 2.082 kW	FLA 0.73 A 0.165 kW
MODEL	COMPRESSOR	FAN MOTOR
	UN 230V/1Ph/60Hz	UN 230V/1Ph/60Hz
RF-A-125	FLA 4.8 A 0.806 kW	FLA 0.75 A 0.095 kW
RF-A-175	FLA 6.7 A 1.084 kW	FLA 0.75 A 0.095 kW
RF-A-210	FLA 6.4 A 1.289 kW	FLA 0.75 A 0.095 kW
RF-A-275	FLA 6.4 A 1.337 kW	FLA 0.75 A 0.095 kW
RF-A-350	FLA 10.6 A 1.857 kW	FLA 0.75 A 0.095 kW
RF-A-500	FLA 10.6 A 1.940 kW	FLA 0.74 A 0.260 kW
RF-A-650	FLA 13.3 A 2.589 kW	FLA 1.5 A 0.340 kW

11.3 WIRING DIAGRAM— RF-A-125 - RF-A-650 (230-1-60, 230-1-50)

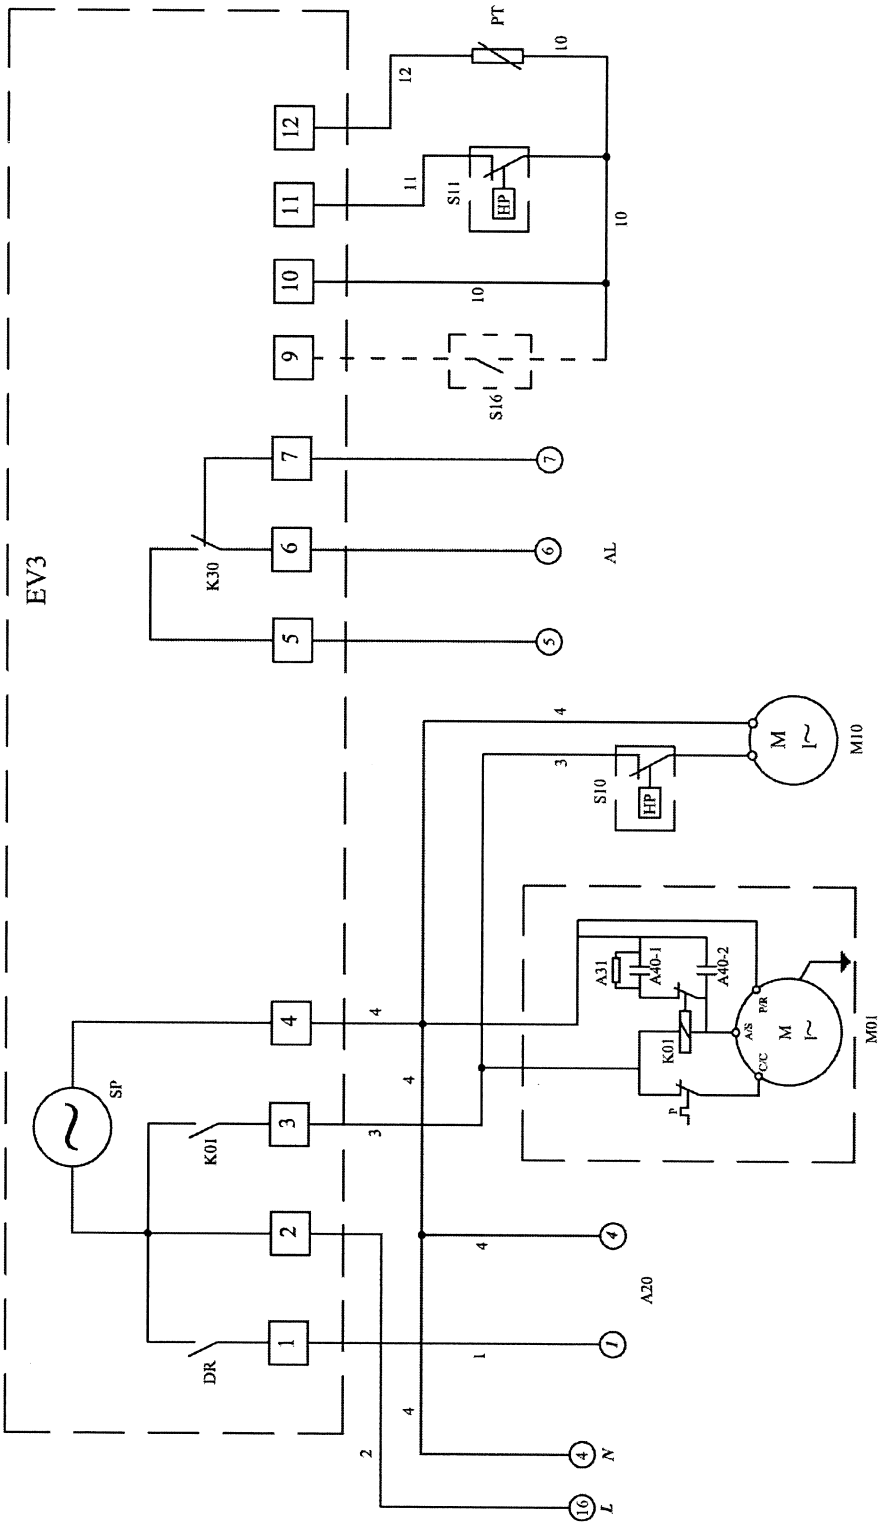

MAX. SET 15%

EV3: Controller
SP: Power supply
AL: Alarm contacts
A20: Drain supply
DR: Drain valve relay
A40-1:Start capacitor
K01: Compressor start relay
K02: Compressor motor contactor
K30: Alarm relay
S10: Fan pressure switch
S11: High pressure switch
S16: Filter service contact (optional)
M01: Compressor motor
M10: Fan motor
P: Compressor motor overload protector
PT: Temperature sensor (PT100)
HP indicates high pressure

S01 MAIN PROTECTION AND DISCONNECTING MEANS
SHALL BE PROVIDED BY THE INSTALLER OF RESIDUAL
CURRENT AUTOMATIC CIRCUIT BREAKER
(UL-489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC

MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-50	02250225-578	230V/1Ph/50Hz	AIR COOLING
	02250225-552	230V/1Ph/60Hz	AIR COOLING
RF-A-75	02250225-579	230V/1Ph/50Hz	AIR COOLING
	02250225-553	230V/1Ph/60Hz	AIR COOLING
RF-A-100	02250225-580	230V/1Ph/50Hz	AIR COOLING
	02250225-554	230V/1Ph/60Hz	AIR COOLING


ELECTRICAL SPECIFICATIONS

MODEL	COMPRESSOR	FAN MOTOR
RF-A-50	UN 230V/1Ph/50Hz	UN 230V/1Ph/50Hz
	FLA 1.8 A 0.237 kW	FLA 0.20 A 0.032 kW
RF-A-75	FLA 2.5 A 0.393 kW	FLA 0.68 A 0.095 kW
RF-A-100	FLA 2.5 A 0.484 kW	FLA 0.68 A 0.095 kW

MODEL	COMPRESSOR	FAN MOTOR
RF-A-50	UN 230V/1Ph/60Hz	UN 230V/1Ph/60Hz
	FLA 1.9 A 0.317 kW	FLA 0.20 A 0.032 kW
RF-A-75	FLA 3.0 A 0.473 kW	FLA 0.75 A 0.095 kW
RF-A-100	FLA 2.9 A 0.577 kW	FLA 0.75 A 0.095 kW

MODEL	ELECTRICAL SUPPLY LINE 3 PHASE + PROTECTION EARTH
RF-A-50	CABLE SIZE
	4G12AWG
	4G12AWG
RF-A-75	4G12AWG
RF-A-100	4G12AWG

11.2 WIRING DIAGRAM— RF-A-50 - RF-A-100 (230-1-60, 230-1-50)

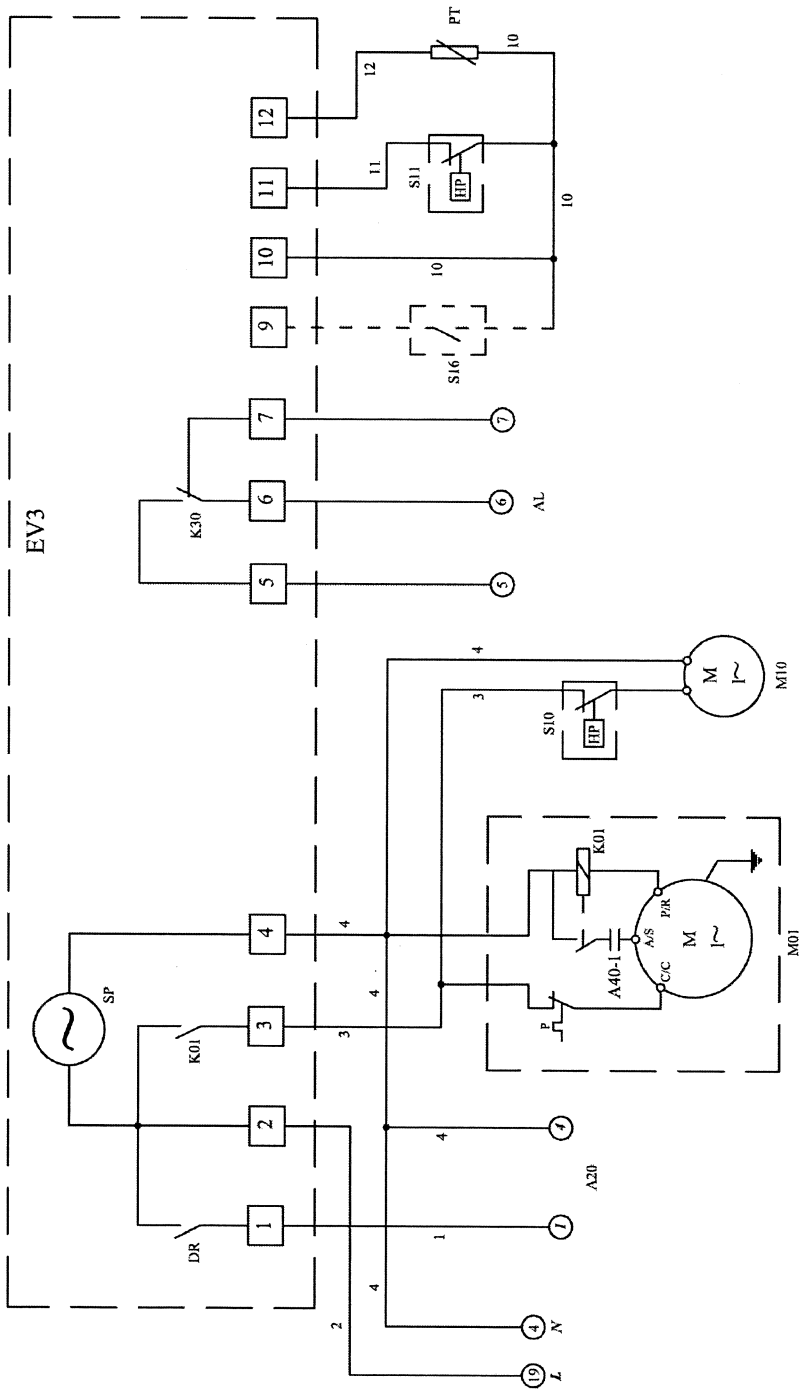

USE COPPER CONDUCTOR ONLY AT 167 °F

MAX. SET 15%

MODEL	DRYER PART NUMBER	POWER RATINGS	COOLING
RF-A-10	02250225-575	230V/1Ph/50Hz	AIR COOLING
	02250225-548	230V/1Ph/60Hz	AIR COOLING
RF-A-20	02250225-576	230V/1Ph/50Hz	AIR COOLING
	02250225-549	230V/1Ph/60Hz	AIR COOLING
RF-A-30	02250225-577	230V/1Ph/50Hz	AIR COOLING
	02250193-551	230V/1Ph/60Hz	AIR COOLING

ELECTRICAL SPECIFICATIONS

MODEL	COMPRESSOR	FAN MOTOR
RF-A-10	UN 230V/1Ph/50Hz	UN 230V/1Ph/50Hz
	FLA 1.4 A 0.190 kW	FLA 0.2 A 0.032 kW
	FLA 1.4 A 0.196 kW	FLA 0.2 A 0.032 kW
RF-A-30	FLA 1.8 A 0.229 kW	FLA 0.2 A 0.032 kW

MODEL	COMPRESSOR	FAN MOTOR
RF-A-10	UN 230V/1Ph/60Hz	UN 230V/1Ph/60Hz
	FLA 1.5 A 0.238 kW	FLA 0.2 A 0.032 kW
	FLA 1.5 A 0.247 kW	FLA 0.2 A 0.032 kW
RF-A-30	FLA 1.9 A 0.305 kW	FLA 0.2 A 0.032 kW


RF-A-10-20-30	ELECTRICAL SUPPLY LINE
	3 PHASE + PROTECTION EARTH
	CABLE SIZE 4G12AWG

EV3: Controller
SP: Power supply
AL: Alarm contacts
A14: Filter change buzzer
A20: Drain supply
DR: Drain valve relay
A40-1: Start capacitor
K01: Compressor start relay
K02: Compressor motor contactor
K30: Alarm relay
S10: Fan pressure switch
S16: Filter service contact (optional)
M01: Compressor motor
M10: Fan motor
P: Compressor motor overload protector
PT: Temperature sensor (PT100)
HP indicates high pressure.

S01 MAIN PROTECTION AND DISCONNECTING MEANS SHALL BE PROVIDED BY THE INSTALLER OF RESIDUAL CURRENT AUTOMATIC CIRCUIT BREAKER (UL-4489 OR EQUIVALENT FUSE)

SIZE IS AMPS - 600 VAC

11.1 WIRING DIAGRAM—RF-A-10 - RF-A-30 (230-1-60, 230-1-50)

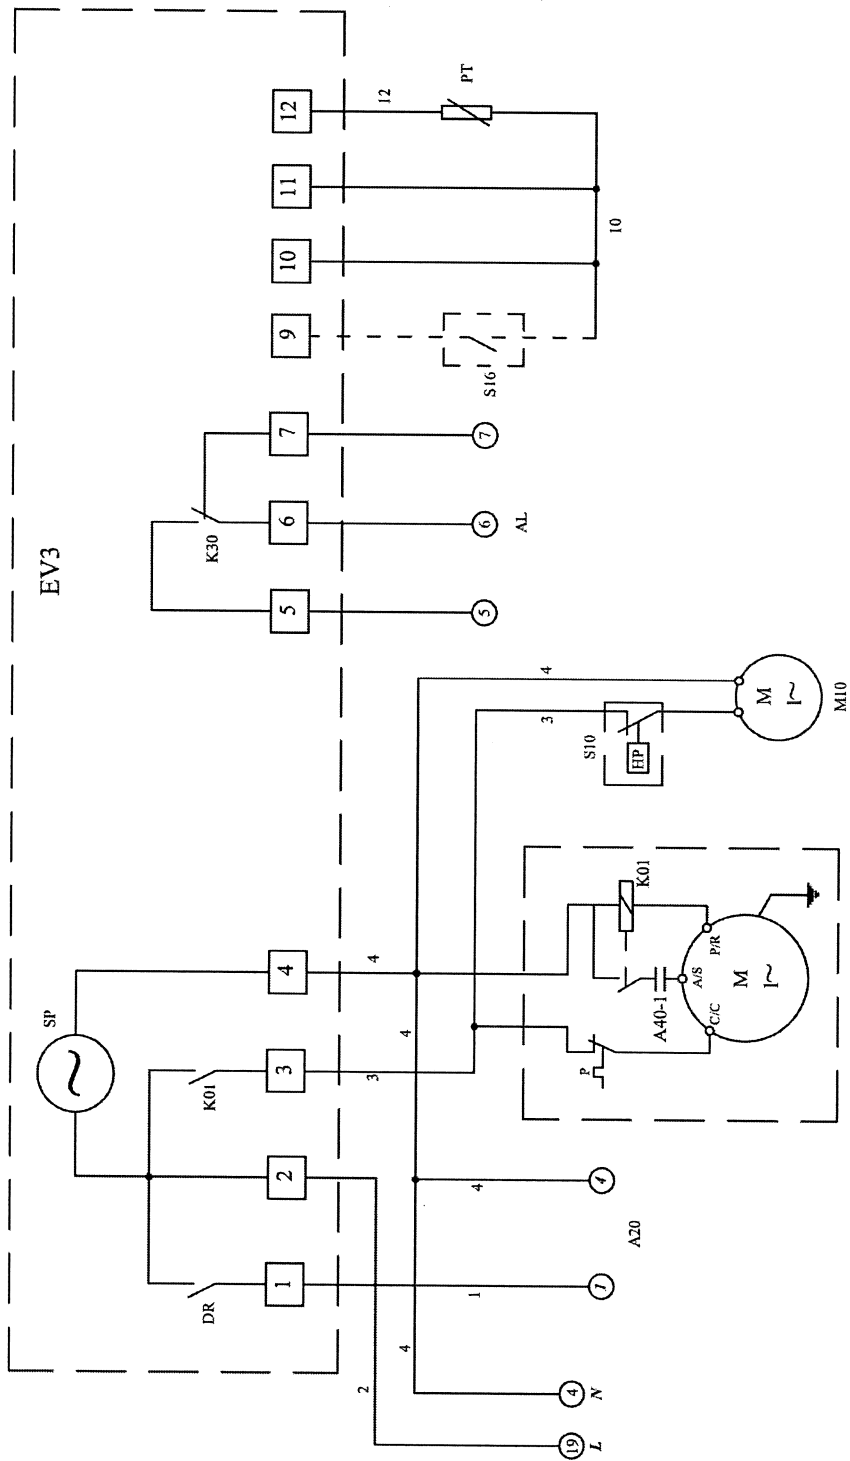

USE COPPER CONDUCTOR ONLY AT 167 °F

MAX. SET 15%

NOTE: MARKTAG COMPONENT/CONTAINER WITH SULLAIR P/N AND REVISION.

IMPORTANT:

Air Compressed Filters are only used RF-A 1460 and RF-A 1600 .


10.2 P&I— RF-A-1460 - RF-A-7300

MODEL	RF-A-1460 – RF-A-7300
REFRIGERANT TYPE	R134A

POS.	DESCRIPTION FOR AIR CIRCUIT
1	COMPRESSOR
2	FAN MOTOR
3	CONDENSER
4	FAN SWITCH
5	HIGH PRESSURE SWITCH
6	LIQUID RECEIVER
7	FILTER DRIER
8	EXPANSION VALVE
9	BY-PASS VALVE
10	LIQUID SEPARATOR
11	LOW PRESSURE SWITCH
12	HEAT EXCHANGER
13	AIR COLLECTOR
14	MEMBRANE VALVE
15	DRAIN COLLECTOR
16	OIL SEPARATOR
17	SELONOID VALVE
18	MANUEL VALVE



10.2 P&I— RF-A-1460 - RF-A-7300

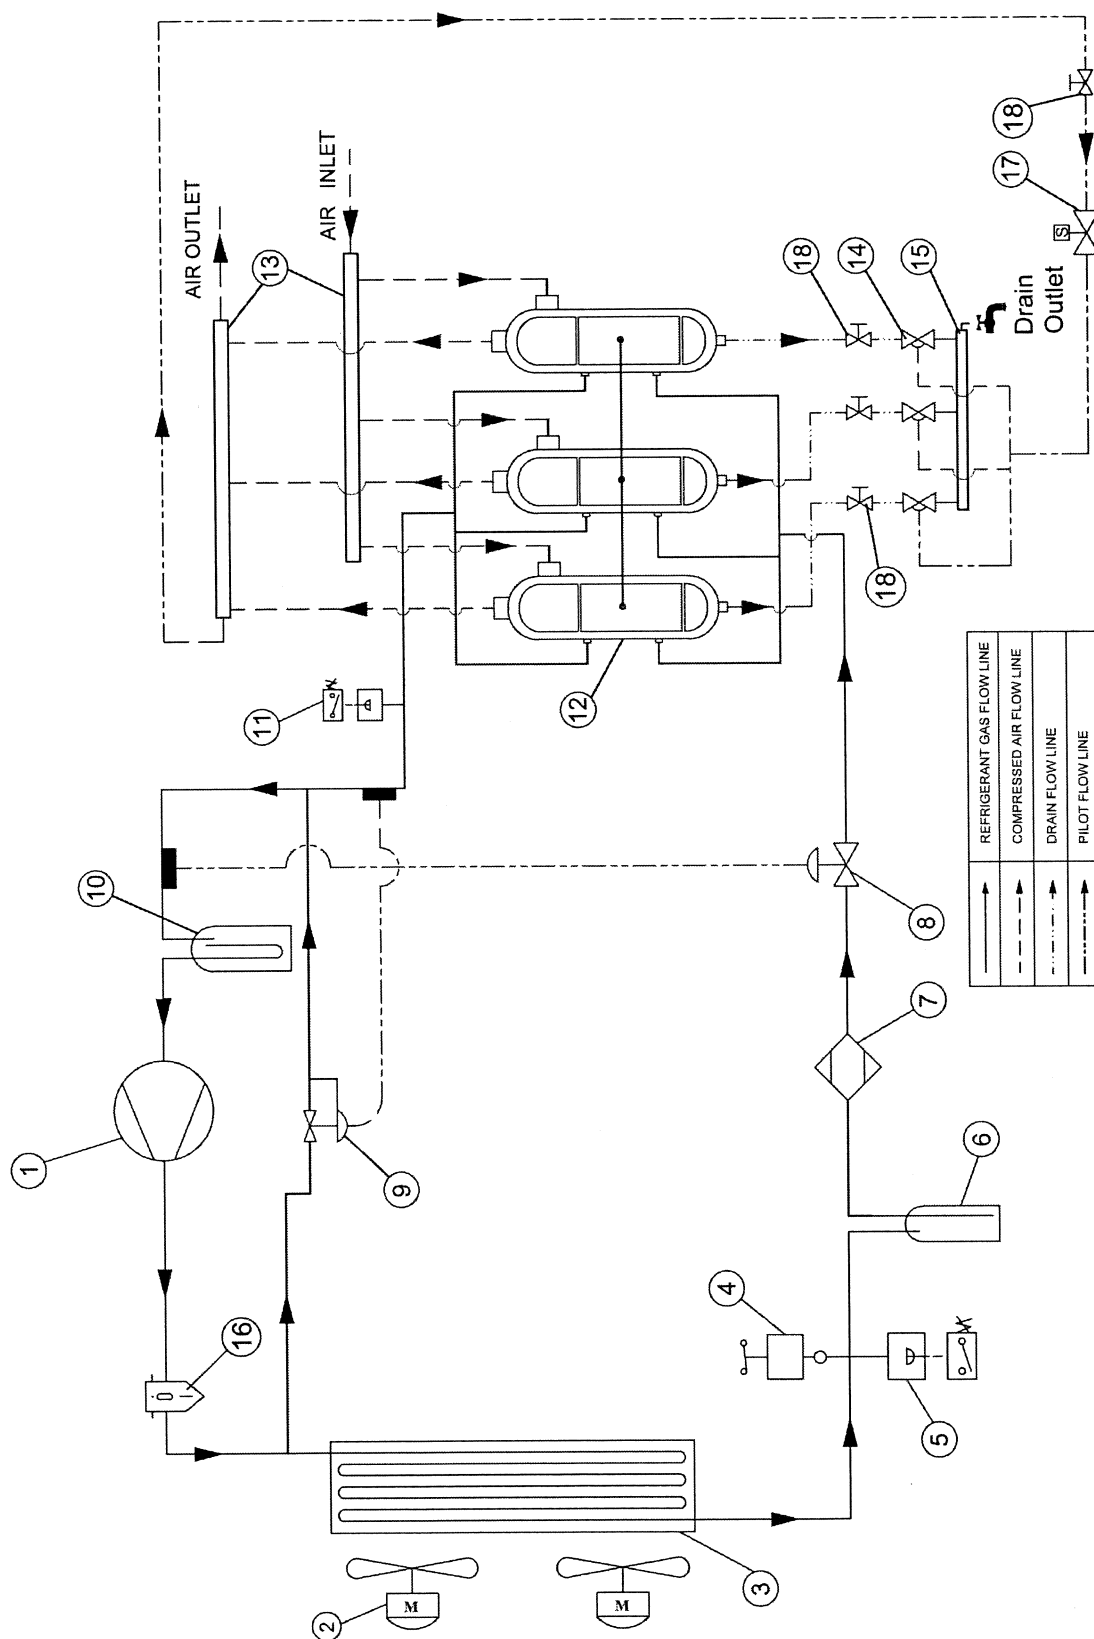


10.1 P&I—RF-A-10 - RF-A-1000

MODEL	RF-A-10 - RF-A-1000
REFRIGERANT TYPE	R134A

POS.	DESCRIPTION FOR AIR CIRCUIT
1	COMPRESSOR
2	FAN MOTOR
3	CONDENSER
4	FAN SWITCH
5	HIGH PRESSURE SWITCH
6	LIQUID RECEIVER
7	FILTER DRIER
8	EXPANSION VALVE
9	BY-PASS VALVE
10	LIQUID SEPARATOR
11	LOW PRESSURE SWITCH
12	HEAT EXCHANGER
13	FILTER
14	MANUEL VALVE
15	SOLENOID VALVE
16	CHECK VALVE
NOTE: MARK/TAG COMPONENT/CONTAINER WITH SULLAIR P/N AND REVISION.	
IMPORTANT: - High Pressure Switch (Part No:5) is not used from RF-A 10 to RF-A 30. - Hot Gas By-Pass Valve (Part No:9) is not used from RF-A 10 to RF-A 100. - Liquid Receiver (Part No:6) is not used from RF-A 10 to RF-A 210. - Liquid Separator (Part No:10) is used from RF-A 500 to RF-A 1000. - Low Pressure Switch (Part No:11) is only RF-A 800 and RF-A 1000 .	

10.1 P&I—RF-A-10 - RF-A-1000

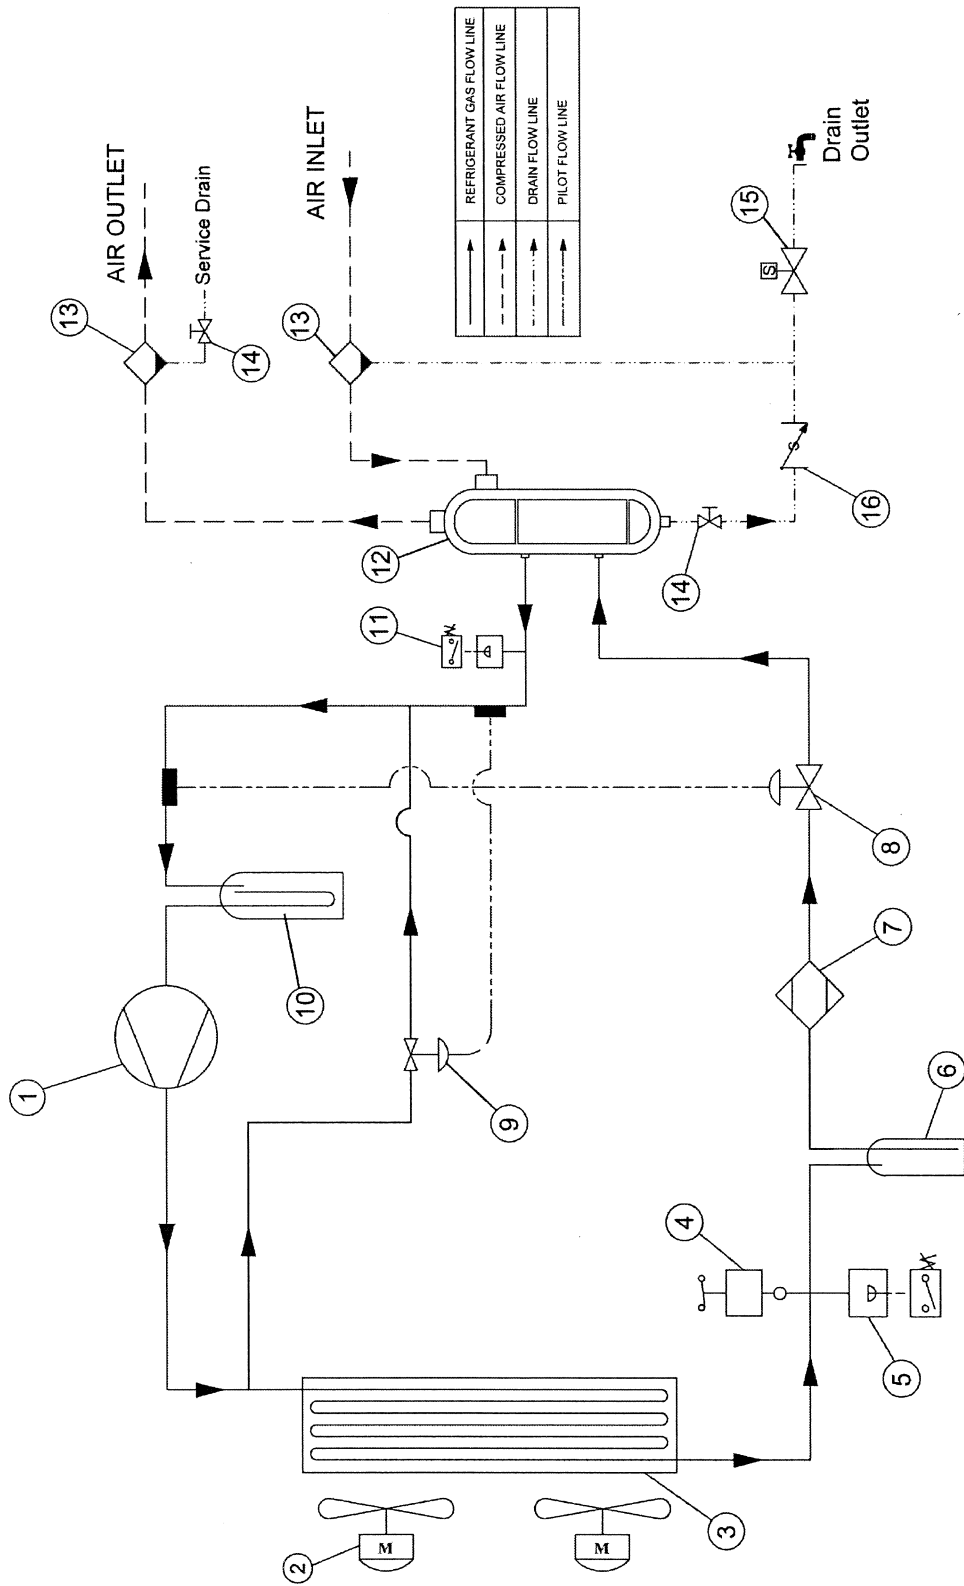


9.12 ID—RF-A-7300

DECAL	DRYER PART NUMBER	POWER RATINGS		AIR CONNECTION	COOLING
		400V/3Ph/50Hz	460V/3Ph/60Hz		
RF-A-7300	02250225-600			DN200	AIR COOLED
	02250225-574				

DRYER	GROSS WEIGHT	NET WEIGHT	WITHOUT PALLET SIZE	WITH PALLET SIZE
RF-A-7300	3109 LB / 1410 kg	3090 LB / 1402 kg	61.02"*104.33"*82.68" 1550mm*2650*2100mm	62.99"*106.29"*84.64" 1600mm*2700*2150mm



9.12 ID—RF-A-7300

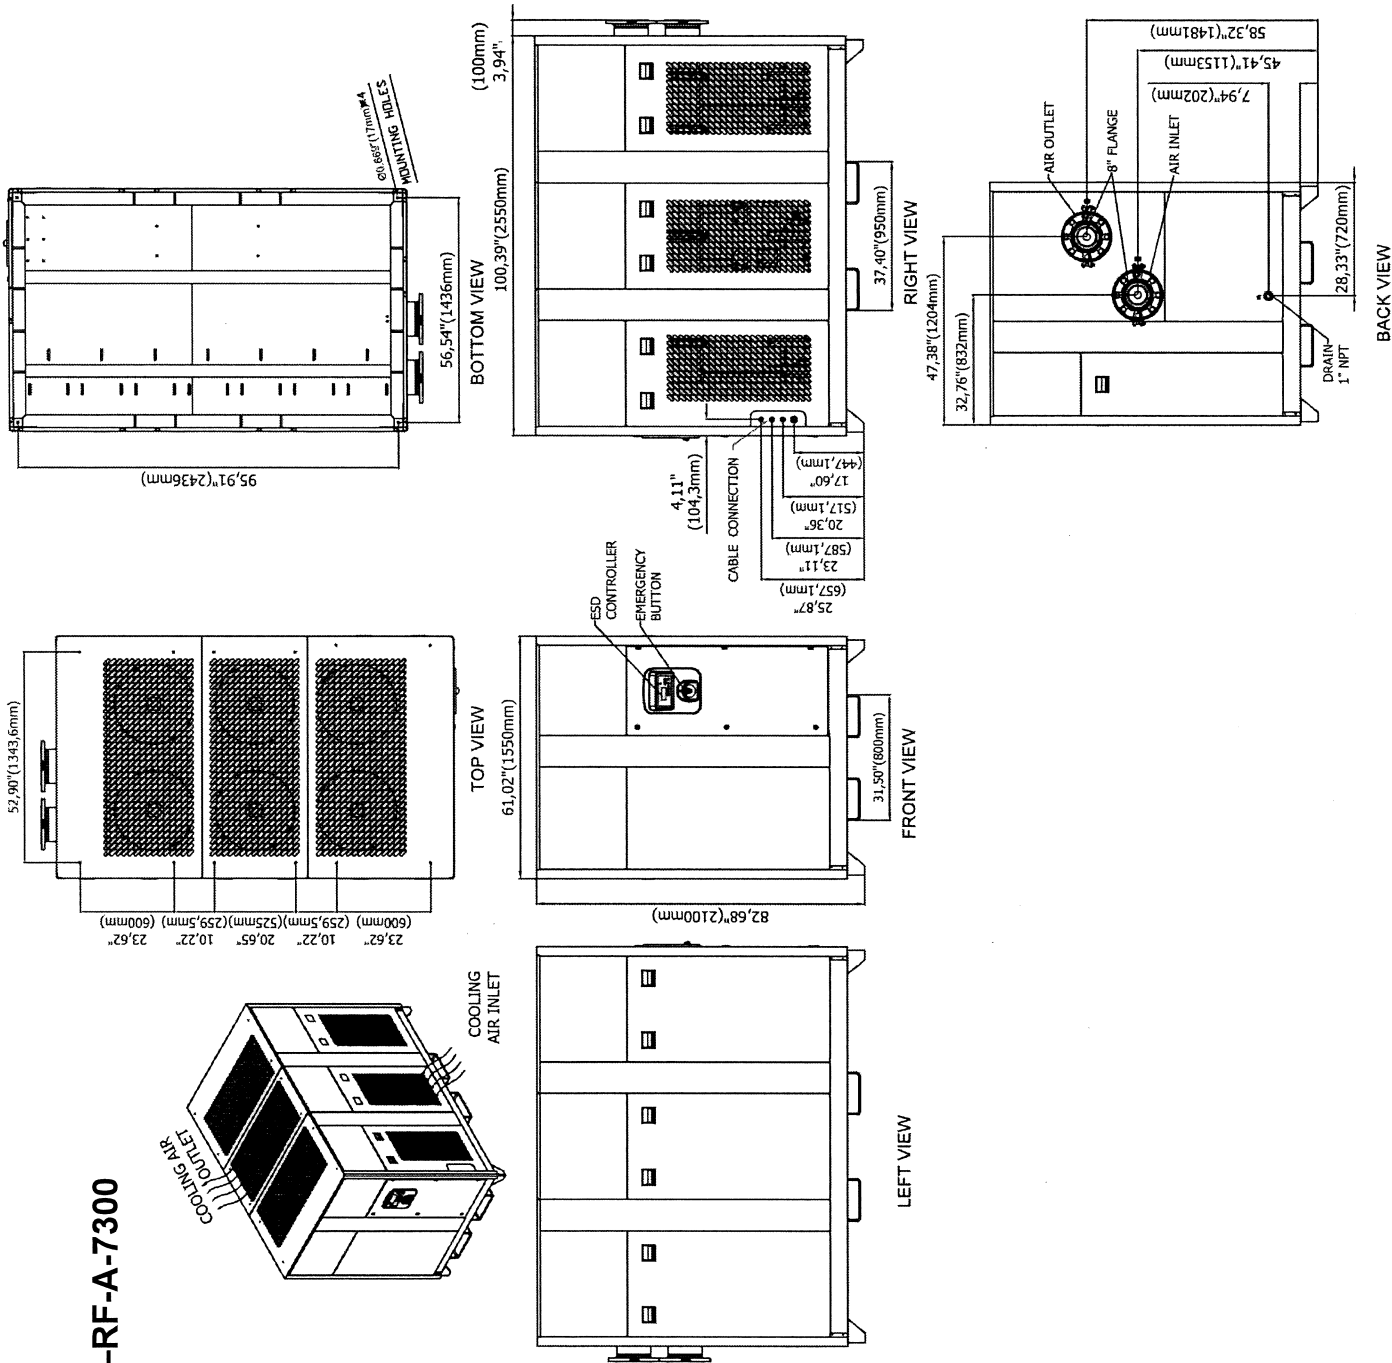


9.11 ID—RF-A-5200 - RF-A-6100

DECAL	DRYER PART NUMBER	POWER RATINGS	AIR CONNECTION	COOLING
RF-A-5200	02250225-598	400V/3Ph/50Hz	DN150	AIR COOLED
	02250225-572	460V/3Ph/60Hz		
RF-A-6100	02250225-599	400V/3Ph/50Hz	DN200	
	02250225-573	460V/3Ph/60Hz		

DRYER	GROSS WEIGHT	NET WEIGHT	WITHOUT PALLET SIZE	WITH PALLET SIZE
RF-A-5200	2165 LB / 982 kg	2150 LB / 975 kg	47.24"×88.46"×80.46" 1200mm×2247×2043.8mm	49.21"×90.43"×82.43" 1250mm×2297×2093.8mm
RF-A-6100	2470 LB / 1120 kg	2450 LB / 1111 kg		

9.11 ID—RF-A-5200 - RF-A-6100

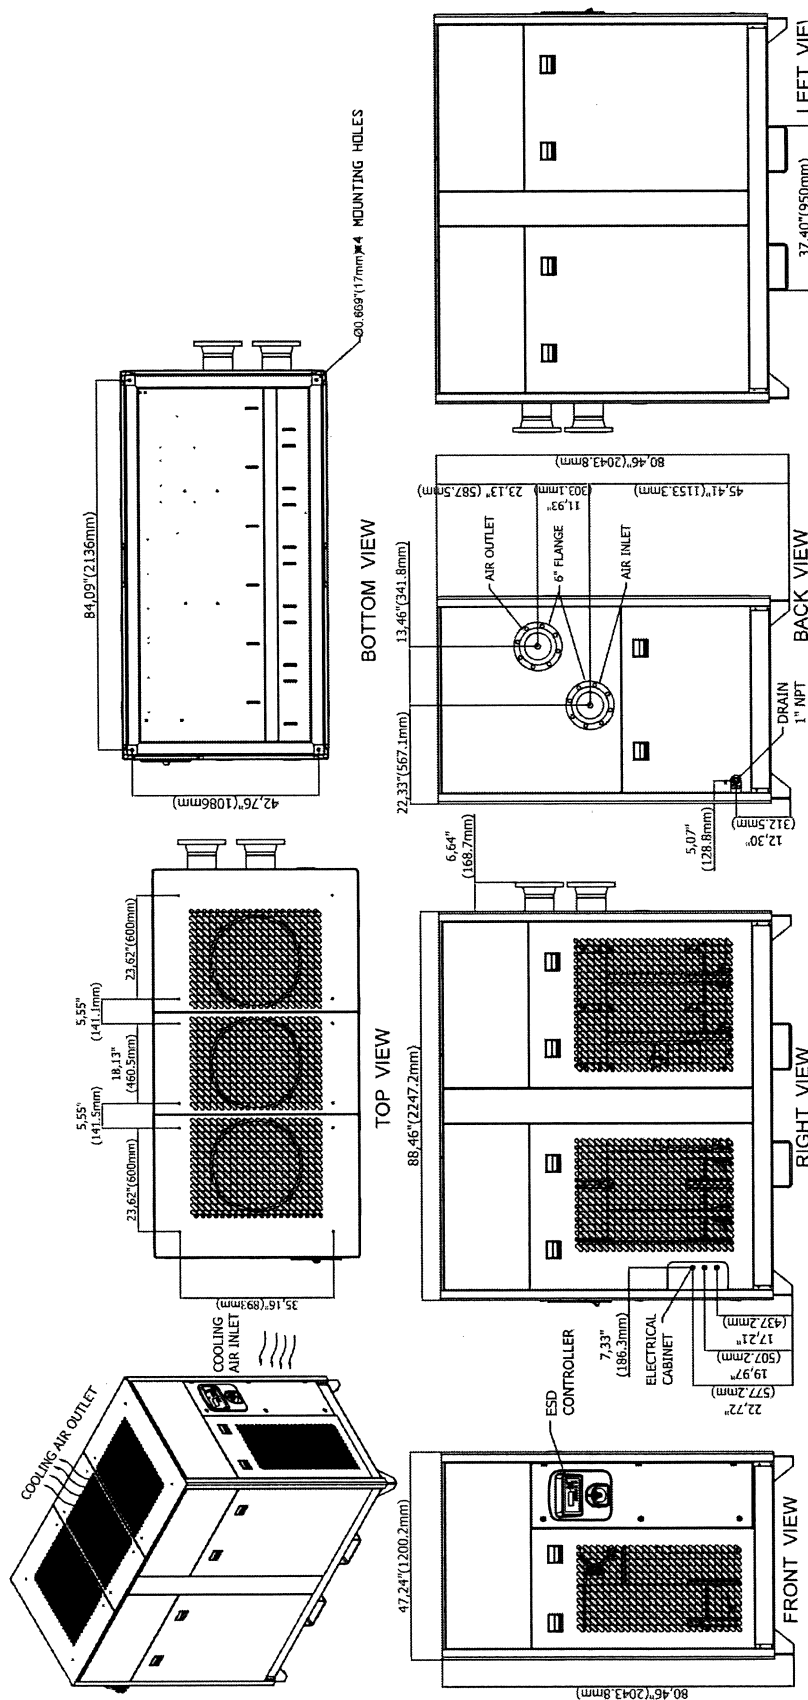

9.10 ID— RF-A-4000 - RF-A-4600

DECAL	DRYER PART NUMBER	POWER RATINGS	AIR CONNECTION	COOLING
RF-A-4000	02250225-596	400V/3Ph/50Hz	DN150	AIR COOLED
	02250225-570	460V/3Ph/60Hz		
RF-A-4600	02250225-597	400V/3Ph/50Hz	DN150	
	02250225-571	460V/3Ph/60Hz		

DRYER	GROSS WEIGHT	NET WEIGHT	WITHOUT PALLET SIZE	WITH PALLET SIZE
RF-A-4000	1997 LB / 906 kg	1984 LB / 900 kg	41.81''*86.13''*75.75'' 1062mm*2187.6mm*1924mm	43.77''*88.09''*77.71'' 1112mm*2237.6mm*1974mm
RF-A-4600	2050 LB / 929 kg	2035 LB / 923 kg		

