

DATA SHEET DECANTER CENTRIFUGE	
Model Designation: FPNX934B-31G	Machine No.: 501.8695
Specification: 8820.34902-2	Order No: 601.8695(350311)

Maximum Bowl Speed : 3250 r p m

Maximum Solids Density : 1.2 kg / dm³

Minimum Feed Temperature : 0°C (32°F)

Maximum Feed Temperature : 110°C (230°F)

The decanter **delivered from factory** is equipped with:



Liquid Level* : 6123.2375-22, Plate Dam, R=147

Solids Discharge Wear Protection : 0007.2881-00

IMPORTANT! When ordering Spare Parts, always state:

- *Machine No. and Type* indicated on the Nameplate of the decanter
- *Part No. and Designation*
- *Quantity*

* Neutral beach R=133 mm

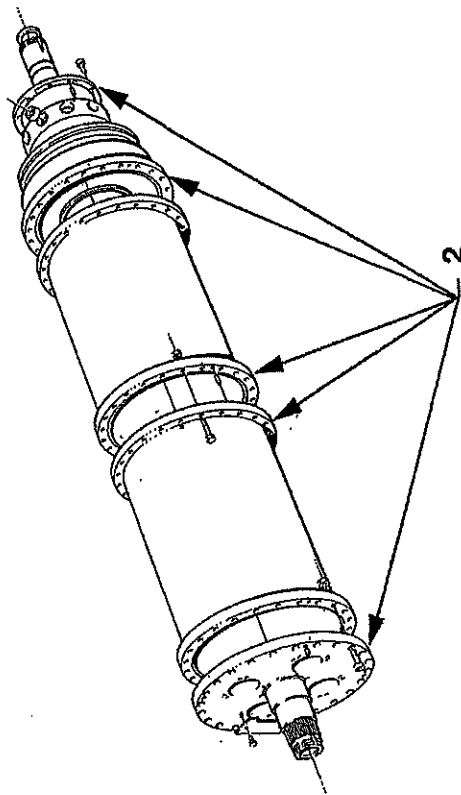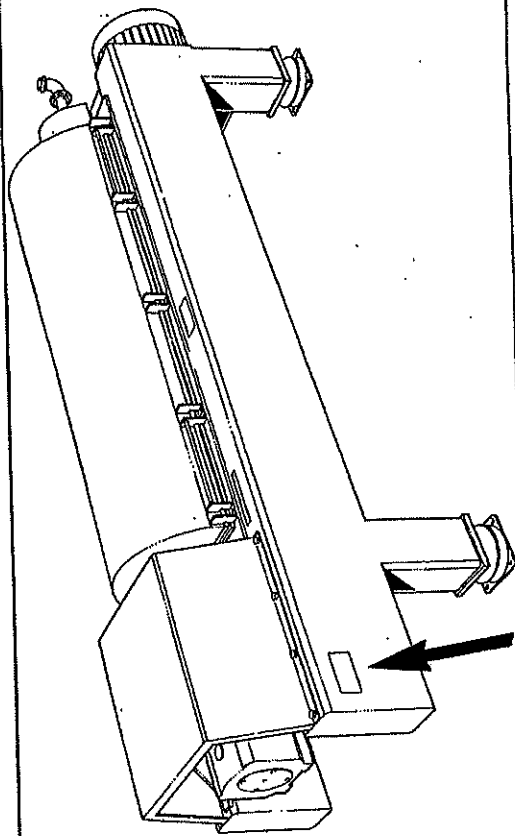

DECANTER

TYPE TYP

MANUFACT. NO. • YEAR BAUNUMMER • JAHR

ALFA LAVAL SEPARATION A/S • MASKINVEJ 5 • DK-2860 SOBORG

BOWL DIAMETER, INT. mm

MAX. SOLIDS DENSITY kg/dm³

MAX. BOWL SPEED rpm

TROMMEL DURCHMESSER

MAX. DICHT E FESTSTOFF

MAX. TROMMEL DREHZAH

MADE IN DENMARK

1. * Type

2. * Manufacturing No. for the Decanter

* To be stated when ordering spare parts

GB - English

SE - Svensk

DE - Deutsch

FR - Français

ES - Español

IT - Italiano

DK - Dansk

Type

Typ

Typ

Typ

Typ

Typ

Typ
- Manufactory number for the decanter

Skall angivas när reservdelar beställas

Manufactory number for the centrifuge

Diese Auskürfte beim Bestellen der Ersatzteile angeben

Dekanterens maskinnummer

Skal opgives ved bestilling af reservdelene

NX 8.. / NX 9..		HOW TO IDENTIFY YOUR DECANTER		95.04

INDLØBSRØR
 TUBO D'IMMISSIONE
 TUBO DE ENTRADA
 TUYAU D'ENTREE
 ZULAUFROHR
 INLOPPSRÖR
 INLET TUBE

HOVEDDRIFT
 TRASMISSIONE PRINCIPALE
 TRANSMISION PRINCIPAL
 TRANSMISSION PRINCIPALE
 HAUPTANTRIEB
 HUVUDDREV
 MAIN DRIVE

STATIV
 TELAJ
 ARMAZON
 BATTI
 GESTELL
 STATIV
 FRAME


TRANSPORTØRLEJER
 CUSCINETTI DELLA COCLEA
 COJINETES DEL
 TORNILLO TRANSPORTADOR
 COUSSINETS DE LA
 VIS TRANPORTEUSE
 FÖRERSCHNECKENLAGER
 TRANSPORTÖRLAGER
 CONVEYOR BEARINGS

TROMLE
 TAMBORO
 TAMBOR
 TAMBOR
 TROMMEL
 TRUMMA
 BOWL

HOVEDLEJER
 CUSCINETTI PRINCIPALI
 COJINETES PRINCIPALES
 PALIERS PRINCIPAUX
 HAUPTLAGER
 HUVUDLAGER
 MAIN BEARINGS

TRANSPORTØRDRIFT
 AZIONAMENTO DELLA COCLEA
 ACCIONAMIENTO DEL
 TORNILLO TRANSPORTADOR
 ENTRAINEMENT DE LA
 VIS TRANPORTEUSE
 FÖRERSCHNECKENANTRIEB
 TRANSPORTÖRDRIFT
 CONVEYOR DRIVE

GEARCASSE
 SCATOLA INGRANAGGI
 CAJA DE ENGRANAJES
 BOÎTE D'ENGRENAGE
 GETRIEBE
 VÄXELLÅDA
 GEARBOX

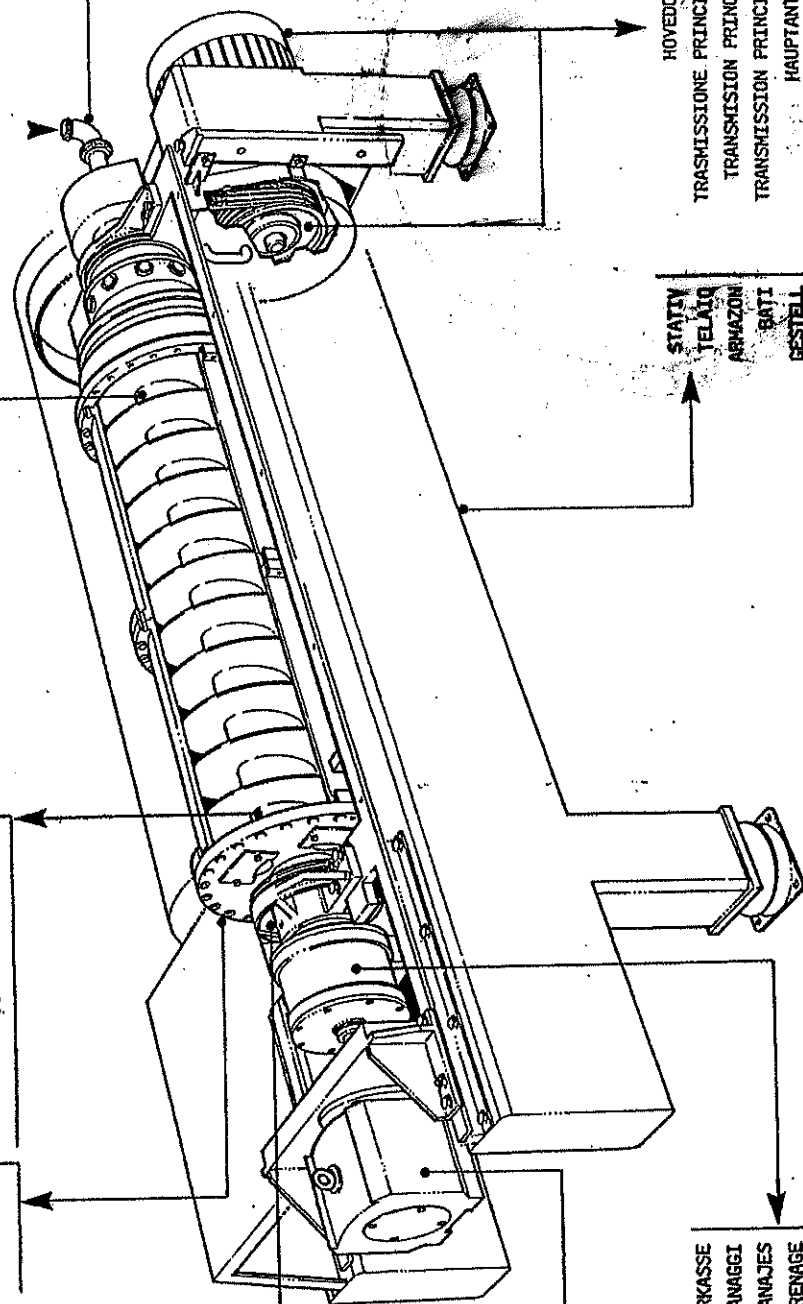

TRANSPORTØR

COCLEA

TORNILLO TRANSPORTADOR


VIS TRANSPORTEUSE

FÖRDERSCHECKE

TRANSPORTÖR

CONVEYOR

ALFA LAVALL
CONVEYOR
6121.1970-80

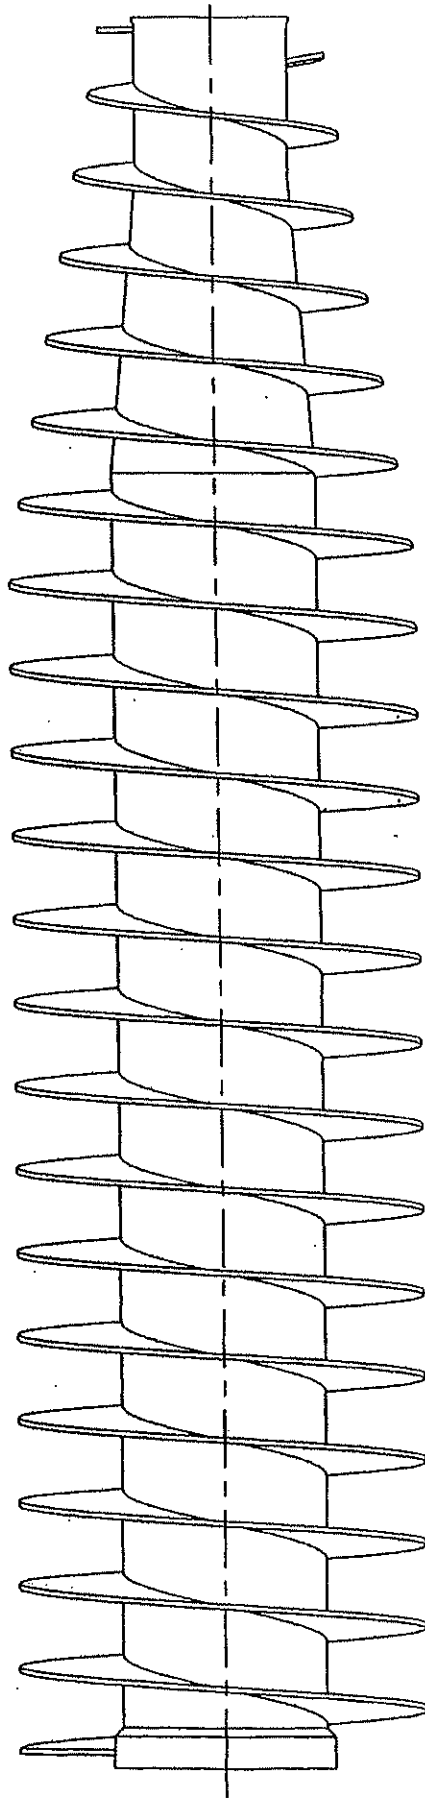

NX 9..


6121.1970-80

CONVEYOR


Conveyor

94.11


INDLØBSRØR
TUBO D'IMMISSIONE
TUBO DE ALIMENTACION
TUYAU D'AMENEE
ZULEITUNGSROHR
INLOPPSRÖR
FEED TUBE

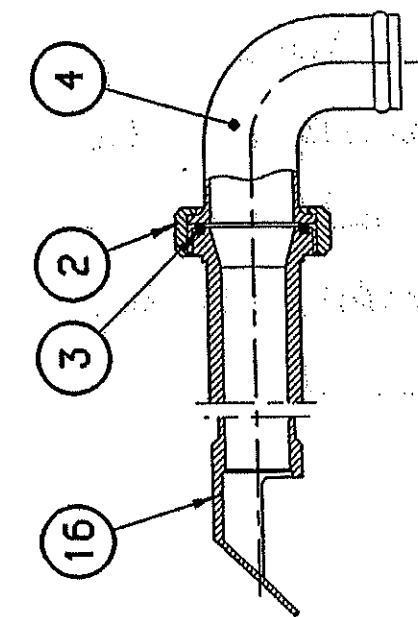


2531/-74-93-94-96

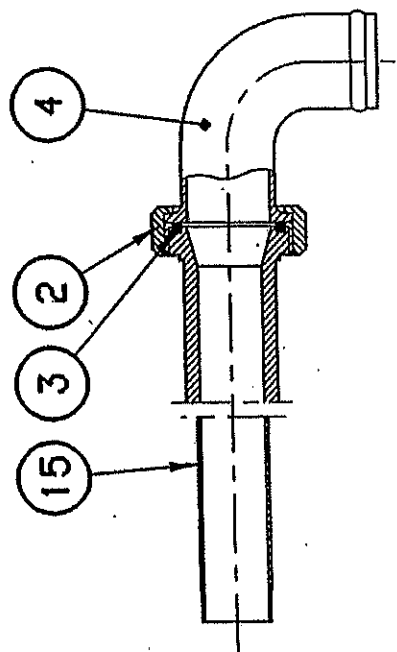


2531/-75-76-78-90-91-97

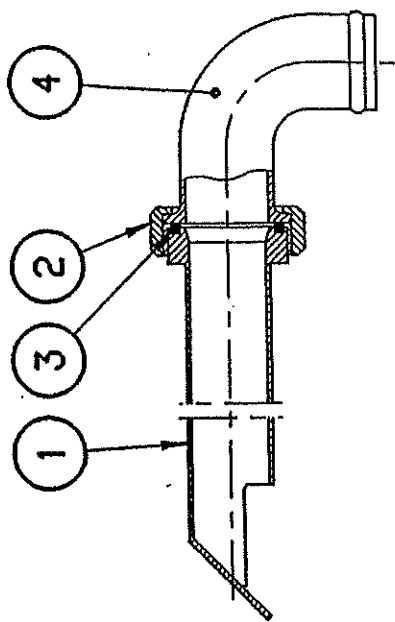


2531/-80

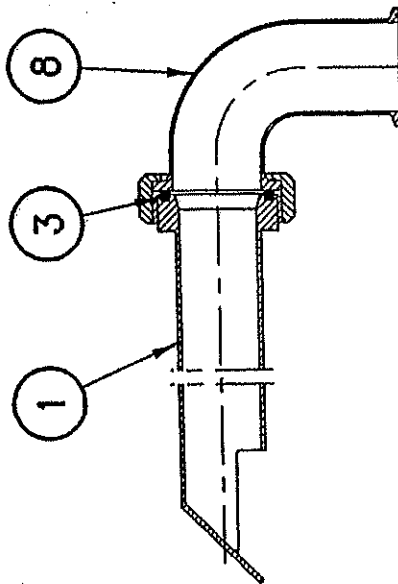

2531/-83

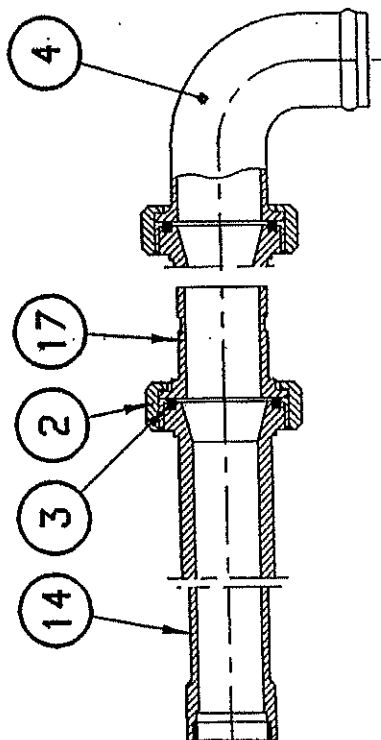

2531/-87-88-95

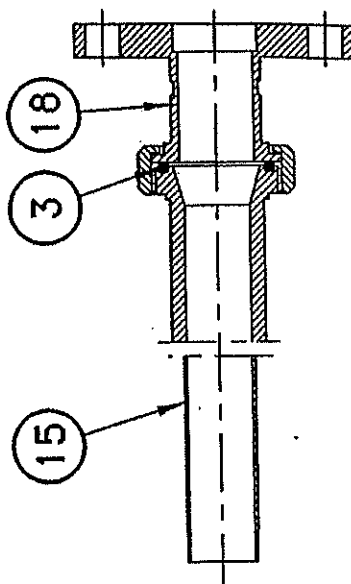

2531/-98

Alfa Laval

NX 4.. / NX 7..

NX 8.. / NX 9..

6120.2531

FEED


Feed Tube

95.01


EN - English		SV - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DA - Dansk	
Pos.	6120.2531-78	FEED TUBE	INLOPPSRÖR	ZULEITUNGSRÖHR	TUYAU D'AMENÉE	TUBO DE ALIMENTACIÓN	TUBO D'IMMISSIONE	INDLØBSRØR
2.	0019.0616-00	1 Nut	Mutter	Mutter	Ecrou	Tuerca	Dado ,	Matrik
3.	6120.7599-41	1 Seal	Tätning	Dichtung	Bord d'étanchéité	Guarnición	Guarnizione	Pakning
4.	6120.7596-13	1 Elbow	Knä	Knie	Coudé	Codo	Gomito	Rørvinkel (knæ)
15.	6120.7880-94	1 Feed tube	Inloppsrör	Zuleitungsrohr	Tuyau d'amenée	Tubo de alimentación	Tubo d'immissione	Indløbsrør
		NX 4.. / NX 7..		6120.2531- 78		FEED		95.01
		NX 8.. / NX 9..				Feed Tube		

TRANSPORTØRLEJER
CUSCINETTI DELLA COCLEA
COJINETES DEL TORNILLO TRANSPORTADOR
COUSSINETS DE LA VIS TRANSPORTEUSE
FÖRDERSCHNECKENLAGER
TRANSPORTÖRLAGER
CONVEYOR BEARINGS

-80, -84, -86, -90, -93, -94, -95

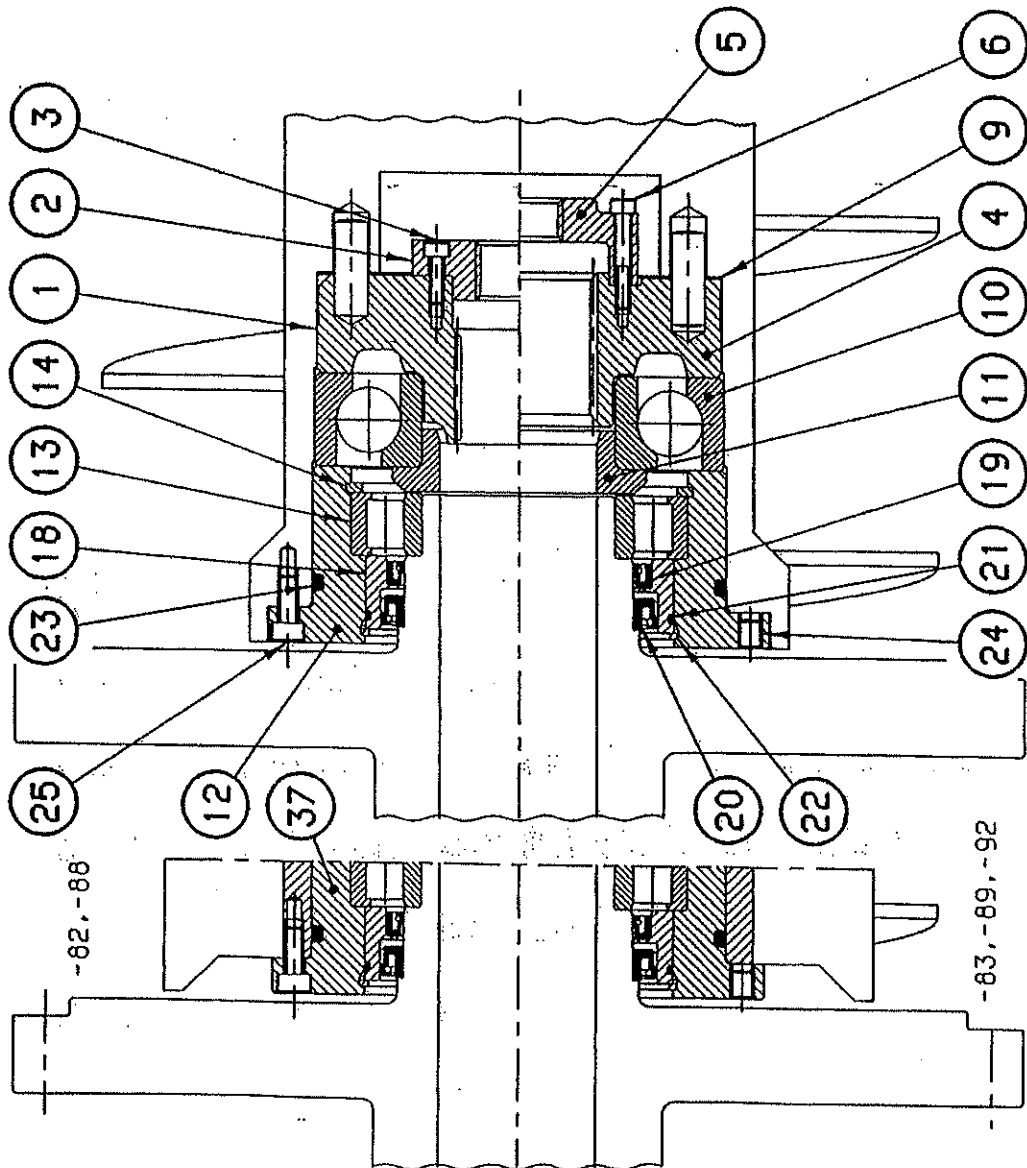

-80, -81, -82, -83, -91, -92, -93, -95

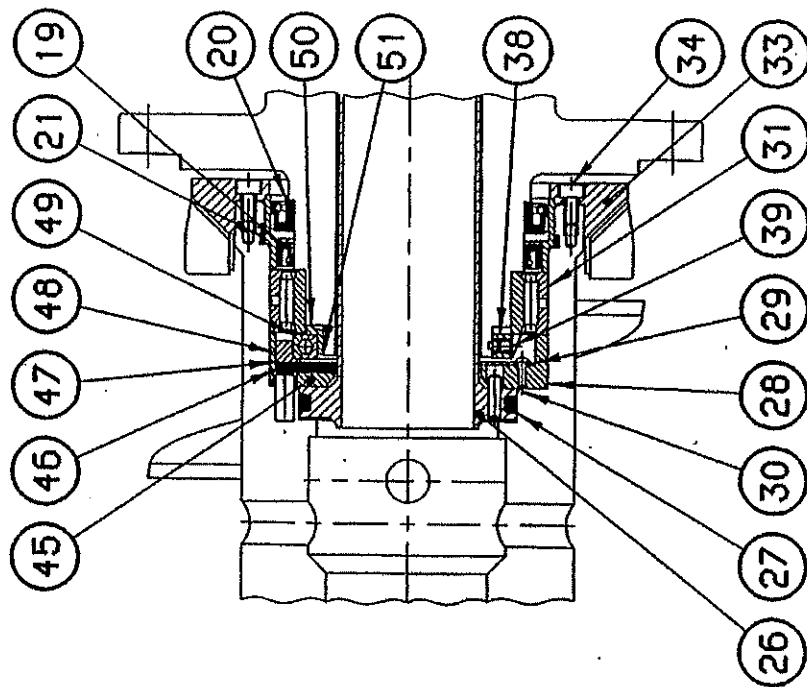

-84, -85, -86, -87, -88, -89, -90, -94

-81, -85, -87, -91, -92

CONVEYOR BEARINGS

Conveyor Bearings

NX 4.. / NX 7..
NX 8.. / NX 9..


6120.9798

94.12

Alfa Laval


Pos.	EN - English	SV - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DA - Dansk
	CONVEYOR BEARINGS	TRANSPORTÖRLAGER	FÖRDRSCHNECKENLAGER	PALIERS DU CONVOYEUR	RODAMIENTOS DEL TORNILLO TRANSPORTADOR	CUSCINETTI DELLA COCILEA	TRANSPORTØRLEJER
1.	1 Ball bearing holder	Kugellagerhållare	Kugellagerhalter	Reflent pour roulement à billes	Disco fijador para rodamiento de bolas	Disco di fissaggio per cuscinetto a sfera	Kuglelejtøholder
2.	1 Thrust plate	Åvdragningskiva	Abziehscheibe	Disque arracheur	Disco extractor	Disco estrattore	Attræterskive
3.	3 Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skrue
9.	1 Washer	Bricka	Scheibe	Rondelle	Arandela	Rondella	Underlagsskive
9.	2 Washer	Bricka	Scheibe	Rondelle	Arandela	Rondella	Underlagsskive
10.	1 Angular contact bearing	Vinkelkontaktlager	Schräglager	Roulement de	Rodamiento de	Cuscinetto par	Vinkelkontaktleje
11.	1 Supporting ring	Stödjering	Stützring	Anneau de support	Anillo de soporte	Anello di supporto	Støttering
12.	1 Bearing holder	Lagerhållare	Lagerhalter	Porte-roulement	Portacujinete	Porta-cuscinetto	Lejeholder
13.	1 Roller bearing	Rullelager	Rollenlager	Roulement à rouleaux	Rodamiento de rodillos	Cuscinetti a rulli	Rulleleje
14.	1 Circlip	SEEGER fjædering	Seeger-Sicherung (Sprengring)	Sûreté Seeger (Circlip)	Anilla elástica Seeger	Anello elastico di sicurezza	SEEGER-springring
18.	1 Wear bushing	Slidbussning	Verschleißbuchse	Douille d'usure	Casquillo de desgaste	Bussola di usura	Slidbærsning
19.	2 Seal ring	Tætningssring	Dichtungssring	Joint d'étanchéité	Anillo de cierre	Anello di tenuta	Tætningssring
20.	2 Seal ring	Tætningssring	Dichtungssring	Joint d'étanchéité	Anillo de cierre	Anello di tenuta	Tætningssring
21.	2 O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
22.	1 Securing ring	Låsring	Sicherungsring	Anneau de serrage	Anillo de cierre	Anello di serraggio	Sikringsring
23.	1 O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
24.	2 Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skrue
25.	6 Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skrue
26.	1 Protecting tube	Skyddsrør	Schutzrohr	Tuyau protecteur	Tubo protector	Tubo protettore	Beskyttelsesrør
27.	1 O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
31.	1 Needle bearing	Nållelager	Nadellager	Roulement à aiguilles	Rodamiento de agujas	Cuscinetto ad aghi	Nålleleje
32.	1 Wear bushing	Slidbussning	Verschleißbuchse	Douille d'usure	Casquillo de desgaste	Bussola di usura	Slidbærsning
33.	1 Lock ring - see data sheet	Låsring - se sidan med tekniska data	Verschlußring - siehe technische Daten	Anneau de serrage - voir les caractéristiques	Anillo de cierre - ver los datos técnicos	Anello di chiusura - vedi i dati tecnici	Låsring / Spændering - se siden med tekniske data
34.	8 Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skrue
45.	1 Thrust plate	Åvdragningskiva	Abziehscheibe	Disque arracheur	Disco extractor	Disco estrattore	Attræterskive
47.	2 Wavy spring	Korrugerad fjäder	Weilfeder	Resort ondulé	Resorte corrugado	Molla ondulata	Bølgefjeder
48.	1 Guide ring	Styring	Führungssring	Anneau de guidage	Anillo de guía	Anello guida	Styrering
49.	1 Ball bearing	Kuglelager	Kugellager	Roulement à billes	Rodamiento de bolas	Cuscinetto a sfera	Kugleleje
50.	1 Bearing ring	Lagering	Lagering	Anneau de roulement	Anillo de rodamiento	Anello di cuscinetto	Lejering
51.	1 Locite	Locite	Locite	Locite	Locite	Locite	Locite
				CONVEYOR BEARINGS			
				Conveyor Bearings			
				6120.9798- 93			
				NX 4.. / NX 7..			
				NX 8.. / NX 9..			
				94.12			

KUGLE
TAMBURO
ROTOR (CUBA)
TAMBOUR
TROMMEL
TRUMMA
BOWL

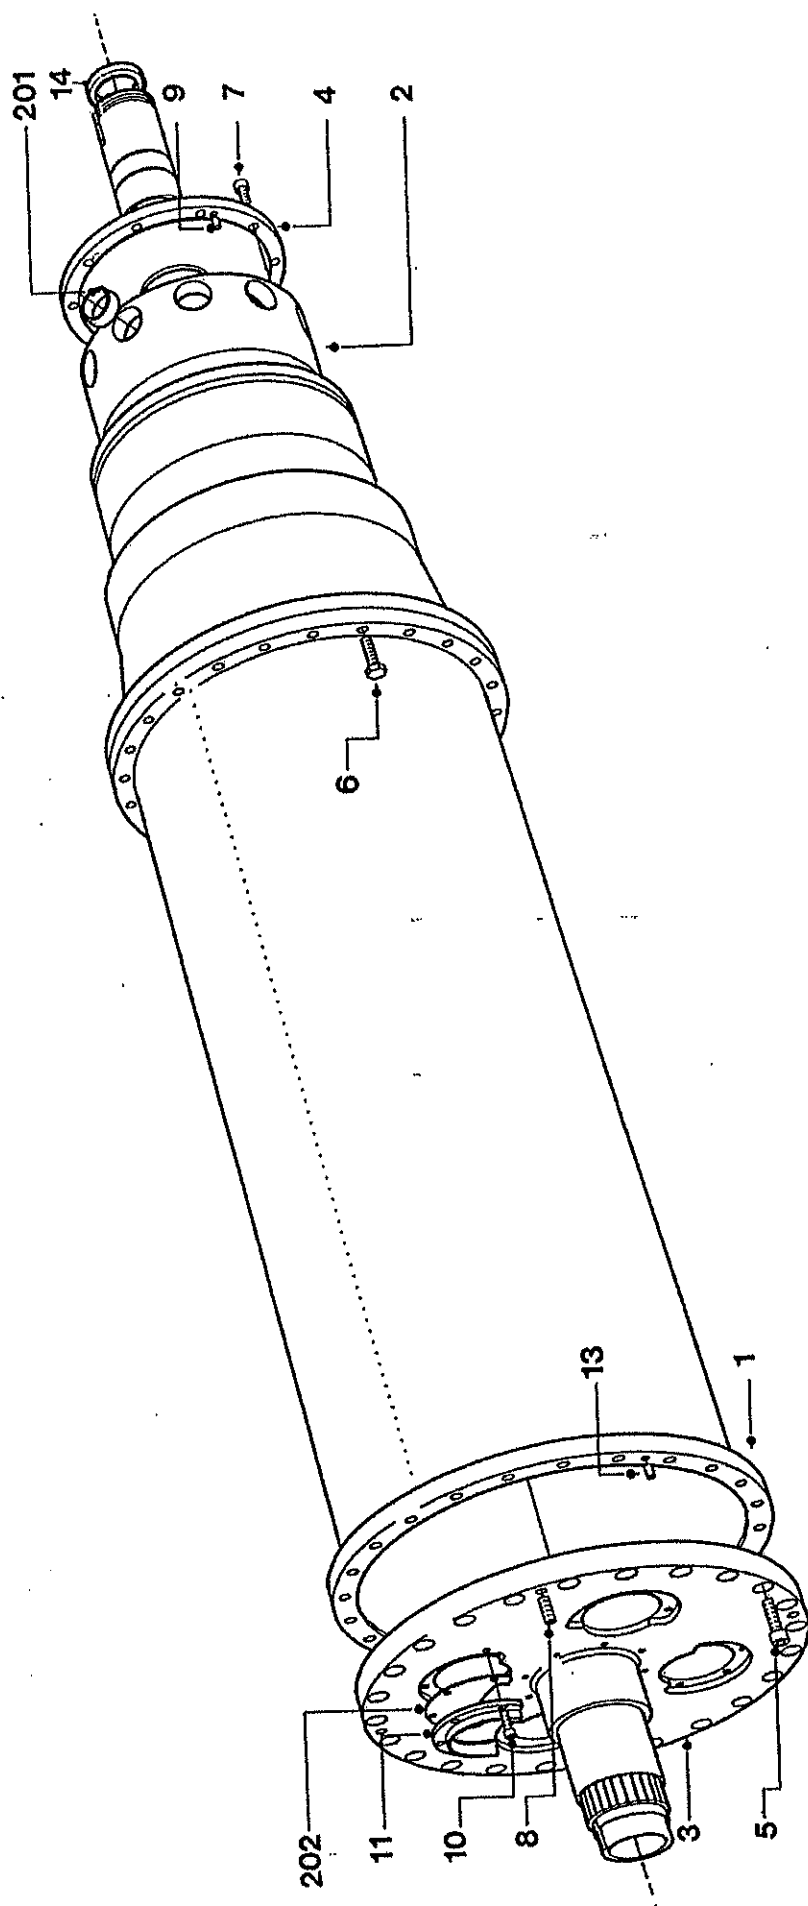

	NX 9..	6123.2494- 80	BOWL Bowl	93.03
				137

GB - English		SE - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DK - Dansk
BOWL		TRUMMA	TROMMEL	TAMBOUR	ROTOR	TAMBURO	KUGLE
Pos.	6123.2494-80	Bowl	Trommel	Tambour	Rotor	Tamburo	Kugle
1	6114.6109-10	Can of "Copaslip" - contents: 0.5 kg	Büchse "Copaslip" - Inhalt: 0.5 Kg	Bidon de "Copaslip" - contenu: 0.5 kg	Lata de "Copaslip" - contenido: 0.5 kg	Latta di "Copaslip" - contenuto: 0.5 kg	Dåse "Copaslip" - indhold: 0.5 kg
1.	6121.2417-80	Cylindrical section	Zylindrischer Teil	Section cylindrique	Sección cilíndrica	Sezione cilindrica	Cylindrisk del
2.	6121.2418-80	Conical section	Konischer Teil	Section conique	Sección cónica	Sezione conica	Konisk del
3.	6123.1647-80	Large end hub	Großes Endstück	Pièce terminale grande	Piazza terminal grande	Pezzo terminale grande	Storegavl
4.	6123.1317-80	Small end hub	Kleines Endstück	Pièce terminale petite	Piazza terminal menor	Pezzo terminale minore	Lillegavl
5.	6119.4069-38	Screw	Schraube	Vis	Tomillo	Vite	Skrue
6.	6119.4069-39	Screw	Schraube	Vis	Tomillo	Vite	Skrue
7.	6119.4069-34	Screw	Schraube	Vis	Tomillo	Vite	Skrue
8.	6119.4082-67	Screw	Schraube	Vis	Tomillo	Vite	Skrue
9.	6119.4082-64	Screw	Schraube	Vis	Tomillo	Vite	Skrue
10.	6119.4068-84	Screw	Schraube	Vis	Tomillo	Vite	Skrue
11.	6123.3468-01	Supporting disc for plate dam	Hjælpebrücke für regleringsbrücke Überlaufschwelle	Disque de support pour plaque de réglage	Disco soporte para borde plano	Disco di sostegno per arginatura piatta	Støtteskive til reguleringsbrik
13.	6119.4502-81	Pin - ingår i pos. 1, 3 och 4	Stift - Teil der pos. 1, 3 und 4	Goupille - partie des pos. 1, 3 et 4	Pasador - parte de las pos. 1, 3 y 4	Spina - parte delle pos. 1, 3 e 4	Stift - indgår i pos. 1, 3 og 4
14.	0052.7034-01	Bushing	Buchse	Douille	Casquillo	Bussola	Bøsning
201.	0007.2881-00	Bushing STELLITE, short, L = 20 mm	Buchse kurz	Douille courte	Casquillo corto	Bussola corta	Bøsning kort
202.	6123.2375-xx	Plate dam - see table 137 v	Überlaufschwelle siehe Tabelle 137 v	Plaque de réglage - voir tableau 137 v	Borde plano - ver tabla 137 v	Arginatura piatta - vedi tabella 137 v	Reguleringsplade - se tabel 137 v
 Alfa Laval		NX 9..		BOWL		93.03	
		6123.2494- 80		Bowl		137 t	

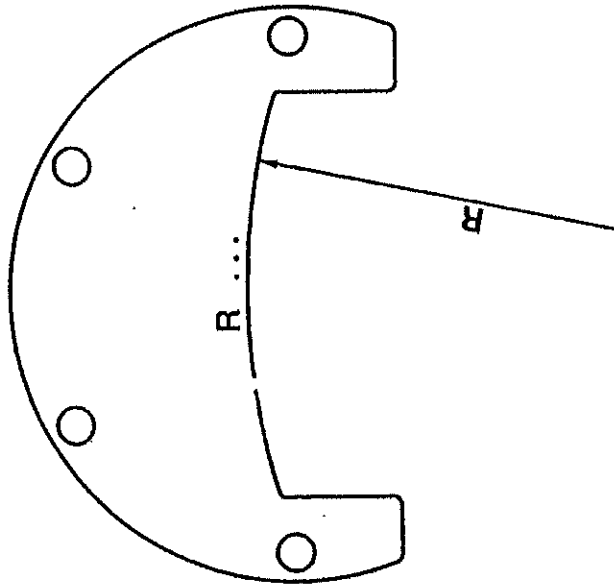

Article No.	R, mm	Article No.	R, mm	Article No.	R, mm
6123.2375-01	126	6123.2375-28	153	6123.2375-55	180
6123.2375-02	127	6123.2375-29	154		
6123.2375-03	128	6123.2375-30	155		
6123.2375-04	129	6123.2375-31	156		
6123.2375-05	130	6123.2375-32	157		
6123.2375-06	131	6123.2375-33	158		
6123.2375-07	132	6123.2375-34	159		
6123.2375-08	133	6123.2375-35	160		
6123.2375-09	134	6123.2375-36	161		
6123.2375-10	135	6123.2375-37	162		
6123.2375-11	136	6123.2375-38	163		
6123.2375-12	137	6123.2375-39	164		
6123.2375-13	138	6123.2375-40	165		
6123.2375-14	139	6123.2375-41	166		
6123.2375-15	140	6123.2375-42	167		
6123.2375-16	141	6123.2375-43	168		
6123.2375-17	142	6123.2375-44	169		
6123.2375-18	143	6123.2375-45	170		
6123.2375-19	144	6123.2375-46	171		
6123.2375-20	145	6123.2375-47	172		
6123.2375-21	146	6123.2375-48	173		
6123.2375-22	147	6123.2375-49	174		
6123.2375-23	148	6123.2375-50	175		
6123.2375-24	149	6123.2375-51	176		
6123.2375-25	150	6123.2375-52	177		
6123.2375-26	151	6123.2375-53	178		
6123.2375-27	152	6123.2375-54	179		

1. 6123.2375-... 1 Plate dam
- liquid radius: see above table

Regleringsbricka
- väskradia: se tabellan ovan

Wehrschwelle - Flüssigkeits-
radius: s. Tabelle oben

Plaques de réglage - Niveau de
liquide: Voir tableau ci-dessus

Placa reguladora - Nivel de
liquido R: ver la tabla arriba

Piastra regolatrice - Livello di
liquido R: vedi tabella qui sopra -
vaskeradius: se tabel ovenfor



NX 9..

6123.2375-..


BOWL

Plate Dam

92.11

137 v


HOVEDLEJER
CUSCINETTI PRINCIPALI
COJINETES PRINCIPALES
PALIERES PRINCIPAUX
HAUPTLAGER
HUVUDLAGER
MAIN BEARINGS

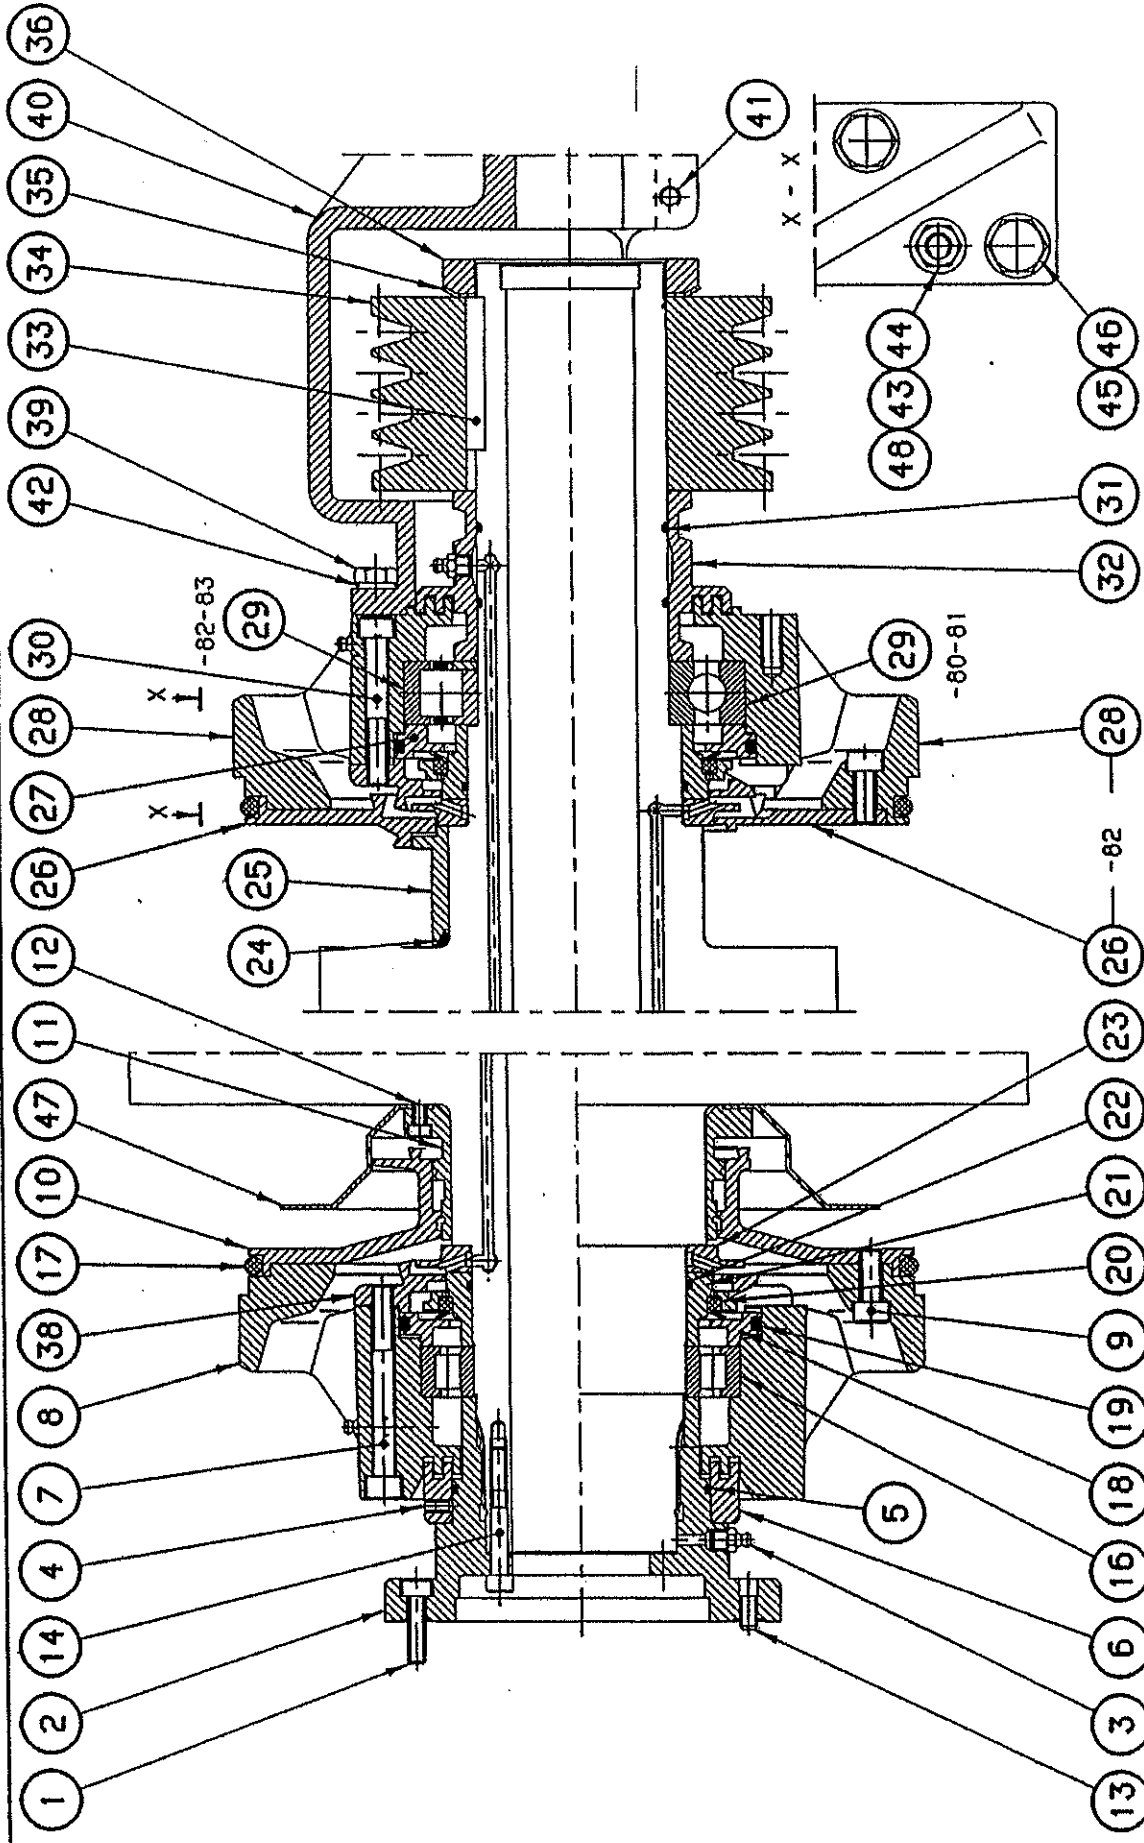

	NX 9..	6123.1651	MAIN BEARINGS Main Bearings	94.06

Pos.	6123.1651-80	GB - English	SE - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DK - Dansk
		MAIN BEARINGS	HUVUDLAGER	HAUPTLAGER	PALIERS PRINCIPAUX	RODAMIENTOS PRINCIPALES	CUSCINETTI PRINCIPALI	HØVEDLEJER
1.	0221.7755-07	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
2.	6123.1643-01	Gearbox adapter	Anpassningsfläns för växellåda	Getriebeflansch	Bride-adaptatrice pour réducteur	Brida ajustadora para reductora	Flangia adattatrice per riduttore	Gearflange
3.	6123.3045-03	Grease nipple	Fedtsmörjningsnippel	Fettschmiernippel	Raccord de graissage	Boquilla de engrase	Ingrassatore	Fedtsmøringsnippel
4.	6119.4082-17	Screw	Skruv	Schraube	Anneau O	Tornillo	Vite	Skru
5.	6116.7209-21	O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
6.	0053.3033-02	Ring	Ring	Ring	Anneau	Anillo	Anello	Ring
7.	6119.4089-21	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
8.	6123.1361-02	Bearing housing	Lagerbox	Lagergehäuse	Boîte à roulement	Aljamiento cojinete	Alloggiamento cuscinetto	Lejehus
9.	6119.4089-10	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
10.	6123.1332-01	Screen	Skärm	Schirm	Ecran	Guarda	Riparo	Skærm
11.	6123.2512-01	Ring	Ring	Ring	Anneau	Anillo	Anello	Ring
12.	6119.4088-61	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
13.	6119.4080-53	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
14.	6119.4059-92	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
15.	0023.3221-22	Roller bearing	Rullager	Rollenlager	Roulement à rouleaux	Rodamiento de rodillos	Cuscinetti a rulli	Rulleleje
16.	6116.7219-91	O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
17.	6120.7358-01	Spacer	Mellanlägg	Zwischenlage	Entretoise	Junta tórica	Distanzador	Afstandsskive/ring-stykke
18.	6116.7214-71	O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
19.	6121.0787-04	V-ring	Tätningsskålare	Dichtungshalter	Anneau V	Anillo V	Anello V	Tætningholder
20.	6120.7357-01	Seal holder	O-ring	O-Ring	Retenue de joint	Sostén de guarnición	Sostegno di guarnizione	O-ring
21.	6116.7208-91	O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
22.	6120.6373-01	Protecting ring	Skyddsring	Schutzring	Anneau protecteur	Anillo protector	Anello O-R	Beskyttelsesring
23.	6116.7213-91	O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
24.	6123.3047-01	Ring	Ring	Ring	Anneau	Anillo	Anello	Ring
25.	6123.1680-01	Screen	Skärm	Schirm	Ecran	Guarda	Riparo	Skærm
26.	6120.7371-01	Spacer	Mellanlägg	Zwischenlage	Entretoise	Distancador	Distanziatore	Afstandsskive/ring-stykke
27.	6123.1689-02	Bearing housing	Lagerbox	Lagergehäuse	Boîte à roulement	Aljamiento cojinete	Alloggiamento cuscinetto	Lejehus
28.	6119.5007-01	Ball bearing	Kuglelager	Kugellager	Roulement à billes	Rodamiento de bolas	Cuscinetto a sfere	Kugleleje
29.	6119.4089-19	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
30.	6116.7208-51	O-ring	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
31.	6123.2176-02	Ring	Ring	Ring	Anneau	Anillo	Anello	Ring
32.	0022.3510-50	Key	Kil	Keil	Clavette	Chaveta	Chiavetta	Feder
33.	6123.2116-01	V-belt pulley	Kilensskiva	Keilmehrscheibe	Poulie à courroie V	Polea de correa en V	Puleggia per cinghia V	Kilensskive
34.	6119.4432-18	Lock washer	Låsbricka	Sicherungsblech	Rondelle de sûreté	Arandela de cierre	Rondella di sicurezza	Låseskive
35.	6119.4340-18	Lock nut	Låsmutter	Sicherungsmutter	Contre-écrou	Contratuercia	Dado autobloccante	Låsemønik
36.	6123.2033-02	Cover	Lock	Deckel	Couvercle	Tapa	Coperchio	Dæksel
37.	6119.4021-07	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
38.	6123.1102-02	Holder	Hållare	Halter	Retenue	Sostén	Sostegno	Holder
39.	6119.4069-12	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
40.	6119.4430-69	Washer	Bricka	Scheibe	Rondelle	Arandela	Rondella	Underlagsskive
41.	6119.4430-69	Washer	Bricka	Scheibe	Rondelle	Arandela	Rondella	Underlagsskive
42.	0022.2208-05	Conical pin	Konisk pinn	Konischer Stift	Goupille conique	Pasador cónico	Spina conica	Konisk stift
43.	6119.4300-10	Nut	Mutter	Mutter	Ecrou	Tuerca	Dado	Metrik
44.	6119.4001-66	Screw	Skruv	Schraube	Vis	Tornillo	Vite	Skru
45.	6119.4430-12	Washer	Bricka	Scheibe	Rondelle	Arandela	Rondella	Underlagsskive
46.	6123.2513-01	Screen	Skärm	Schirm	Ecran	Guarda	Riparo	Skærm
47.	6120.4528-01	Nut cap	Mutterkapsel	Mutterkapsel	Coiffe d'écrou	Caperuza de tuerca	Copriado	Metrikhat
48.								
					MAIN BEARINGS			94.06
					Main Bearings 2.5 kNm			


GEARKASSE
SCATOLA INGRANAGGI
CAJA DE ENGRANAJES
BOITE D'ENGRENAGE
GETRIEBE
VÄXELLÅDA
GEARBOX

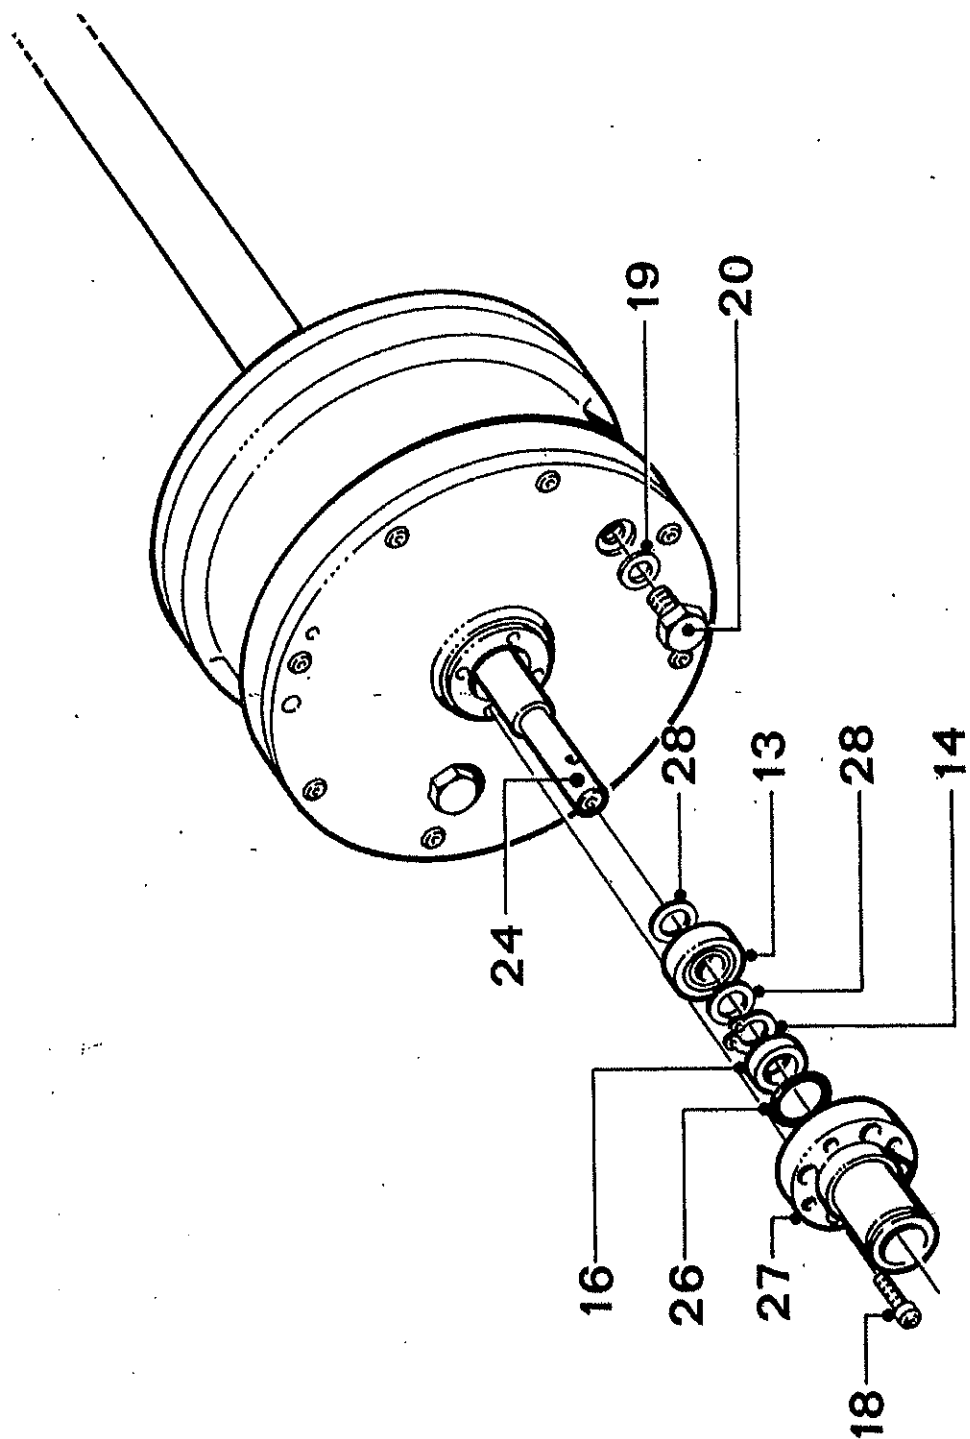

	NX 4.. / NX 7.. NX 8.. / NX 9..	6121.0508-81 / -82	GEARBOX Gearbox, 2.5 kNm	87.12
				5.006

	GB - English	SE - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DK - Dansk
	GEARBOX	VÄXELLÅDA	GETRIEBE	BOÎTE D'ENGRENAGE	CAJA DE ENGRANAJES	SCATOLA INGRANAGGI	GEARKASSE
Pos.	6121.0508-...	Gearbox, complete	Växellåda, komplett	Boîte d'engrenage complète	Caja de engranajes completa	Scatola ingranaggi completa	Gearkasse, komplet
12.	6121.0510-03	Sunwheel shaft - fixed	Sonnenradwelle - fest	Arbre de roue solaire non rotatif	Eje de rueda solar no rotativo	Albero del pignone piccolo non rotativo	Solhjulsaksel - fast
13.	6119.5005-03	Ball bearing	Kugellager	Roulement à billes	Cojinete de bolas	Cuscinetto a sfera	Kugleleje
14.	6119.4450-14	Snap ring	Einschnappring	Bague de retenue	Anillo de retención	Anello di ritagno	Fjederfåsering
15.	0006.6219-00	Sealing cover	Dichtungsdeckel	Couvercle d'étanchement	Tapa de guarnición	Coperchio di guarnizione	Tætningsdæksel
16.	6116.7323-24	Lip seal ring	Lippendichtungsring	Joint à levre	Anillo de cierre labial	Anello di tenuta labiale	Læbetætningsring
17.	0006.6220-00	Seal	Dichtung	Bord d'étanchéité	Guarnición	Guarnizione	Pakning
18.	0221.7751-03	Screw	Schraube	Vis	Tornillo	Vite	Skrue
19.	0052.2591-02	Seal	Dichtung	Bord d'étanchéité	Guarnición	Guarnizione	Pakning
20.	6120.4027-03	Screw plug	Gewindestöpsel	Bouchon fileté	Tapón roscado	Tappo a vite	Skrueprop
24.	6120.8250-04	Sunwheel shaft - rotating	Sonnenradwelle - rotierend	Arbre de roue solaire rotatif	Eje de rueda solar rotativo	Albero del pignone piccolo rotativo	Solhjulsaksel - roterende
24.	6121.2387-04	Sunwheel shaft	Sonnenradwelle	Arbre de roue solaire	Eje de rueda solar	Albero del pignone piccolo	Solhjulsaksel
26.	6116.7207-11	O-ring	O-Ring	Anneau O	Junta tórica	Anello O-R	O-ring
27.	6120.7533-01	Navé for countershaft transmission or for GS coupling (GS clutch)	Nabe für Transmissionsvorgelege oder für GS-Kupplung	Moyau pour transmission par arbre de renvoi ou pour accouplement GS	Maza para Transmisión de contraeje o para acoplamiento GS	Mozzo per trasmissione a contraalbero o per accoppiamento GS	Nav til drev med forlægsstær eller GS-kobling
28.	6119.4423-14	Retaining disc	Sicherungsscheibe	Disque de retenue	Disco de retención	Disco di ritagno	Holdestkive
				GEARBOX		91.03	
NX 4.. / NX 7..				Gearbox, 2,5 kNm		5.007	
NX 8.. / NX 9..							

TRANSPORTØRDRIFT
AZIONAMENTO DELLA COCLEA
ACCIONAMIENTO DEL TORNILLO TRANSPORTADOR
ENTRAINEMENT DE LA VIS TRANSPORTEUSE
FÖRDERSCHNECKENANTRIEB
TRANSPORTÖRDRIFT
BACK DRIVE

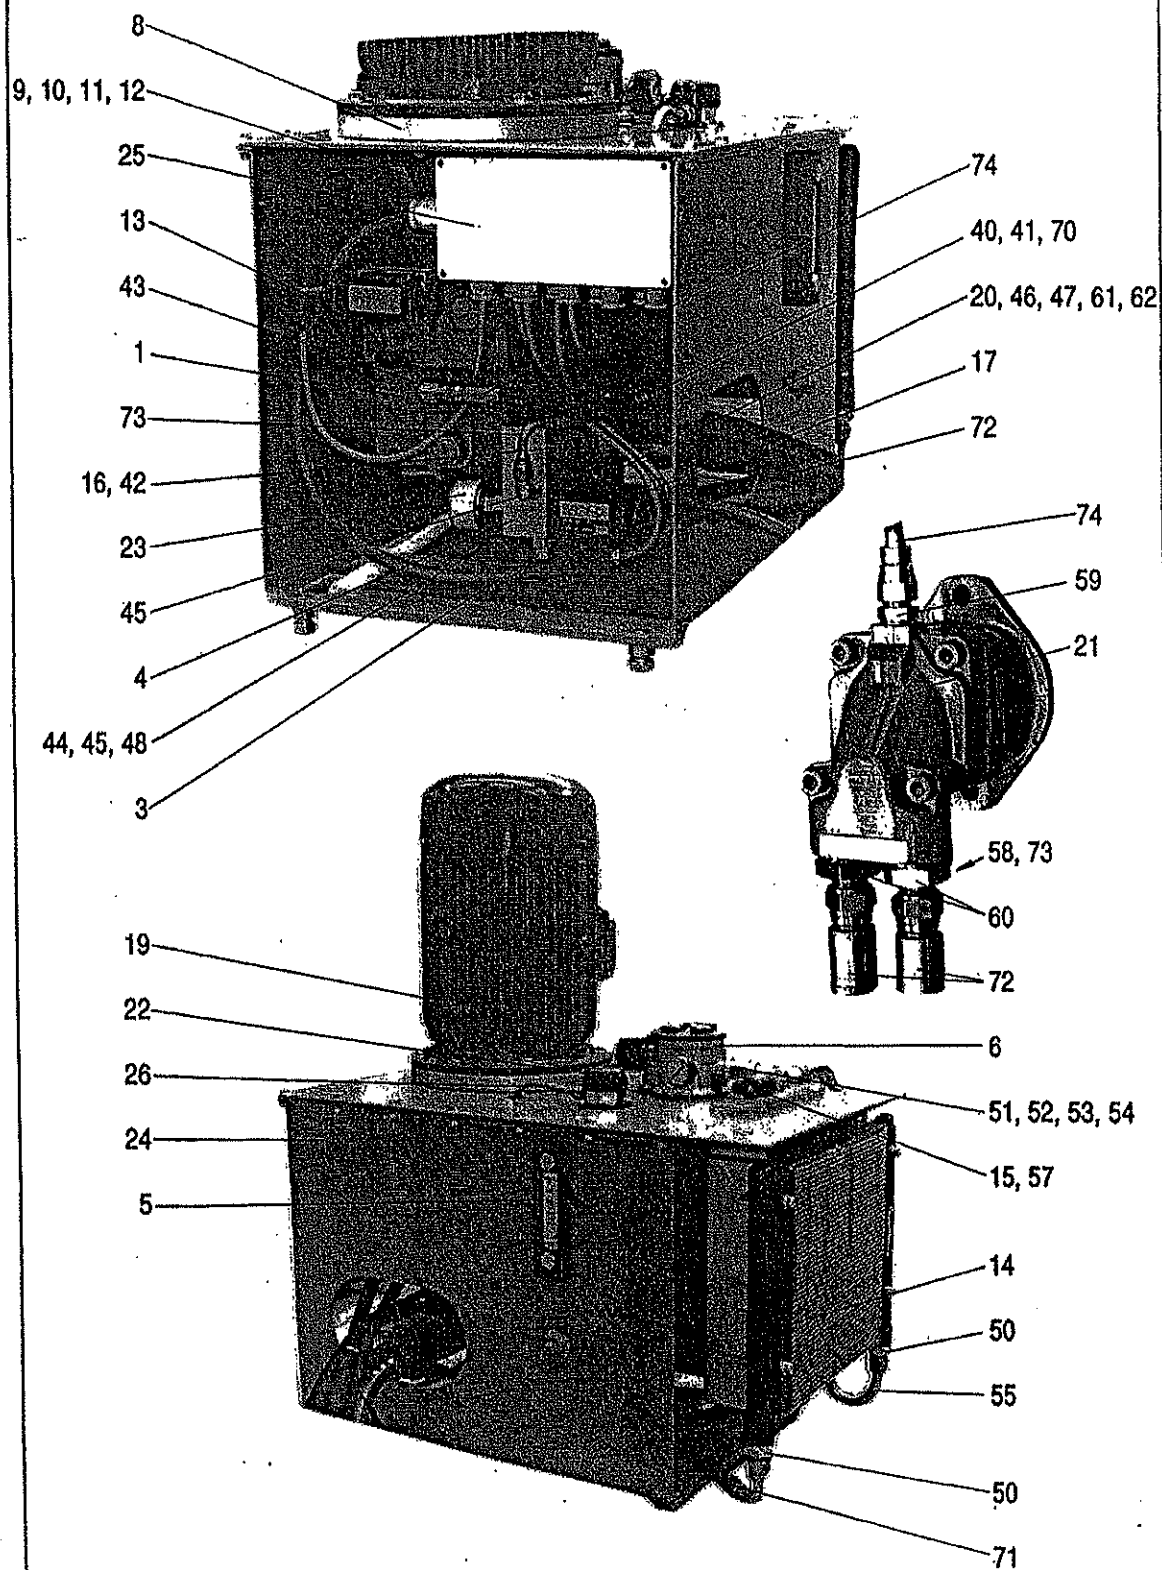

93.09

300-003

BACK DRIVE

Complete Hydraulic System, 2.5 kNm


6120.8897- 80 /- 81

NX 4..

NX 8.. / NX 9..


Alfa Laval

GB - English	SE - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DK - Dansk
BACK DRIVE	SOLHJULSDRIFT	SONNENRADANTRIEB	ENTRAÎNEMENT DE LA ROUE SOLAIRE	ACCIONAMIENTO DE LA RUEDA SOLAR	AZIONAMENTO DEL PIGNONE CENTRALE	SOLHJULSDRIFT
Complete hydraulic system, 2.5 kNm	Komplett hydrauliskt system	Komplettes Hydrauliksystem	Système hydraulique complet	Sistema hidráulico completo	Sistema idraulico	Komplet hydrauliksystem
Pos. 6120.8897-80						
1. 6120.8897-01	Pump	Pumpe	Pompe	Bomba	Pompa	Pumpe
3. 6120.8897-03	Trykveksventil	Umschaltventil	Vanne à deux voies	Válvula de dos vías	Valvola a due vie	Skiftventil
4. 6120.8897-04	Valve block	Ventilblock	Bloc de vanne	Bloque de válvula	Blocco di valvola	Ventilblok
5. 6120.3216-12	Synglas	Schauglas	Visueur	Minilla	Vetro spia	Skueglas
6. 6120.8897-06	Återströmingsfilter	Rücklauffilter	Filtre de retour	Filtro de retorno	Filtro di ritorno	Returfilter
6.1 6120.8848-14	Filterelement	Filterelement	Corps de filtre	Elemento de filtro	Elemento di filtro	Filterelement
8. 6120.3270-31	Fläns för lock	Deckelflansch	Bride du couvercle	Brida de la tapa	Flangia del coperchio	Flange for dæksel
9. 6120.8897-09	Lock	Deckel	Couvercle	Tapa	Coperchio	Dæksel
10. 6120.3270-33	Gummielement for coupling	Gummielement für Kupplung	Corps en caoutchouc pour accouplement	Elemento de goma para acoplamiento	Elemento di gomma per accoppiamento	Gummielement til kobling
11. 6120.8897-11	Kopplingsdel	Kupplungssteil	Partie d'accouplement	Parte de acoplamiento	Parte d'accoppiamento	Koblingsdel
12. 6120.8897-12	Kopplingsdel	Kupplungssteil	Partie d'accouplement	Parte de acoplamiento	Parte d'accoppiamento	Koblingsdel
13. 6120.8897-13	Vinkelpluggkoppling for servoventil	Winkelsteckkupplung für Servoventil	Raccordement à fiches angulaire pour servovalve	Racor de enchufe angular para servoválvula	Raccordo angolare di contatto a spina per servovalvola	Vinkelsik for servovenlil
14. 6120.8897-14	Luftkøler	Luftkühler	Réfrigérant à air	Enfriador de aires	Raffreddatore ad aria	Luftkøler
15. 6120.8897-15	Termostat	Thermostat	Thermostat	Termostato	Termostato	Termostat
16. 6120.8897-16	Fläns	Flansch	Bride	Brida	Flangia	Flange
17. 6120.3270-05	Pressostat	Pressostat	Pressostat	Pressostato	Pressostato	Pressostat
19. 6120.8897-19	Elmotor	Elektromotor	Moteur électrique	Motor eléctrico	Motore elettrico	Elektromotor
19. 6120.8897-20	Elmotor	Elektromotor	Moteur électrique	Motor eléctrico	Motore elettrico	Elektromotor
20. 6120.3270-06	Manometer	Manometer	Manomètre	Manómetro	Manometro	Manometer
			BACK DRIVE		93.09	300-003 a
NX 4..			Complete Hydraulic System, 2.5 kNm			
NX 8.. / NX 9..			6120.8897- 80 /- 81			

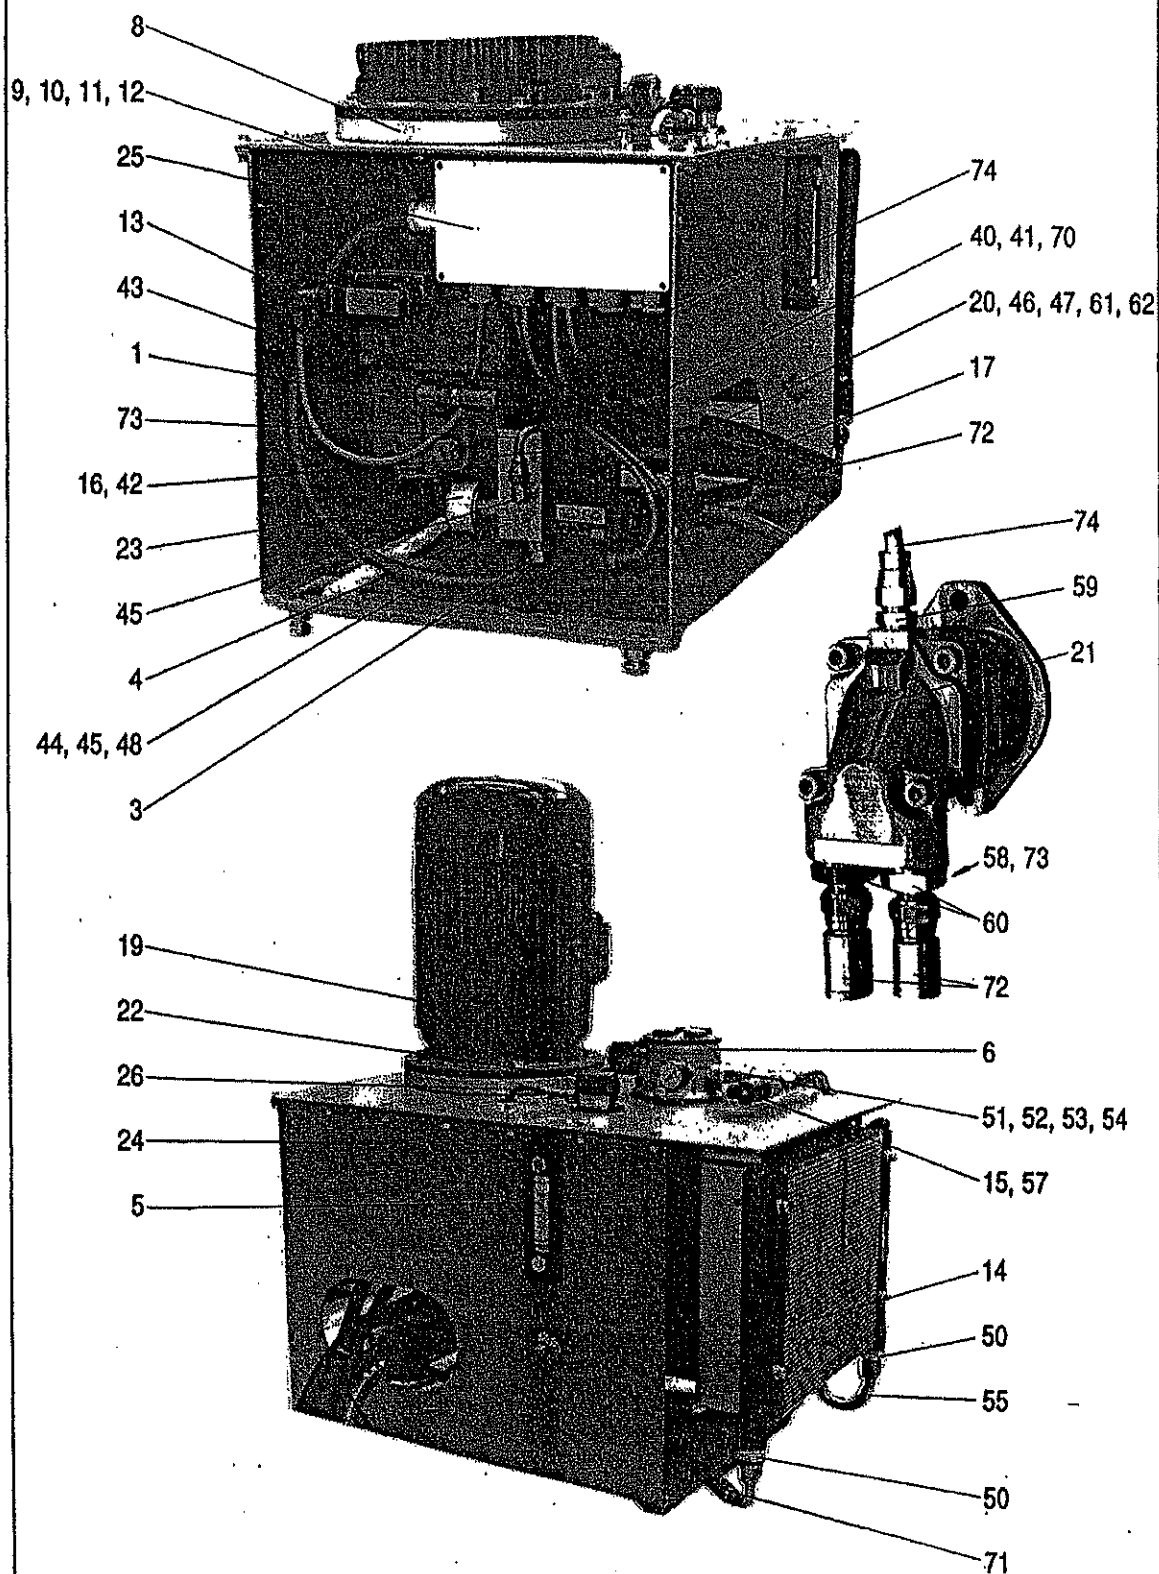


93.09	300-003
BACK DRIVE	Complete Hydraulic System, 2.5 kNm
6120.8897-80 / - 81	
NX 4.. NX 8.. / NX 9..	
	

GB - English		SE - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DK - Dansk
		HAC					
BACK DRIVE		SOLJULSDRIFT	SONNENRADANTRIEB	ENTRAÎNEMENT DE LA ROUE SOLAIRE	ACCIONAMIENTO DE LA RUEDA SOLAR	AZIONAMENTO DEL PIGNONE CENTRALE	SOLJULSDRIFT
Pos.	6120.8897-80	Complete hydraulic system, 2.5 kNm	Komplett hydrauliskt system	Système hydraulique complet	Sistema hidráulico completo	Sistema idraulico	Komplet hydraulisksystem
21.	6120.8897-21 -22	Pump, VOLVO 1 AL C306 (6120.8897-80) 1 AL C303 (6120.8897-81)	Pumpe	Pompe	Bomba	Pompa	Pumpe
22.	6120.3270-16	Level and Temperature switch	Nivå- och termobrytare	Interrupteur de niveau et Thermomrupteur	Interruptor de nivel y de temperatura	Interruttore de livello e termico	Niveau- og termokontakt
23.	6120.8862-19	Pressure transmitter	Trykkmåtværdsgivare	Transmetteur de pression	Transmisor de presión	Trasmettitore di pressione	Tryktransmitter
24.	6120.8897-24 -27	Oil tank 1 AL C306 (6120.8897-80) 1 AL C303 (6120.8897-81)	Öbehållar	Réservoir de huile	Cisterna para aceite	Seratoio per olio	Oljetank
24.1	6120.8897-28 -29	Guard for oil tank 1 AL C306 (6120.8897-80) 1 AL C303 (6120.8897-81)	Skydd för oljetank	Garde pour réservoir de huile	Guardia de la cisterna p. aceite	Protezione del seratoio per olio	Skærm til oljetank
25.	6120.8897-25	Electrical junction box, complete	Elektrisk Abzweigdose/komplett	Boîte de branchement électrique complète	Caja de conexiones eléctricas completa	Scatola terminale elettrica completa	Elektriskasse, komplet
26.	6120.8897-26	Runner bush	Gummibussning	Douille en caoutchouc	Casquillo de goma	Bussola di gomma	Gummistyle (gennemføring)
		NX 4..	BACK DRIVE		93.09		
		NX 8.. / NX 9..	6120.8897- 80 / - 81		Complete Hydraulic System, 2.5 kNm		
					300-003 b		

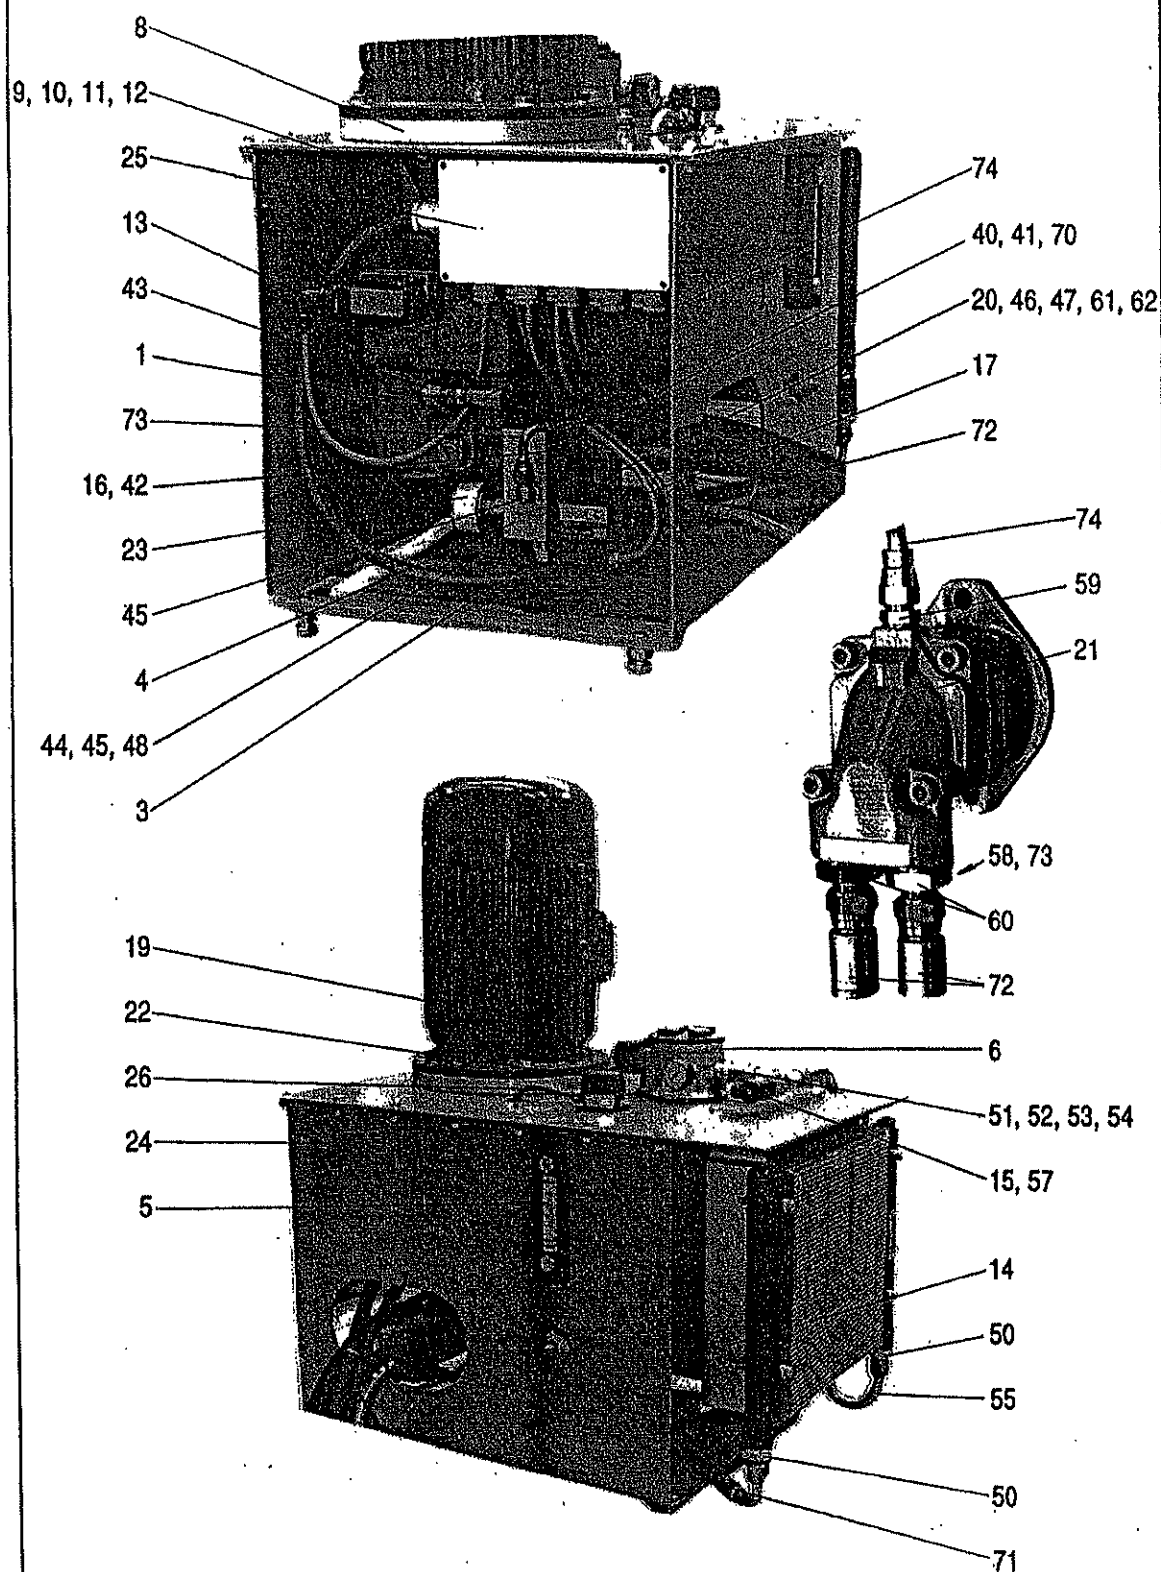

93.09	300-003
BACK DRIVE Complete Hydraulic System, 2.5 kNm	
6120.8897- 80 /- 81	
NX 4..	NX 8.. / NX 9..
	

GB - English	SE - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DK - Dansk
BACK DRIVE	SOLHJULSDRIFT	SONNENRADANTRIEB	ENTRAÎNEMENT DE LA ROUE SOLAIRE	ACCIONAMIENTO DE LA RUEDA SOLAR	AZIONAMENTO DEL PIGNONE CENTRALE	SOLHJULSDRIFT
Complete hydraulic system, 2.5 kNm	Komplett hydrauliskt system 2.5 kNm	Komplettes Hydrauliksystem	Système hydraulique complet	Sistema hidráulico completo	Sistema idraulico	Komplet hydraulisksystem
Pos. 6120.8897-80						
Fittings:	Rörkopplingar:	Fittings:	Raccords de tuyauterie:	Accesorios para tubería:	Accessori per tubazioni:	Fittings:
40 - 74						
Pos. 40 - 48						
SAUER + Valve block	SAUER + Ventilblock:	SAUER + Bloc de vanne:	SAUER + Bloc de valve:	SAUER + Bloque de válvula:	SAUER + Blocco di valvola:	SAUER + Ventilblok:
1 Straight joint	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento retto	Lige forskrning
1 Dowty seal ring	Dowty tätningssing	Dowty-Dichtungsring	Joint d'étanchéité Dowty	Anillo de cierre Dowty	Anello di tenuta Dowty	Dowty-tætningsring
2 Straight joint	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento retto	Lige forskrning
2 Angular joint, 90°	Vinkelkoppling	Winkelrohrverbindung	Joint angulaire	Acoplamiento angular	Accoppiamento angolare	Vinkelforskning
1 Angular joint, 90°	Vinkelkoppling	Winkelrohrverbindung	Joint angulaire	Acoplamiento angular	Accoppiamento angolare	Vinkelforskning
2 Angular joint, 90°	Vinkelkoppling	Winkelrohrverbindung	Joint angulaire	Acoplamiento angular	Accoppiamento angolare	Vinkelforskning
1 Straight joint	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento retto	Lige forskrning
1 Straight joint	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento retto	Lige forskrning
1 Tube	Rör	Rohr	Tuyau	Tubo	Tubo	Rør
40 - 48						
Pos. 50	Kylare:	Kühler:	Réfrigérant:	Enfriador:	Raffreddatore:	Køler:
2 Straight joint	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento retto	Lige forskrning
Pos. 51 - 57	Filter:	Filter:	Filter:	Filter:	Filter:	Filter:
1 Reducing joint	Reducershydra	Reduktionskupplung	Joint de réduction	Acoplamiento de reducción	Manicotto di riduzione	Reduktionsforskning
1 Straight joint	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento retto	Lige forskrning
1 Straight joint	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento retto	Lige forskrning
1 T-joint	T-koppling	T-Rohrverbindung	Joint à T	Acoplamiento T	Accoppiamento T	T-forskning
1 Tube	Rör	Rohr	Tuyau	Tubo	Tubo	Rør
1 Dowty seal ring	Dowty tätningssing	Dowty-Dichtungsring	Joint d'étanchéité Dowty	Anillo de cierre Dowty	Anello di tenuta Dowty	Dowty-tætningsring
51. 6120.8897-51						
52. 6120.8897-52						
53. 6120.8897-53						
54. 6120.8897-54						
55. 6120.8897-55						
57. 6120.3227-18						
			BACK DRIVE		93.09	
NX 4..			Complete Hydraulic System, 2.5 kNm		300-003 c	
NX 8.. / NX 9..						

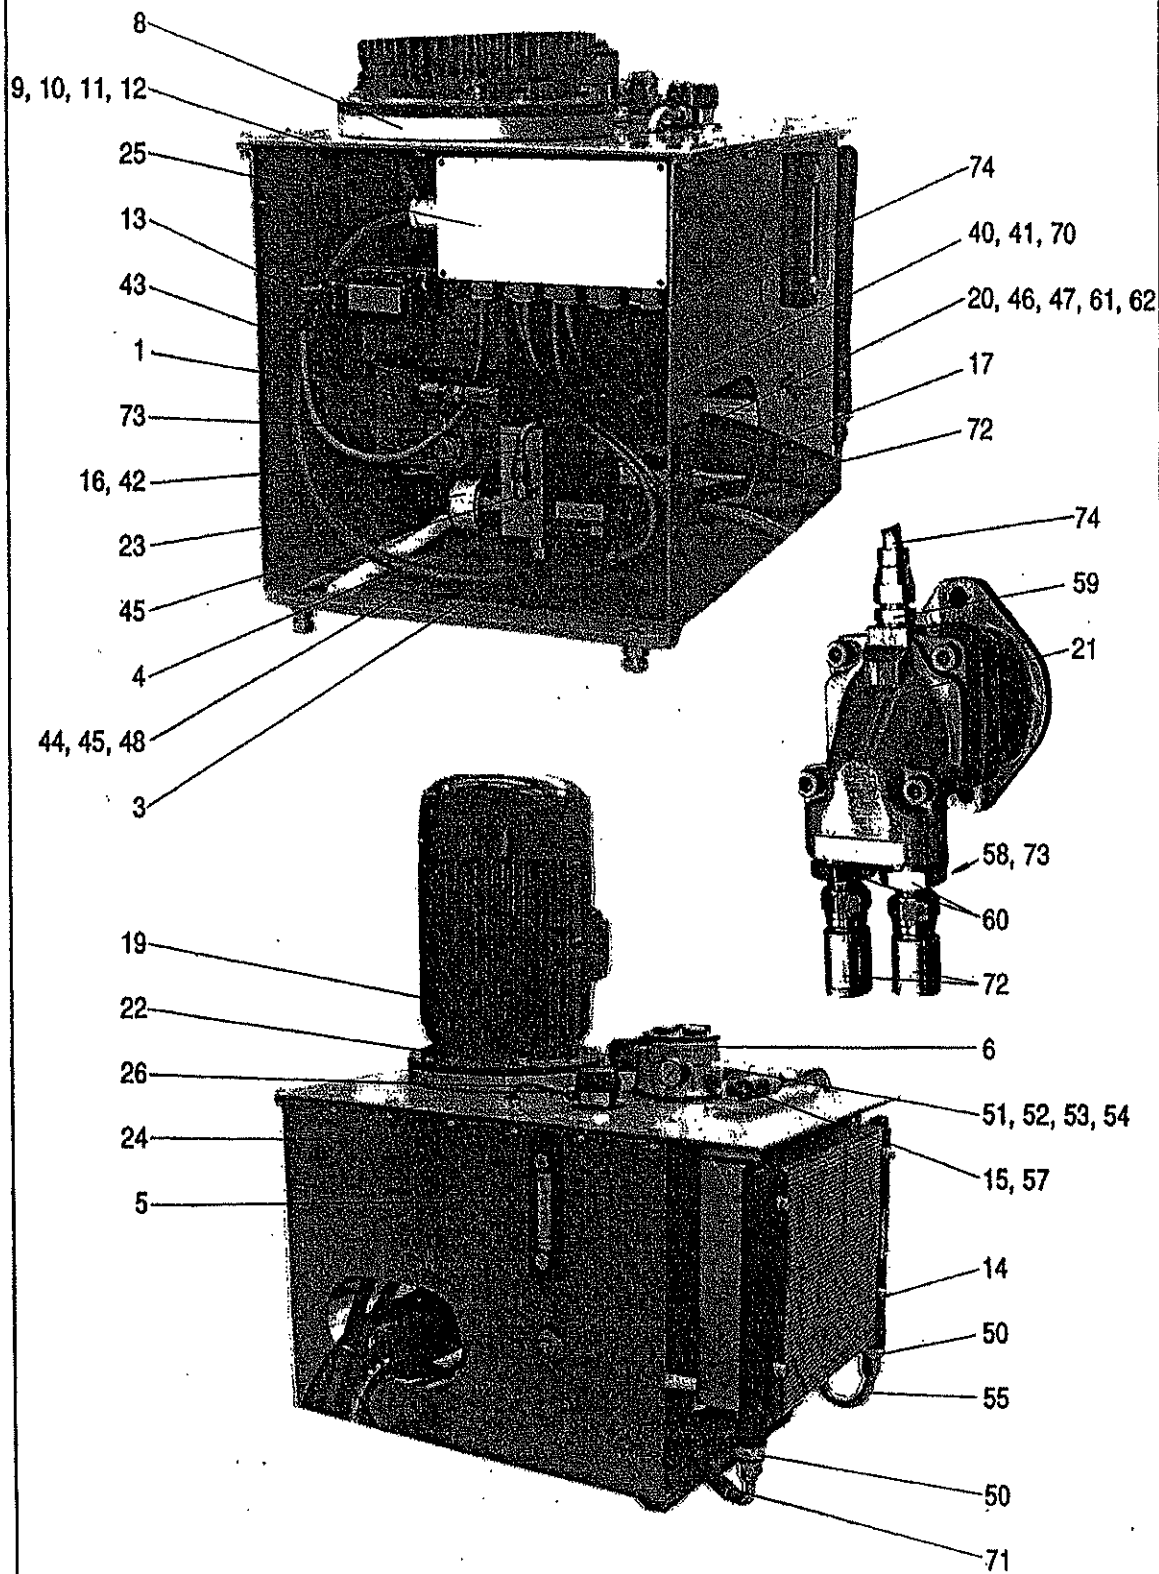

93.09

300-003

BACK DRIVE

Complete Hydraulic System, 2.5 kNm

6120.8897- 80 /- 81


NX 4..

NX 8.. / NX 9..

Alfa Laval

GB - English		SE - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DK - Dansk
BACK DRIVE		SOLHJULSDRIFT	SONNENRADANTRIEB	ENTRAÎNEMENT DE LA ROUE SOLAIRE	ACCIONAMIENTO DE LA RUEDA SOLAR	AZIONAMENTO DEL PIGNONE CENTRALE	SOLHJULSDRIFT
Pos.	6120.8897-80	Komplett hydraulisk system, 2.5 kNm	Komplettes Hydrauliksystem	Système hydraulique complet	Sistema hidráulico completo	Sistema idraulico	Komplet hydrauliksystem
Pos.	40 - 74	Rörkopplingar:	Fittings:	Raccords de tuyauterie:	Accesorios para tubería:	Accessori per tubazioni:	Fittings:
Pos.	58 - 60	VOLVO pump:	VOLVO-Pumpe:	Pompe VOLVO:	Bomba VOLVO:	Pompa VOLVO:	VOLVO-pumpe:
58.	6120.3270-53	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento rito	Lige forskruting
59.	6120.3216-40	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento rito	Lige forskruting
60.	6120.3270-48	Rak koppling	Gerade Rohrverbindung	Joint à plat	Acoplamiento recto	Accoppiamento rito	Lige forskruting
Pos.	61, 62	Provtagskopplingar:	Probeentnahmekupplungen:	Joints d'échantillonnage:	Acoplamientos de catadura:	Accoppiamenti di seggio:	Testudtag:
61.	6120.8897-61	T-koppling	T-Rohrverbindung	Joint à T	Acoplamiento T	Accoppiamento T	T-forskruting
62.	6120.8897-62	Provstubs	Probestutzen	Raccord d'échantillonnage	Tubaladura de catadura	Raccordo di seggio	Provvestuds
Pos.	70 - 74	Slanger:	Schläuche:	Tuyaux flexibles:	Mangueras:	Tubi flessibili:	Slanger:
70.	6120.8897-70	Sugslang	Saugschlauch	Tuyau aspirateur	Manguera de aspiración	Manichetta d'aspirazione	Sugeslange
71.	6120.8897-71	Tryckslang till kylare	Druckschlauch zum Kühler	Tuyau à pression au réfrigérant	Manguera de presión al enfriador	Tubo flessibile di mandata al raffreddatore	Tilgang til køler
72.	6120.3270-77	Tryckslang från ventilblock A+B till VOLVO	Druckschlauch vom Ventilblock A+B zur VOLVO	Tuyau à pression entre bloc de vannes A+B et VOLVO	Manguera de presión entre blo- que de válvula A+B y VOLVO	Tubo flessibile di mandata fra blocco di valvola A+B e VOLVO	Trykslange fra ventilblok A+B til VOLVO
73.	6120.8897-73	Spöslang från ventilblock till VOLVO	Spülschlauch vom Ventilblock zur VOLVO	Tuyau flexible de lavage du bloc de vannes à la VOLVO	Manguera de lavado del bloque de válvula a la VOLVO	Tubo flessibile di lavaggio dal blocco di valvola alla VOLVO	Skylleslange fra ventilblok til VOLVO
74.	6120.8897-74	Avloppsslang från VOLVO till SAUER	Abfußschlauch von der VOLVO zur SAUER	Tuyau flexible de drainage entre VOLVO et SAUER	Manguera de drenaje entre VOLVO y SAUER	Tubo flessibile di drenaggio fra VOLVO e SAUER	Dreanslange fra VOLVO til SAUER
		NX 4..	6120.8897- 80 /- 81	BACK DRIVE		93.09	
		NX 8.. / NX 9..		Complete Hydraulic System, 2.5 kNm		300-003 d	

STATIV
FUSTO
ARMAZON
BATI
GESTELL
STATIV
FRAME

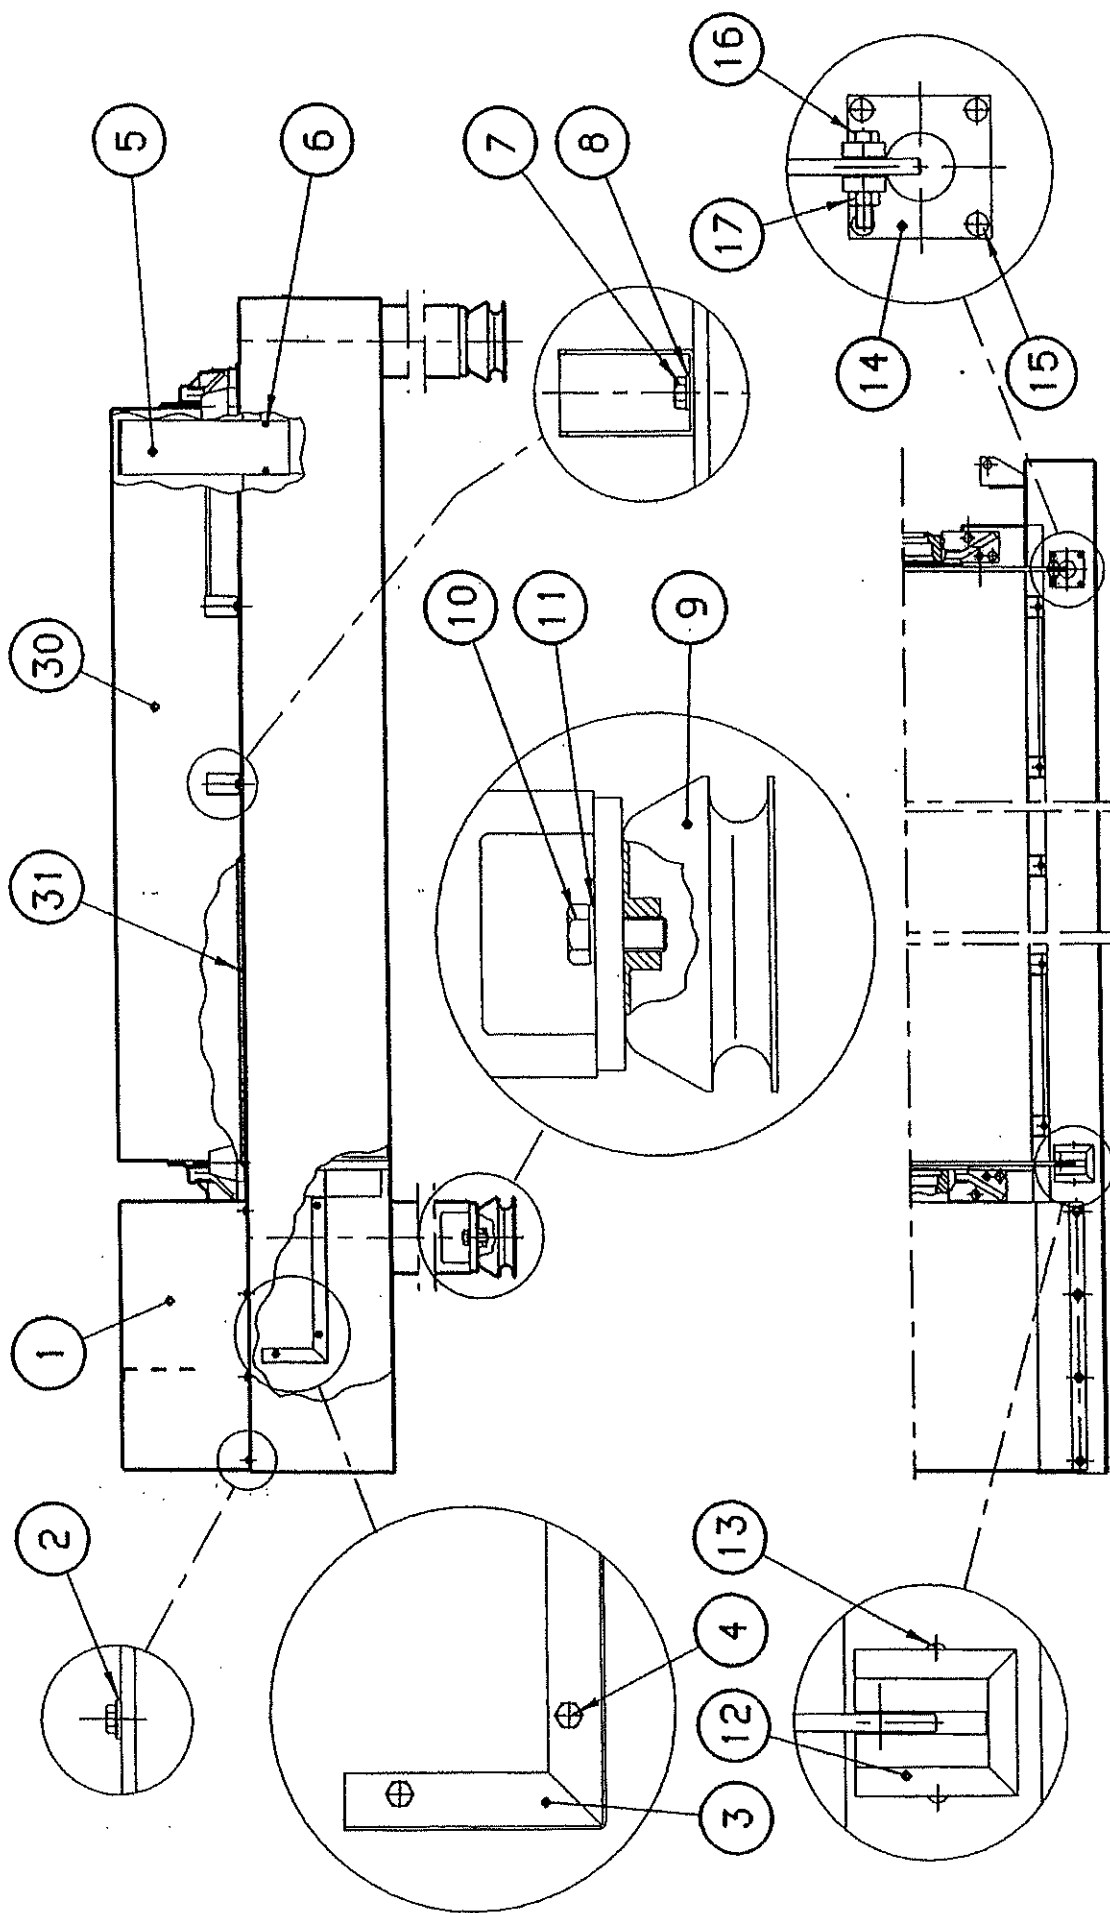

94.12

FRAME AND CASING
Upper Casing
Mounting Parts

6123.1650
6123.1648

NX 8.. / NX 9..

Alfa Laval

EN - English		SV - Svensk	DE - Deutsch	FR - Français	ES - Español	IT - Italiano	DA - Dansk
Pos.	6123.1648-80	MONTAGEDELAR	MONTAGETEILE	PIECES DE MONTAGE	PIEZAS DE MONTAJE	PEZZI DI MONTAGGIO	MONTERINGSDELE
30.	6123.1650-80	1 Upper part of casing (cover)	Geräßoberteil (Deckel)	Boîtier supérieur (couvercle)	Cáster superior (tapa)	Carter superiore (copertchio)	Karoverdel (låg)
31.	6123.3566-01	1 Gasket	Dichtung	Joint	Guarnición	Guarnizione	Pakning
1.	6123.1896-80	1 Guard	Schutzkappe	Garde	Protección	Protezione	Skærm
2.	6119.4021-06	8 Screw	Schraube	Vis	Tornillo	Vite	Skruer
3.	6123.1890-02	1 Guard	Schutzkappe	Garde	Protección	Protezione	Skærm
4.	6119.4001-05	6 Screw	Schraube	Vis	Tornillo	Vite	Skruer
5.	6123.2437-01	1 Solids outlet liner	Sedimentablaßinnenbekleidung	Revêtement de la sortie pour solides	Rivestimiento interior de la salida de sólidos	Rivestimento interno dello scarico di solidi	Sedimentudløbsforing
6.	6119.4021-07	4 Screw	Schraube	Vis	Tornillo	Vite	Skruer
7.	6119.4021-32	10 Screw	Schraube	Vis	Tornillo	Vite	Skruer
8.	6119.4403-10	10 Washer	Scheibe	Rondelle	Arandela	Rondella	Underlagsskive
9.	6120.7468-02	4 Vibration damper	Schwingungsdämpfer	Amortisseur vibrations	Amortiguador	Ammortizzatore	Vibrationsdæmper
10.	6119.4002-23	4 Screw	Schraube	Vis	Tornillo	Vite	Skruer
11.	6119.4430-16	4 Washer	Scheibe	Rondelle	Arandela	Rondella	Underlagsskive
12.	6123.3602-01	2 Housing	Gehäuse	Boîte	Caja	Copertchio	Hus
13.	6119.4088-22	4 Screw	Schraube	Vis	Tornillo	Vite	Skruer
14.	6123.2451-01	2 Bracket	Träger	Console	Ménsula	Mensola	Konsol
15.	6119.4069-11	8 Screw	Schraube	Vis	Tornillo	Vite	Skruer
16.	6119.4021-40	4 Screw	Schraube	Vis	Tornillo	Vite	Skruer
17.	6119.4342-09	4 Nylon nut	Sicherungsmutter mit Nylon	Ecrou de serrage avec nylon	Tuerca de seguridad con nylon	Dado di sicurezza con nylon	Sikringsmøtrik med nylon
				FRAME AND CASING			
				Upper Casing Mounting Parts			
NX 8.. / NX 9..				6123.1650- 80 6123.1648- 80			
				94.12			

