




5 Separator bowl, "Purifier", with wing insert

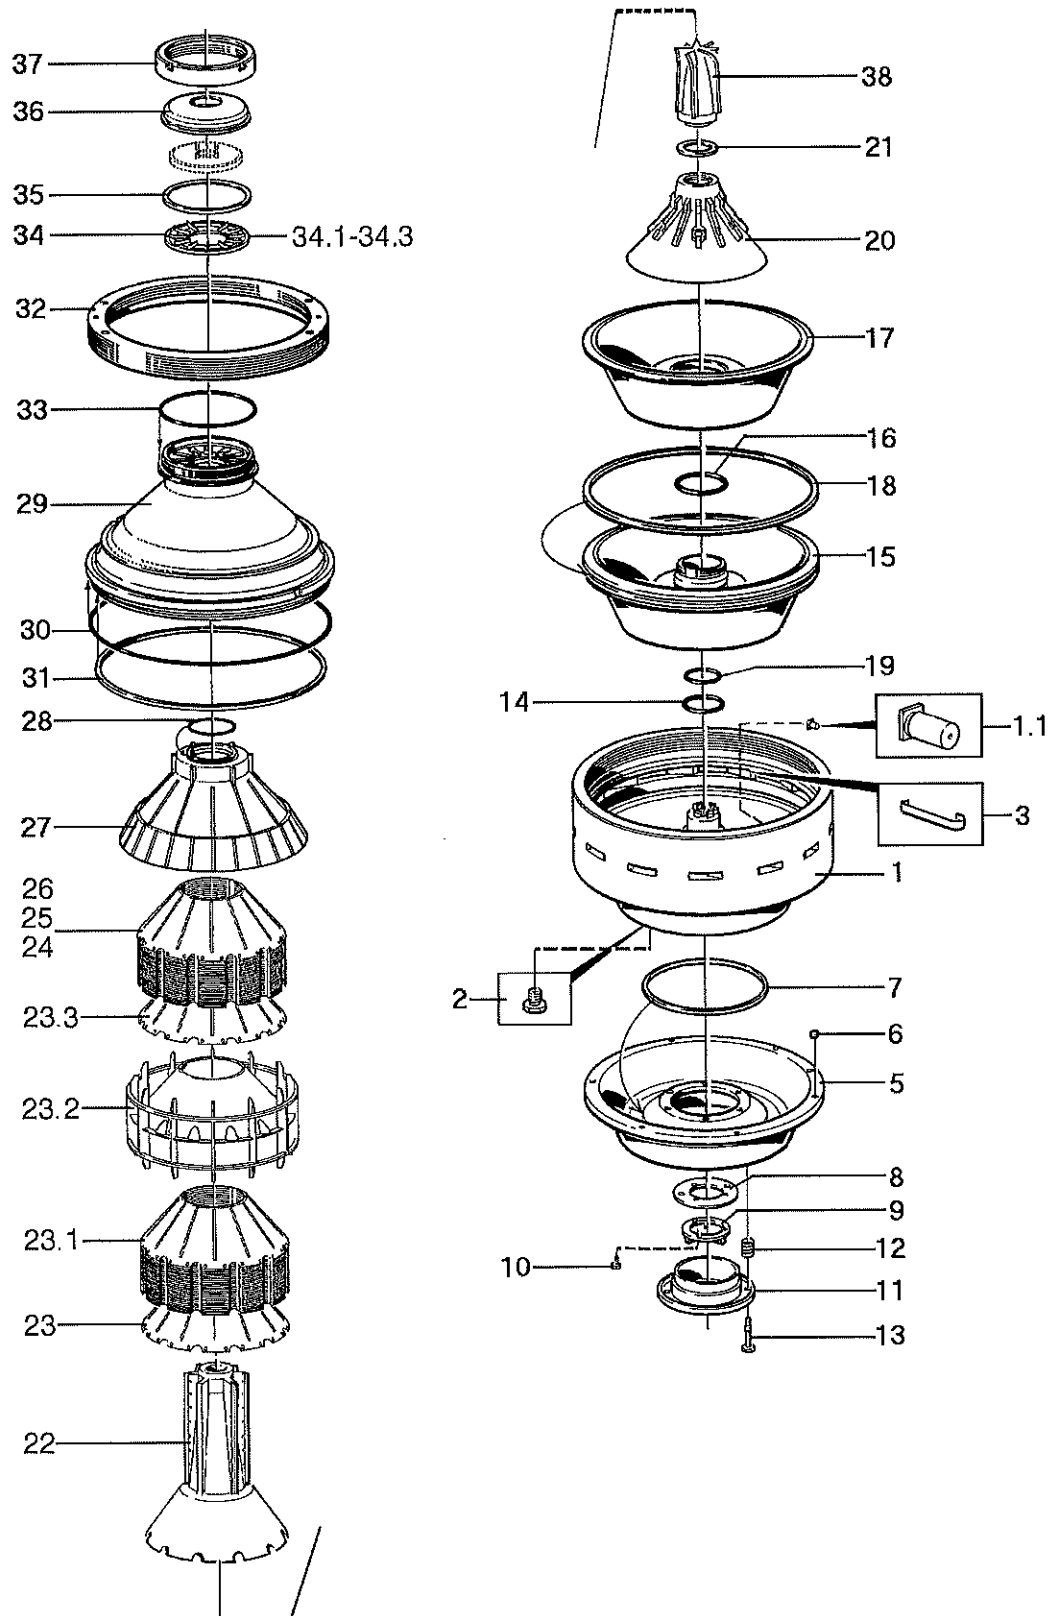


6 Separator bowl, "Concentrator"

Ref	Part No	Description	Machine unit number or Subassembly description 545247-				Notes
			-06	-07	-04	-15	
		Caulks 0,6 mm, holes at Ø 293 mm	↓				
		Caulks 1,0 mm		↓			
		Caulks 2,0 mm			↓		
		Caulks 0,6 mm, holes at Ø 250 mm			↓		
1	543769 83	Bowl body	1	1	1	1	C
1.1	537623 01	Guide lug	1	1	1	1	
2	538124 06	Nozzle Ø 2,5 mm	3	3	3	3	
3	536740 01	Wear protection	12	12	12	12	
5	543404 02	Operating slide	1	1	1	1	B
6	537838 07	Valve plug	6	6	6	6	
7	543422 03	Rectangular ring	1	1	1	1	
8	543343 01	Gasket	1	1	1	1	
9	529608 01	Sleeve with wings	1	1	1	1	
10	221131 03	Screw	3	3	3	3	
11	541690 81	Spring support	1	1	1	1	B
12	226214 74	Spring	24	24	24	24	
13	528168 02	Screw	6	6	6	6	
14	223412 25	O-ring	1	1	1	1	
15	541916 04	Sliding bowl bottom	1	1	1	1	
16	223412 31	O-ring	1	1	1	1	
17	529607 02	Lining	1	1	1	1	
18	523116 04	Rectangular ring	1	1	1	1	
19	72354	Rectangular ring	1	1	1	1	
20	529765 81	Distributing cone	1	1	1	1	B
21	223330 03	Gasket	1	1	1	1	
22	540297 02	Distributor	1	1	1	1	B
22	540297 04	Distributor				1	
23	538563 03	Bowl disc, caulks 2,0 mm			1		
23	538563 06	Bottom disc, caulks 1,0 mm		1			
23	538563 10	Bowl disc, caulks 0,6 mm	1				
23	575351 83	Bottom disc				1	
24	538563 02	Bowl disc, caulks 2,0 mm			2		
24	538563 05	Bowl disc, caulks 1,0 mm		131			
24	538563 09	Bowl disc, caulks 0,6 mm	201				
24	575351 81	Bowl disc				160	
25	538563 02	Bowl disc, caulks 2,0 mm			72		
25	538563 05	Bowl disc, caulks 1,0 mm		2			
25	538563 09	Bowl disc, caulks 0,6 mm	3				
25	575351 81	Bowl disc				3	
26	538563 04	Bowl disc, caulks 1,5 mm			6		
27	530122 03	Top disc	1	1	1	1	B
28	73947	O-ring	1	1	1	1	
29	538202 02	Bowl hood	1	1	1	1	C
30	260190 06	O-ring	1	1	1	1	
31	543170 01	Seal ring	1	1	1	1	
32	543766 02	Lock ring	1	1	1	1	B

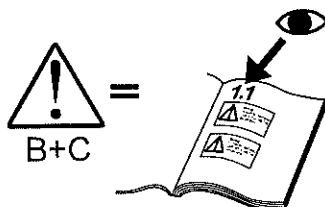

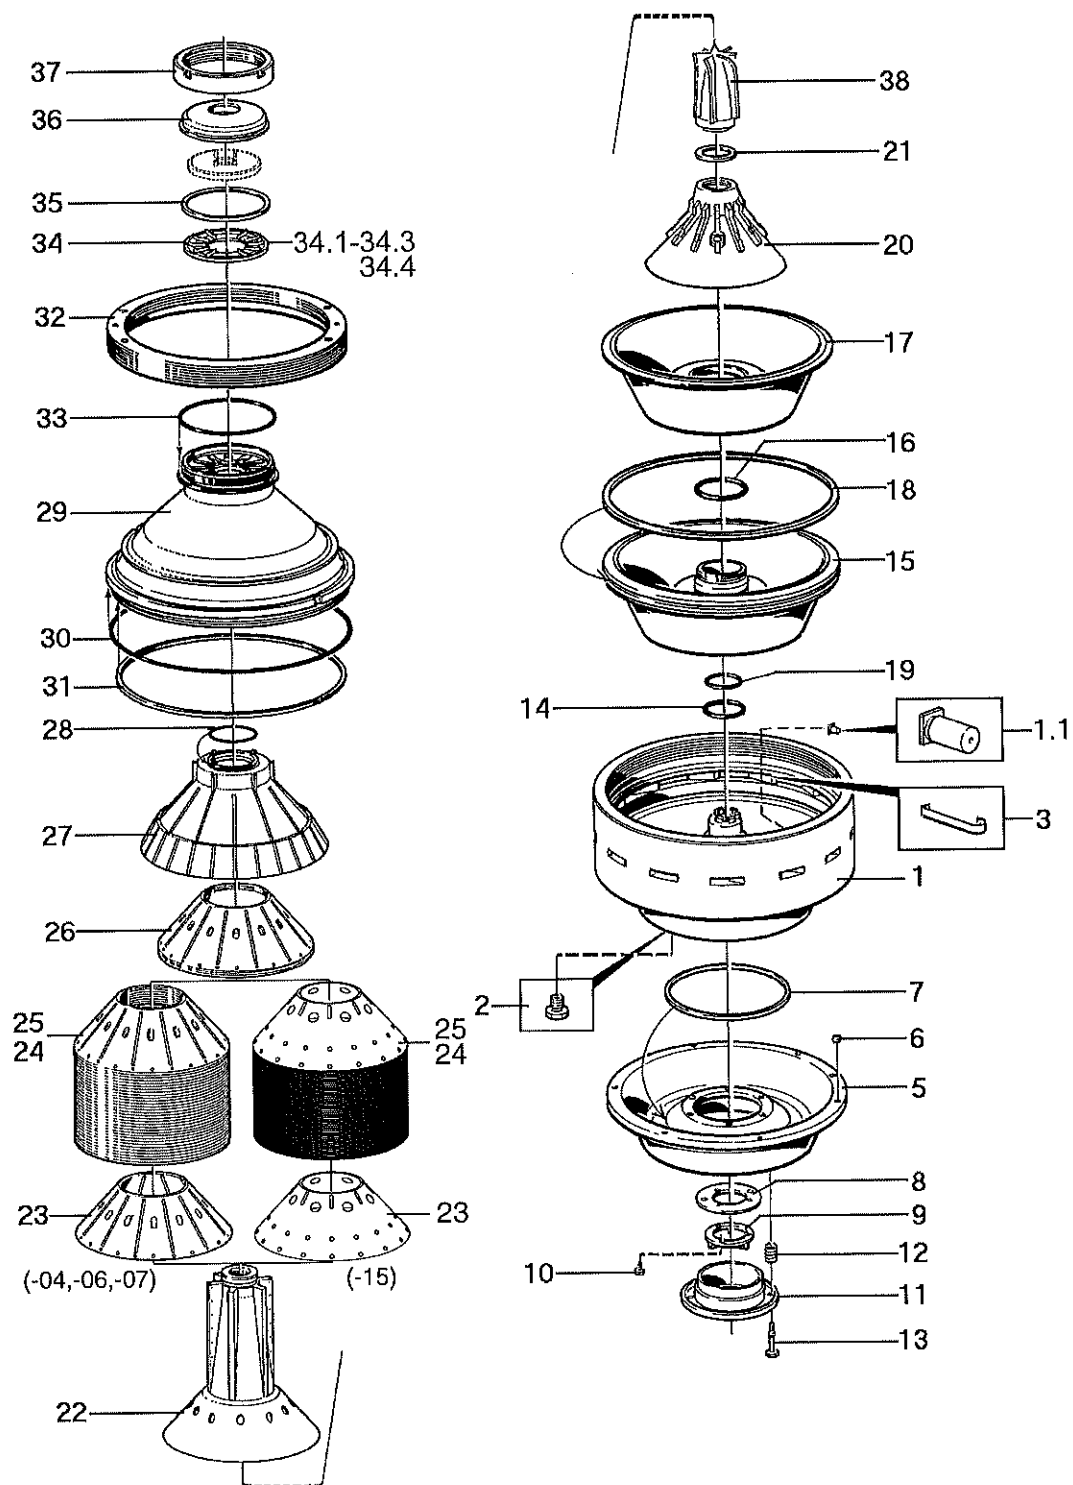


Ref	Part No	Description	Machine unit number or Subassembly description 545247-								Notes
			-06 -07 -04 -15								
			Quantity								
		Caulks 0,6 mm, holes at Ø 293 mm	↓								
		Caulks 1,0 mm		↓							
		Caulks 2,0 mm			↓						
		Caulks 0,6 mm, holes at Ø 250 mm				↓					
33	223412 47	O-ring	1	1	1	1					
34	532344 02	Gravity disc Ø 127 mm	1	1	1	1					
34.1	532344 03	Gravity disc Ø 185 mm	1	1	1	1				Alternative	
34.2	532344 04	Gravity disc Ø 158 mm	1	1	1	1				Alternative	
34.3	532344 05	Gravity disc Ø 176 mm	1	1	1	1				Alternative	
34.4	532344 08	Gravity disc Ø 155 mm				1				Alternative	
35	529628 01	Gasket	1	1	1	1					
36	544106 81	Paring chamber top part	1	1	1	1					
37	530391 01	Lock ring	1		1	1					
37	530391 02	Lock ring		1							
38	538520 02	Cap nut	1	1	1	1					

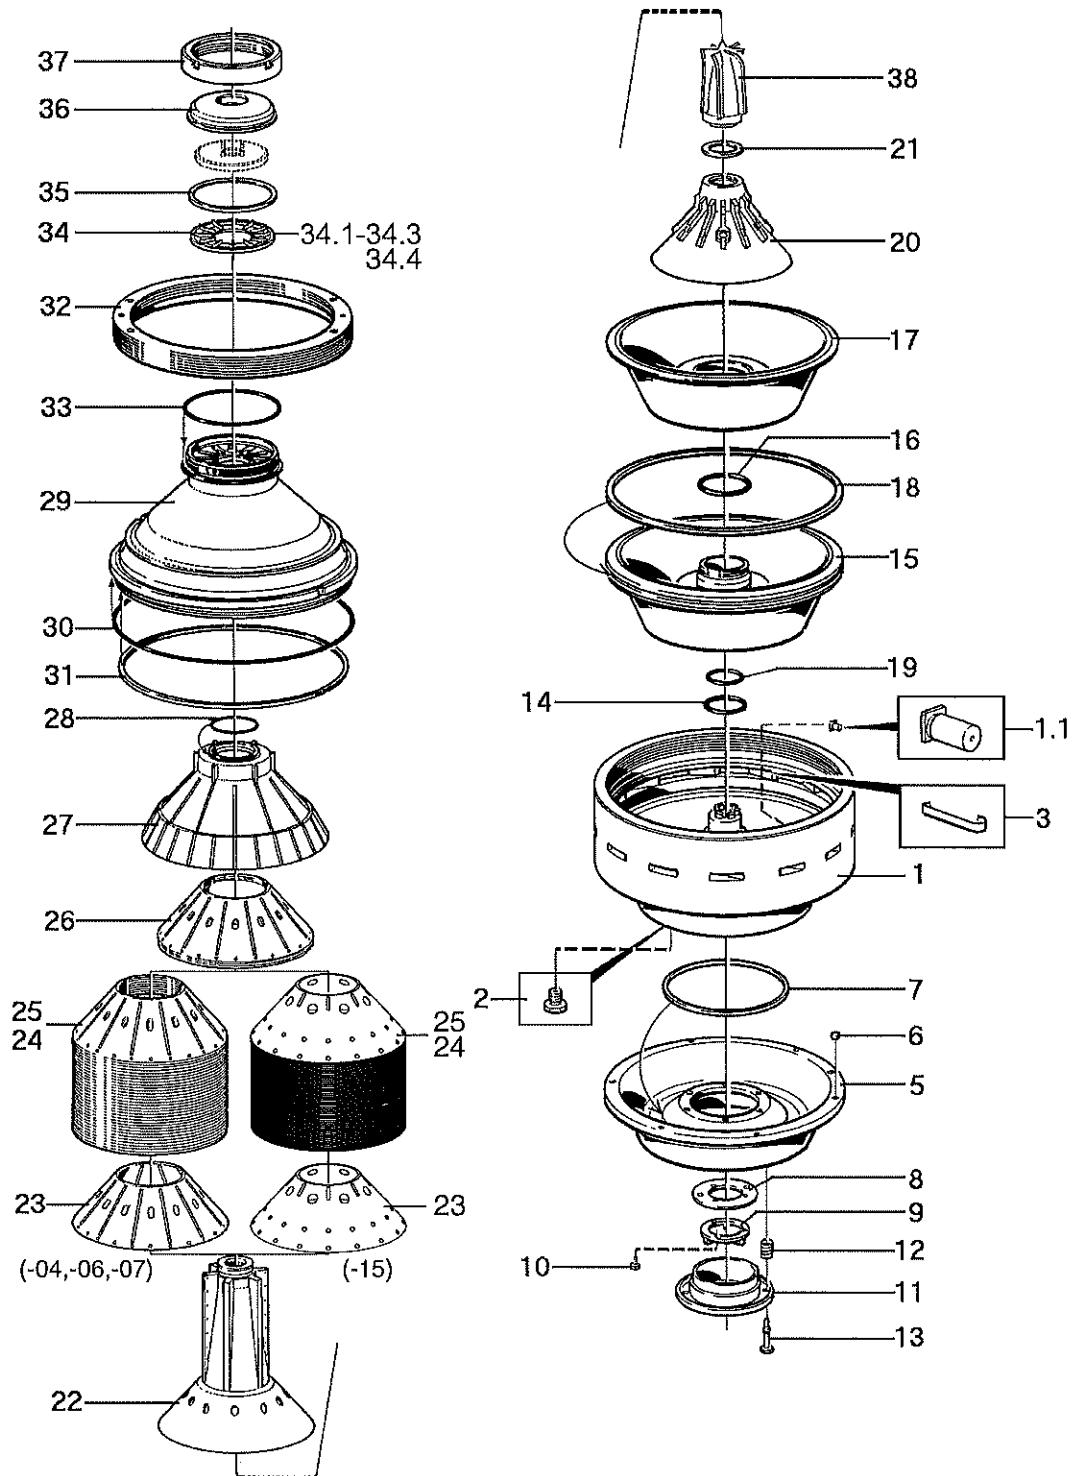


7 Inlet and outlet device

Ref	Part No	Description	Machine unit number or Subassembly description 545896-							Notes
			-04	Quantity						
2	564602 80	Paring disc complete	1							
3	529763 01	Gasket	1							
4	545936 80	Discharge cover	1							
5	190606	Rectangular ring	1							
6	190999	Sleeve	1							
7	190618	Coupling nut	1							
8	190991	Seal ring	1							
9	536447 80	Inlet pipe	1							
10	190604	Rectangular ring	2							
11	538174 01	Nozzle Ø 30 mm	1							
11	538174 02	Nozzle Ø 20 mm	1							Alternative
11	538174 03	Nozzle Ø 25 mm	1							Alternative
12	536448 82	Inlet bend	1							
13	190606	Rectangular ring	1							
14	190999	Sleeve	1							
15	190618	Coupling nut	1							
16	526350 01	Plug	1							
20.1	526350 02	Plug	4							

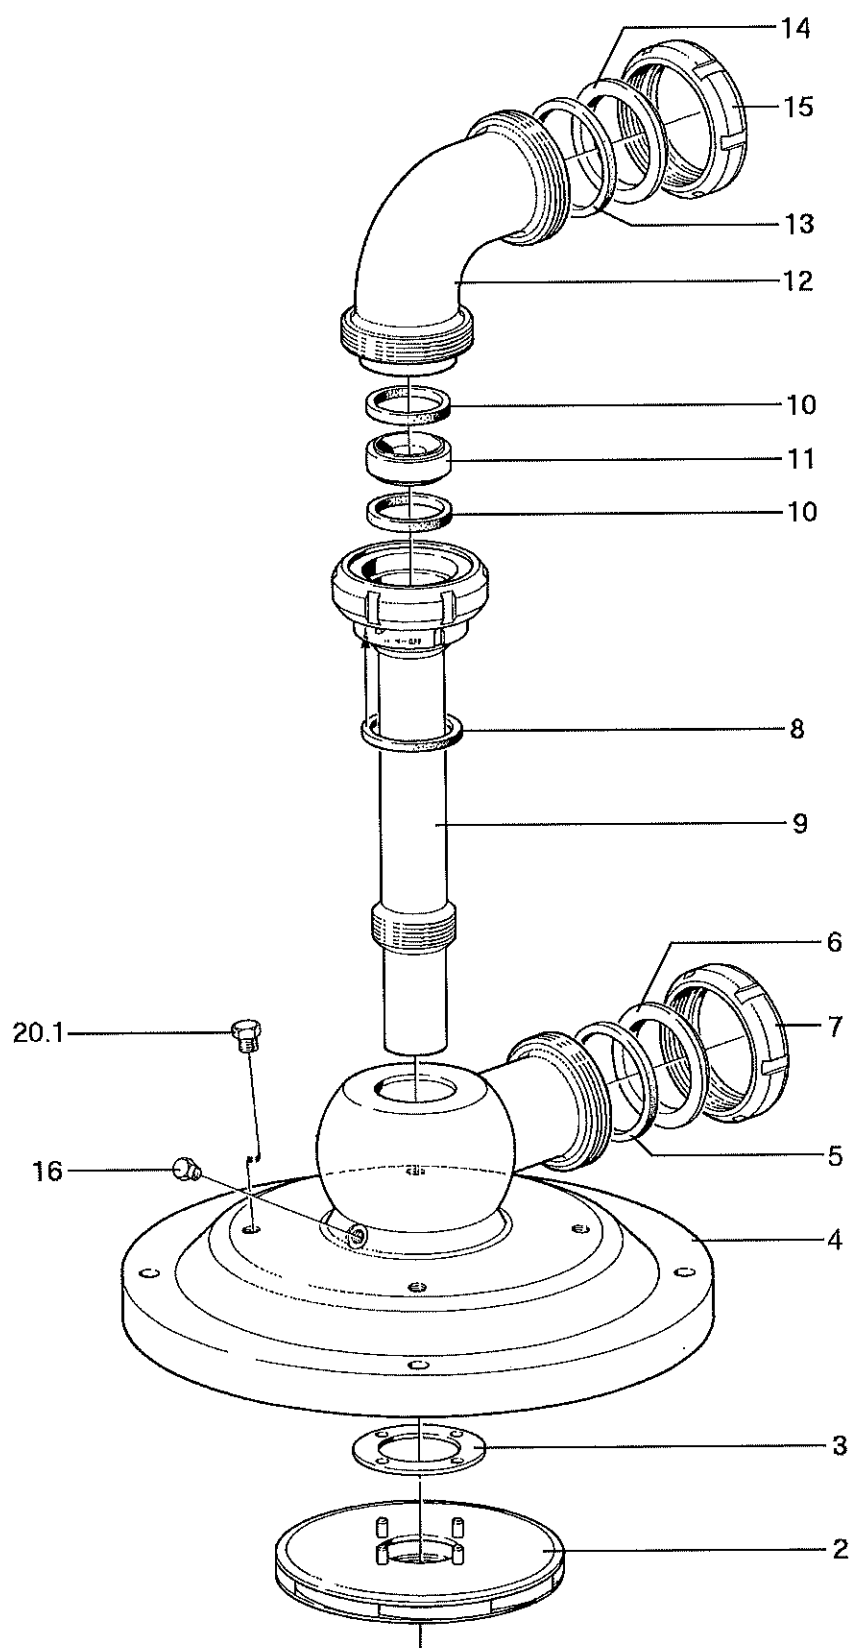

8 Parts for mounting of motor, for CT-drive


			Machine unit number or Subassembly description 546093-								
Ref	Part No	Description	-12	Quantity							Notes
1	543688 80	Foundation plate	1								
2	785332 02	Adjusting washer	18								
3	528729 02	Holder	3								
4	221731 11	Screw	9								
5	526186 02	Frame foot	3								
6	528738 02	Rubber cushion	3								
7	65235	Rectangular ring	3								
8	260001 21	Screw	3								
9	223142 04	Washer	3								
10	544782 80	Brake pulley	1								
10 A	221581 74	Screw	1								
11	544781 02	Motor adapter	1								
12	221726 22	Screw	6								
13	260176 01	Stud bolt	6								
14	70490	Washer	6								
15	221803 34	Nut	6								
17	569042 80	Guard	1								
23	221803 33	Nut	6								

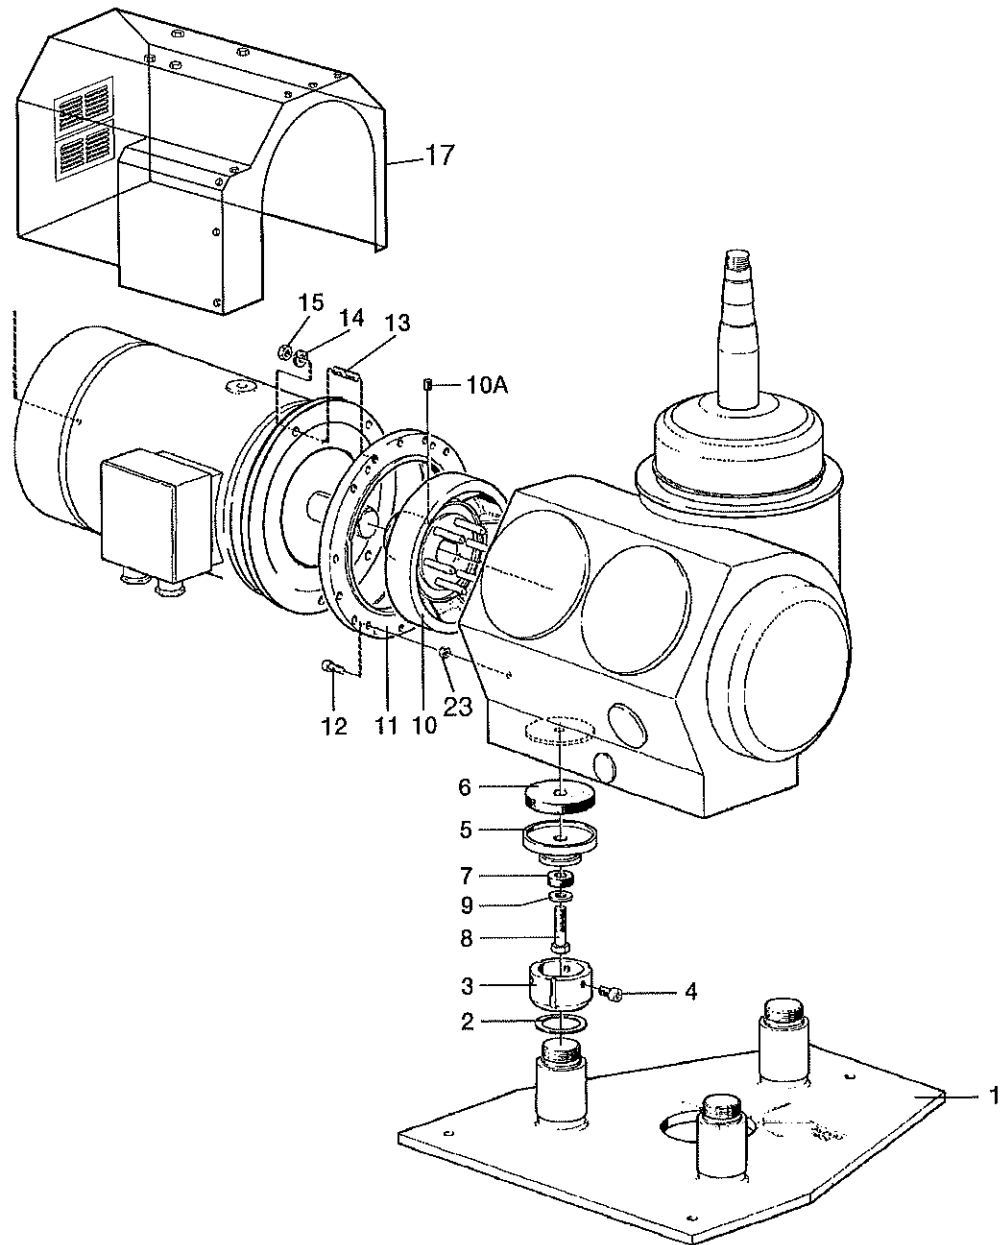

9 Parts for mounting of motor, for frequency drive


Ref	Part No	Description	Machine unit number or Subassembly description 546093-							Notes
			-16	Quantity						
1	543688 80	Foundation plate	1							
2	785332 02	Adjusting washer	18							
3	528729 02	Holder	3							
4	221731 11	Screw	9							
5	526186 02	Frame foot	3							
6	528738 02	Rubber cushion	3							
7	65235	Rectangular ring	3							
8	260001 21	Screw	3							
9	223142 04	Washer	3							
10	544782 80	Brake pulley	1							
10 A	221581 74	Screw	1							
11	544781 02	Motor adapter	1							
12	221726 22	Screw	6							
13	260176 01	Stud bolt	6							
14	70490	Washer	6							
15	221803 34	Nut	6							
16	568593 80	Screw complete	1							
17	566399 80	Protecting cap	1							
17 A	43631	Seal strip	2							
18	221851 11	Cap nut	1							
19	562164 81	Cover	1							
19 A	562163 80	Locking plate complete	2							
19 B	566584 01	Cover	1							
19 C	221803 40	Nut	2							
19 D	68617	Slotted pin	2							
23	221803 33	Nut	6							

9 Parts for mounting of motor, for frequency drive

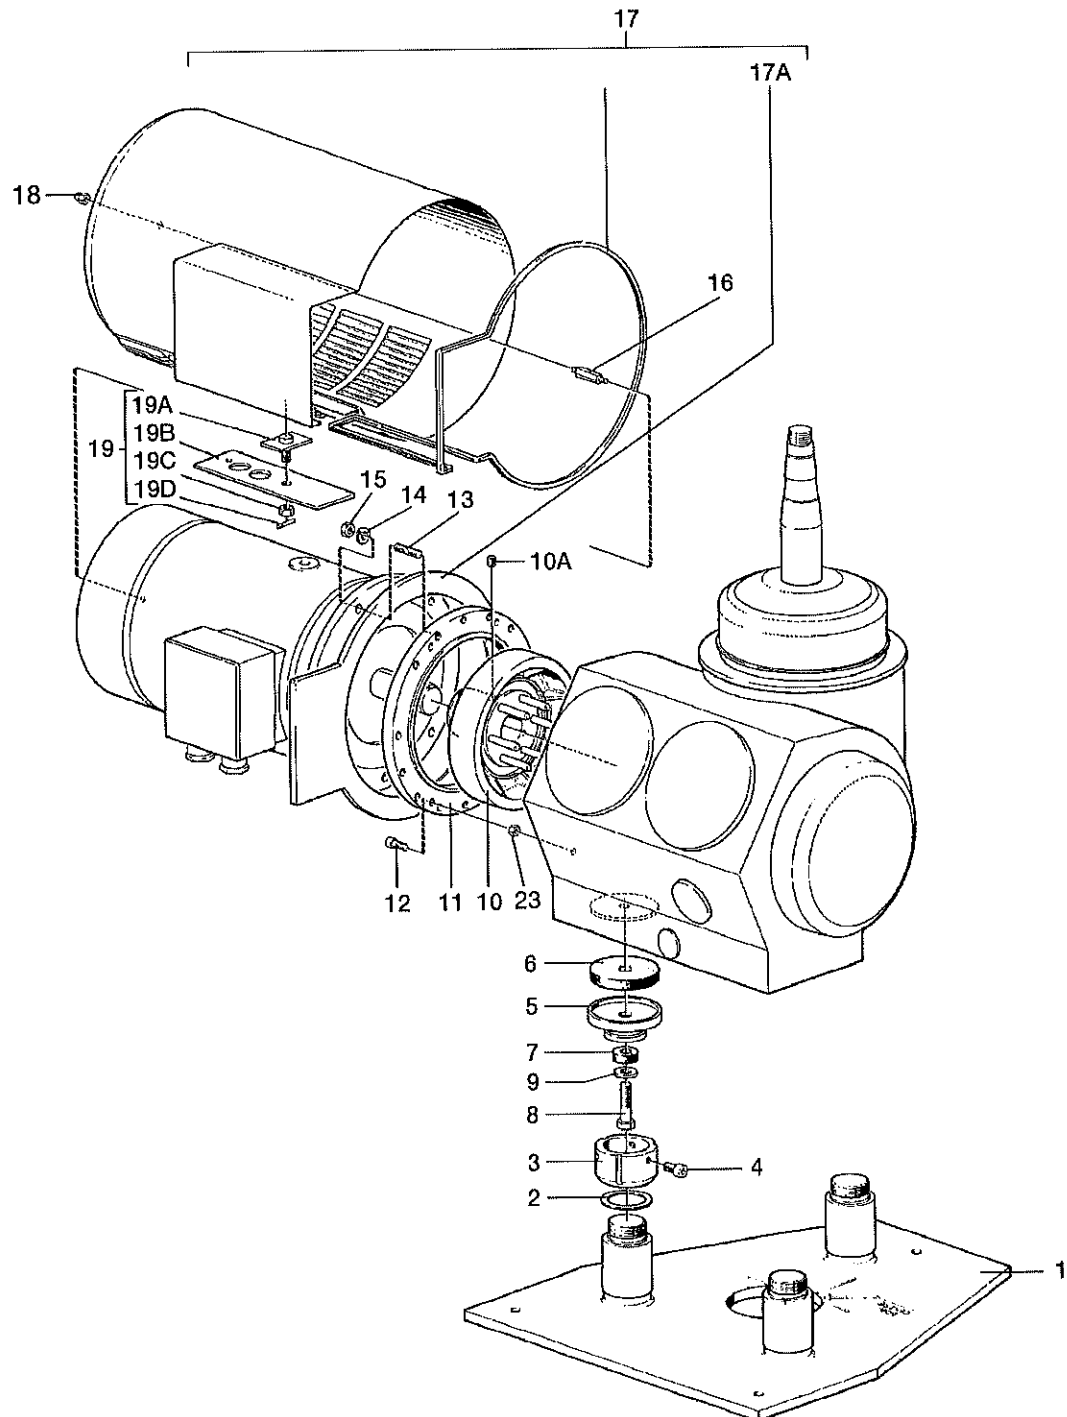


10 Monitoring kit

Ref	Part No	Description	Machine unit number or Subassembly description 564631-							Notes
			-01	Quantity						
1	555480 80	Junction box	1						See page 54	
2	552593 07	Lock washer	4							
3	221031 21	Screw	4							
4	555229 80	Mounting plate	1							
5	552593 06	Lock washer	12							
6	221706 20	Screw	8							
7	260080 15	Set screw	1							
8	223132 04	Washer	2							
9	552158 02	Vibration sensor	1							
10	552870 48	Tube gland, straight	1							
11	552870 61	Compression gland	2							
12	556416 02	Protective tube	1							
14	560311 01	Cable gland	2							
15	554627 02	Shrinking tubing	2							
16	552042 01	Inductive sensor	1							
17	548367 02	Holder	1							
18	221041 26	Screw	2							
19	552870 90	Tube adapter, straight	1							
20	556416 01	Protective tube	1							
21	221121 46	Screw	2							
22	552869 93	Tube clip	3							
23	555230 01	Cable cover	1							
24	555298 01	Cable holder	1							
25	552957 01	Stud	1							
26	221803 26	Nut	1							
27	552957 02	Stud	4							
28	221803 27	Nut	4							
99	560310 01	Ferrite core	1						See interconnection diagram	

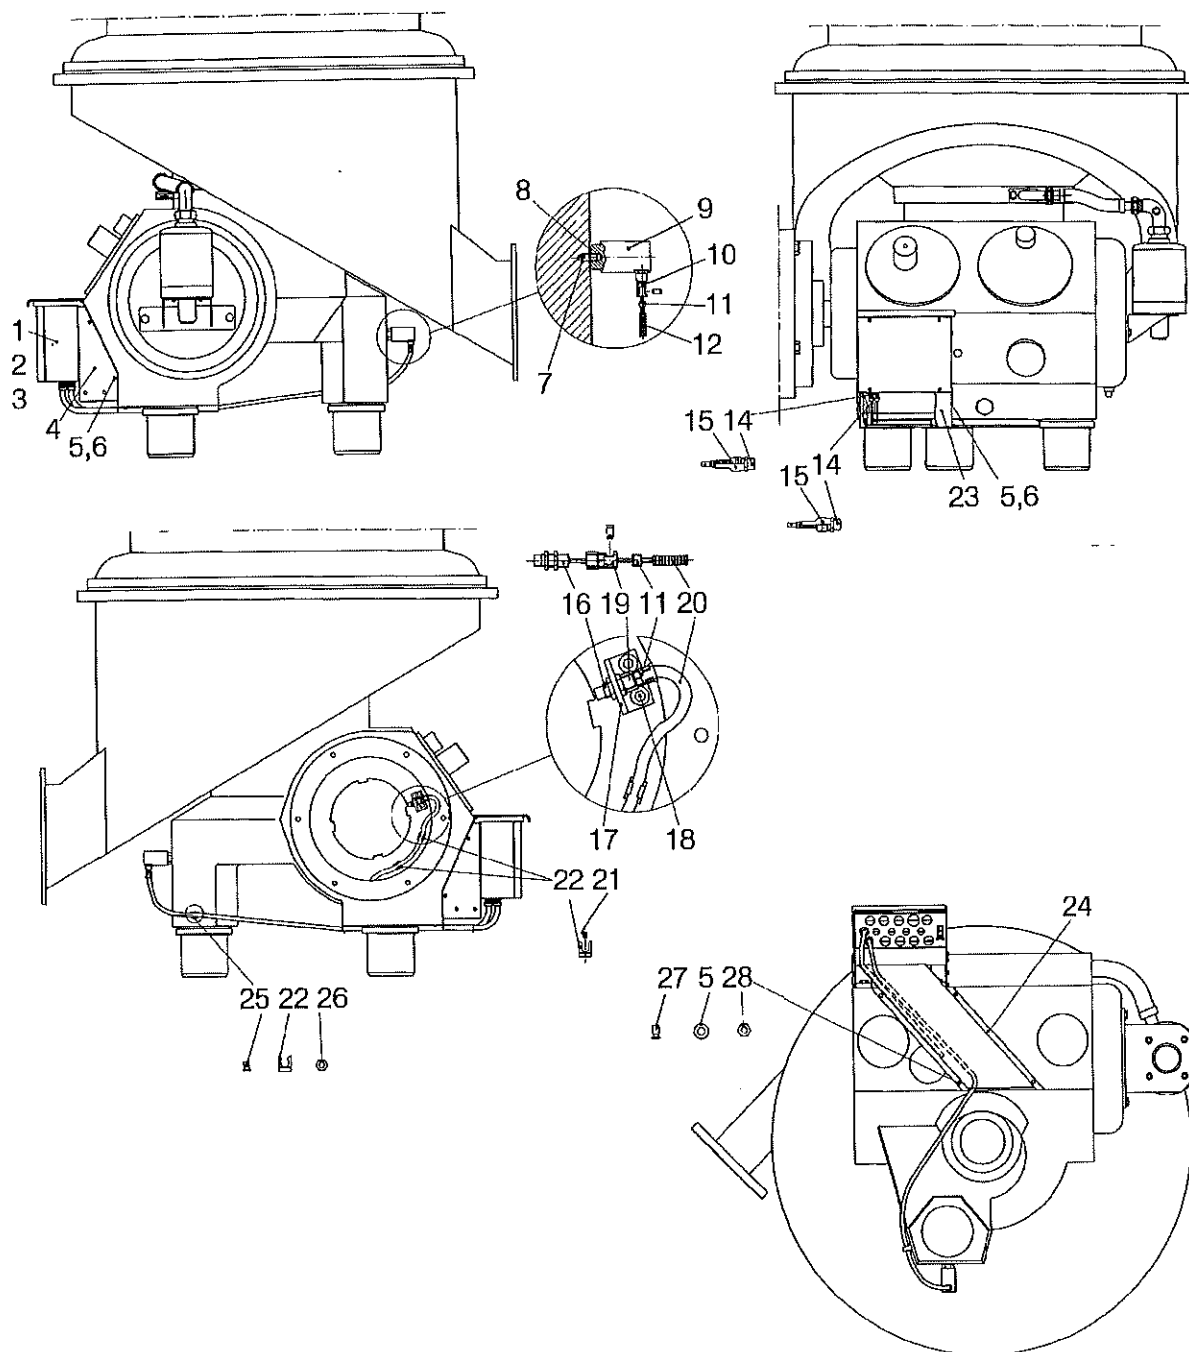


10.1 Junction box

Ref	Part No	Description	Machine unit number or Subassembly description 555480-							Notes
			-80	Quantity						
1	555479 01	Box, drilled	1							
2	552851 32	Stopping plug	6							
3	223403 01	O-ring	6							
4	552851 22	Lock nut	6							
5	552851 35	Stopping plug	8							
6	223403 17	O-ring	8							
7	552851 25	Lock nut	8							
8	552851 36	Stopping plug	1							
9	223403 19	O-ring	1							
10	552851 26	Lock nut	1							
11	550532 47	Distance screw	2							
12	550532 50	Distance screw	4							
13	552830 50	Support	4							
14	221126 04	Screw	6							
15	555482 01	Terminal row	1							
16	550127 32	Earth bar	2							
17	552867 12	Cable for earthing	1							
18	552867 13	Cable for earthing	1							

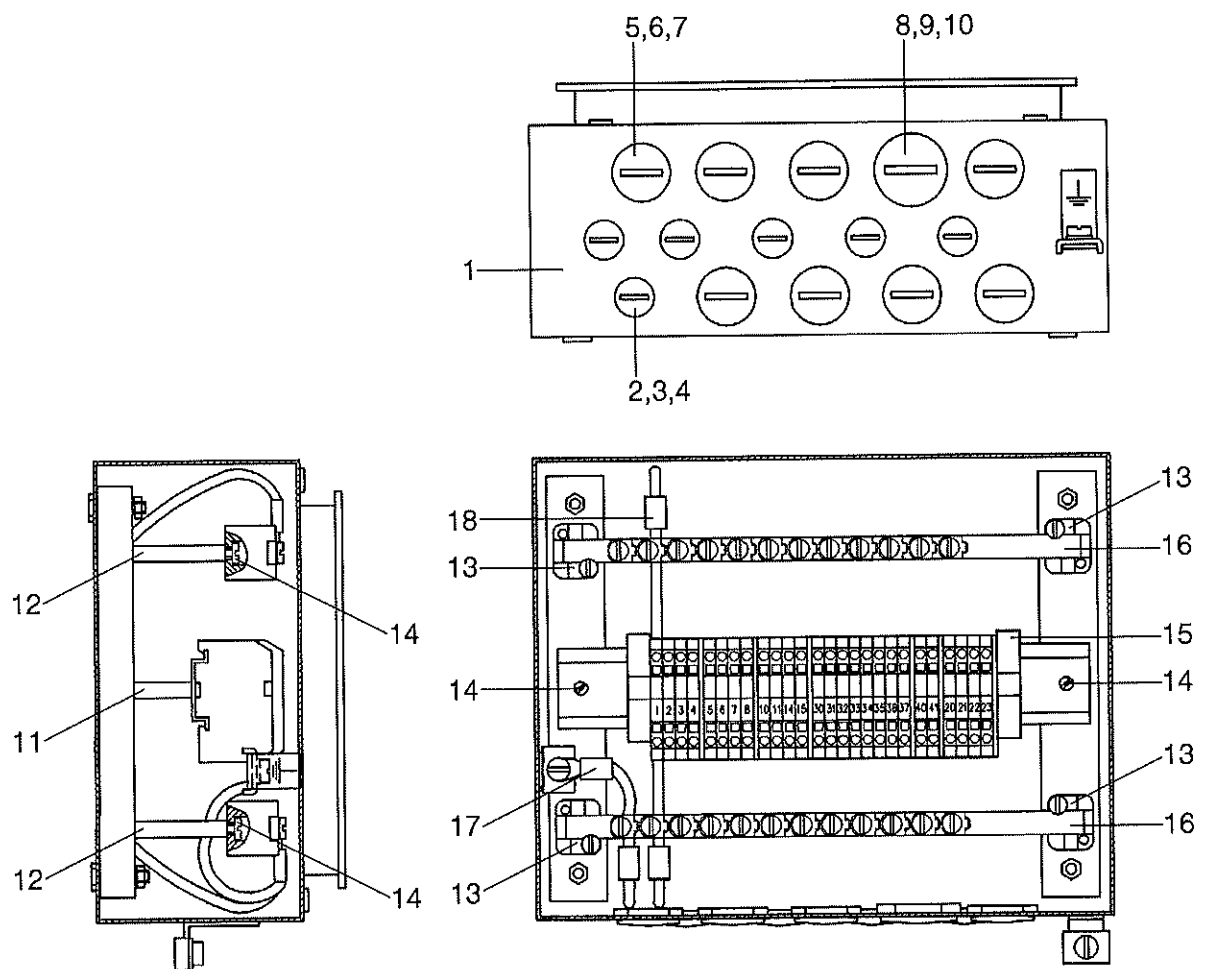



11 Operating water module compact

Ref	Part No	Description	Machine unit number or Subassembly description 559872-						Notes
			-01	Quantity					
1	559867 02	Air tank	1						
2	544311 10	O-ring	1						
3	559869 01	Valve body	1						
4	544311 11	O-ring	4						
5	559856 01	Valve spindle	1						
6	559855 01	Spring guide	2						
7	559866 01	Compression spring	2						
8	559854 01	Spacing	2						
9	221711 24	Screw	2						
10	544311 09	O-ring	2						
11	559858 01	Valve cup	2						
12	221706 24	Screw	4						
13	544311 08	O-ring	6						
14	559868 01	Valve connection	1						
15	559892 10	Sealing washer	2						
16	559892 09	Hexagon socket head screw	2						
17	223406 32	O-ring	1						
18	223406 43	O-ring	1						
19	559863 80	Cylinder cover	1						
20	559891 01	Locking wire	2						
21	559892 08	Nut	1						
22	559857 01	Needle	1						
23	558710 01	Nipple	3						
24	558926 01	Silencer	1						
25	559870 01	End protection	1						
26	559864 01	Cylinder	1						
27	546198 76	O-ring	1						
28	559865 01	Outlet	1						
29	559892 07	Nut	2						
30	559892 01	Turcon variseal "m"	1						
31	559861 01	Piston	1						
32	559892 03	Turcon aq-seal	1						
33	559892 02	Turcite slydring	1						
34	559862 01	2 pulse adapter	1						
35	221711 07	Screw	1						
36	559892 04	Nozzle Ø 4,0 mm	1						
37	223406 42	O-ring	1						
38	559892 06	Garter strap	1						
39	559892 05	Nozzle Ø 4,2 mm	1						
40	544311 07	O-ring	1						
41	562065 80	Bracket	1						
42	221803 28	Nut	4						
43	223406 29	O-ring	1						

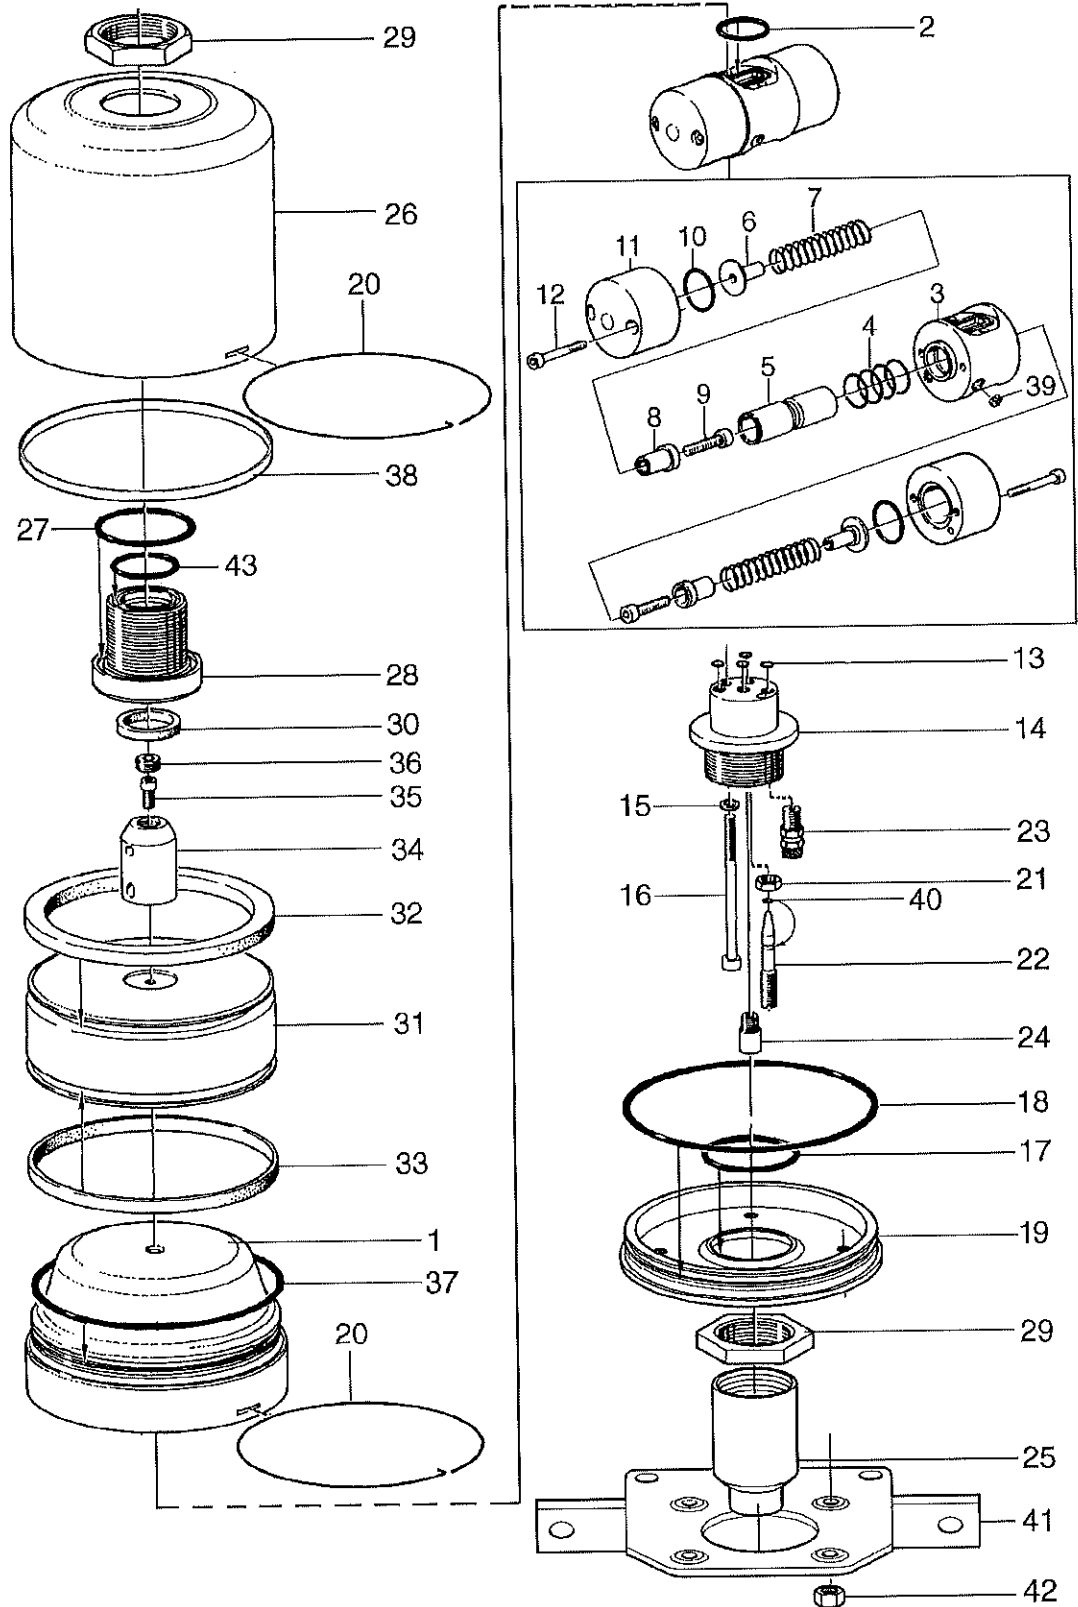

12 Fittings for OWMC

Ref	Part No	Description	Machine unit number or Subassembly description 563233-							Notes
			-02	Quantity						
1	562138 02	Elbow pipe	1							
1 A	555655 02	Check valve	1							
2	190601	Rectangular ring	2							
3	562404 80	Flexible hose	1							

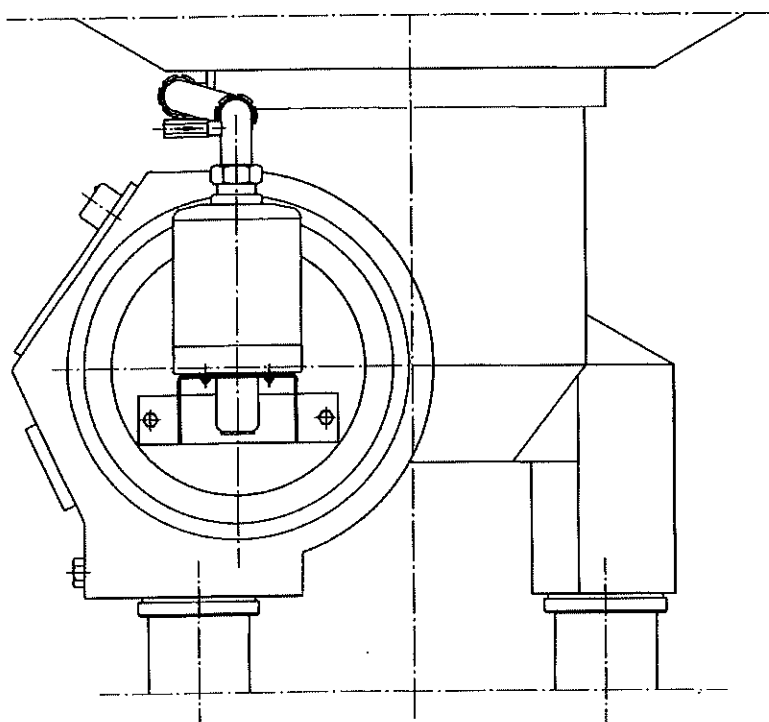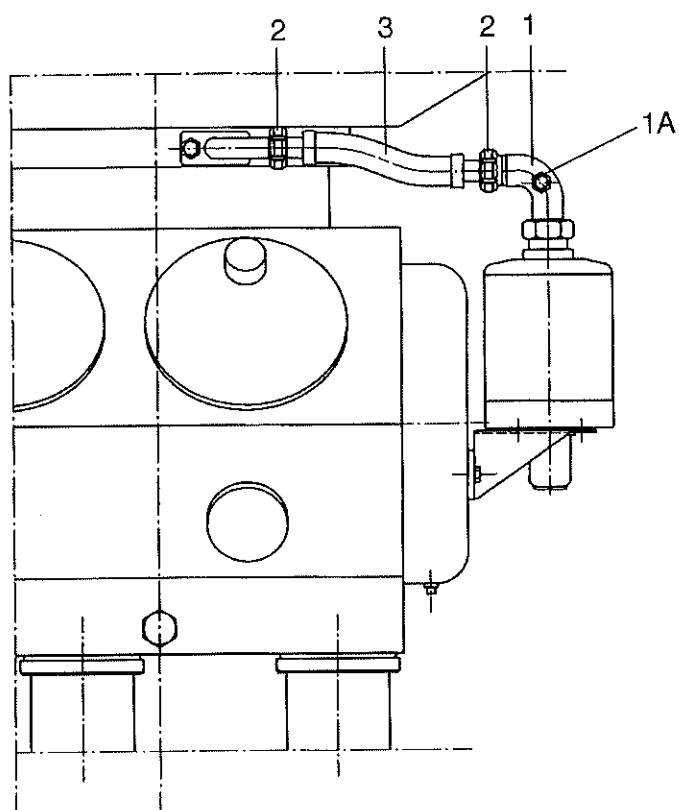


13 Set of plates

Ref	Part No	Description	Machine unit number or Subassembly description 549572-						Notes
			-30	Quantity					
3	1270019	Set of safety labels	1						
3A	1270018 01	Safety label sv	1						
3B	1270018 02	Safety label en	1						
3C	1270018 03	Safety label de	1						
3D	1270018 04	Safety label fr	1						
3E	1270018 05	Safety label es	1						
3F	1270018 06	Safety label ru	1						
3G	1270018 07	Safety label lt	1						
3H	1270018 08	Safety label pt	1						
3I	1270018 09	Safety label pl	1						
3J	1270018 10	Safety label el	1						
3K	1270018 11	Safety label fi	1						
3L	1270018 12	Safety label zh	1						
3M	1270018 13	Safety label da	1						
3N	1270018 14	Safety label ar	1						
3O	1270018 15	Safety label nl	1						
3P	1270018 16	Safety label cs	1						
3Q	1270018 17	Safety label ja	1						
3R	1270018 18	Safety label ko	1						
3S	1270018 19	Safety label no	1						
5	52406	Plate with arrow	1						
6	68387	Rivet	2						
7	553171 01	Label 50 Hz	1						
7	553272 01	Label 60 Hz	1						
8	1270001	Lifting instruction	1						
9	554214 02	Cable tie	1						

1	2	3,3A-S
4	5	6
7	8	9
50 Hz 60 Hz		


14 Cyclone for annular duct cover

Ref	Part No	Description	Machine unit number or Subassembly description 545934-							Notes
			-80	Quantity						
8	31317 0884	1 Coupling nut	1							
9	31317 0886	1 Rectangular ring	1							
10	31317 0334	1 Washer	1							

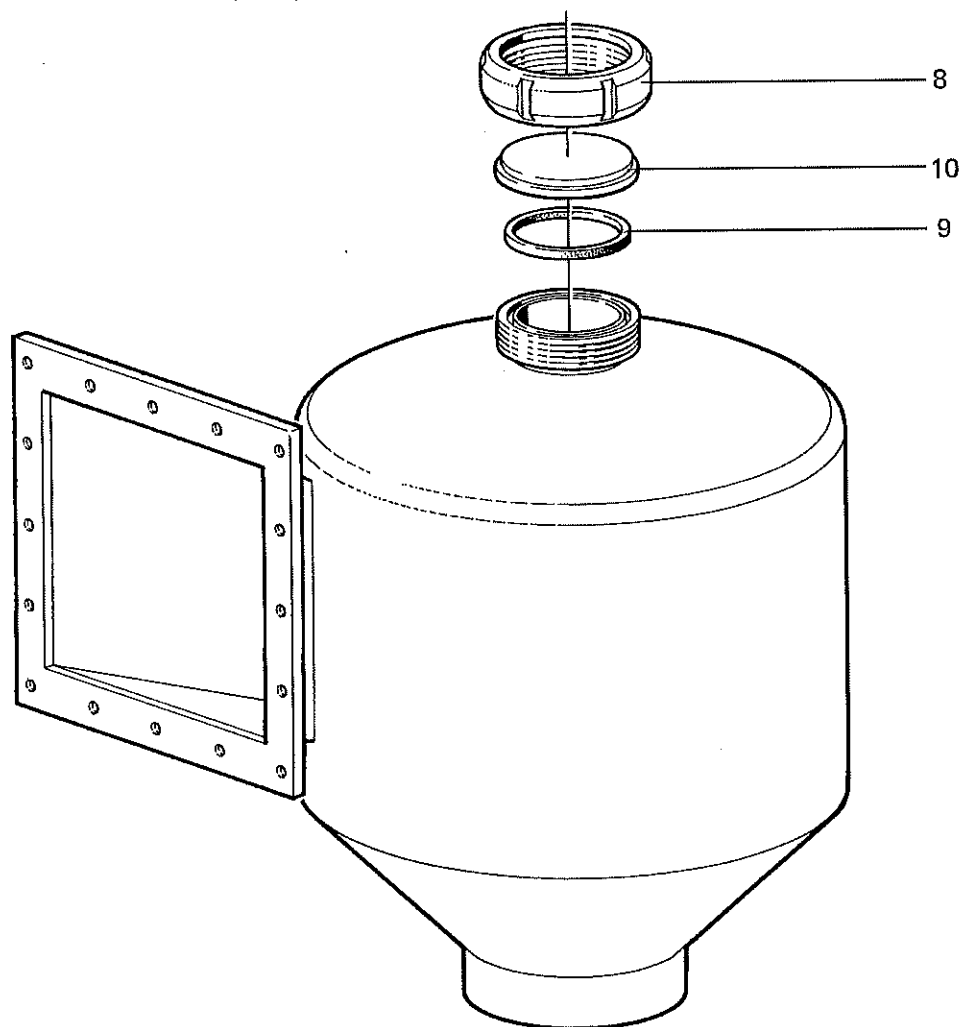


15 Set of tools


Ref	Part No	Description	Machine unit number or Subassembly description 555491-						Notes
			-04	Quantity					
1	545756 80	Puller	1						Ball bearing worm wheel shaft
1 A	260001 41	Screw	1						
2	544302 02	Puller	1						Dismounting of worm
3	531296 81	Driving-off tool	1						Vertical, horizontal device
4	537441 01	Washer	1						Mounting brake pulley
5	544372 01	Drift	1						Dismounting ball bearing
6	72244	Extension rod 240-255 mm	1						
7	527348 01	Extension rod 125-150 mm	1						
8	69696	Hook spanner	1						Coupling nut
9	8829	Hook spanner	1						Cap nut
10	260164 06	Hexagon socket 14 mm (1/2")	1						
11	73377	Socket 3/4" (1/2")	1						
12	527353 09	Socket 30 mm (1/2")	1						
13	73085	Socket 24 mm (1/2")	1						
14	75420	Socket 13 mm (1/2")	1						
15	544273 01	Sleeve	1						Dismounting ball bearing
16	543135 04	Compressing tool, bowl	1						See separate IB
17	556513 80	Lifting tool	1						Bowl hood
18	260154 05	Lifting eye bolt	2						Lock ring large
19	555550 80	Lifting tool	1						Distributing cone
20	528380 81	Lifting tool	1						Bowl disc
20 A	71405	Slotted pin	2						
20 B	67782	Cylindrical pin	2						
21	545535 01	Lifting tool	1						Sliding bowl bottom

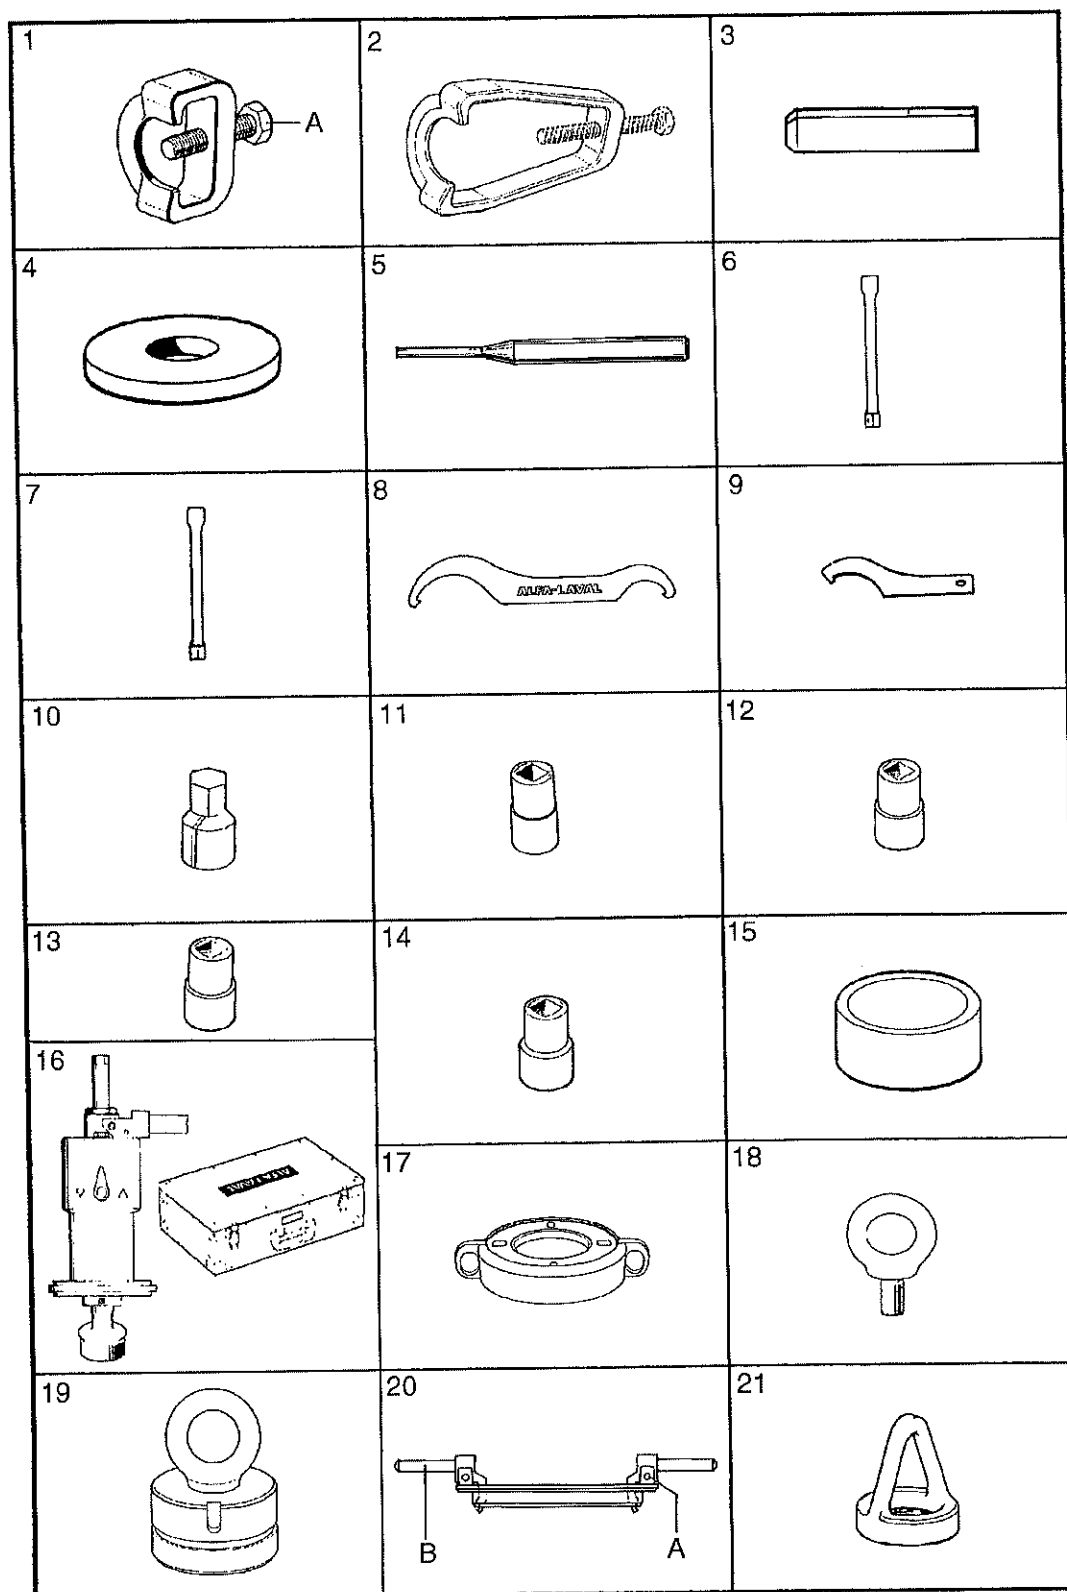

			Machine unit number or Subassembly description 555491-							
Ref	Part No	Description	-04	Quantity						Notes
22	543307 80	Lifting tool	1							Bowl body
22 A	544088 01	Screw	3							
22 B	543309 01	Lifting eye	1							
22 C	543310 01	Washer	1							
22 D	221711 02	Screw	1							
22 E	68372	Snap ring	3							Bowl spindle Distributor
23	540131 80	Lifting tool	1							
24	542270 81	Lifting tool	1							
25	543240 80	Assembly tool for wear protection	1							
25 A	542592 02	Tightening rod	1							
25 B	543126 80	Clamp screw	1							
25 C	542613 01	Gripping jaw	1							
26	42386	Snap ring pliers (shaft)	1							
27	66445	Snap ring pliers (hole)	1							
28	544371 01	Torque wrench	1							
29	529649 80	Spanner	1							
30	543346 01	Spanner	1							
31	546855 01	Ring	1							
32	543550 01	Ring	1							
33	543551 01	Ring	1							
34	544261 01	Ring	1							
35	528905 08	Ring spanner 21 mm, 24 mm	1							
36	544288 01	Tube	1							
37	260161 01	Ratchet handle	1							
38	260164 03	Hexagon socket 8 mm (1/2")	1							
39	521196 16	Tubular socket 36 mm	1							
40	64324	Tin hammer 4,4 kg	1							
41	72243	T-handle	1							
42	544264 01	Pressure washer	1							
										Mounting of top bearing

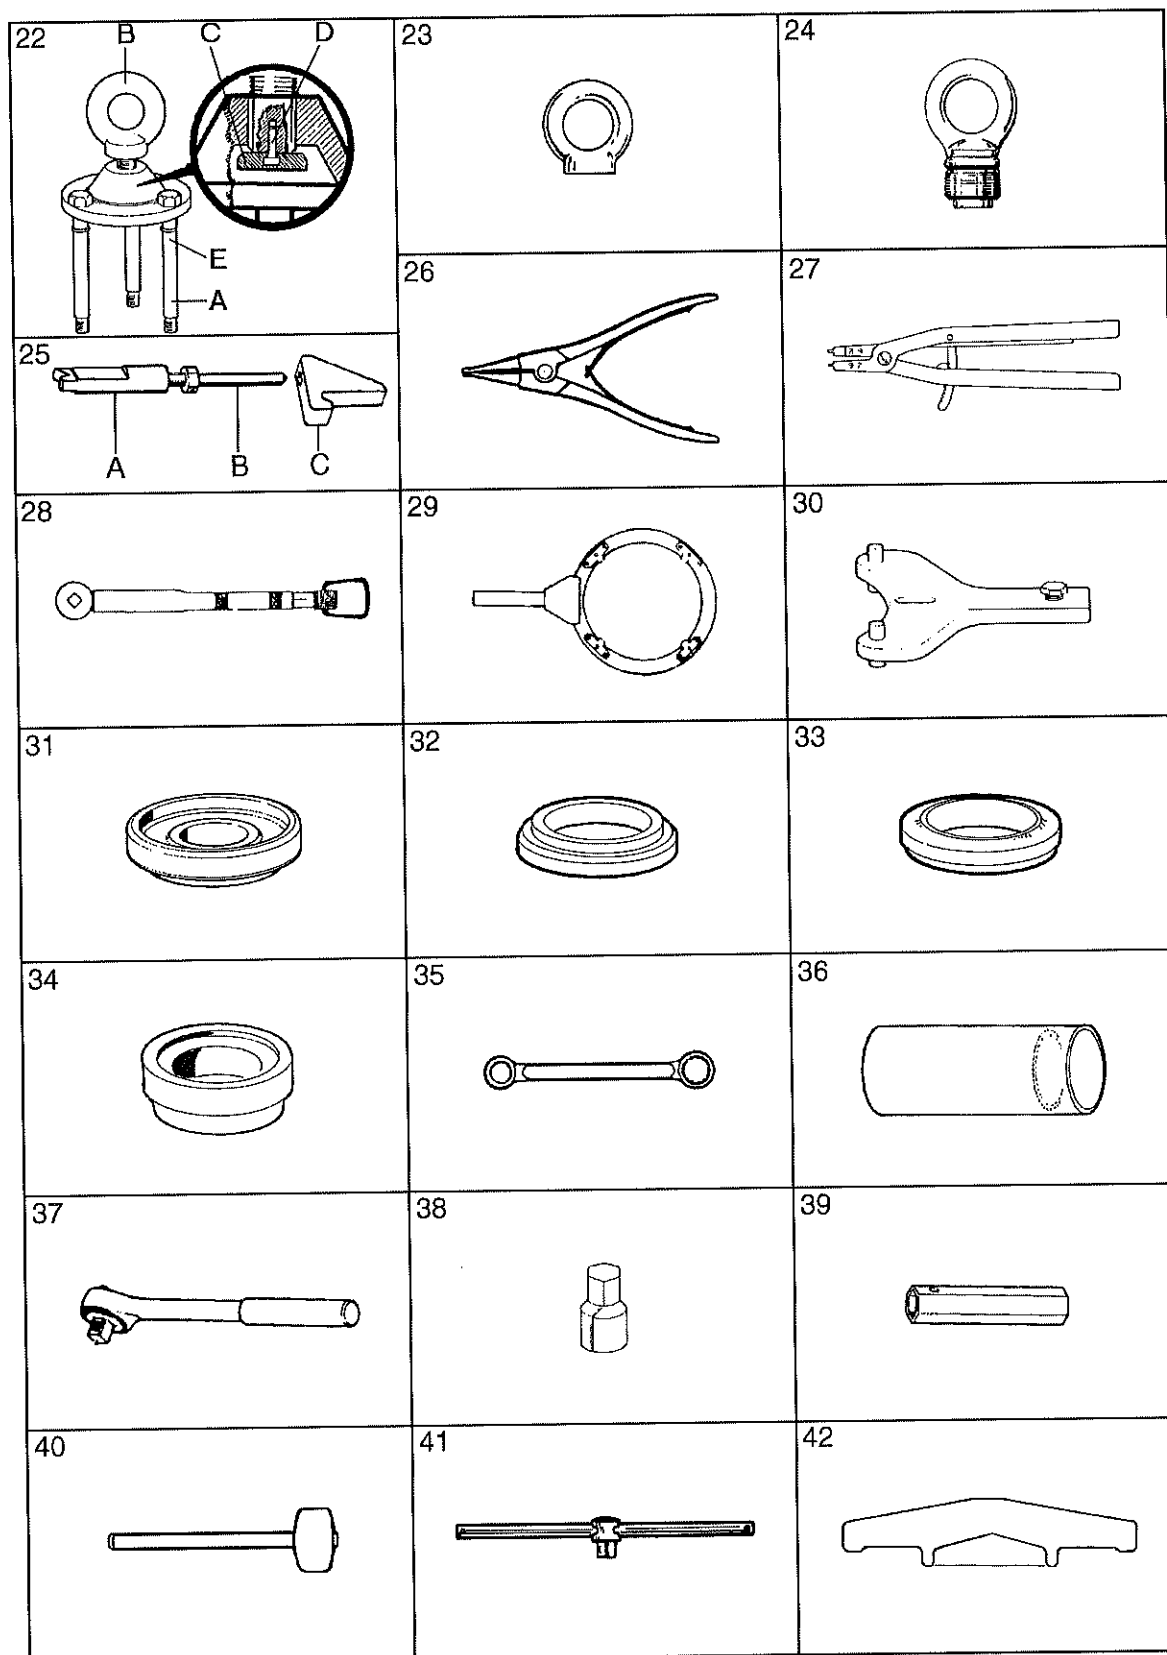


Ref	Part No	Description	Machine unit number or Subassembly description 555491-							Notes
			-04	Quantity						
43	543552 01	Mounting tool	1							Ball bearing worm wheel shaft
44	543553 80	Dismounting tool	1							Dismounting brake pulley
45	555368 82	Turning tool bowl body	1							Bowl body
45 A	554960 82	Screw	1							
45 B	1270022	Safety label on reversing tool	1							
46	542118 81	Lifting eye	2							Operating slide
47	545529 80	Pin spanner	1							Lock ring worm wheel shaft
48	545540 80	Mounting and dismounting tool	1							ball bearing
48 A	545547 01	Ring	1							
48 B	545541 01	Plate lower	1							
48 C	545546 01	Sleeve	1							
48 D	545544 01	Bar	3							
48 E	545545 01	Support ring	1							
48 F	545548 01	Intermediate part	1							
48 G	68372	Snap ring	3							
48 H	545543 01	Washer	1							
48 I	545542 01	Plate upper	1							
48 J	221803 35	Nut	3							
50	527353 05	Socket 18 mm (1/2")	1							
51	553188 02	Lifting eye	3							Lifting the separator
52	2210463 13	Screw	3							Lifting the separator
53	221803 40	Nut	3							Lifting the separator
54	556741 01	Washer	3							Lifting the separator
55	562097 01	Guide pin	2							For mounting of bearing shield
56	537446 01	Belt pipe wrench	1							For OWMC

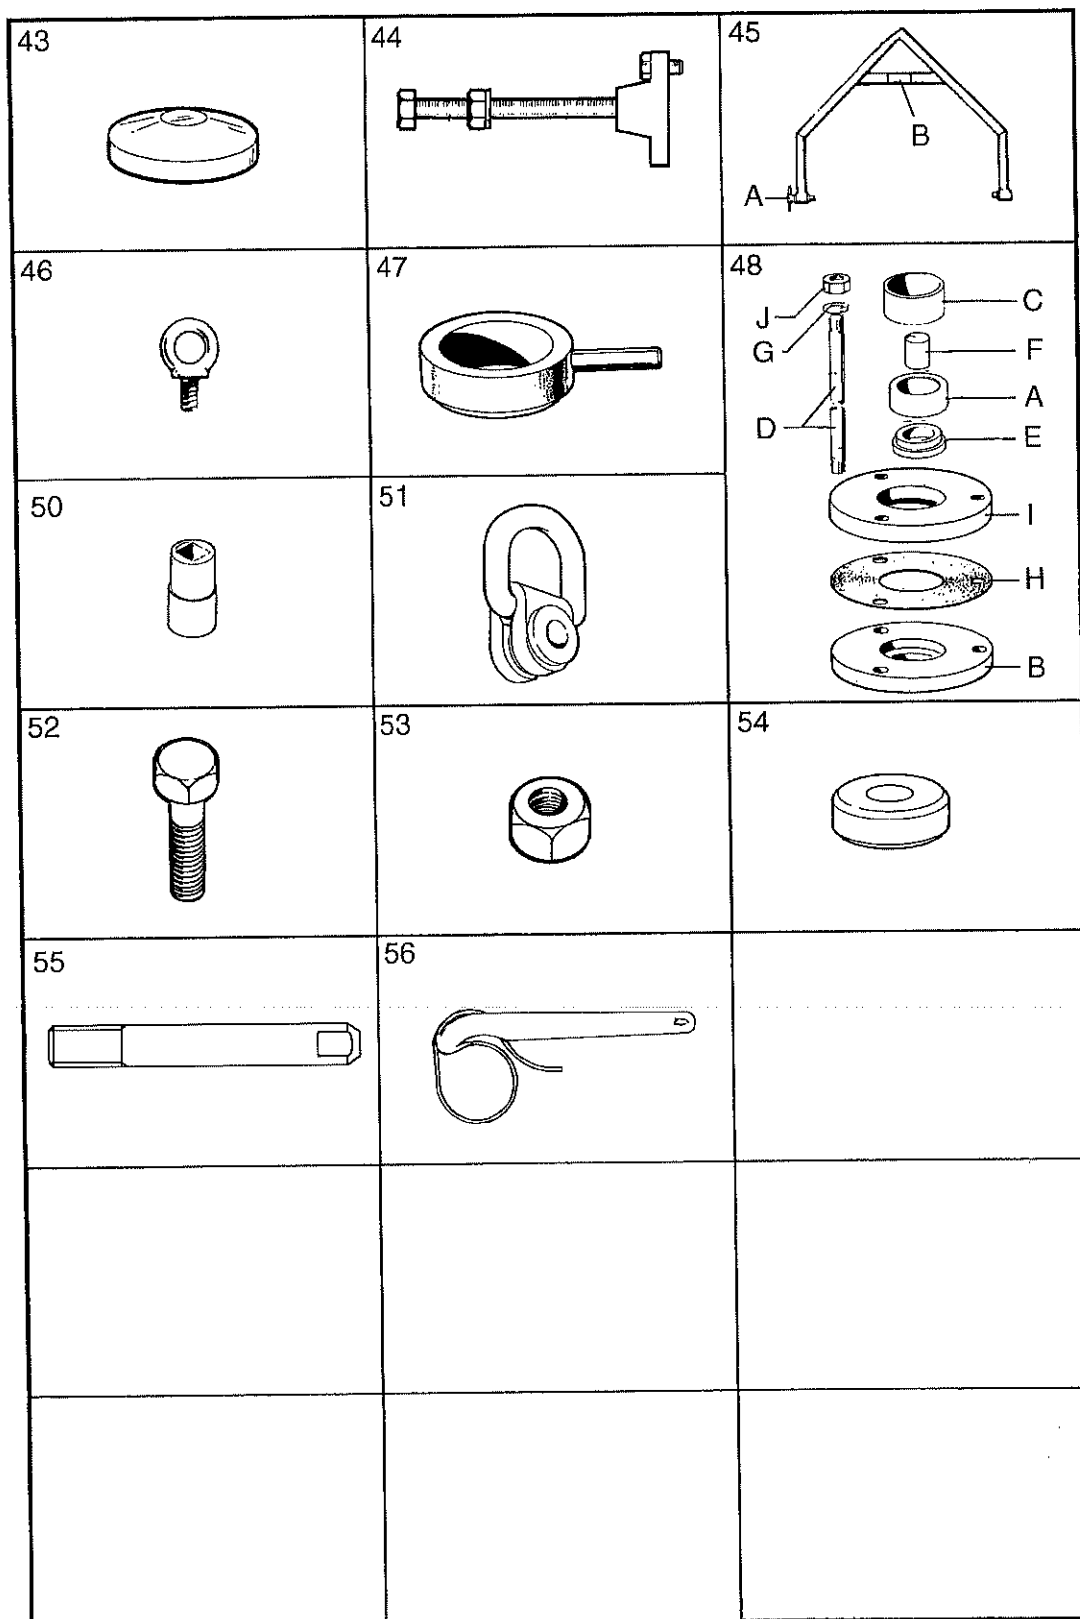


16 Intermediate service kit

Ref	Part No	Description	Machine unit number or Subassembly description 549208-							Notes
			-03	Quantity						
1	543422 03	Rectangular ring	1							Operating slide/ Bowl body
2	537838 07	Valve plug	6							Operating slide/ Bowl body
3	543343 01	Gasket	1							Spring support/ Bowl body
4	523116 04	Rectangular ring	1							Sliding bowl bottom/ Bowl body
5	223412 25	O-ring	1							Bowl body/ Sliding bowl bottom
6	72354	Rectangular ring	1							Bowl body/ Distributing cone
9	73947	O-ring	1							Top disc/ Paring chamber
10	543170 01	Seal ring	1							Bowl hood/ Sliding bowl bottom
11	260190 06	O-ring	1							Bowl hood/ Bowl body
12	529628 01	Gasket	1							Bowl hood/ Paring chamber
13	223412 47	O-ring	1							Bowl hood/ Lock ring
15	223330 03	Gasket	1							Distributing cone/ Cap nut
18	529763 01	Gasket	1							Paring disc/ Inlet and outlet house
19	190991	Seal ring	1							Inlet pipe/ Inlet housing
20	190606	Rectangular ring	2							Inlet and outlet housing/ Sleeve
21	190604	Rectangular ring	2							Inlet pipe/ Nozzle
24	74634	O-ring	3							Distributing cover/ Control paring disc
25	223316 05	Rectangular ring	1							Frame bottom part/ Drain screw
26	528732 03	Packing	1							Frame bottom part/ Worm wheel guard
27	539474 03	Silicone grease	1							
28	554336 01	Lubricating paste	1							
29	223412 31	O-ring	1							Sliding bowl bottom/ Lining

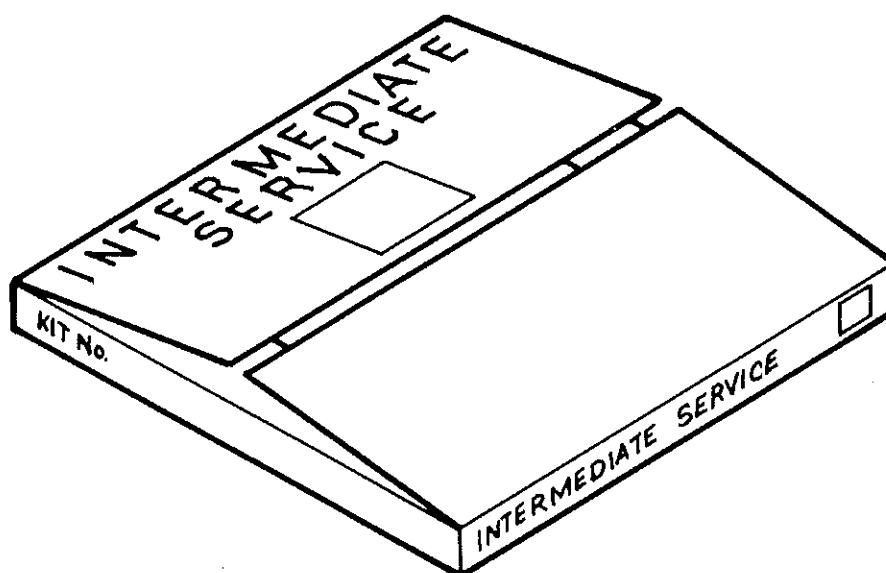


17 Major service kit

Ref	Part No	Description	Machine unit number or Subassembly description 549223-						Notes
			-31	Quantity					
1	37167	Rectangular ring	1						Glass disc/ Fixing plate
2	528723 01	Gasket	1						Frame/ Glass disc
3	73665	Rectangular ring	2						Cooling coil/ Bearing shield
4	43626	Gasket	1						Frame/ Bearing shield
5	43630	Seal strip	1						Frame/ Guard
6	223406 36	O-ring	1						Ball bearing/ Bearing shield
7	233211 94	Ball bearing	1						Worm wheel shaft
8	8379	Ball bearing	1						Worm wheel shaft
9	60571	Elastic plate	3						Coupling pulley
10	38411	O-ring	1						Frame/ Bottom bearing housing
11	548747 07	Ball bearing	1						Upper neck bearing
12	223642 49	Snap ring	1						Upper neck bearing/ Bearing housing
13	548745 04	Ball bearing	1						Lower neck bearing
14	223641 01	Snap ring	1						Spindle/ Sleeve
15	66076	Lock washer	1						Spindle/ Round nut
16	529639 02	Rubber buffer	2						Neck bearing housing
17	541453 05	Usit-ring	3						Screw/ Neck bearing cover
18	555231 01	Seal ring	1						Frame top part/ Guard
19	544271 01	Seal ring	1						Oil fan/ Protection collar
20	223412 18	O-ring	1						Spindle/ Protection collar
21	548746 04	Ball bearing	1						Bottom bearing
22	223406 36	O-ring	1						Seal ring/ Guard
23	310637 84	Friction pad	1						Pneumatic brake
28	539244 02	Height adjusting ring	2						Frame top part/ Paring disc device
29	545318 02	Seal strip	1						Frame top part/ Frame hood
31	528732 03	Packing	1						Brake/ Frame bottom part
32	71068	Rectangular ring	1						Frame top part/ Sleeve
33	74067	O-ring	2						Operating water pipe
34	539687 01	Gasket	1						Frame top part/ Cyclone
35	190601	Rectangular ring	1						Frame top part, coupling nut
36	554216 02	Corrugated shim	1						Ball bearing/ Bearing shield

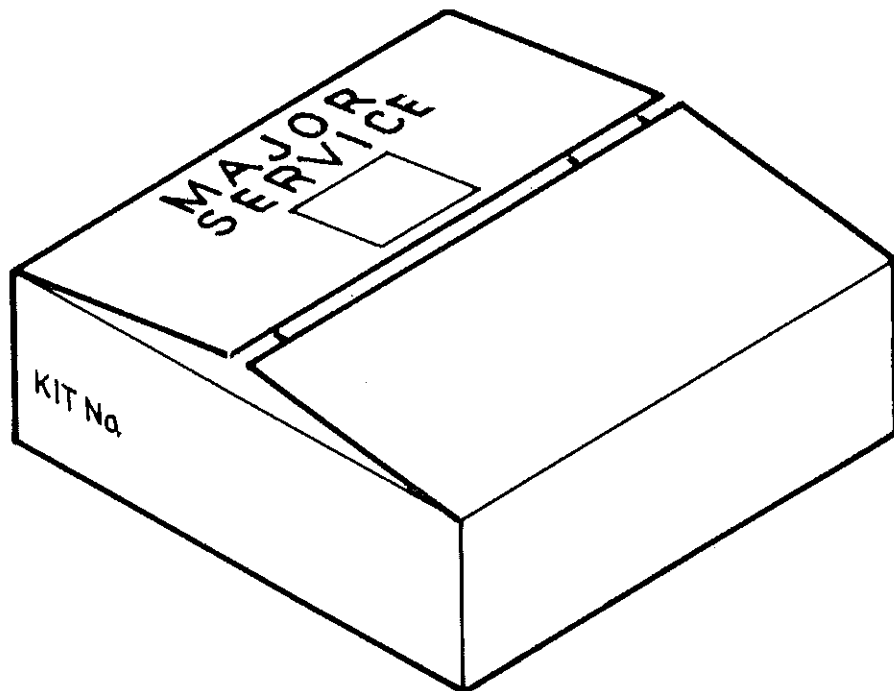


18 Service kit for foundation feet

			Machine unit number or Subassembly description 553048-							
Ref	Part No	Description	-01							Notes
				Quantity						
1	221731 11	Screw	9							
2	528738 02	Rubber cushion	3							
3	65235	Rectangular ring	3							
4	260001 21	Screw	3							

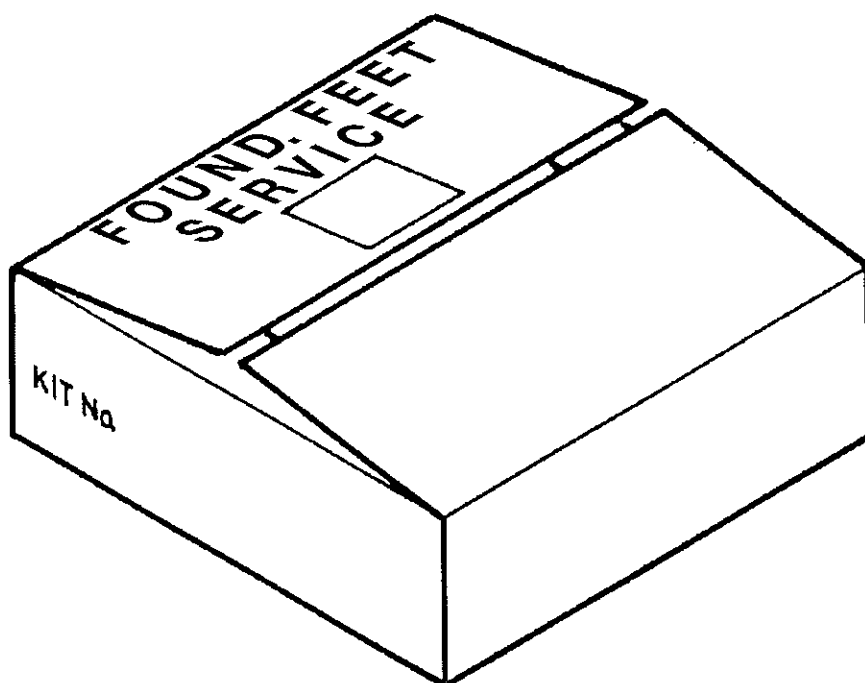

19 Cover interlocking kit

Ref	Part No	Description	Machine unit number or Subassembly description 558613-							Notes
			-01	Quantity						
1	558561 01	Switch actuator	1							
2	221126 72	Screw	2							
3	551337 01	Limit switch	1							
4	221121 15	Screw	2							
5	554627 01	Shrinking tubing	1							
6	556416 06	Protective tube	1							
7	552957 01	Stud	3							
8	552869 94	Tube clip	3							
9	221803 26	Nut	3							
10	554627 02	Shrinking tubing	1							
11	555603 02	Cable gland brass	1							

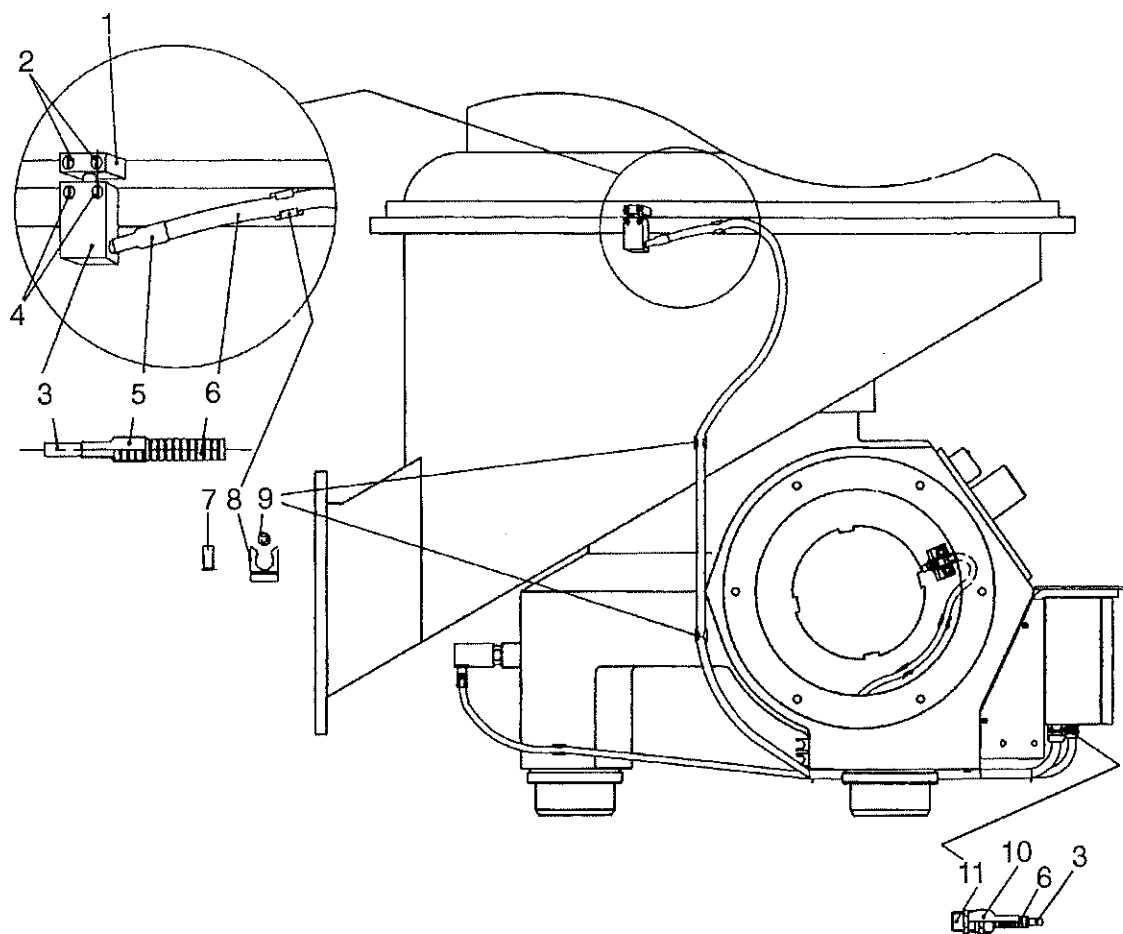

20 OWMC service kit

Ref	Part No	Description	Machine unit number or Subassembly description 558446-							Notes
			-05	Quantity						
1	544311 10	O-ring	1							Air tank/ Valve body
2	544311 11	O-ring	4							Valve body/ Valve spindle
3	544311 09	O-ring	2							Valve cup/ Valve body
4	544311 08	O-ring	6							Valve body/ Valve connection
5	559892 10	Sealing washer	2							Valve connection/ Screw
6	223406 32	O-ring	1							Cylinder cover/ Valve connection
7	223406 43	O-ring	1							Cylinder cover/ Air tank
8	559891 01	Locking wire	2							Air tank/ Cylinder
9	546198 76	O-ring	1							Outlet/ Cylinder
10	559892 01	Turcon variseal "m"	1							Outlet/ 2 pulse adapter
11	559892 03	Turcon aq-seal	1							Piston/ Cylinder
12	559892 02	Turcite slydring	1							Piston/ Cylinder
13	223406 42	O-ring	1							Air tank/ Cylinder
14	544311 07	O-ring	1							Needle/ Valve connection
15	223406 29	O-ring	1							Outlet/ Fittings for OWMC
16	559892 06	Garter strap	1							Air tank/ Cylinder
18	555612 01	High protection grease	1							

