

Jetson Orin Nano Official Kit Screwdriver Instructions

The Jetson Orin Nano official kit includes two screwdrivers for removing screws of different sizes:


- **Yellow Screwdriver:** For M3 screws.
- **Green Screwdriver:** For M2 and M3 screws (⚠ **WARNING:** For M3 screws on SSDs/network cards that have been secured with thread-locking adhesive, using the green screwdriver can easily cause screw head stripping).

● Yellow Screwdriver

Purpose: Specifically for removing **M3 screws** from solid-state drives (SSDs) and network cards.

⚠ SSD Screw Removal Precautions

When the Jetson Orin Nano official kit leaves the factory, the SSD screws are secured with thread-locking adhesive. When removing them for the first time, **be sure to use the yellow screwdriver** to vertically press and hold the screw firmly, then apply force to loosen the first turn. **Never use the green screwdriver**, as this can strip the Phillips cross head of the screw, making subsequent removal completely impossible.

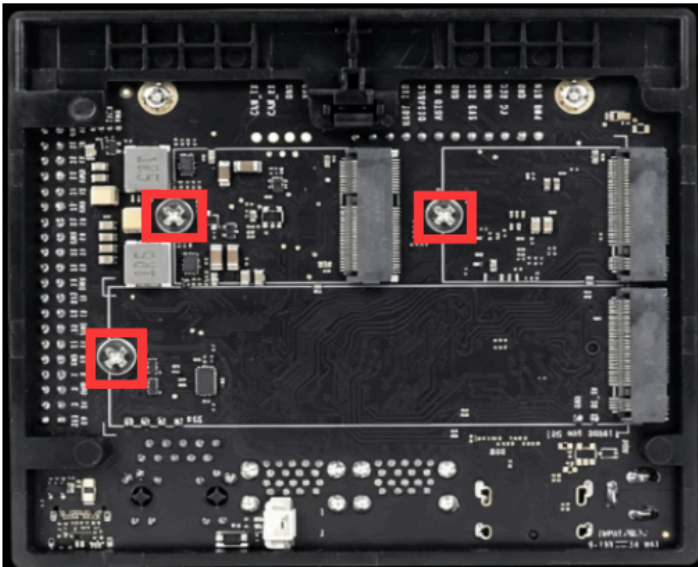

● Green Screwdriver

Purpose: Specifically for removing **M2 screws** from the official kit base and core board.

