Jetson Orin Nano Official Kit Screwdriver Instructions

The Jetson Orin Nano official kit comes with two screwdrivers for removing screws of different specifications:


- **Yellow Screwdriver**: Suitable for M3 screws.
- **Green Screwdriver**: Suitable for M2 and M3 screws (⚠ **Note**: For M3 screws on solid-state drives/network cards that have been secured with thread-locking adhesive, using the green screwdriver can easily cause screw head stripping).

🟡 Yellow Screwdriver

Purpose: Specifically for removing the **M3 screws** of solid-state drives (SSDs) and network cards.

⚠ SSD Screw Removal Precautions

When the Jetson Orin Nano official kit leaves the factory, the solid-state drive screws have already been secured with thread-locking adhesive. When removing them for the first time, **be sure to use the yellow screwdriver**, press it vertically and firmly against the screw, and apply force to loosen the first turn. **Never use the green screwdriver**, to avoid stripping the Phillips cross head of the screw and making subsequent removal completely impossible.

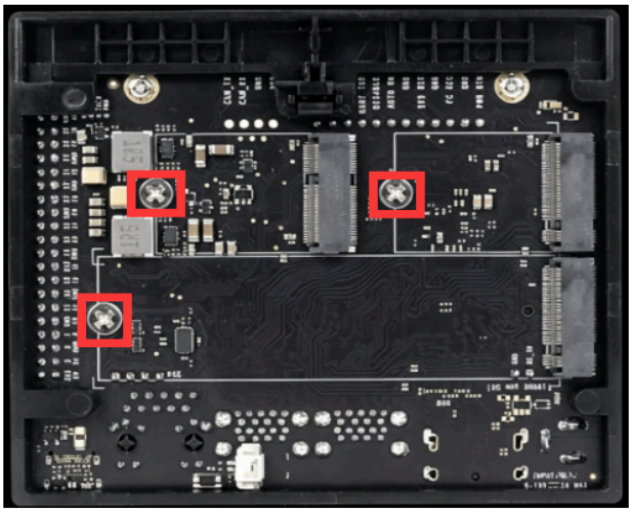



🟢 Green Screwdriver

Purpose: Specifically for removing the **M2 screws** of the official kit base and the core board.

