

# Lastbit Charging and Battery Usage Precautions

---

## Lastbit Charging and Battery Usage Precautions

1. Charging Usage Principles
2. Charging Indicator Light Description
3. Charging Interface Description
4. Low Voltage Reminder

## 1. Charging Usage Principles


---

1. The car must not be used while charging.
2. When battery voltage drops below 3.7V, charge promptly; fully charged battery voltage is approximately 4.2V.
3. When not using for a long time, remove the battery from the expansion board. Even in standby mode, the battery will still have some consumption. Before using again, fully charge the battery first.


## 2. Charging Indicator Light Description

---

- During charging, the Charging red charging indicator light is on.

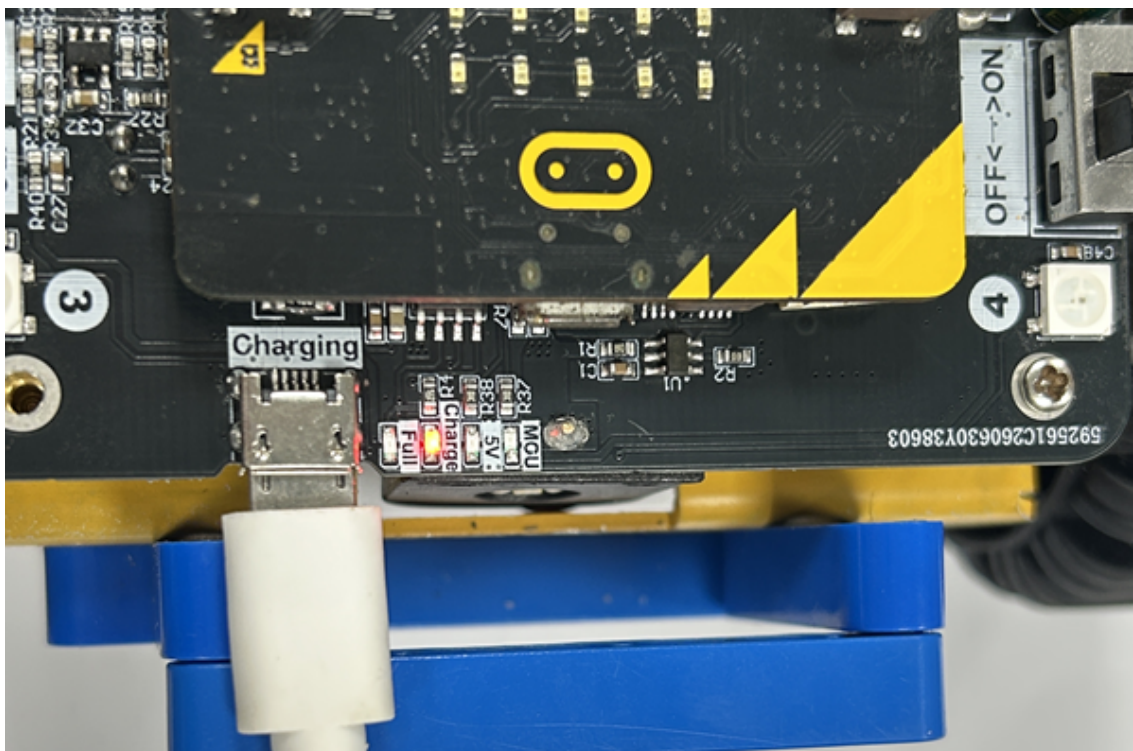

- After fully charged, the Full green indicator light is on, and the Charging red charging indicator light turns off.

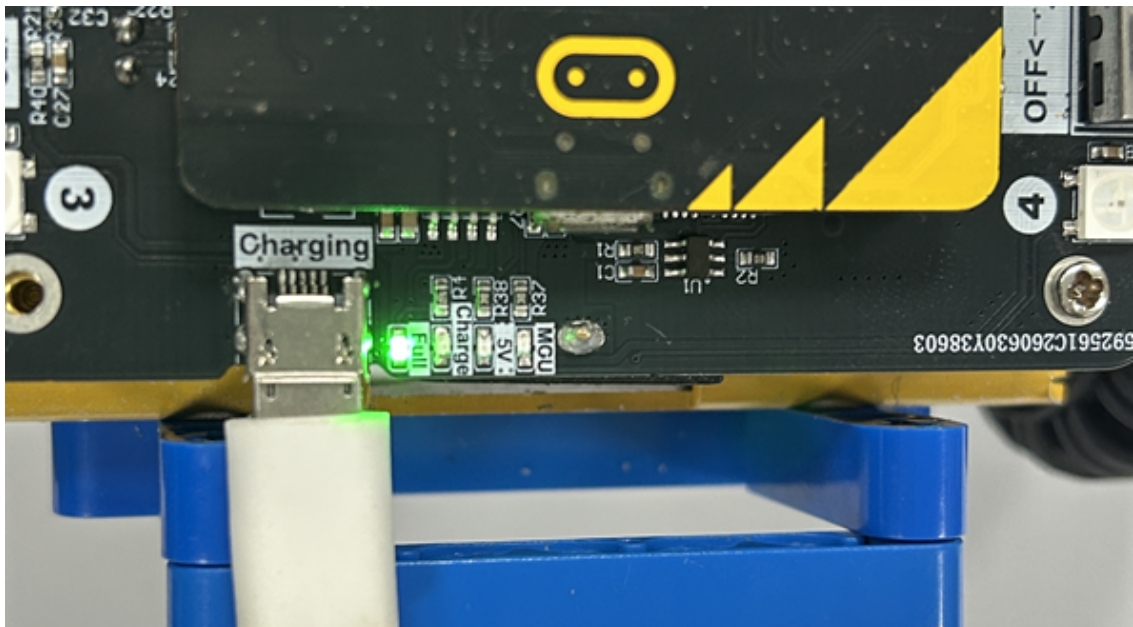

### 3. Charging Interface Description

- The car charging interface is located on the expansion board, not on the micro:bit board.
- You can only charge by plugging into the Charging interface on the expansion board; plugging into the micro:bit board will not charge.

### 4. Low Voltage Reminder

- If the front searchlight flashes red, it indicates battery voltage is too low. Turn off the car promptly and charge it.

