

DAP-LINK Program Download

DAP-LINK Program Download


- 1. Hardware Connection
- 2. Related Configuration
- 3. Program Download
- 4. Common Problems

This method directly uses Keil for flashing. **DAP-LINK needs to be purchased separately.**

Note: Do not use ST-LINK for downloading. It will lock the chip, and the download will show PDSC.

1. Hardware Connection


DAP-LINK	MSPM0G3519
GND	GND
VDD or 3V3	3V3
SWCLK	SWCLK(PA20)
SWDIO	SWDIO(PA19)

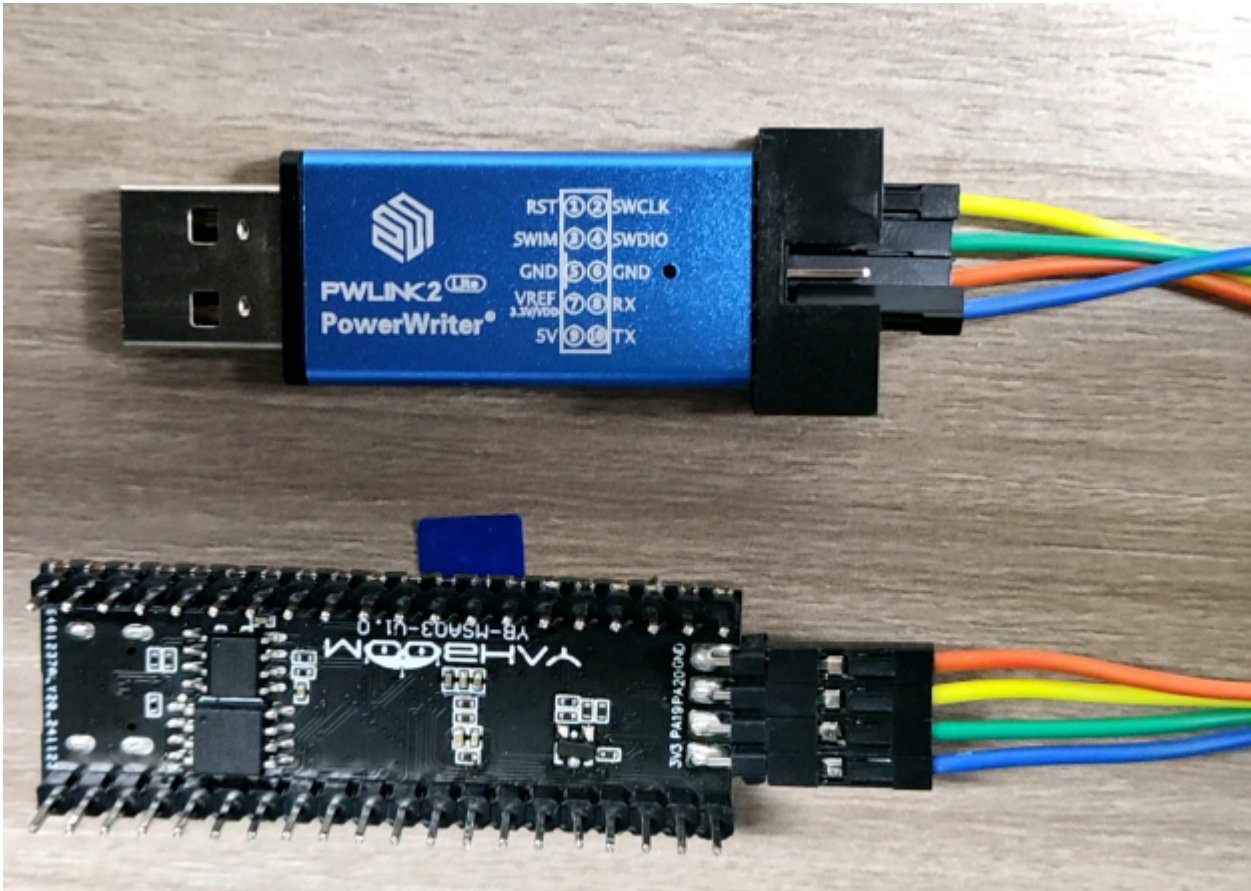


2. Related Configuration

Click the magic wand **Options** for **Target**, select the **Debug** tab. The emulator is DAP-LINK, so select **CMSIS-DAP Debugger** here.


Then click **Setting**

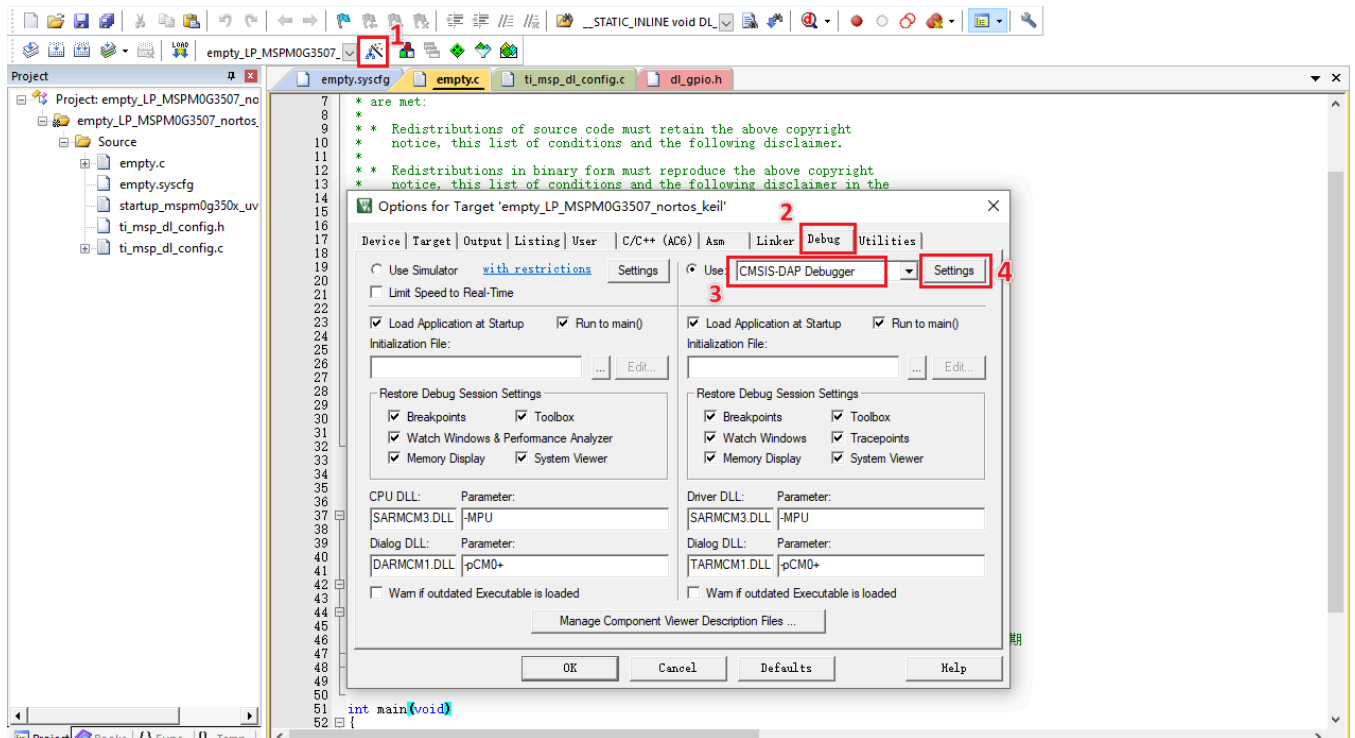

If the hardware is normal and the wiring is correct, a device number will automatically appear in the **SW Device** area, indicating the chip was recognized successfully.

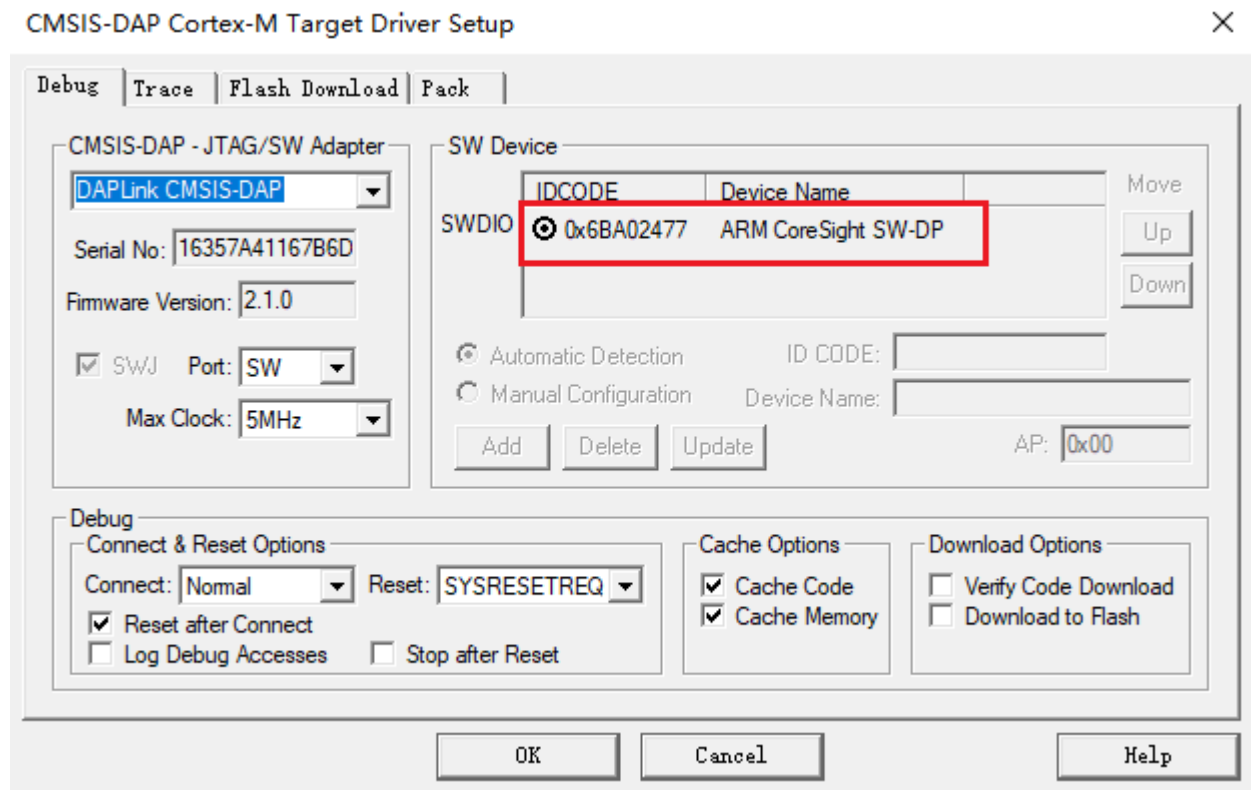


Then select the **Flash Download** tab, check **Reset** and **Run**, and select the correct chip.

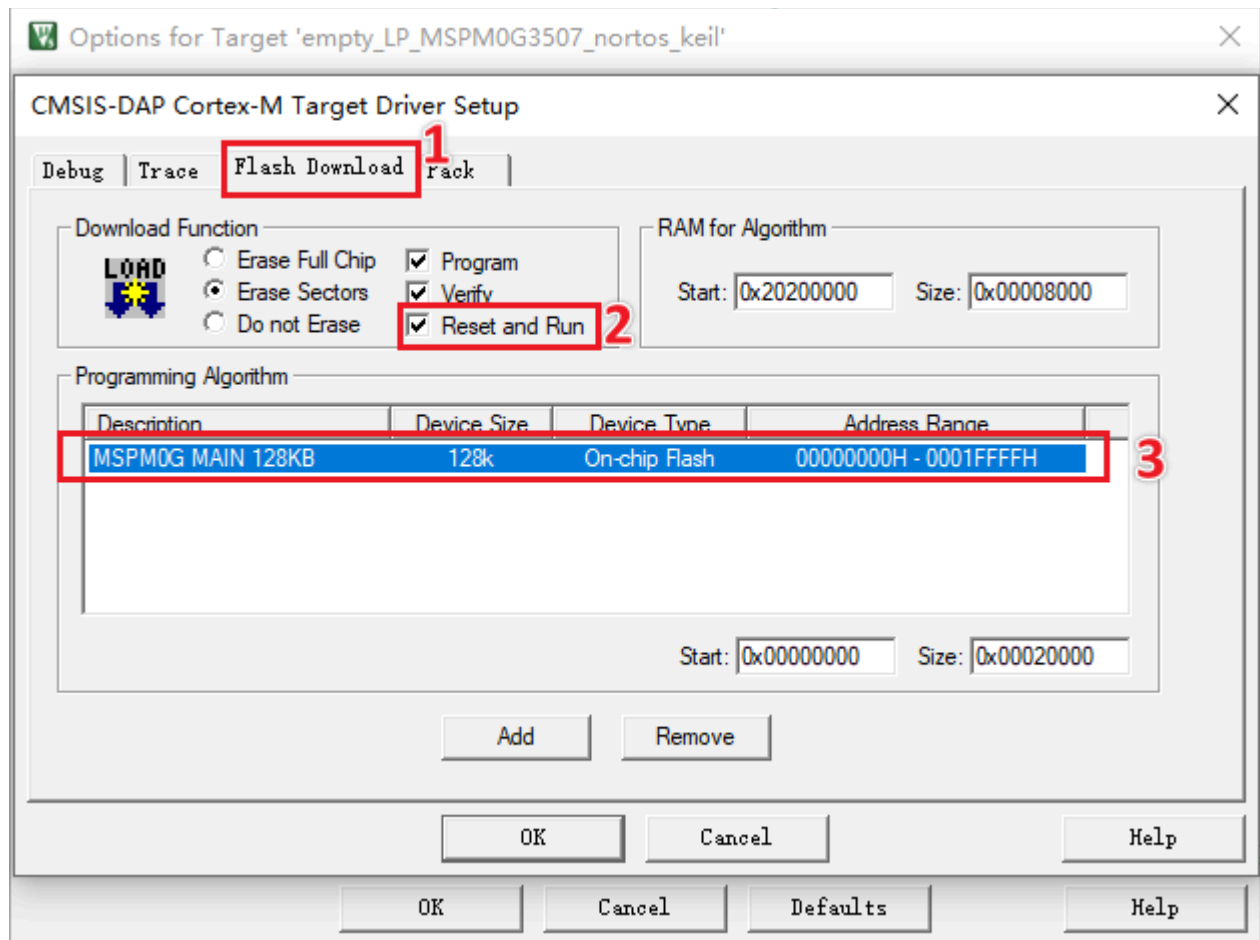


After completing the above configuration, click **OK**. You can now start downloading the code.

3. Program Download

First click **Build** to compile. After confirming successful compilation, click the **Download** icon to start downloading.




Wait for the progress bar at the bottom to complete. When it shows "Flash Load finished", the download was successful.

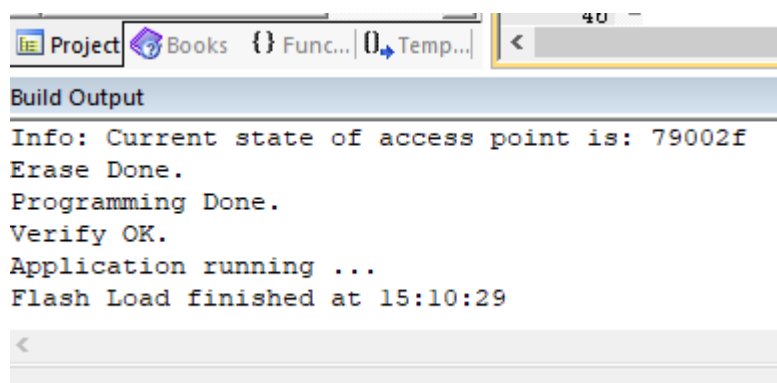


4. Common Problems

1. Error: Error: Flash Download failed - "Cortex-M0+"

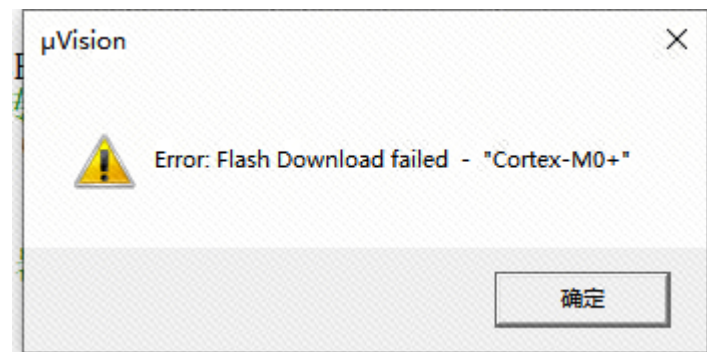

Answer: Cause 1: Wiring error; Cause 2: Download algorithm not added

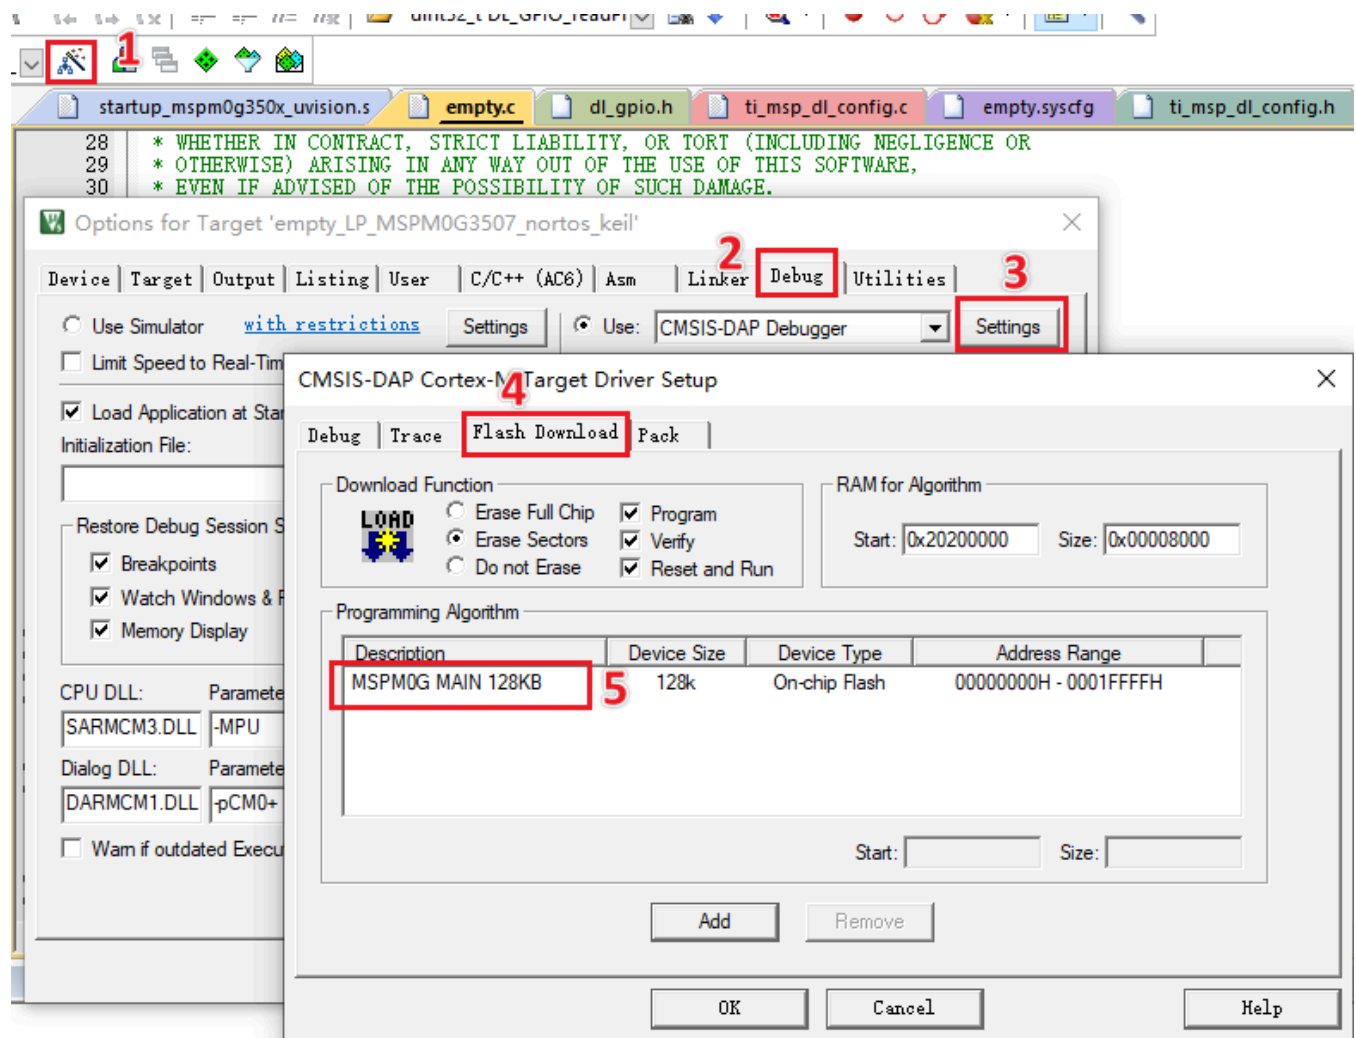

2. Error: Cannot Load Flash Device Description!

Answer: Download algorithm not added. You can add it following this method:

