OpenClaw Common CLI Commands

OpenClaw Common CLI Commands

1. Course Content
    Course Overview
2. Initial Configuration
    2.1 configure —— Configuration Wizard
    2.2 View OpenClaw Version
    2.3 View Help Information for All Available Commands
3. Gateway Management
4. Model Management
    4.1 View Model List and Status
    4.2 Set Default Model
5. Skills and Plugin Management
    5.1 Skills Basic Operations
    5.2 Plugin Management
6. Configuration, Logs, and Other Useful Commands
    6.1 View Logs
    6.2 Session Management
    6.3 Communication Channel Management

1. Course Content

Course Overview

OpenClaw CLI is the command-line management tool provided by the OpenClaw robot system. This section will introduce some of the most frequently used CLI commands.

2. Initial Configuration

`openclaw onboard` is OpenClaw's interactive onboarding wizard. It has been explained in the API-KEY Configuration chapter:


- Configure API Key and model connection information
- Set Gateway running parameters
- Select Skills to enable

```
openclaw onboard
```

2.1 configure —— Configuration Wizard

If parameters need adjustment after initial onboarding, you can use the `configure` command to re-enter the interactive configuration interface:

```
openclaw configure
```

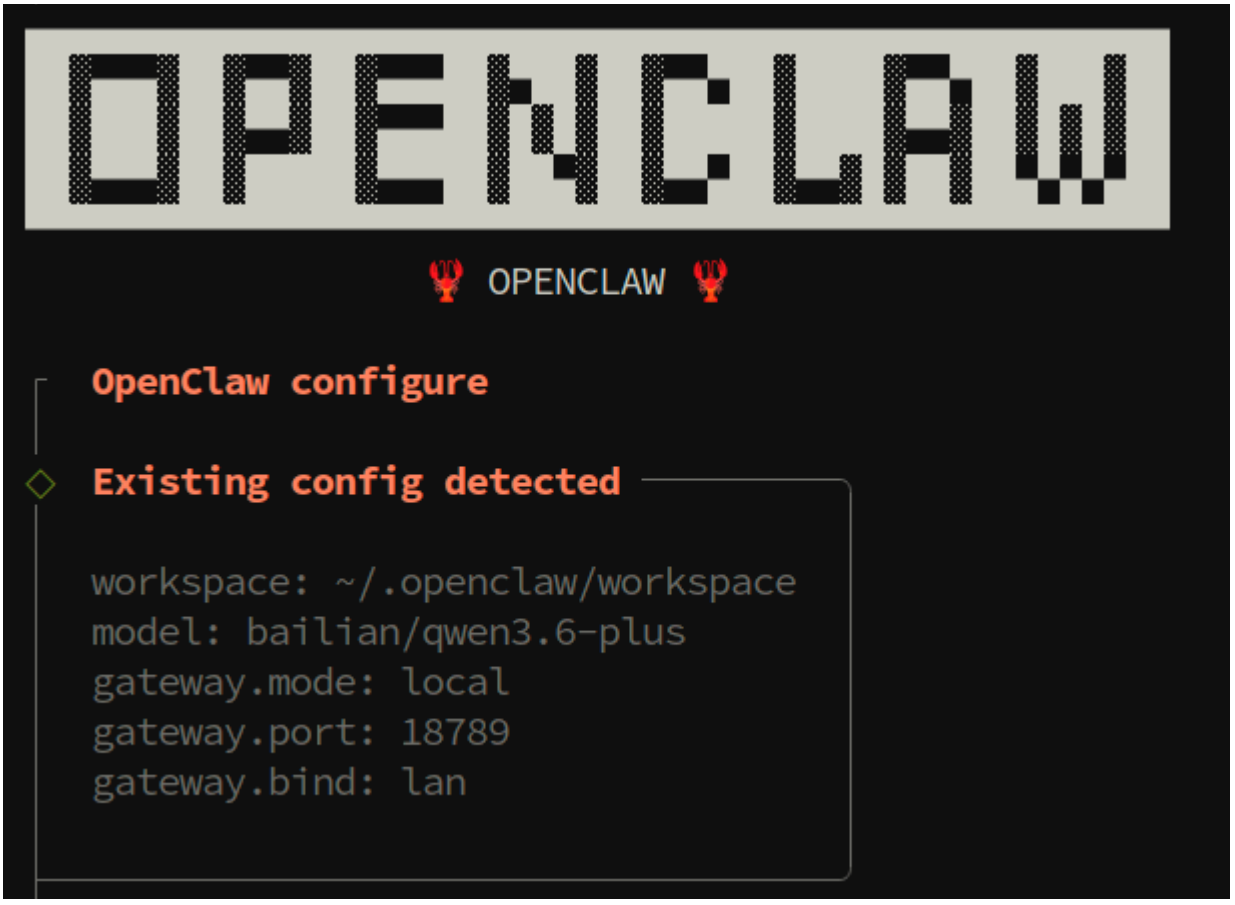

2.2 View OpenClaw Version

```
openclaw --version
```

2.3 View Help Information for All Available Commands

```
openclaw --help
```

```
Examples:
  openclaw models --help
    Show detailed help for the models command.
  openclaw channels login --verbose
    Link personal WhatsApp Web and show QR + connection logs.
  openclaw message send --target +15555550123 --message "Hi" --json
    Send via your web session and print JSON result.
  openclaw gateway --port 18789
    Run the WebSocket Gateway locally.
  openclaw --dev gateway
    Run a dev Gateway (isolated state/config) on ws://127.0.0.1:19001.
  openclaw gateway --force
    Kill anything bound to the default gateway port, then start it.
  openclaw gateway ...
    Gateway control via WebSocket.
  openclaw agent --to +15555550123 --message "Run summary" --deliver
    Talk directly to the agent using the Gateway; optionally send the WhatsApp reply.
  openclaw message send --channel telegram --target @mychat --message "Hi"
    Send via your Telegram bot.
```

3. Gateway Management

- OpenClaw's default gateway is set to start automatically on boot

```
openclaw gateway start     # Start Gateway
openclaw gateway stop      # Stop Gateway
openclaw gateway restart   # Restart Gateway
```

- View the detailed running status of the Gateway, including runtime, connection count, and other information:

```
openclaw gateway status
```

```
Service: systemd (enabled)
File logs: /tmp/openclaw/openclaw-2026-04-28.log
Command: /usr/local/bin/node /home/jetson/.npm-global/lib/node_modules/openclaw/dist/index.js gateway --port 18
789
Service file: ~/.config/systemd/user/openclaw-gateway.service
Service env: OPENCLAW_GATEWAY_PORT=18789

Config (cli): ~/.openclaw/openclaw.json
Config (service): ~/.openclaw/openclaw.json

Gateway: bind=lan (0.0.0.0), port=18789 (service args)
Probe target: ws://127.0.0.1:18789
Dashboard: http://192.168.12.28:18789/
Probe note: bind=lan listens on 0.0.0.0 (all interfaces); probing via 127.0.0.1.

Runtime: running (pid 1511, state active, sub running, last exit 0, reason 0)
RPC probe: ok

Listening: *:18789
Troubles: run openclaw status
Troubleshooting: https://docs.openclaw.ai/troubleshooting
```

4. Model Management

4.1 View Model List and Status

- List all configured models and their basic information:

```
openclaw models list
```

- View the status of all currently available models, including connection status, latency, availability, etc.:

```
openclaw models status
```

4.2 Set Default Model

Set a certain model as the system default model, which will be used by default for subsequent conversations:

```
openclaw models set gpt-4o
```


> **Tip:** The model name must exactly match the identifier in the configuration. You can view available model names via `openclaw models list`.

5. Skills and Plugin Management

5.1 Skills Basic Operations

List all currently installed Skills:

```
openclaw skills list
```

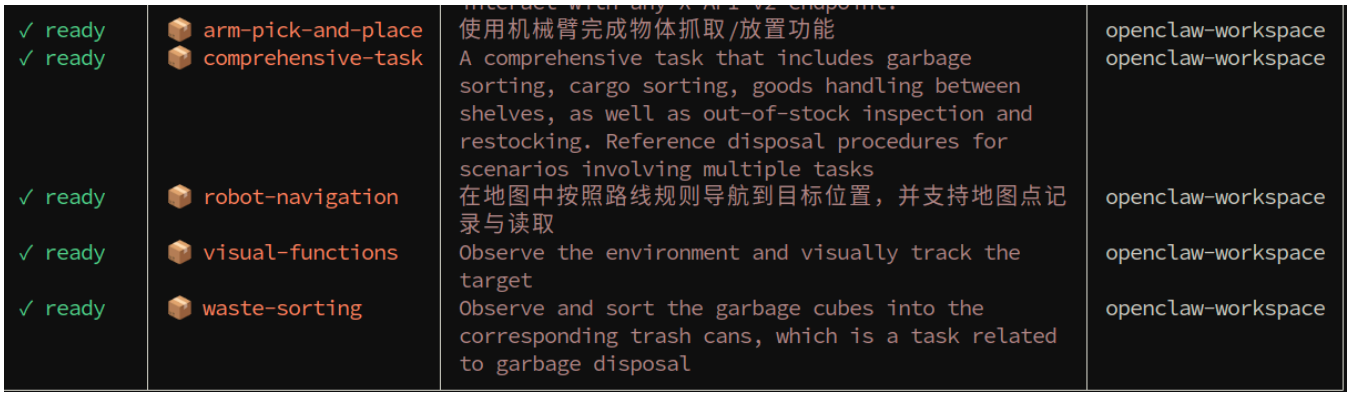

✓ ready	📦 arm-pick-and-place	使用机械臂完成物体抓取/放置功能	openclaw-workspace
✓ ready	📦 comprehensive-task	A comprehensive task that includes garbage sorting, cargo sorting, goods handling between shelves, as well as out-of-stock inspection and restocking. Reference disposal procedures for scenarios involving multiple tasks	openclaw-workspace
✓ ready	📦 robot-navigation	在地图中按照路线规则导航到目标位置，并支持地图点记录与读取	openclaw-workspace
✓ ready	📦 visual-functions	Observe the environment and visually track the target	openclaw-workspace
✓ ready	📦 waste-sorting	Observe and sort the garbage cubes into the corresponding trash cans, which is a task related to garbage disposal	openclaw-workspace


5.2 Plugin Management

List all currently installed plugins:

```
openclaw plugins list
```

Enable or disable a certain plugin:

```
openclaw plugins enable plugin-id     # Enable plugin
openclaw plugins disable plugin-id    # Disable plugin
```

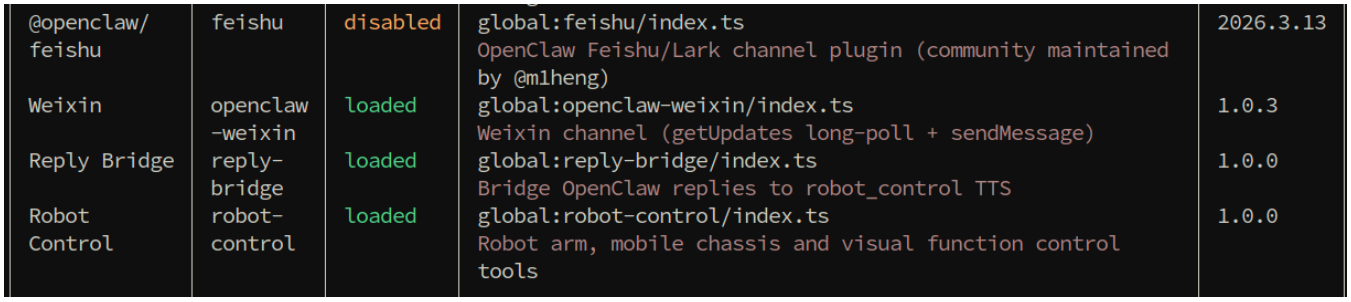

@openclaw/feishu	feishu	disabled	global:feishu/index.ts OpenClaw Feishu/Lark channel plugin (community maintained by @m1heng)	2026.3.13
Weixin	openclaw-weixin	loaded	global:openclaw-weixin/index.ts Weixin channel (getUpdates long-poll + sendMessage)	1.0.3
Reply Bridge	reply-bridge	loaded	global:reply-bridge/index.ts Bridge OpenClaw replies to robot_control TTS	1.0.0
Robot Control	robot-control	loaded	global:robot-control/index.ts Robot arm, mobile chassis and visual function control tools	1.0.0

6. Configuration, Logs, and Other Useful Commands

6.1 View Logs

```
openclaw logs --follow
```

Using the `--follow` parameter will continuously output logs to the terminal. Press `Ctrl+C` to exit tracking mode.

6.2 Session Management

View a list of all currently active sessions:

```
openclaw sessions
```

```
Session store: /home/jetson/.openclaw/agents/main/sessions/sessions.json
Sessions listed: 7
Kind   Key                          Age       Model          Tokens (ctx %)       Flags
direct agent:main:main              15h ago   qwen3.6-plus   unknown/1000k (?%)   system id:eb11227a-e18c-4694-8c45-a56b1bdf5d3d
direct agent:main:feish...9bf6ae    5d ago    qwen3.6-plus   unknown/1000k (?%)   system id:47c556a5-741d-45f2-83b6-88333753d7c6
group  agent:main:openc...wechat    5d ago    qwen3.6-plus   unknown/1000k (?%)   id:a55d8c87-acf8-4f16-ad8d-d0c3c1ef54dc
direct agent:main:openc...wechat    5d ago    qwen3.6-plus   unknown/1000k (?%)   system id:a1e9bfe5-3efa-442b-903c-6380de597c97
direct agent:main:feish...30f803    5d ago    qwen3.6-plus   unknown/1000k (?%)   id:6a840c66-7311-4dd5-b010-5fb53ac298bd
direct agent:main:feish...969539    5d ago    qwen3.6-plus   unknown/1000k (?%)   id:4b2f82b0-b67b-497b-bbbb-dd31e97aaf29
direct agent:main:opena...on-001    6d ago    qwen3.6-plus   unknown/1000k (?%)   system id:7912af8c-fd5e-432c-bb37-04dfd808d1e6
```

6.3 Communication Channel Management

- View all available communication channels (Feishu, WeChat, etc.)

```
openclaw channels list
```

```
Chat channels:
- WhatsApp default: not linked, enabled
- Feishu default: configured, enabled
- openclaw-weixin 9ae40d3fa0a1-im-bot: configured, enabled
```