# 4. Voice control robotic arm grip objects

## 4.1 Function description

Through the interaction with the voice module, the rosmaster can be navigated to point A/B/C/D/origin position, any of the five positions. After reaching the destination, the robotic arm on the rosmaster can also be used to grab the handed object, and then Then command it to navigate to point A/B/C/D/origin position, any of the five positions, and put the object down, waiting for the next command.

Voice control allows rosmaster to go to any of the five positions of A/B/C/D/origin point. After reaching the destination, you can also let the robotic arm grab the object, and then let rosmaster go to any of the five positions of A/B/C/D/origin point, and put the object down, waiting for the next command.

## 4.2 Steps

#### 4.2.1 ROS package path

```
~/yahboomcar_ws/src/yahboomcar_voice_ctrl/
```

#### 4.2.2 start

Note: Multi-machine communication needs to be implemented between rosmaster X3Plus and the virtual machine, you can view the "6.Linux operating system\6.4 Multi-machine communication configuration tutorial for configuration.

```
#rosmaster X3Plus running
#You need to enter docker first, perform this step more
#If running the script to enter docker fails, please refer to 07.Docker-orin/05,
Enter the robot's docker container
~/run_docker.sh
roslaunch yahboomcar_voice_ctrl voice_transport_base.launch
```

<Open another terminal and enter the same docker container</p>

1. In the above steps, a docker container has been opened. You can open another terminal on the host (car) to view:

```
docker ps -a

jetson@ubuntu:~$ docker ps -a

CONTAINER ID IMAGE COMMAND CREATED STATUS PORTS NAMES
5b698ea10535 yahboomtechnology/ros-foxy:3.3.9 "/bin/bash" 3 days ago Up 9 hours ecstatic_lewin
jetson@ubuntu:~$
```

2. Now enter the docker container in the newly opened terminal:

```
docker exec -it 5b698ea10535 /bin/bash

jetson@ubuntu:~$ docker ps -a
CONTAINER ID IMAGE COMMAND CREATED STATUS PORTS NAMES
5b698ea10535 yahboomtechnology/ros-foxy:3.3.9 "/bin/bash" 3 days ago Up 9 hours ecstatic_lewin
jetson@ubuntu:~$ docker exec -it 5b698ea10535 /bin/bash

my_robot_type: x3 | my_lidar: a1 | my_camera: astrapro

root@ubuntu:/#
```


After successfully entering the container, you can open countless terminals to enter the container.

```
python3
~/yahboomcar_ws/src/yahboomcar_voice_ctrl/scripts/voice_ctrl_takethings.py
```

virtual machine running

```
roslaunch arm_color_transport transport_rviz.launch
```

Each tool annotation on the virtual machine rviz, as shown below.

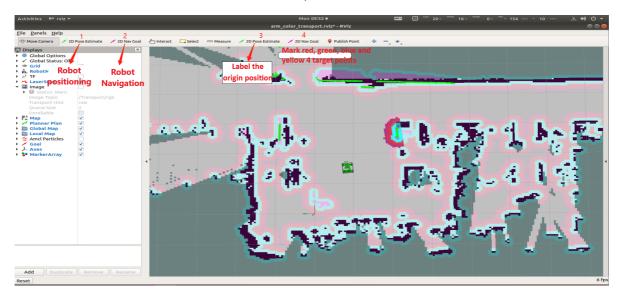

• Step 1

In rviz, use the Tool-1 to calibrate and position the rosmaster.

• Step 2

In rviz, use Tool-3 to label the origin position for rosmaster. (This origin position is the position that the car will automatically return to after putting down the color blocks).

• Step 3

In rviz, use Tool-4 to mark the red, green, blue and yellow destinations on the map in turn. After the rosmaster's robotic arm grips the color block, it will navigate to the destination corresponding to the color block.

Note: We need four points to be marked in a row, and the distance between the front and rear cannot be too far apart, otherwise, when ROSMASTER plans the path, it may hit other color blocks.



Note: **point A** corresponds to **red** marker point; **point B** corresponds to **green** marker point; **point C** corresponds to **blue** marker point; **point D** corresponds to **yellow** marker point;

- Step 4 (Go to point A and then take the item and place it in point B)
  - 1. We need to say "Hi, Yahboom", the voice module will reply "Hi, i'm here"
  - 2. Then we can say "Go to the point A", the voice module will say "OK, I'm going to the point A" and robot will autonomously go to point A.
  - 3. After reaching the destination, the buzzer will whistle once. We can say "Clip the block", after the module receives our command, the buzzer will whistle once, indicating that the command is received.
  - 4. Then, we need give color bloc, to the gripper, the buzzer will whistle once, the gripper will pick up the color block, and voice module will reply "OK,let me clip them".

#### 4.2.3、Code voice\_ctrl\_takethings.py

• Code path

~/yahboomcar/src/yahboomcar\_voice\_ctrl/scripts

- Core code analysis
  - 1) important mode status

```
self.model== "Init": initialized state
self.model == "Grip_Target": grip state
self.model == "next_points": Navigate to the next target point state
self.model == "Grip_down": Put down the object state
```

### 2) important flag flag bit

self.clip:has clipped the object, True means the object has been clipped, Fasle means the object has not been clipped self.come\_back\_flag: Whether to return to the origin position flag, True is to go back, False is not to go back self.ros\_nav.goal\_result:Whether to reach the navigation target point, 0 is not reached, 3 is reached

## 3) important functions

next\_points: recognize voice, navigate to the next target point comeback: return to origin position

Grip\_down: Put down the object

Grip\_Target: recognize voice, grip objects or navigate to the next target point

### • Program Description

In the main function, directly enter the process function, judge the mode state and the value of the flag in the process function, and then execute the corresponding function or code.

#### 4.3 Flow chart

