

Common AT Commands

Common AT Commands


- AT Test Command
- ATE Echo Setting
- Reset Module
- Query Module Information
- Query Network Information
- Network Mode Setting (Power-off Save)
- Set USBPID (Power-off Save)

All AT commands need to add a newline character (\r\n) at the end to take effect, and return OK indicates that the command was executed successfully.

AT Test Command

Command	Function	Return
AT	Test	OK

Example:

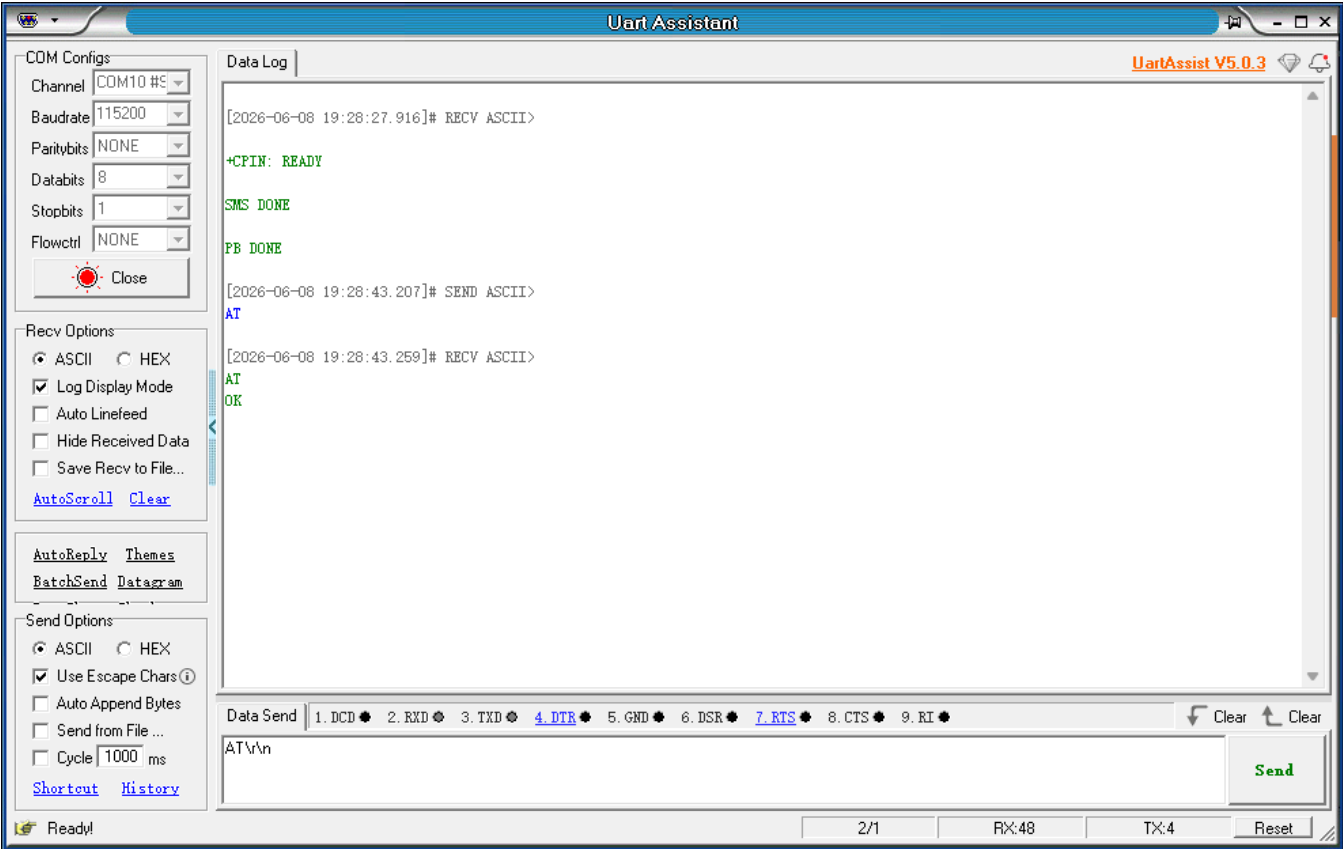

ATE Echo Setting

Command	Function	Return
ATE1	Enable echo function, reply content includes AT command content, command execution result and status	OK
ATE0	Disable echo function, only reply command execution result and status, function失效 after restart	OK

Reset Module

Command	Function	Return
AT+CRESET	Restart module	OK

Query Module Information

Command	Function	Return
AT+CGMI	Query module manufacturer	SIMCOM INCORPORATED OK
AT+CGMM	Query module model	SIMCOM_SIM7600G-H OK
AT+CGSN	Query product serial number	SN code OK
AT+CSUB	Query module version and chip	+CSUB: B01V03 +CSUB: MDM9x07_LE20_G-H-M2_22_V1.01_200814 OK
AT+CGMR	Query firmware version serial number	+CGMR: LE20B01SIM7600G-H-M2 OK

Example:

```
AT+CGMI
SIMCOM INCORPORATED
OK

AT+CGMM
SIMCOM_SIM7600G-H
OK
```

AT+CGSN
868822040276444
OK

AT+CSUB
+CSUB: B01V03
+CSUB: MDM9x07_LE20_G-H-M2_22_v1.01_200814
OK

AT+CGMR
+CGMR: LE20B01SIM7600G-H-M2
OK

Query Network Information

Command	Function	Return
AT+CSQ	Query network signal quality, return signal value	+CSQ: OK
AT+CICCID	Query SIM card ICCID code	+ICCID: OK
AT+CPIN?	Query if SIM is recognized	READY OK
AT+CREG?	Query network registration status	+CREG: OK
AT+COPS?	Query current operator	+COPS: OK
AT+CNBP?	Query current optimal frequency band	+CNBP: OK
AT+CPSI?	Query UE system information	+CPSI: OK
AT+CNSMOD?	Display network system mode	+CNSMOD: OK

Example:

AT+CSQ
+CSQ: 27,99
OK

AT+CICCID
+ICCID: 89860325157559155962

OK

Network mode function correspondence

<mode>	2	–	Automatic
	13	–	GSM Only
	14	–	WCDMA Only
	38	–	LTE Only
	59	–	TDS-CDMA Only
	9	–	CDMA Only
	10	–	EVDO Only
	19	–	GSM+WCDMA Only
	22	–	CDMA+EVDO Only
	48	–	Any but LTE
	60	–	GSM+TDSCDMA Only
	63	–	GSM+WCDMA+TDSCDMA Only
	67	–	CDMA+EVDO+GSM+WCDMA+TDSCDMA Only
	39	–	GSM+WCDMA+LTE Only
	51	–	GSM+LTE Only
	54	–	WCDMA+LTE Only

Set USBPID (Power-off Save)

Command	Function	Return
AT+CUSBPIDSWITCH?	Query current USBPID value	+CUSBPIDSWITCH: OK
AT+CUSBPIDSWITCH=?	Query USBPID optional parameters	+CNMP: (9000,9001,9002,9003,9011,...), (0-1),(0-1) OK
AT+CUSBPIDSWITCH=9001,1,1	Set USBPID to 9001, for Windows system	OK
AT+CUSBPIDSWITCH=9003,1,1	Set USBPID to 9003, for Windows system	OK
AT+CUSBPIDSWITCH=9011,1,1	Set USBPID to 9011, for Linux system	OK

Note:

For more detailed AT command introduction, please check the file [Annex] - [AT Command Manual].