

8、HD camera Autopilot

8、HD camera Autopilot

8.1、Introduction

8.2、Steps

8.2.1、Start up

8.2.2、Identify

8.2.3、Color calibration

8.2.4、Autopilot

8.1、Introduction

The Transbot robot HD camera Autopilot can recognize multiple colors at any time, and autonomously storing the currently recognized colors.

According to the color of the detection and recognition, the function of real-time obstacle avoidance can also be realized in the process of Autopilot .

The color tracking of the Transbot robot can also realize the function of real-time HSV regulation. By adjusting the high and low thresholds of HSV, the interfering colors can be filtered out, so that the square can be identified ideally in a complex environment. If the color picking effect is not ideal At this time, we need to move the car to a different environment to calibrate it, so that we can recognize the color we need in a complex environment.

- **HSV**

H: 0 — 180

S: 0 — 255

V: 0 — 255

Part of the red is classified as the purple range here:


	black	gray	white	red		orange	yellow	green	verdant	blue	purple
hmin	0	0	0	0	156	11	26	35	78	100	125
hmax	180	180	180	10	180	25	34	77	99	124	155
smin	0	0	0	43		43	43	43	43	43	43
smax	255	43	30	255	255	255	255	255	255	255	255
vmin	0	46	221	46	46	46	46	46	46	46	46
vmax	46	220	255	255	255	255	255	255	255	255	255

- **HSV**

- **Lightness V**

- **Saturation S**


- **Hue H**

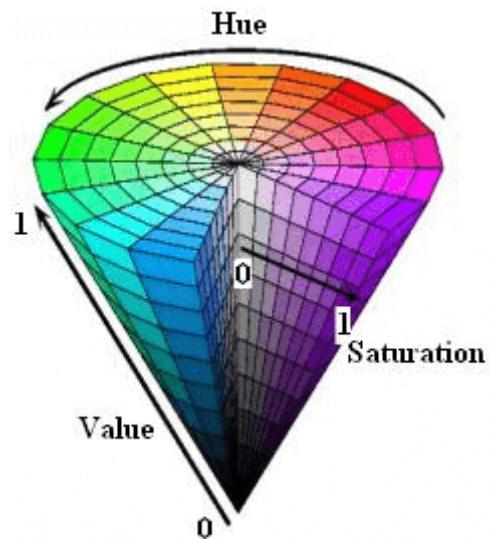

8.2、Steps

Note: The [R2] of the handle remote controller can [Pause/Open] for all functions of robot car

Place the robot at the starting position so that the depth camera is facing down. as shown below.

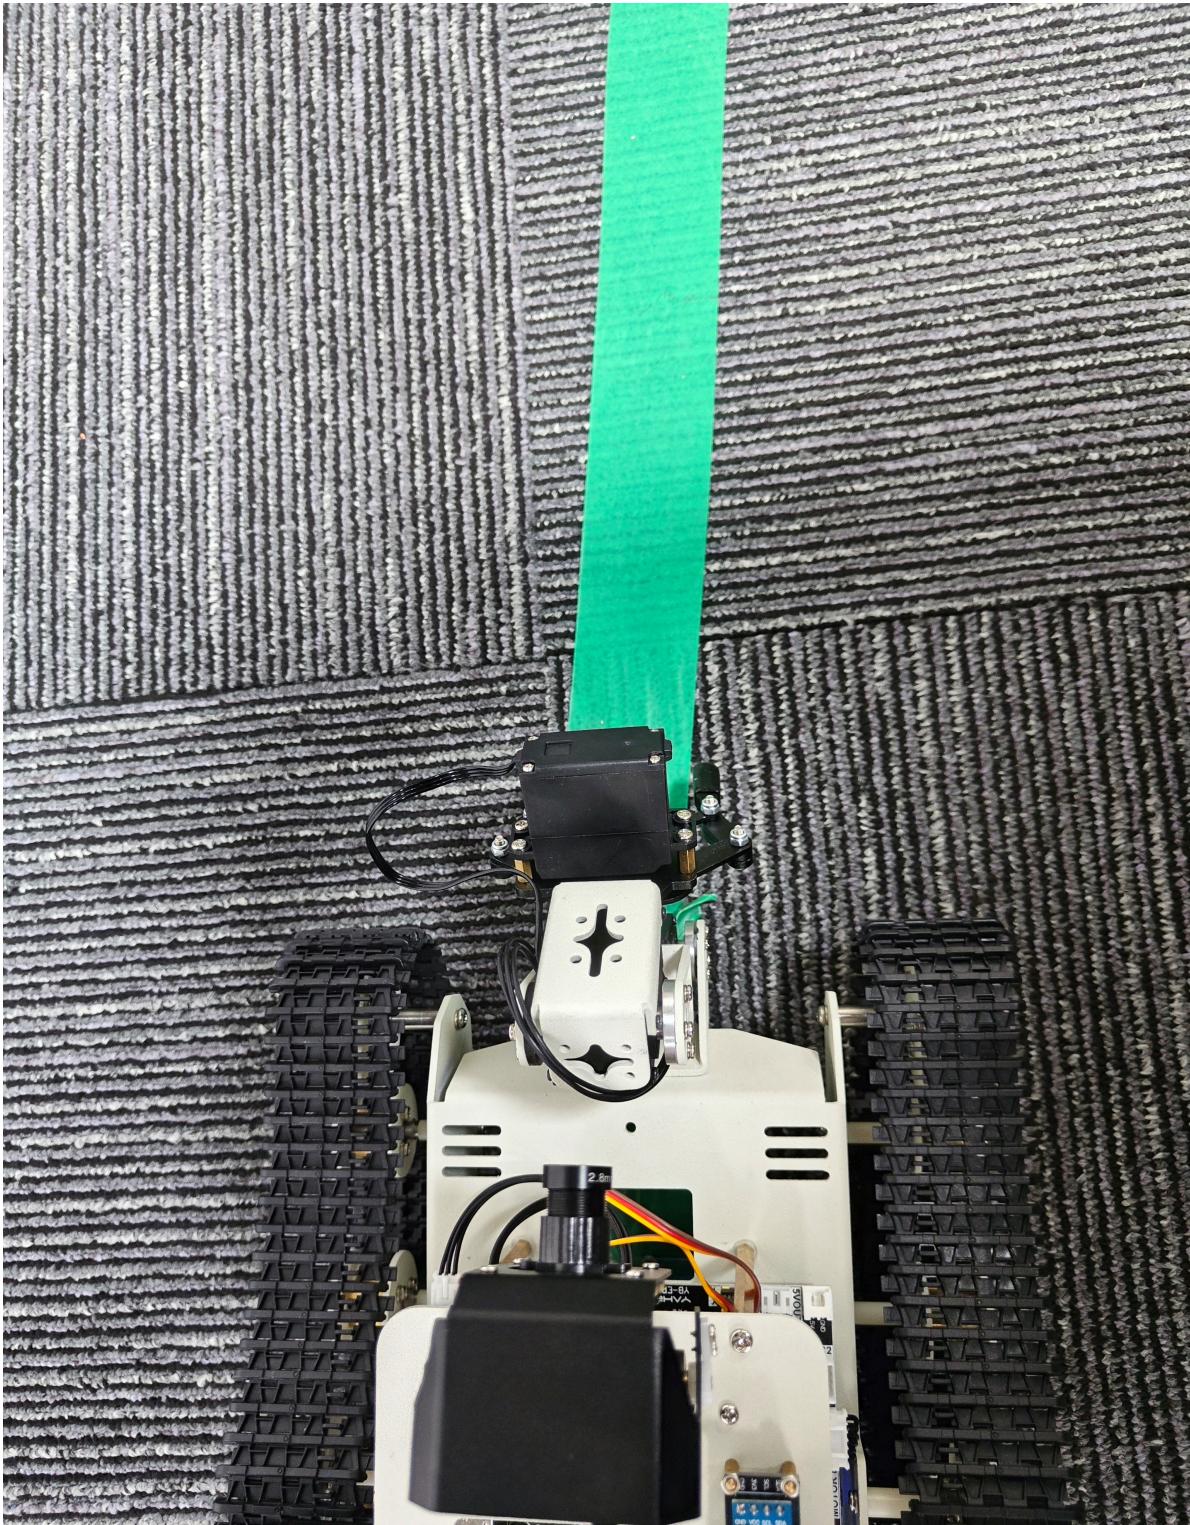

8.2.1、Start up

Start the robot chassis first

```
roslaunch transbot_bringup bringup.launch
```

Method 1

(robot) start HD camera

```
roslaunch usb_cam usb_cam-test.launch
```

(Virtual Machine) Start Autopilot Control

```
roslaunch transbot_linefollow follow_line.launch videoSwitch:=False
```

To achieve remote control in the same LAN, multi-machine communication needs to be configured.

Method 2

Note: 【q】 key to exit.

```
roslaunch transbot_linefollow follow_line.launch videoSwitch:=true
```

This method can only be activated in the master control that the camera is connected.

- VideoSwitch parameter: whether to use the camera function package to start; for example: start usb_cam-test.launch, this parameter must be set to True; otherwise, it is False

Set the parameters according to your needs, and you can also modify the launch file directly, so you don't need to attach parameters when you start.

8.2.2. Identify

After startup, the system defaults to [Target Detection Mode], as shown in the figure below.



Keyboard key control:


【r】 : Color selection mode, the mouse can be used to select the area of the color to be recognized (cannot exceed the area range).

【i】 : Target detection mode. Color map on the left (Color), binary map on the right (Binary).

【q】 : Exit the program.

【Space key】 : Start autopilot

In the color selection mode, the mouse can be used to select the area of the color to be recognized (cannot exceed the area range), as shown below, release it to start recognition.

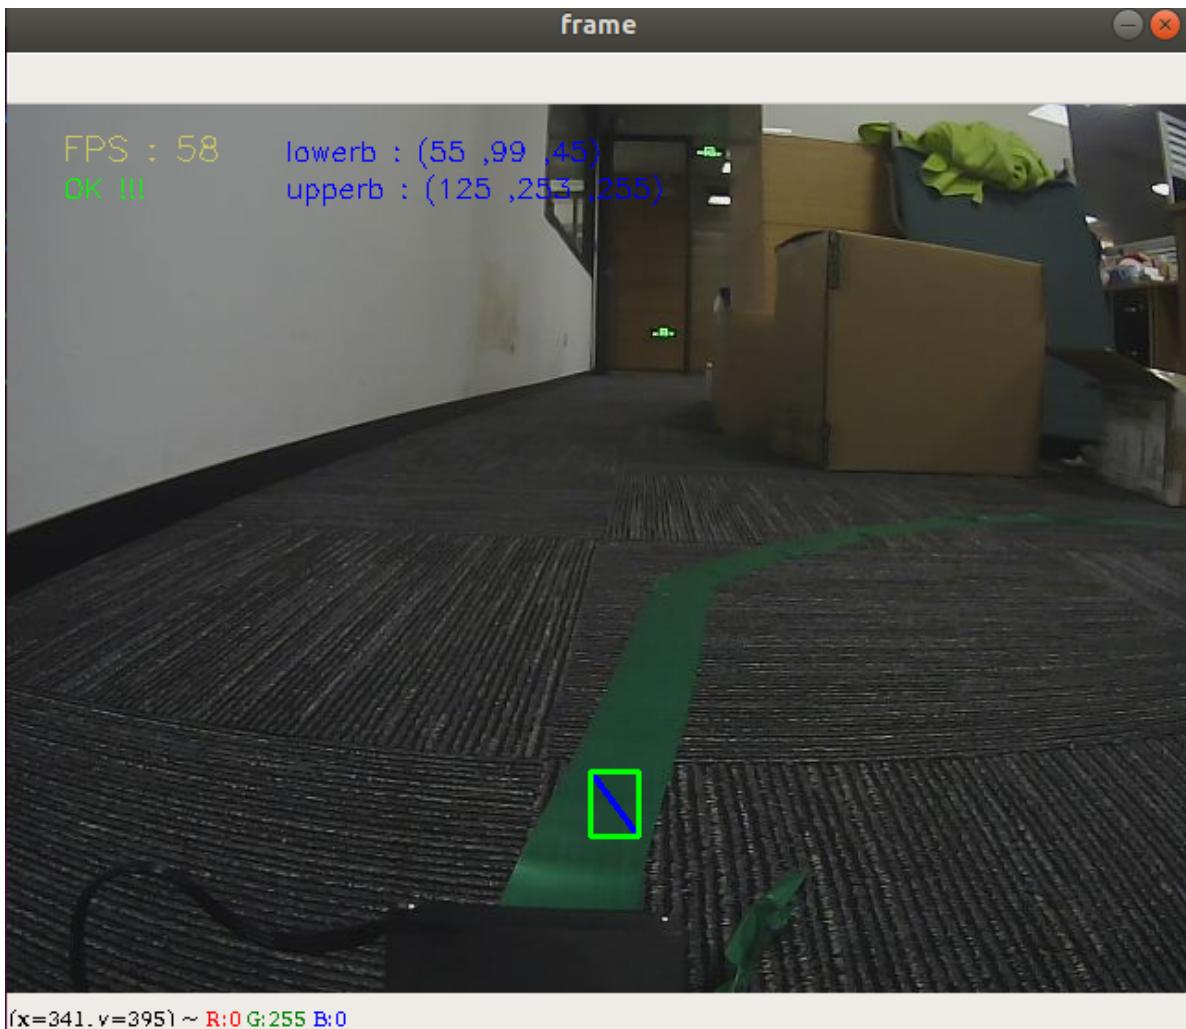


8.2.3、Color calibration

Dynamic parameter debugging tool

```
rosrun rqt_reconfigure rqt_reconfigure
```

Set the mode to [Target Detection Mode] and start the dynamic parameter debugging tool.

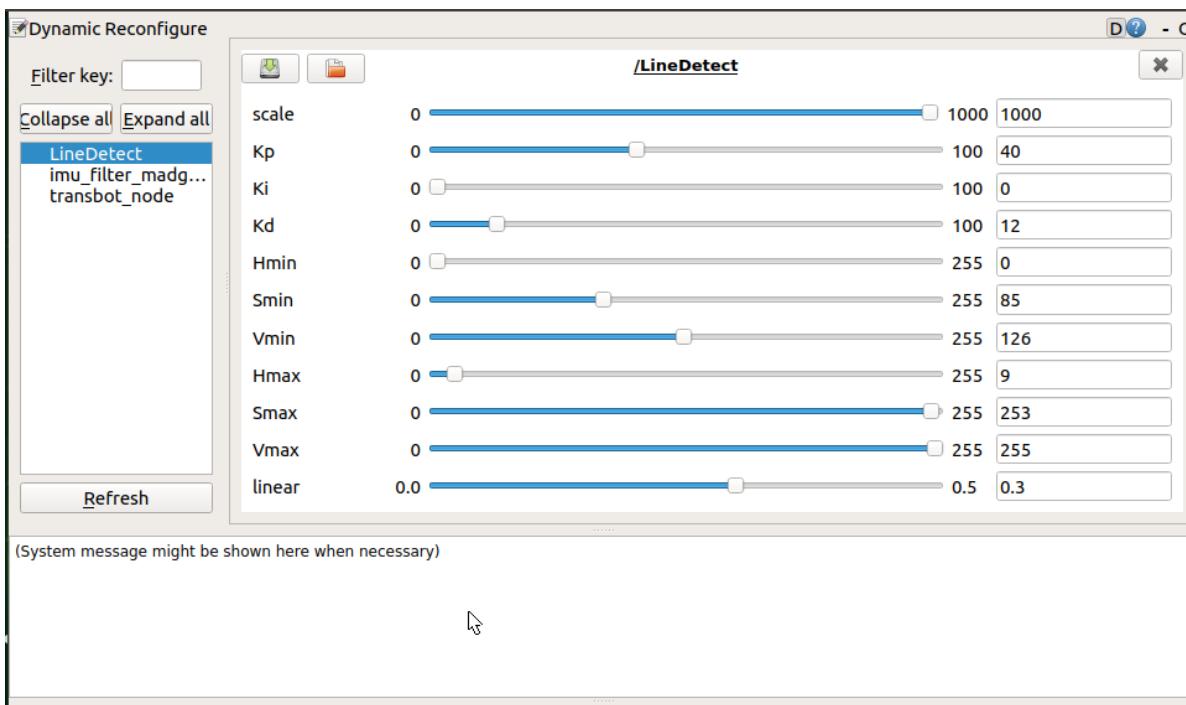

Select [LineDetect] node, generally only need to adjust [Hmin], [Smin], [Vmin], [Hmax], these four parameters can be well identified.

The slider is always in the dragging state, and no data will be transferred to the system. The data will actually be transferred to the system when you release it; you can also select a row and then slide the mouse wheel.

Parameter analysis:

【Kp】、【Ki】、【Kd】：PID control during the movement of the car.


【scale】：PID scaling.

【linear】：Robot car running speed; range [0, 0.45], unit: meter; set as required.

8.2.4. Autopilot

After identifying is ok, click [Space key] on the keyboard to execute the Autopilot program.

- View node

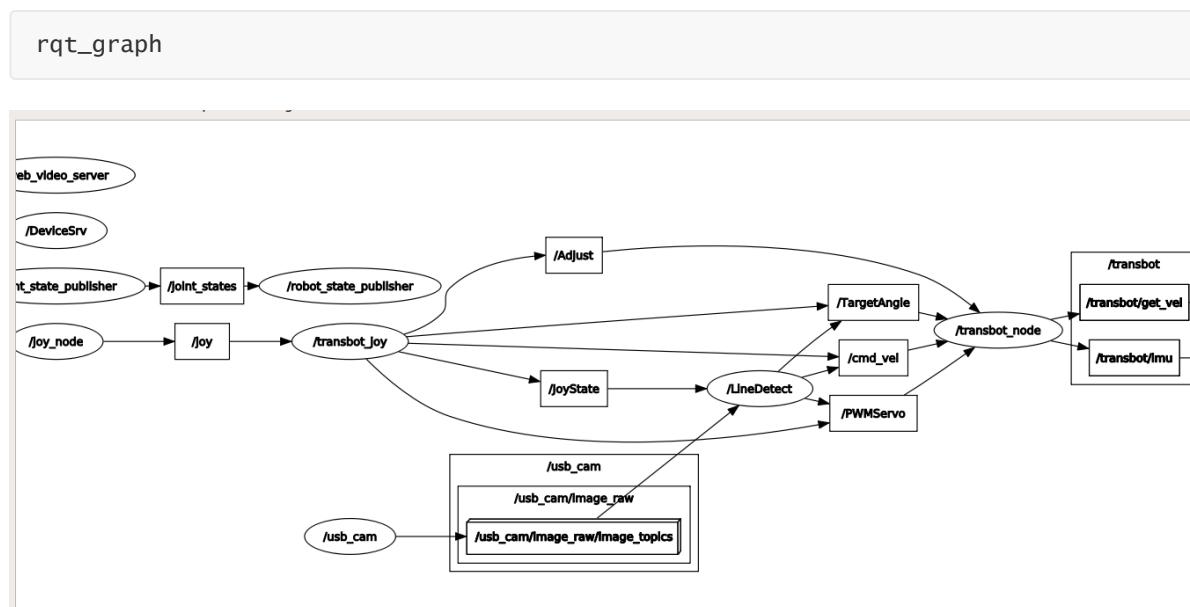

Node 【LineDetect】

- Subscribe

Image

Handle

- Publish

Car speed

Gimbal servo

robotic arm