



Mobile APP control

Before use, please burn the latest version of `minirobot` firmware for your device

First, you need to press the buttons on the screen to operate the robot arm.

1. Turn on your device
2. Select Transponder -> Bluetooth, then click OK. You will be taken to a page with some information about the current device and the Bluetooth Mac address.

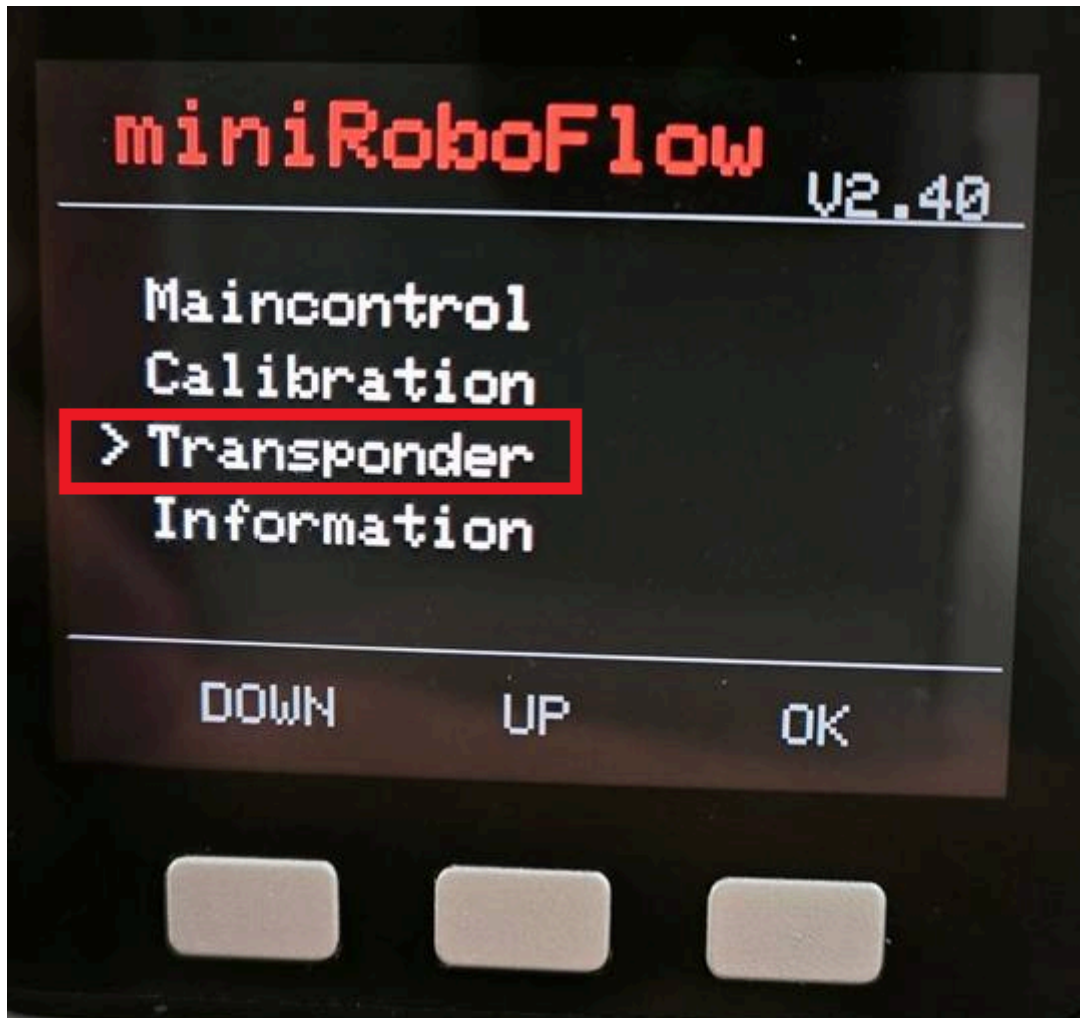

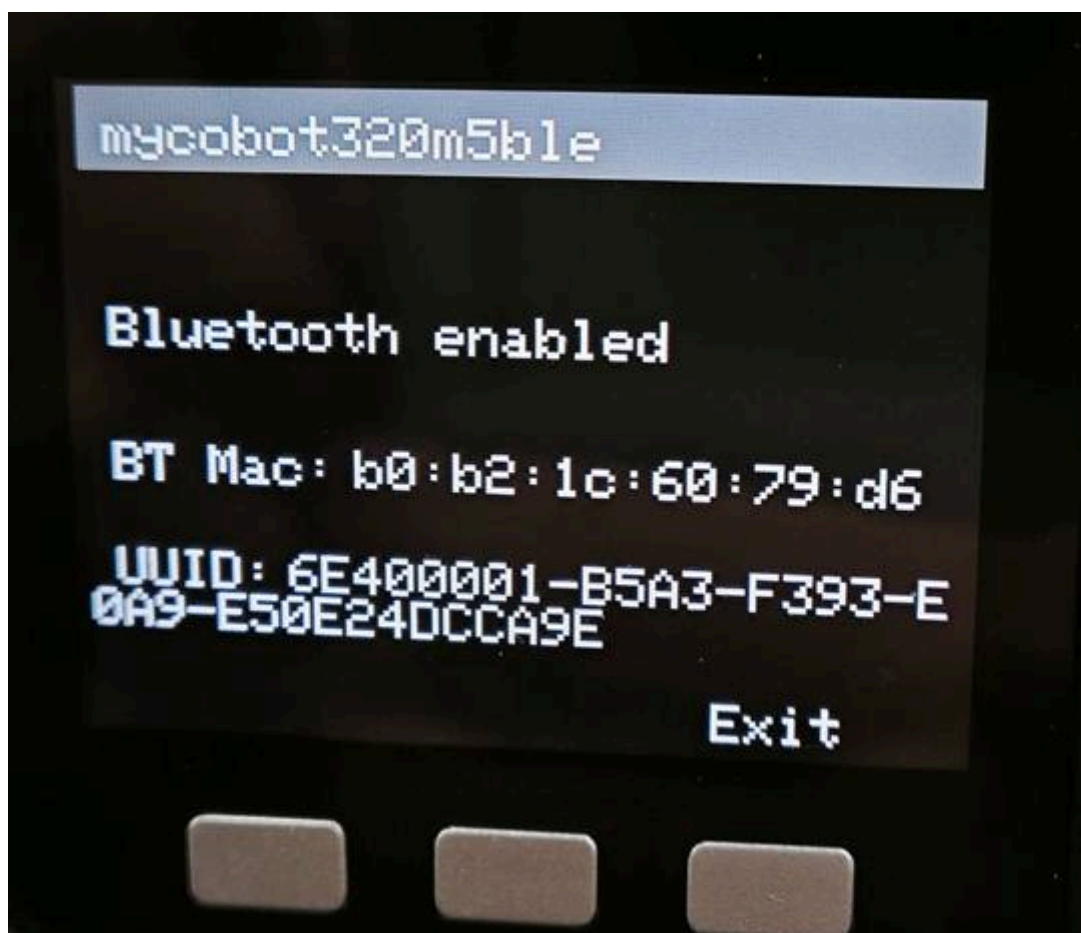

3. Next, you can use your phone to connect to the robotic arm.


1. Download the app

If you are an Android user, please go to [Google Play Store] and search for mycobot to download the APP. Or scan the QR code below to download the APP file. IOS users are not supported yet.




2. Bluetooth connection interface

Click the Bluetooth icon in the middle, select the Bluetooth device name [mycobot320m5ble], and click [Connect].

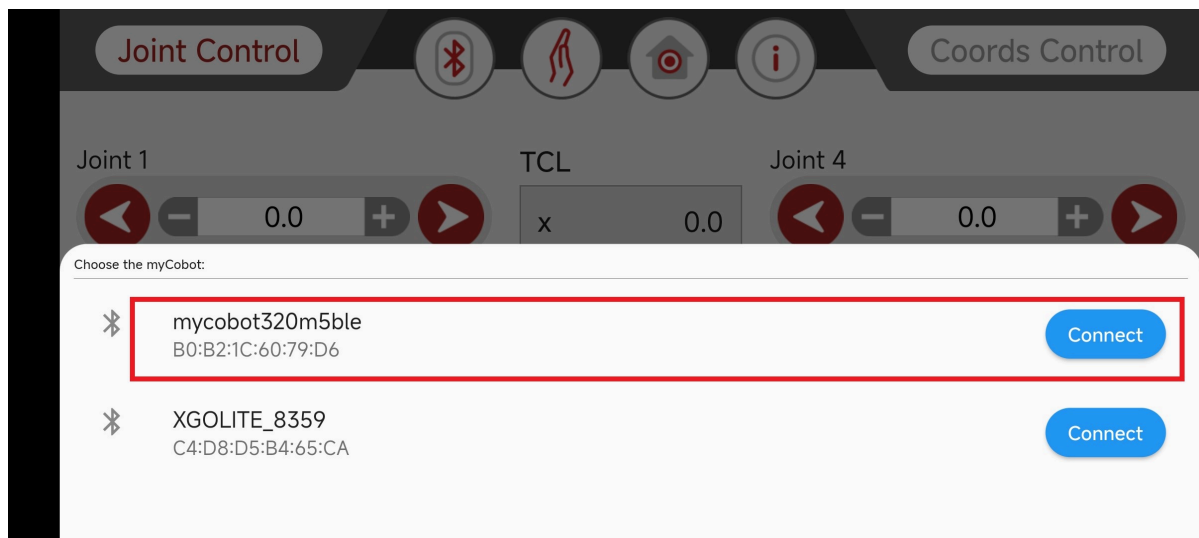


After the connection is successful, the status will change to [Disconnect]. Scroll down the Bluetooth interface to return to the control interface.

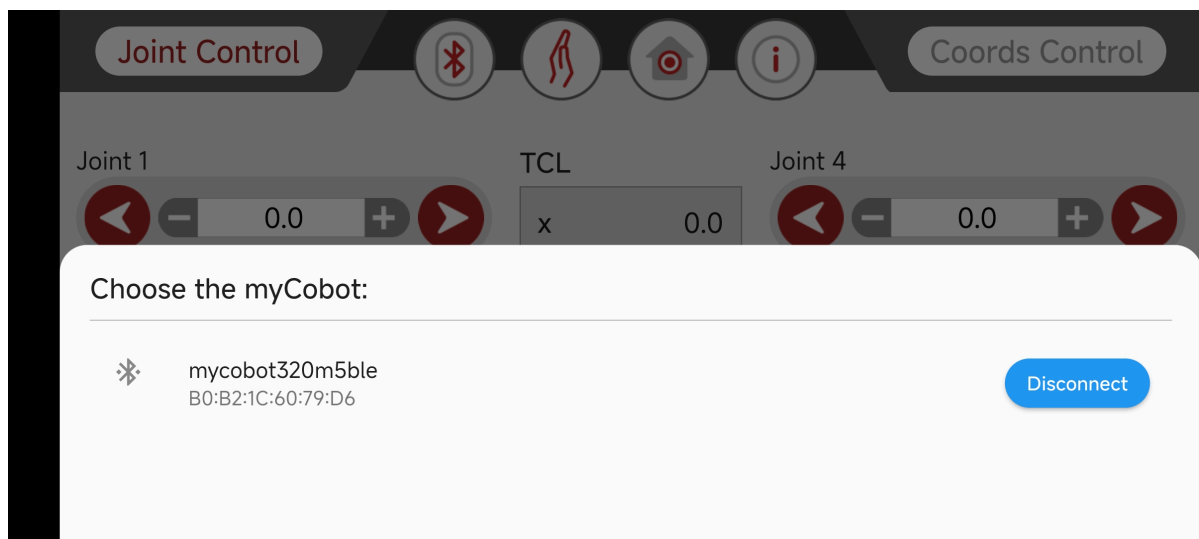

3. Enable the robot control function

Click [Joint Control] in the upper left corner to switch to the servo control mode, and then click the second icon in the middle to enable the robot arm control function.

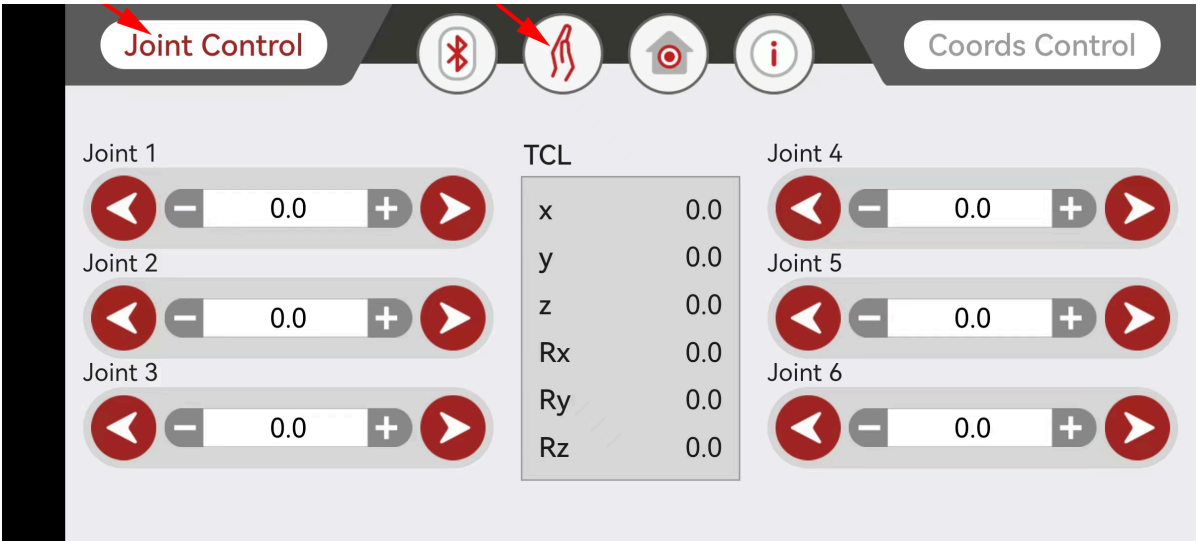

4. Control the robotic arm

Joint1~6 represent the six degrees of freedom joints of the robot from bottom to top, which can control a joint to reach the corresponding angle. Short press to control once, long press to control continuously.

