



INOS Watcher

INOS Watcher – Installation &
Technical Specification Manual

digis²


INOS Watcher is an outdoor mobile network monitoring probe designed for continuous network performance measurement.


The probe integrates:

- Two smartphones for network performance measurements.
- One integrated 4G router.
- Two active cooling fans.
- Internal power and connectivity infrastructure.

The active cooling system allows the probe to operate in outdoor environments with elevated ambient temperatures while maintaining the required thermal conditions for the internal equipment.

The INOS Watcher is designed for outdoor deployment and provides IP66 environmental protection against dust and powerful water jets.

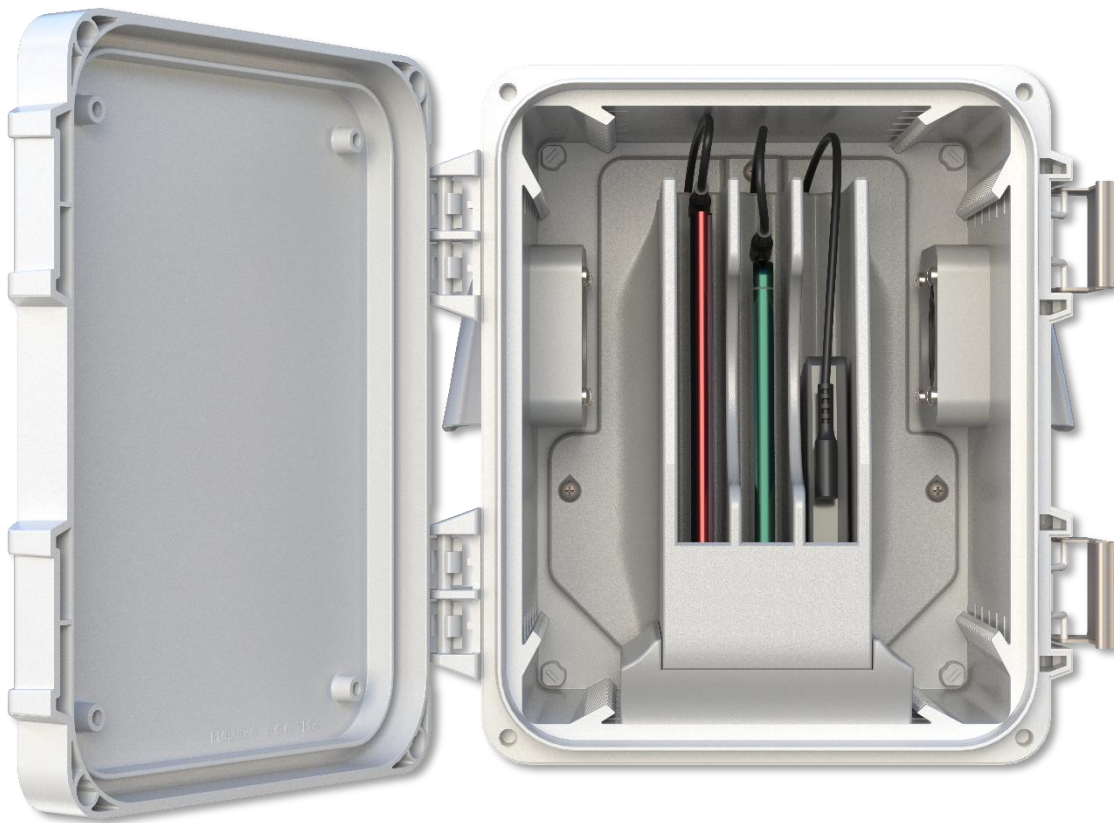

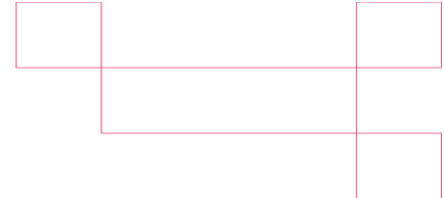

Technical Specifications

Dimensions (L × W × H)	225 x 185 x 276 mm
Weight	3.3 KG
Power Consumption	50 W
Input Voltage	115/230VAC, 50/60Hz
Environmental Protection	IP66

Designed Operating Environment

The IP66 Active Cooling version is designed for outdoor deployments exposed to:

- Ambient temperatures up to 55°C.
- Heavy rainfall and wind-driven rain.
- Typhoon weather conditions.
- High humidity, Snow, and Ice.
- Dust and airborne particles.

Installation Requirements

To ensure reliable operation and achieve the intended environmental and thermal performance, the following installation requirements shall be observed:

- Install the probe above the maximum expected flood level defined for the installation site by the applicable local.
- Install the probe in a shaded location to minimize solar heat.
- Ensure a minimum clearance of 100 mm around the air intake and exhaust openings.
- Do not install the probe where the air intake or exhaust openings may be obstructed by walls, vegetation, debris, or other equipment.
- Ensure the mounting structure can support the probe under the maximum expected wind loading for the installation location.
- Install the probe in accordance with all applicable local electrical, structural, and safety regulations.


Proper installation is essential to maintain the enclosure's IP66 protection, cooling efficiency, and long-term operational reliability.

The required mounting method for the **INOS Watcher** shall be agreed upon and specified during the contract and deployment planning stage. The probe can be supplied with either a wall-mounting or pole-mounting configuration, according to the agreed installation requirements.

1. Wall Mounting

The probe can be mounted directly to a wall using the designated mounting holes on the enclosure.

1. Refer to the mounting-hole drawing below for the hole locations and dimensions.
2. Mark and drill the mounting-holes on the wall.
3. Secure the probe using suitable screws and anchors for the wall material.
4. Verify that the probe is securely fixed before connecting power and placing it into operation.

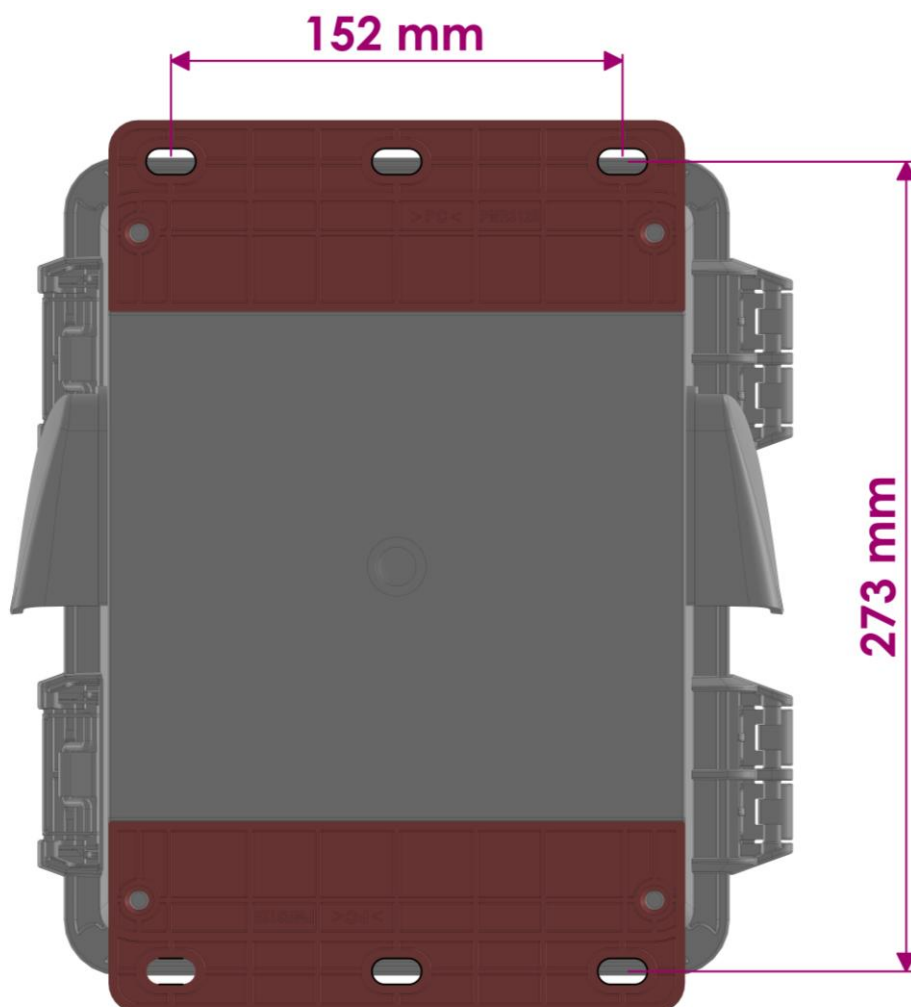

2. Pole Mounting

The probe can be mounted to a pole using a suitable mounting bracket and mounting hardware compatible with the enclosure.

1. Attach the mounting bracket to the designated mounting points on the probe.
2. Position the probe on the pole at the required installation height.
3. Secure the mounting bracket to the pole using suitable clamps or fastening hardware.
4. Verify that the probe is firmly secured and cannot move or rotate under expected loading.
5. Route and secure the cables to prevent excessive mechanical stress on the connectors.



Flood Recovery and Service Procedure

The information provided in this section is intended as technical guidance to assist with recovery following exceptional flooding events and to illustrate the serviceability of the INOS Watcher platform. It does not replace or limit the support, warranty, or maintenance services provided by Digis Squared.

All technical support, repair, replacement, and warranty obligations shall be provided in accordance with the applicable commercial agreement, maintenance contract, or warranty terms agreed between Digis Squared and the customer.

The IP66 Active Cooling version is designed to withstand severe outdoor weather conditions, including heavy rainfall, wind-driven rain, and powerful water jets. **It is not intended for momentary or prolonged immersion.**

If the probe becomes submerged due to an exceptional flooding event:

- Remove the probe from service as soon as it is safe to do so.
- Do not re-energize the unit until service is done.
- Thoroughly clean and dry the enclosure and internal components to remove mud, debris, and contaminants.
- Inspect all connectors and wiring for signs of corrosion.
- Replace the cooling fans, power supply, and cellular router, as they are considered serviceable components following immersion.
- Inspect and verify the operation of the phones before returning the probe to service.

The enclosure is expected to remain structurally intact, and the internal communication modules are individually housed in IP68-rated enclosures, providing an additional level of protection against water ingress. Consequently, in most flooding scenarios, recovery is expected to consist of inspection, cleaning, drying, and replacement of affected serviceable components rather than replacement of the complete probe.



Enabling Smarter
Networks