PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)





SOP – EFORT ROBOT BACKUP

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

EXPORT TO PENDRIVE

Step 1: Connect the **Pen Drive** to the **USB port on the side of the Teach Pendant.**

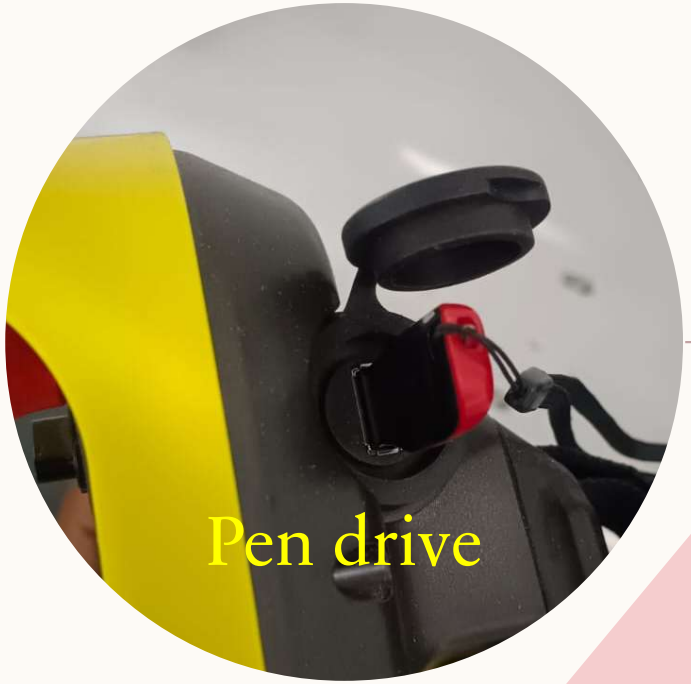

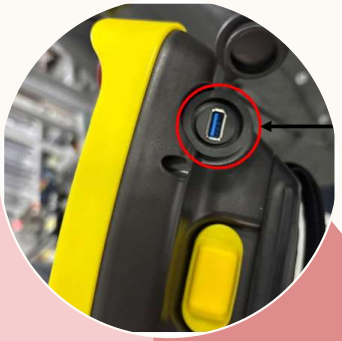


PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

STEP - 1

Step – 3: Go to File Option

Step – 2: Remember the File Name or Note down

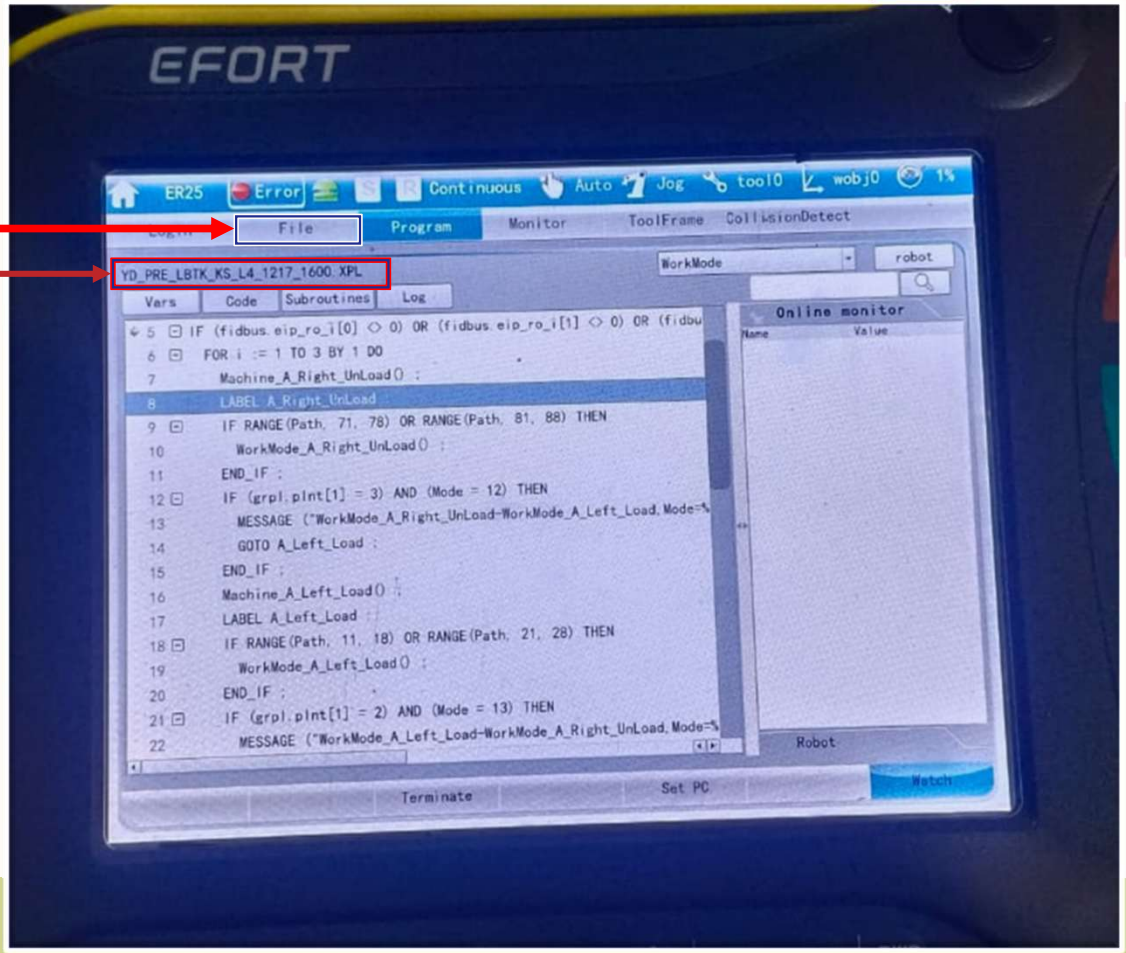



PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

STEP 2


Step 4: Verify the program file name, ensure ENV is set to ROBOT, and select the corresponding program file.

Note: If multiple file names are listed as like here, carefully verify the correct file name before transferring it to the Pen Drive.

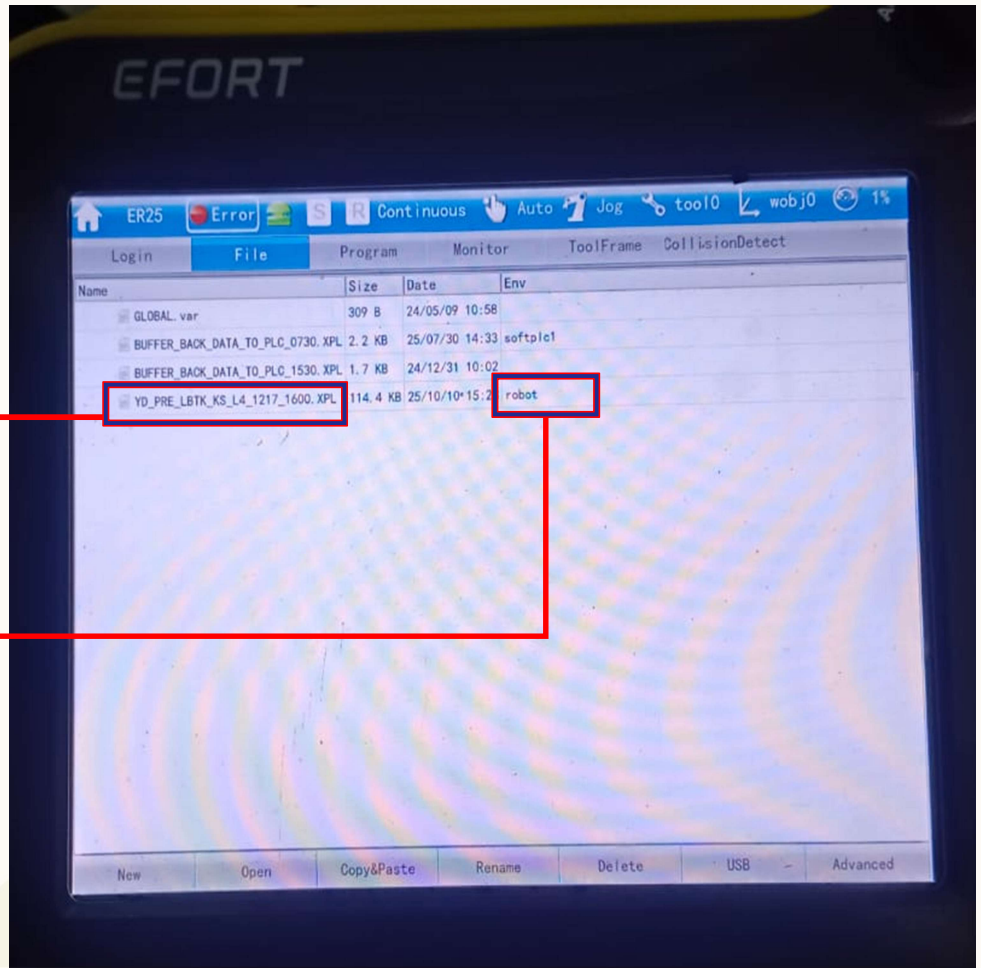

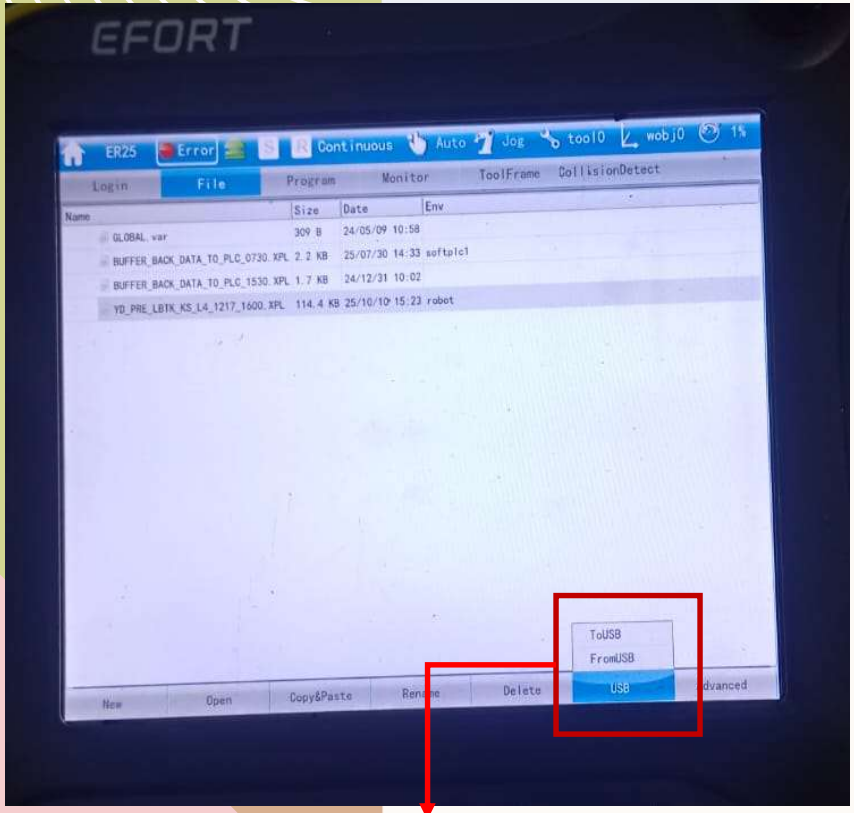

Step 5: Select the “USB” tab at the bottom, then choose “ToUSB” from the available options

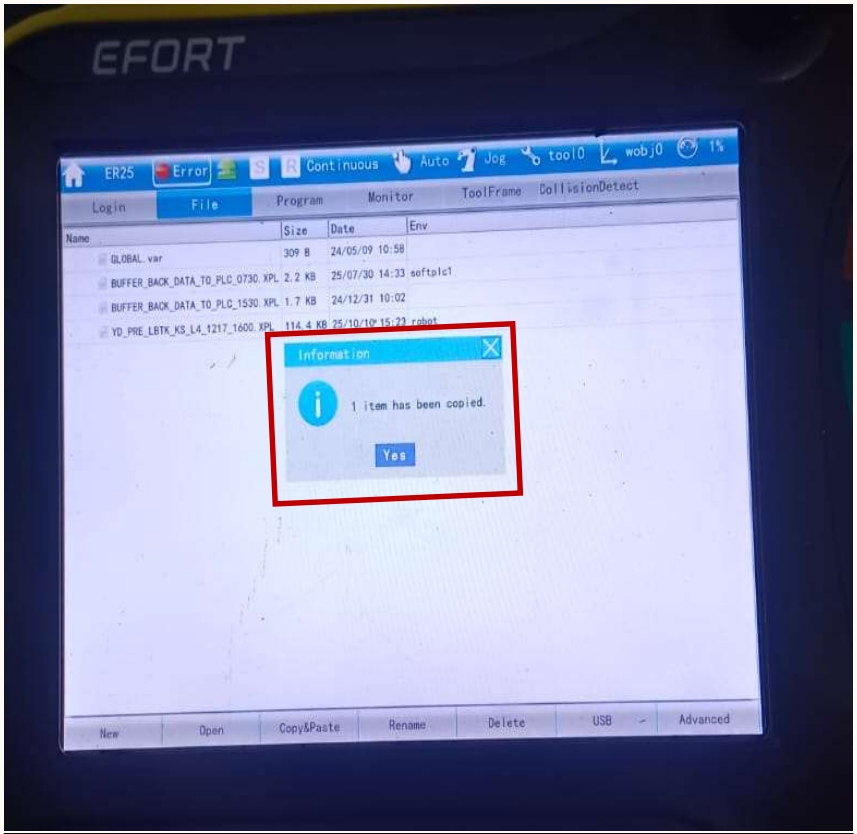


Step 6: Program backup transfer to the USB pendrive is completed.

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)


ALD-LEADMICRO EFORT ROBOT


Step A: Note down the name of the program file.

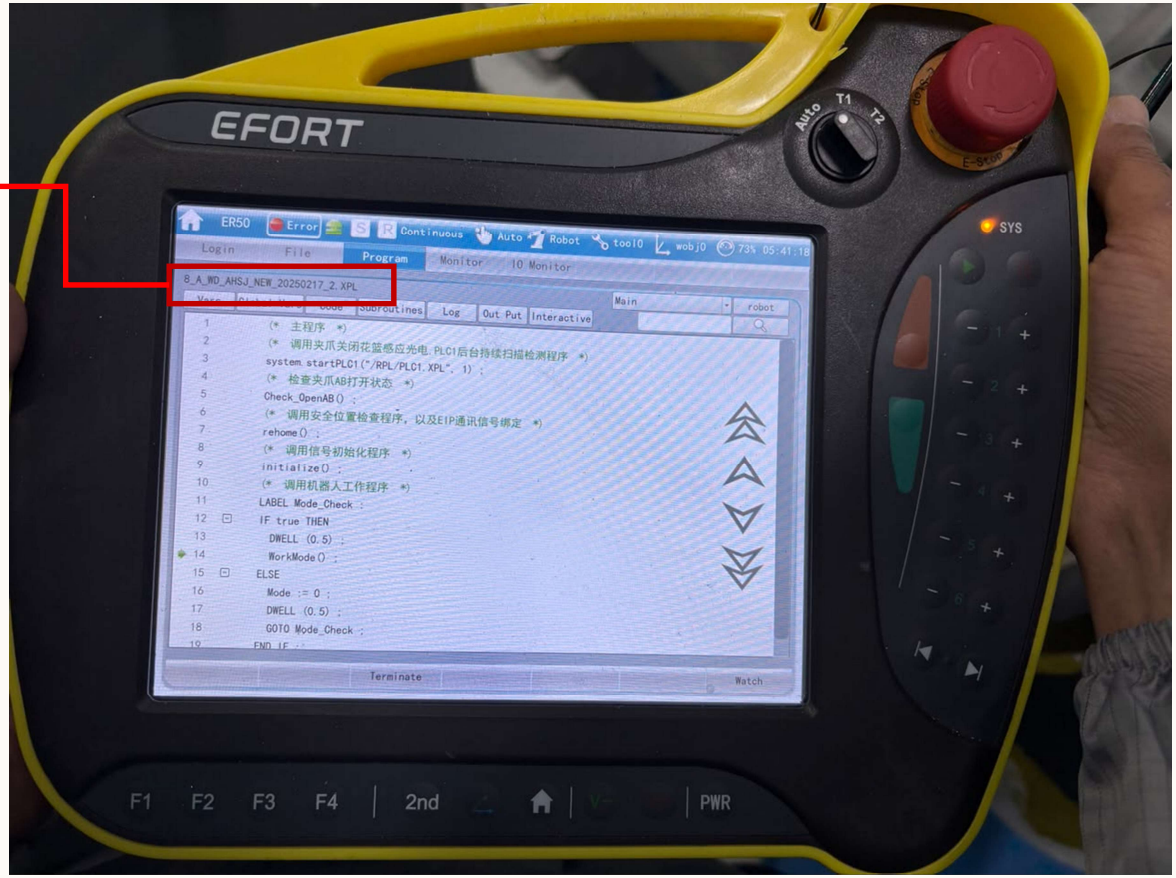

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)


Step B: Click on “FILE” option. And Select “XPL” from the available options

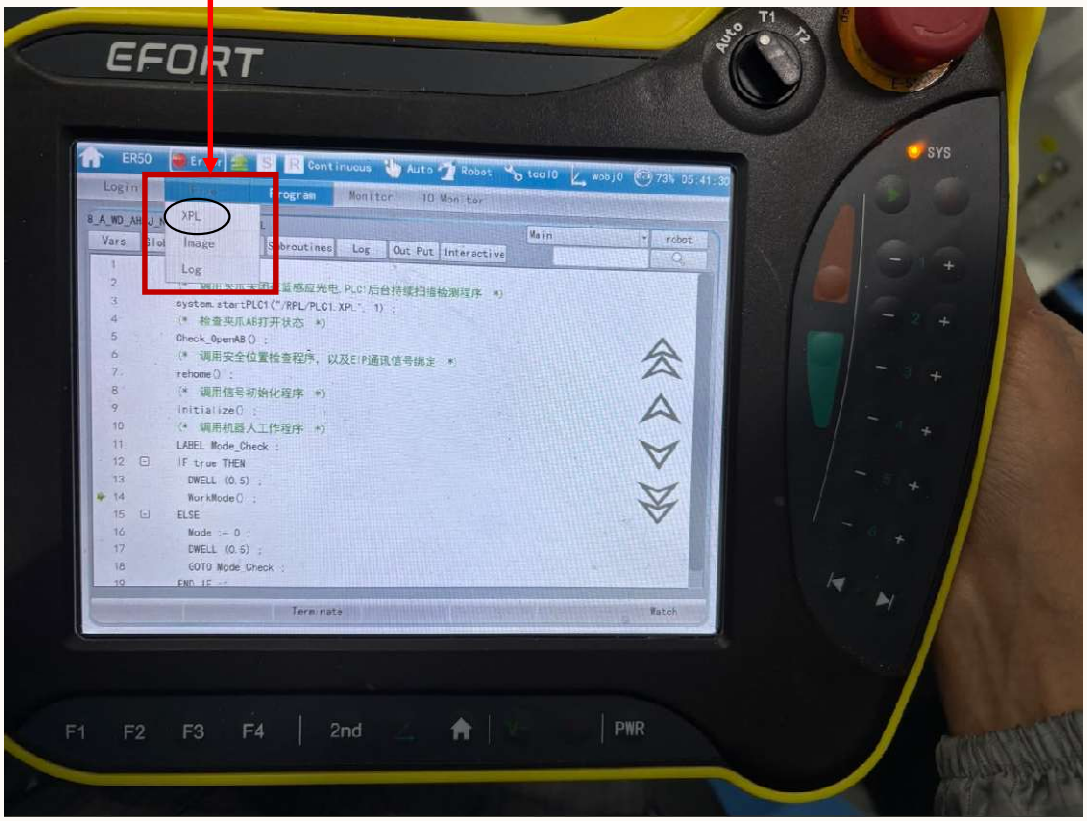

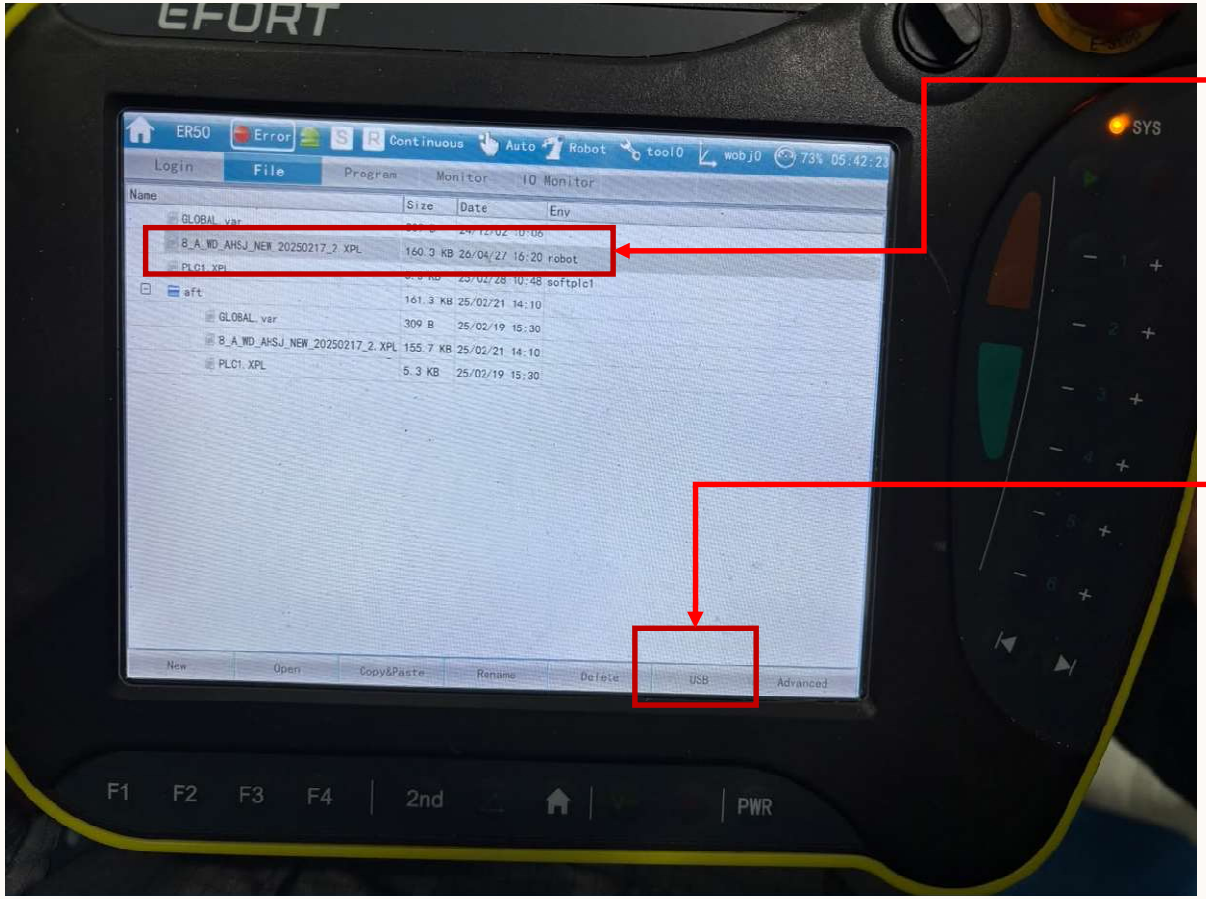

Step C: Verify the program file name and confirm that the ENV is set to ROBOT. Then, Select the corresponding program file.

Step D: Select the “USB” tab at the bottom, then choose “ToUSB” from the available options.

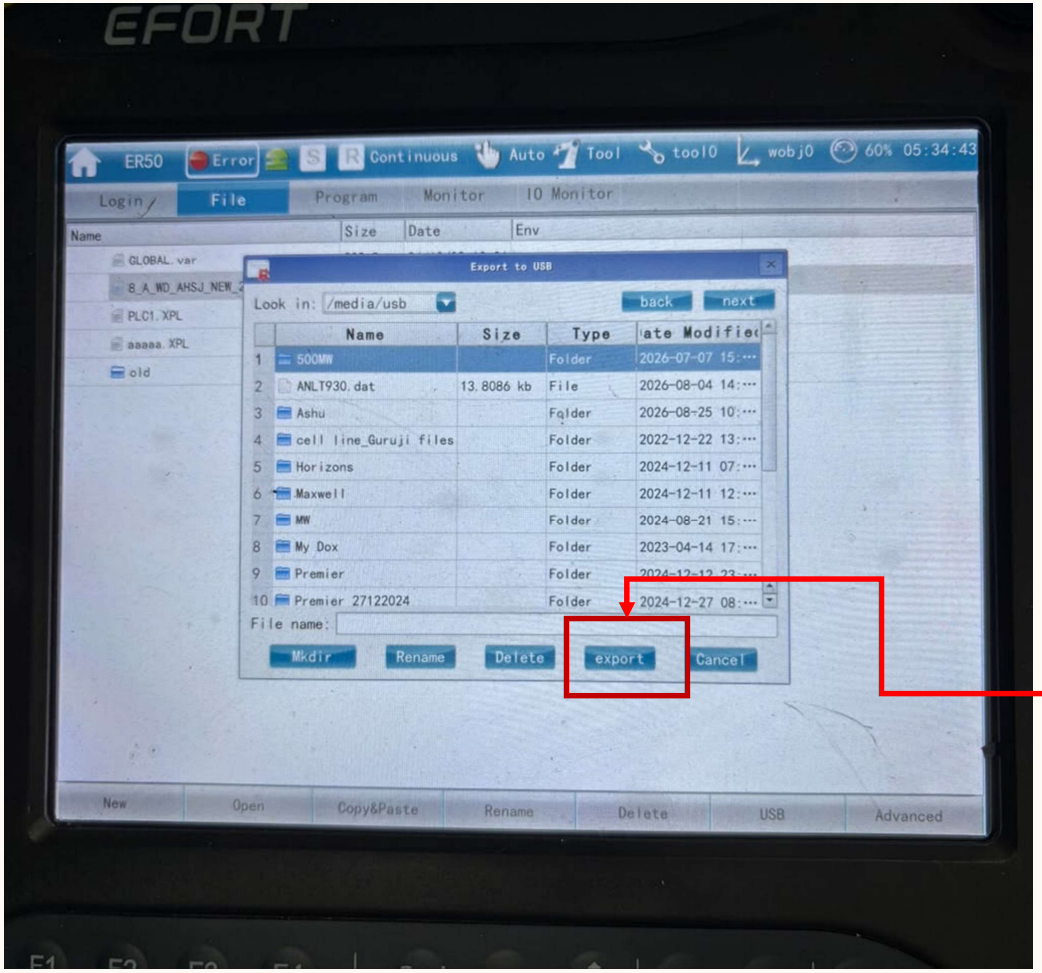

Step E: Click on “EXPORT” to transfer the backup program into pendrive

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)


IMPORT TO SYSTEM:

Step 7: Plug the Pen drive to the system.



PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)


FINAL TIPS & TAKEAWAYS

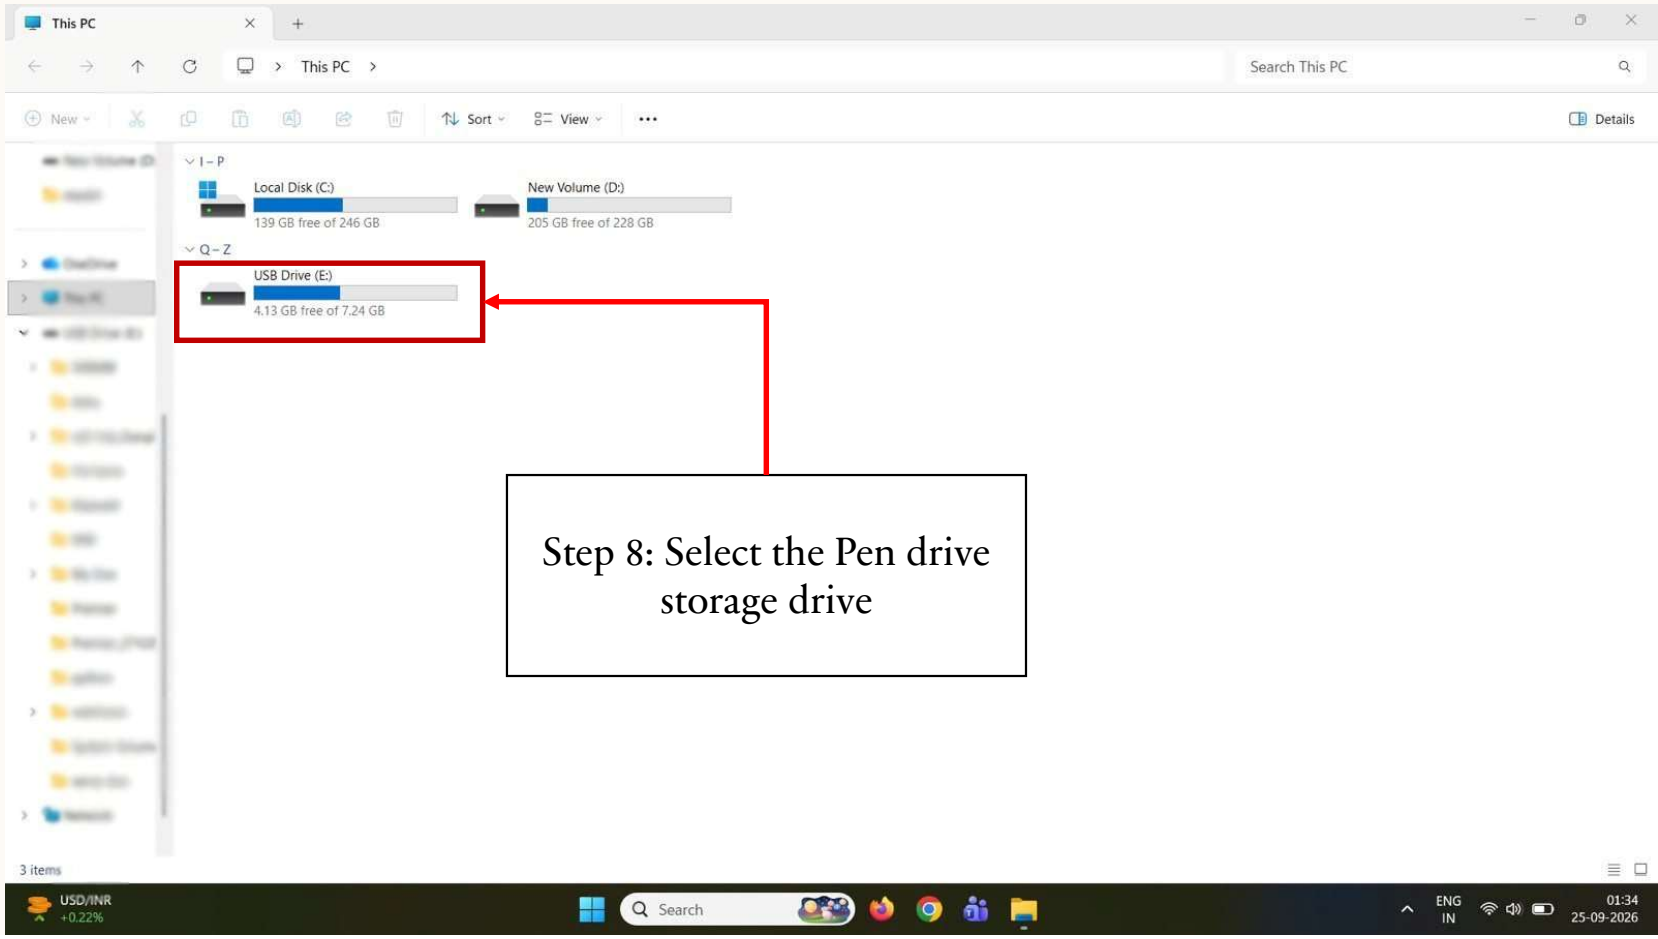


Step 8: Select the Pen drive storage drive

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

SPEAKING ENGAGEMENT METRICS

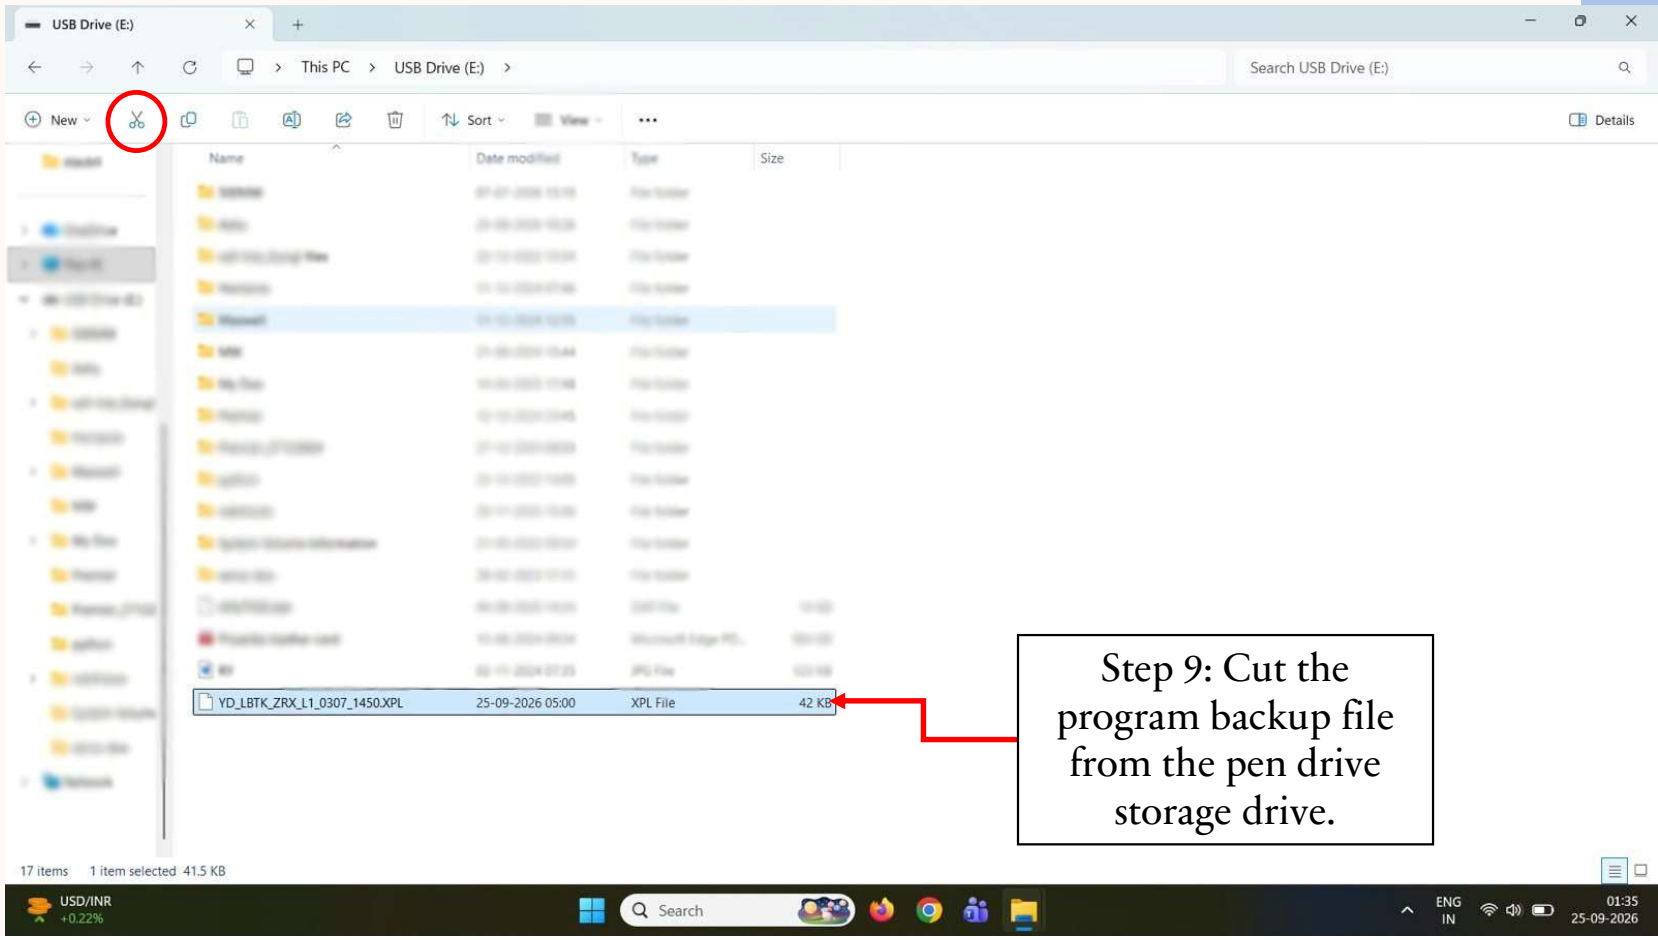


Step 9: Cut the program backup file from the pen drive storage drive.

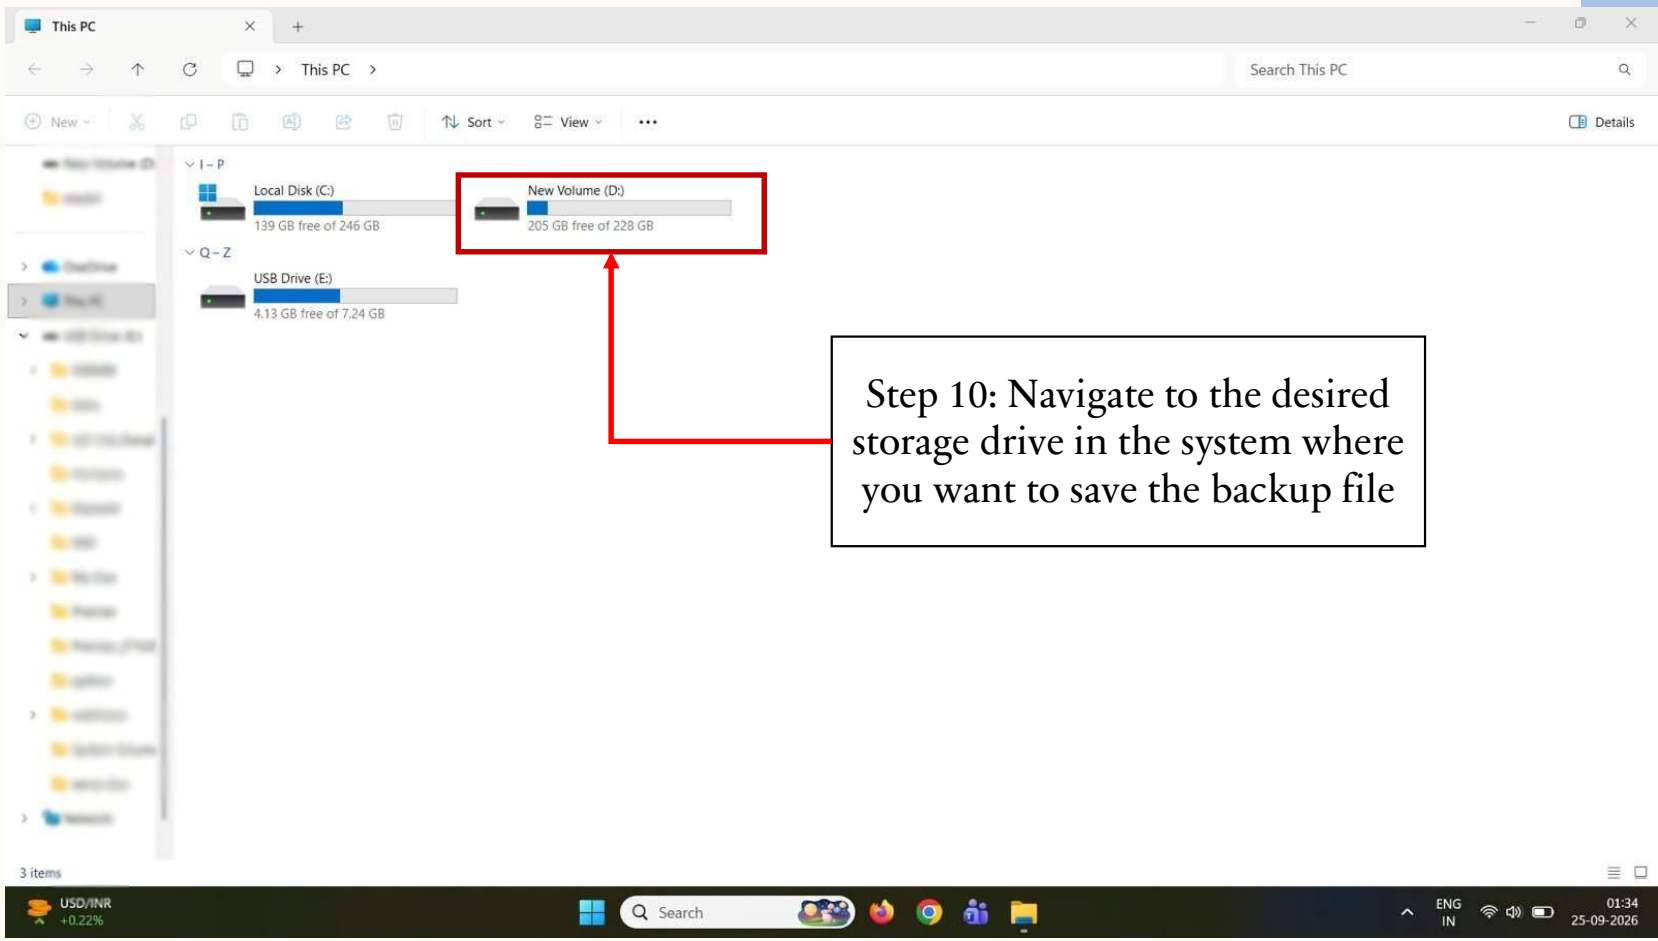


Step 10: Navigate to the desired storage drive in the system where you want to save the backup file

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

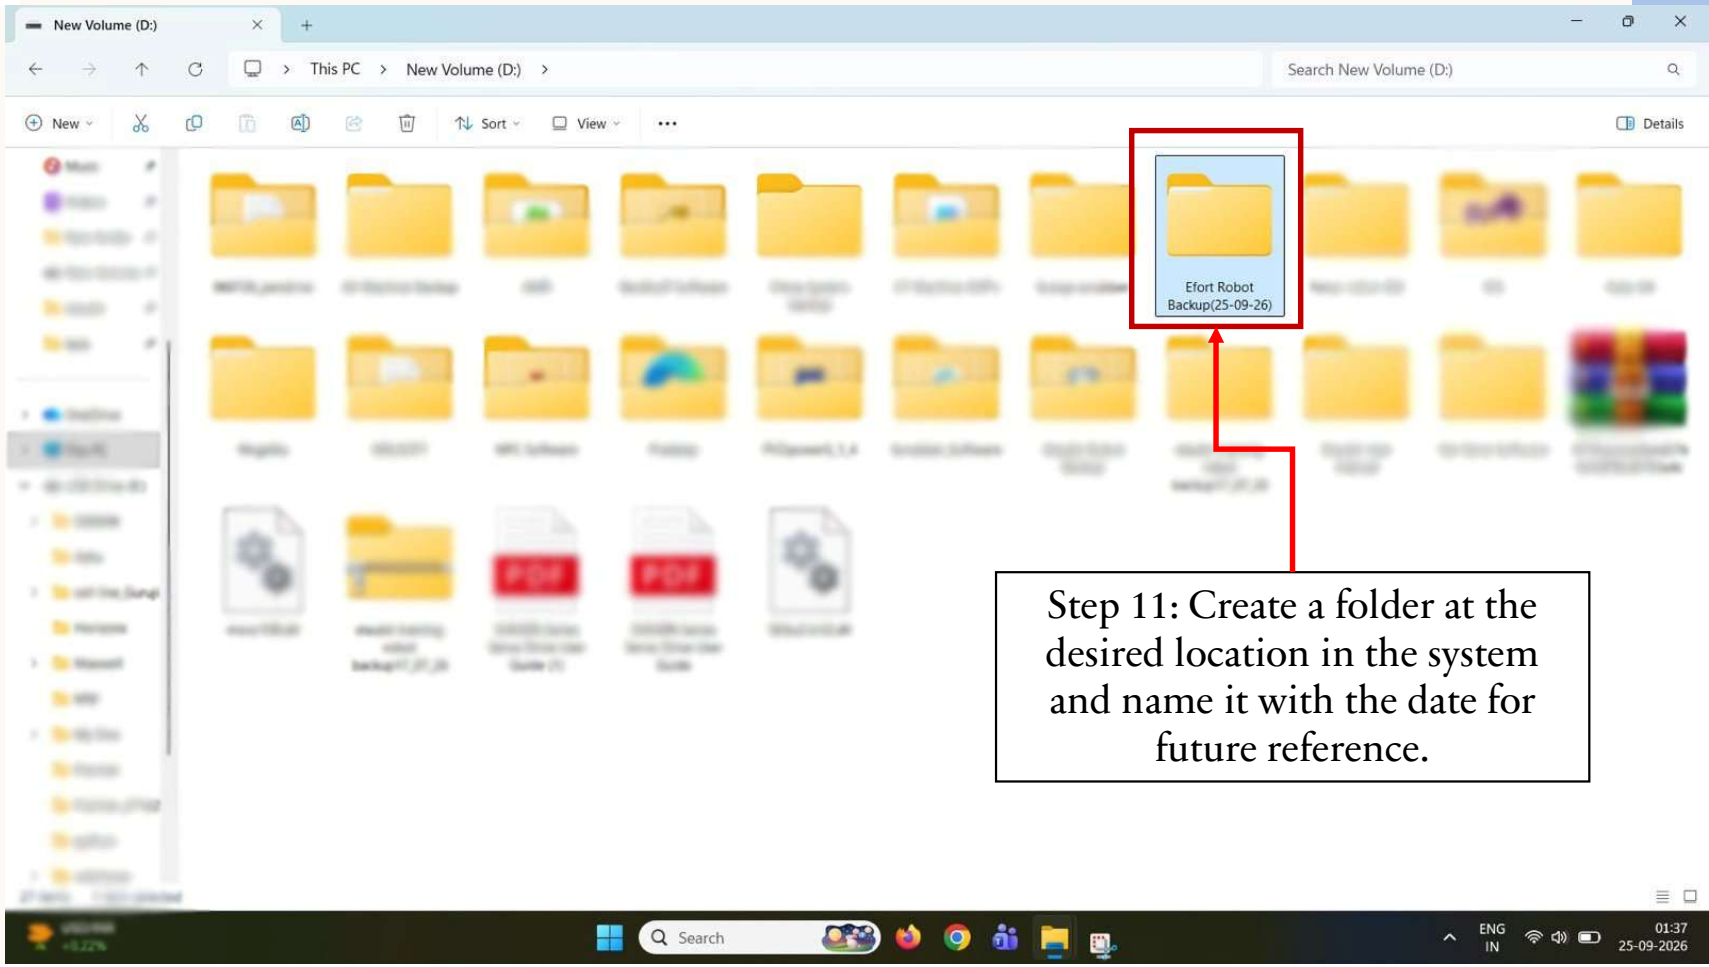

Step 11: Create a folder at the desired location in the system and name it with the date for future reference.

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

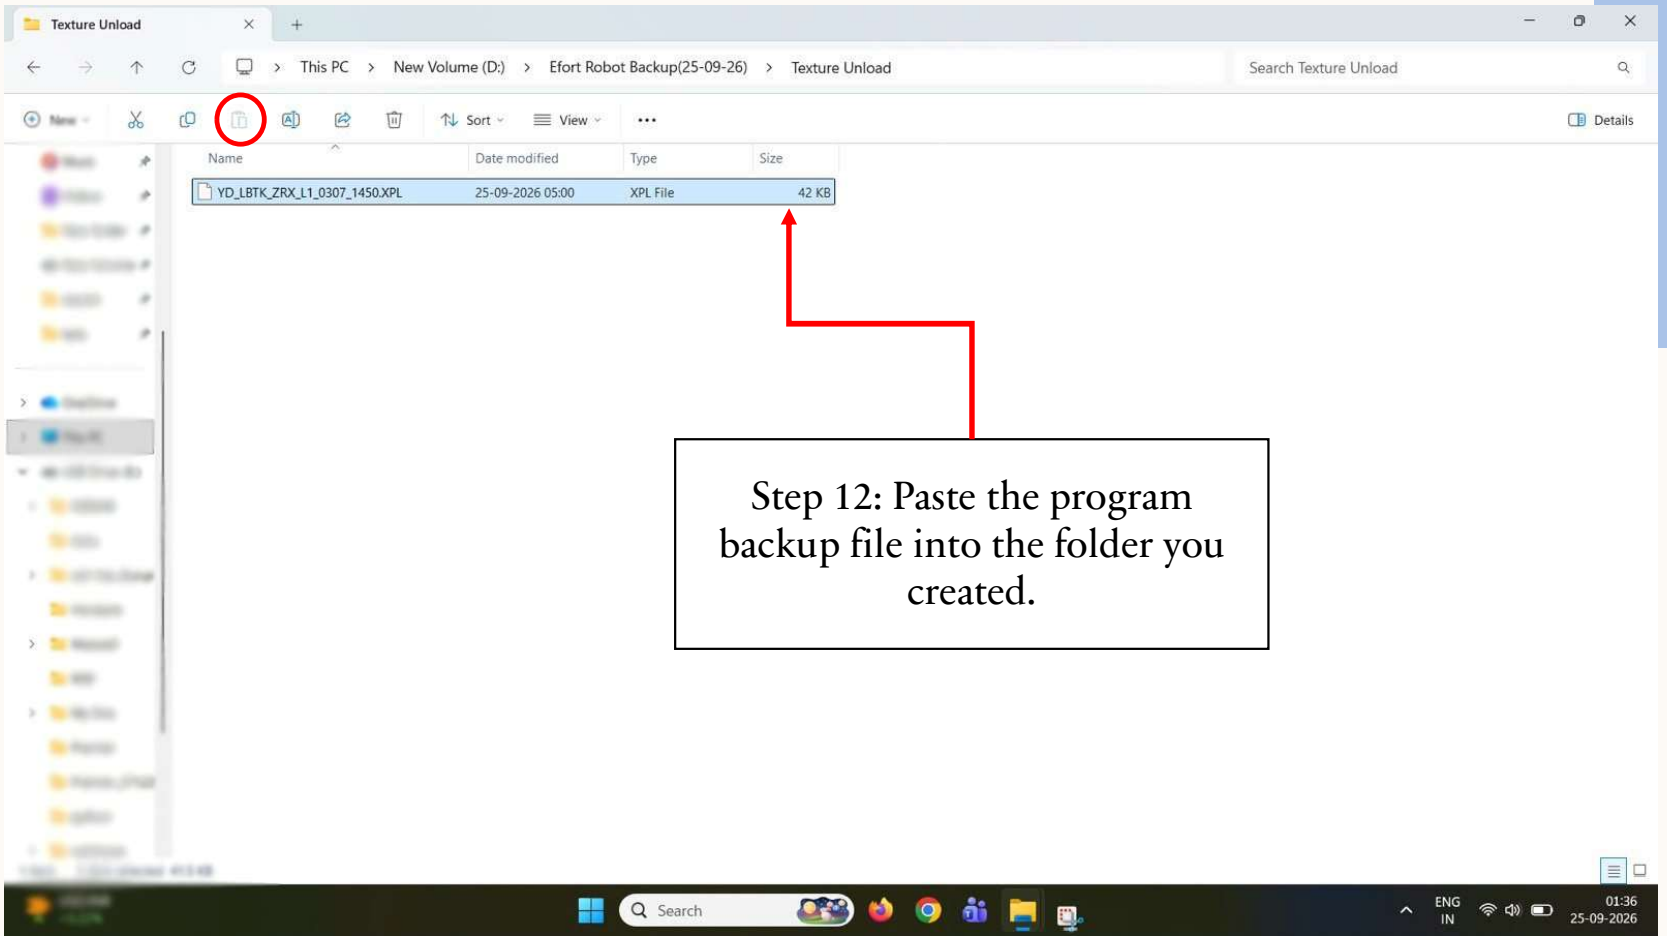

Step 12: Paste the program backup file into the folder you created.