
Shower Door Installation Instructions



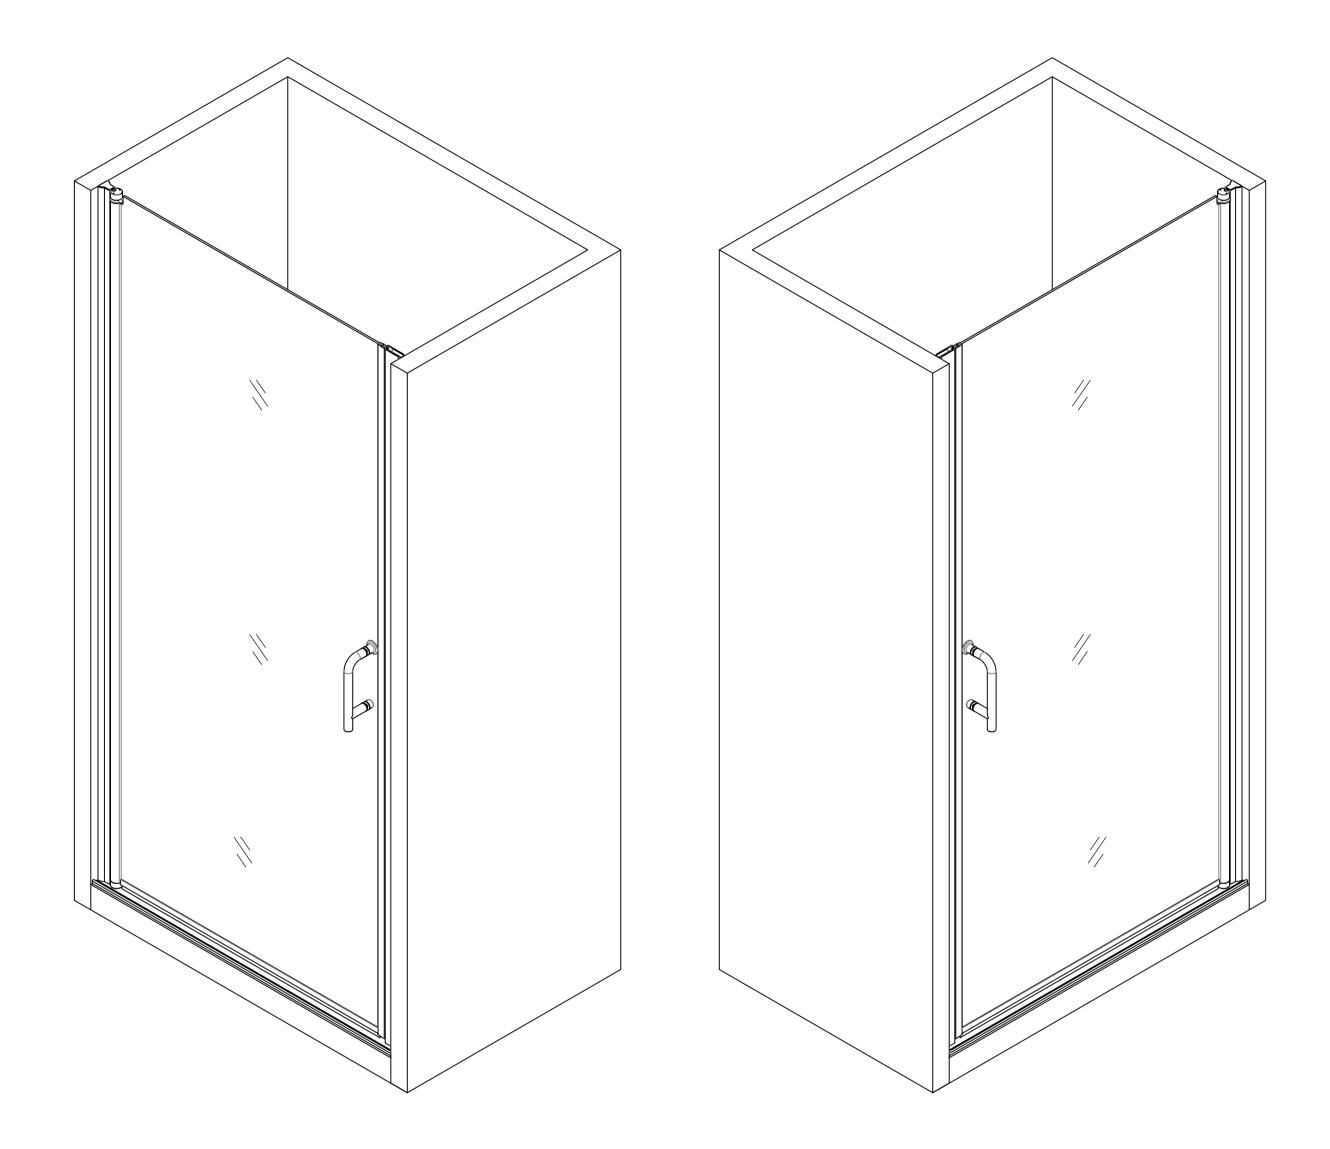


Reversible For a Left or Right Door

Please Do Not Return the Product to the Store. Contact us with any questions.


Model Specific Preparation



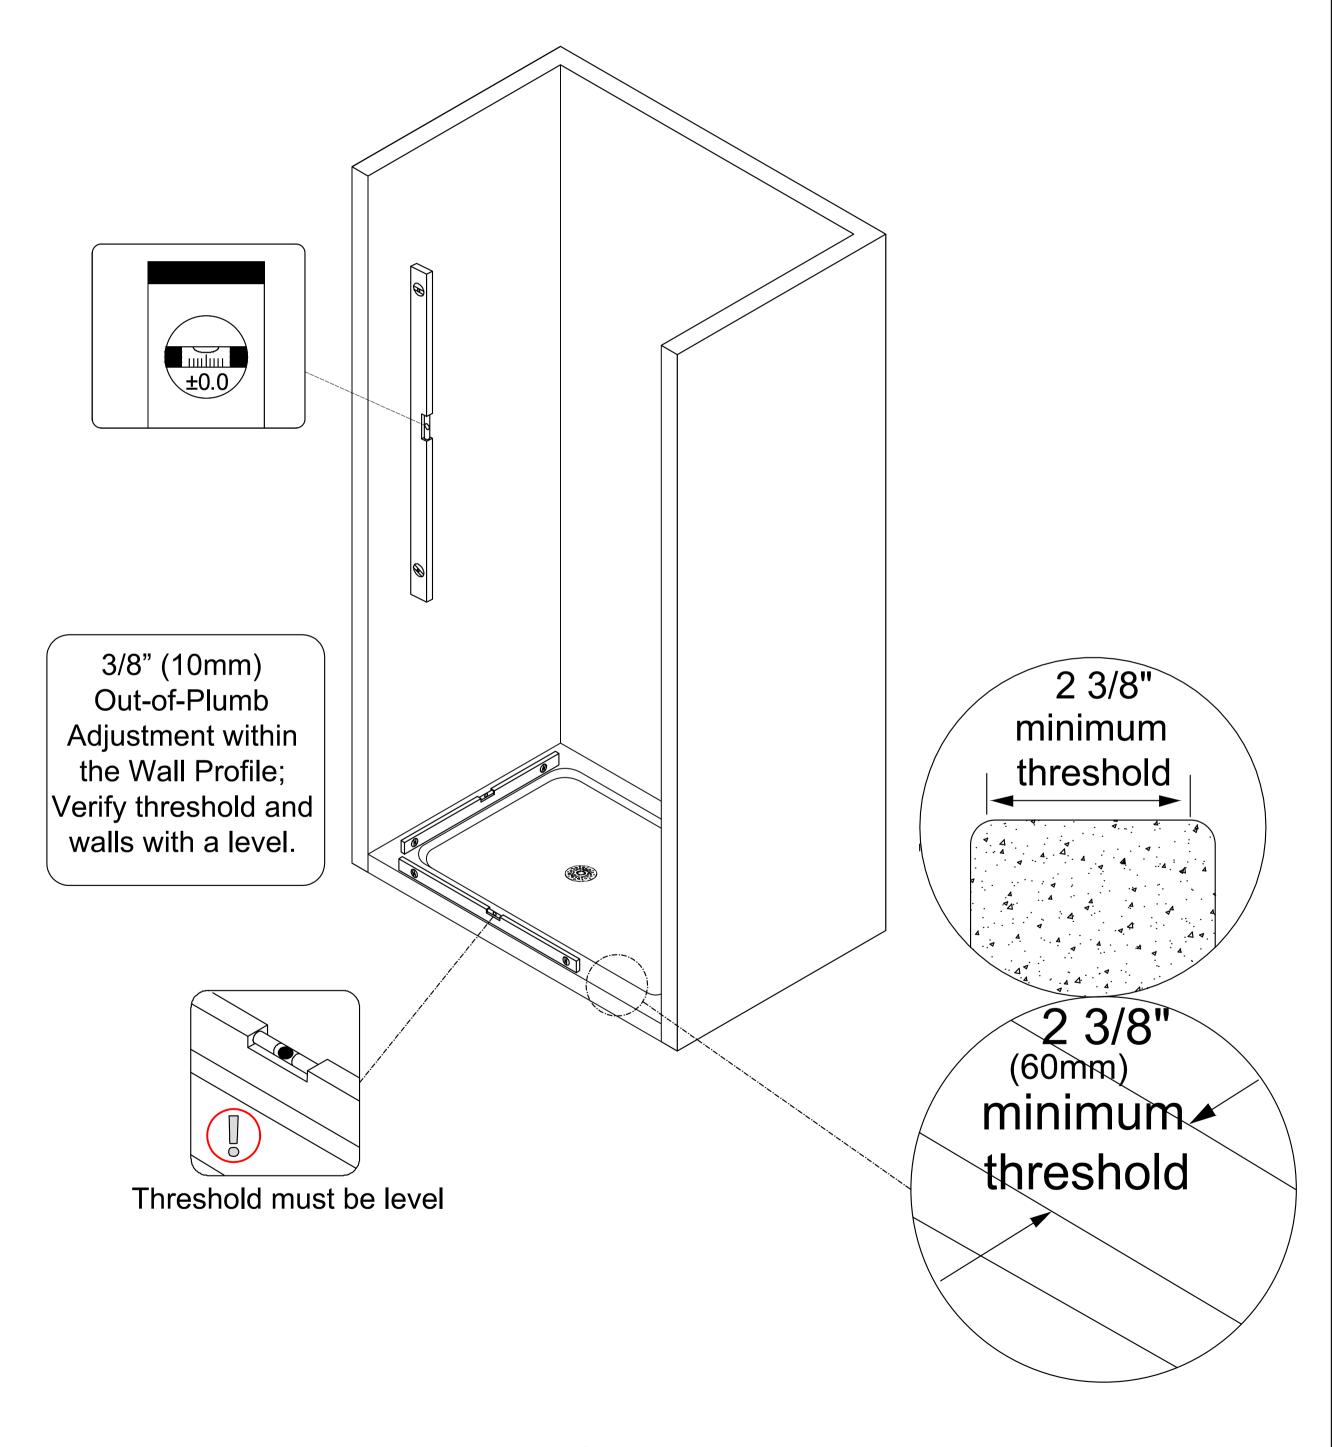

1

PACKAGE CONTENT

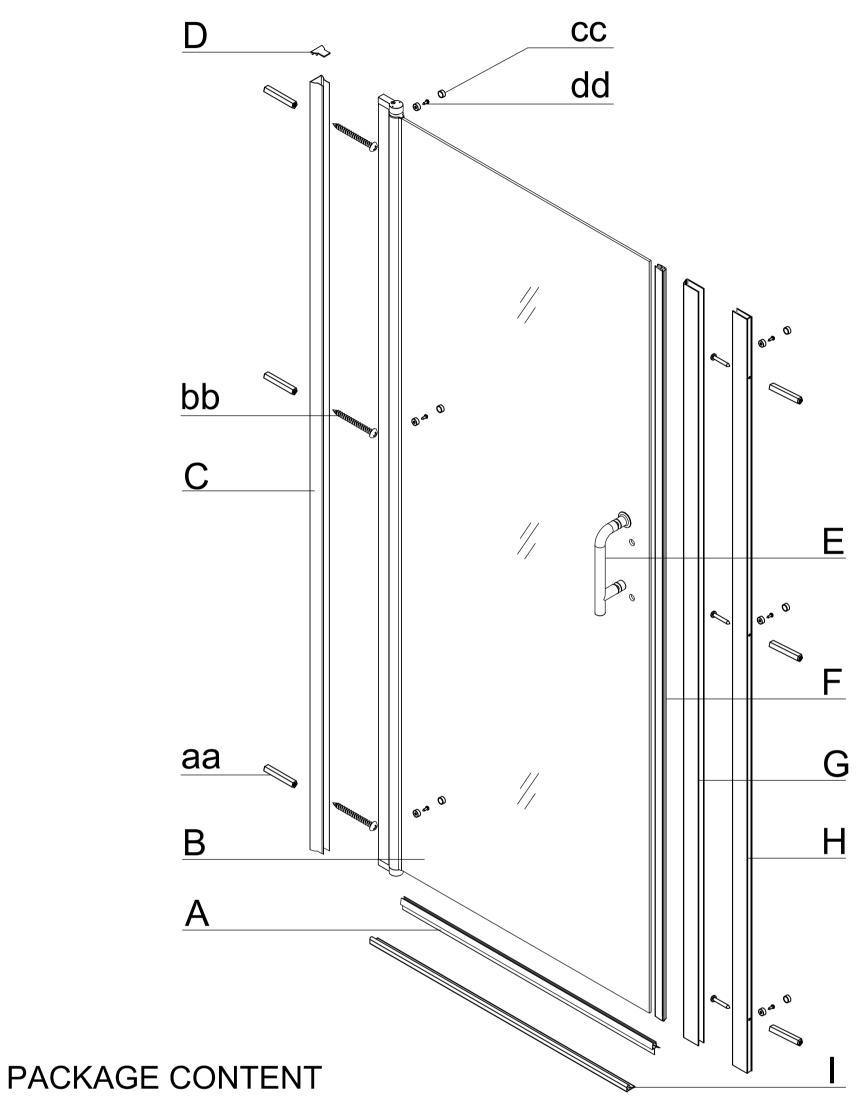



PART#	DESCRIPTION	QTY	PART#	DESCRIPTION	QTY
Α	Bottom Gasket	1	F	Magnetic strip	1
В	Door panel	1	G	Magnetic Seal Aluminum channel	1
С	Wall Jamb	1	н	U channel	1
D	Top Cover Cap	1	I	Alu. Threshold	1
Е	Handle	1			


NOTE


Inspect all parts for missing prior to installation! Contact us for any part missing.


PACKAGE CONTENT

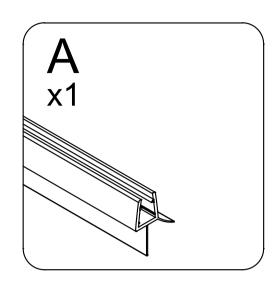


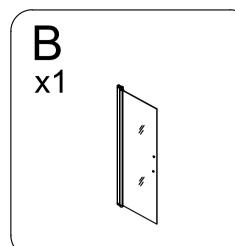


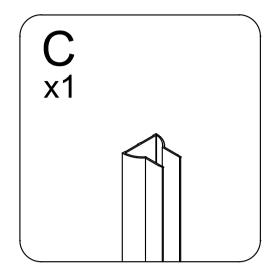


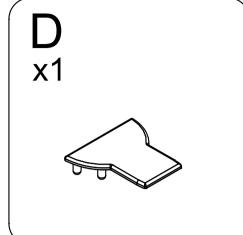


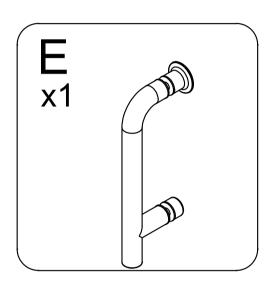

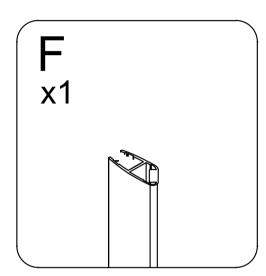


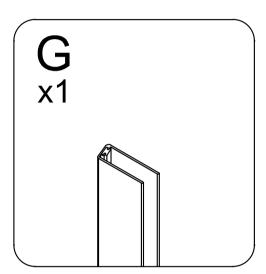

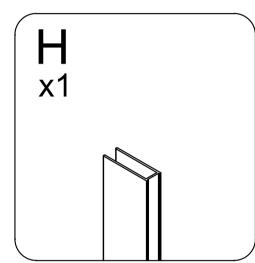


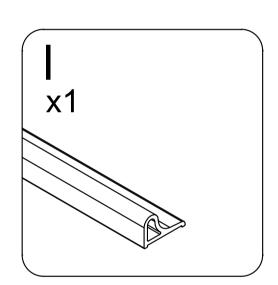


HARDWARE CONTENT

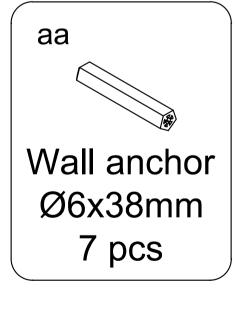



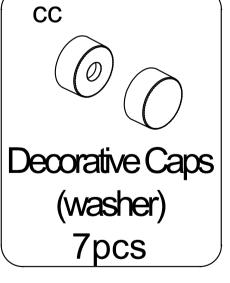




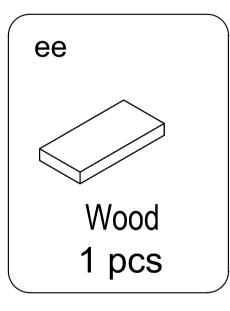



Additional spare parts are included.

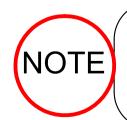

Inspect all parts for missing prior to installation! Contact us for any part missing.

3


TOOLS REQUIRED












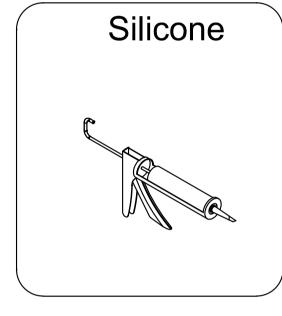


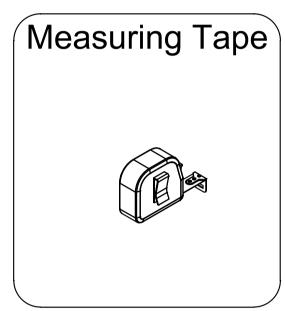



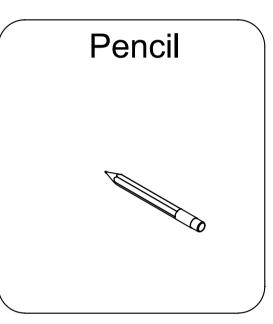

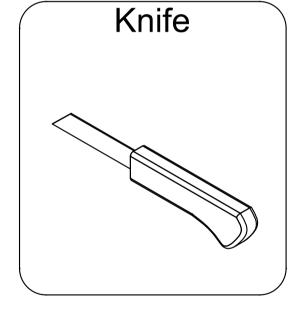


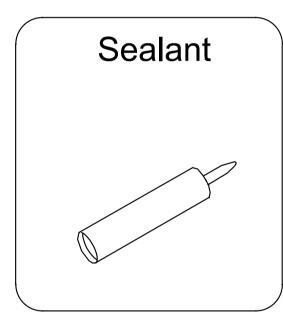









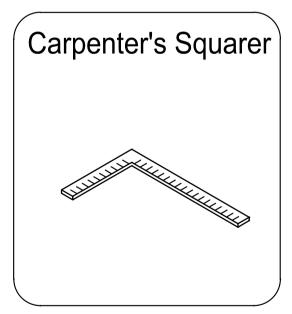



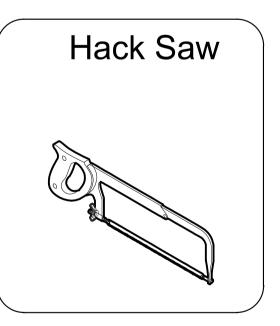

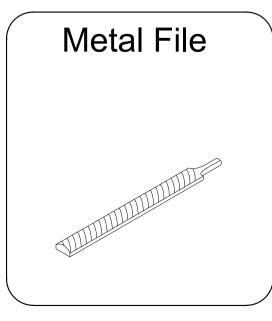

SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- · Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
 - Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
 - Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
 - Keep this installation manual for future reference.




Two people should perform this installaton.





Model Dimensions

configuration dimensions:

A Product Height	B Model width	C Installation width	D (Opening)	
	30"	30" ~31 3/8"	25 19/32"	
72"	32"	32" ~33 3/8"	27 19/32"	
12	34"	34" ~35 3/8"	29 19/32"	
	36"	36" ~37 3/8"	31 19/32"	

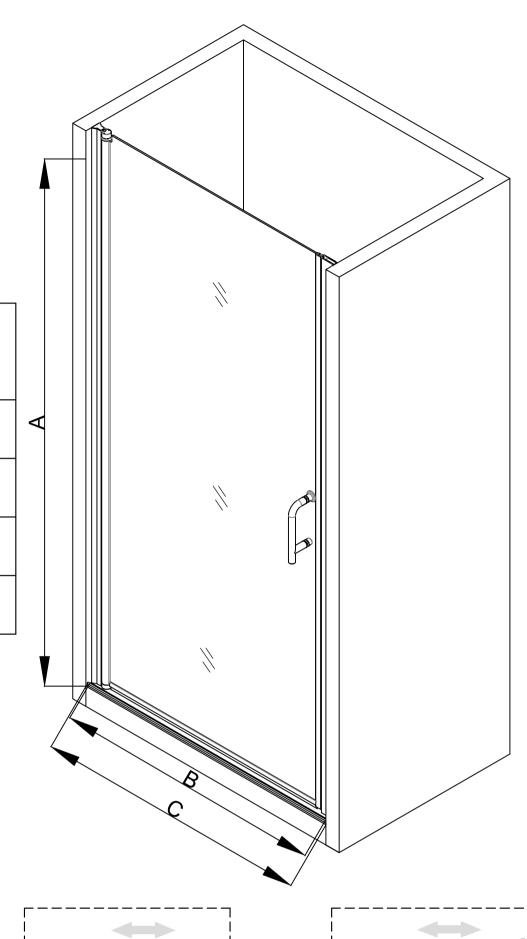

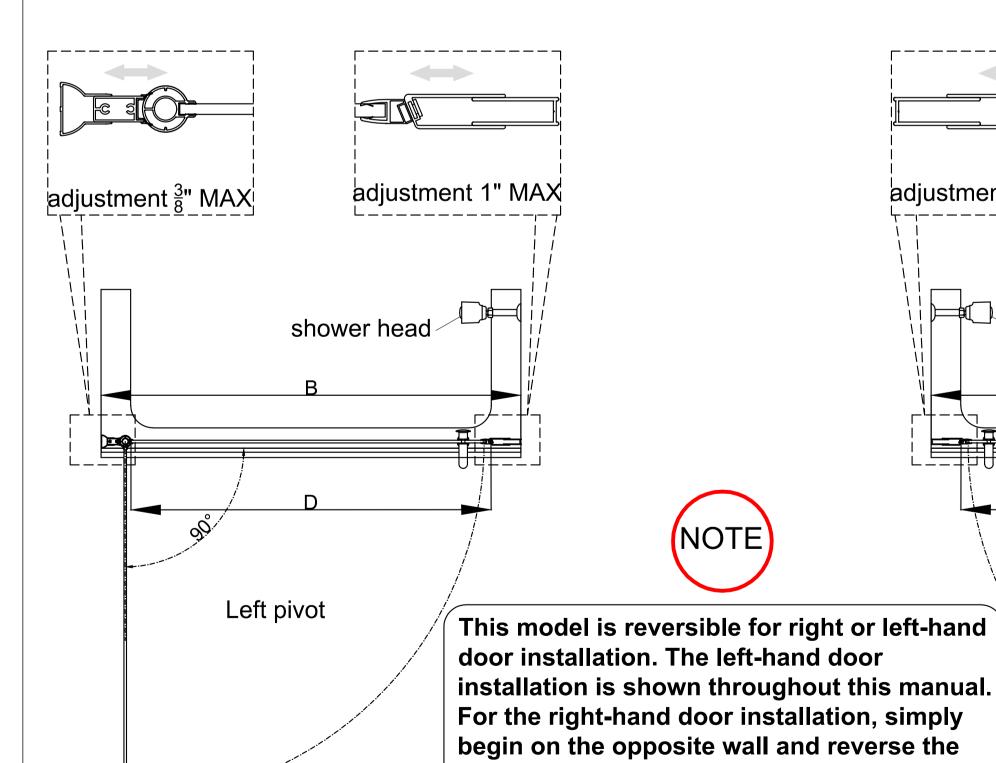

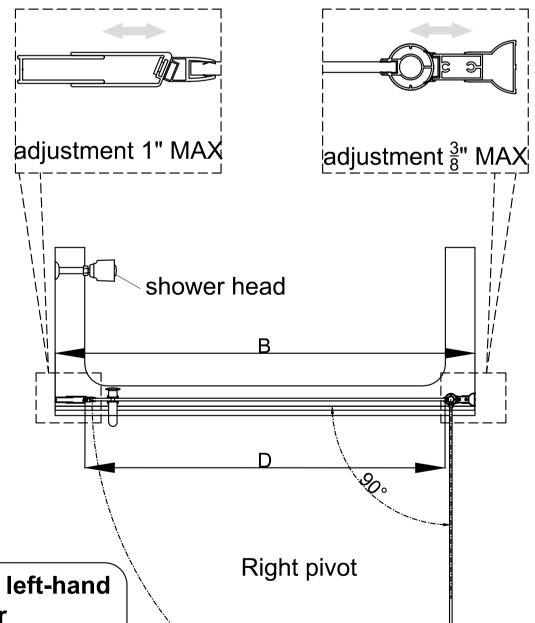


Website: Http://www.exbriteusa.com


Email:info@exbriteusa.com

orientation of the installation steps shown.




Wall Jamb Installation

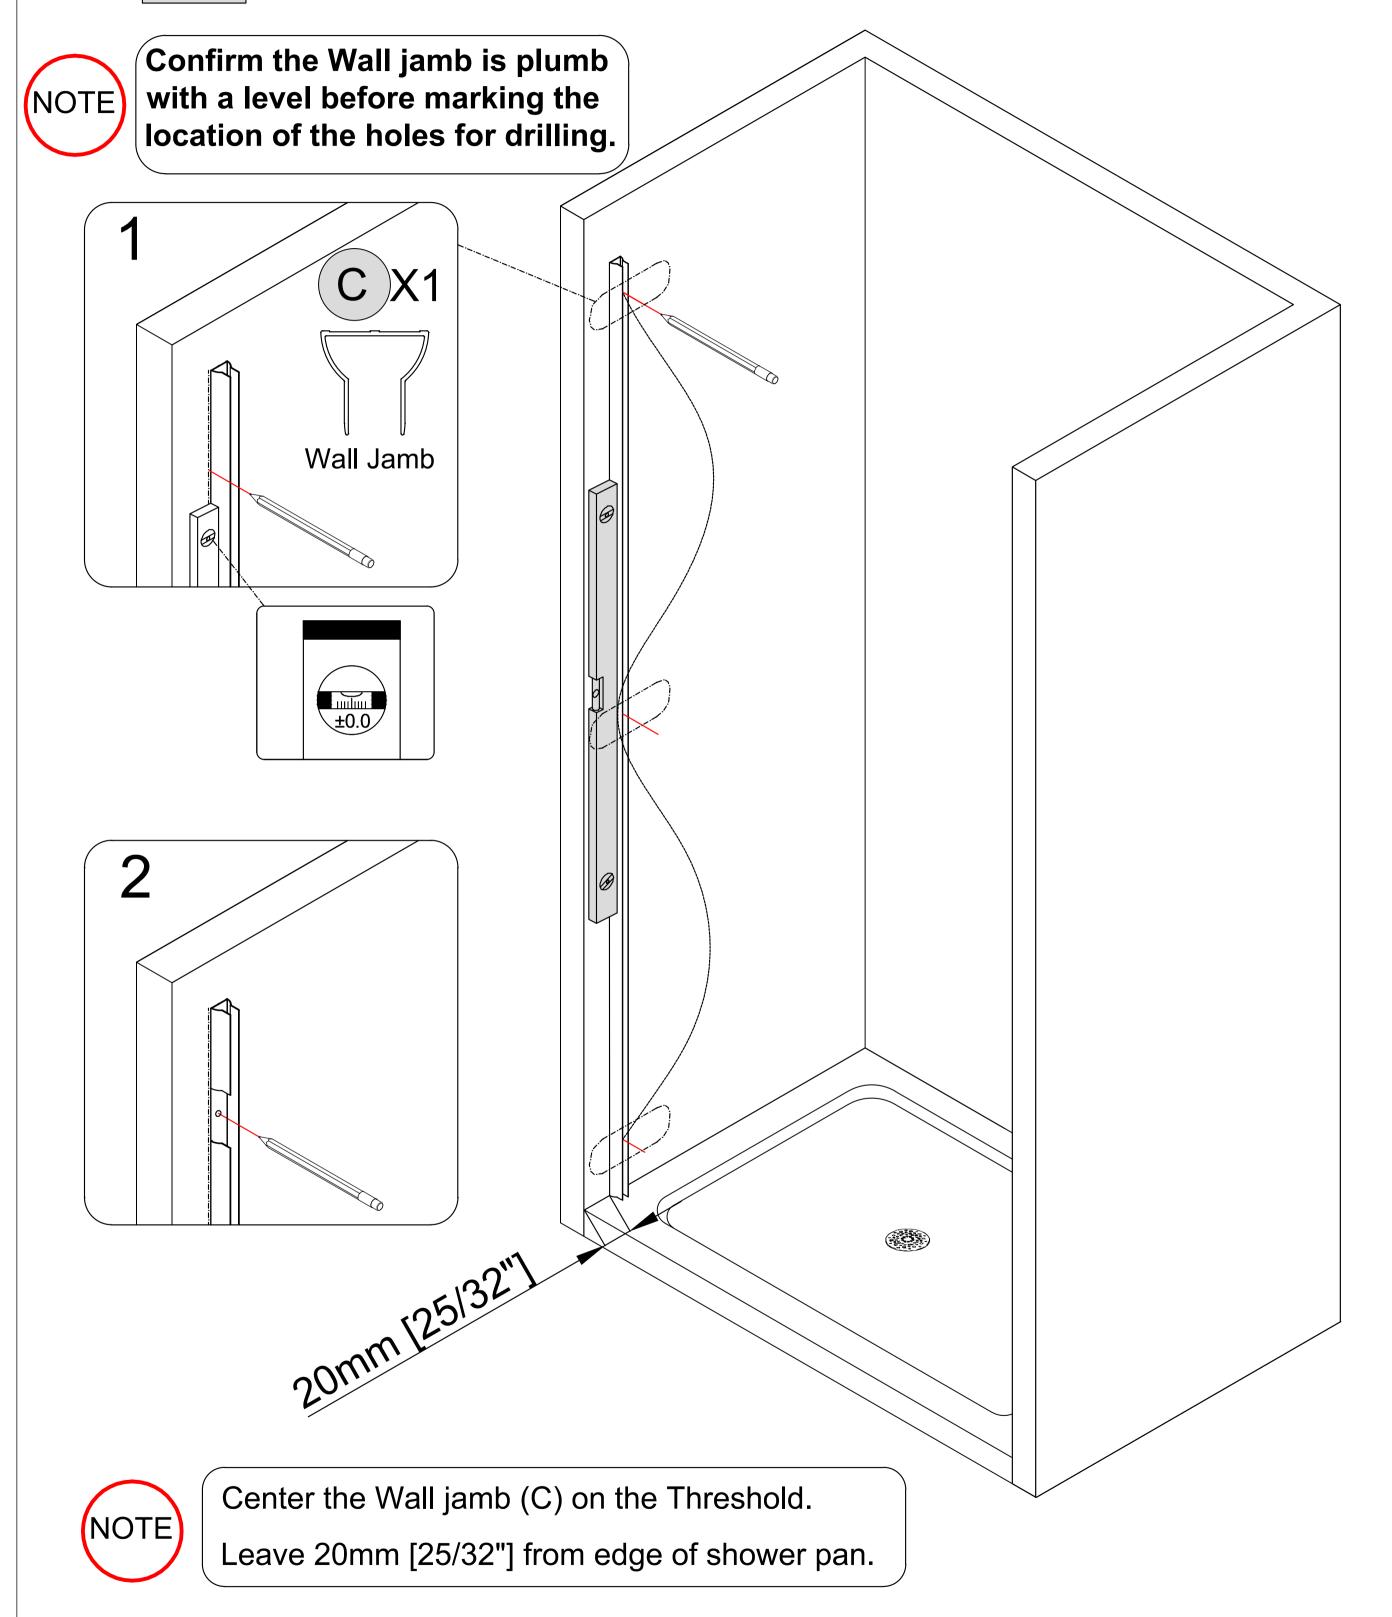

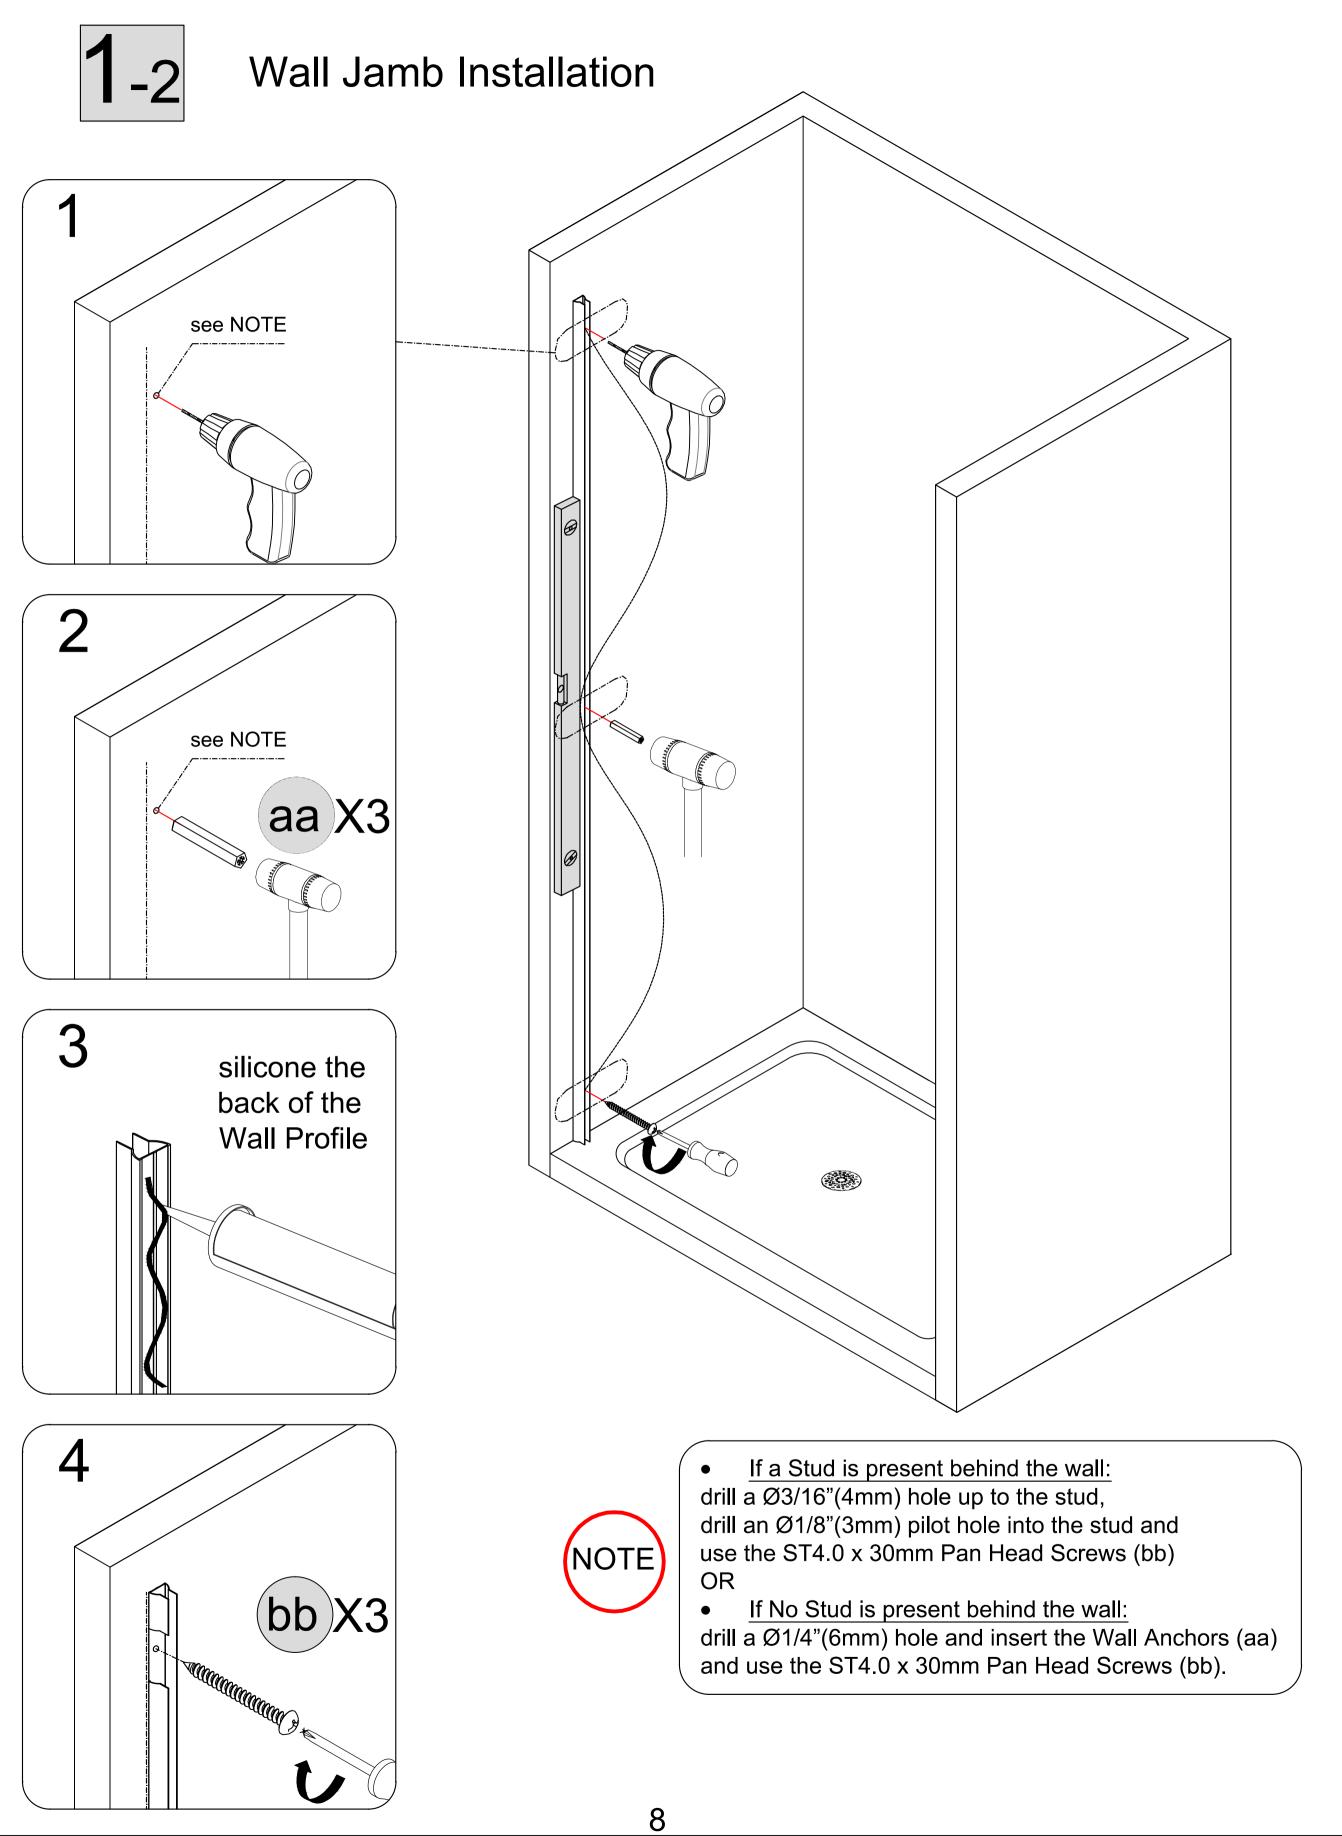

SHOWER DOOR


Door panel Installation

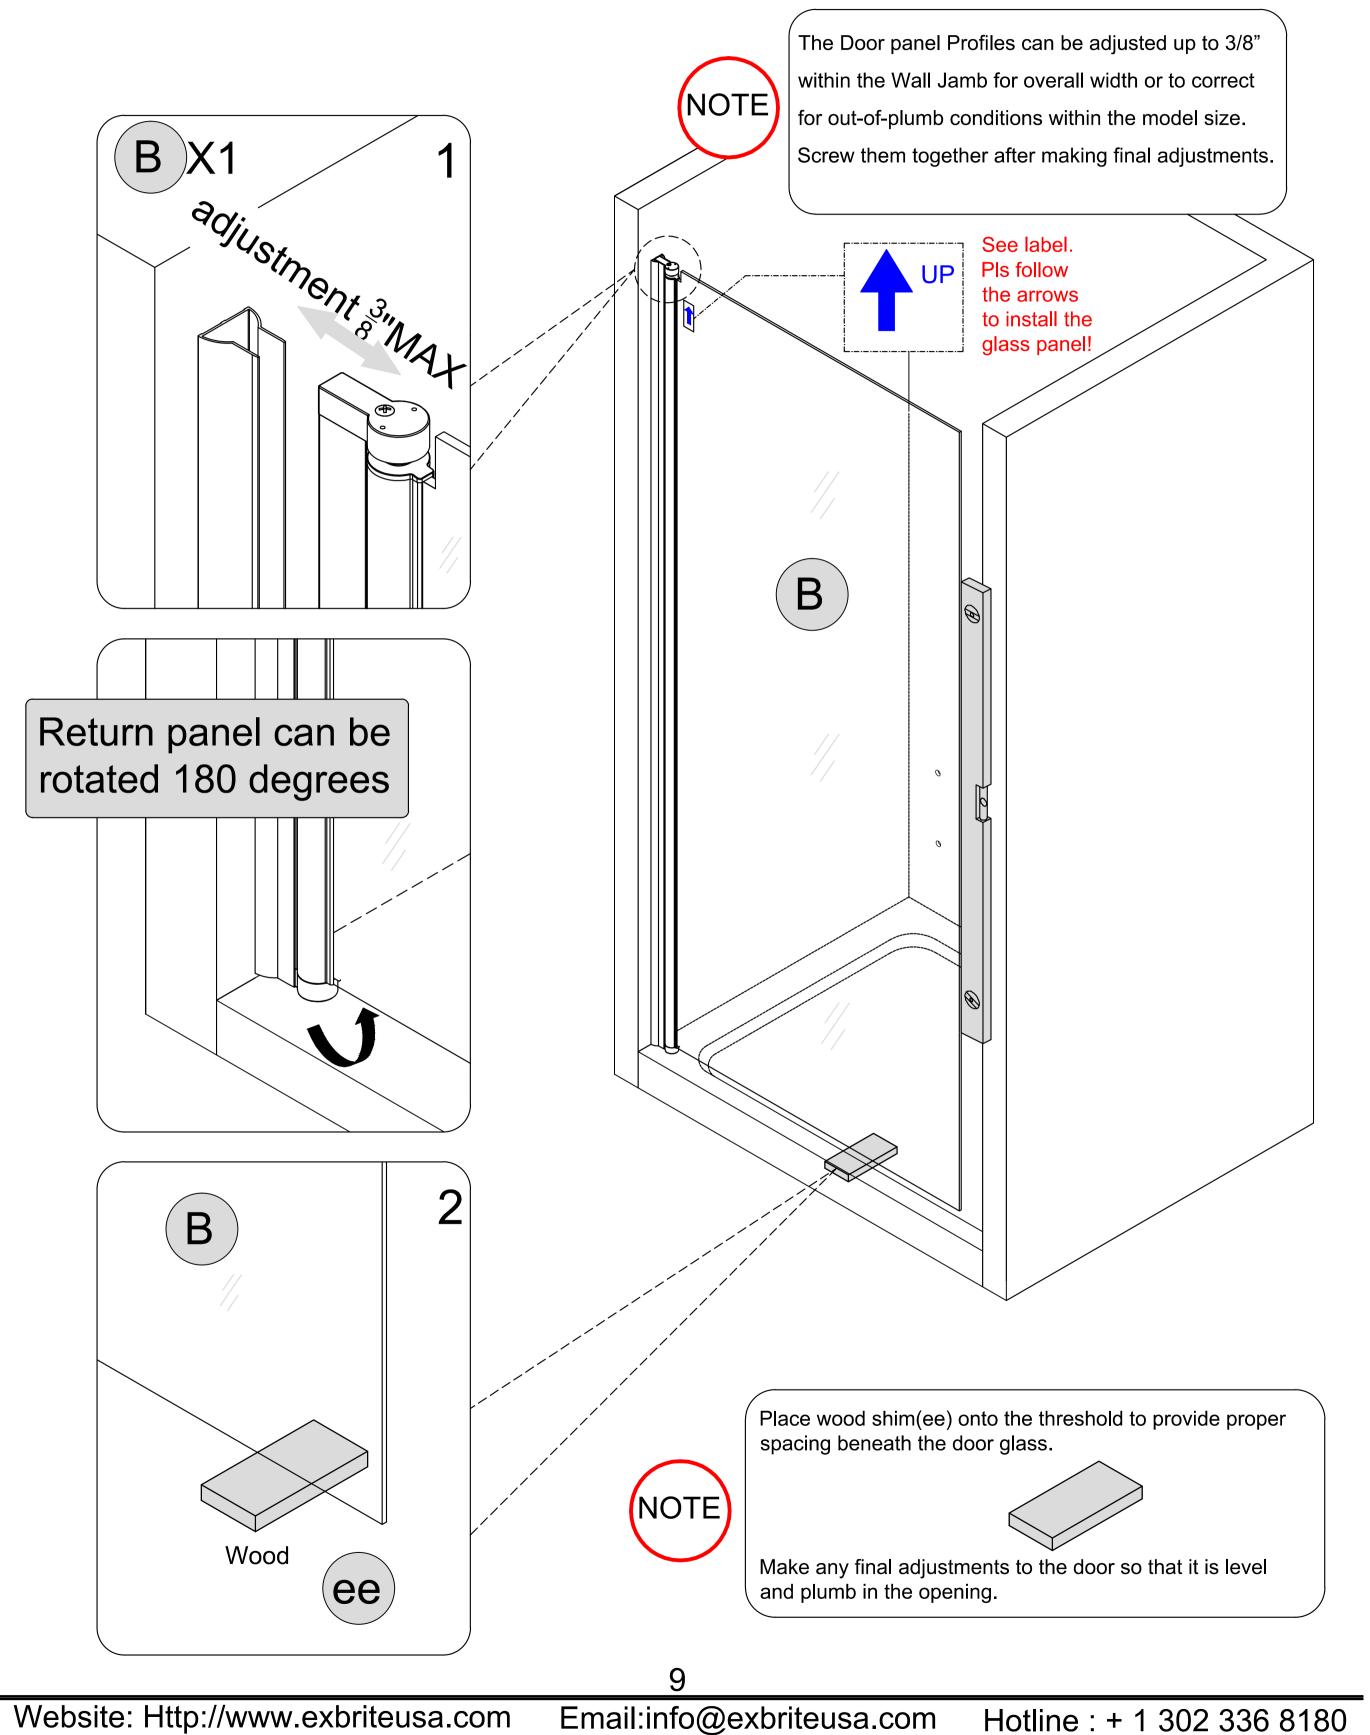

Website: Http://www.exbriteusa.com

Email:info@exbriteusa.com

SHOWER DOOR

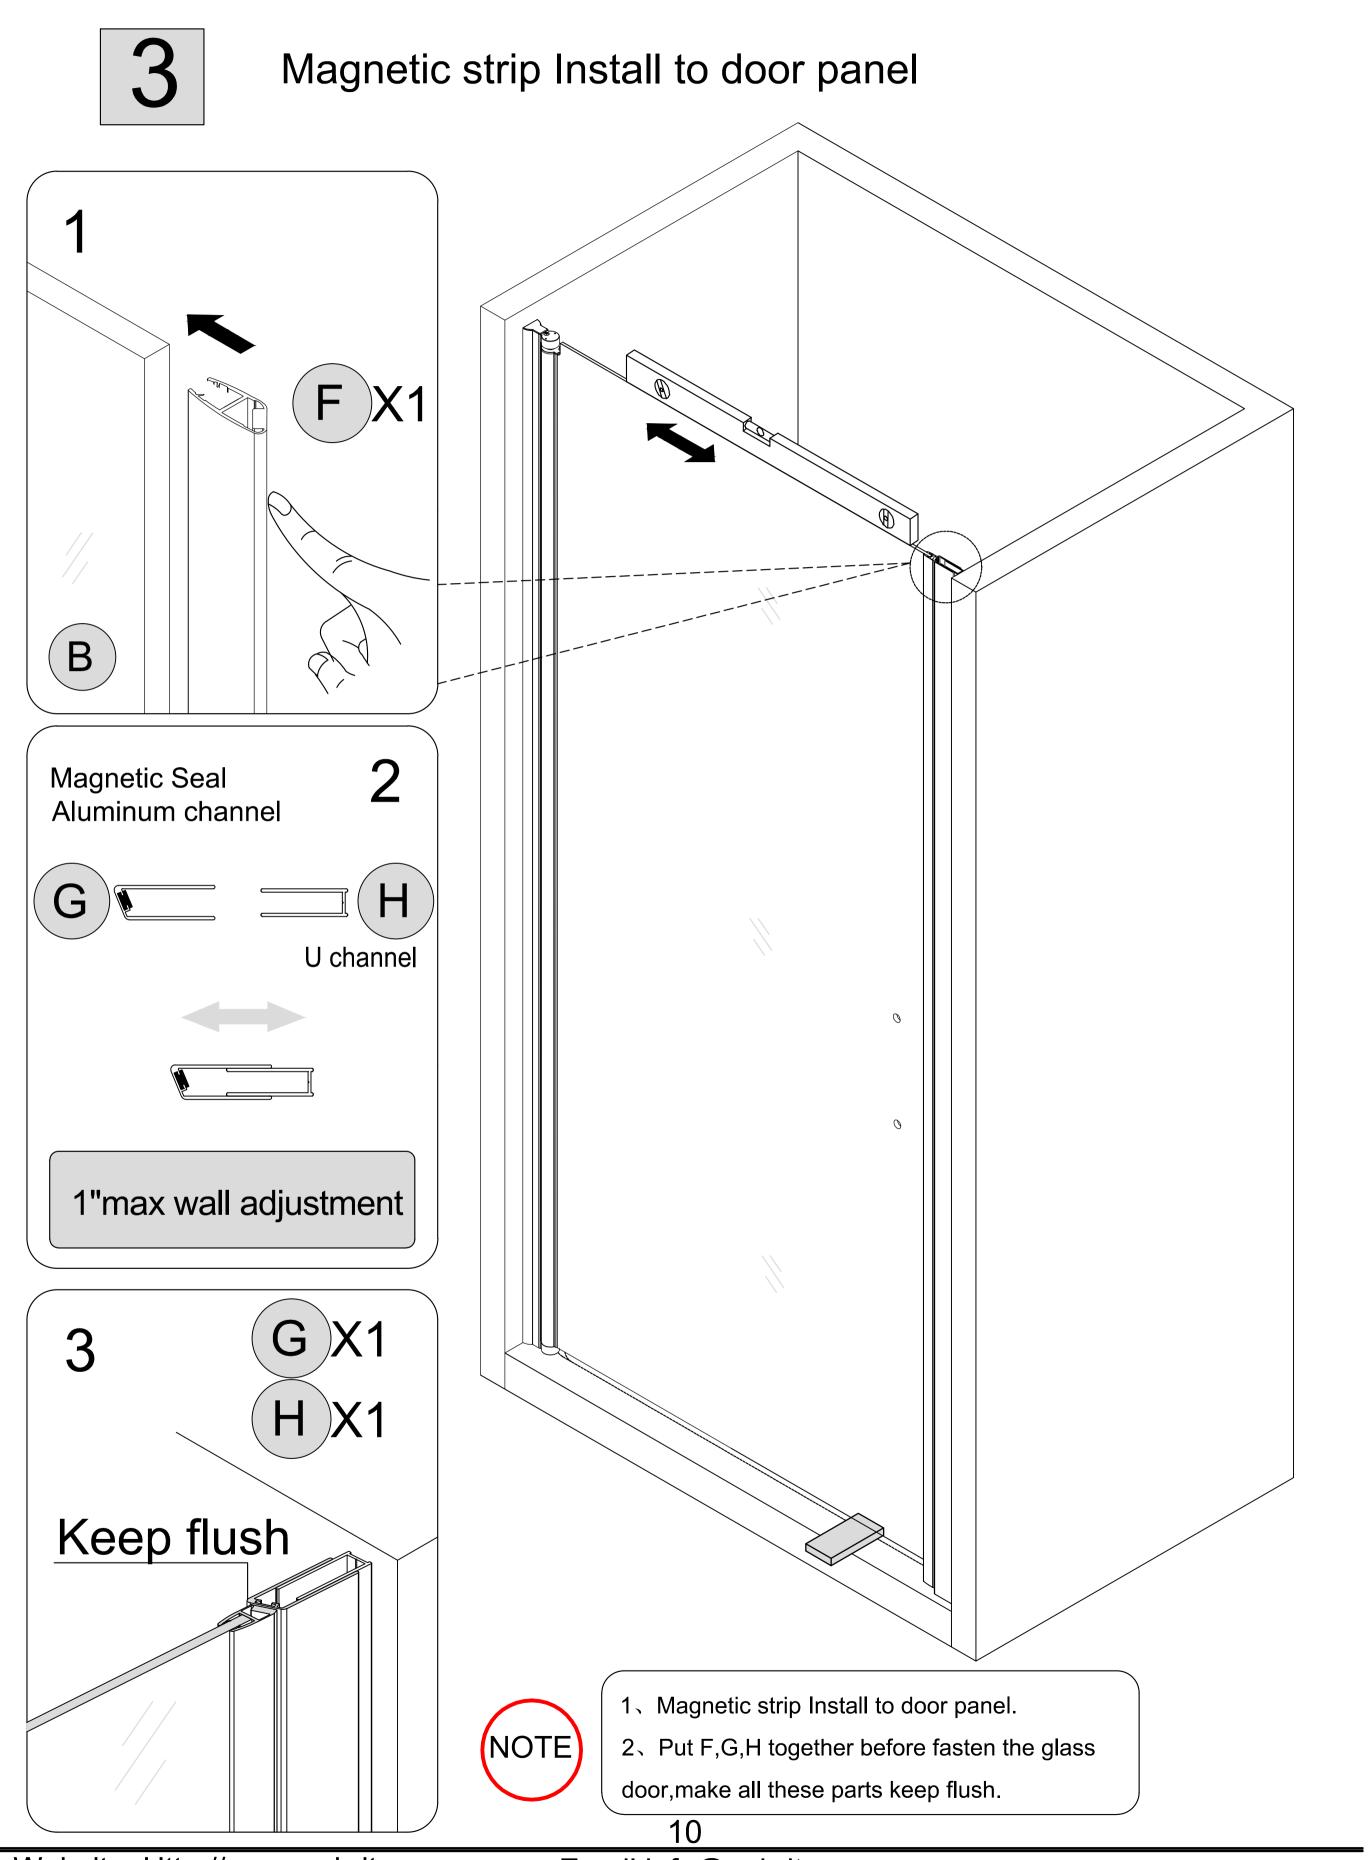

Website: Http://www.exbriteusa.com

Email:info@exbriteusa.com

Gro Gro shower door




Fasten the door panel



After final adjustments, drill Ø1/8" holes in the Wall Jamp (C). Drill only through the first layer of the Door panel Profile and install the ST4.0x10mm Pan Head Screws (dd) using the Decorative Covers and Washers (cc)

Inside View

Drill Bit Φ=1/8"

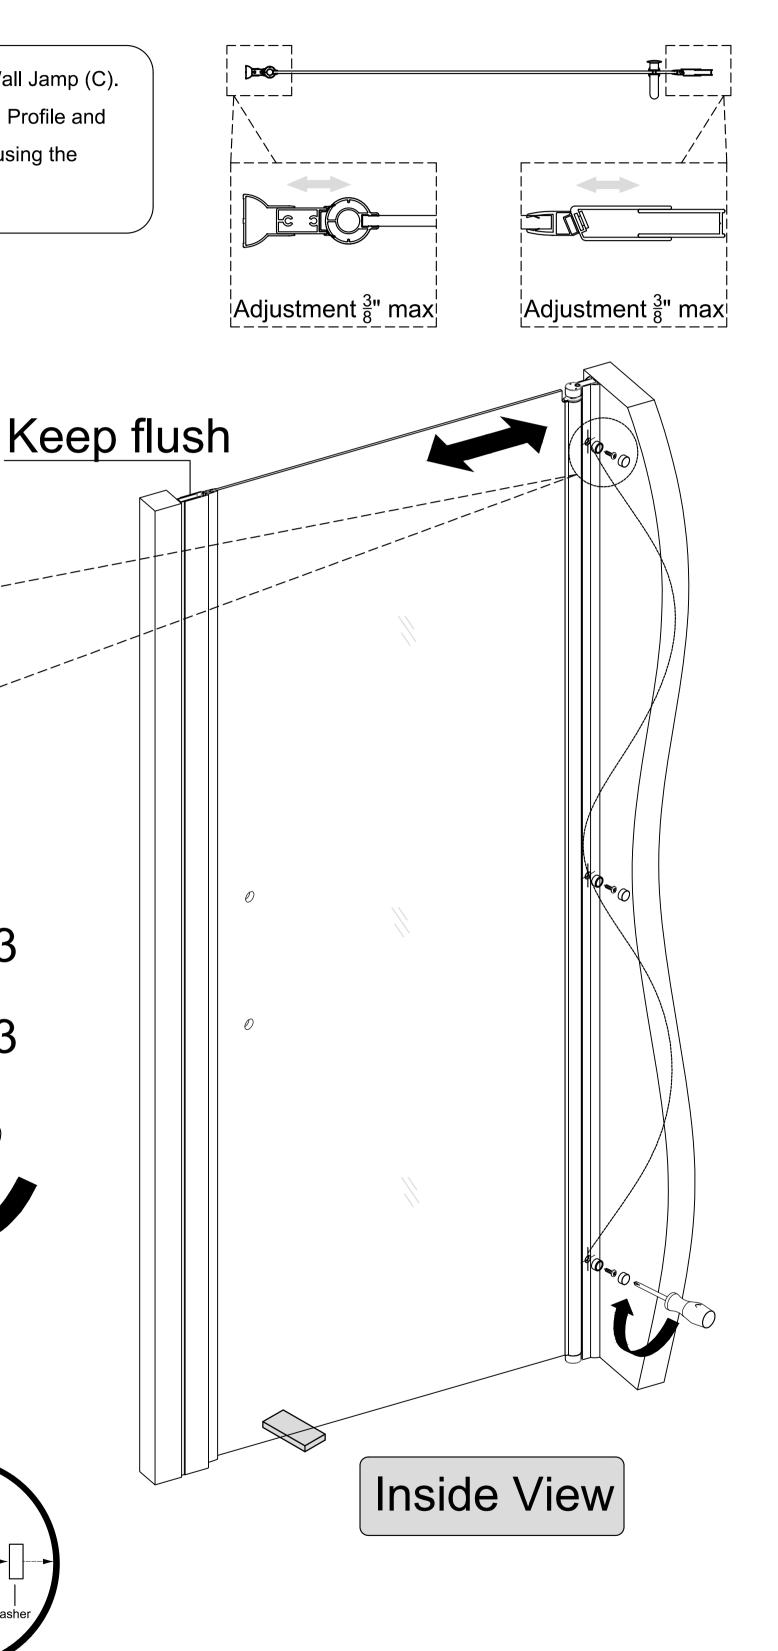



Include the washers when installing the ST4.0×10mm
Pan Head Screws (dd) and Decorative Caps (cc).

3

ST4X10mm
Pan Head Screw


decorative washer cap

Website: Http://www.exbriteusa.com


Email:info@exbriteusa.com

5

Determine the G & H position

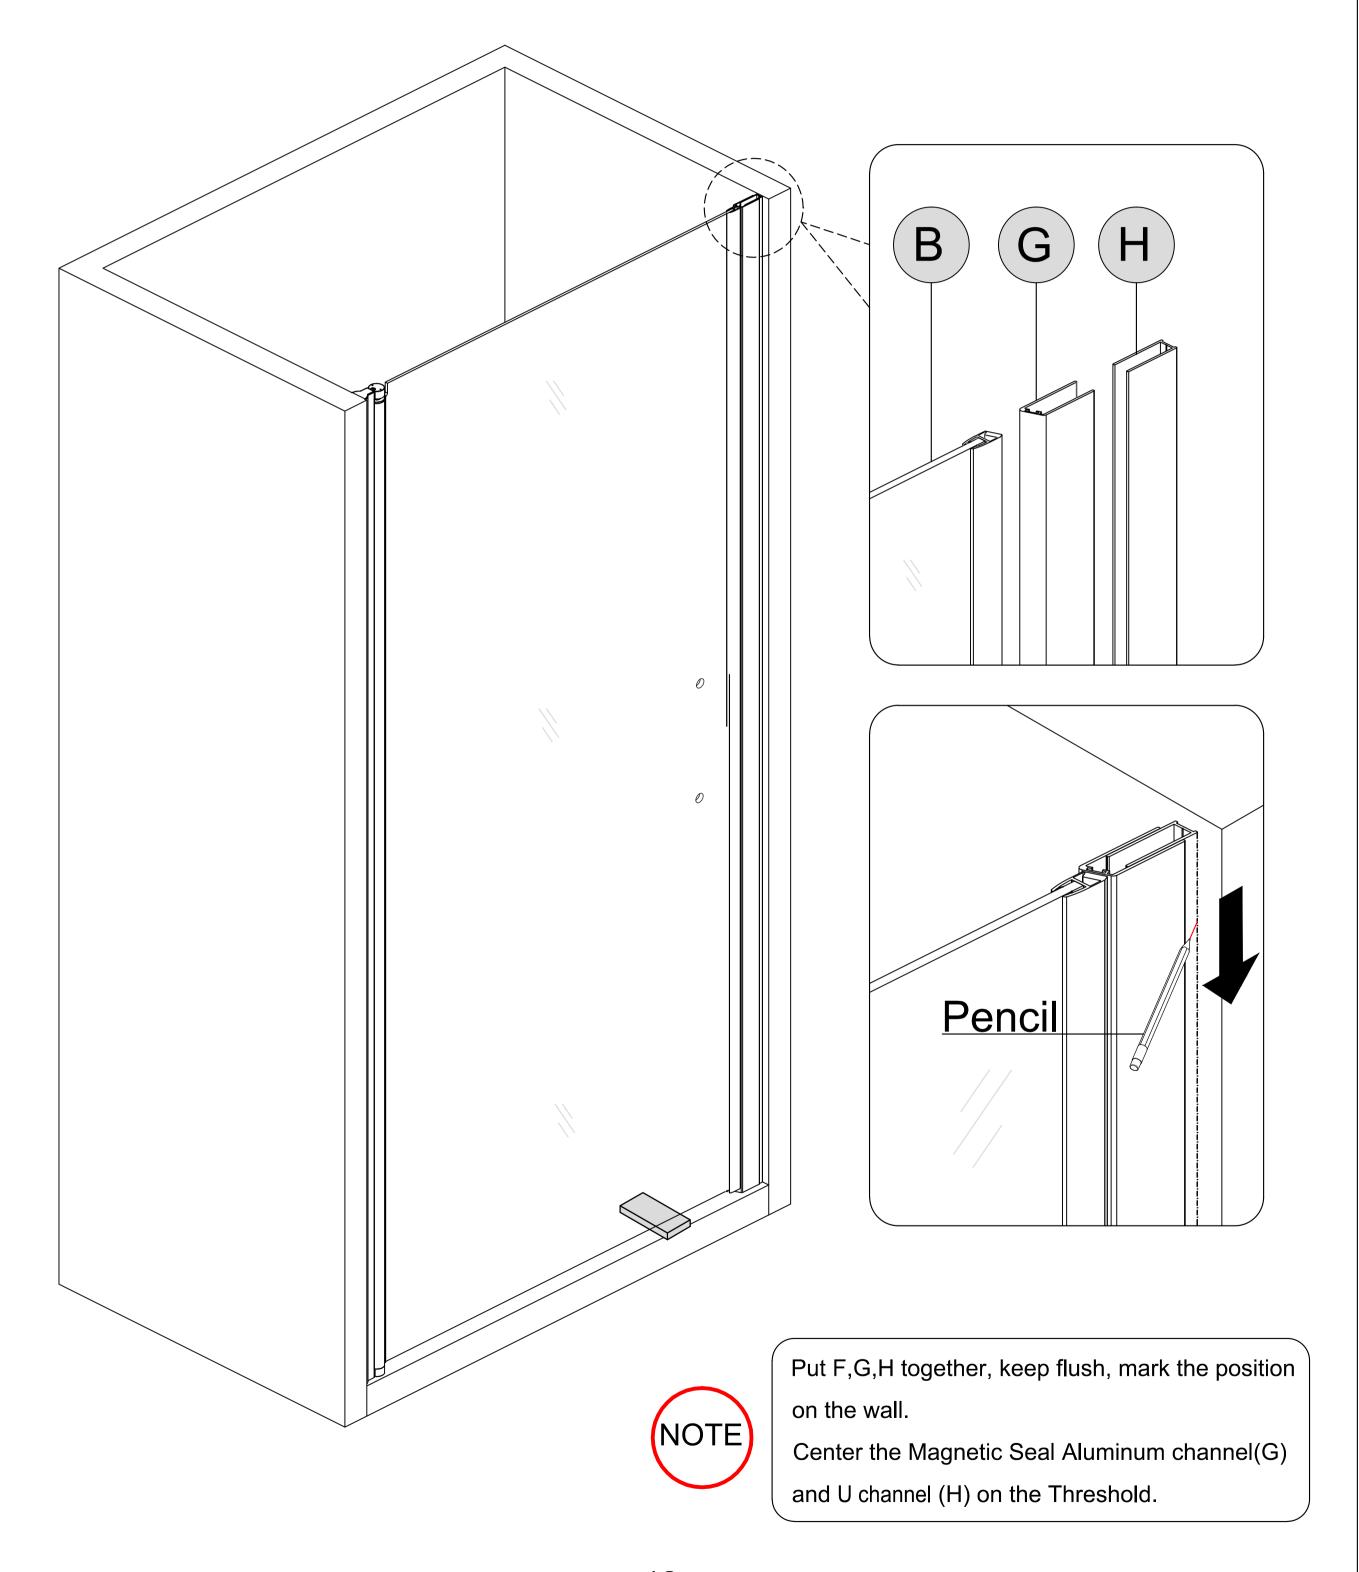

12

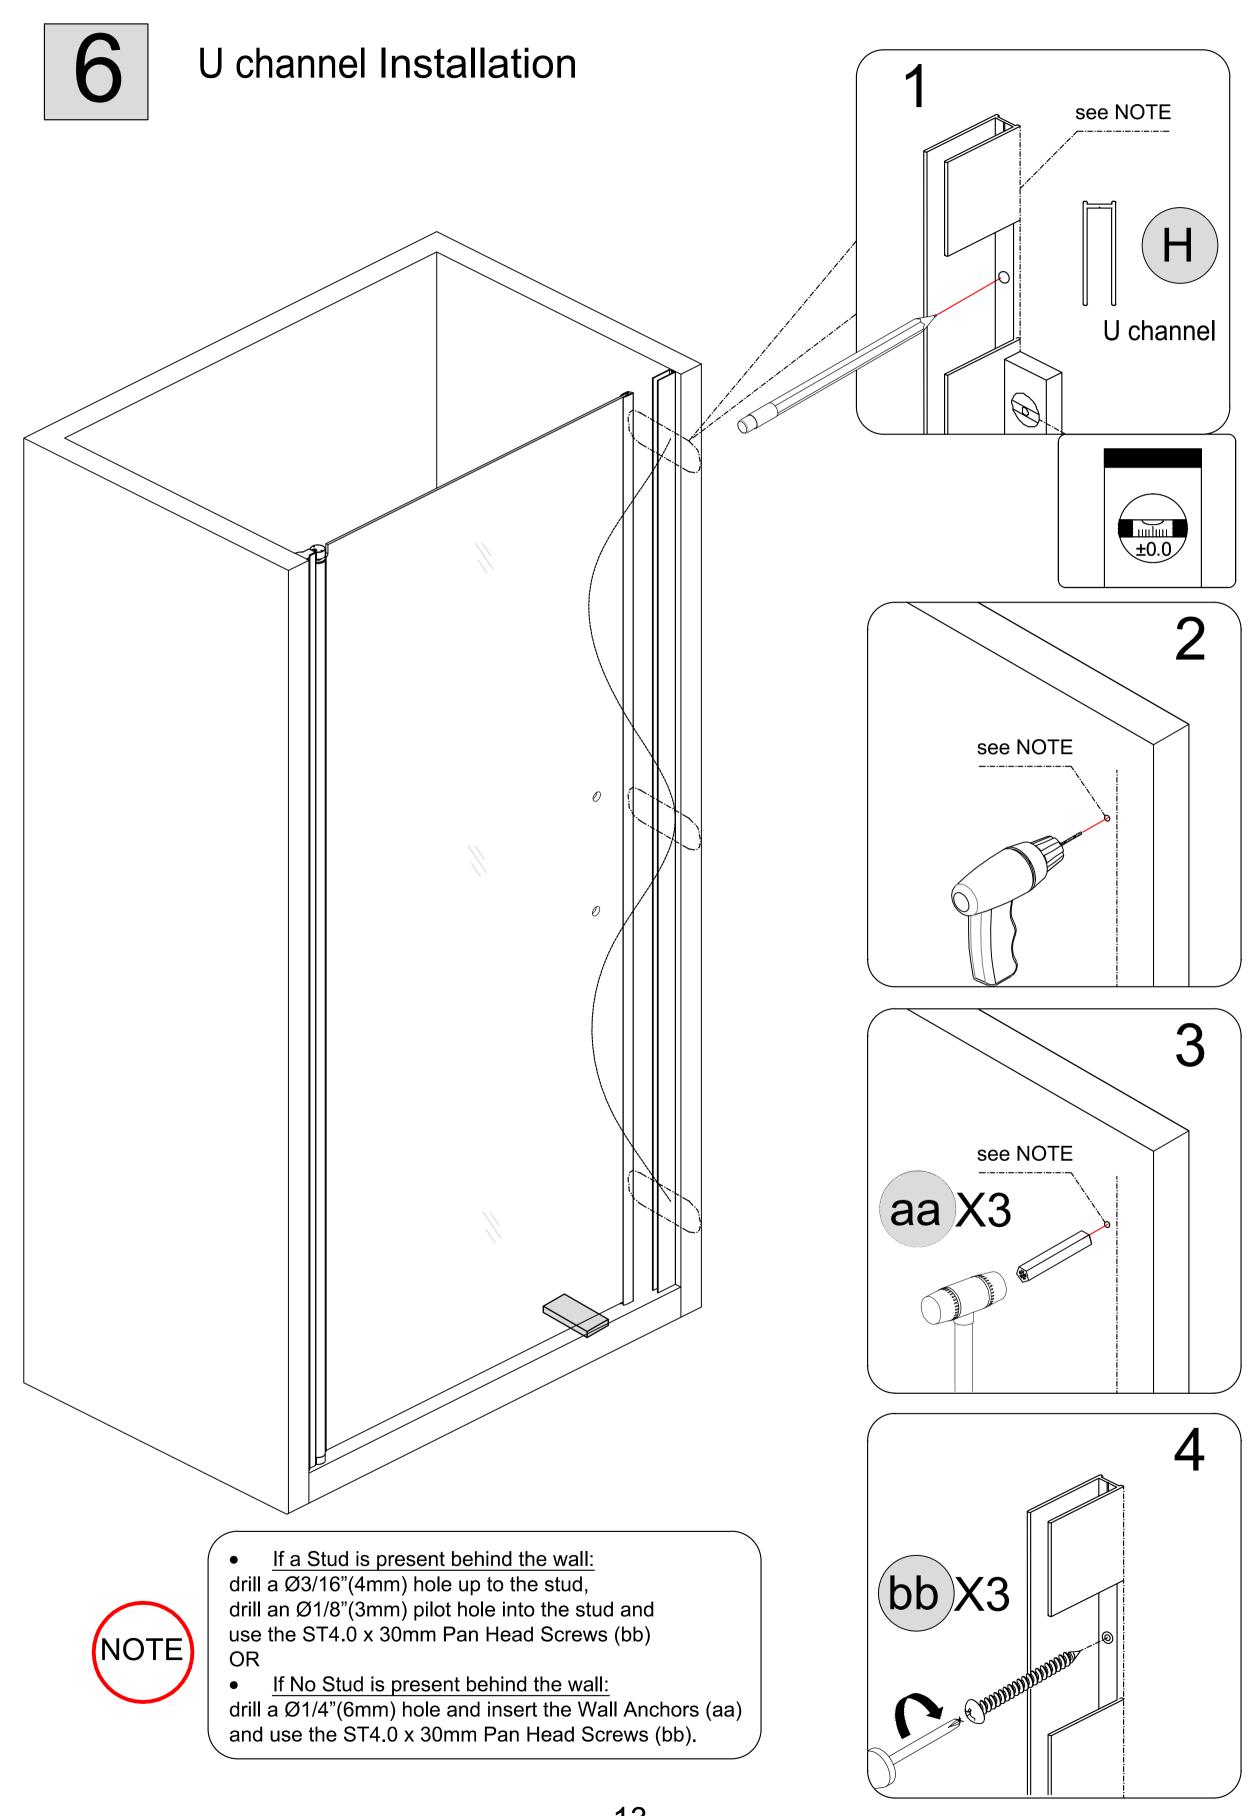


13


SHOWER DOOR



Magnetic Seal Wall Jamb Installation

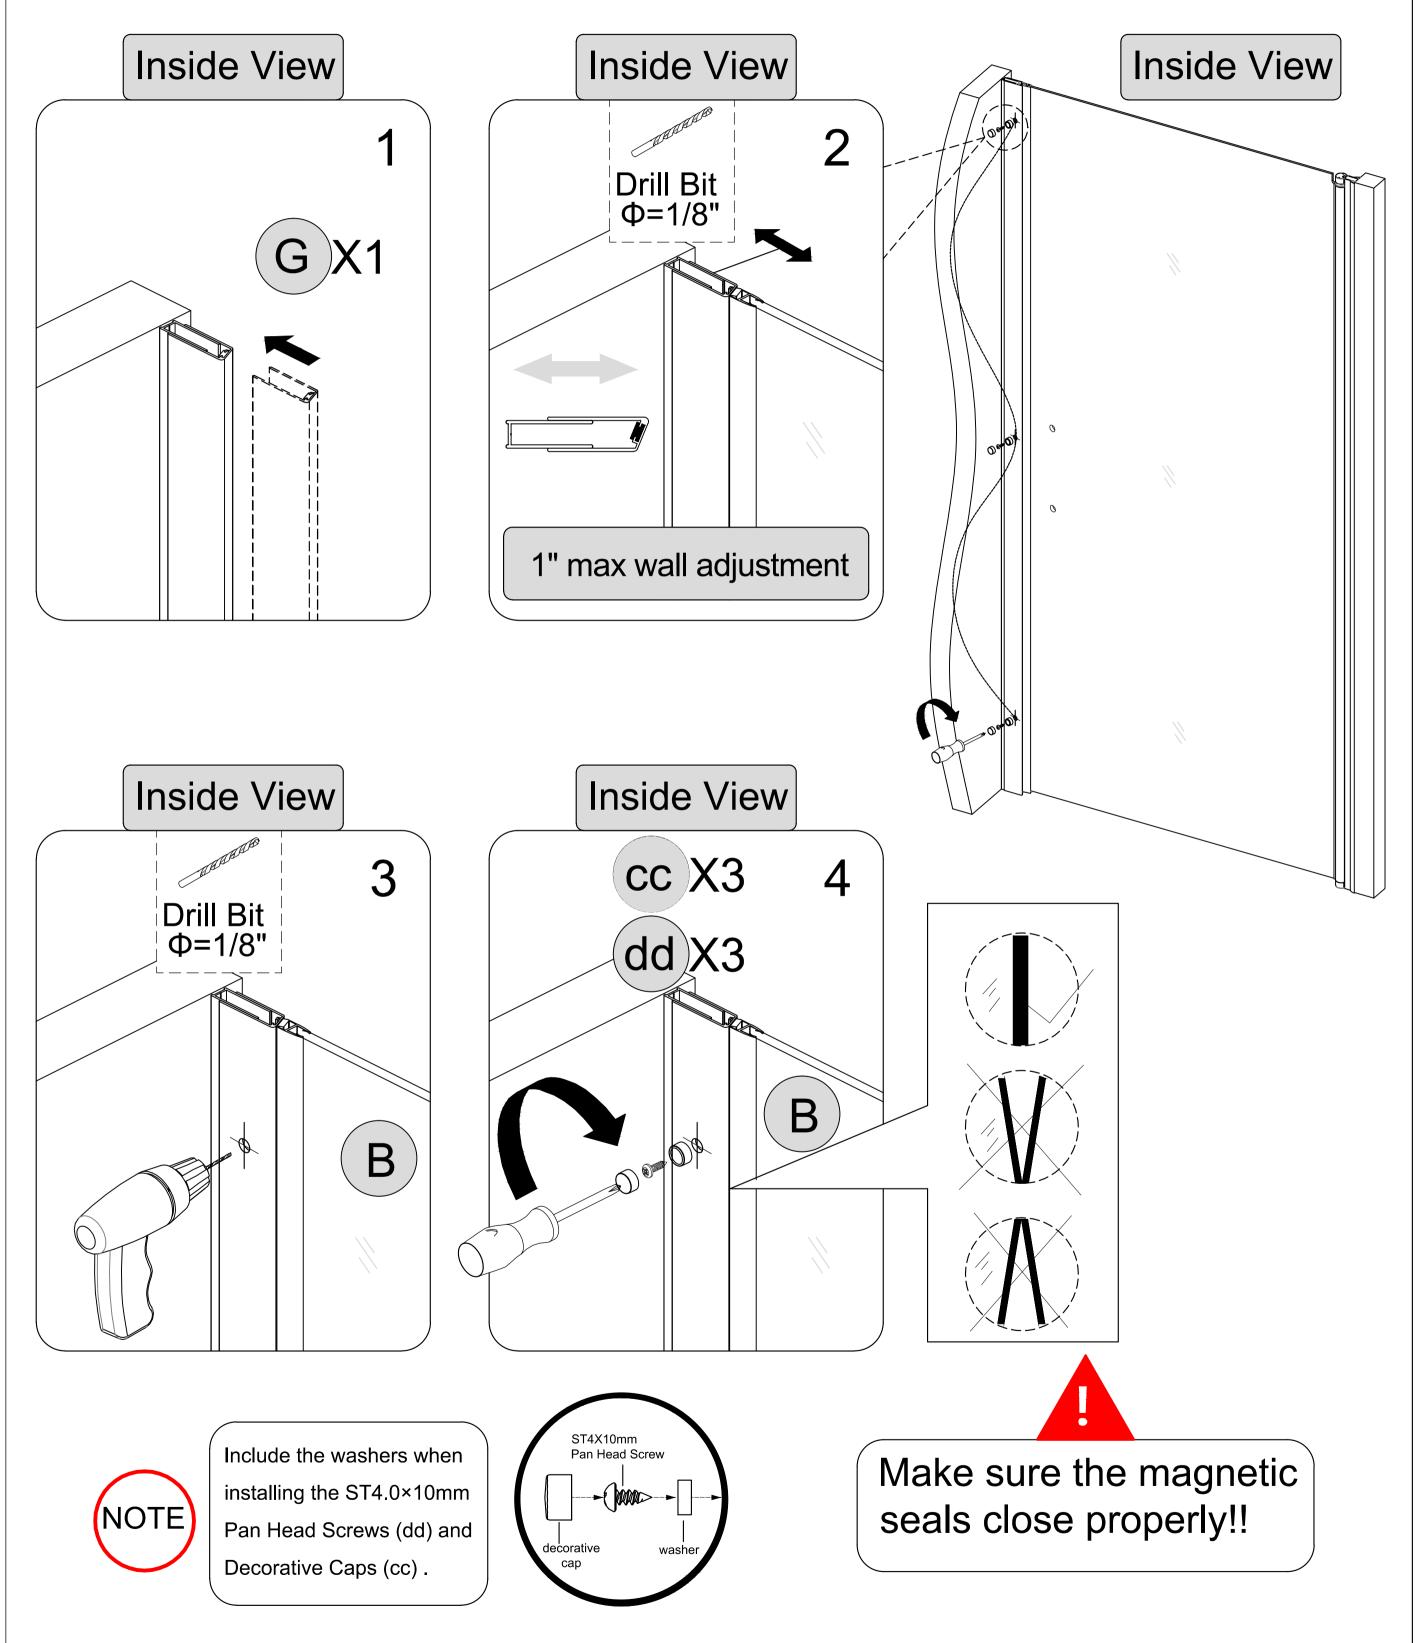

14

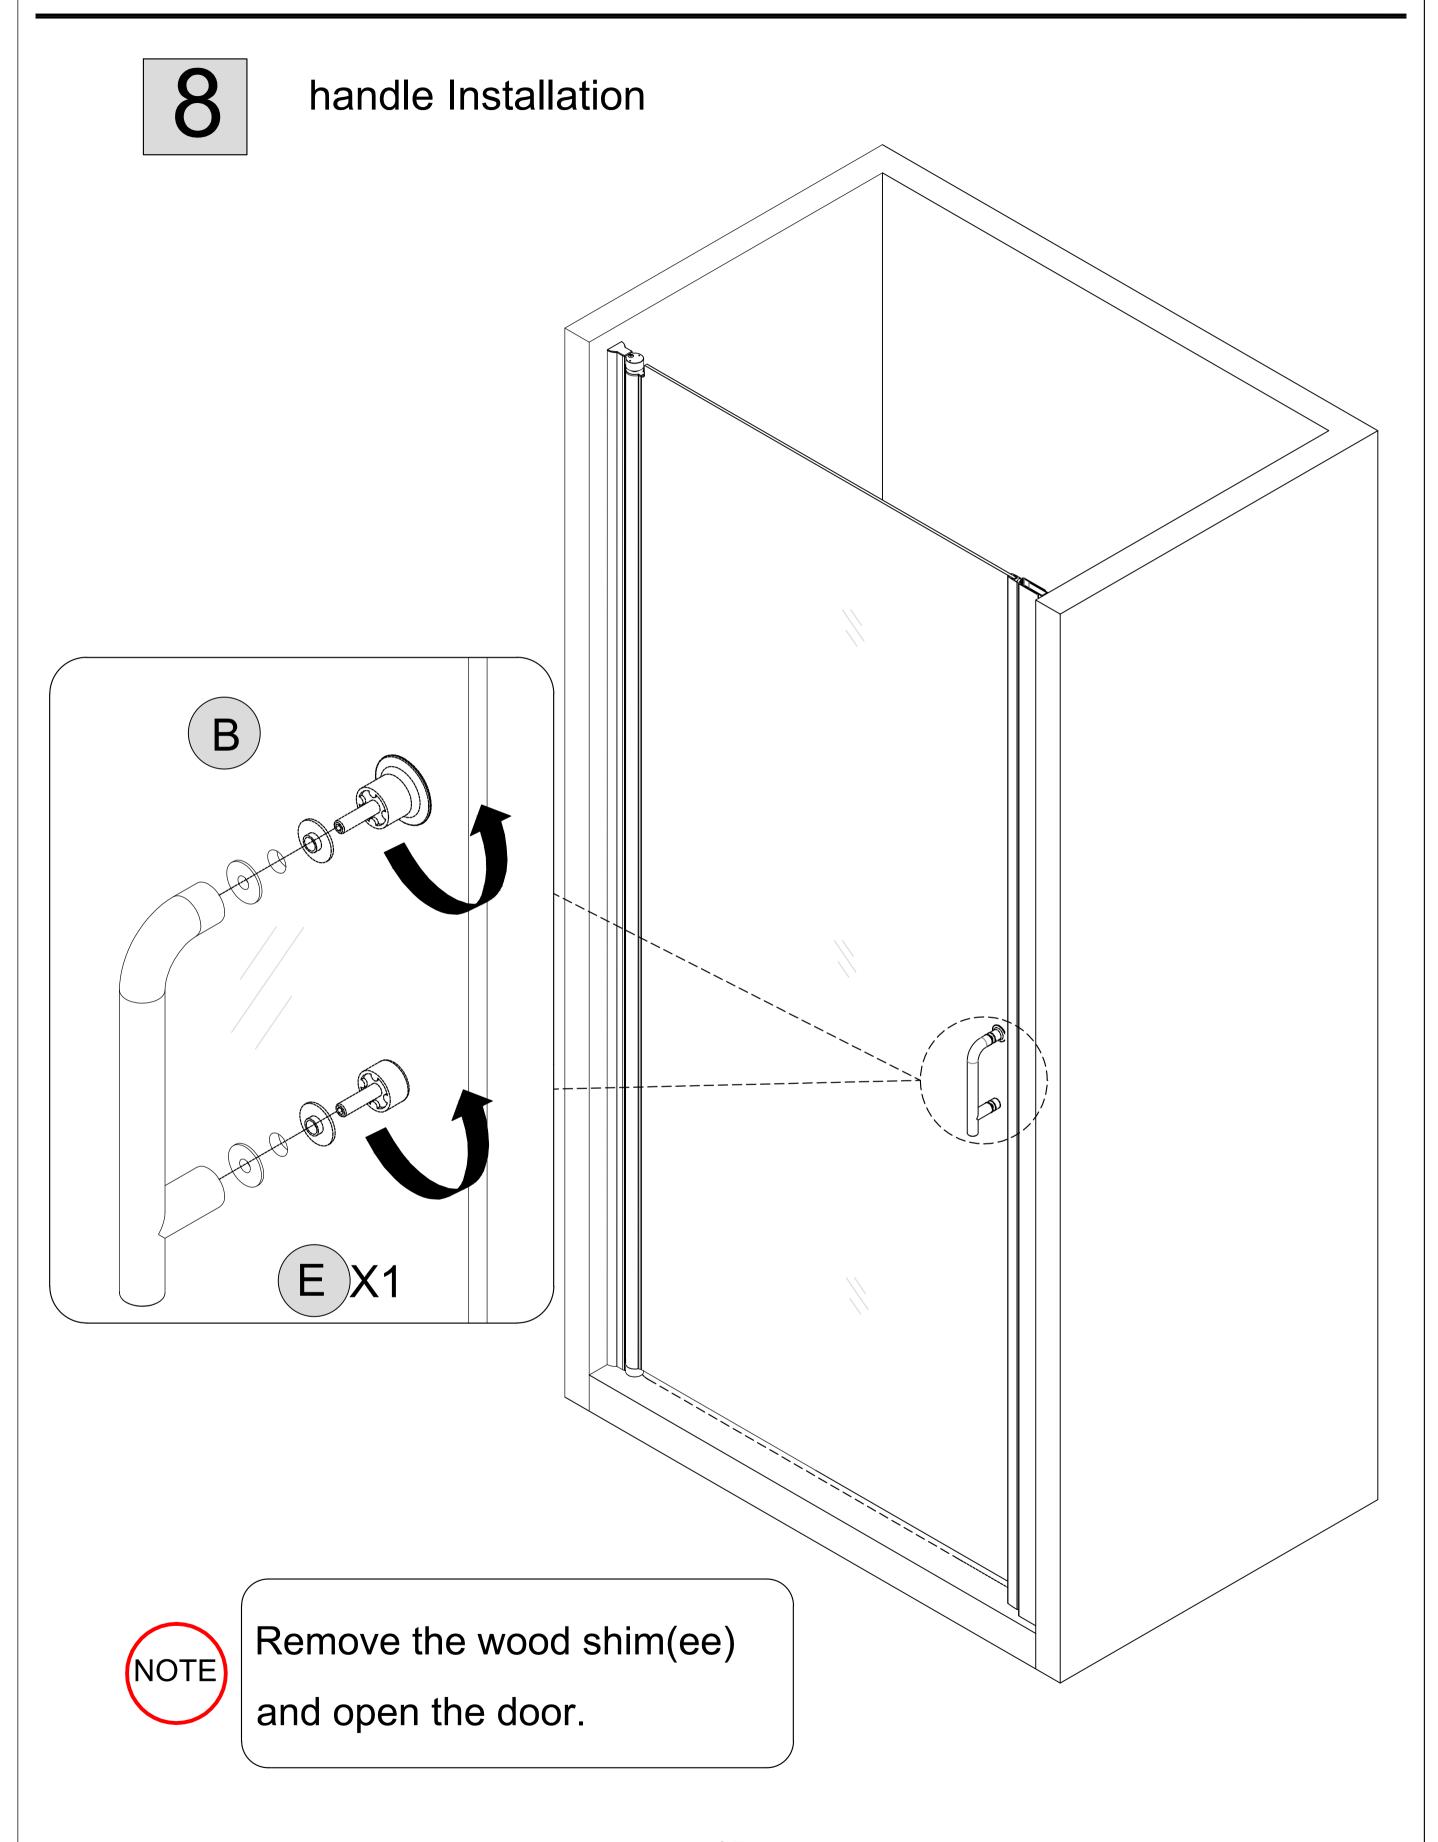


15

SHOWER DOOR

9

Top Cover Cap & Bottom Gasket Installation

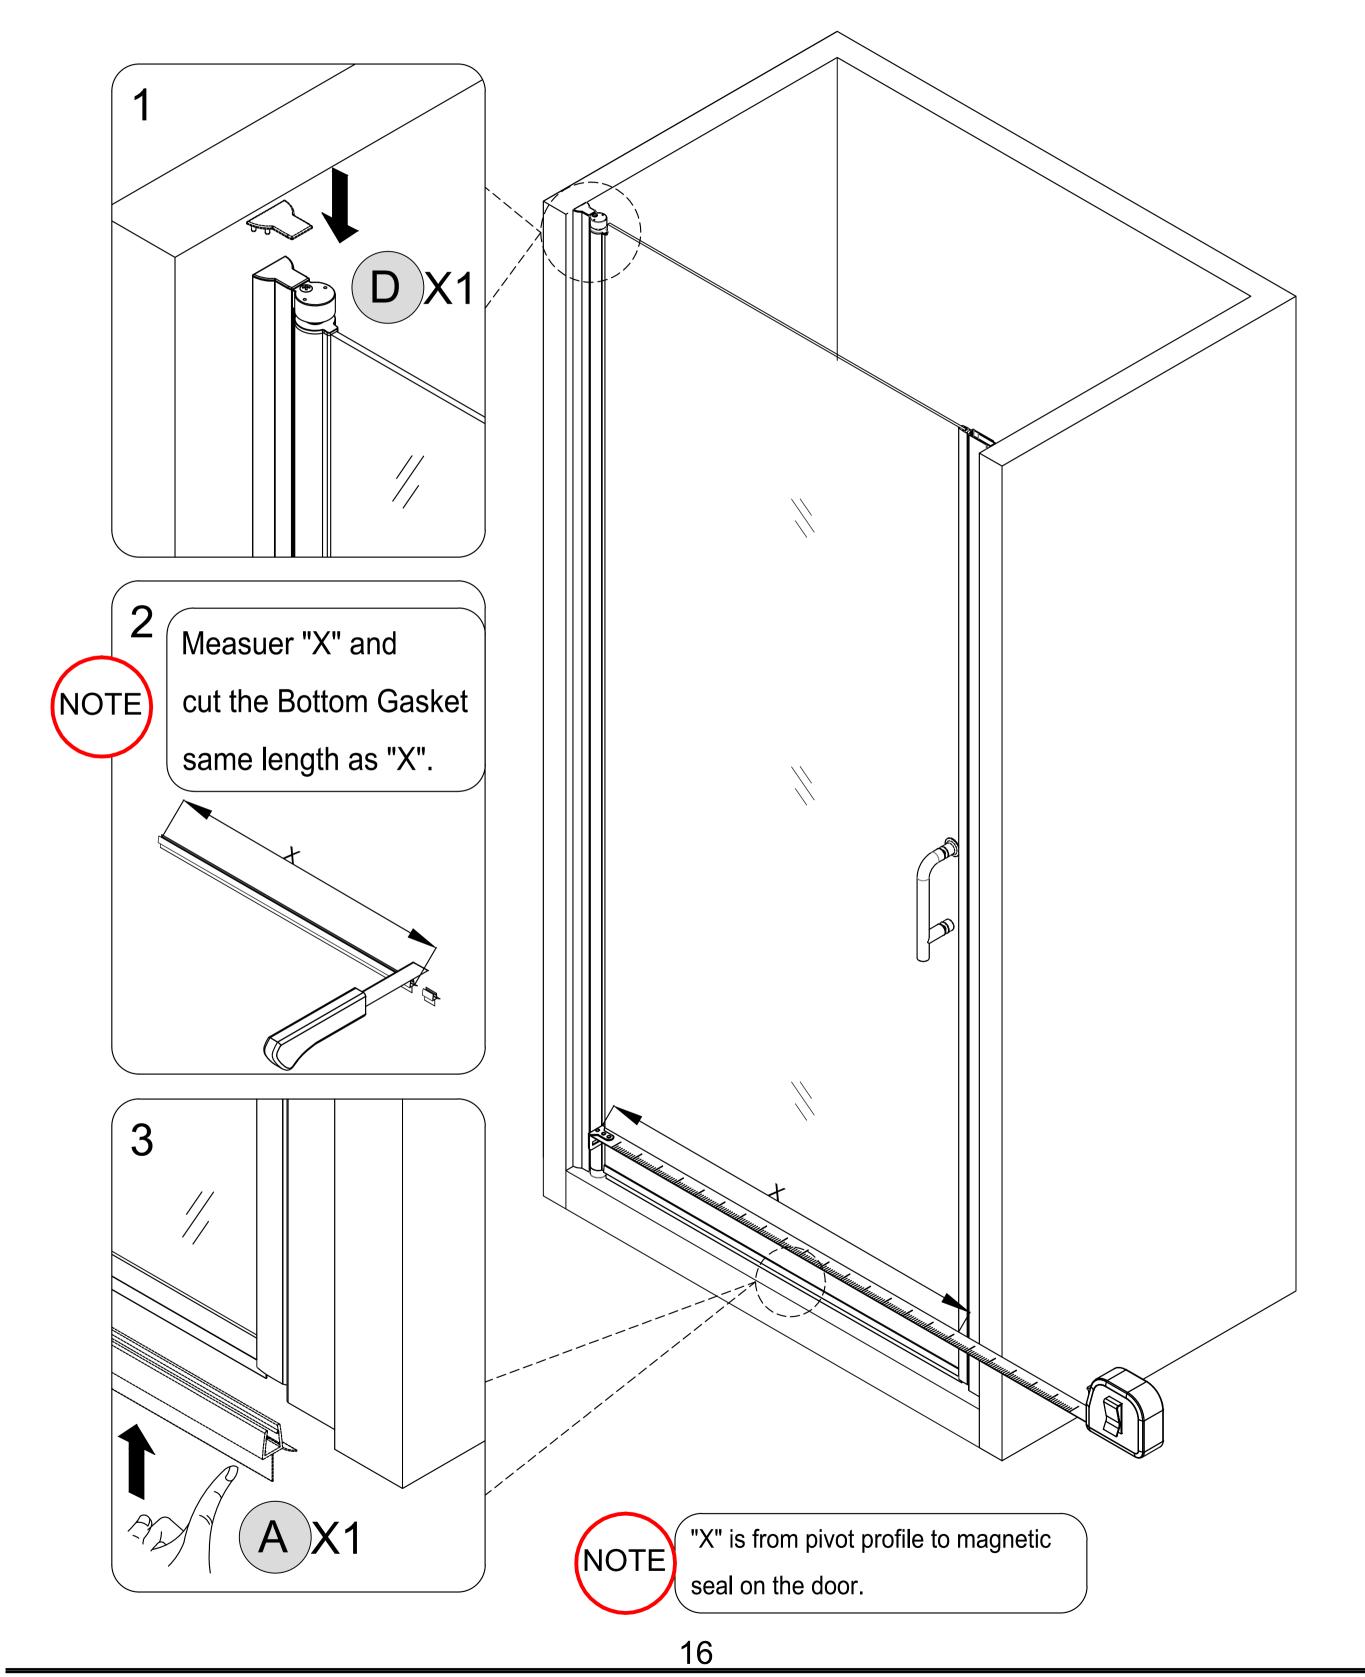

Website: Http://www.exbriteusa.com


Email:info@exbriteusa.com

GraGra

SHOWER DOOR

10

Alu. Threshold Installation

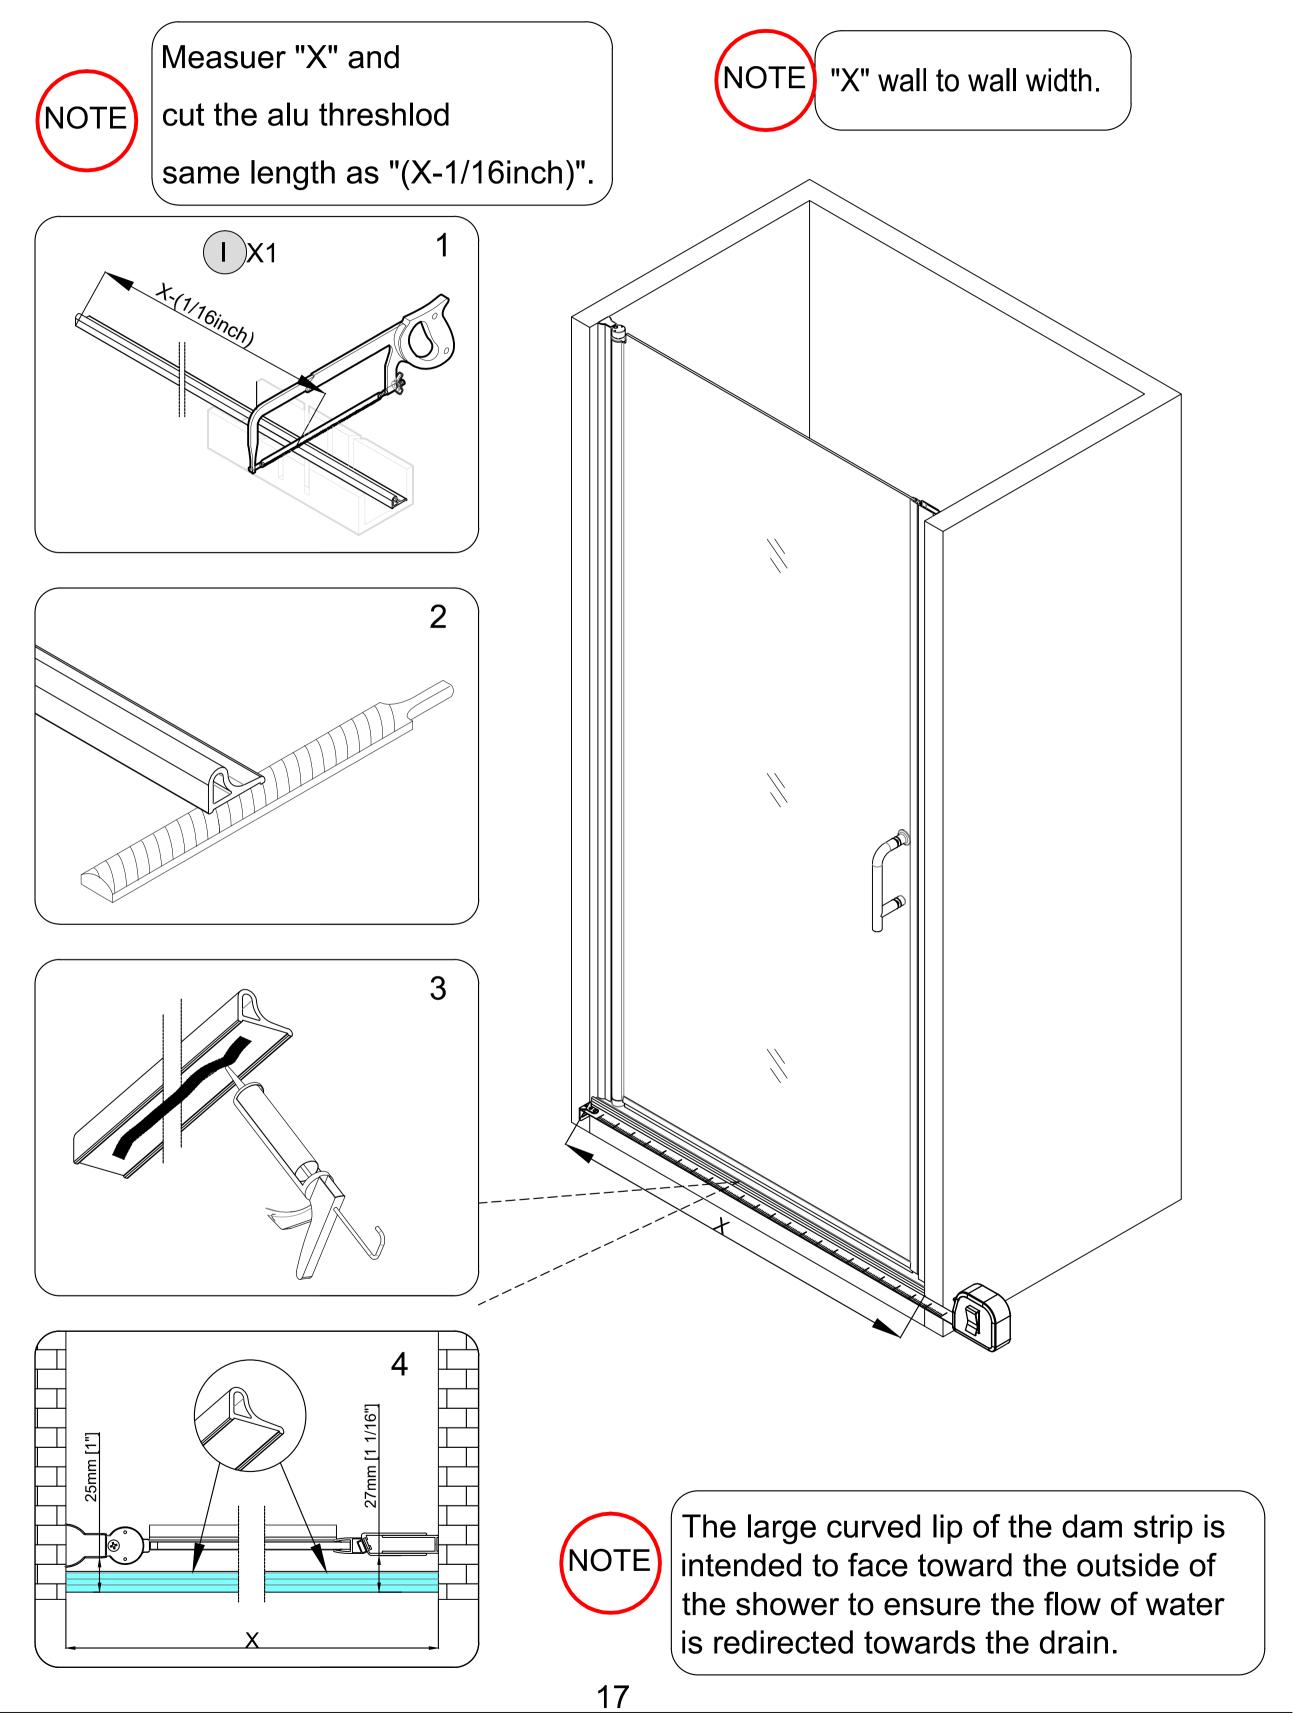

Website: Http://www.exbriteusa.com

Email:info@exbriteusa.com

SHOWER DOOR

GroGro



SEALING



The surfaces need to be clean and free of debris before applying silicone.




Ensure that the Shower door closes tightly and opens smoothly.

Apply a good quality silicone sealant along the wall

Jamb(C)&(H)and Water seal (I).



Allow 24 hours for the silicone to cure before using the shower.

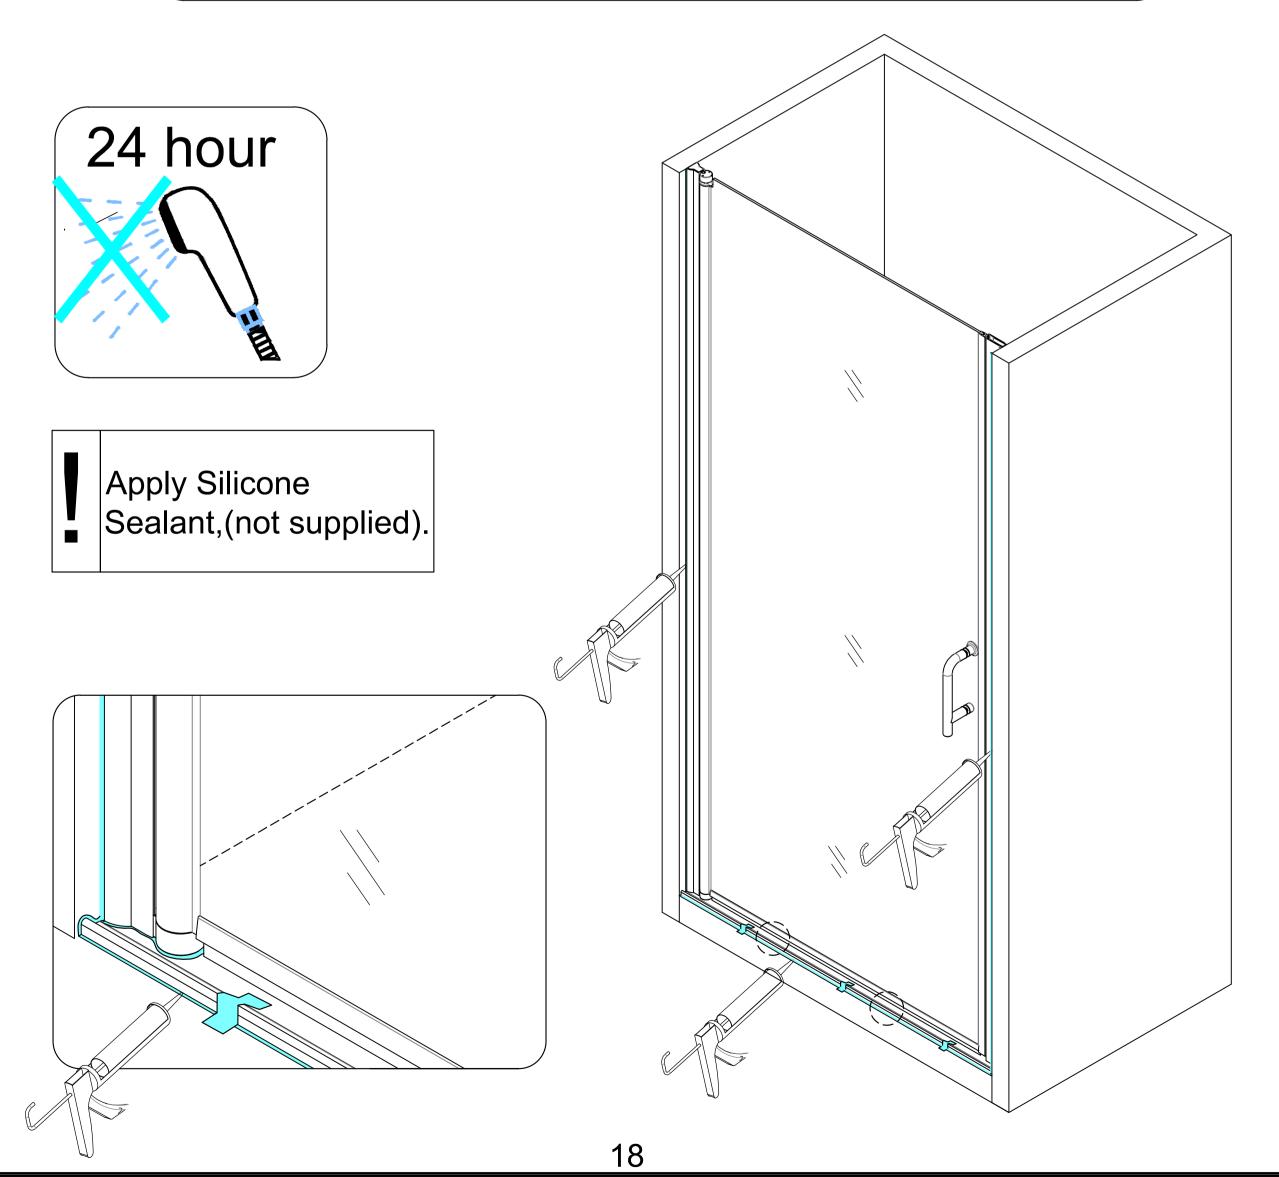



This troubleshooting guide is for general aid only. For service and installation issues or concerns, please contact us by hotline + 1 302 336 8180.

Troubleshooting						
Problem/Symptom	Suggested Solution	Page(s)				
Missing parts	*Check all shipping/packaging material for missing parts/components. *If not found, please contact us by hotline + 1 302 336 8180 to order factory part replacement.	2.3				
Door is not operaing smoothly	*Check the magentic seal (F)for proper trimming and installation. * Confirm the sweep seal (A) is tightly secured to the bottom of Door Glass	10-15				
Water leakage	*Check all the pvc seals for proper trimming and installation. *Check the alu. threshold installed properly and secured with silicone.	16-18				
Handle rattles during operation	*Confirm the pvc gaskets are present and the handle is tightly secured to the glass.	15				

Gro Gro shower door

