
## **Shower Door Installation Instruction**



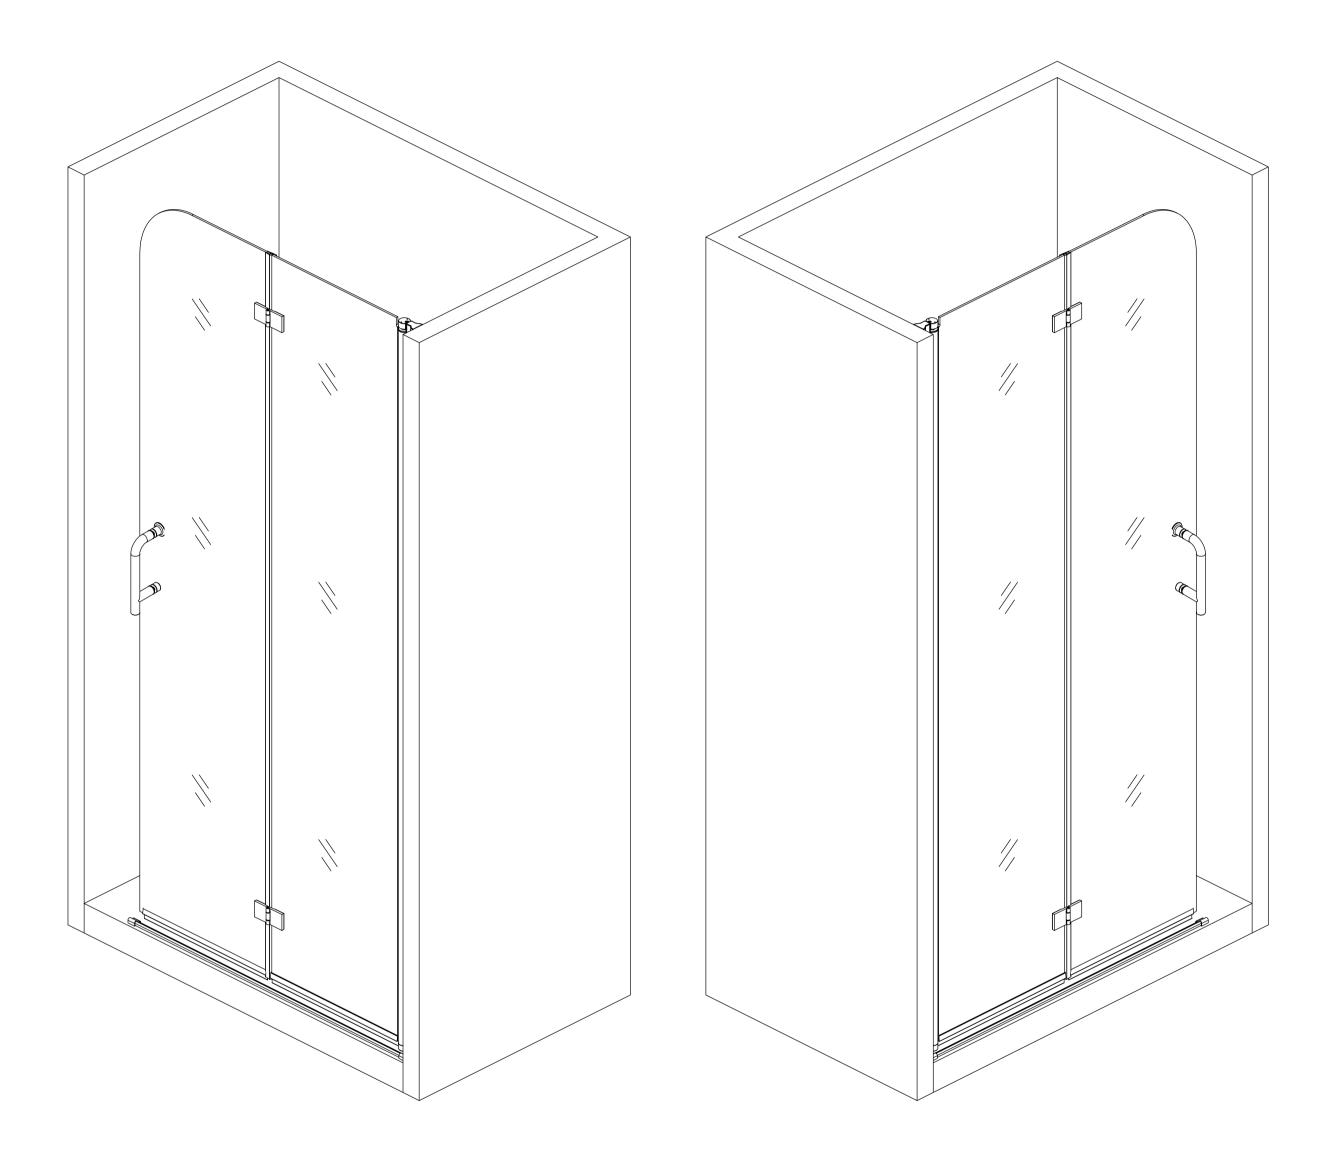


Reversible for a left or right door installation.


Please do not return the product to the store. Contact us with any questions.

## Model Specific Preparation



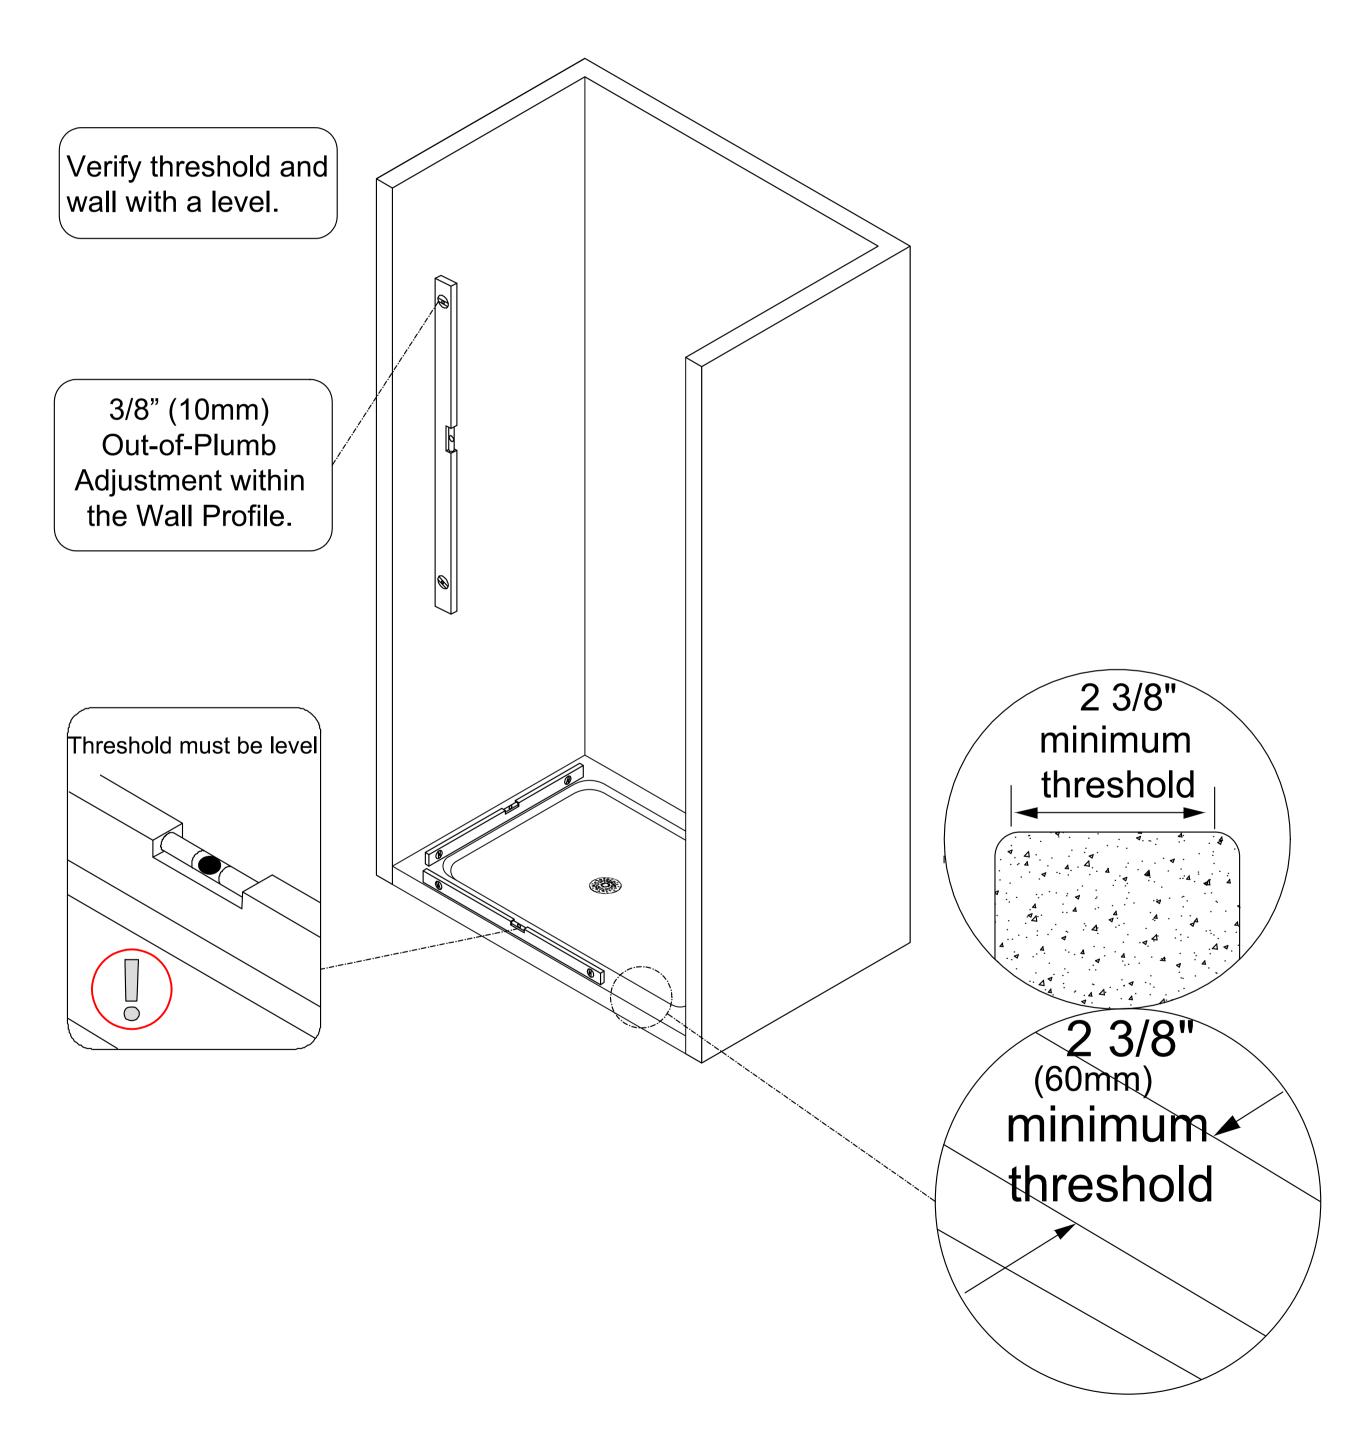

### PACKAGE CONTENT

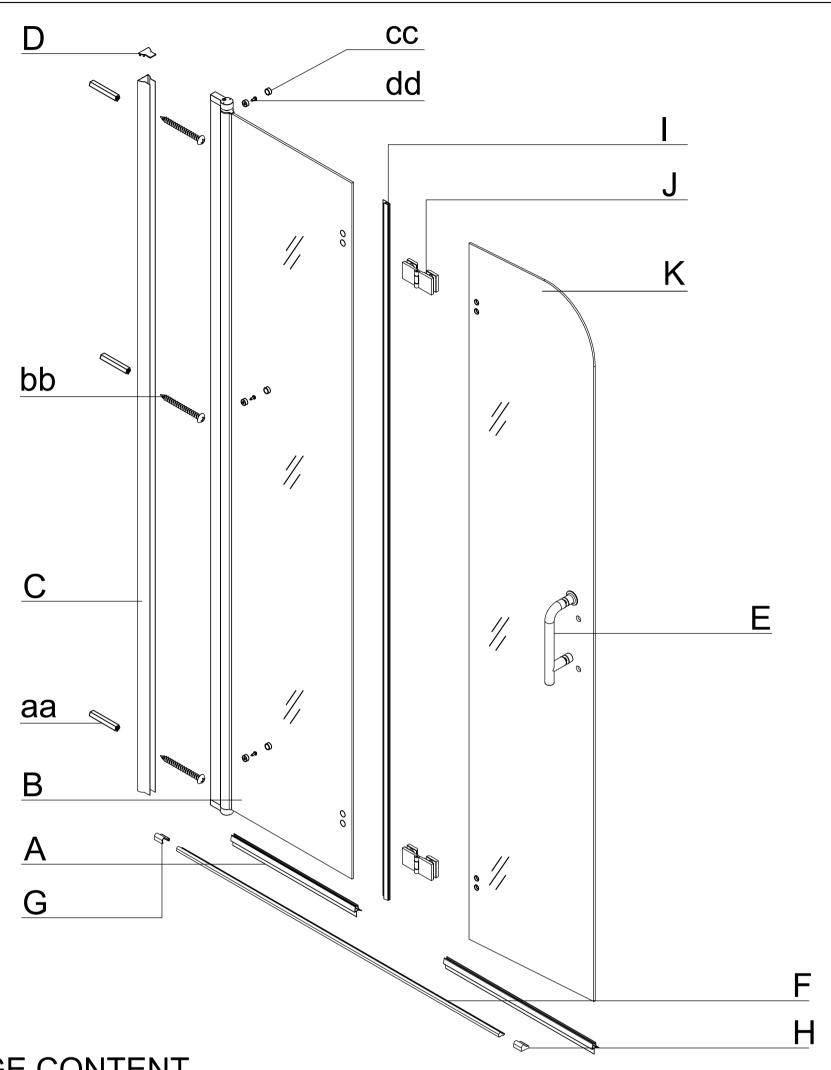


#### PACKAGE CONTENT


PART#	DESCRIPTION	QTY	PART#	DESCRIPTION	QTY				
А	Bottom Anti-Water Strip	2	G	Threshold Cover (L)	1				
В	Glass Door-1	1	Н	Threshold Cover (R)	1				
С	Wall Jamb	1	I	Anti-Water Strip	1				
D	Top Cover Cap	1	J	Hinge	2				
Е	Handle	1	K	Glass Door-2	1				
F	Alu. Threshold	1							


NOTE


Inspect all parts for missing prior to installation! Contact us for any part missing.


### PACKAGE CONTENT

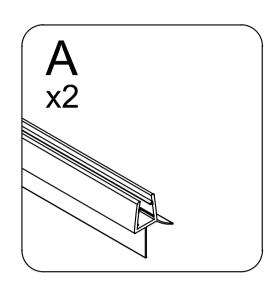


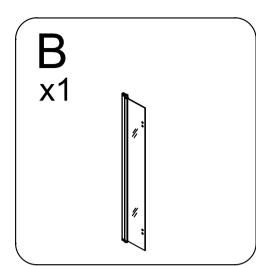


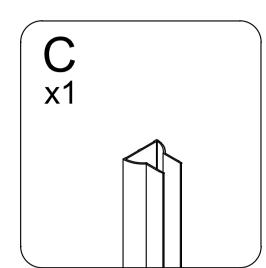


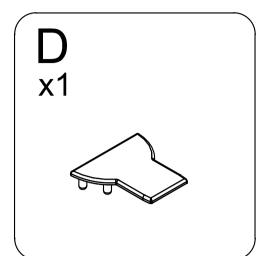


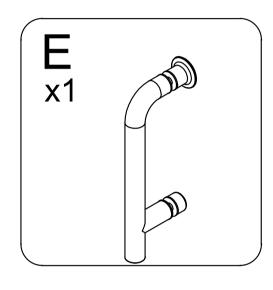


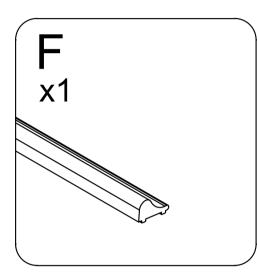


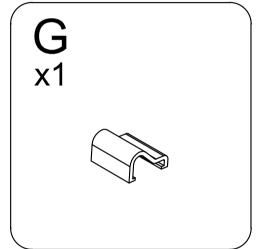

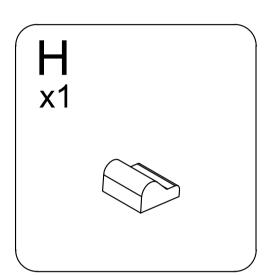


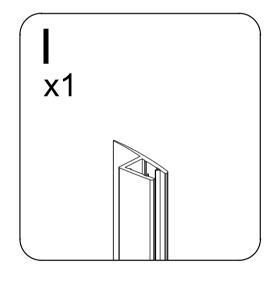

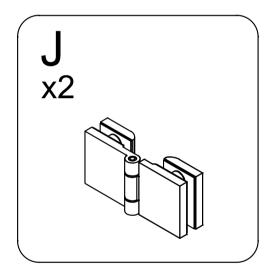


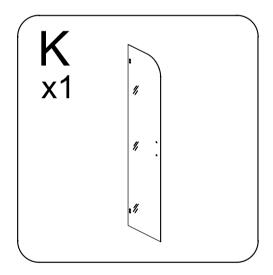



## HARDWARE CONTENT

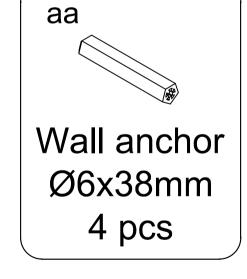



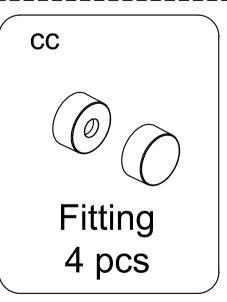

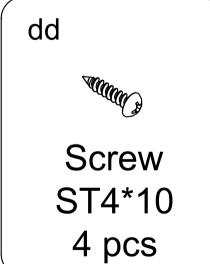

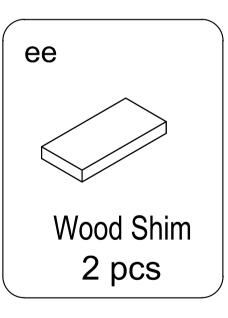




Additional spare parts are included.




Inspect all parts for missing prior to installation! Contact us for any part missing.


### TOOLS REQUIRED




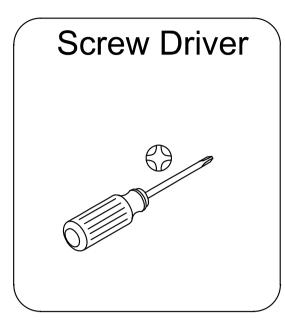




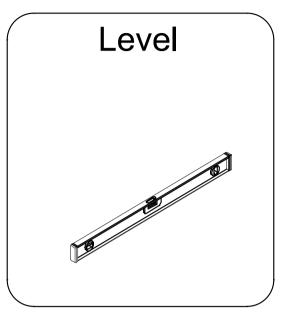


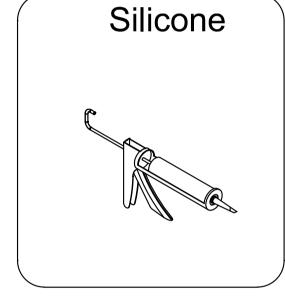


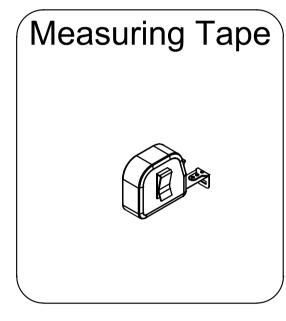



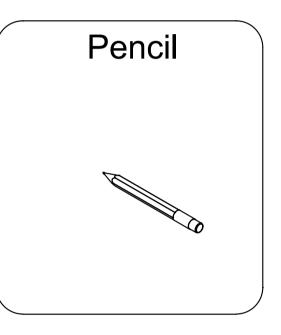

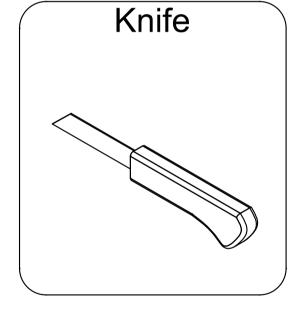


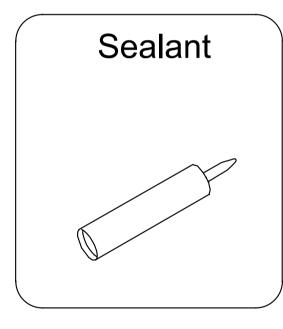









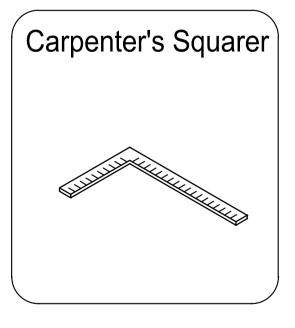



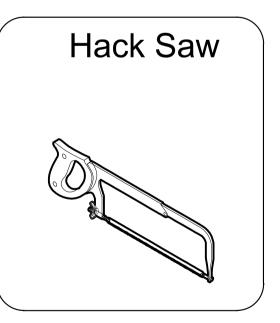

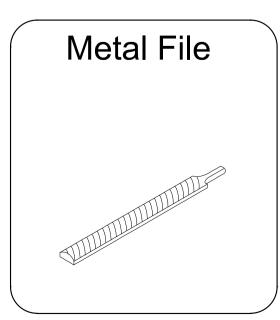

#### **SAFETY INFORMATION**

#### **CAUTION**

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
  - Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
  - Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
  - Keep this installation manual for future reference.




Two people should perform this installaton.



### **Model Dimensions**


## configuration dimensions:

A Product Height	B Model width	Installation width	E	
72"	30"	30" ~30 3/8"	17"	
12	34"	34" ~34 3/8"	17	

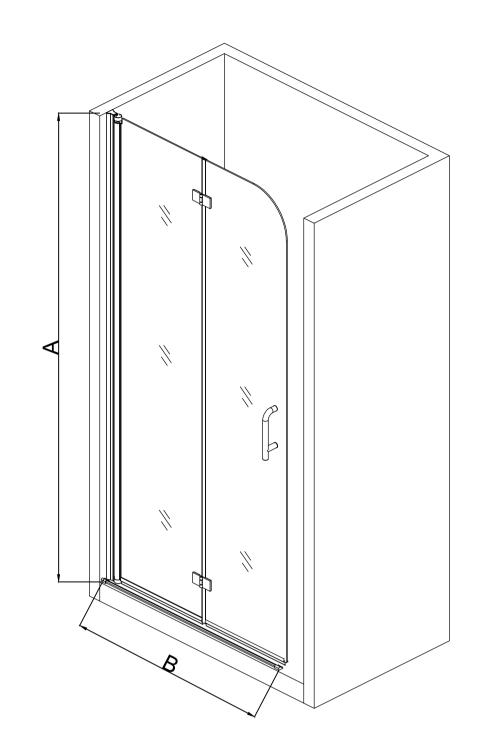





Ensure that the installation position of shower head is more than 16 1/2" away from the installation center of Wall jamb (C), so as to prevent the door closing glass from hitting shower head.

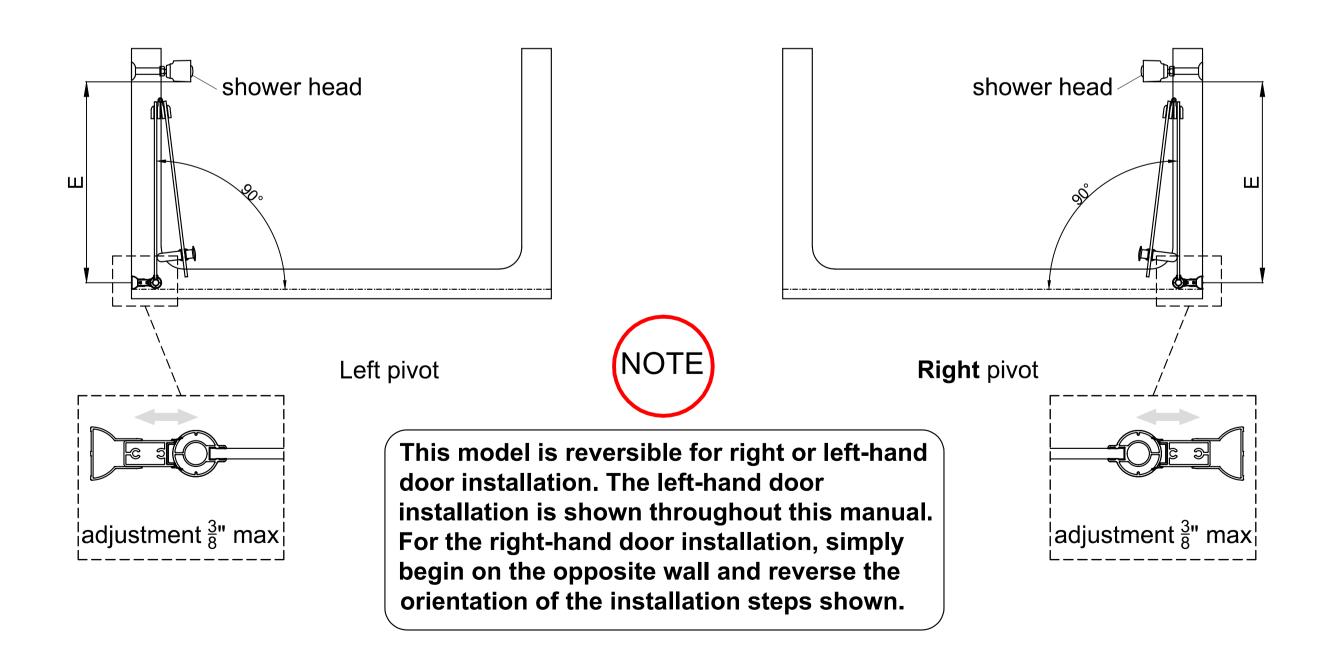




## Wall Jamb(C) Installation

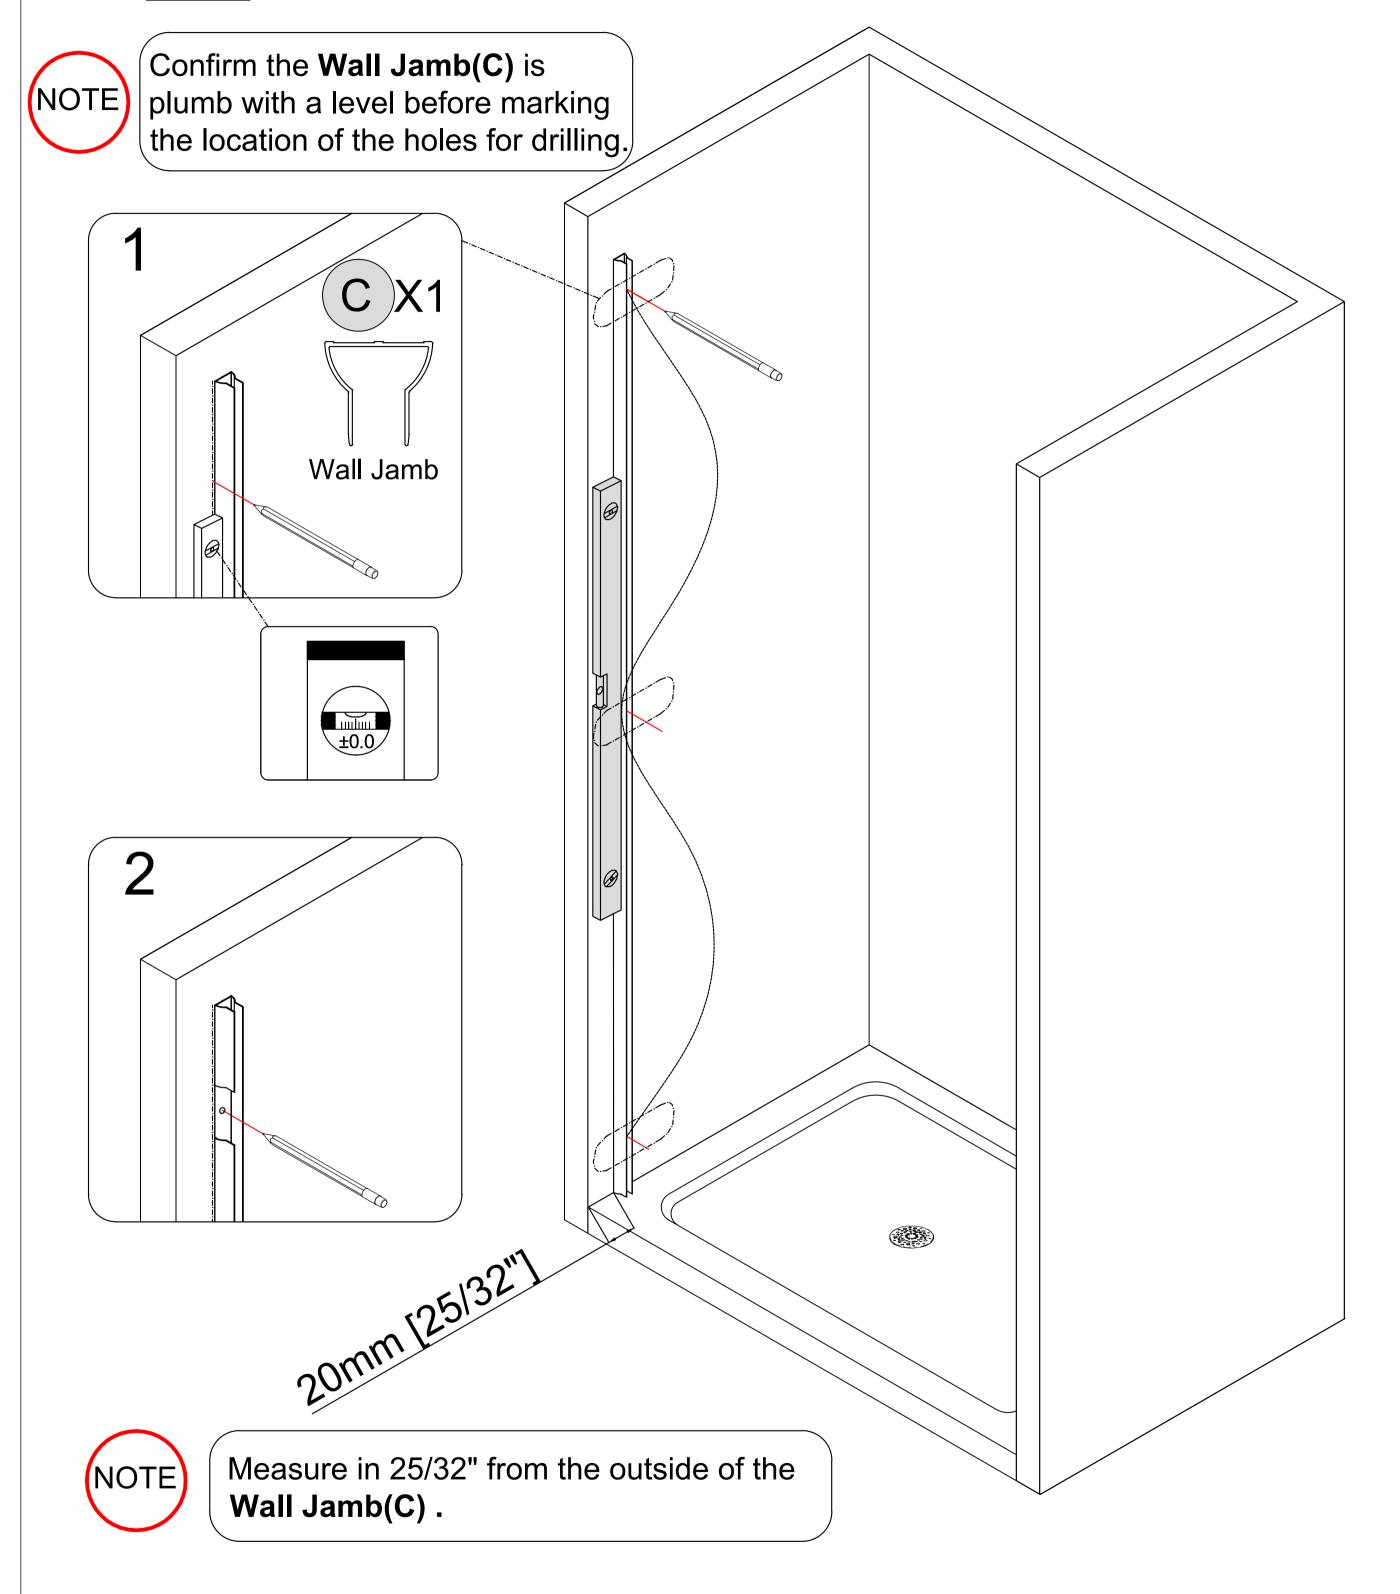

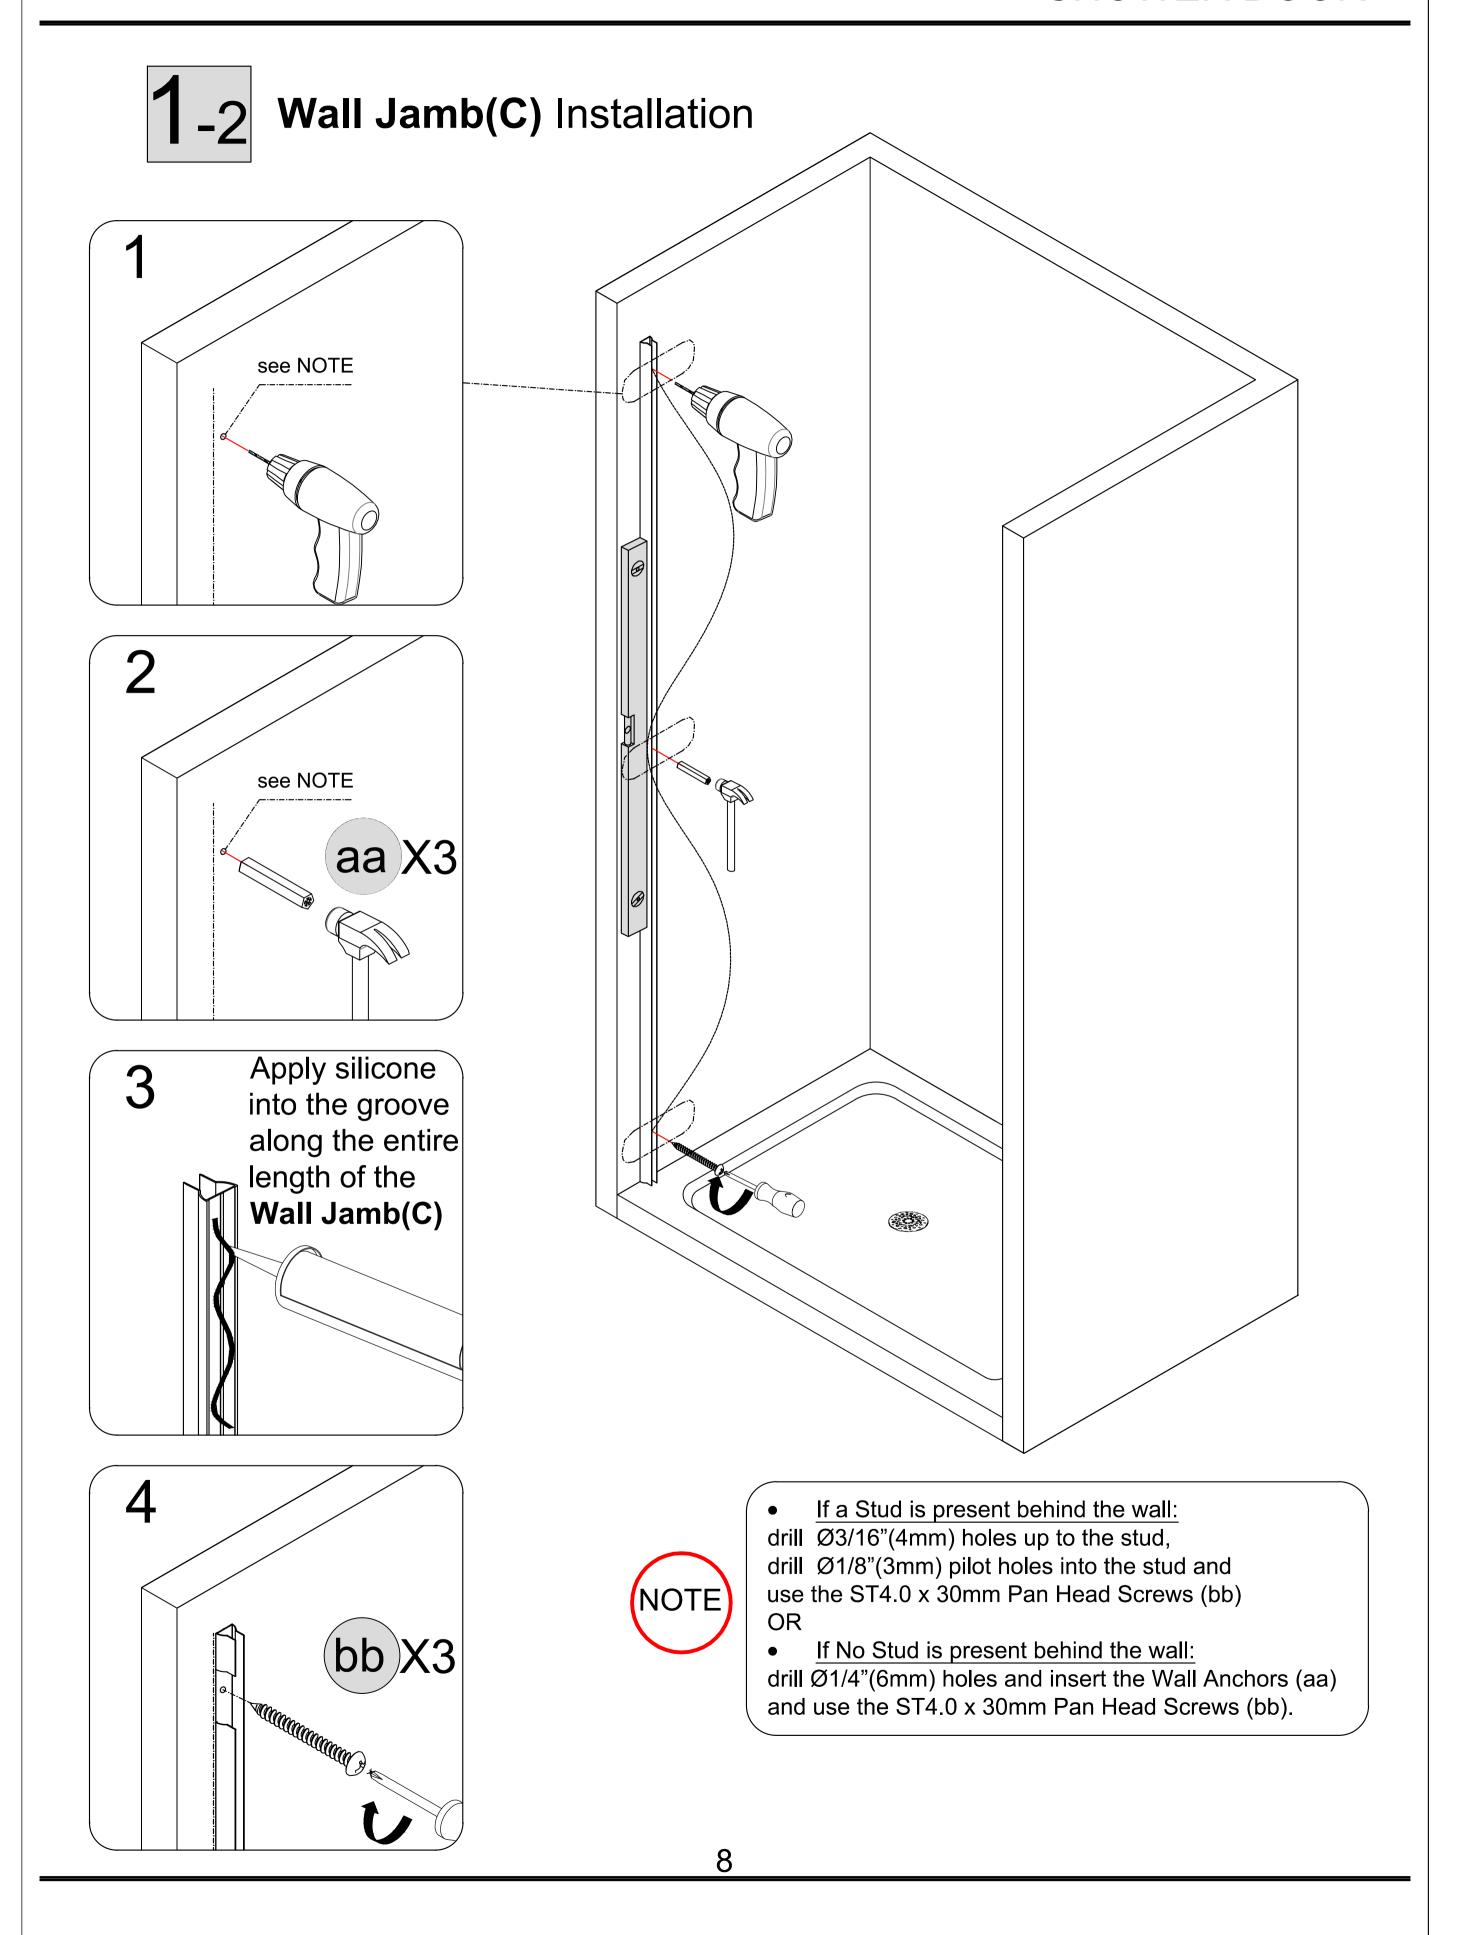


# 2


## Glass Door-1(B) Installation

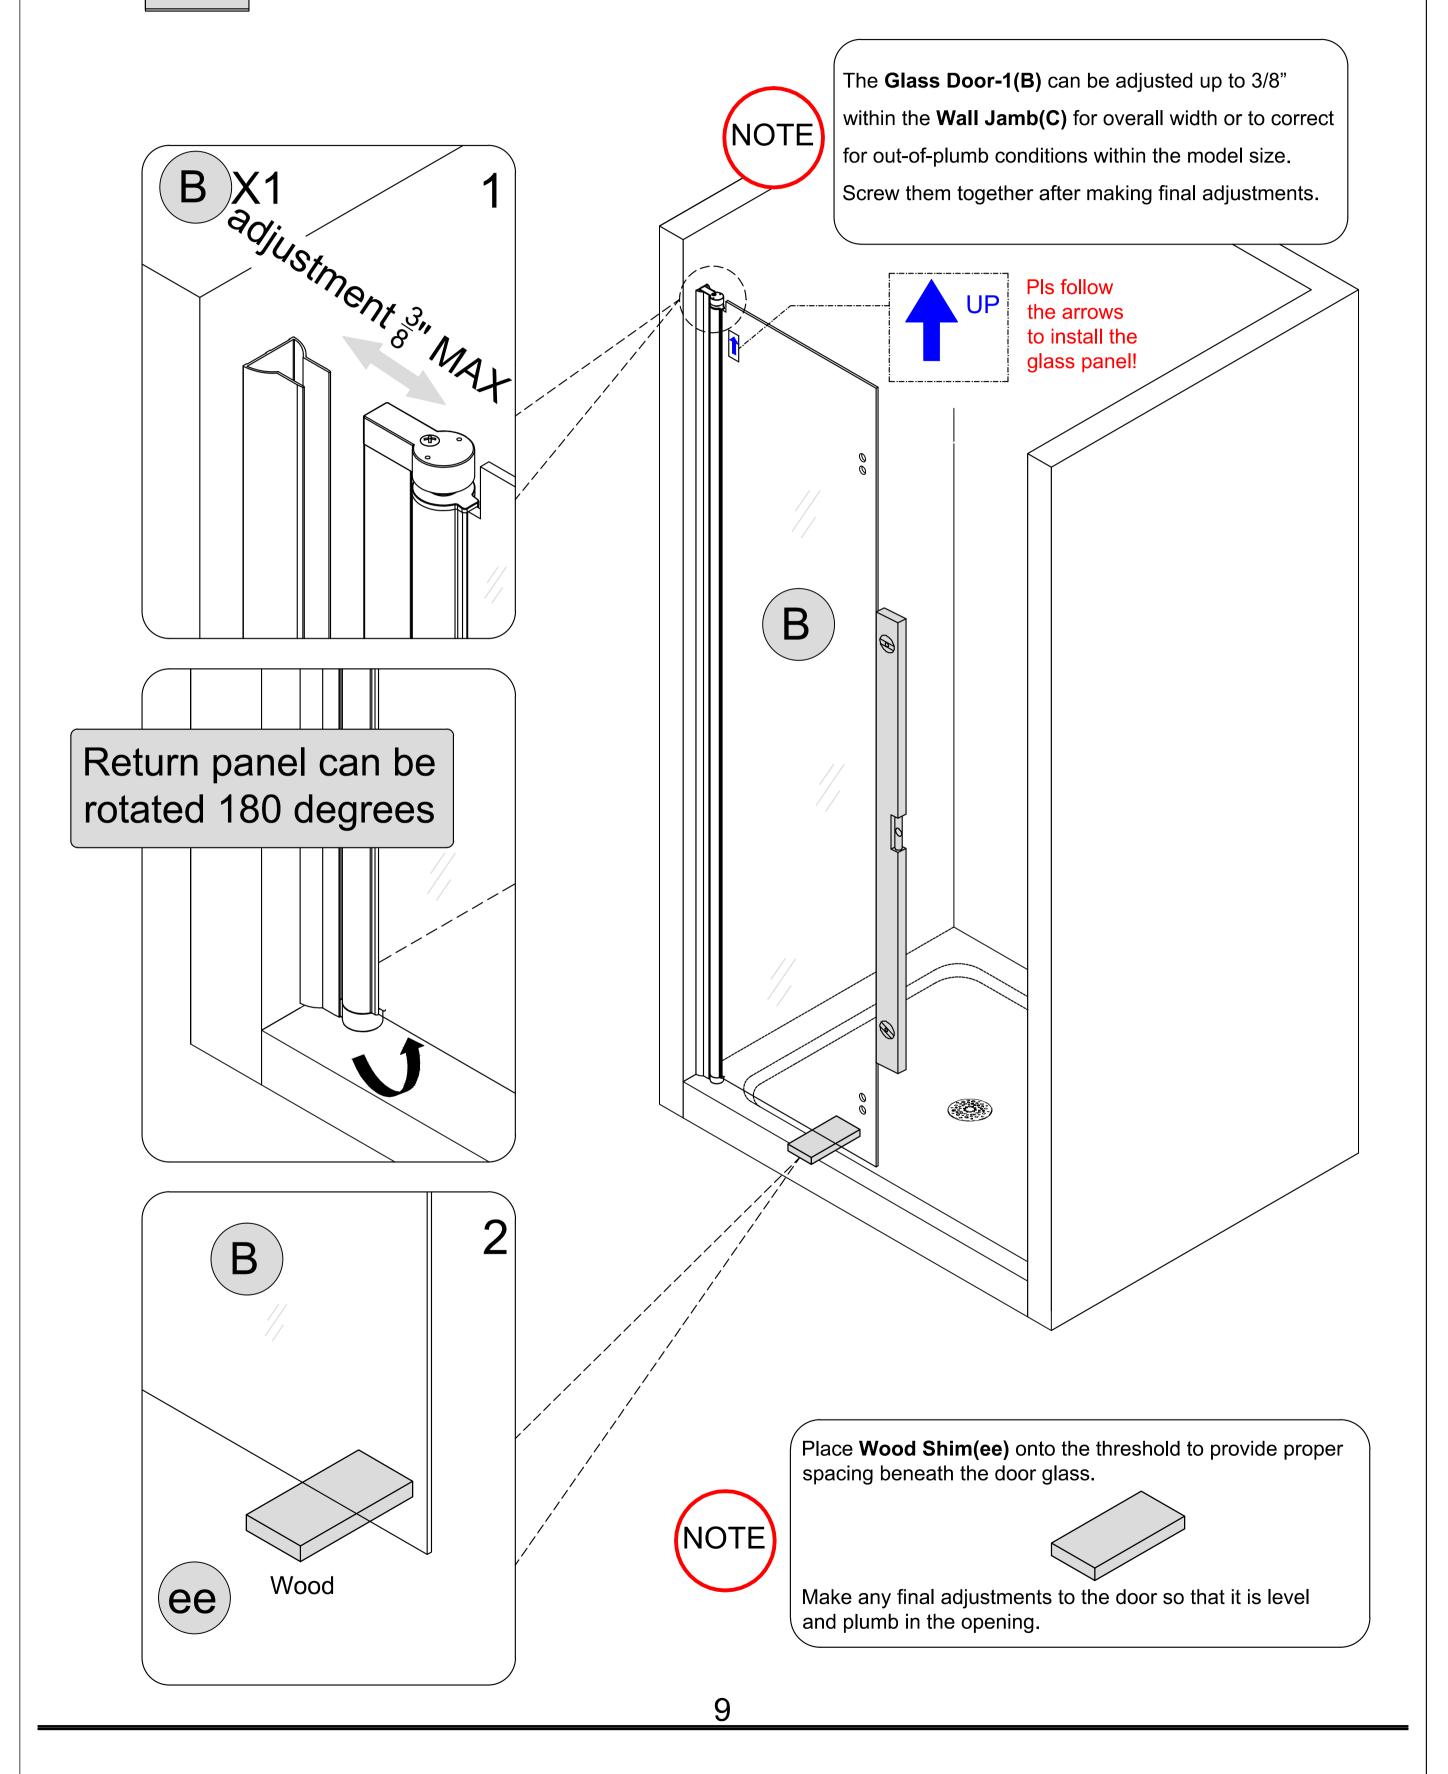

# 3.1

## Hinge(J) and Glass Door-2(K) Installation

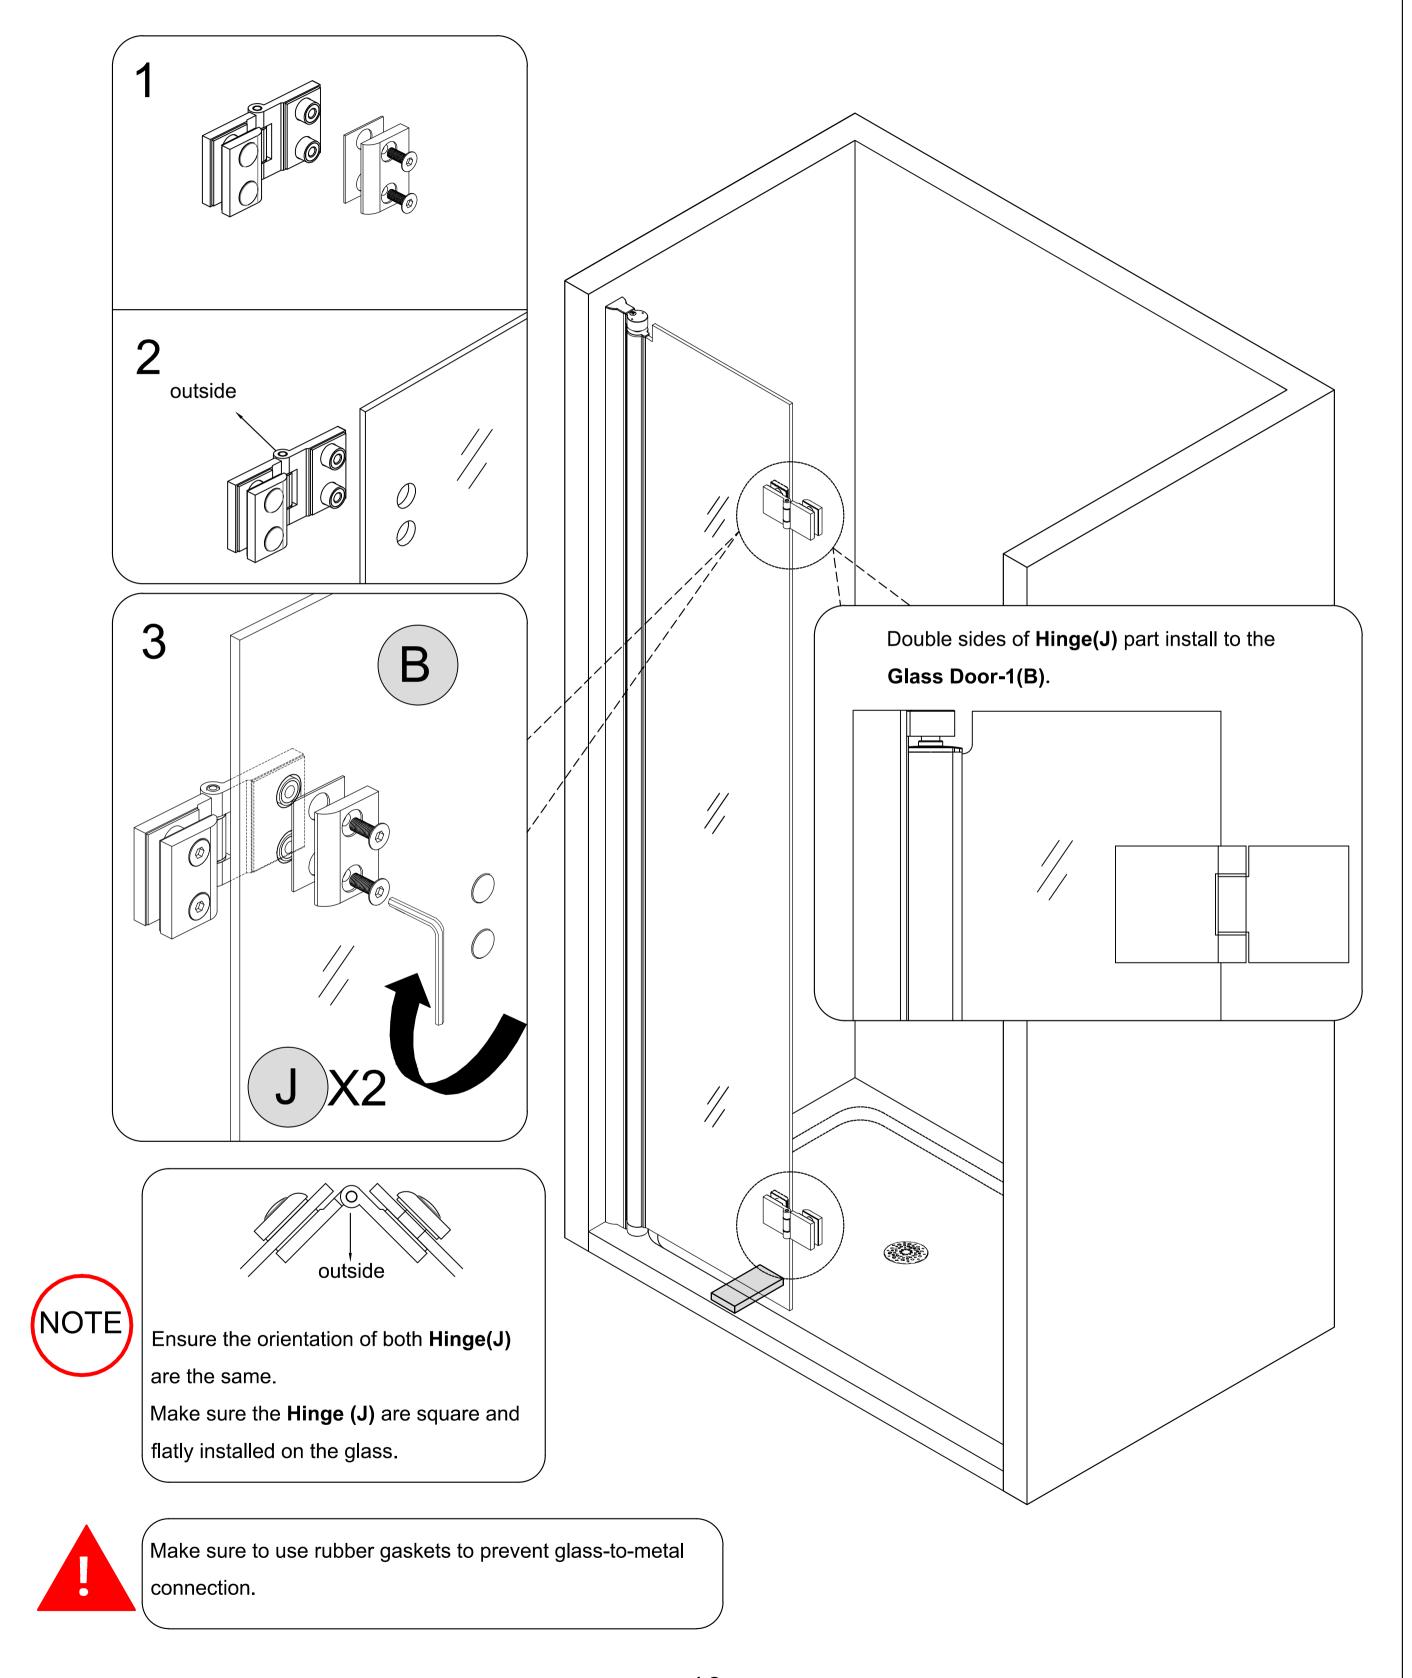

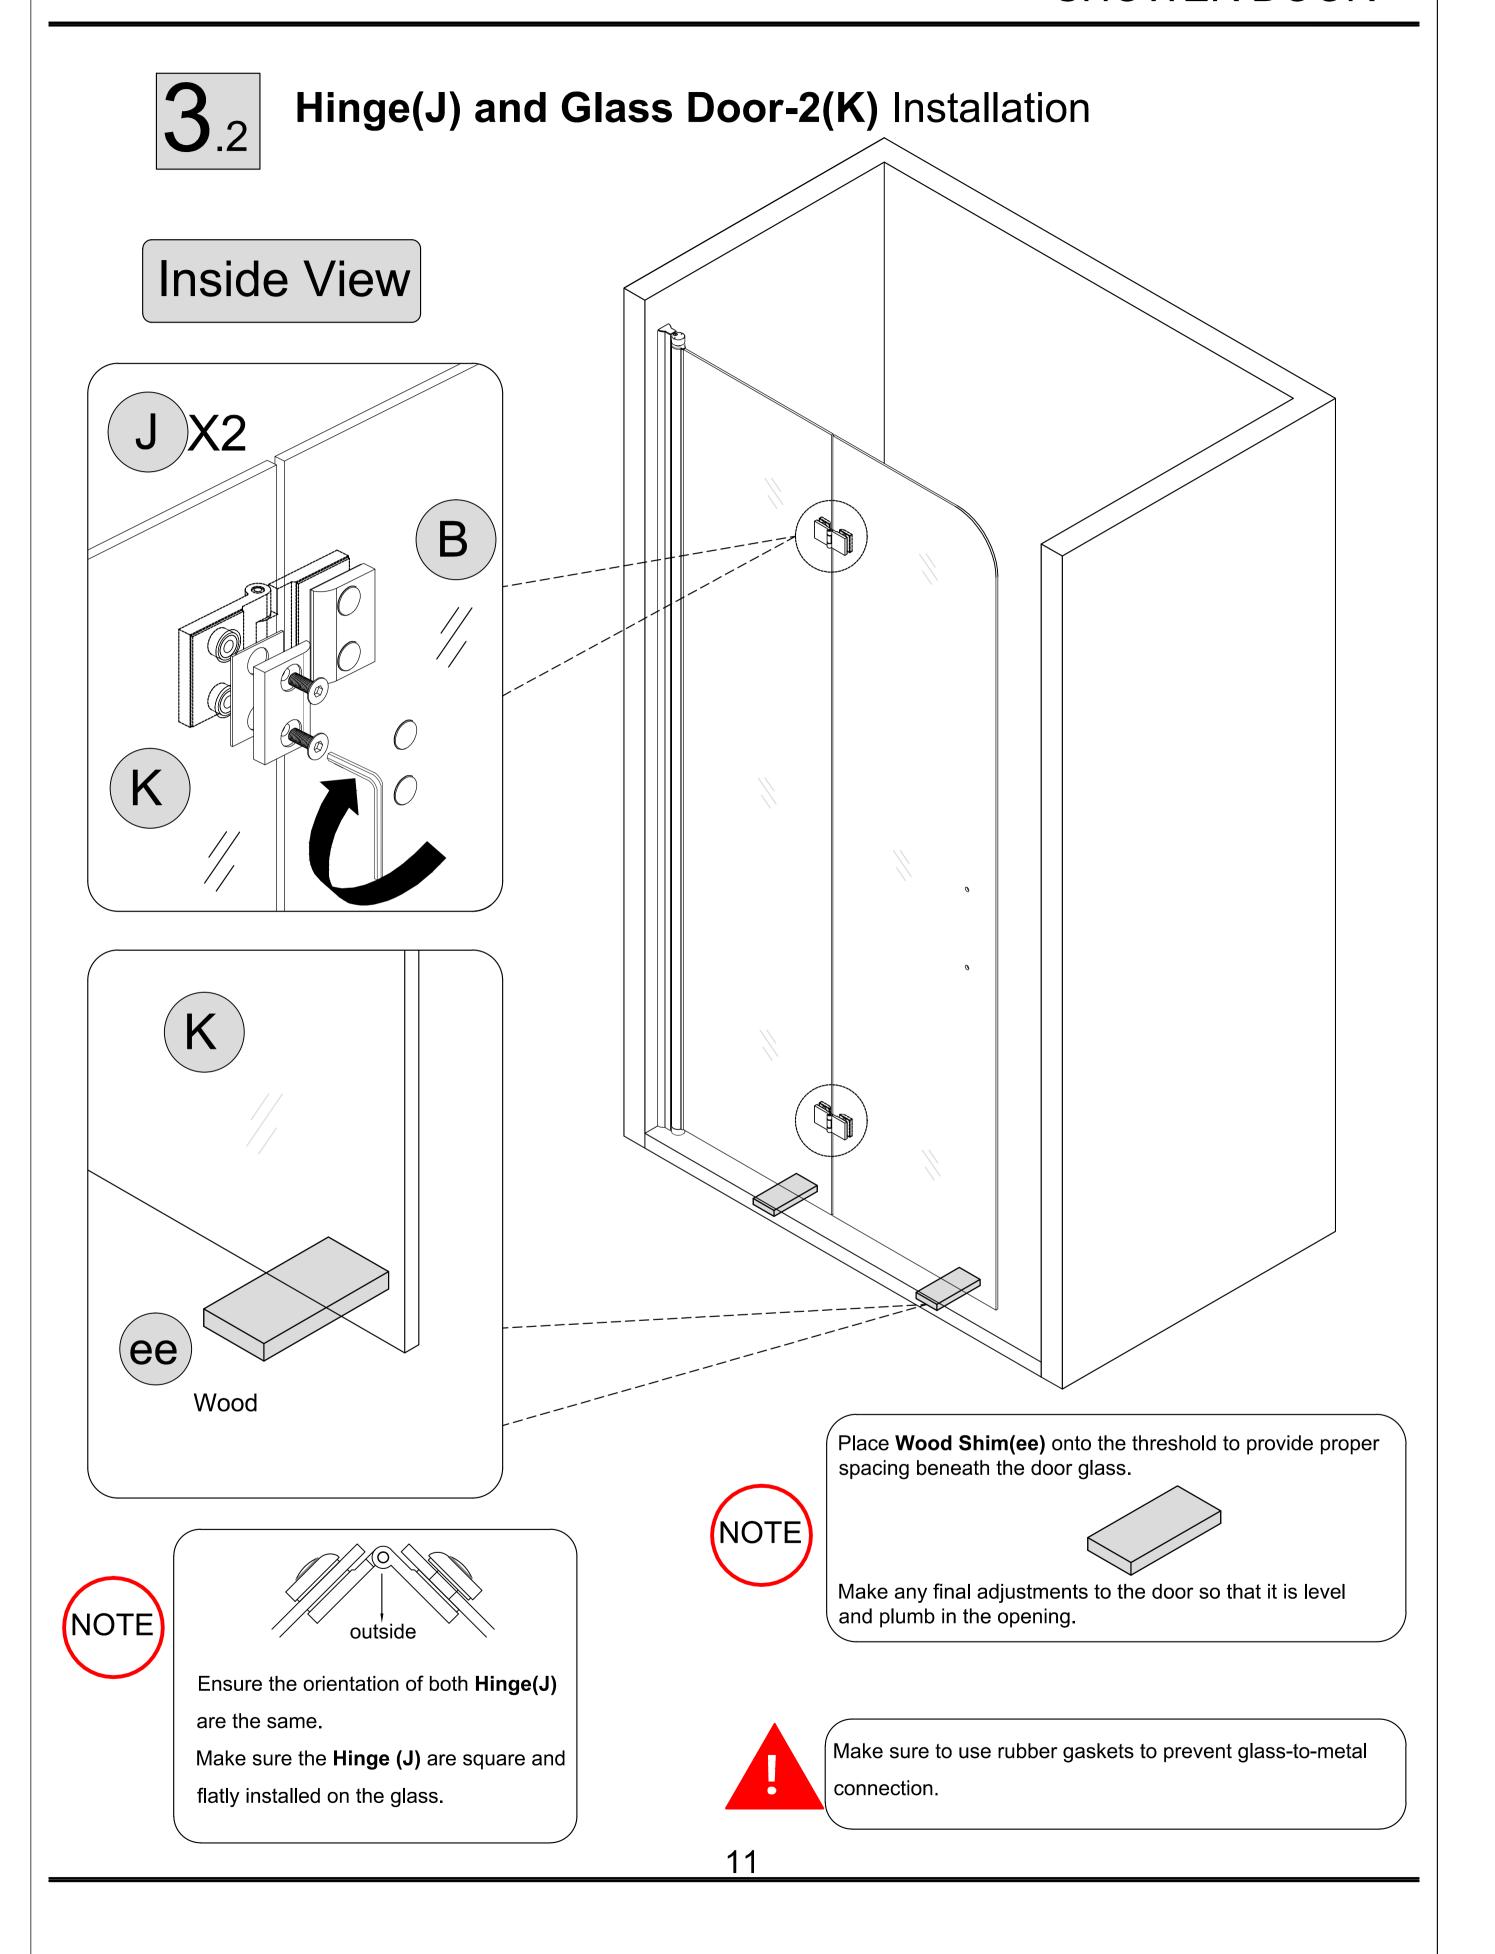





## Fasten the Glass Door-1(B)




After final adjustment, drill Ø1/8" holes in the Wall Jamb (C). Dril only through the first layer of Glass Door-1(B) and install the Screws (dd) using the Fitting (cc)

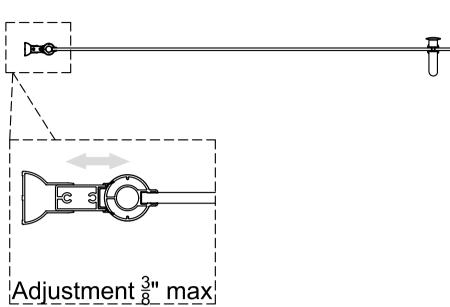

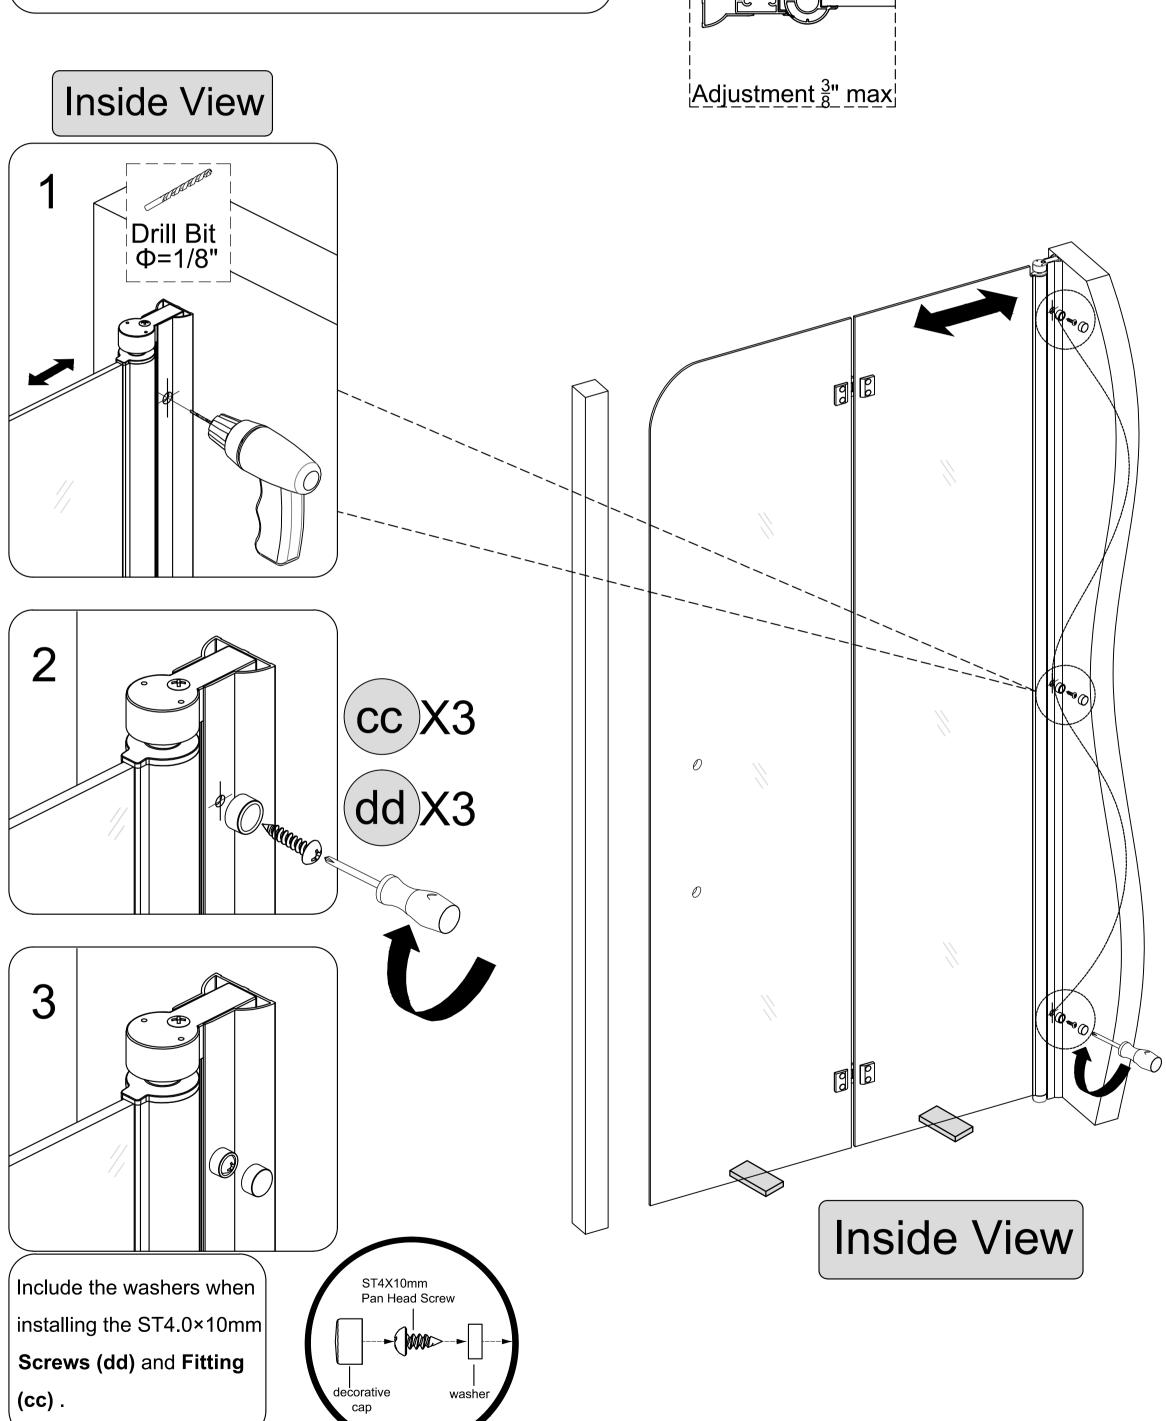




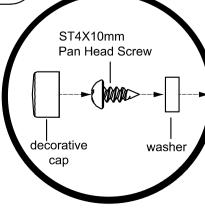

12


# 5

## Handle(E) Installation

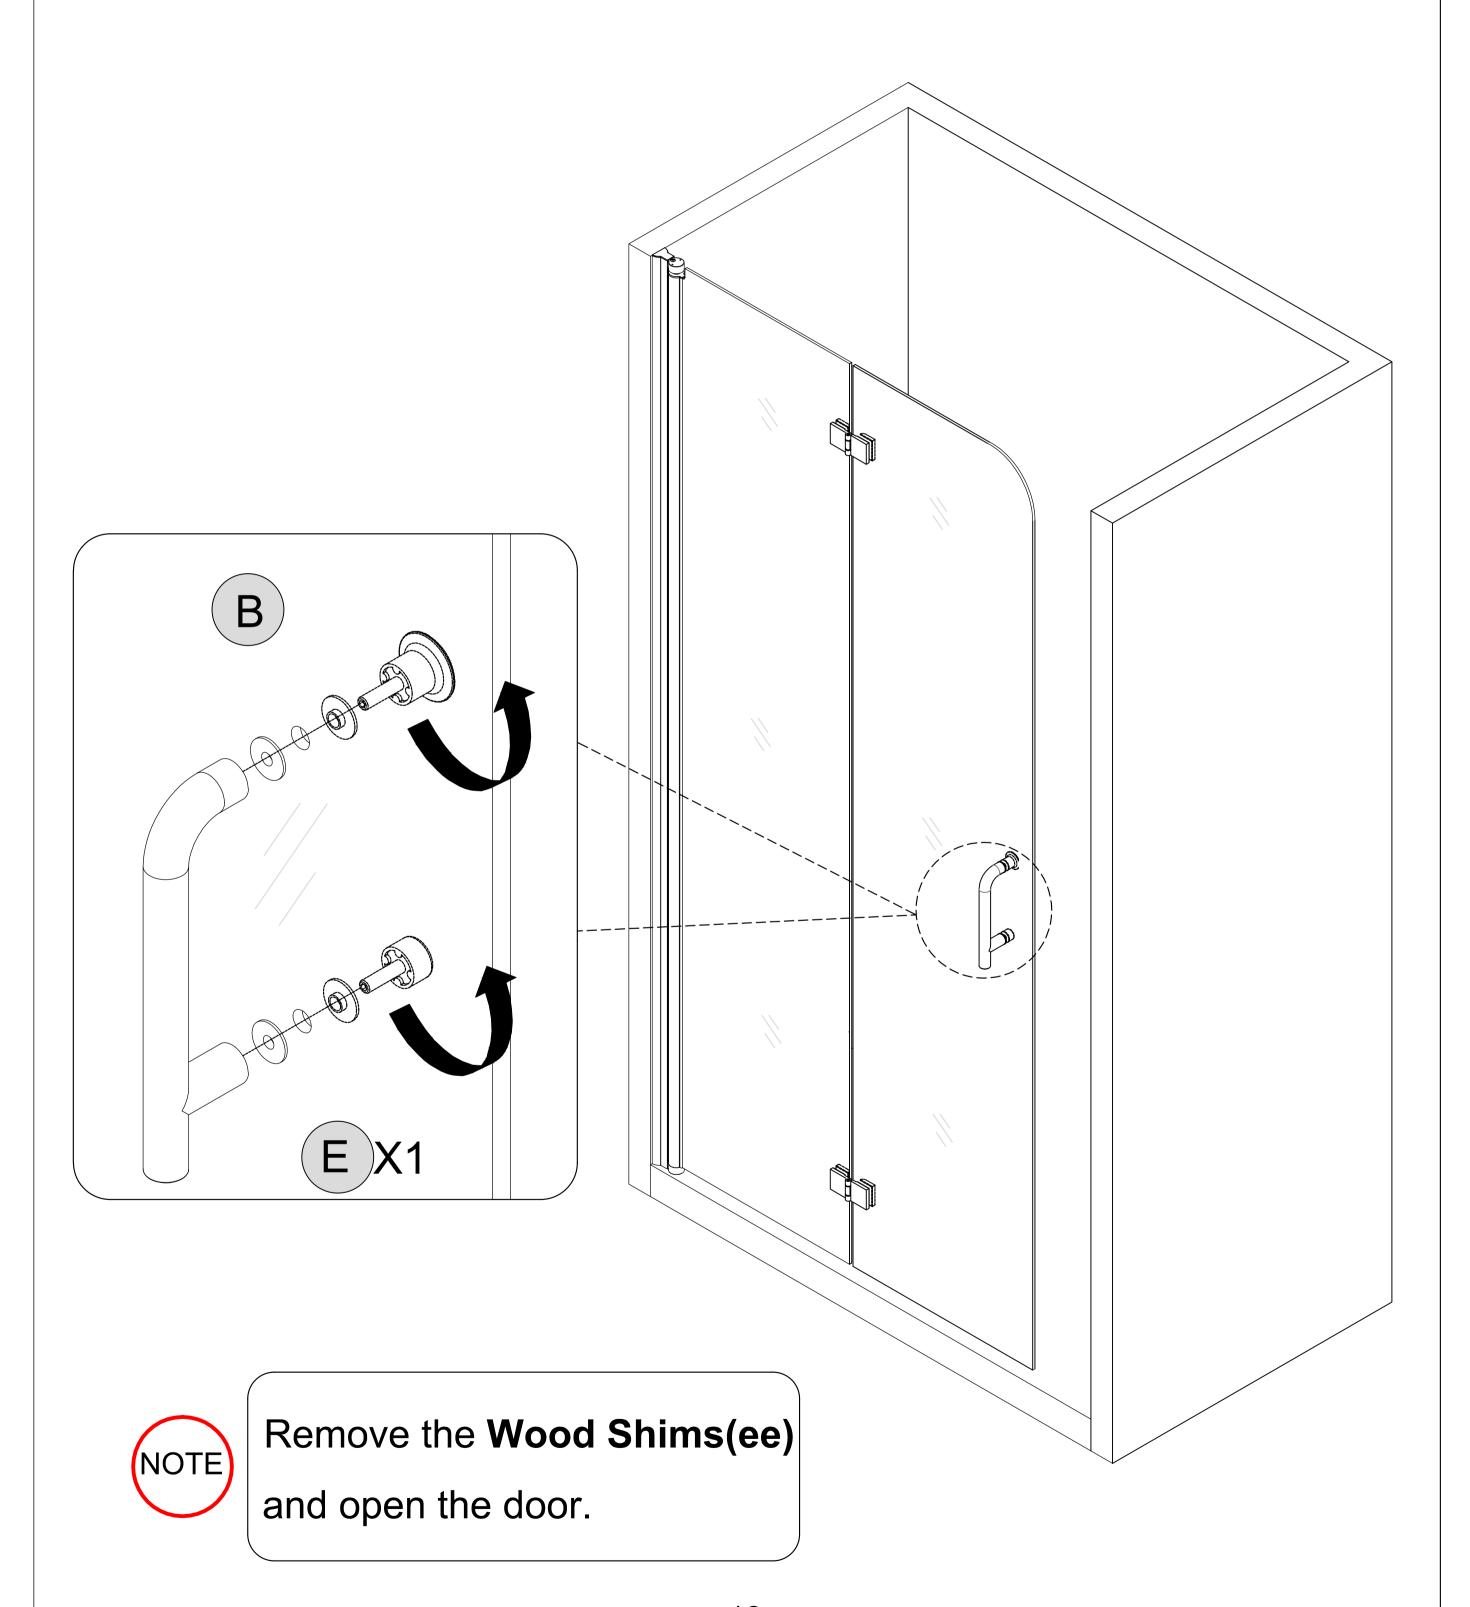



## Top Cover Cap(D) & Anti-Water Strip(I) Installation

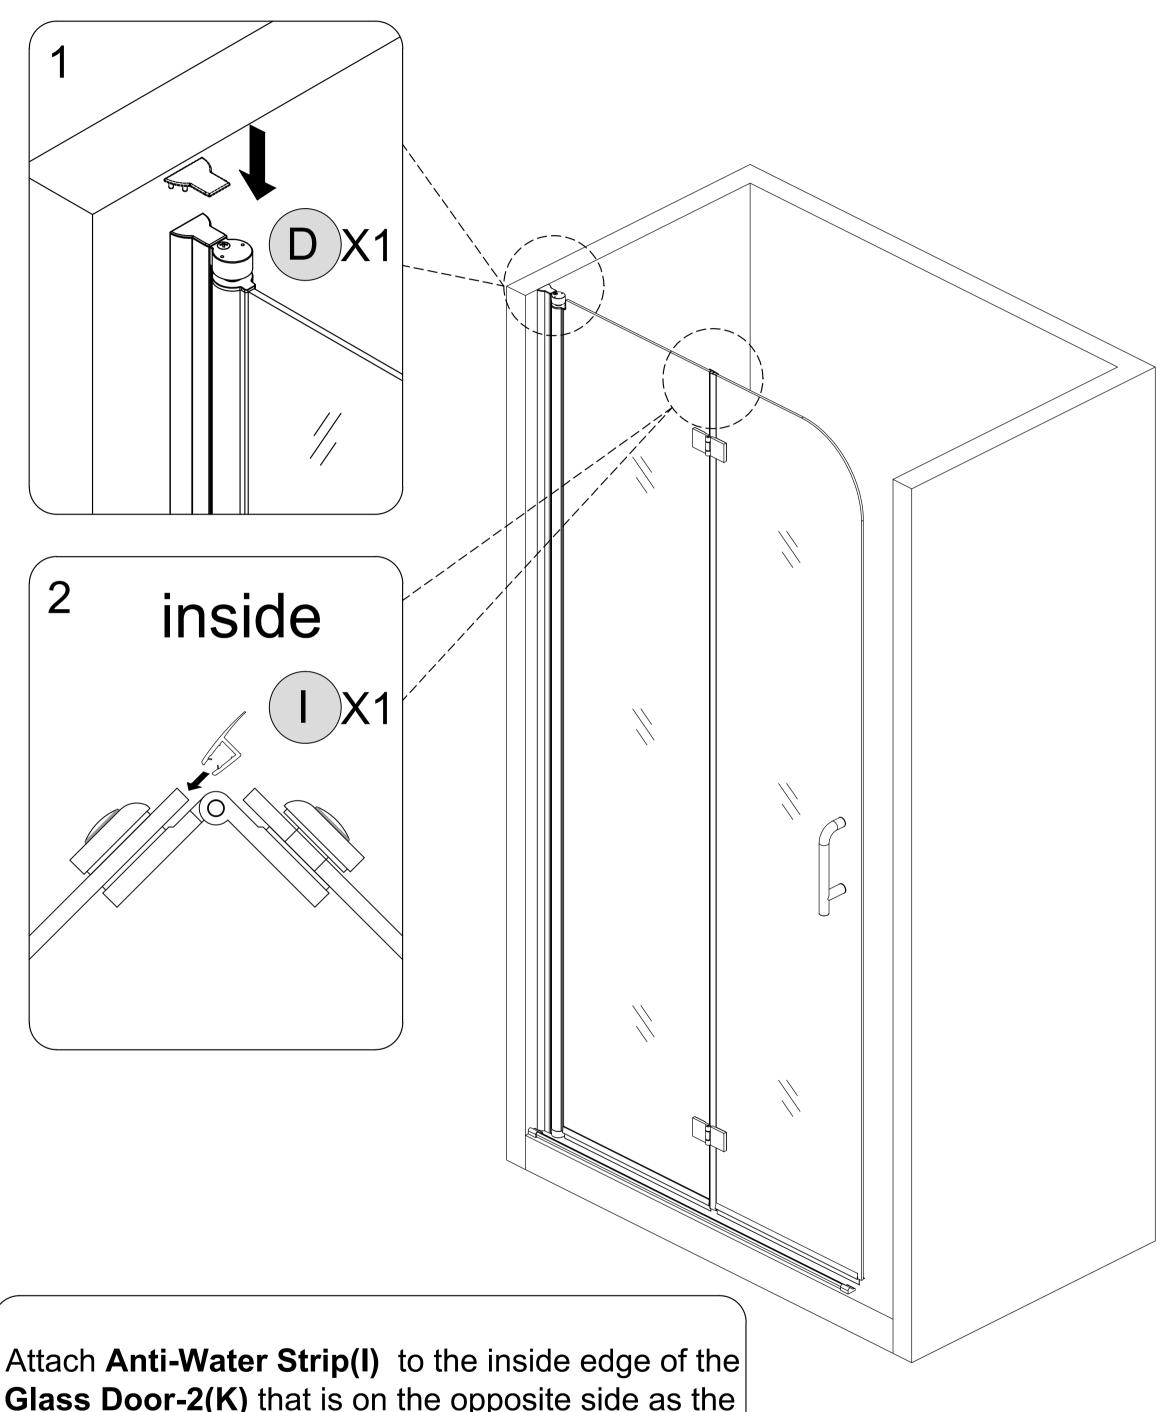


NOTE

Attach Anti-Water Strip(I) to the inside edge of the Glass Door-2(K) that is on the opposite side as the shower head so that the flexible fin is pointing away from the water source.



## Bottom Anti-Water Strip(A) Installation

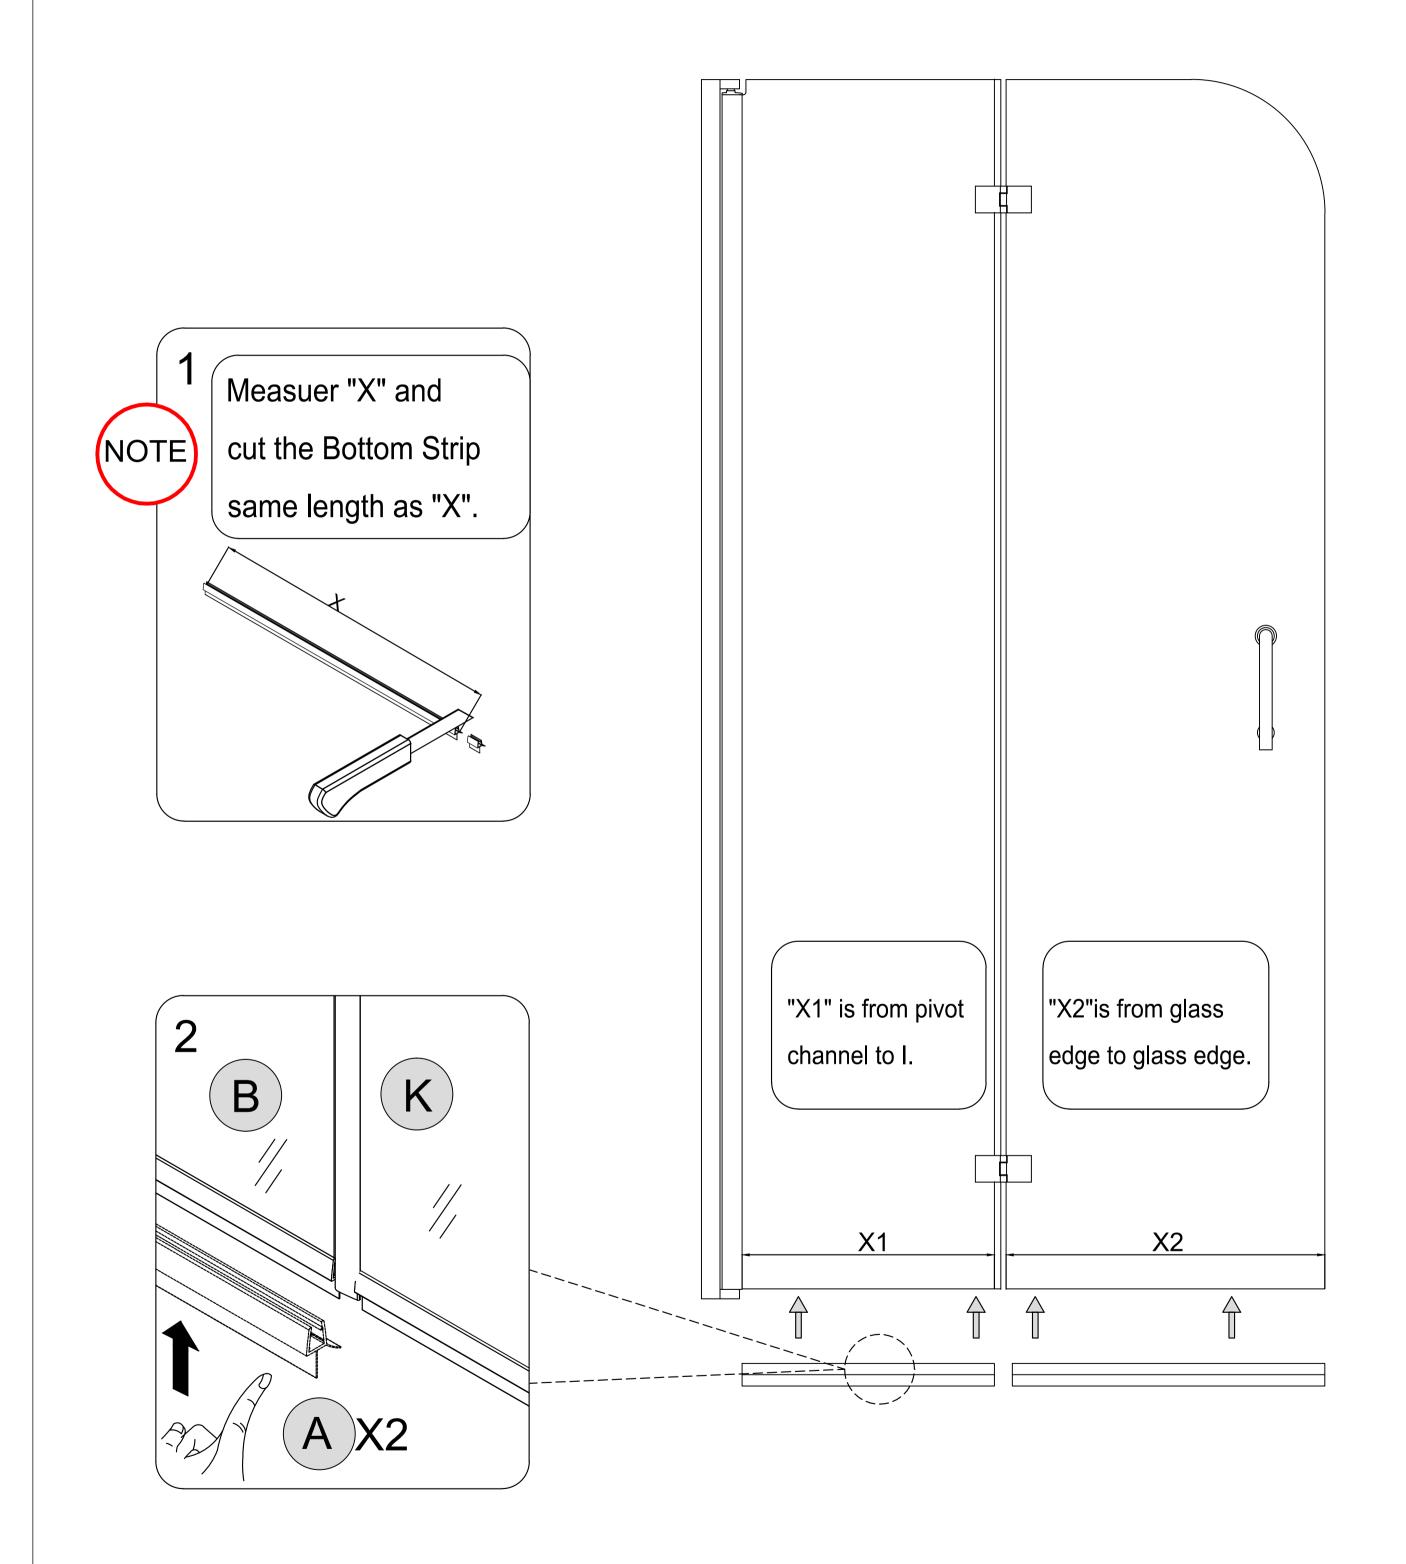



8


## Alu.Threshold(F) Installation



Measure "X" and cut the **Alu**. **Threshold(F)** same length as "(X-1/4inch)".

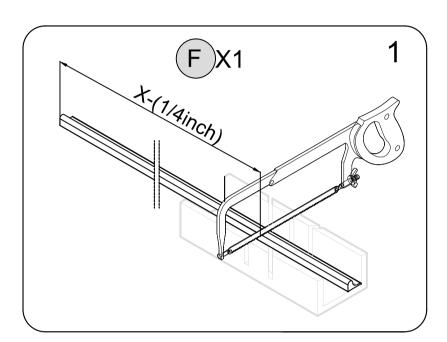


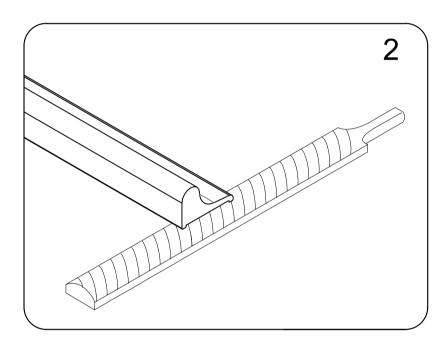

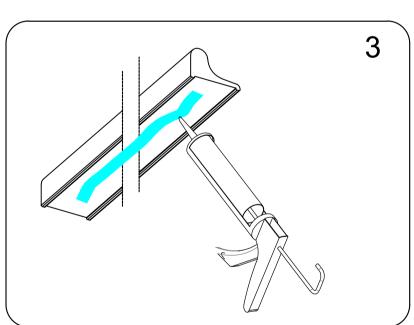




The large curved lip of the dam strip is intended to face toward the outside of the shower to ensure the flow of water is redirected towards the drain.

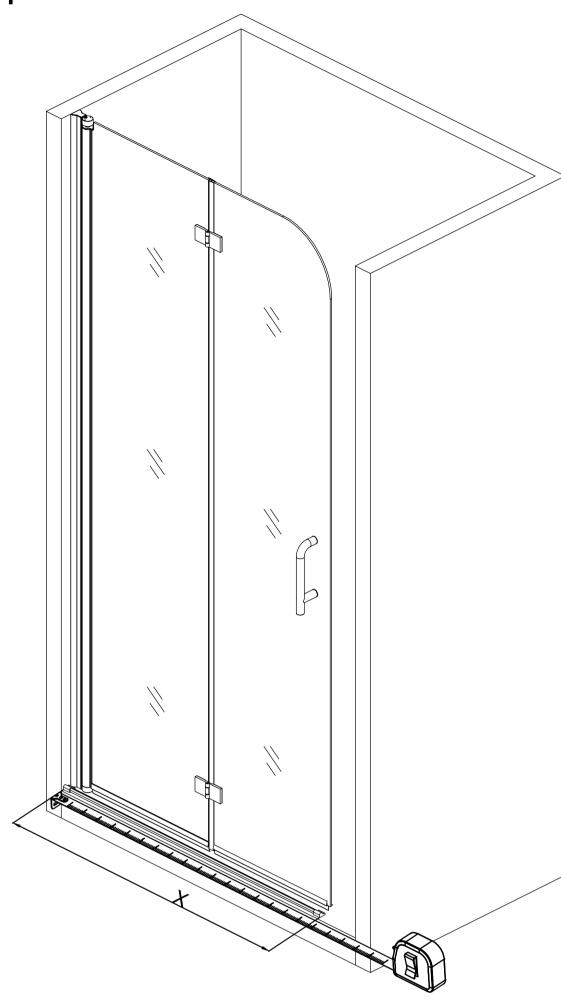

NOTE "X" wall to Glass edge of K width.

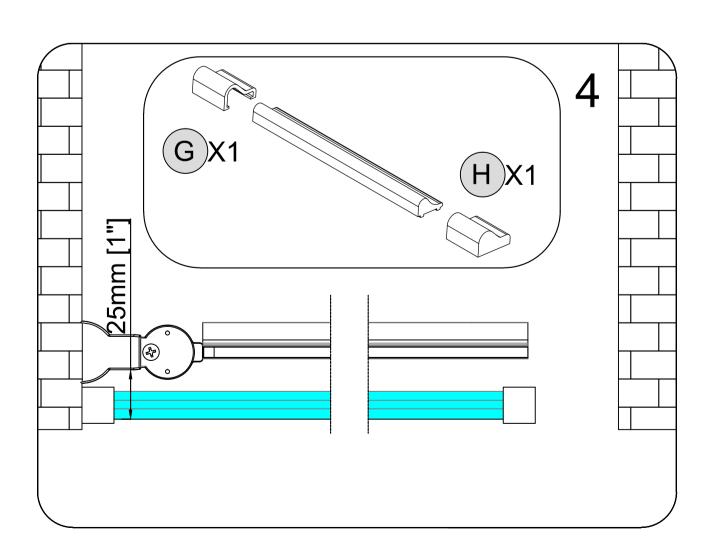



### **SEALING**




The surfaces need to be clean and free of debris before applying silicone.




Ensure that the Shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along **the wall** Jamb**(C) and Alu. Threshold(F)**.




Allow 24 hours for the silicone to cure before using the shower.

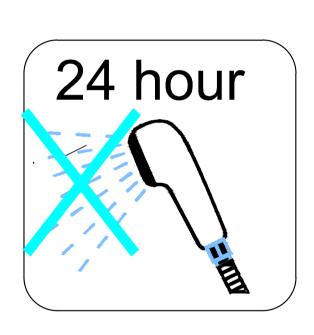

Apply Silicone Sealant,(not supplied).

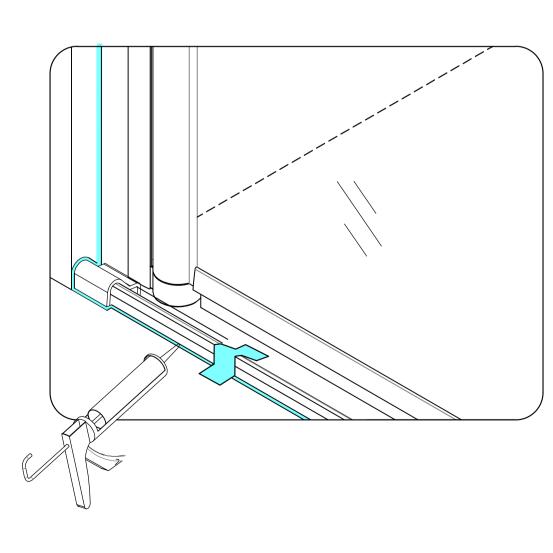

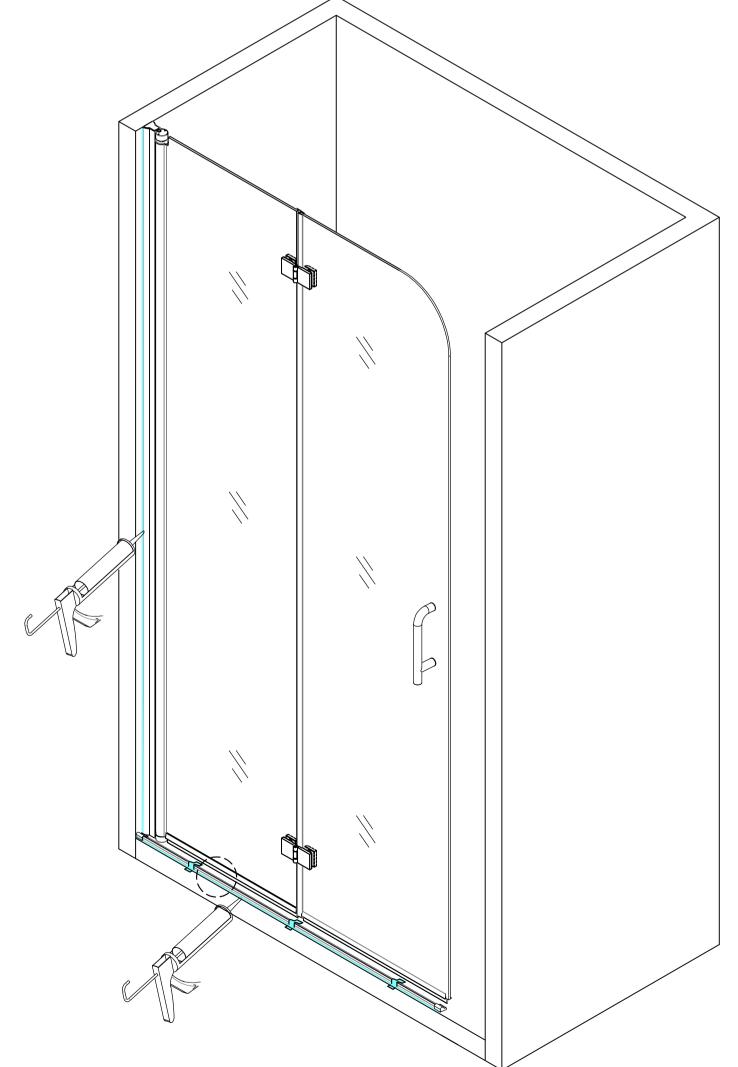

This troubleshooting guide is for general aid only. For service and installation issues or concerns, please contact us by email info@exbriteusa.com.

Troubleshooting						
Problem/Symptom	Suggested Solution	Page(s)				
Missing parts	*Check all shipping/packaging material for missing parts/components.  *If not found, please contact us by hotline + 1 302 336 8180 to order factory part replacement.	2.3				
Door is not operaing smoothly	*Check the pvc seal (J) for proper trimming and installation.  *Confirm the Hinge (J) Assemblies are tightly secured to the Door Glass(B&K).  * Confirm the sweep seal (A) is tightly secured to the bottom of Door Glass  * Confirm the hinge side pvc seal is correctly notched around the Bottom sweep seal.	9-14				
Water leakage	*Check all the pvc seals for proper trimming and installation.  *Check the alu. threshold installed properly and secured with silicone.	15-17				
Handle rattles during operation	*Confirm the pvc gaskets are present and the handle is tightly secured to the glass.	13				