INSTALLATION INSTRUCTIONS	Confidentional : A
SKU: VA6020V15GN	PROHIBIT COPY
□ Prior to installation please check received items against the Packing List .If any part is missing or damaged, please do not return the product to the store and contact us; Call: (302)336-8180 Email: vanityinservice@gmail.com □ Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards. □ Professional installation is recommended!	15.37*16.9***  34.57*-35.8***  15.37*-16.9***  15.37*-16.9***  16.37*-16.9***  17.37*-16.9***  18.37*-16.9***  19.37*-16.9**  19.37*-16.9**  10.37*-16.9**  10.37*-16.9**  10.37*-16

#### **INSTALLATION INSTRUCTIONS**

Confidentional: A

SKU: VA6020V15GN

### PROHIBIT COPY

Marble top with ceramic sink

NOTE 1. Ceramic sink: cUPC certified.



2. LED light:

a. The LED light is replaceable, if it is damaged, please contact us;

Call: (302)336-8180


Email: vanityinservice@gmail.com


b. LED light should be connected to the wall switch for turning on/off.

c. UL certified & IP67 for water proof.



LED light ( pre-assembled on the bottom of the vanity)

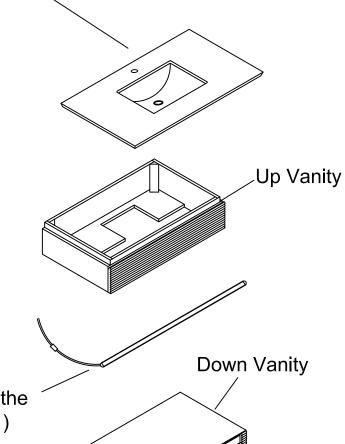

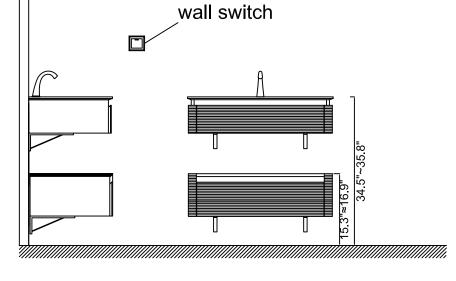

### **INSTALLATION INSTRUCTIONS**


**Confidentional** : **A** 

SKU: VA6020V15GN


### **PROHIBIT COPY**


## **PACKING LIST**

# **TOOLS REQUIRED**

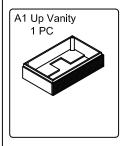



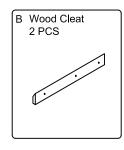

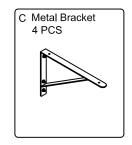










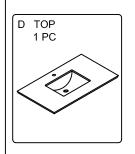


















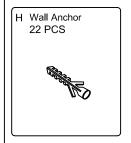

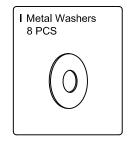


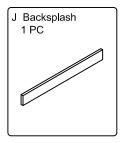
















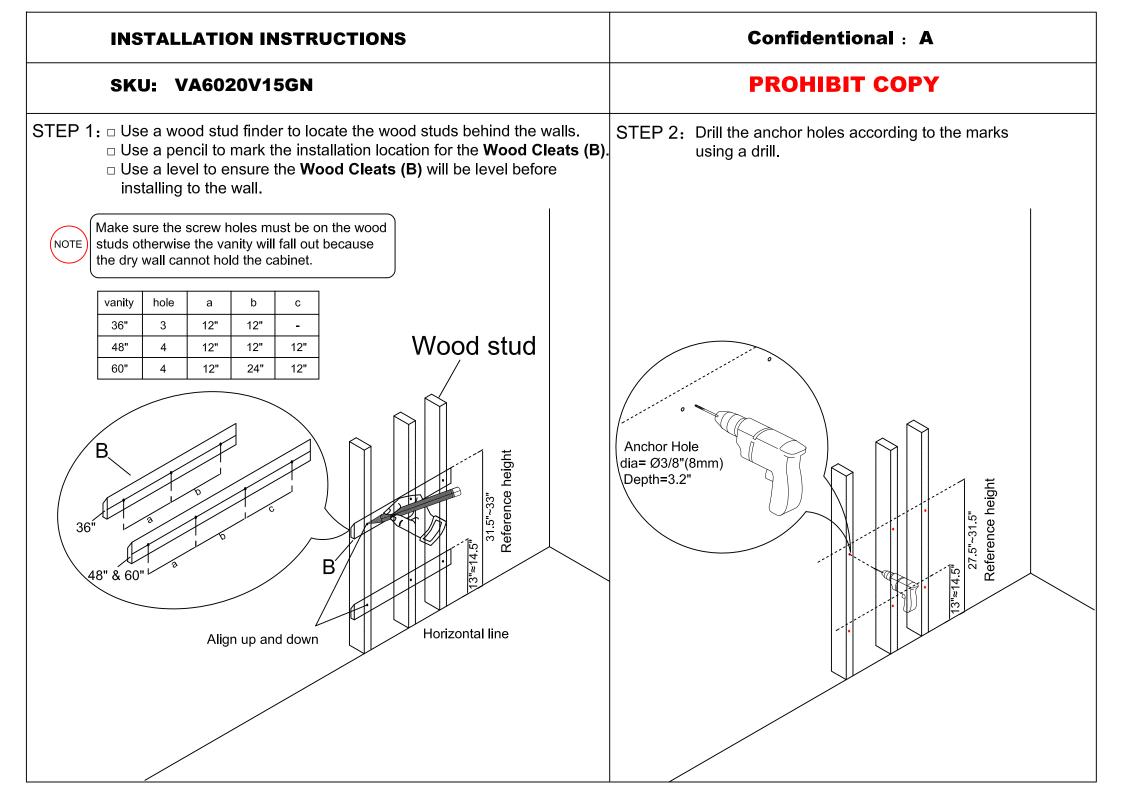

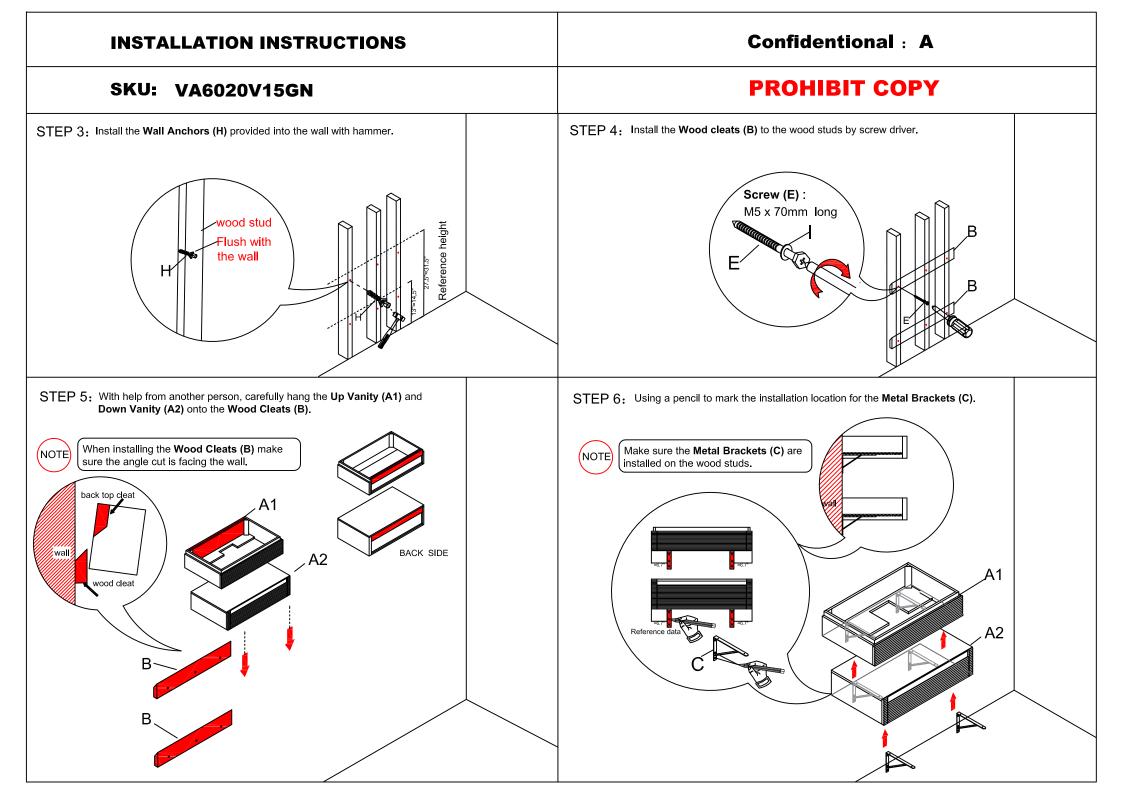

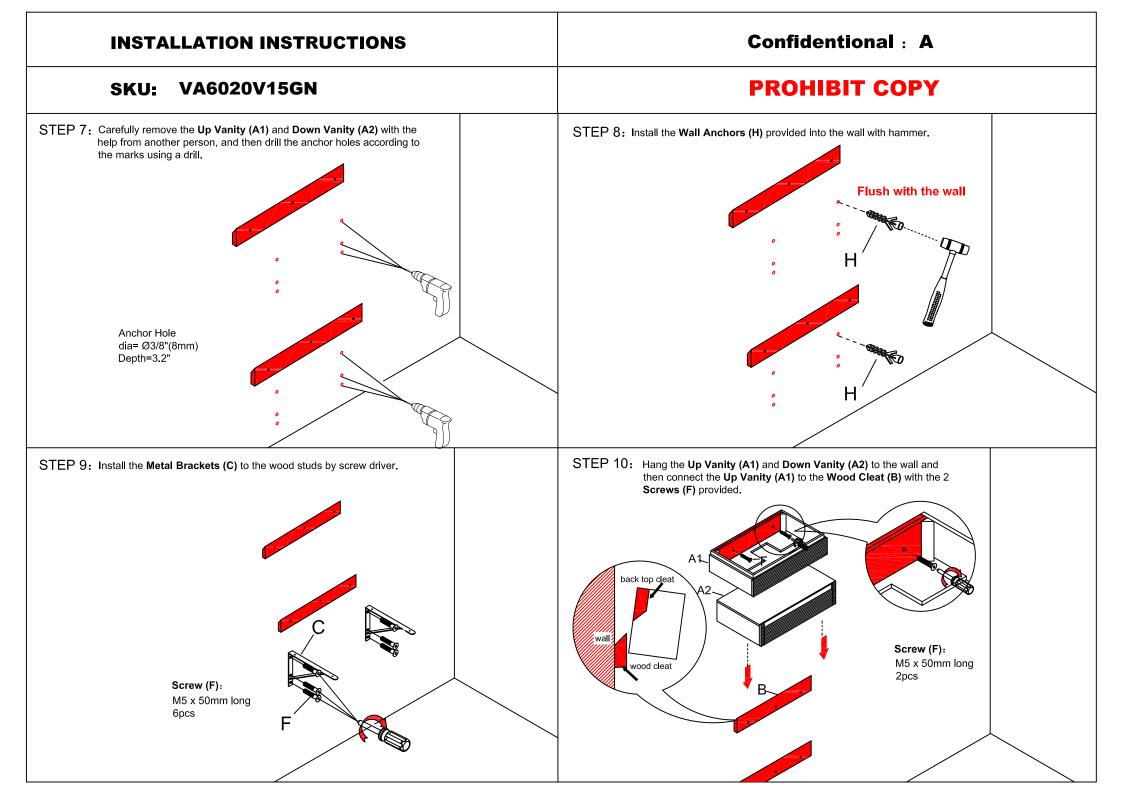

## Confidentional: A **INSTALLATION INSTRUCTIONS PROHIBIT COPY** SKU: VA6020V15GN STEP 11: Connect the Metal Brackets (C) to the Up Vanity (A1) and Down Vanity (A2) STEP 12: Connect the electrical wire to the wall switch for turning on/off. with Screws (G). Screw (G): M4 x 15mm long 4 pcs x 2 STEP 13: Apply the silicone to the top of the Up Vanity (A1) and then install the Top (D) onto STEP 14: Installing the Backsplash (J) the **Up Vanity (A1)** with the help from another person. □ Apply silicone to the back of the **Backsplash (J)**. □ Place the Backsplash (J) on the Up Vanity (A1). Be sure to align the Backsplash (J) with the top of the Up Vanity (A1). □ Allow the silicone to dry before using the vanity. □ Gently remove excess glue from the connecting area by shovel. □ Let the Vanity and Backsplash sit for 24 hour before use. Shovel Silicone