
Shower Door Installation Instructions

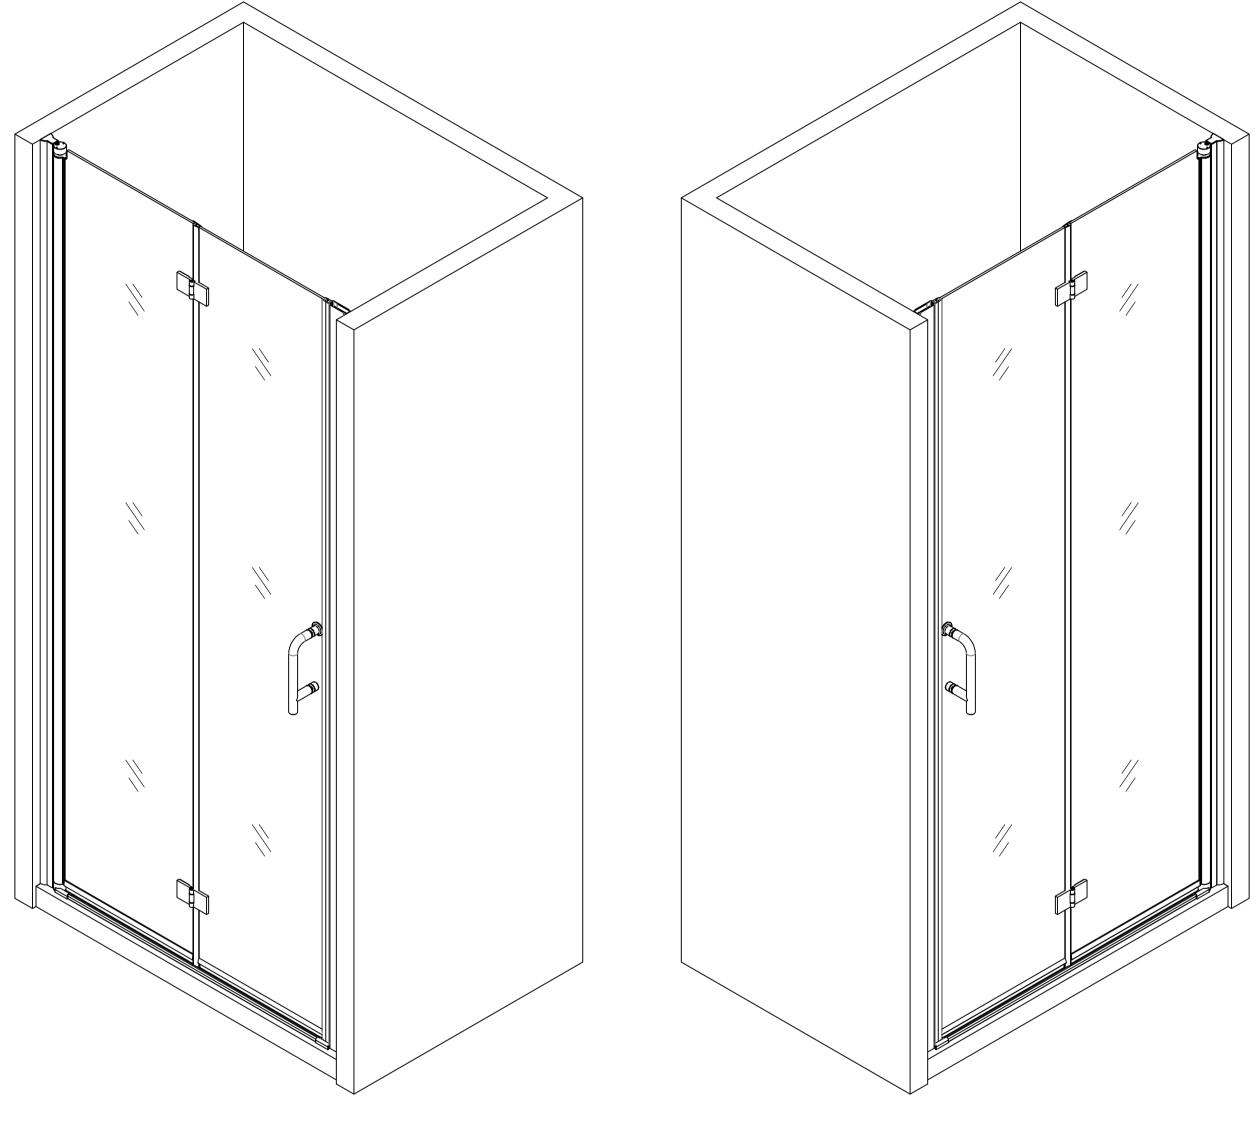


1

Reversible For a Left or Right Door


Please Do Not Return the Product to the Store. Contact us with any questions.

Model Specific Preparation



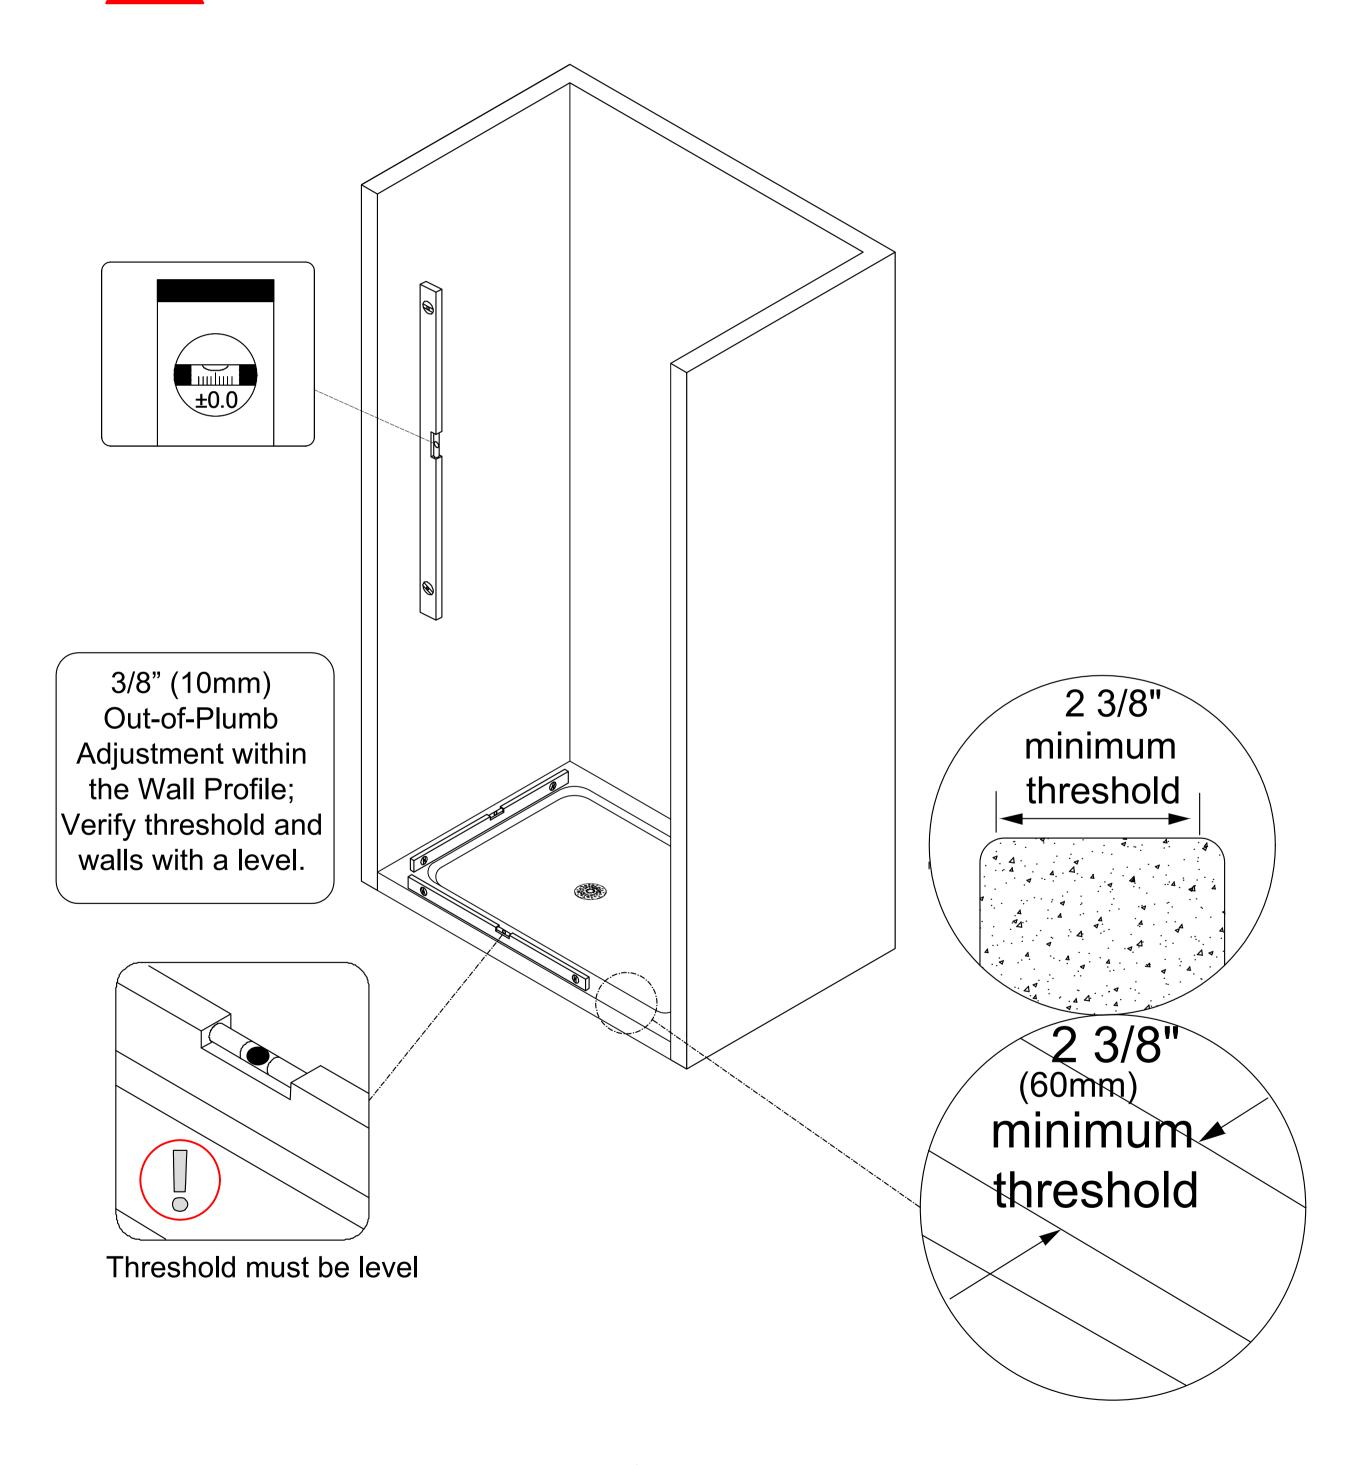

PACKAGE CONTENT

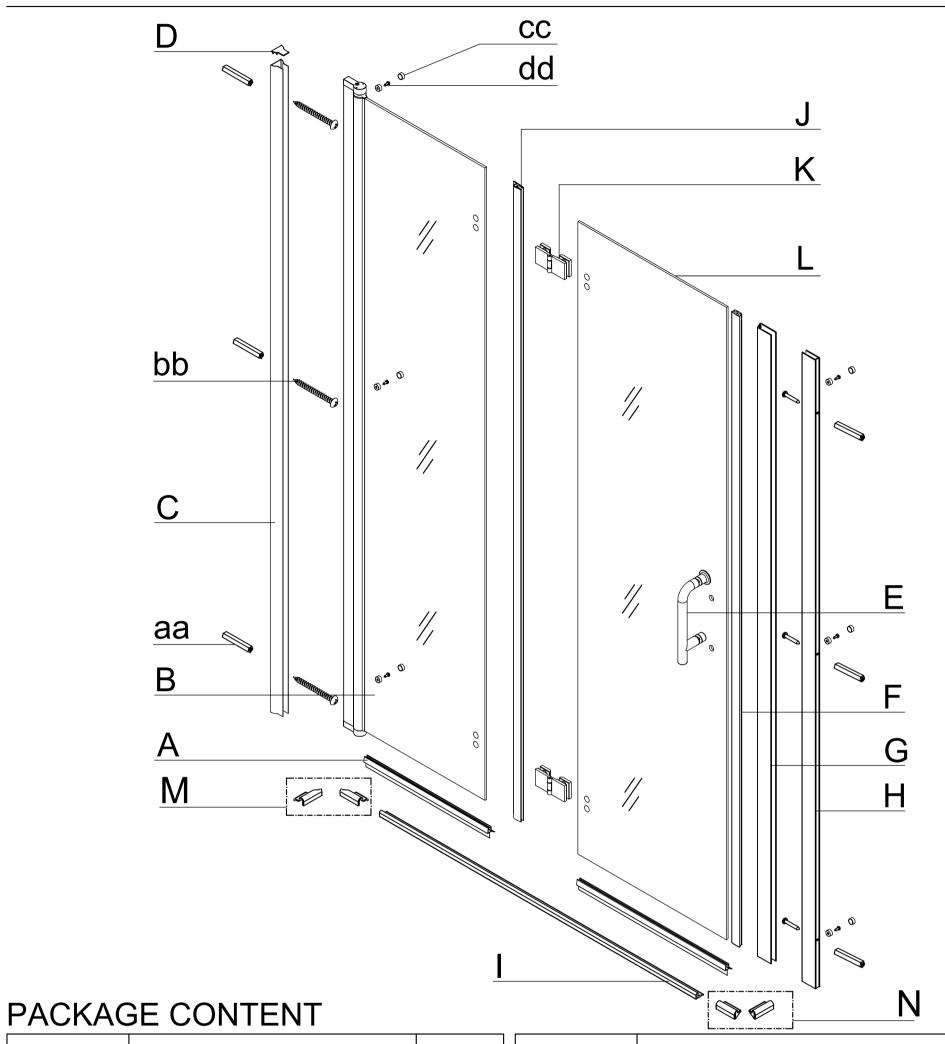



I ACIAOL CONTLINE						
PART#	DESCRIPTION	QTY	PART#	DESCRIPTION	QTY	
А	Bottom Gasket	2	Н	U channel	1	
В	Door panel-1	1	I	Alu. Threshold	1	
С	Wall Jamb	1	J	Vertical Gasket	1	
D	Top Cover Cap	1	K	Hinge	2	
E	Handle	1	L	Door panel-2	1	
F	Magnetic strip	1	М	Threshold Cap M1&M2	2	
G	Magnetic Seal Aluminum channel	1	N	Threshold Cap N1&N2	2	


NOTE


Inspect all parts for missing prior to installation! Contact us for any part missing.


PACKAGE CONTENT

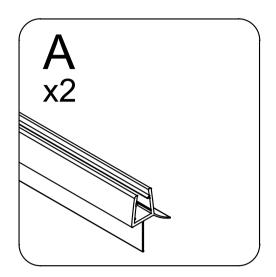


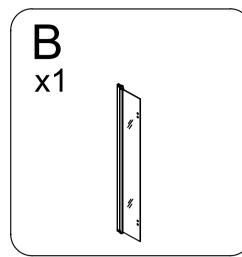


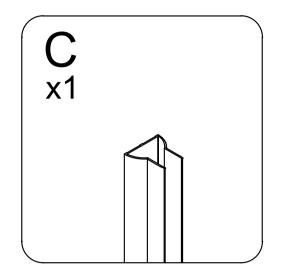


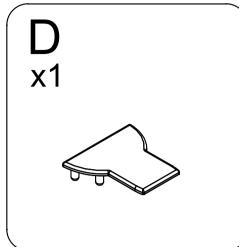


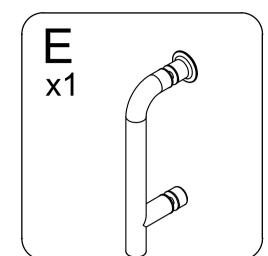


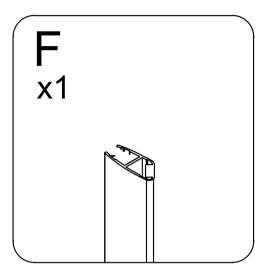


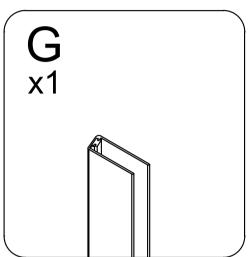


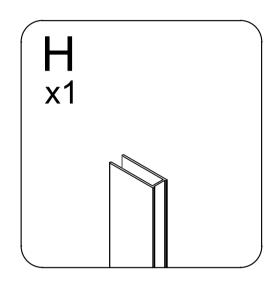


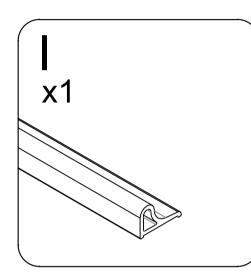


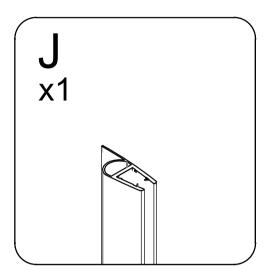

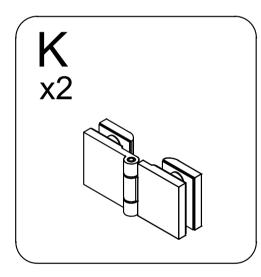


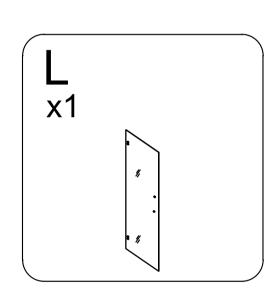

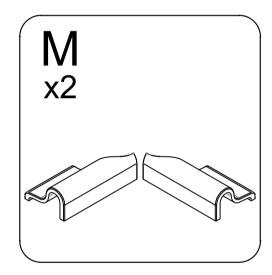


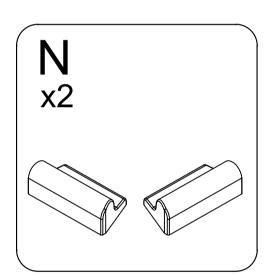


HARDWARE CONTENT

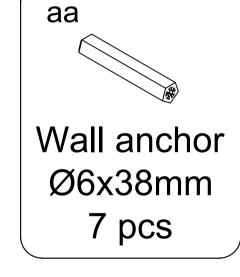



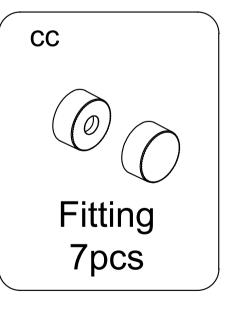



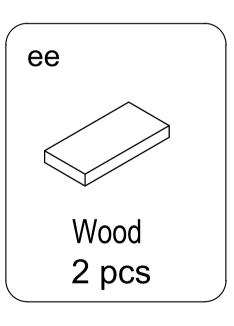



Additional spare parts are included.




Inspect all parts for missing prior to installation! Contact us for any part missing.


3


TOOLS REQUIRED




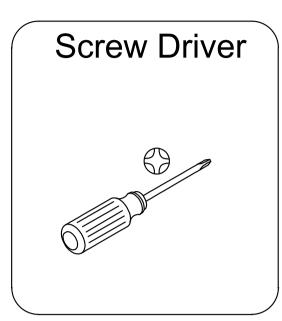




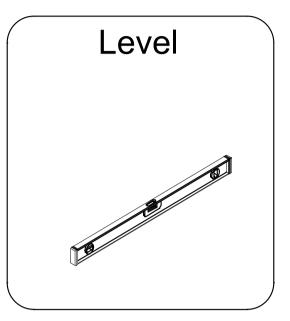


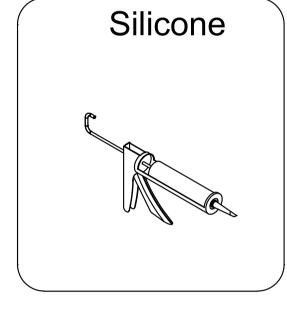


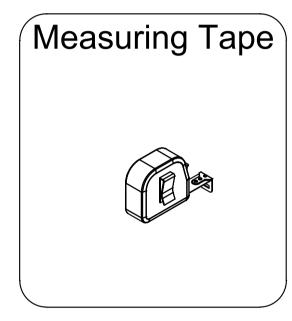



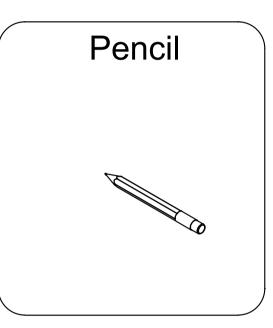

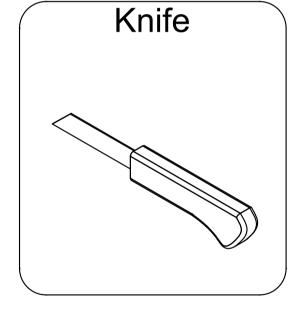


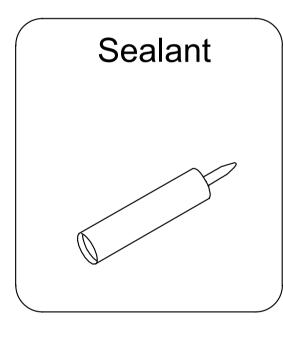









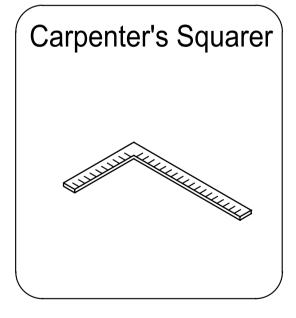



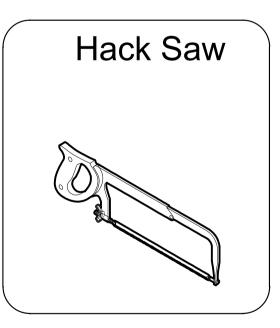

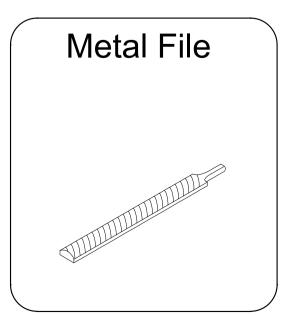

SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- · Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
 - Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
 - Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
 - Keep this installation manual for future reference.




Two people should perform this installaton.




Model Dimensions


configuration dimensions:

A Product Height	B Model width	C Installation width	D (Opening)
	30"	30" ~31 3/8"	22 17/32"
72"	32"	32" ~33 3/8"	24 17/32"
12	34"	34" ~35 3/8"	26 17/32"
	36"	36" ~37 3/8"	28 17/32"

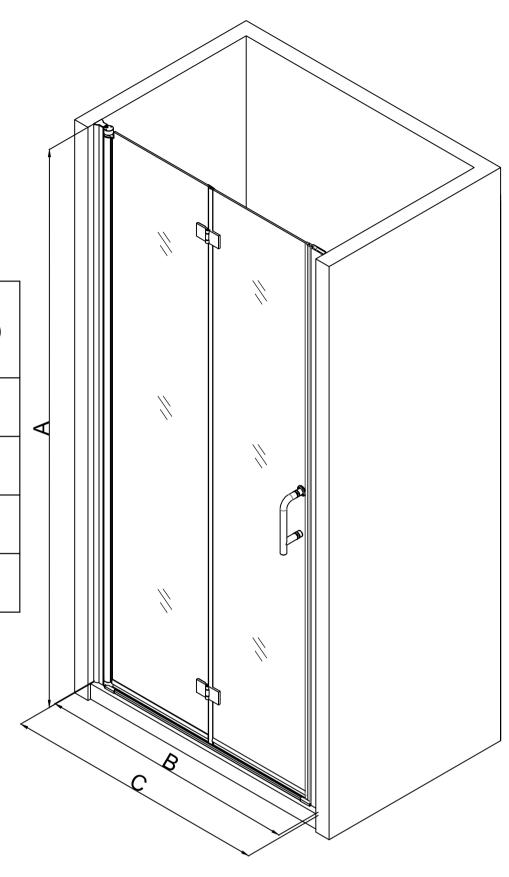

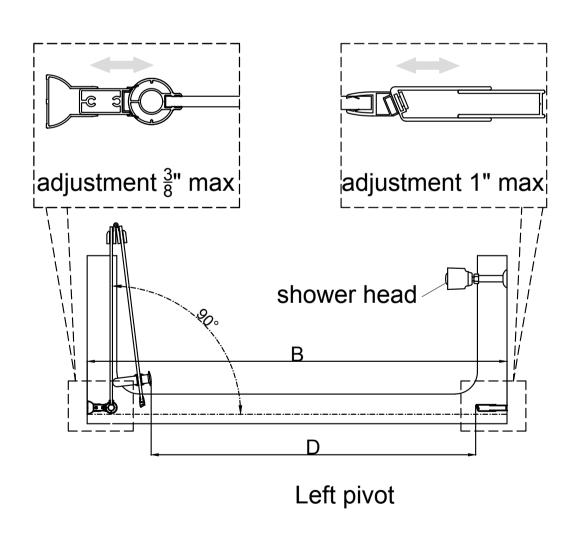



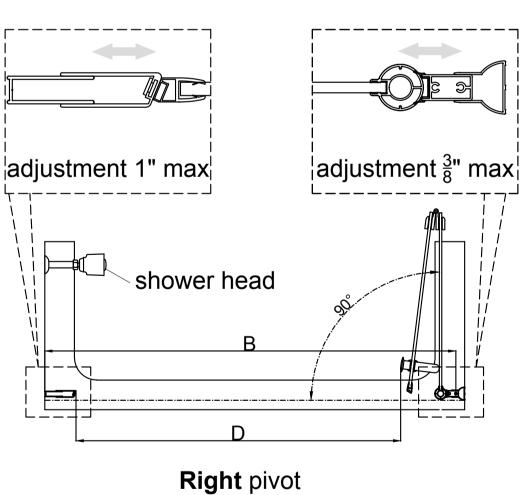


This model is reversible for right or left-hand door installation. The left-hand door installation is shown throughout this manual. For the right-hand door installation, simply begin on the opposite wall and reverse the orientation of the installation steps shown.


6



Wall Jamb Installation

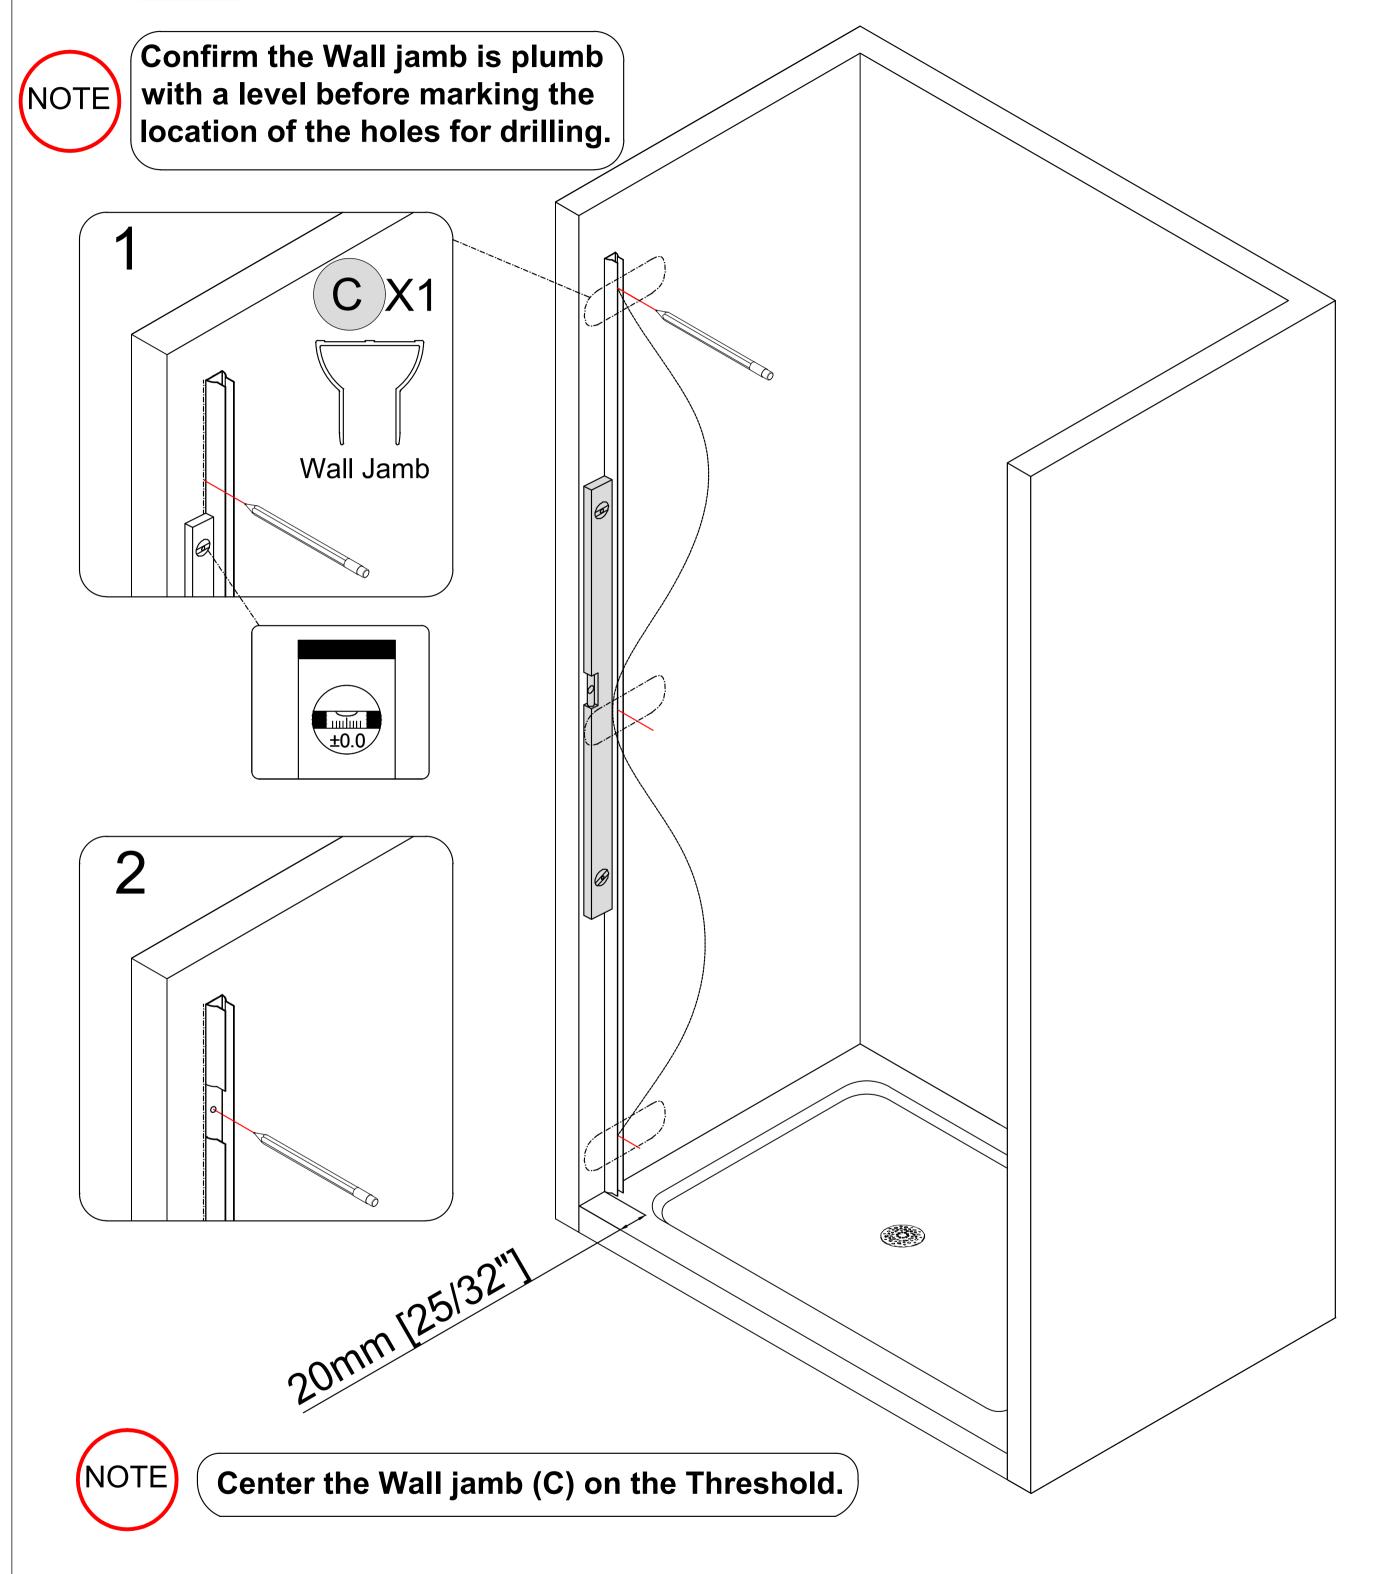


7

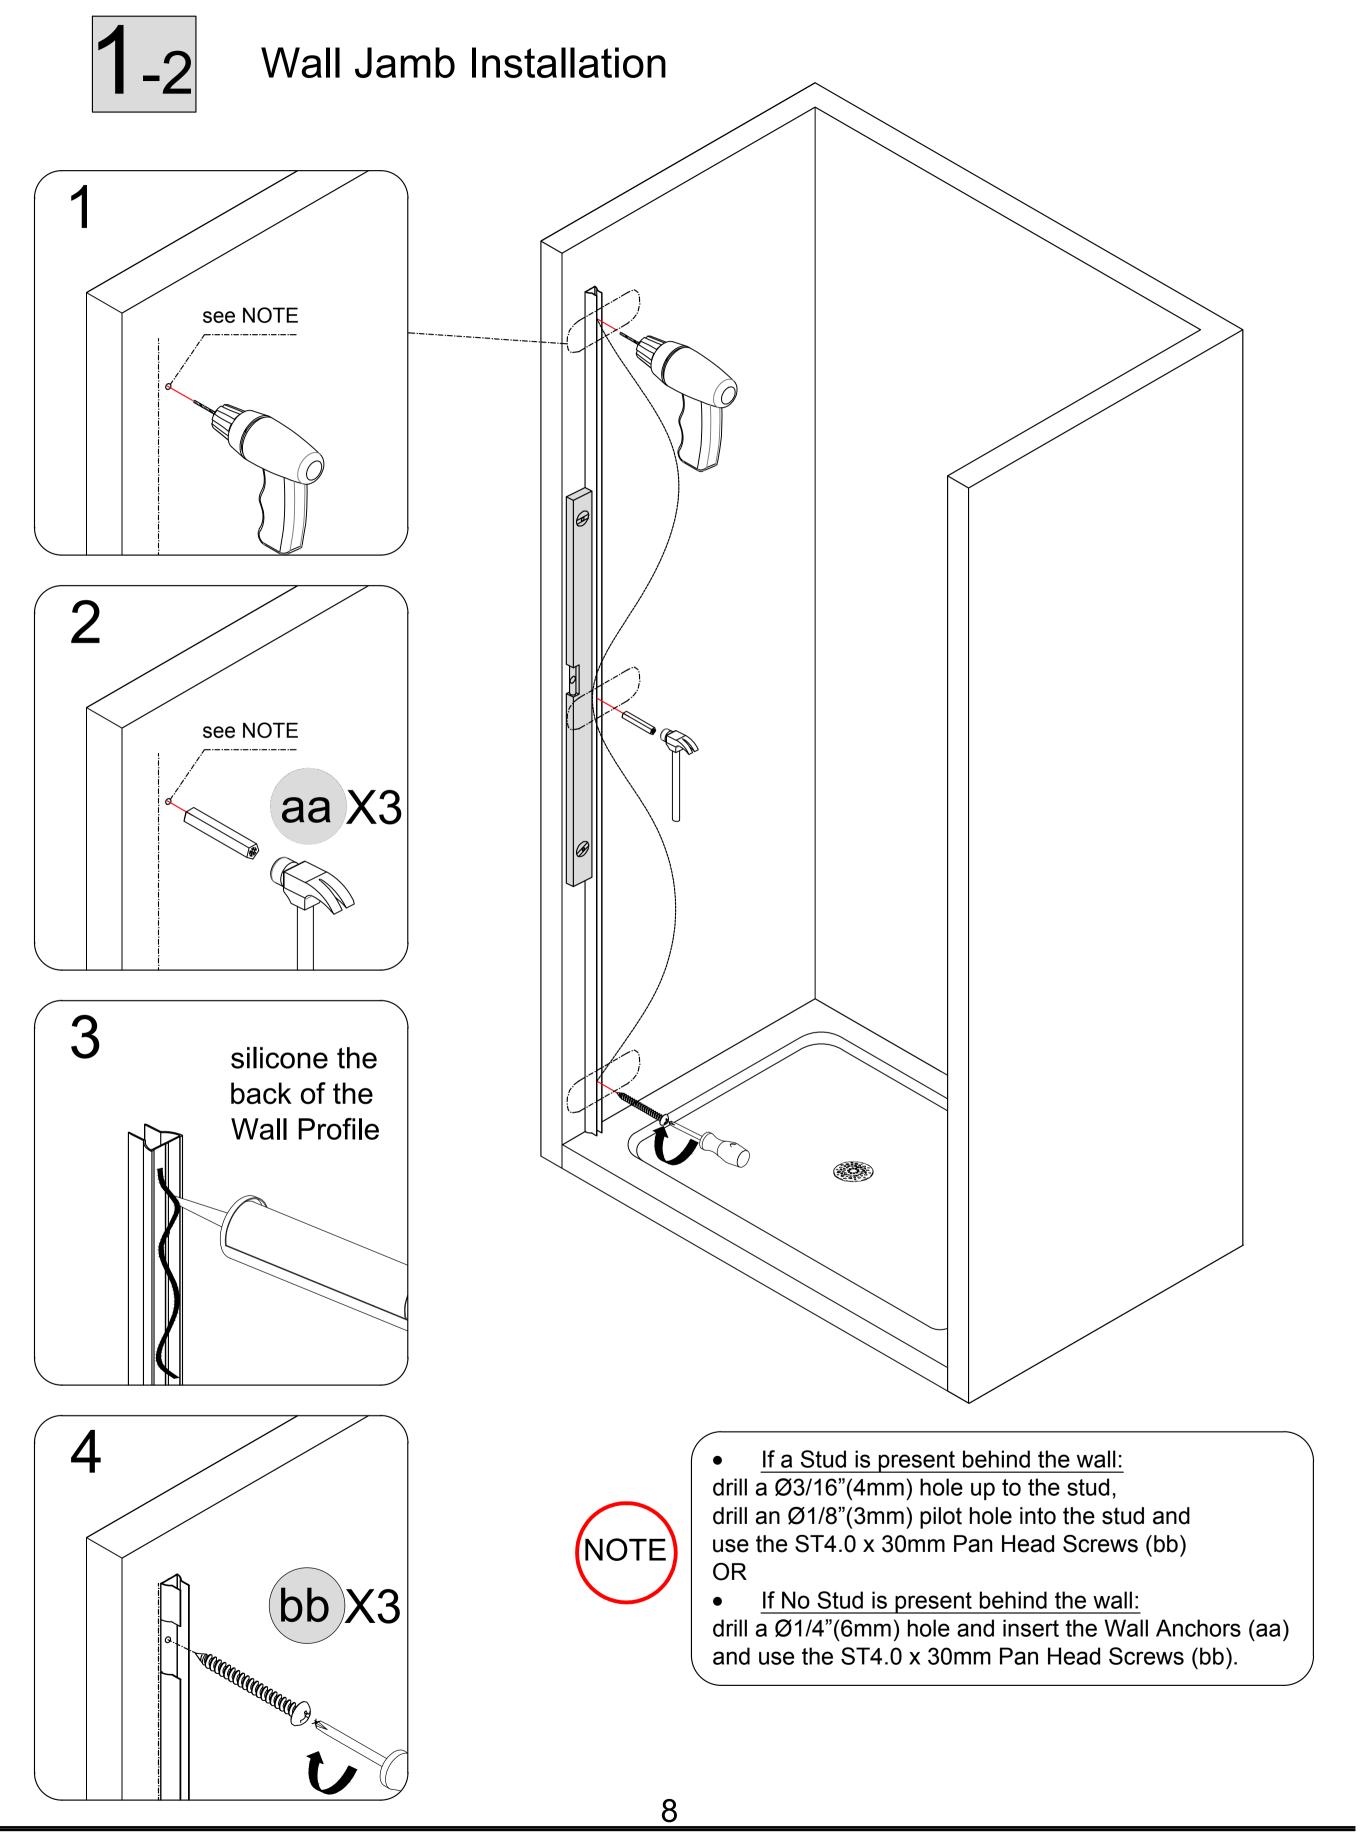

SHOWER DOOR


2

Door panel Installation

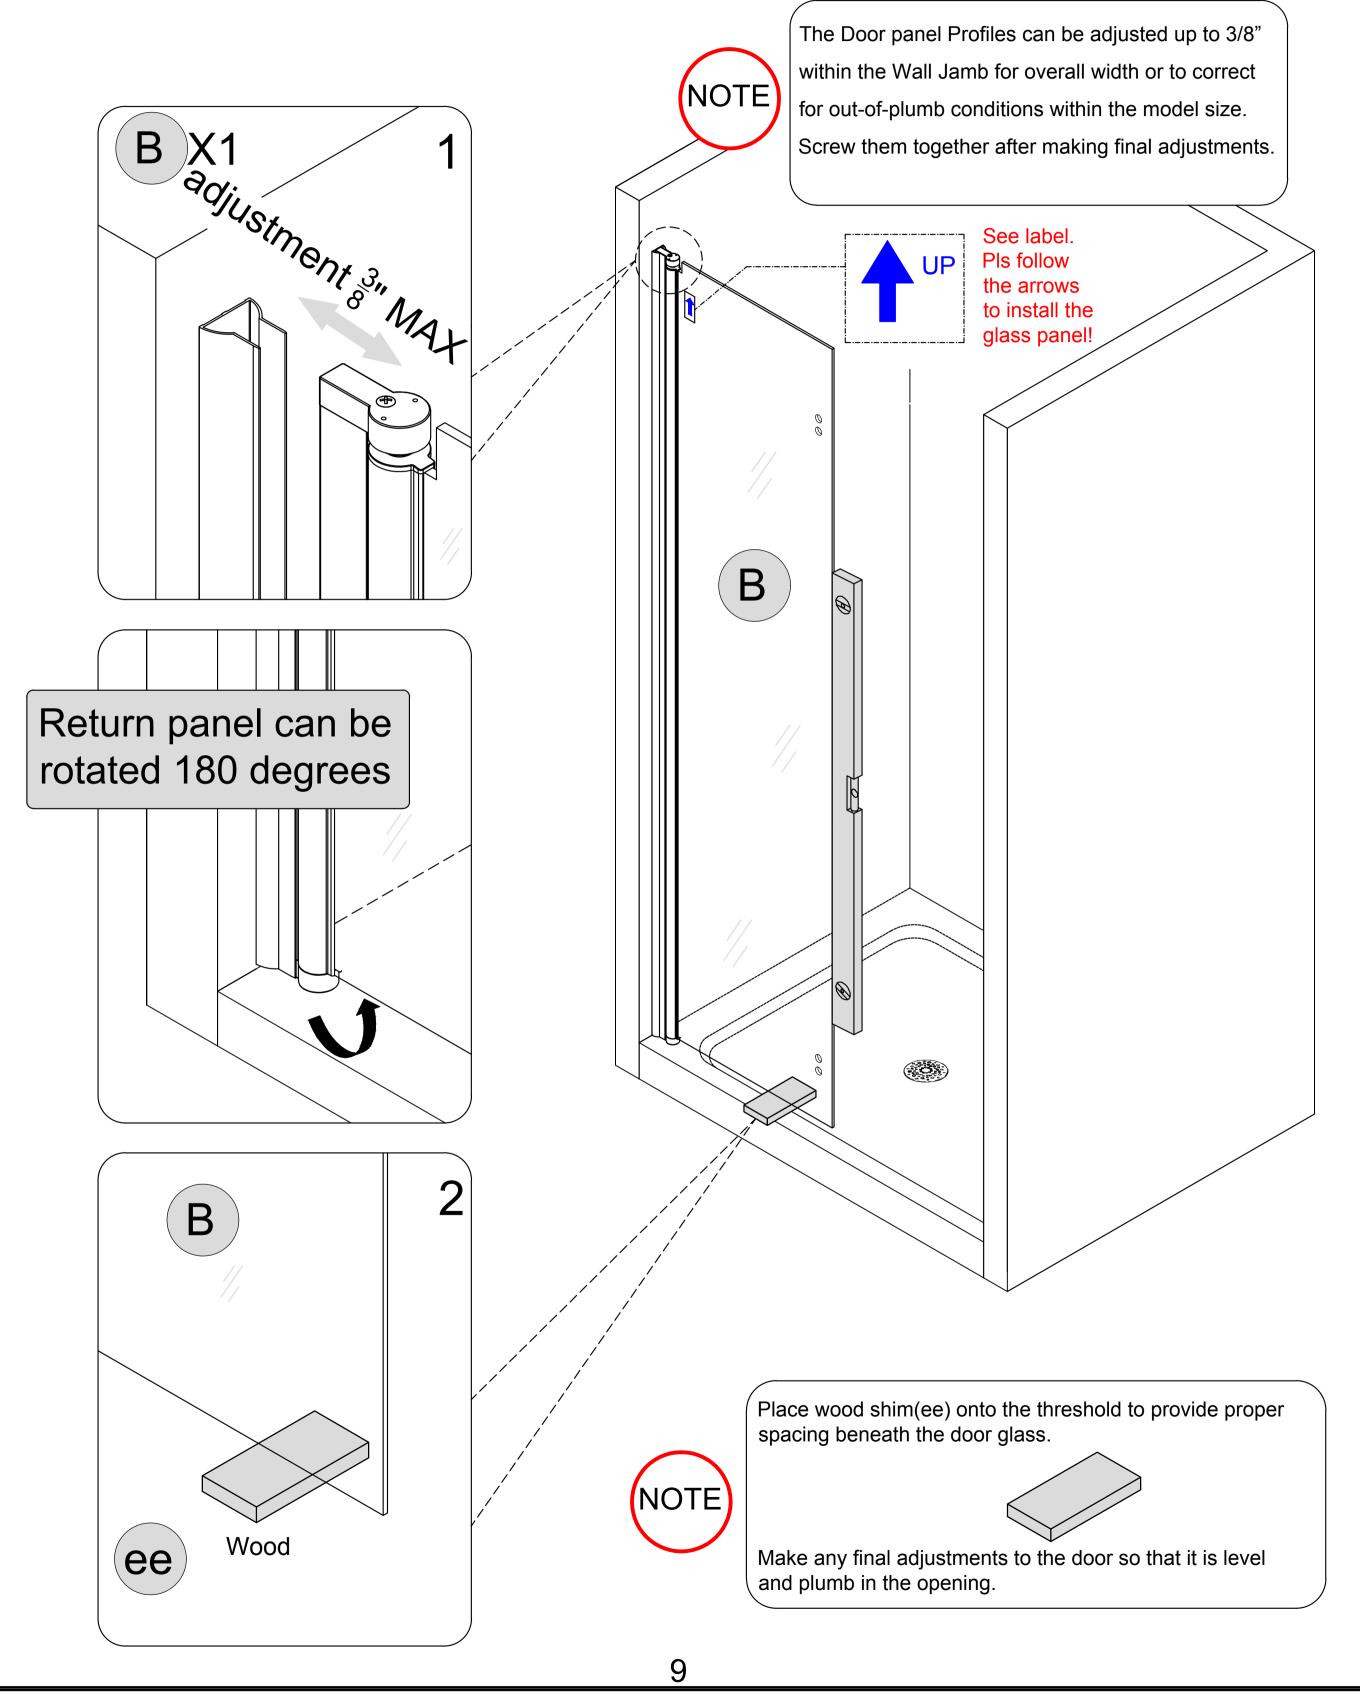



3.1

Glass-to-Glass Hinge Assembly Installation

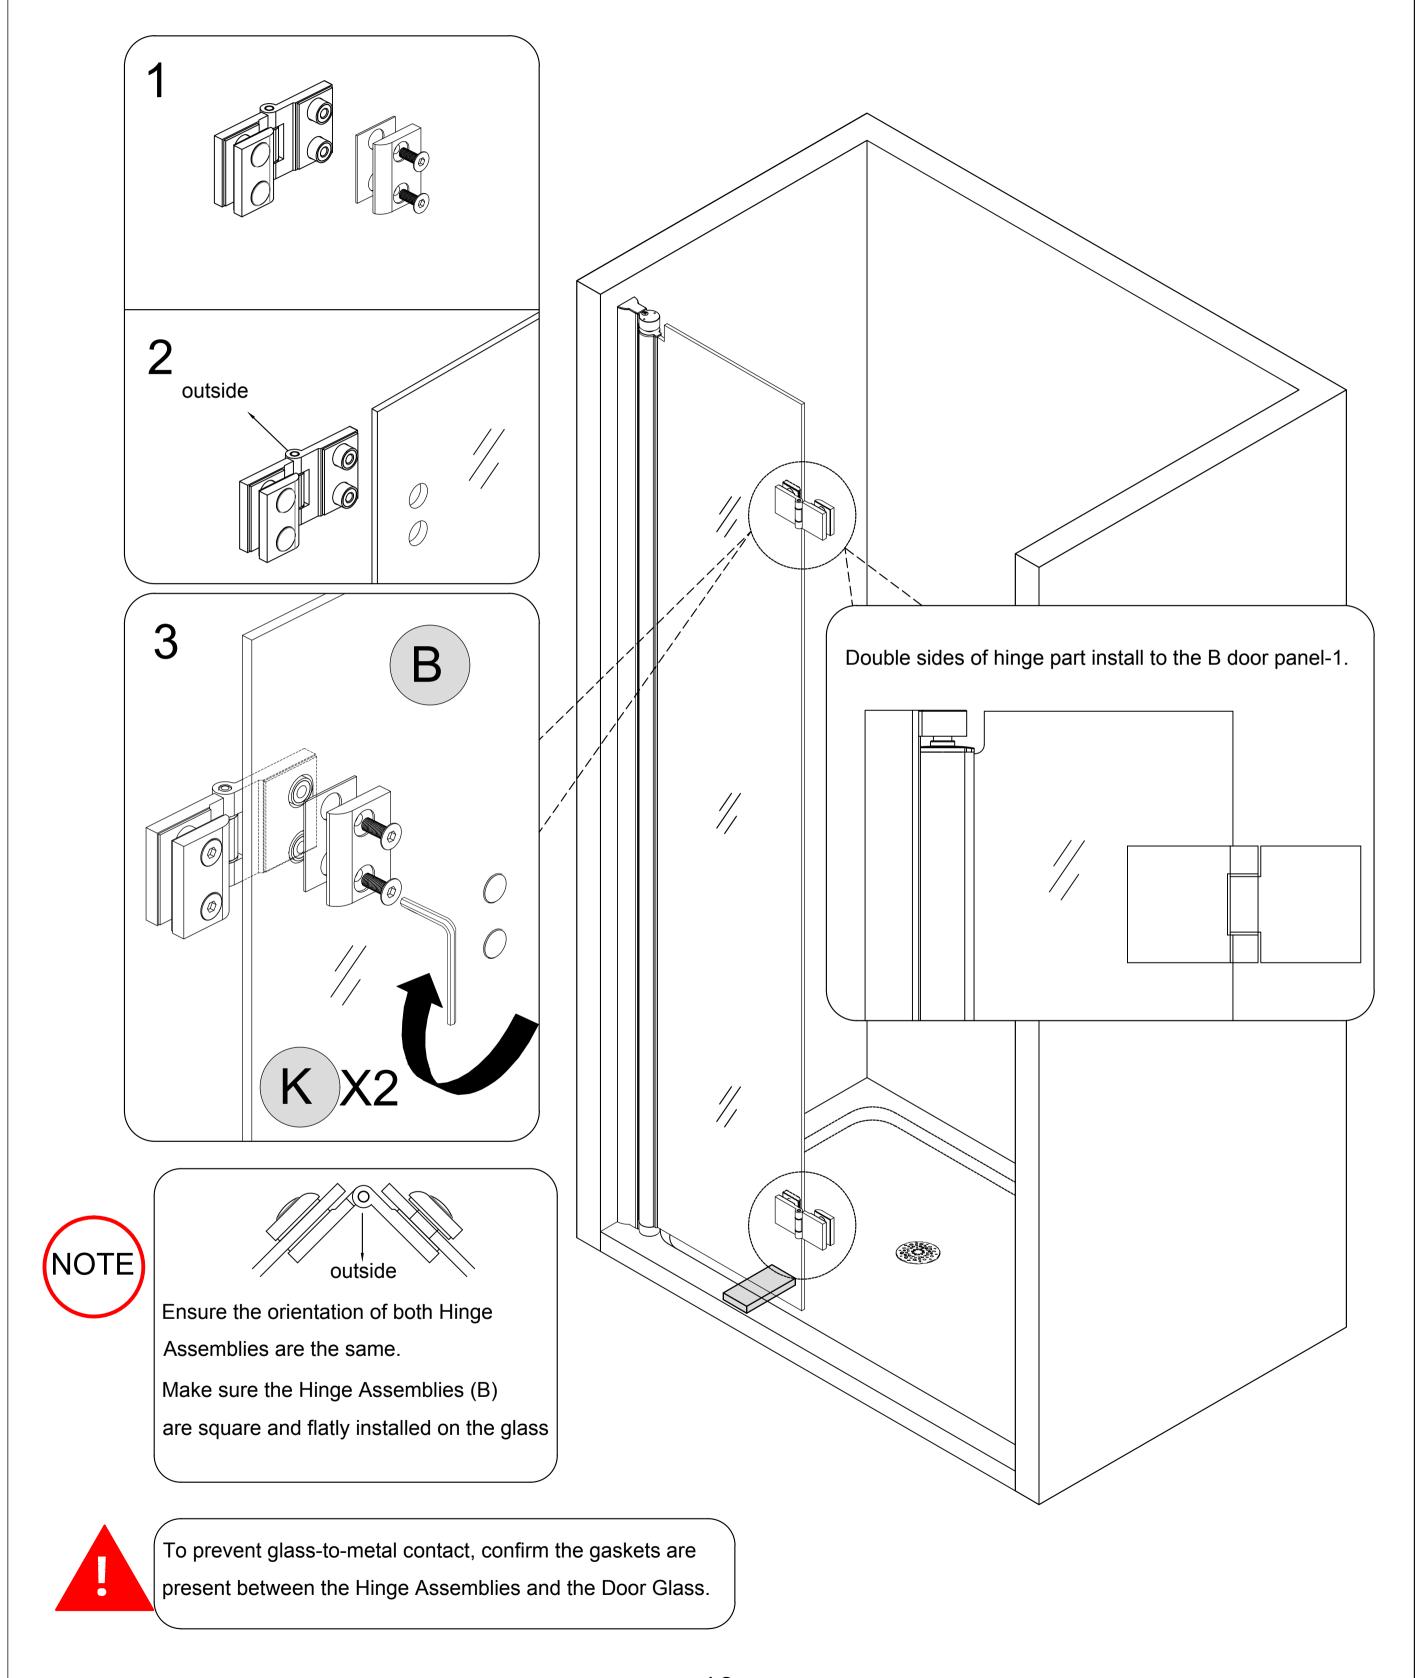

10

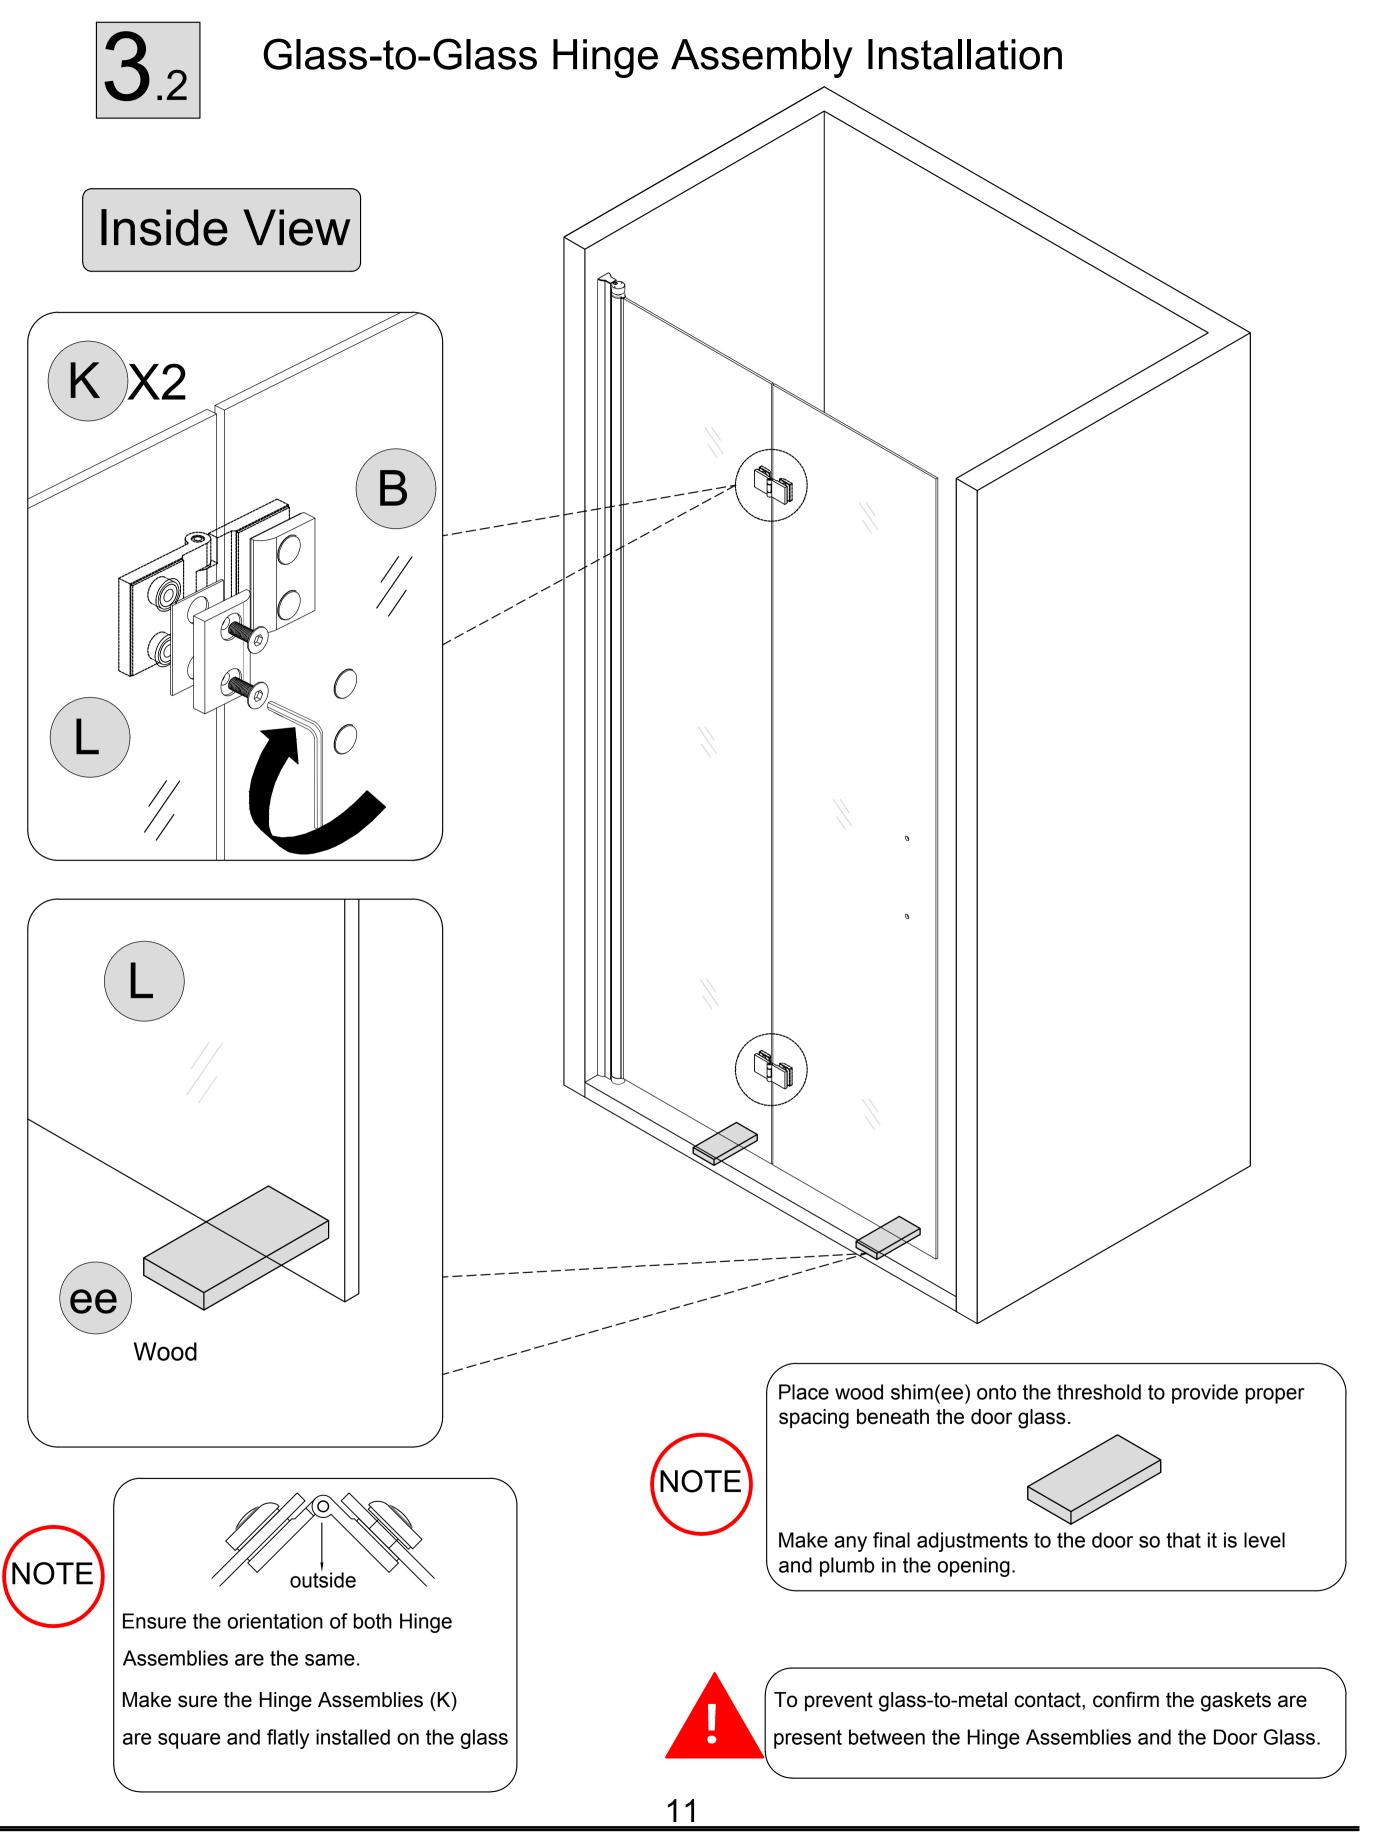

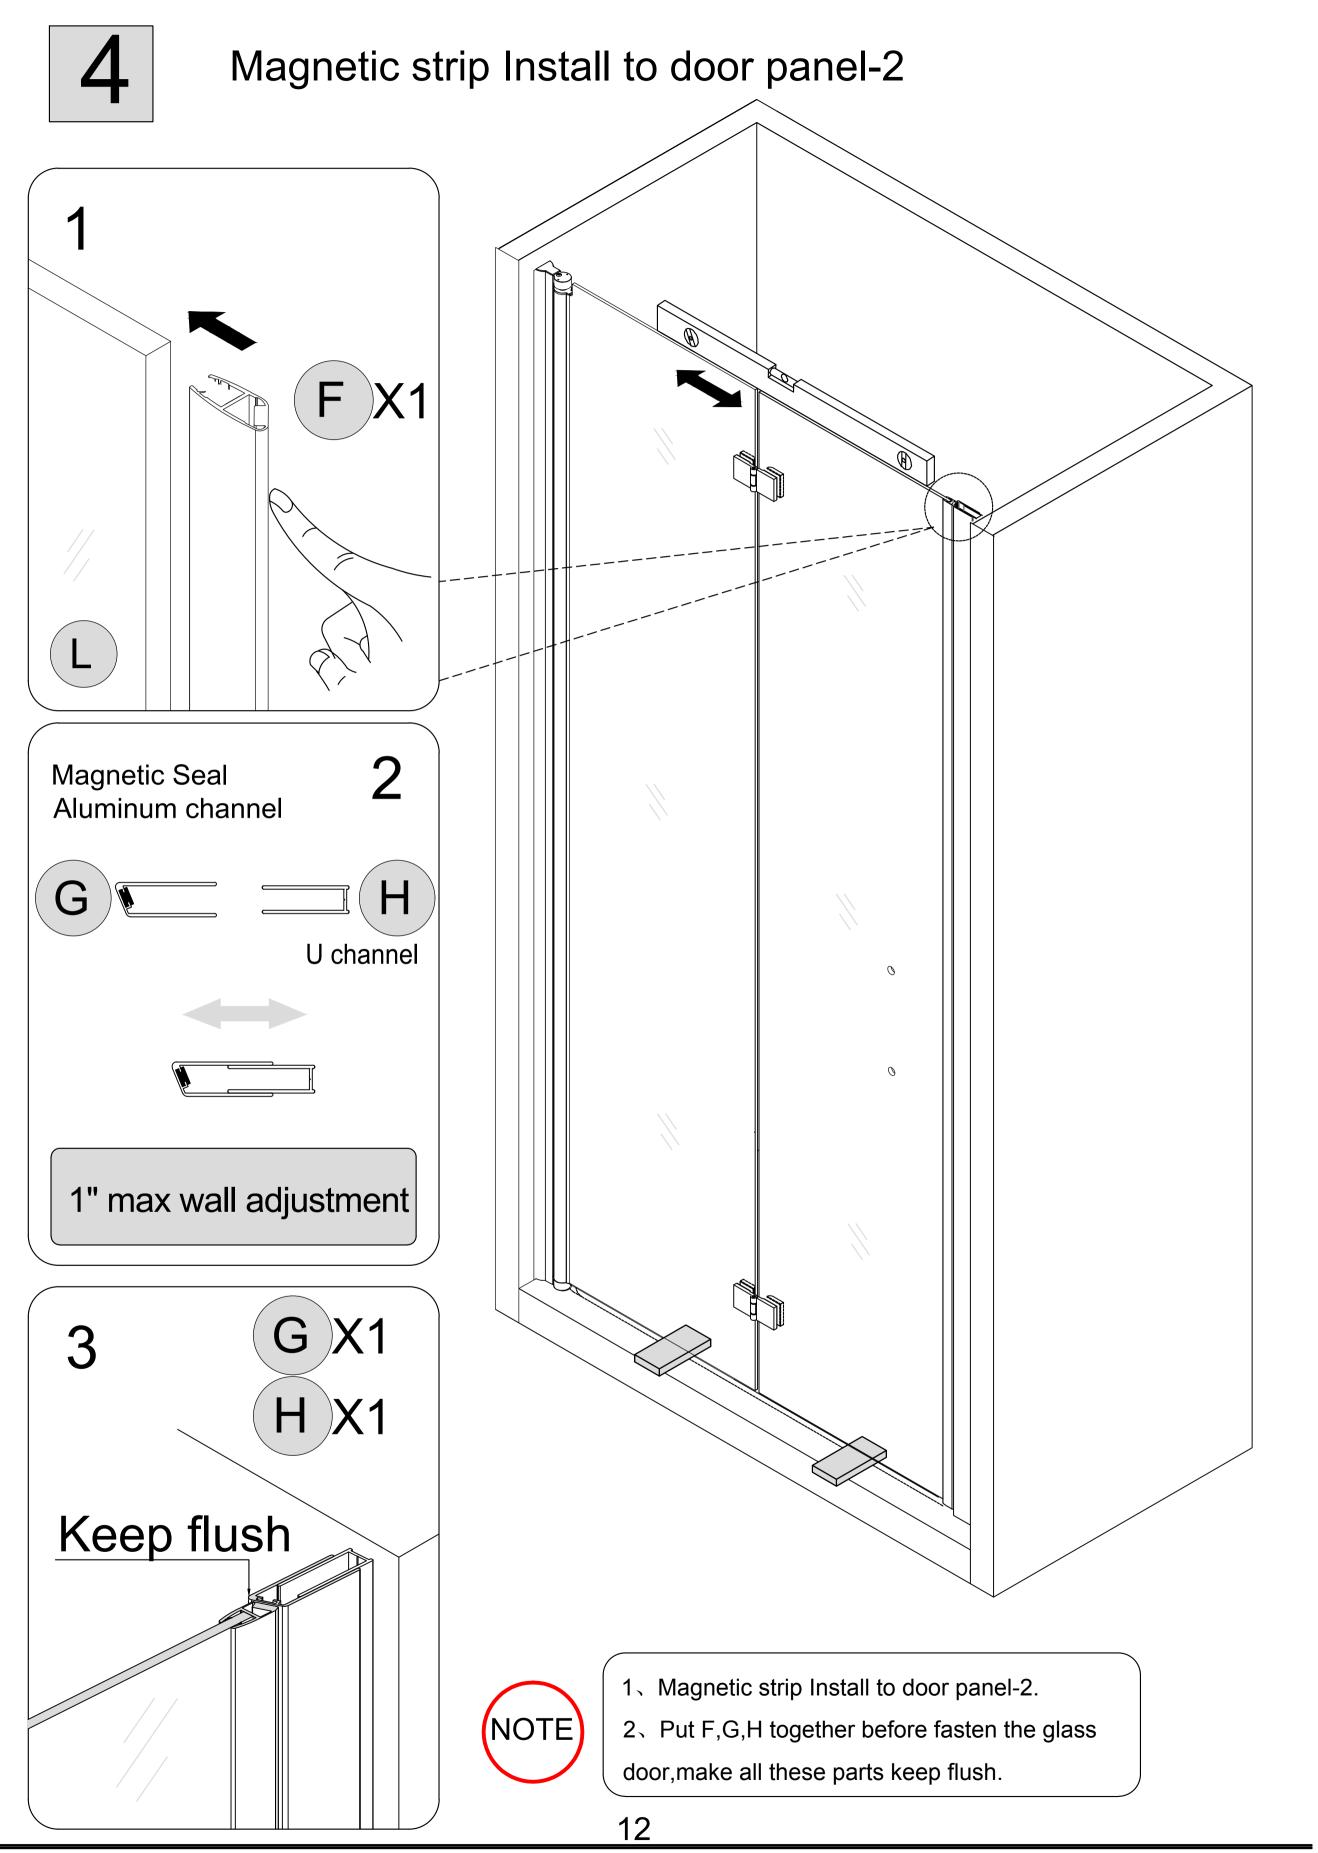




Fasten the door panel



After final adjustments, drill Ø1/8" holes in the Wall Jamp (C). Drill only through the first layer of the Door panel Profile and install the ST4.0x10mm Pan Head Screws (dd) using the Decorative Covers and Washers (cc)


Inside View

Drill Bit Φ=1/8"

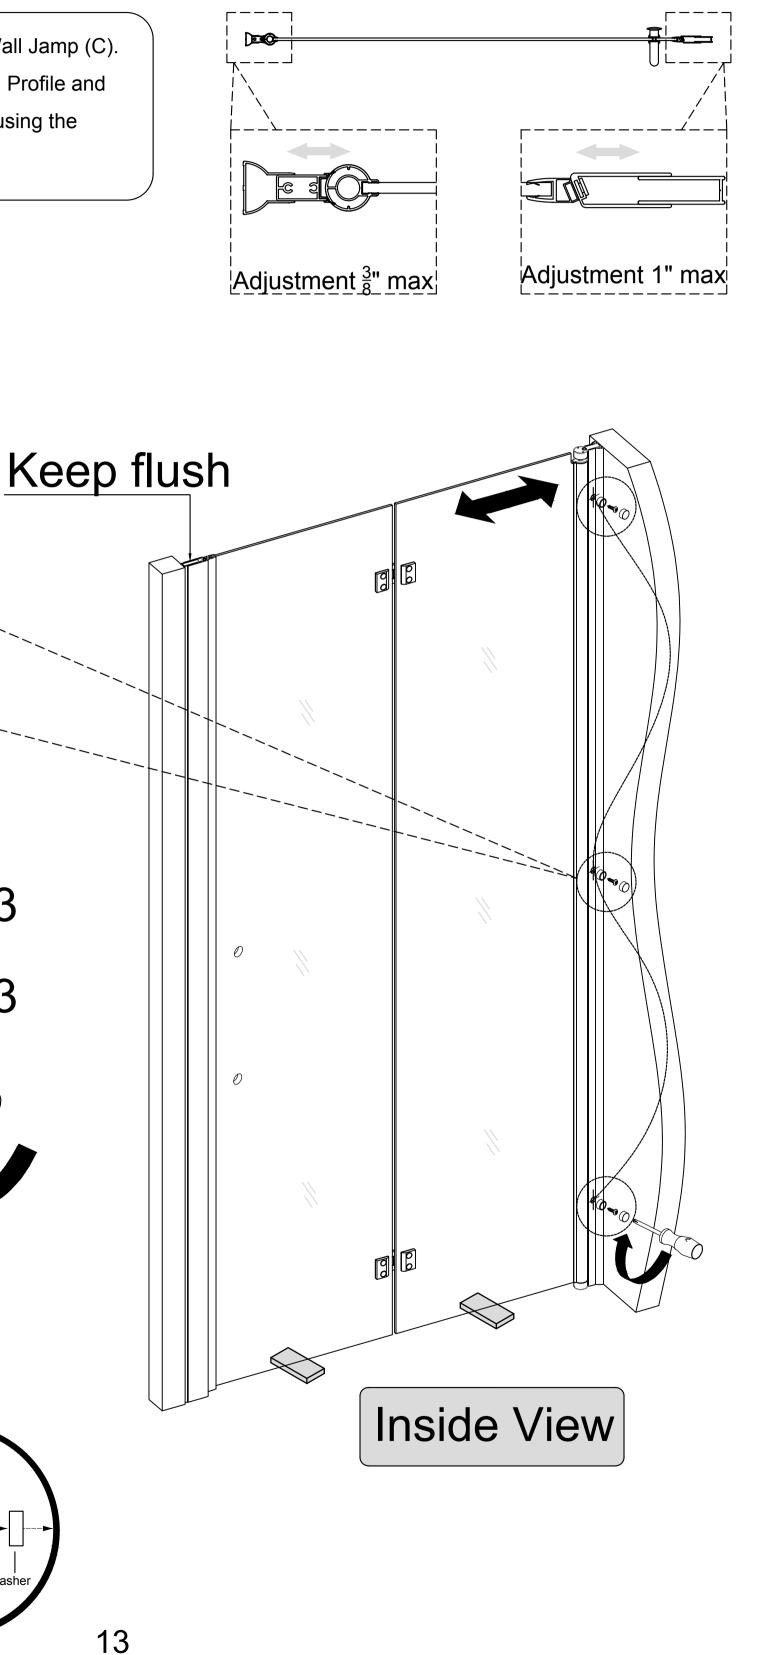




Include the washers when installing the ST4.0×10mm Pan Head Screws (dd) and Decorative Caps (cc).

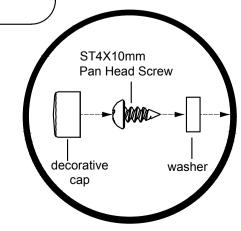

13




Determine the G & H position

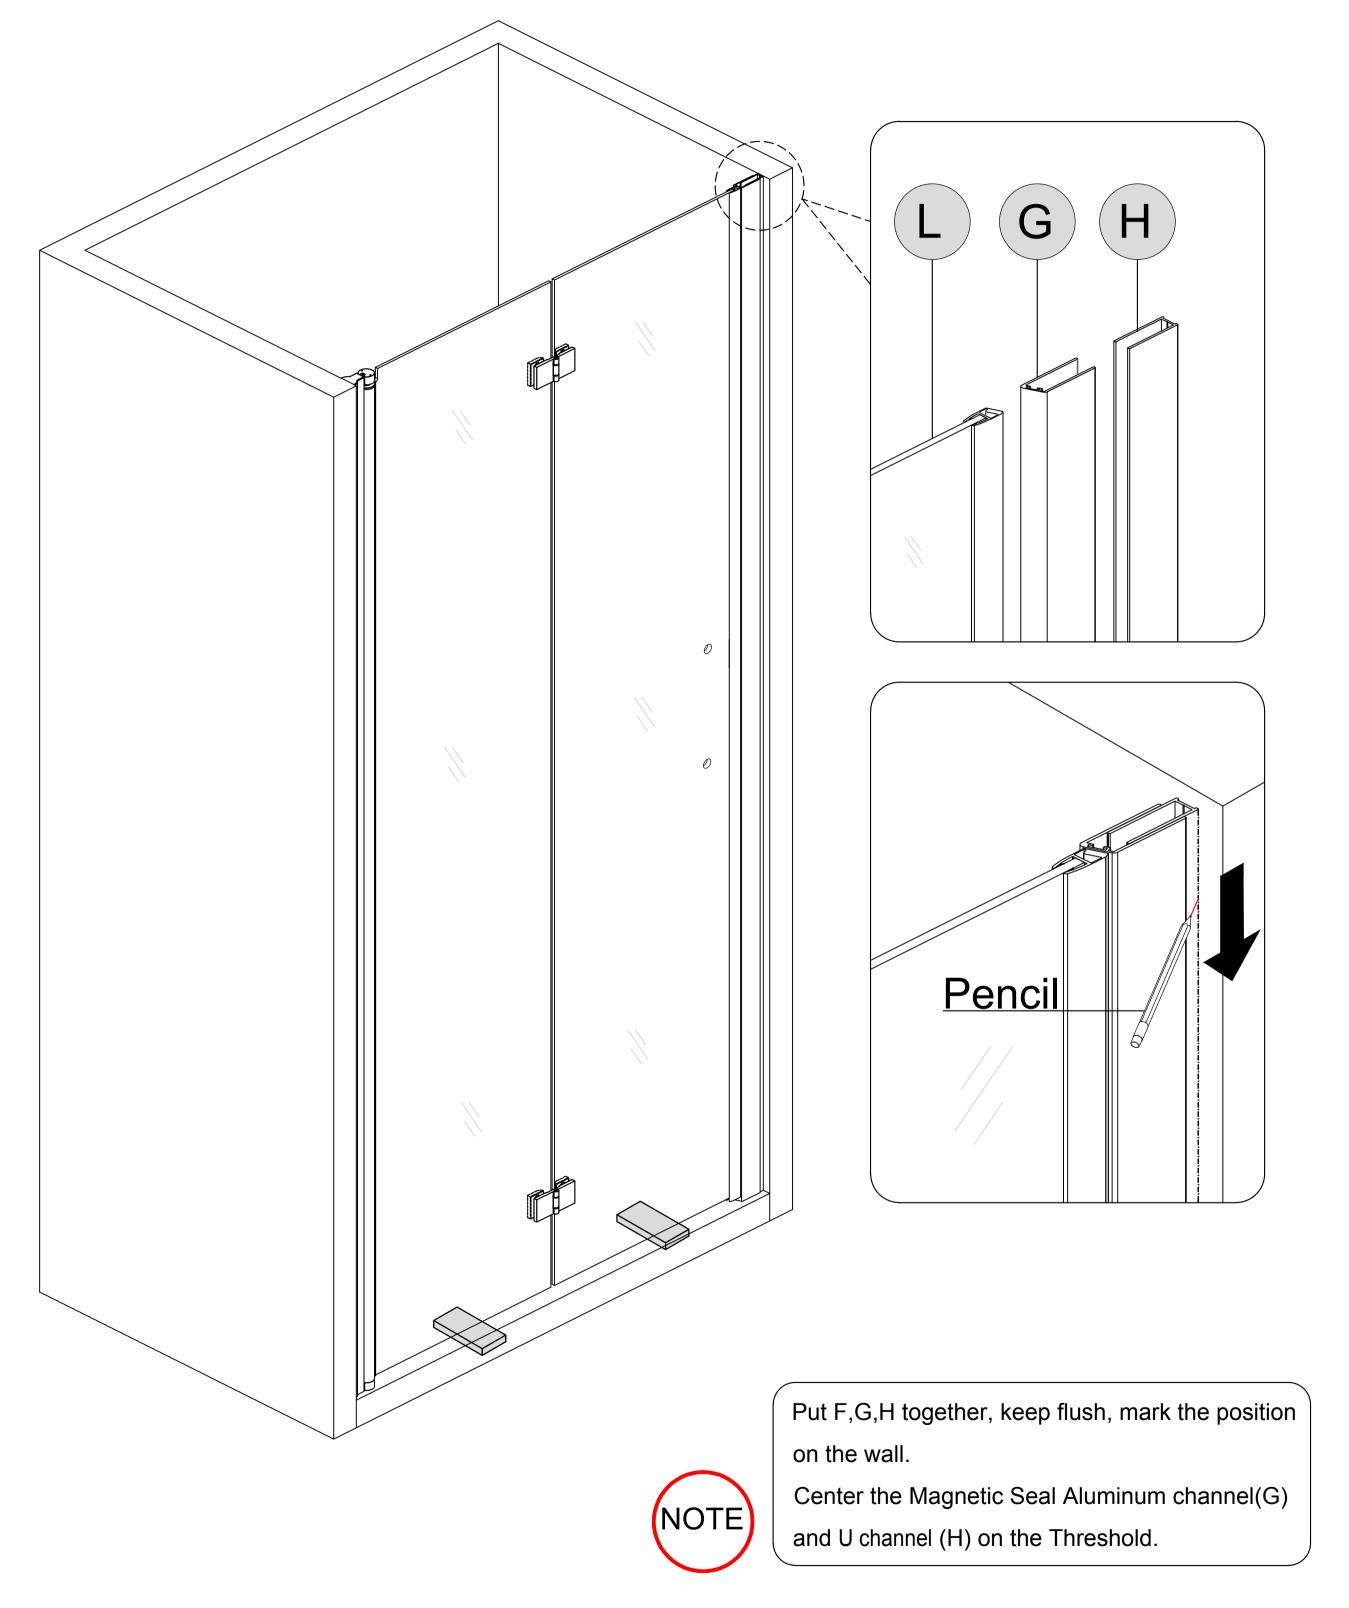


14

SHOWER DOOR

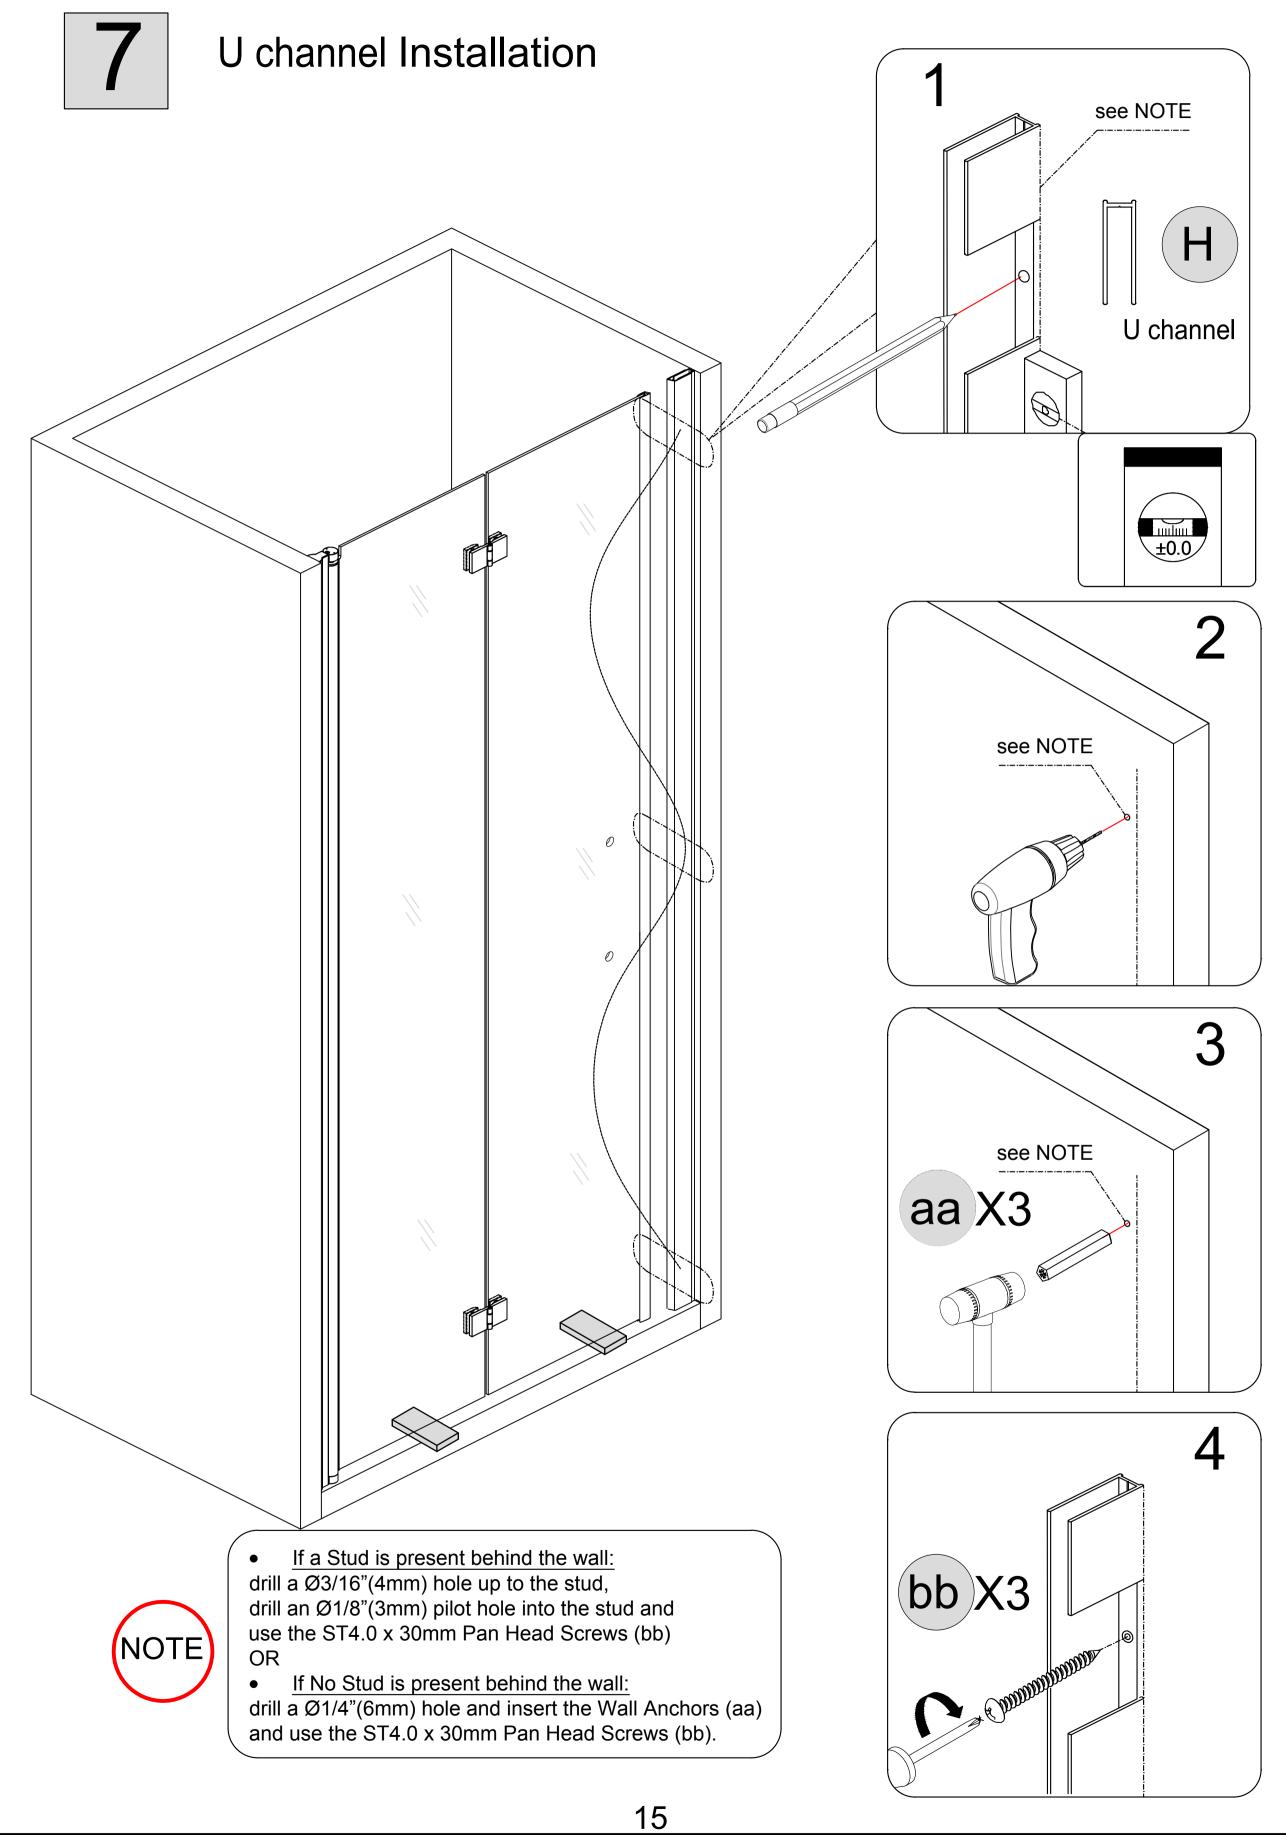




Magnetic Seal Wall Jamb Installation

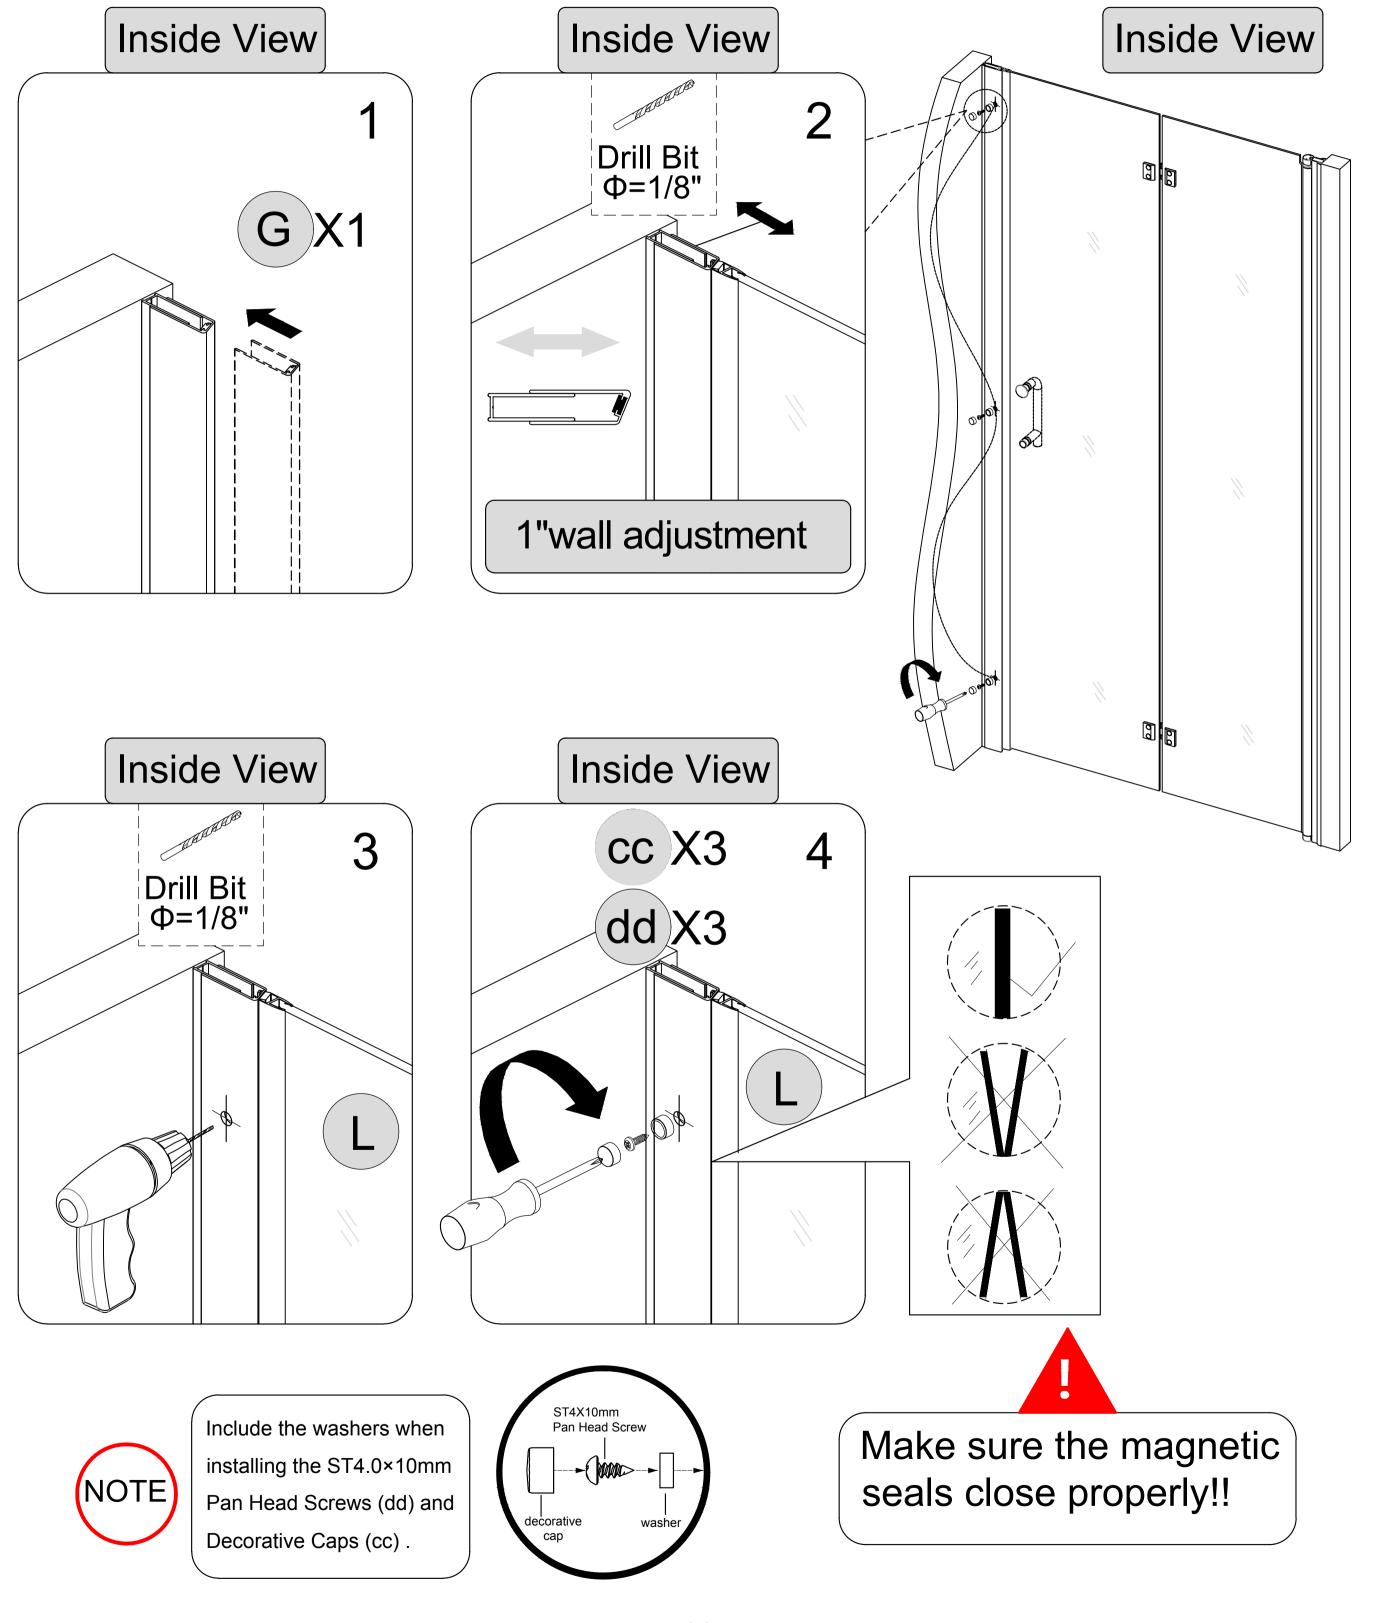

16




handle Installation

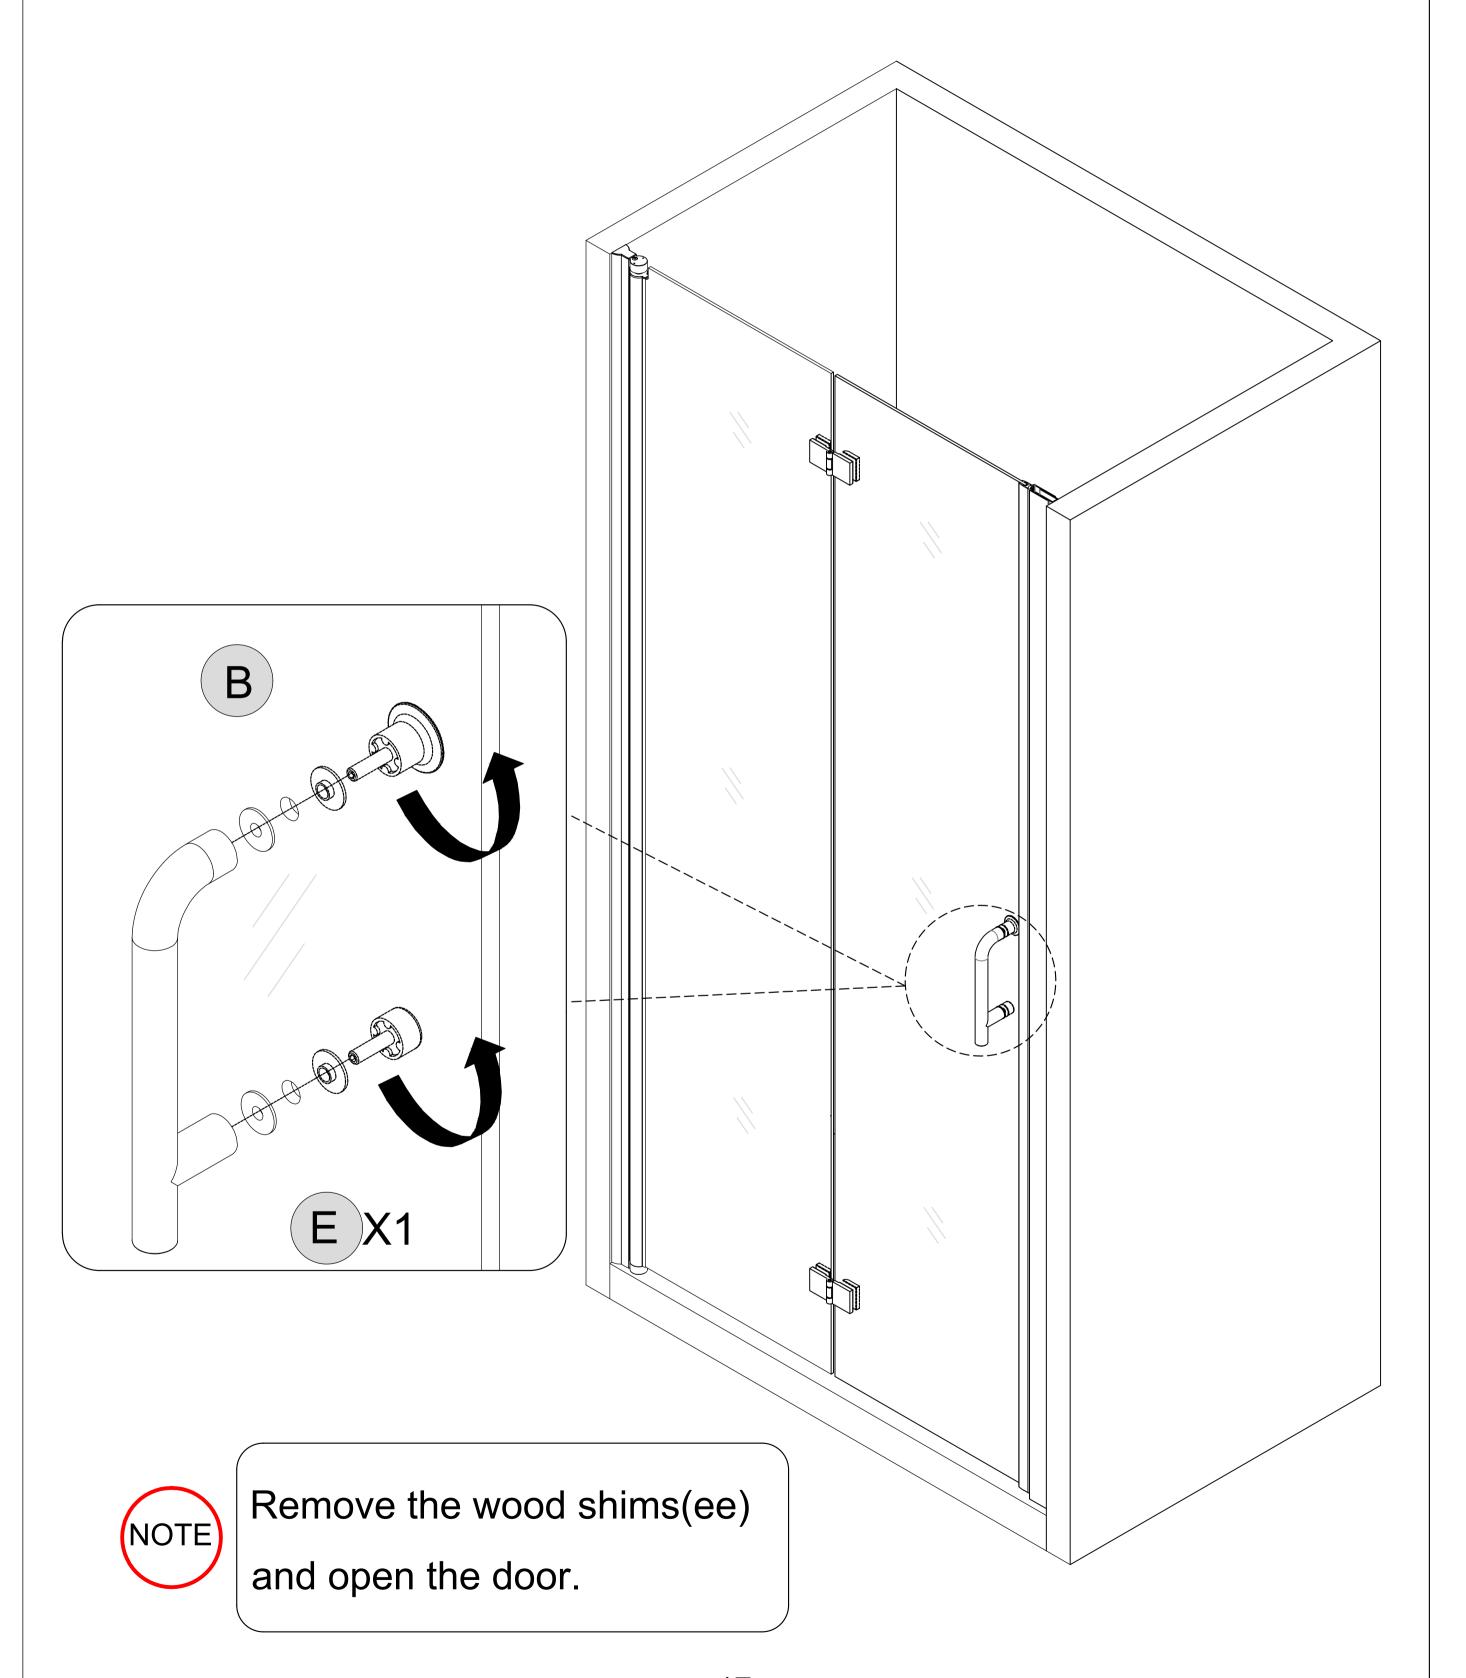

17


Top Cover Cap & Vertical Gasket Installation

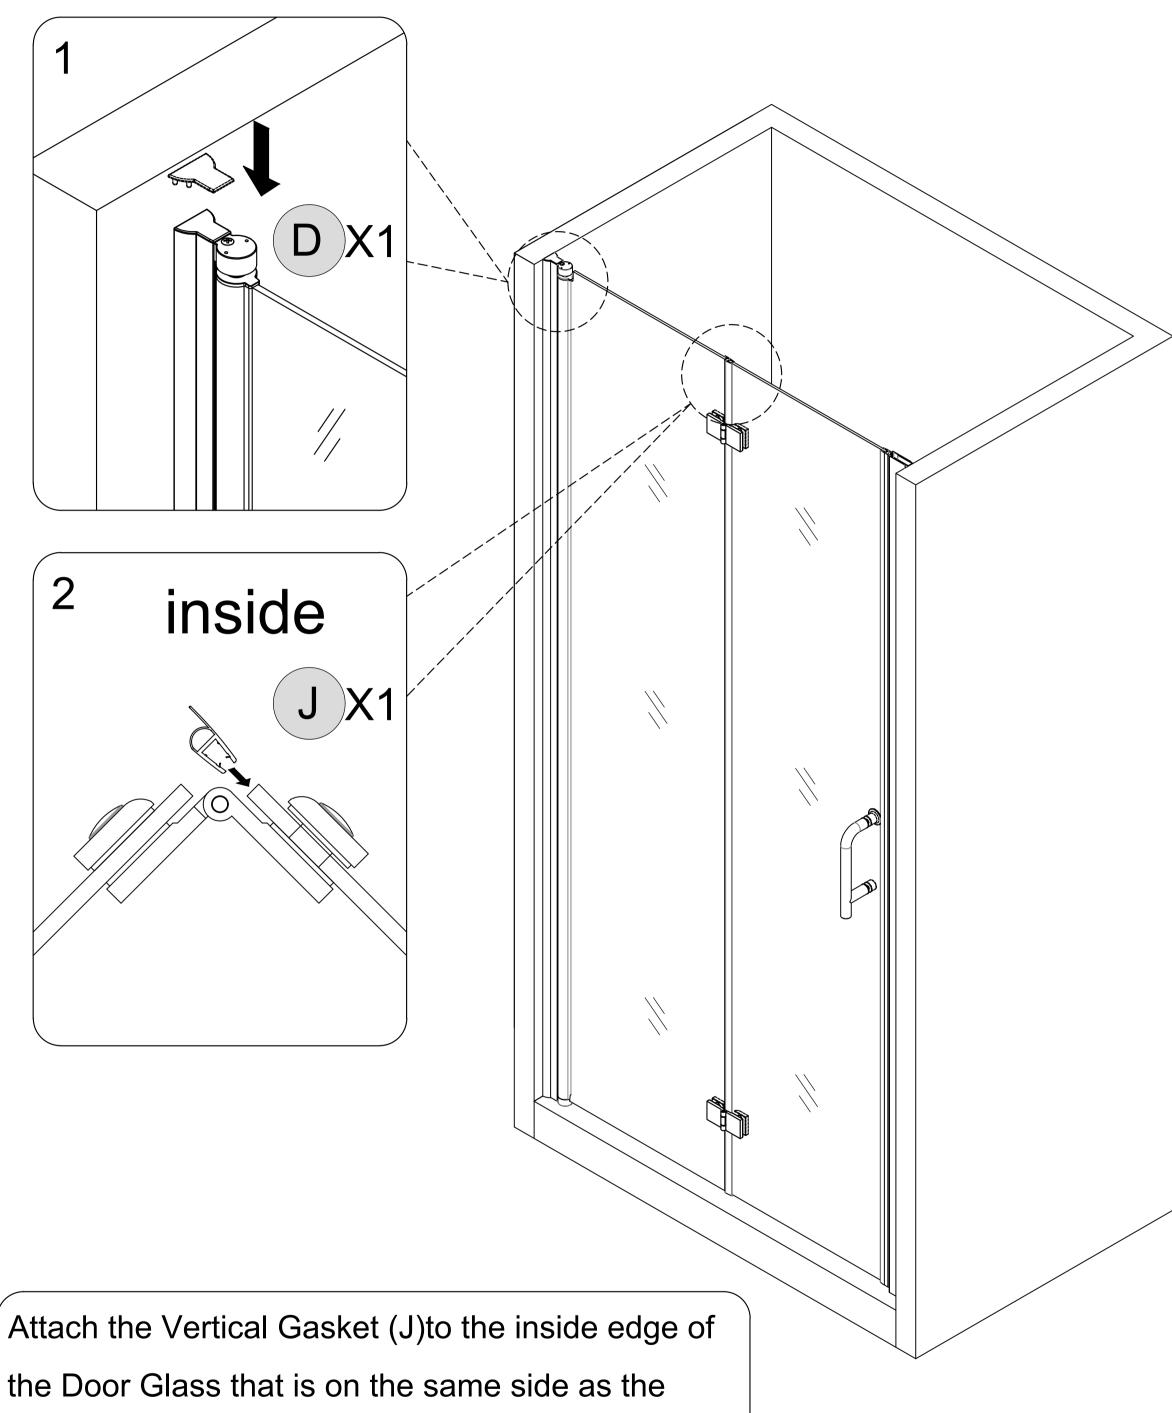

NOTE


Attach the Vertical Gasket (J)to the inside edge of the Door Glass that is on the same side as the shower head so that the flexible fin is pointing away from the water source.

Bottom Gasket Installation

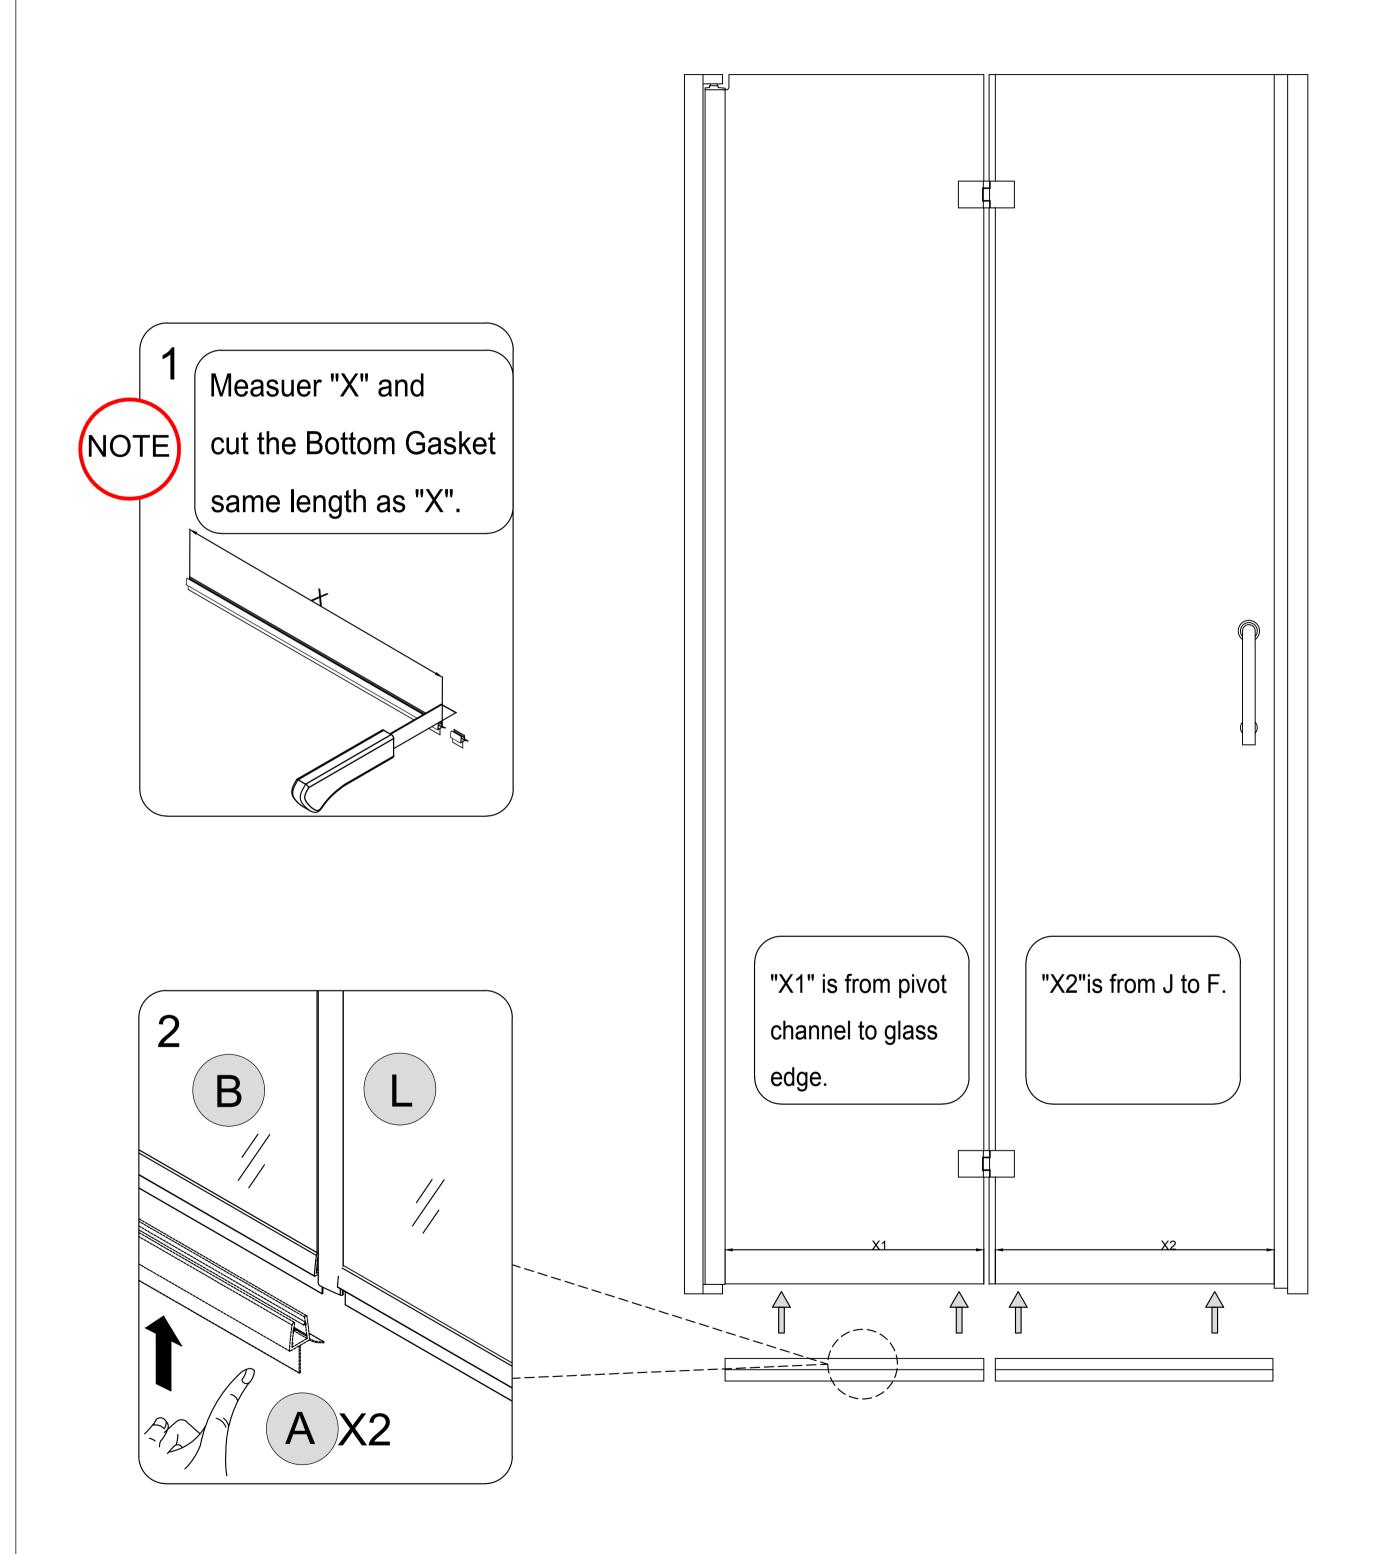

19

Alu. Threshold Installation

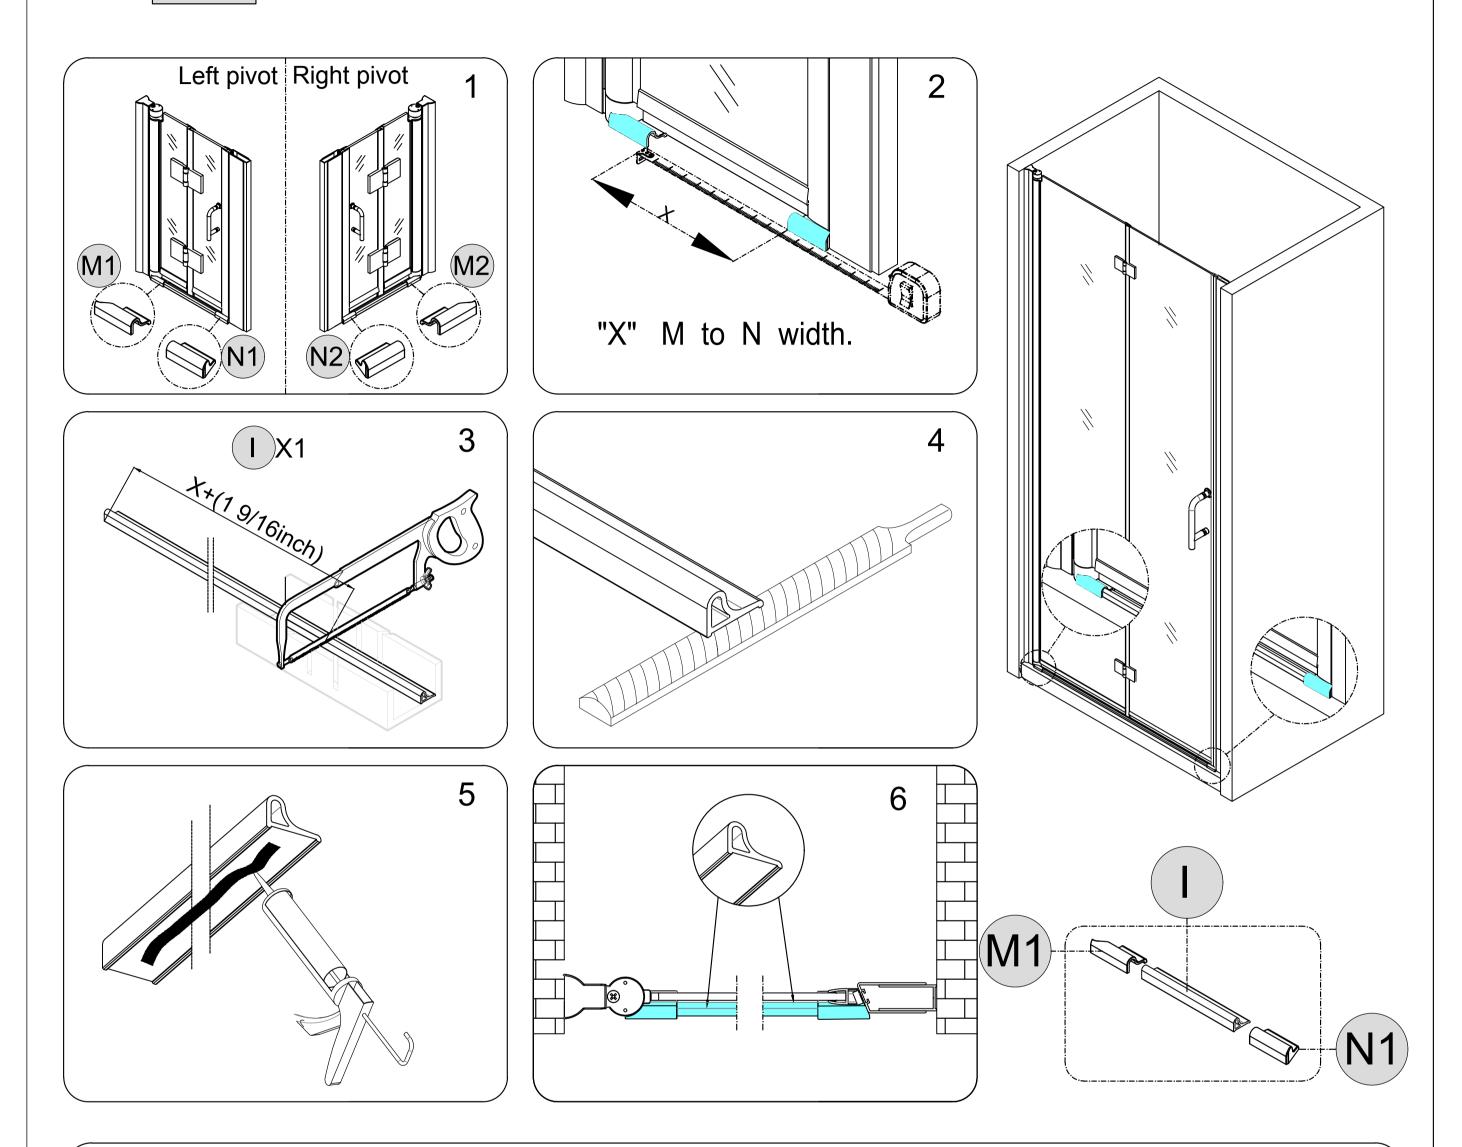

- 1. **Threshold Cap(M&N)** are divided into left and right two types, Select according to the installation method **Threshold Cap(M&N)** as Fig 1;
- 2. Measure "X" and cut the **Alu. Threshold(I)** same length as "(X+1 9/16inch)" as Fig.2; Fig.3 and Fig.4;
- 3. Apply silicone into the groove along the entire length of the Alu. Threshold(I) as Fig 5;
- 4. Combine the Alu. Threshold(I) and Threshold Cap(M&N) as Fig.6.



The large curved lip of the dam strip is intended to face toward the outside of the shower to ensure the flow of water is redirected towards the drain.

20

SEALING



The surfaces need to be clean and free of debris before applying silicone.




Ensure that the Shower door closes tightly and opens smoothly.

Apply a good quality silicone sealant along the wall

Jamb(C)&(H)and Water seal (I).



Allow 24 hours for the silicone to cure before using the shower.

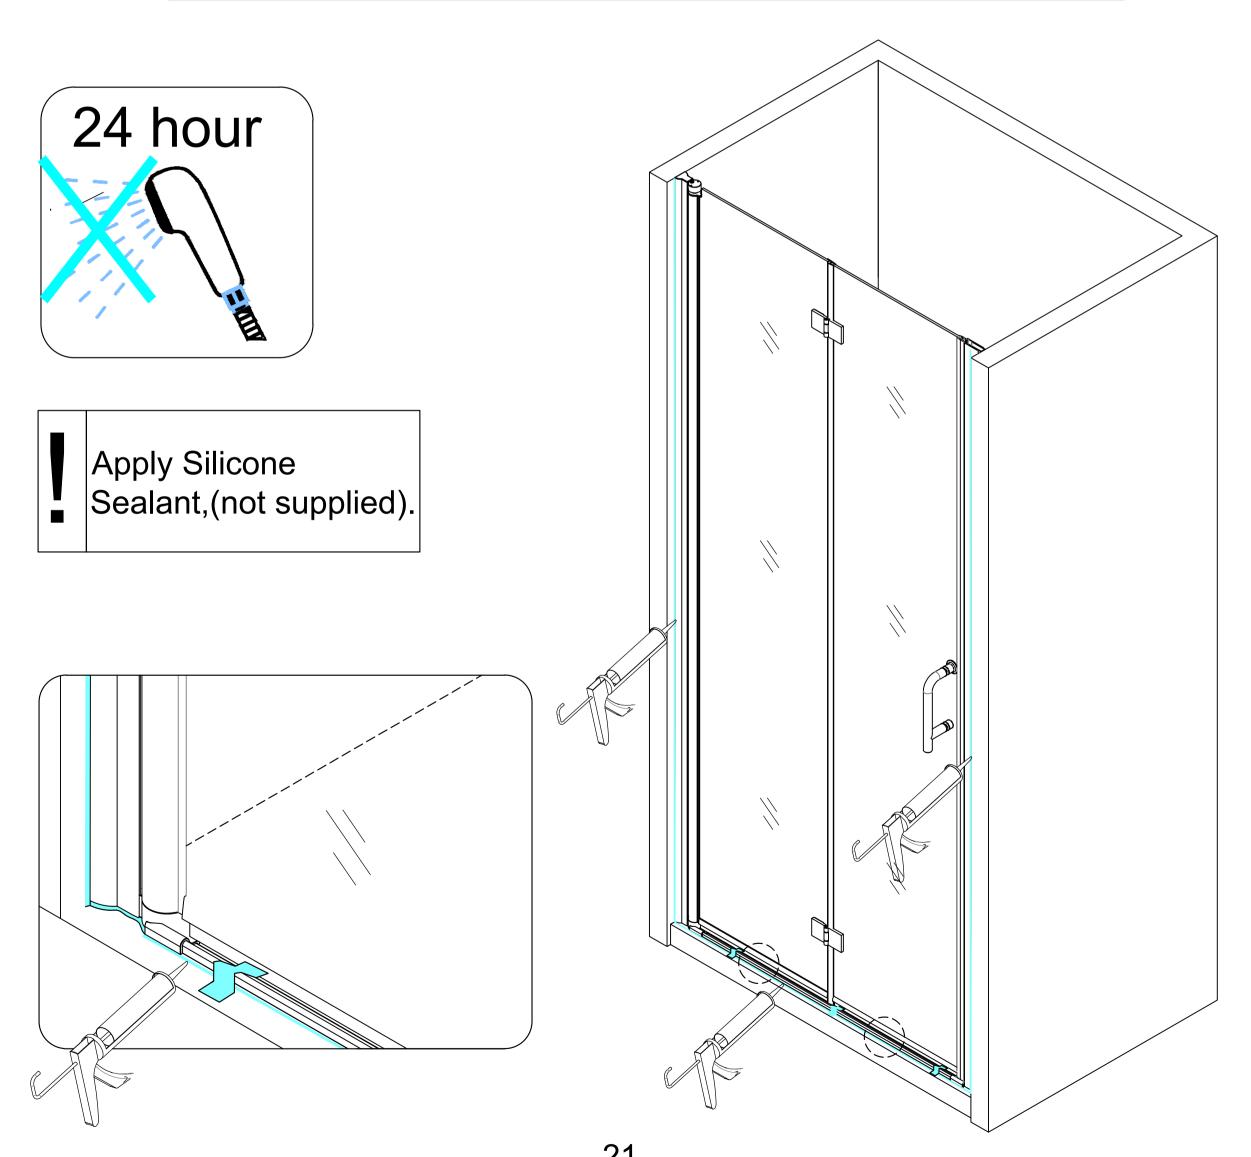

This troubleshooting guide is for general aid only. For service and installation issues or concerns, please contact us by + 1 302 336 8180.

Troubleshooting						
Problem/Symptom	Suggested Solution	Page(s)				
Missing parts	*Check all shipping/packaging material for missing parts/components. *If not found, please contact us by hotline + 1 302 336 8180 to order factory part replacement.	2.3				
Door is not operaing smoothly	*Check the magentic seal (F)and pvc seal (J) for proper trimming and installation. *Confirm the Hinge (K)Assemblies are tightly secured to the Door Glass(B&L). * Confirm the sweep seal (A) is tightly secured to the bottom of Door Glass * Confirm the hinge side pvc seal is correctly notched around the Bottom sweep seal.	9-19				
Water leakage	*Check all the pvc seals for proper trimming and installation. *Check the alu. threshold installed properly and secured with silicone.	19-21				
Handle rattles during operation	*Confirm the pvc gaskets are present and the handle is tightly secured to the glass.	17				