



Data Communications and Networking


Fourth Edition

Chapter 4

Digital Transmission

Digital Transmission

- ❑ The Information needs to be converted to either a digital signal or an analog signal for transmission

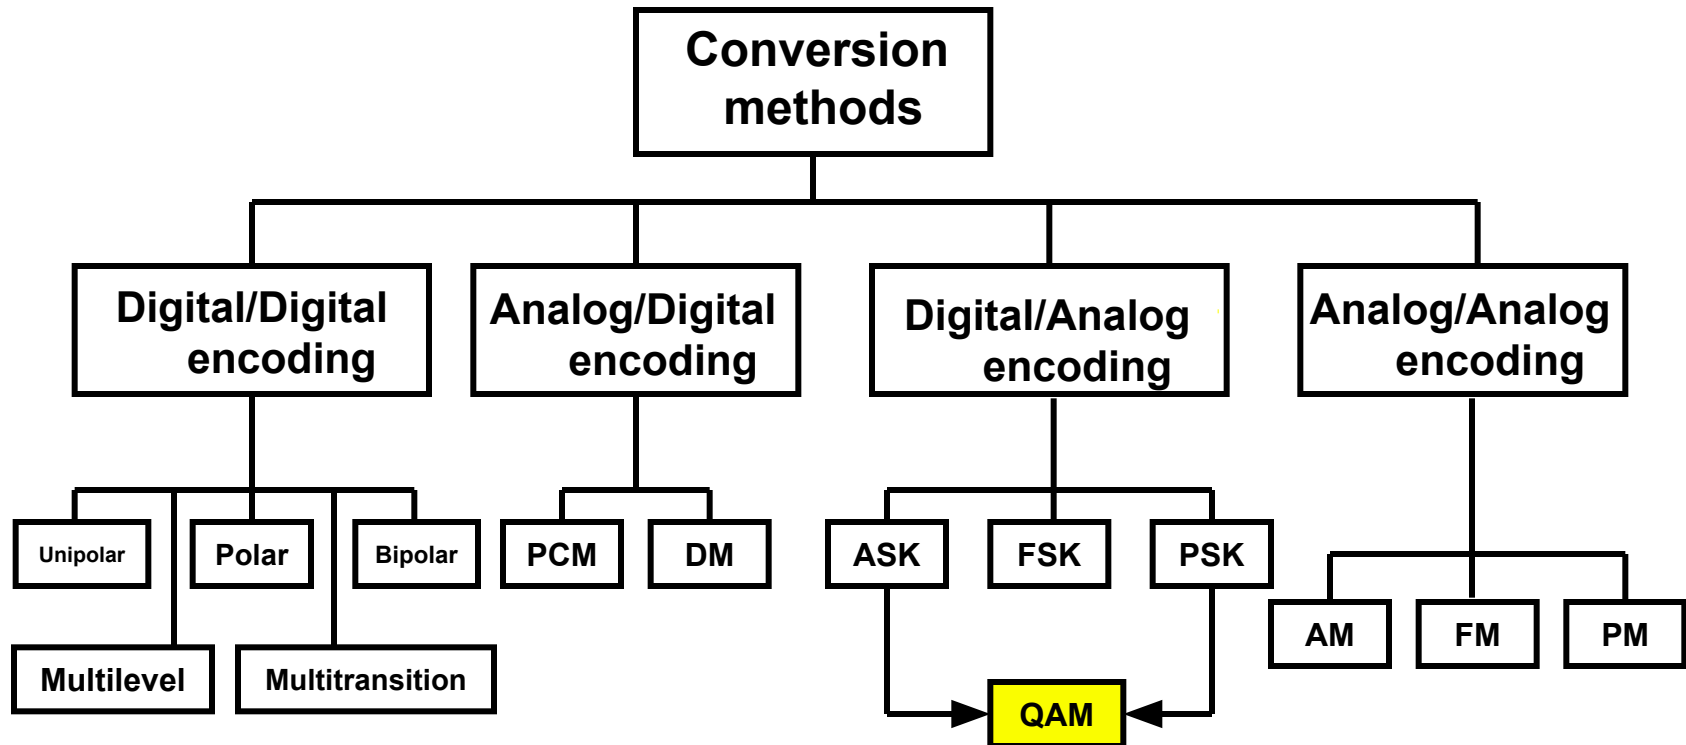

4.1 DIGITAL-TO-DIGITAL CONVERSION

In this section, we see how we can represent digital data by using digital signals. The conversion involves three techniques: **line coding**, **block coding**, and **scrambling**. Line coding is always needed; block coding and scrambling may or may not be needed.

Topics discussed in this section:

Line Coding

Line Coding Schemes


Block Coding

Scrambling

Digital-to-Digital Conversion

- Converts sequence of bits to a digital signal

Figure 4.1 *Line coding and decoding*

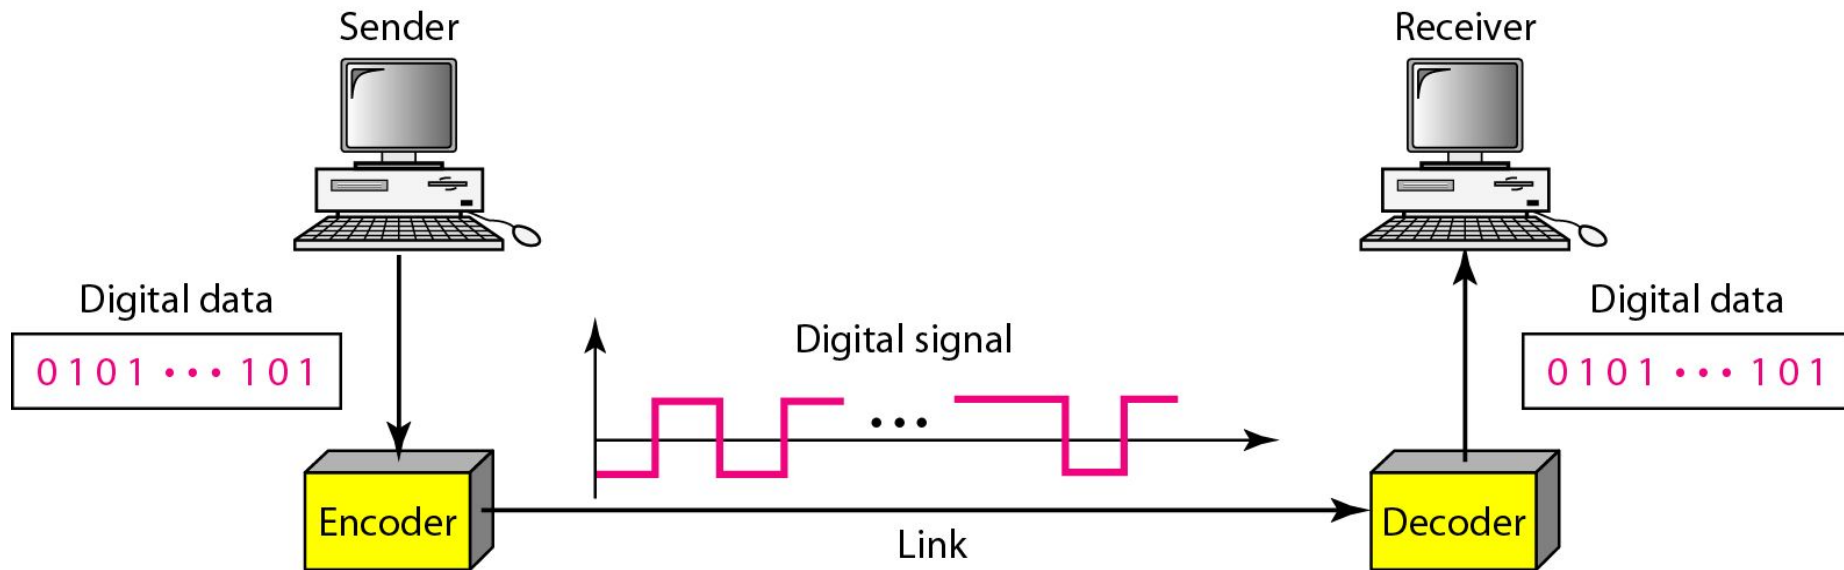

Characteristics of Line Coding


- ❑ **Signal element vs. data element**
- ❑ **Data rate vs. bit rate**
- ❑ **dc components**
- ❑ **Self-synchronization**

Data element versus Signal element


- ❑ **Data element – the smallest entity that can represent a piece of information : this is the bit.**
- ❑ **Signal element – carries data element. A signal element is the shortest unit of a digital signal.**
- ❑ **Data elements are being carried; signal elements are the carriers.**

Data element versus Signal element


Figure 4.2 *Signal element versus data element*

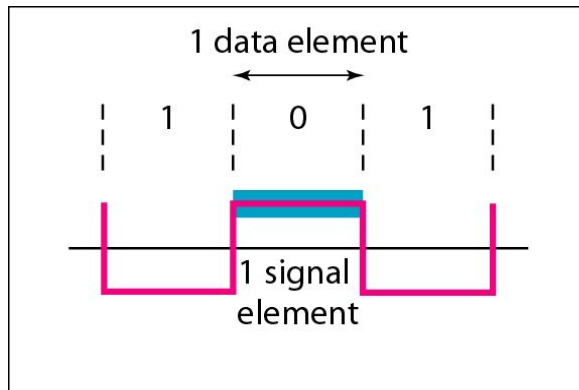


a. One data element per one signal element ($r = 1$)

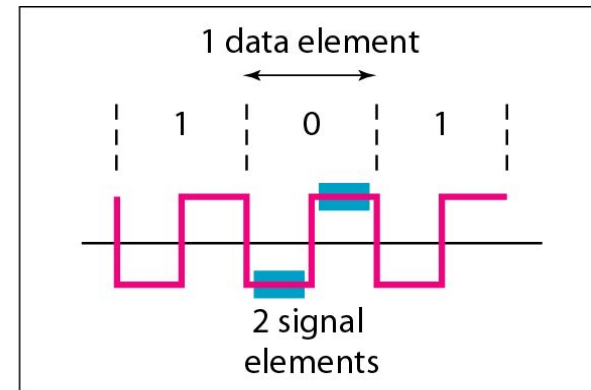

b. One data element per two signal elements ($r = \frac{1}{2}$)

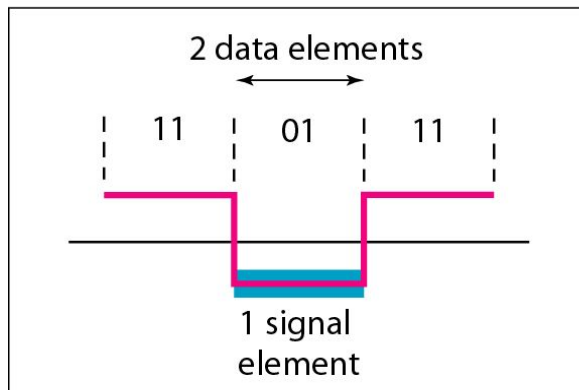

c. Two data elements per one signal element ($r = 2$)

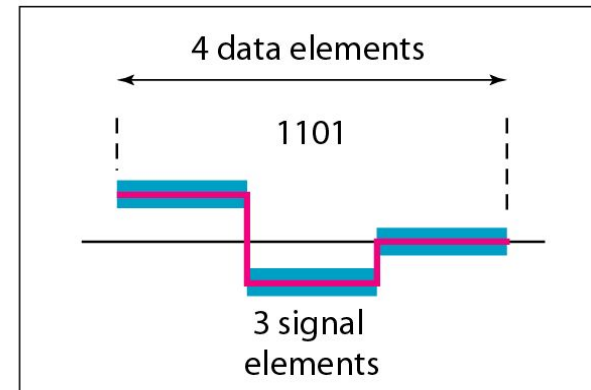

d. Four data elements per three signal elements ($r = \frac{4}{3}$)



Data Rate versus Signal Rate

- ❑ Data rate (bit rate) : the No. of data elements sent in 1s.(bps)
- ❑ Signal rate (pulse rate, modulation rate or baud rate) :
 - the number of signal elements sent in 1s.(baud)
- ❑ Relationship between Data rate Vs Signal rate

$$S = c \times N \times 1/r \text{ (baud)}$$

where S : No. of signal element, (baud)

c : case factor,

N : Data rate (bps),

r : No. of data elements carried by each signal element.

Data Rate versus Signal Rate

Example 4.1

A signal is carrying data in which one data element is encoded as one signal element ($r = 1$). If the bit rate is 100 kbps, what is the average value of the baud rate if c is between 0 and 1?

Solution

We assume that the average value of c is $1/2$. The baud rate is then

$$S = c \times N \times \frac{1}{r} = \frac{1}{2} \times 100,000 \times \frac{1}{1} = 50,000 = 50 \text{ kbaud}$$



DC Components


- ❑ When the voltage level in a digital signal is constant for a while, the spectrum creates very low frequencies.
 - These frequencies are around zero, called DC(direct current) components.
- ❑ Some systems (such as transformer) will not allow passage of DC component
- ❑ A telephone line cannot pass frequencies below 200Hz

Self-Synchronization


- ❑ Receiver's bit intervals must correspond exactly to the sender's bit intervals
- ❑ Self-synchronizing signal includes timing information
- ❑ If the receiver's clock is out of synchronization, these alerting points can reset the clock.

Self-Synchronization

Figure 4.3 *Effect of lack of synchronization*

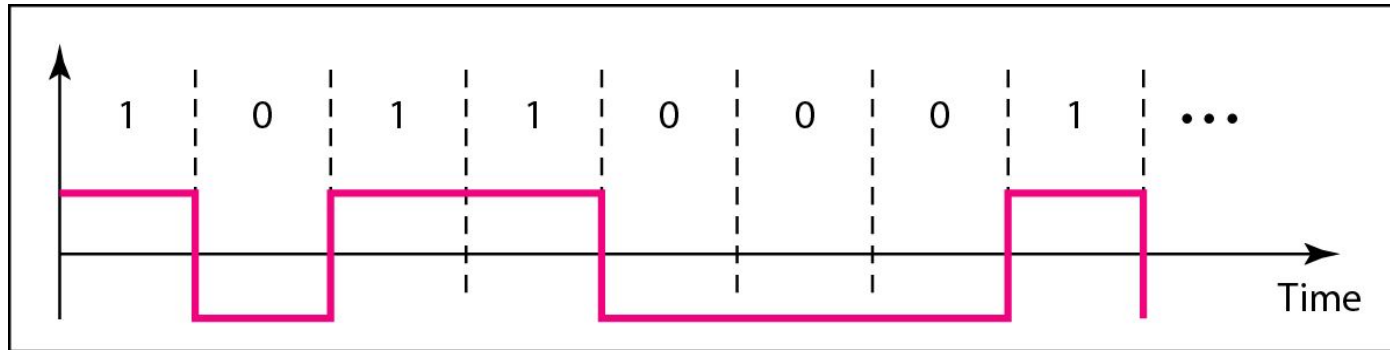

a. Sent

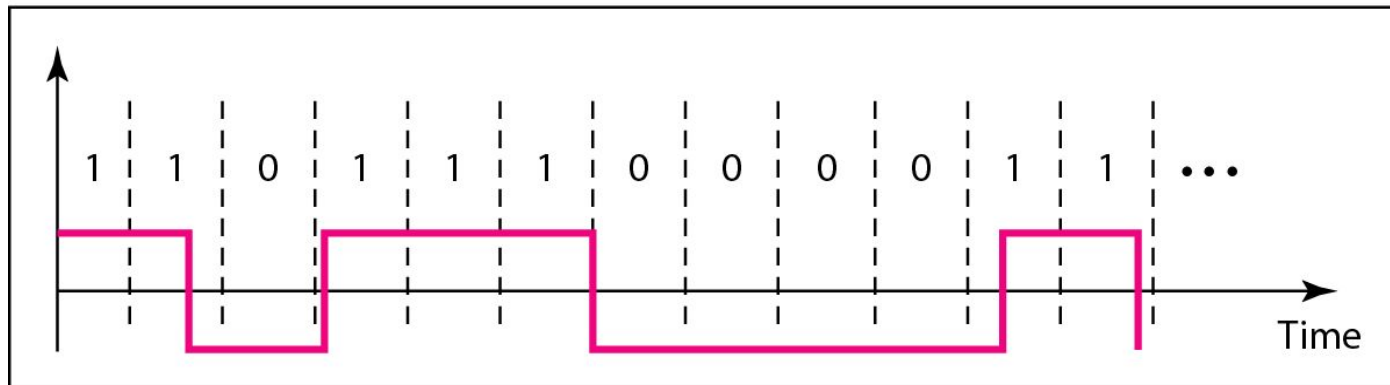

b. Received



Self-Synchronization

Example 4.3

In a digital transmission, the receiver clock is 0.1 percent faster than the sender clock. How many extra bits per second does the receiver receive if the data rate is 1 kbps? How many if the data rate is 1 Mbps?

Solution


At 1 kbps, the receiver receives 1001 bps instead of 1000 bps.

1000 bits sent	1001 bits received	1 extra bps
----------------	--------------------	-------------

At 1 Mbps, the receiver receives 1,001,000 bps instead of 1,000,000 bps.

1,000,000 bits sent	1,001,000 bits received	1000 extra bps
---------------------	-------------------------	----------------


Line Coding Schemes

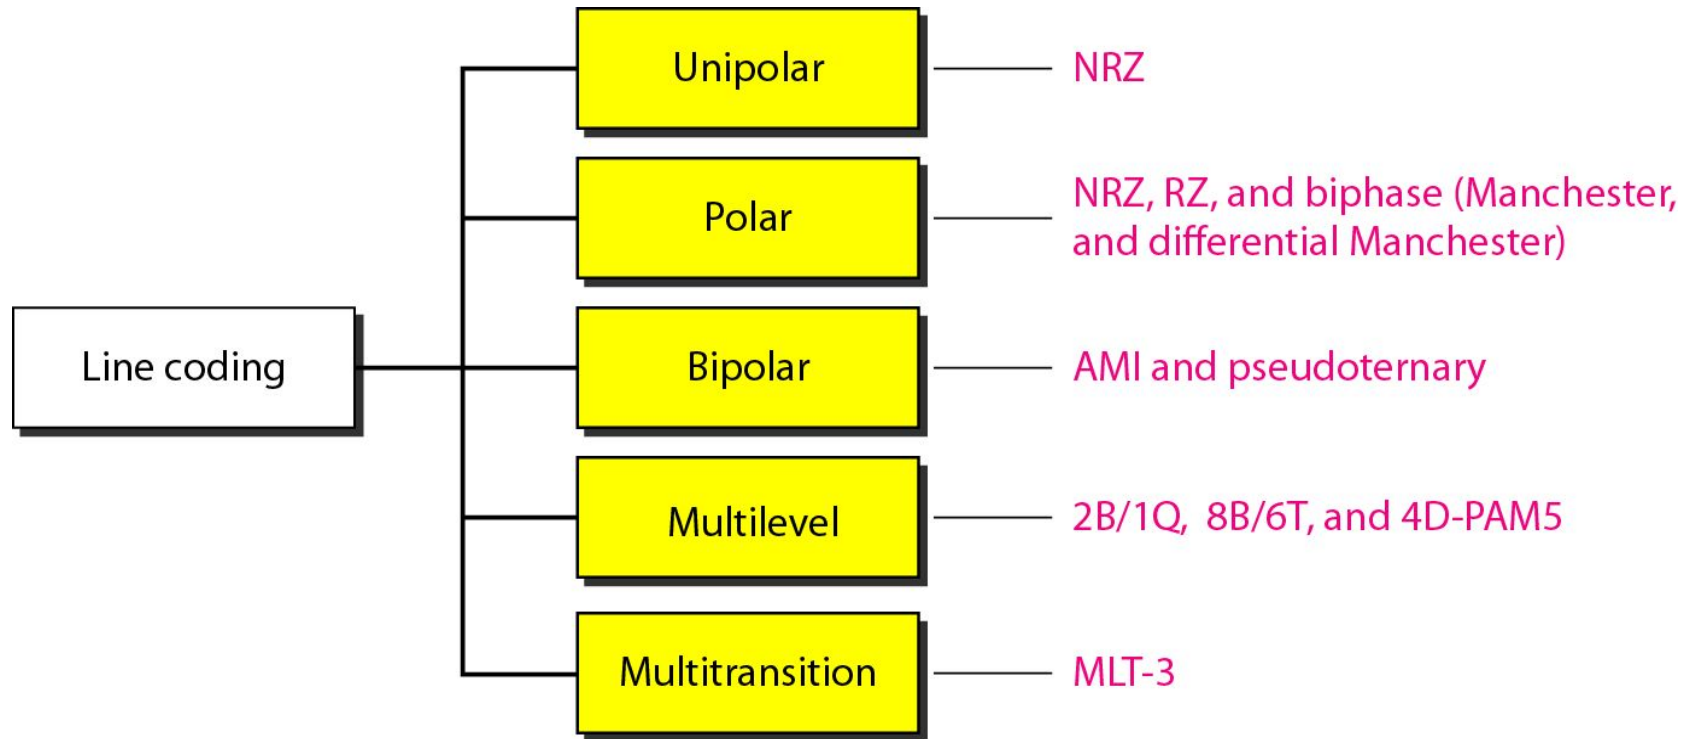

Line Coding Schemes

Figure 4.5 *Unipolar NRZ scheme*


□ Unipolar encoding uses only one voltage level.

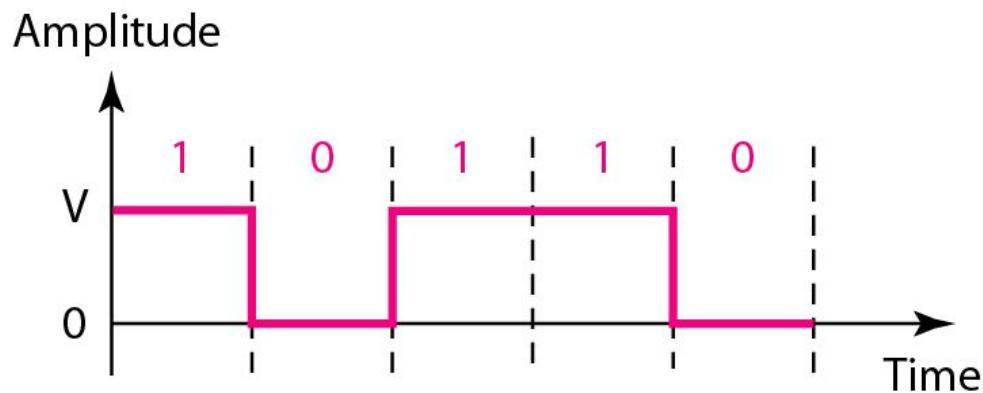

$$\frac{1}{2}V^2 + \frac{1}{2}(0)^2 = \frac{1}{2}V^2$$

Normalized power

Variations of Polar Schemes

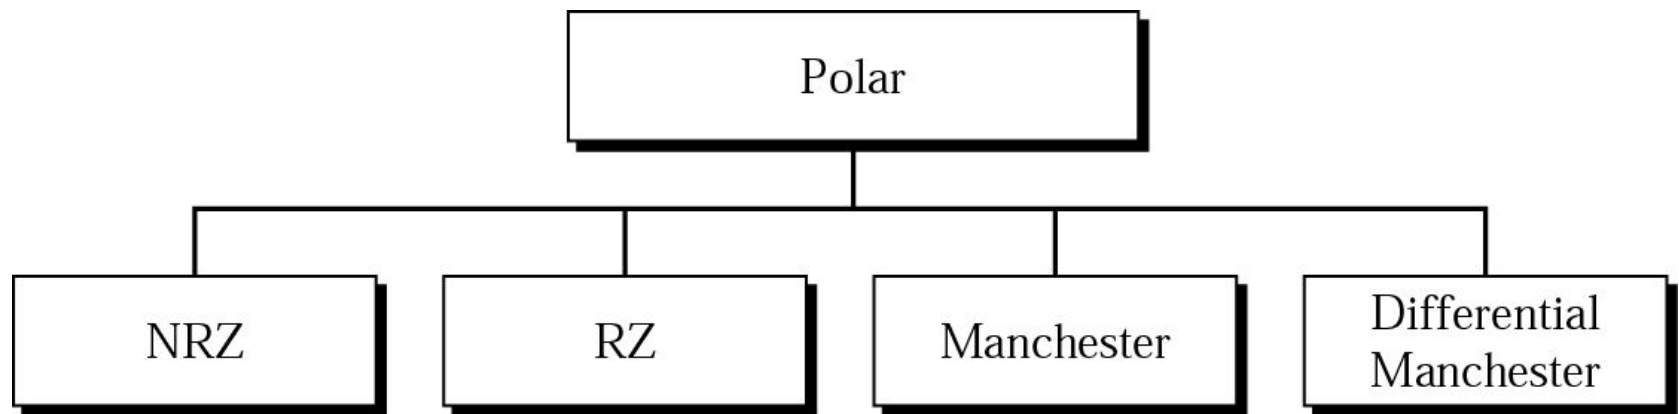


Polar Schemes

- ❑ **Polar encoding uses two voltage levels (positive and negative).**

NRZ-L and NRZ-I


- ❑ In Non-return to Zero-level (NRZ-L) the level of the signal is dependent upon the state of the bit.
- ❑ In Non-return to Zero-Invert (NRZ-I) the signal is inverted if a 1 is encountered.

Figure 4.6 *Polar NRZ-L and NRZ-I schemes*

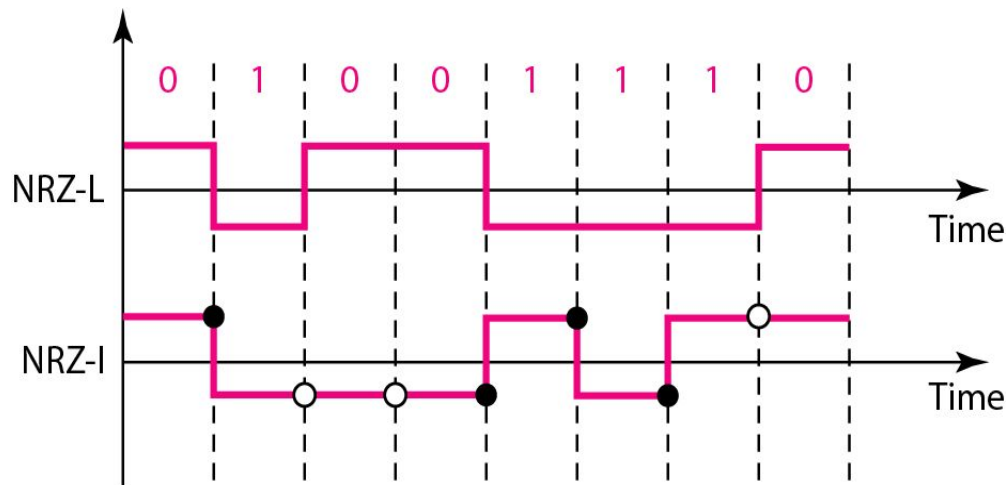

○ No inversion: Next bit is 0 ● Inversion: Next bit is 1


r : average baud rate
 s : signal rate

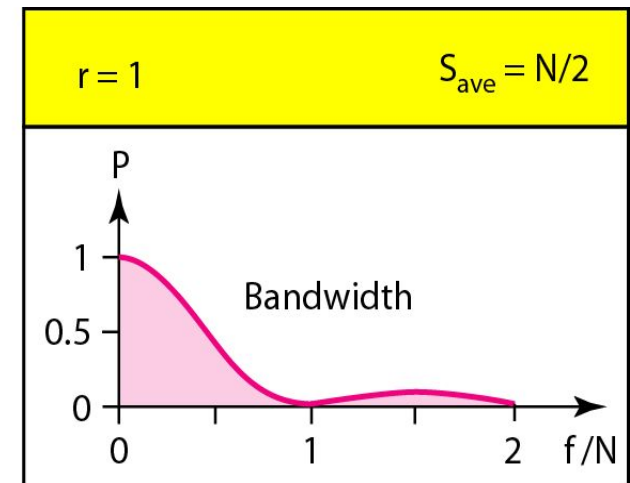

Note


In NRZ-L the level of the voltage determines the value of the bit.

**In NRZ-I the inversion
or the lack of inversion
determines the value of the bit.**

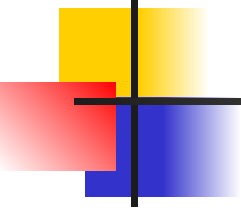

Note

**NRZ-L and NRZ-I both have an average
signal rate of $N/2$ Bd.**

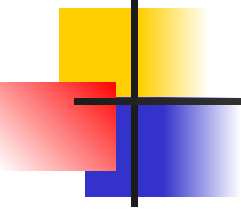

Note

NRZ-L and NRZ-I both have a DC component problem.



Example 4.4


A system is using NRZ-I to transfer 1 Mbps data. What are the average signal rate and minimum bandwidth?

Solution

The average signal rate is $S = N/2 = 500$ kbaud. The minimum bandwidth for this average baud rate is $B_{\min} = S = 500$ kHz.

RZ (Return-to-zero)



Figure 4.7 *Polar RZ scheme*

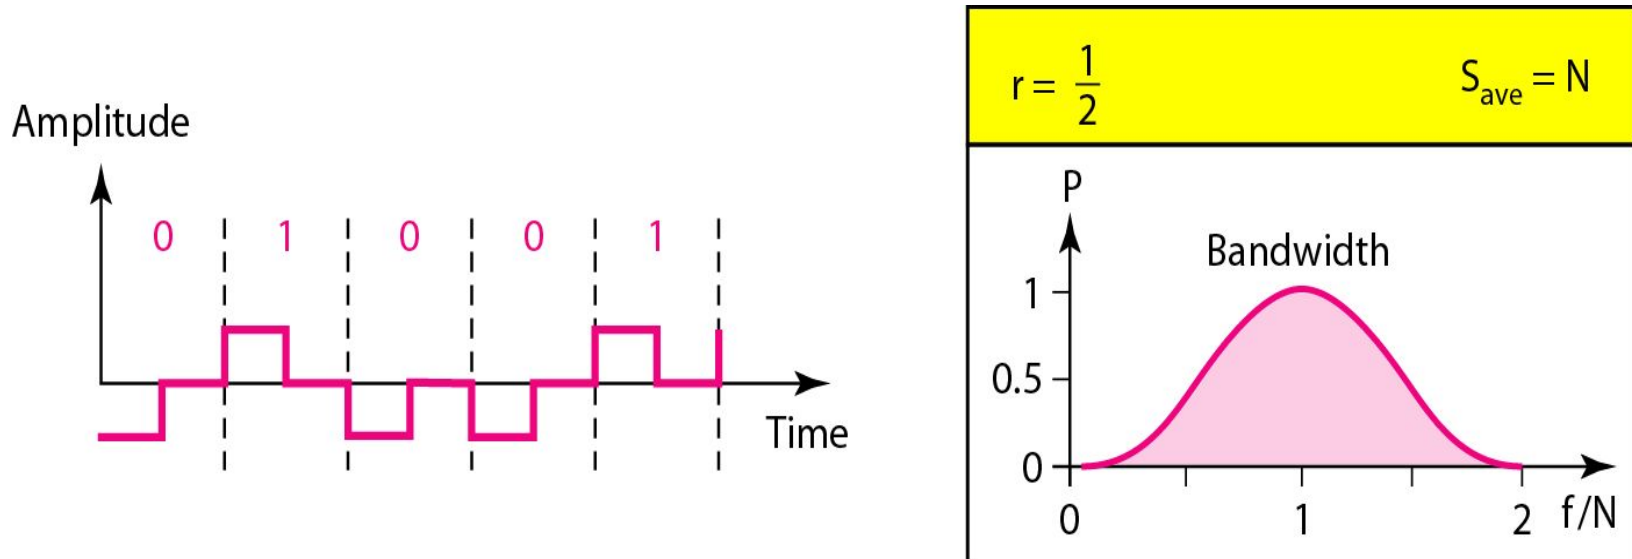

A good encoded digital signal must contain a provision for synchronization.

Biphase: Manchester & Differential Manchester

Figure 4.8 *Polar biphase: Manchester and differential Manchester schemes*

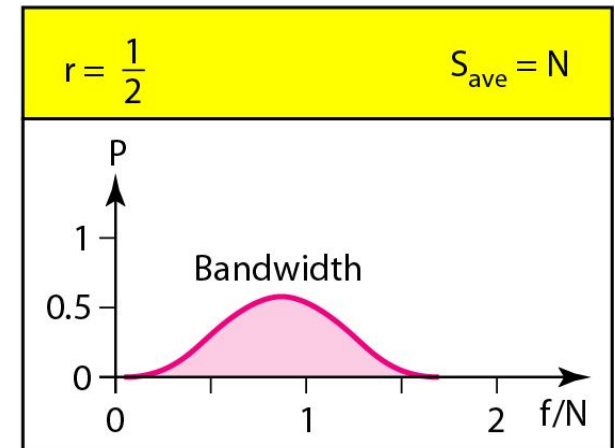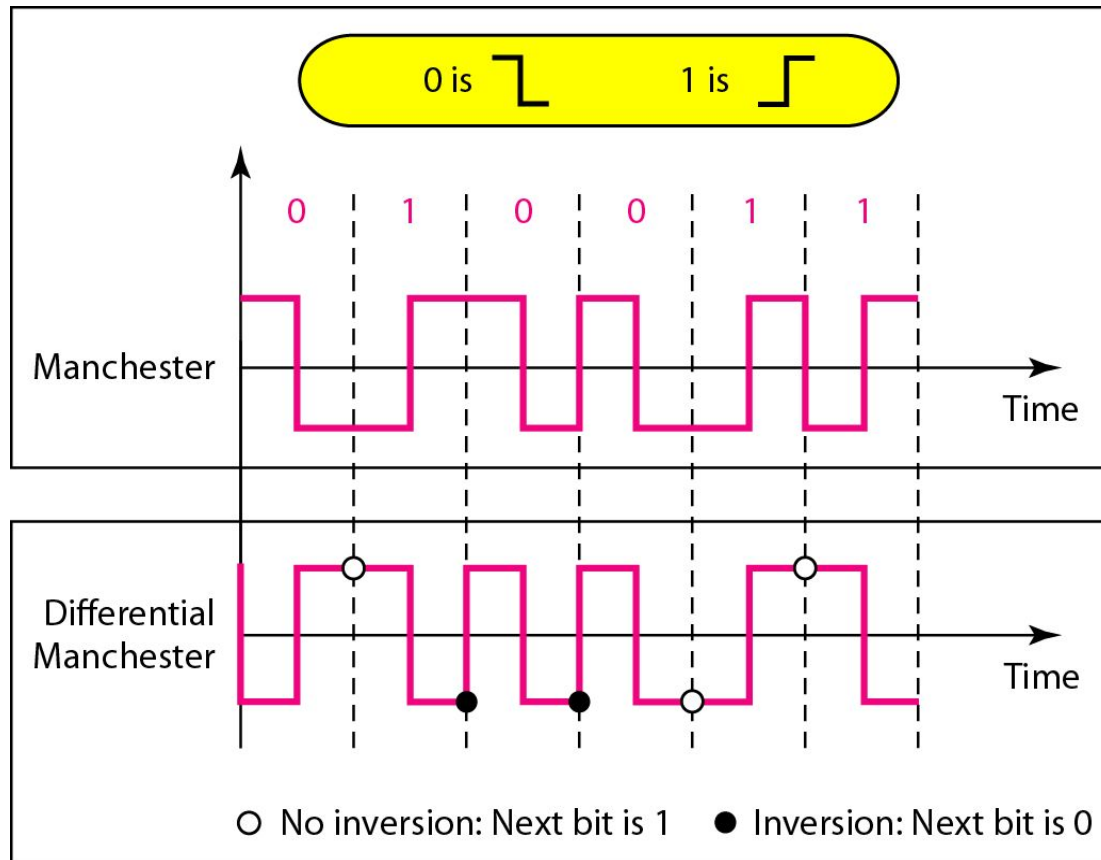



Biphase: Manchester & Differential Manchester

In Manchester and differential Manchester encoding, the transition at the middle of the bit is used for synchronization.

The minimum bandwidth of Manchester and differential Manchester is 2 times that of NRZ.

Bipolar Schemes

- ❑ In bipolar encoding, we use three levels:
 - positive, zero, and negative.
- ❑ ***Bipolar schemes: AMI and pseudoternary***

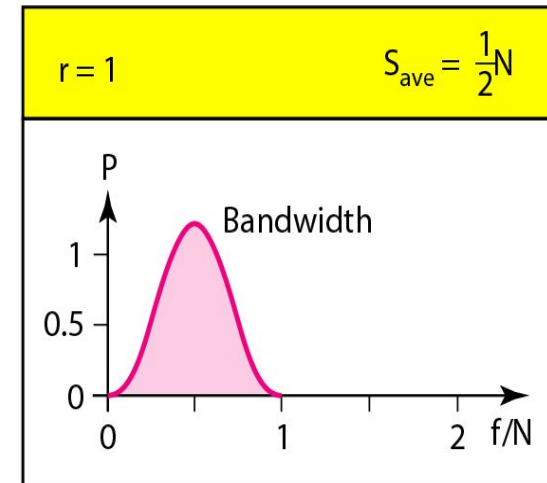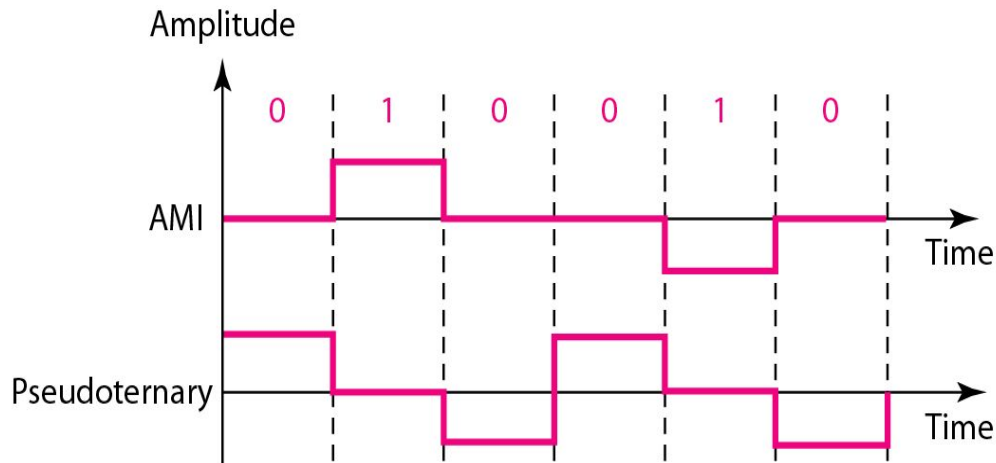

Summary of Line Coding Schemes

<i>Category</i>	<i>Scheme</i>	<i>Bandwidth (average)</i>	<i>Characteristics</i>
Unipolar	NRZ	$B = N/2$	Costly, no self-synchronization if long 0s or 1s, DC
Unipolar	NRZ-L	$B = N/2$	No self-synchronization if long 0s or 1s, DC
	NRZ-I	$B = N/2$	No self-synchronization for long 0s, DC
	Biphase	$B = N$	Self-synchronization, no DC, high bandwidth
Bipolar	AMI	$B = N/2$	No self-synchronization for long 0s, DC
Multilevel	2B1Q	$B = N/4$	No self-synchronization for long same double bits
	8B6T	$B = 3N/4$	Self-synchronization, no DC
	4D-PAM5	$B = N/8$	Self-synchronization, no DC
Multiline	MLT-3	$B = N/3$	No self-synchronization for long 0s



4.2 ANALOG-TO-DIGITAL CONVERSION

We have seen in Chapter 3 that a digital signal is superior to an analog signal. The tendency today is to change an analog signal to digital data. In this section we describe two techniques, **pulse code modulation** and **delta modulation**.

Topics discussed in this section:


Pulse Code Modulation (PCM)

Delta Modulation (DM)

Pulse Code Modulation (PCM)

- ❑ To change an analog signal to digital data (digitization) is called Pulse Code Modulation (PCM)

Figure 4.21 *Components of PCM encoder*

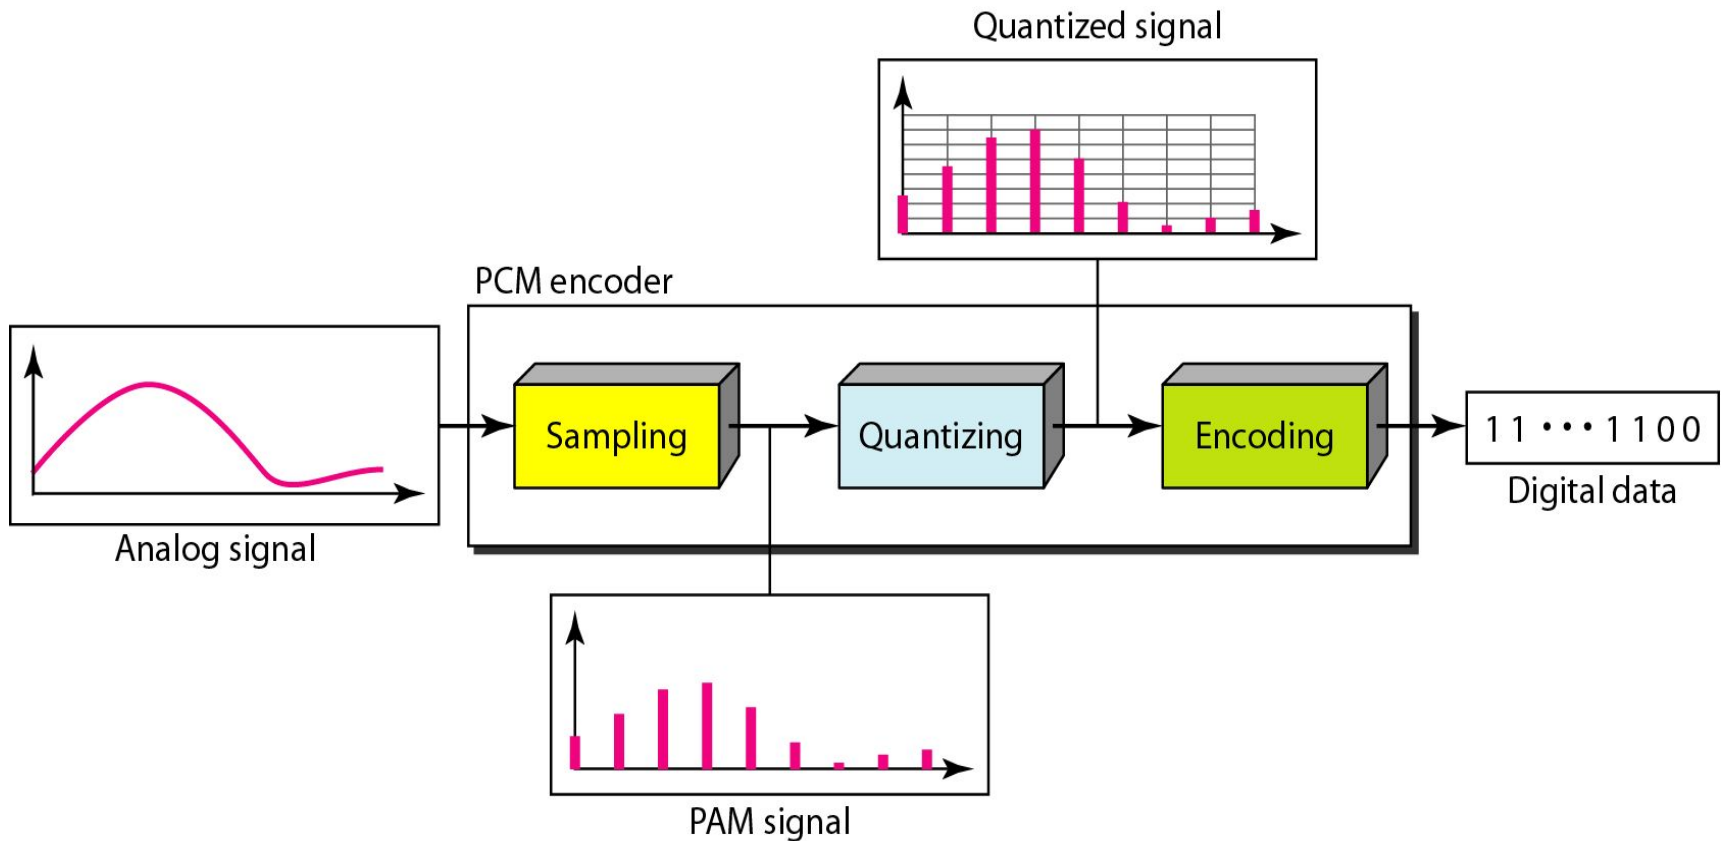


Sampling

- ❑ Pulse amplitude modulation has some applications, but it is not used by itself in data communication. However, it is the first step in another very popular conversion method called pulse code modulation.


- Term *sampling* means measuring the amplitude of the signal at equal intervals.

Sampling (cont'd)


Figure 4.22 *Three different sampling methods for PCM*

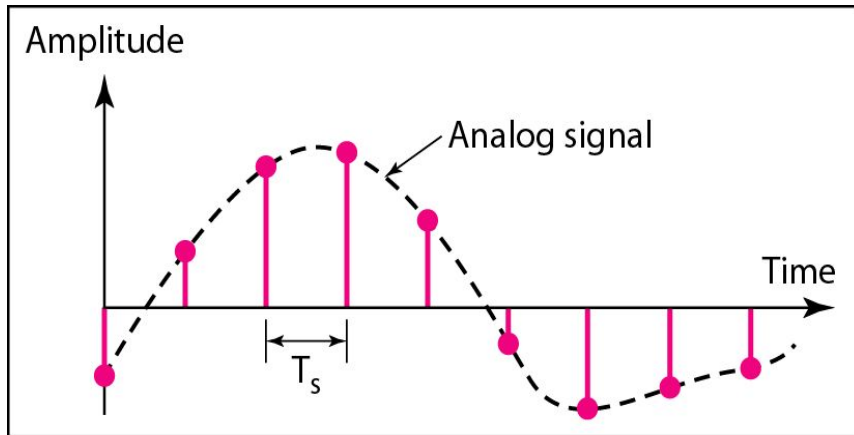

a. Ideal sampling

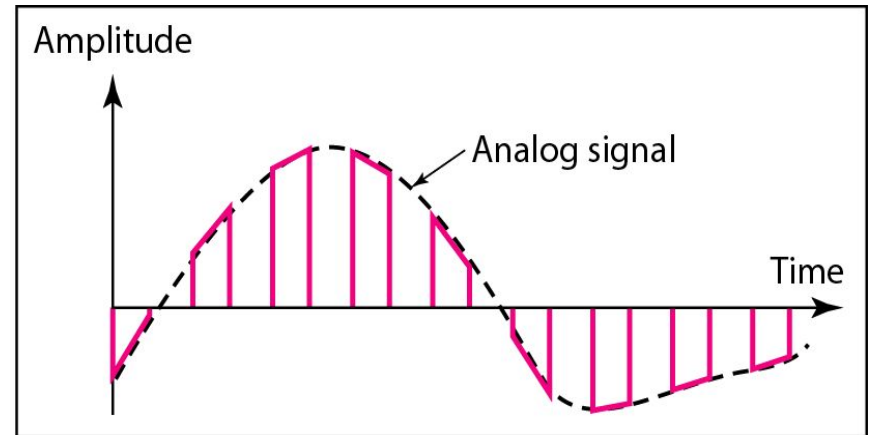

b. Natural sampling

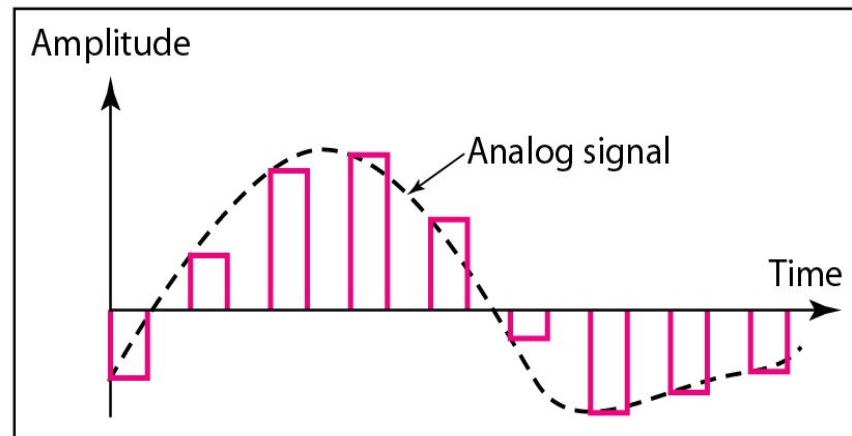

c. Flat-top sampling


Sampling (cont'd)

Note

According to the Nyquist theorem, the sampling rate must be at least 2 times the highest frequency contained in the signal.

Sampling (cont'd)

Figure 4.23 *Nyquist sampling rate for low-pass and bandpass signals*

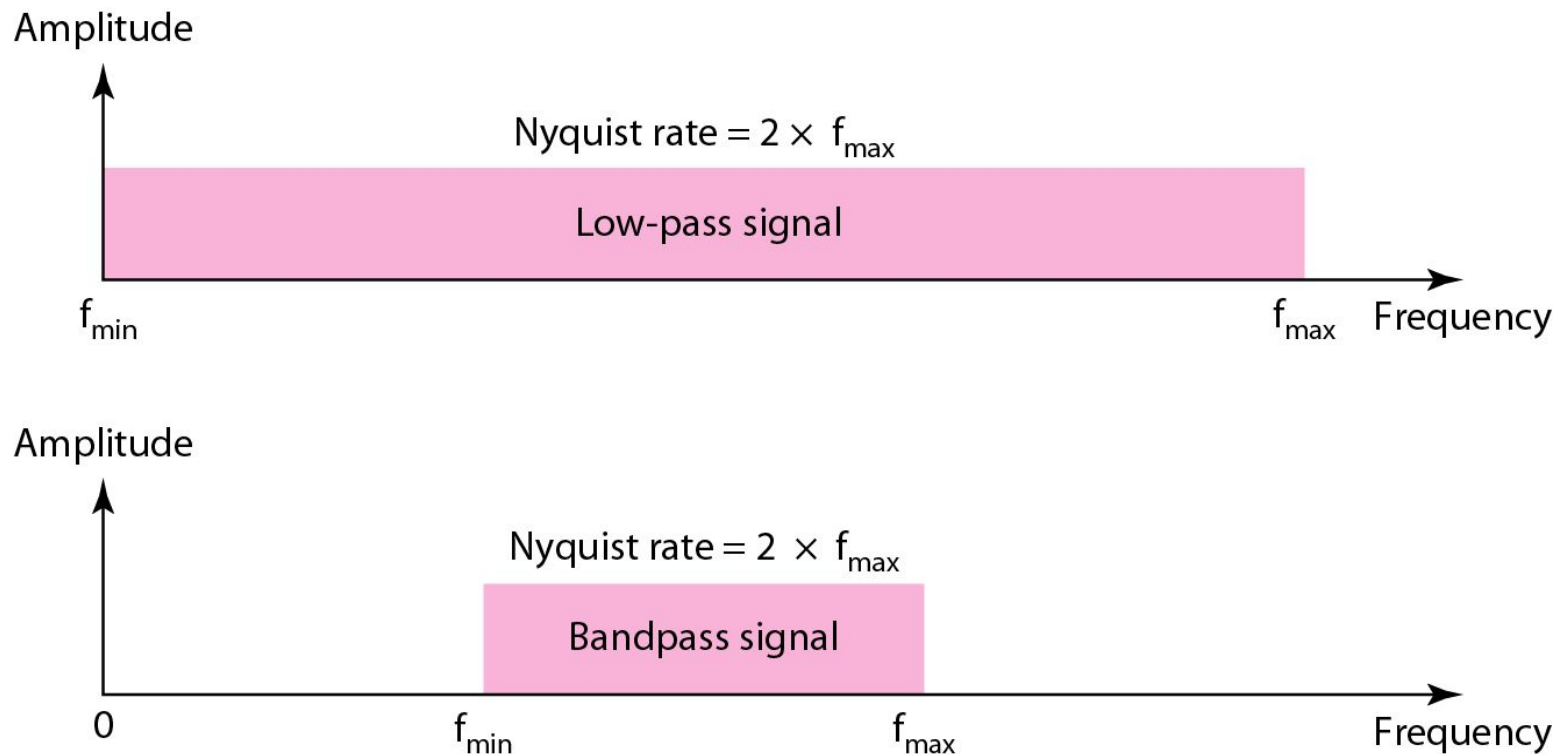

Sampling (cont'd)


Example 4.6

For an intuitive example of the Nyquist theorem, let us sample a simple sine wave at three sampling rates: $f_s = 4f$ (2 times the Nyquist rate), $f_s = 2f$ (Nyquist rate), and $f_s = f$ (one-half the Nyquist rate). Figure 4.24 shows the sampling and the subsequent recovery of the signal.


It can be seen that sampling at the Nyquist rate can create a good approximation of the original sine wave (part a). Oversampling in part b can also create the same approximation, but it is redundant and unnecessary. Sampling below the Nyquist rate (part c) does not produce a signal that looks like the original sine wave.

Sampling (cont'd)


Figure 4.24 *Recovery of a sampled sine wave for different sampling rates*

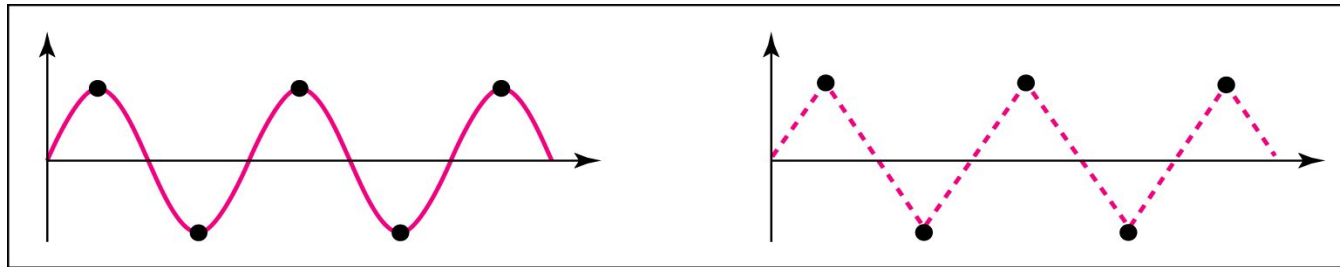

a. Nyquist rate sampling: $f_s = 2f$

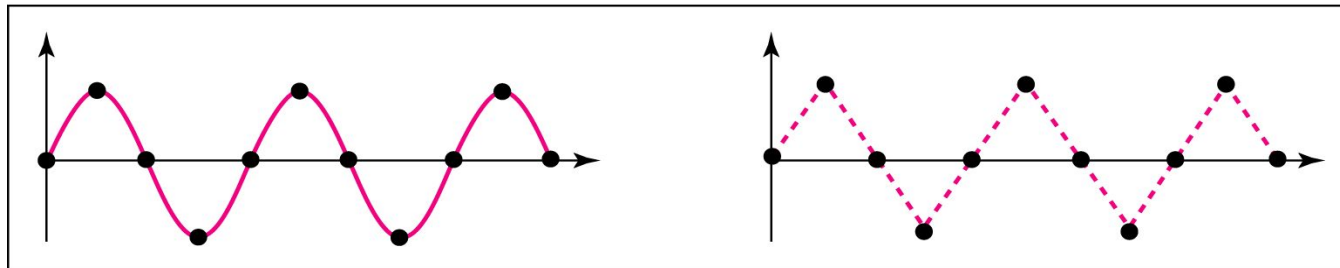

b. Oversampling: $f_s = 4f$

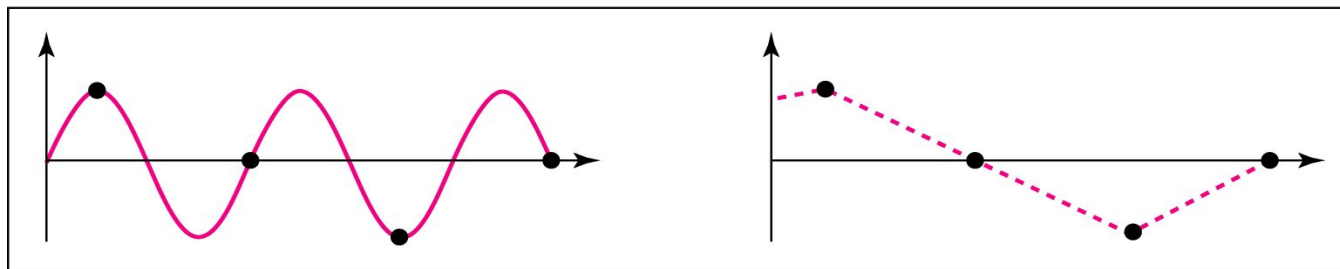

c. Undersampling: $f_s = f$



Sampling (cont'd)

Example 4.9

Telephone companies digitize voice by assuming a maximum frequency of 4000 Hz. The sampling rate therefore is 8000 samples per second.

Quantization

- ❑ The result of sampling is a series of pulses with amplitude values between the max. and min. amplitudes of the signal.
- ❑ These values cannot be used in the encoding process.
- ❑ The following are the steps in quantization:
 - Assume the original analog signal has instantaneous amplitudes between $V_{\min}$ and $V_{\max}$.
 - Divide the range into L zones, each of height Δ (delta)
$$\Delta = (V_{\max} - V_{\min}) / L$$
 - Assign quantized values of 0 to $L-1$ to the midpoint of each zone
 - Approximate the value of the sample amplitude to the quantized values.


❑ Quantization Error

$$\text{SNR}_{\text{dB}} = 6.02n_b + 1.76 \text{ dB}$$

N_b : bits per sample

Quantization (cont'd)

Figure 4.26 *Quantization and encoding of a sampled signal*

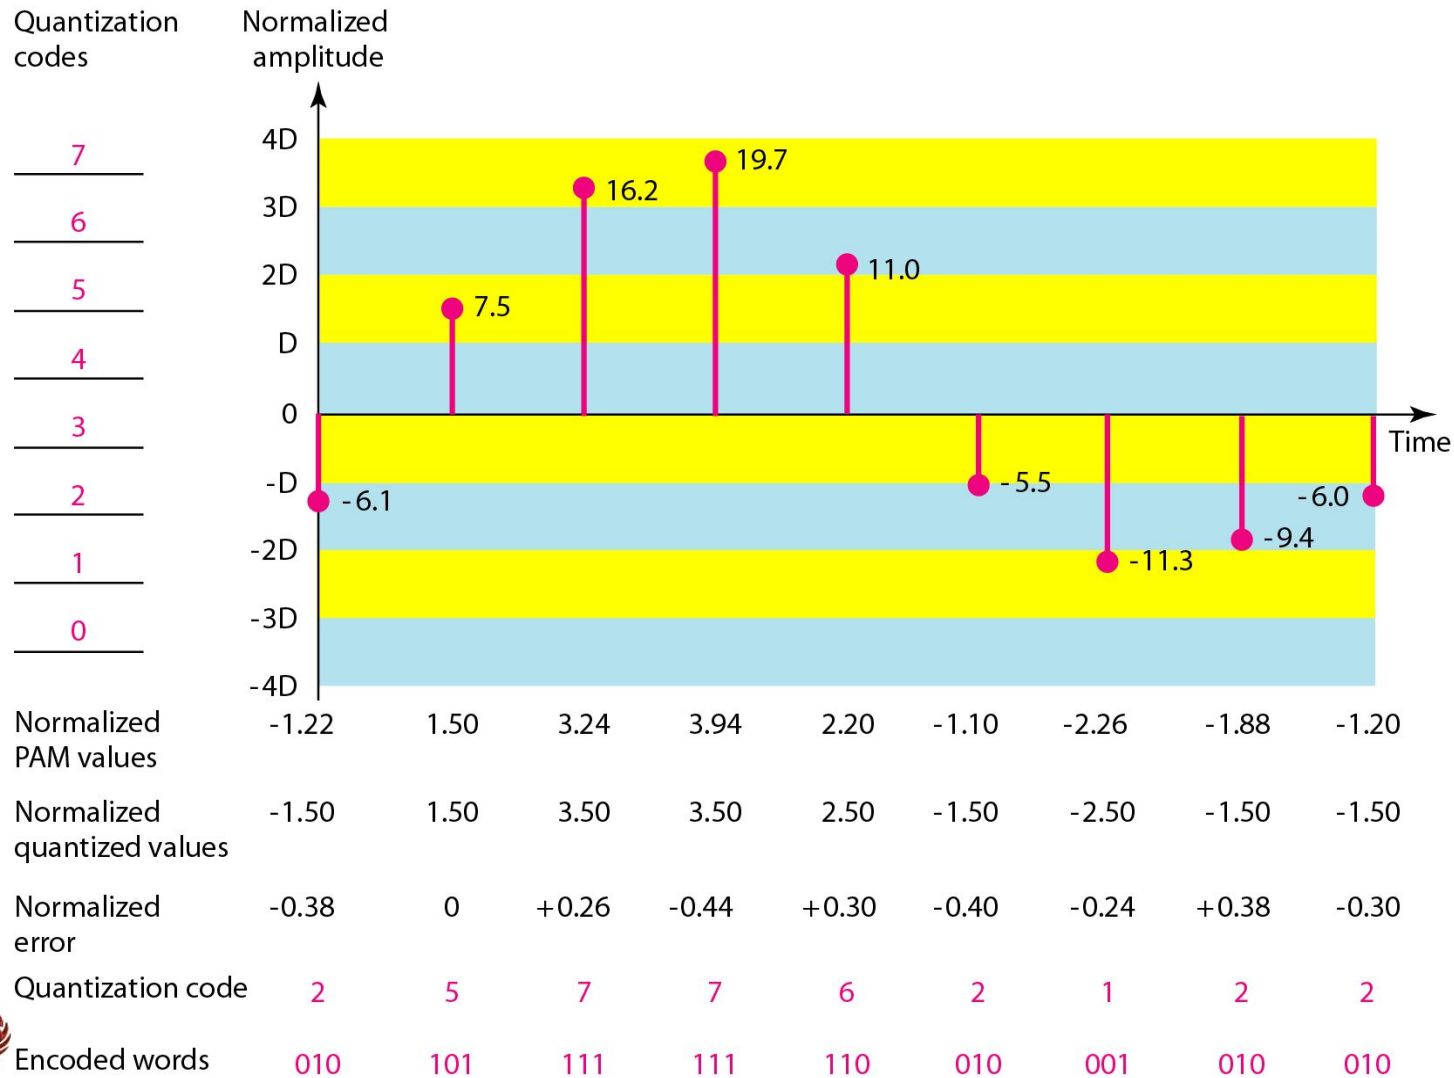

Quantization (cont'd)

Example 4.13

A telephone subscriber line must have an SNR_{dB} above 40. What is the minimum number of bits per sample?

Solution

We can calculate the number of bits as

$$\text{SNR}_{\text{dB}} = 6.02n_b + 1.76 = 40 \quad \rightarrow \quad n = 6.35$$

Telephone companies usually assign 7 or 8 bits per sample.

Encoding

- ❑ The last step in PCM is encoding.
- ❑ After each sample is quantized and the number of bits per sample is decided, each sample can be changed to an n_b -bit code word.
- ❑ Bit Rate Formula
 - Bit rate = sampling rate x number of bits per sample = $f_s \times n_b$
 - Where No. of quantization level : L , No. of bits (n_b) = $\log_2 L$

Encoding (cont'd)

Example 4.14

We want to digitize the human voice. What is the bit rate, assuming 8 bits per sample?


Solution

The human voice normally contains frequencies from 0 to 4000 Hz. So the sampling rate and bit rate are calculated as follows:

$$\begin{aligned}\text{Sampling rate} &= 4000 \times 2 = 8000 \text{ samples/s} \\ \text{Bit rate} &= 8000 \times 8 = 64,000 \text{ bps} = 64 \text{ kbps}\end{aligned}$$

Original Signal Recovery


Figure 4.27 *Components of a PCM decoder*

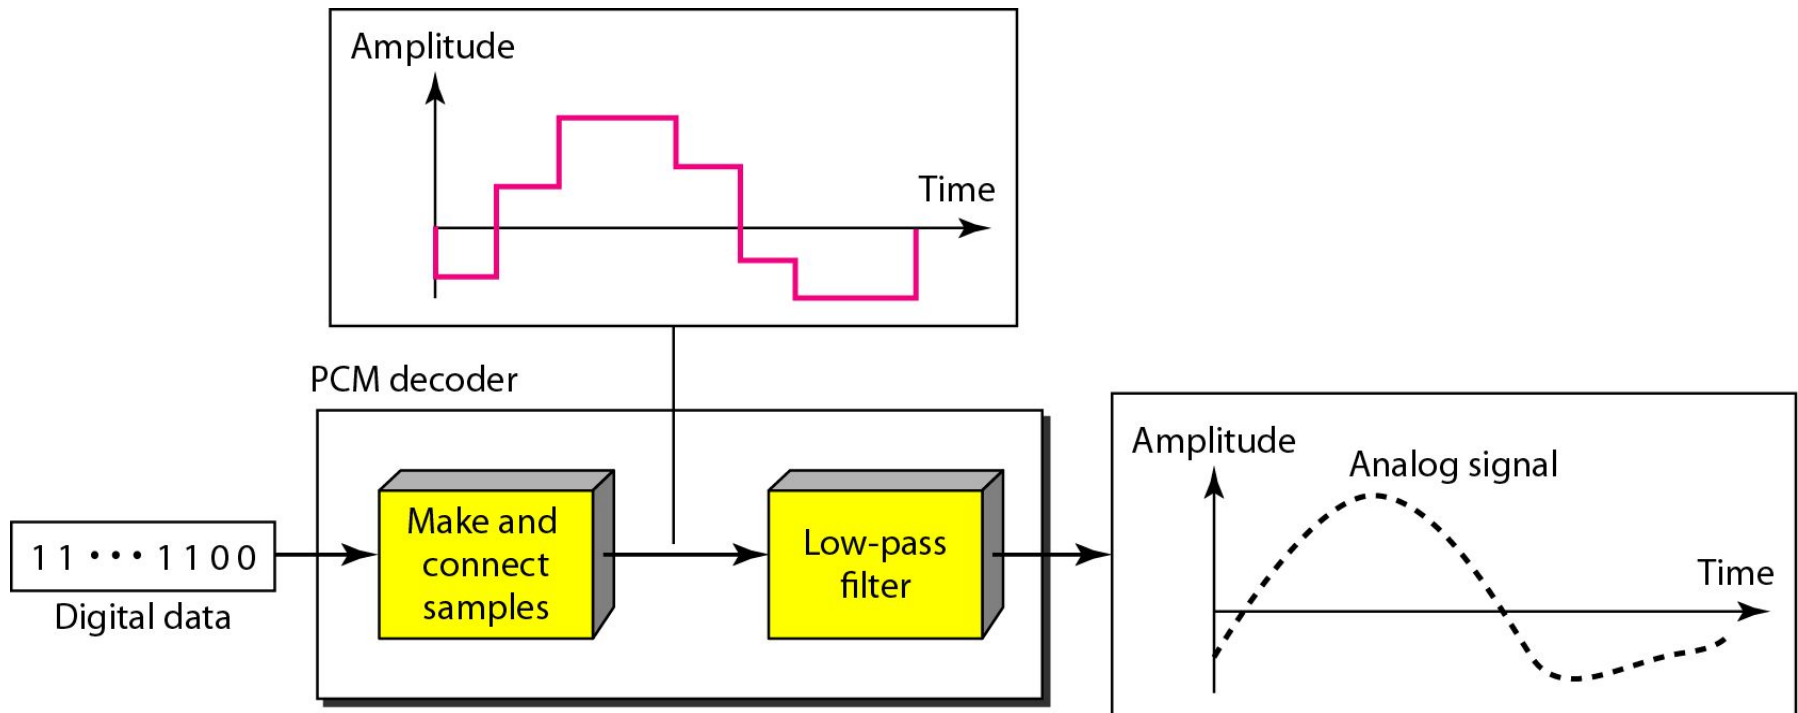

Delta Modulation


- ❑ Delta Modulation (DM) techniques have been developed to reduce the complexity of PCM.
- ❑ PCM finds the value of the signal amplitude for each sample; DM finds the change from the previous sample.

Figure 4.28 *The process of delta modulation*

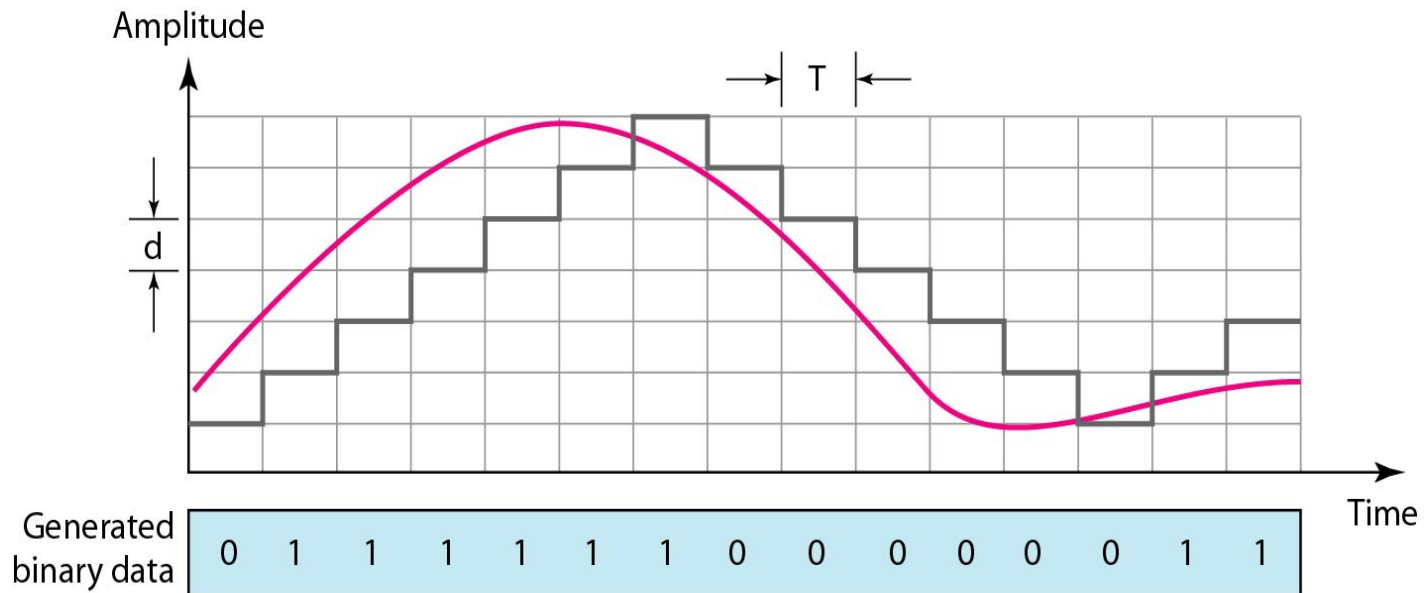

Delta Modulation (cont'd)

Figure 4.29 *Delta modulation components*

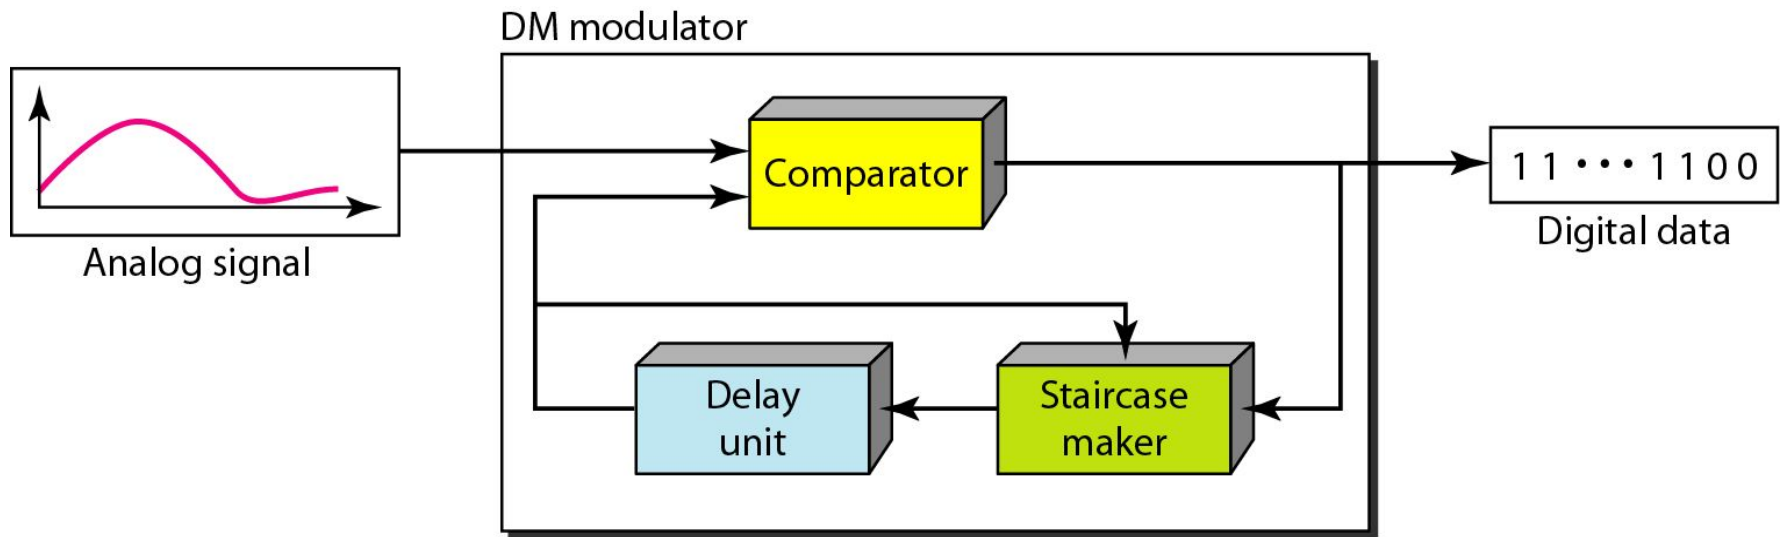

Delta Modulation (cont'd)

Figure 4.30 *Delta demodulation components*

