Heat transfer per Area $\frac{W}{m^2}$ $\sigma = 5.67 \times 10^{-8}$

$$\dot{Q} = \frac{\dot{Q}}{A} = \frac{\sigma(T_1^4 - T_2^4)}{\frac{1}{\epsilon_1} + \frac{1}{\epsilon_2} - 1} = \frac{\dot{Q}}{A} = 5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1} = 3625.4 \frac{W}{m^2}$$

how many shields with ε = 0.1 should you add in order to have the new heat transfer rate to be 1% of the case without shields?

In the case with only one shield

$$\frac{1}{\epsilon_1} + \frac{1}{\epsilon_2} - 1 \rightarrow \epsilon_1 = \epsilon_2 = 0.1 \rightarrow 0$$

$$\frac{\dot{Q}}{A} = 5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 19} = 805.63 \frac{W}{m^2}$$

In order to lower the heat transfer rate in 1% $\rightarrow \epsilon = 0.1 \rightarrow \dot{Q} = 36.25$

Net radiation heat transfer in an encloseure with two superfaces:

$$\dot{Q} = \frac{\dot{Q}}{A} = \frac{\sigma(T_1^4 - T_2^4)}{(N+1)(\frac{1}{\epsilon_1} + \frac{1}{\epsilon_2} - 1)}$$

$$\varepsilon = 0.1 \to with \ 5 \ shields \ \to (5 + 1) * 19 = 114$$

$$\begin{split} \epsilon &= 0.1 \rightarrow \textit{with 5 shields} \ \rightarrow (5+1)*19 = 114 \\ 5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 114} = \frac{19680.57}{5.428 + 114} = 164.79 \frac{\textit{W}}{\textit{m}^2} \rightarrow \textit{not enough}. \end{split}$$

$$\epsilon = 0.1 \to with \ 10 \ shields \ \to (10 + 1) * 19 = 209$$

$$5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 209} = \frac{19680.57}{5.428 + 209} = 91.78 \frac{W}{m^2} \rightarrow not \ enough.$$

$$\varepsilon = 0.1 \to with \ 15 \ shields \ \to (15 + 1) * 19 = 304$$

$$5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 304} = \frac{19680.57}{5.428 + 304} = 63.60 \frac{W}{m^2} \rightarrow not \ enough.$$

$$\varepsilon = 0.1 \to with \ 20 \ shields \ \to (20 + 1) * 19 = 399$$

$$5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 399} = \frac{19680.57}{5.428 + 399} = 48.662 \frac{W}{m^2} \rightarrow not \ enough.$$

$$\varepsilon = 0.1 \rightarrow with \ 25 \ shields \rightarrow (25 + 1) * 19 = 494$$

$$5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 494} = \frac{19680.57}{5.428 + 494} = 39.406 \frac{W}{m^2} \rightarrow not \ enough.$$

$$\epsilon = 0.1 \rightarrow with \ 26 \ shields \rightarrow (26+1)*19 = 513$$

$$5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 513} = \frac{19680.57}{5.428 + 513} = 37.962 \frac{W}{m^2} \rightarrow not \ enough.$$

$$\epsilon = 0.1 \rightarrow with \ 27 \ shields \rightarrow (27 + 1) * 19 = 532$$


$$5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 532} = \frac{19680.57}{5.428 + 532} = 36.61 \implies almost..$$

$$\varepsilon = 0.1 \to with \ 28 \ shields \ \to (28 + 1) * 19 = 551$$

$$5.67 \times 10^{-8} \frac{800^4 - 500^4}{\frac{1}{0.2} + \frac{1}{0.7} - 1 + 551} = \frac{19680.57}{5.428 + 551} = 35.36 \implies not \ enough.$$


In order to lower the heat transfer rate in 1% we need 28 shields.

What do we do first:

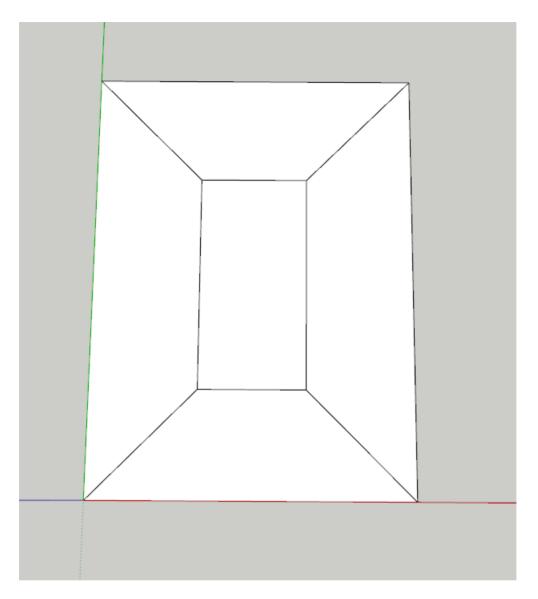


draw a rectangle 40×30 m and then offset 10 m rectangle inside it Finally connect the edges with 4 lines

Don't save it as a skp file - save it as an open studio file: .osm in the end of the file name. Or save opensudio model.

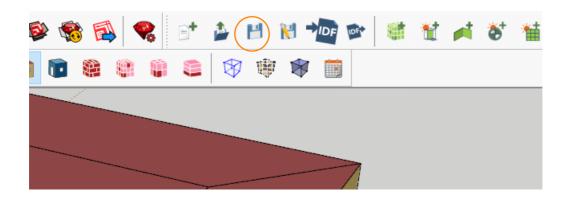



Once you made the diagram, select all of it and then click on: "create spaces from diagram"

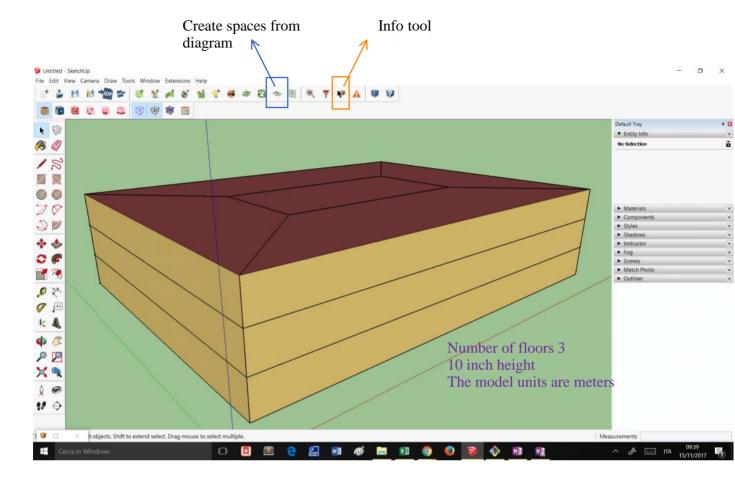


Once you created the building you can use info tool to see the properties of each surface, and you will see that the boundary conditions have been automatically assigned.

Doing surface matching:

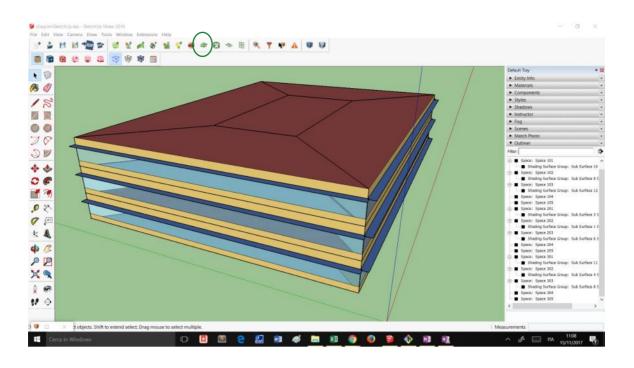


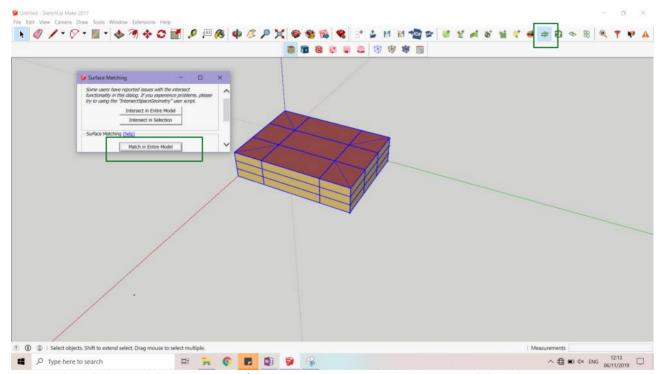


Choose the whole model \rightarrow Choose surface matching \rightarrow match the entire model \rightarrow ok

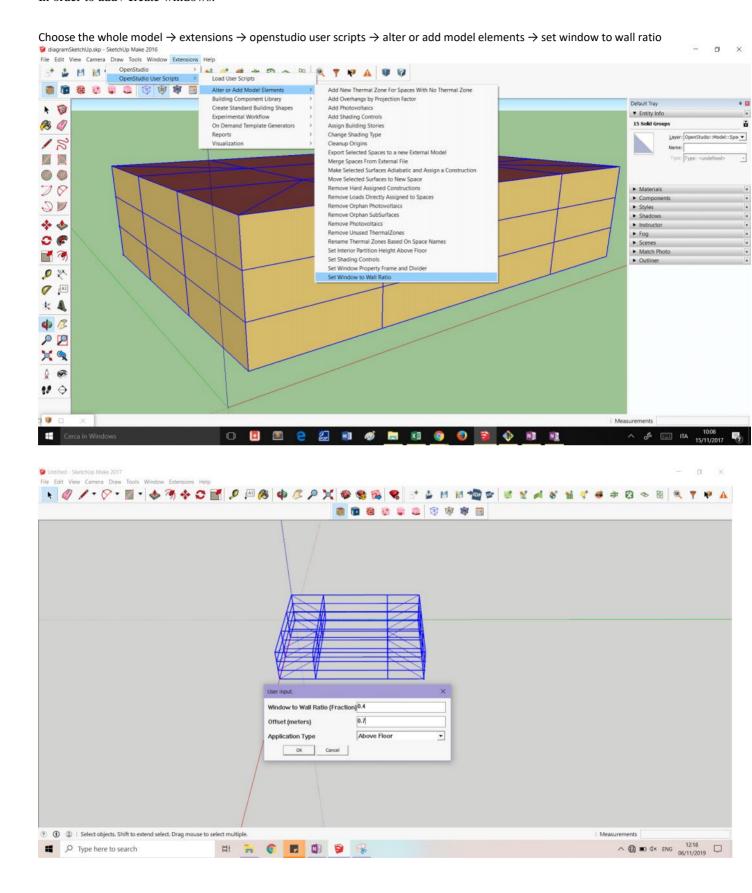


Choose all of the surfaces except the north:

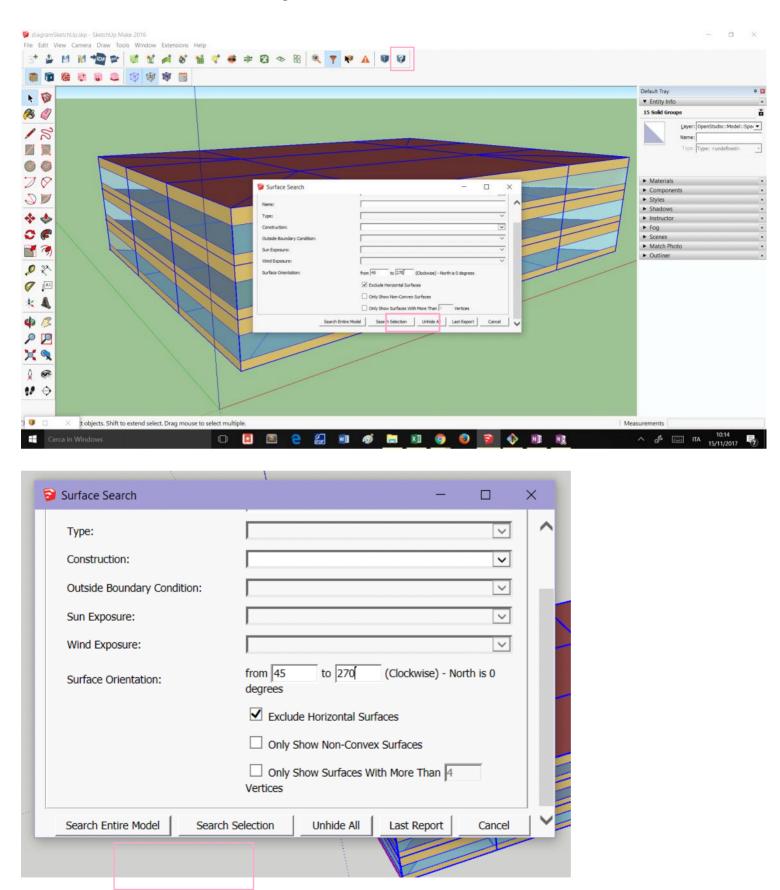


Now that we have selected our desired surfaces, we can add overhang (external shading) We choose where we want to put the shading on

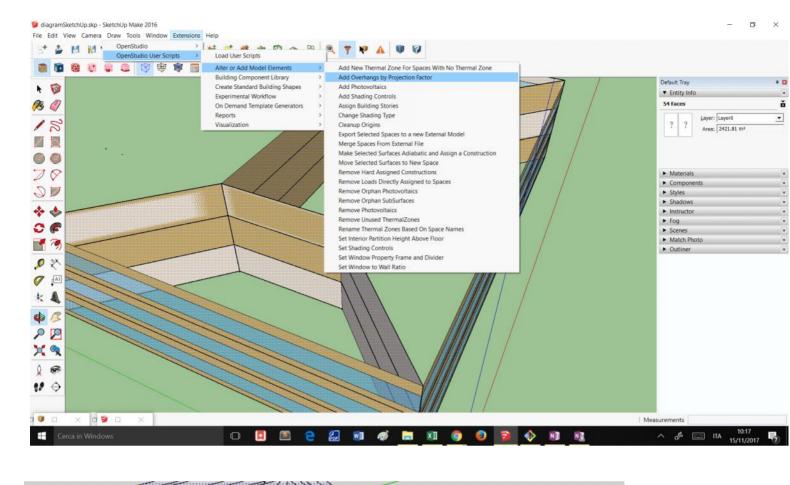


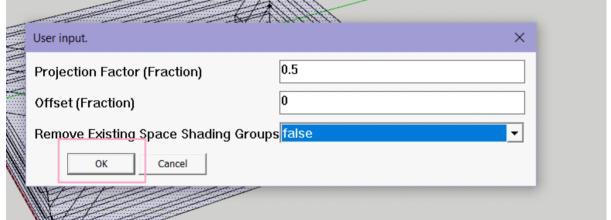


Then you should choose 0-360 surfaces so that you would go back to the previous selection


Choose the whole model \rightarrow Choose surface matching \rightarrow match the entire model \rightarrow ok

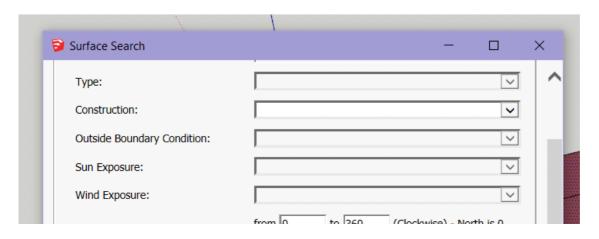

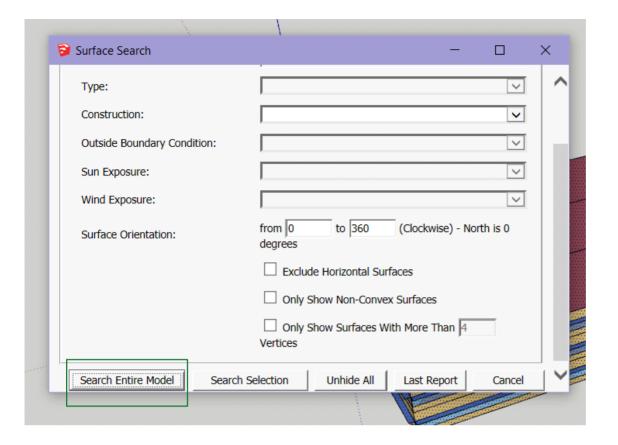


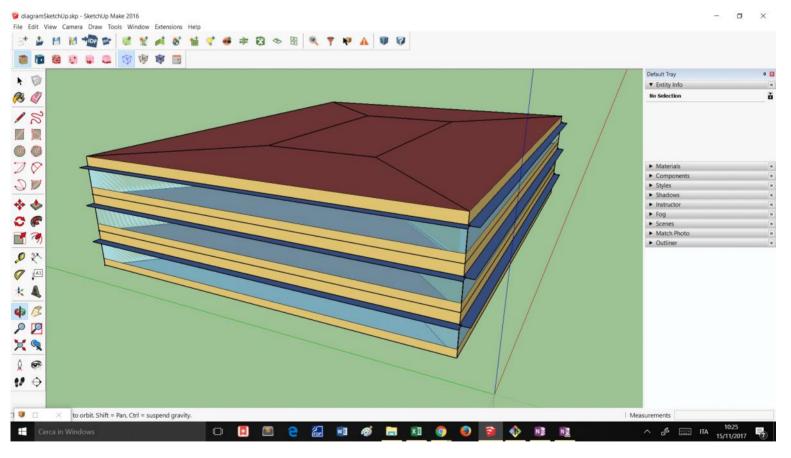



To perform this step you will need to have outliner in your tray:

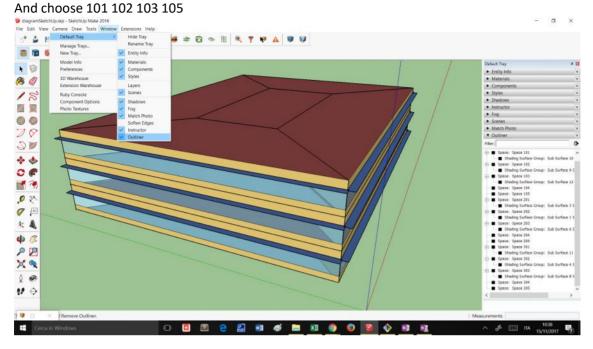



choose the spaces of each thermal zone and we add specifications:

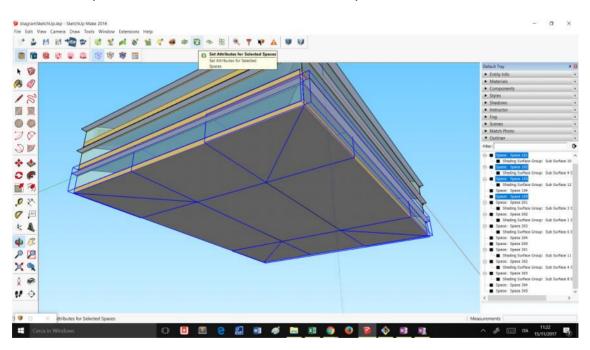

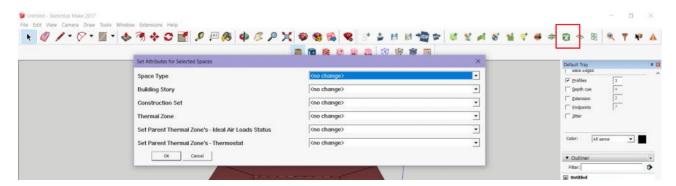


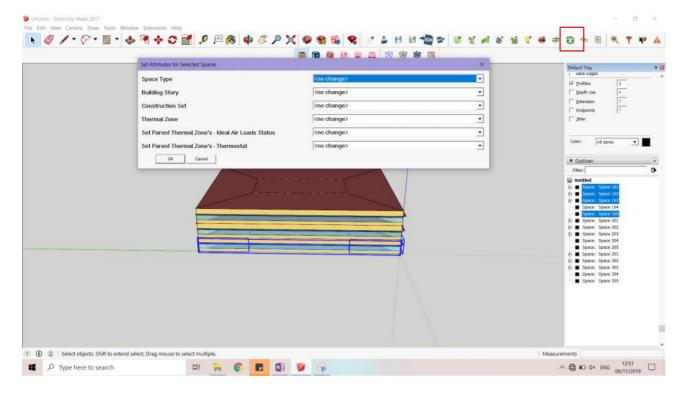

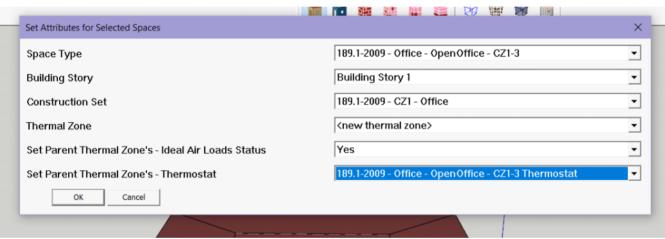


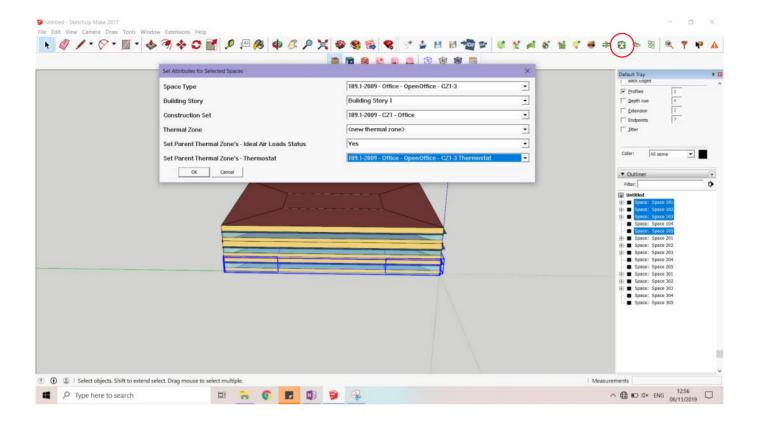


This is just for the first floor. We need to do the same for each floor. 201 202 203 205

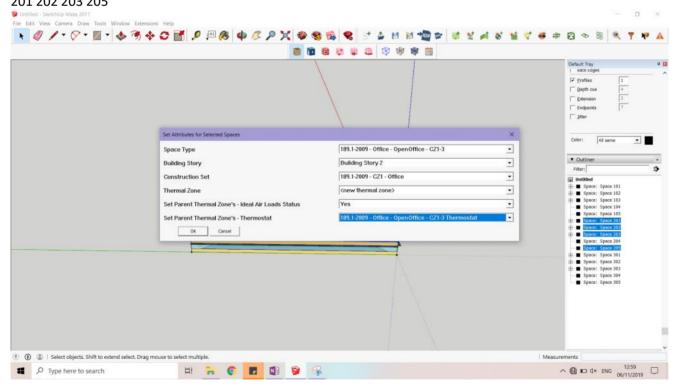


This is just for the first floor. We need to do the same for each floor. $301\ 302\ 303\ 305$

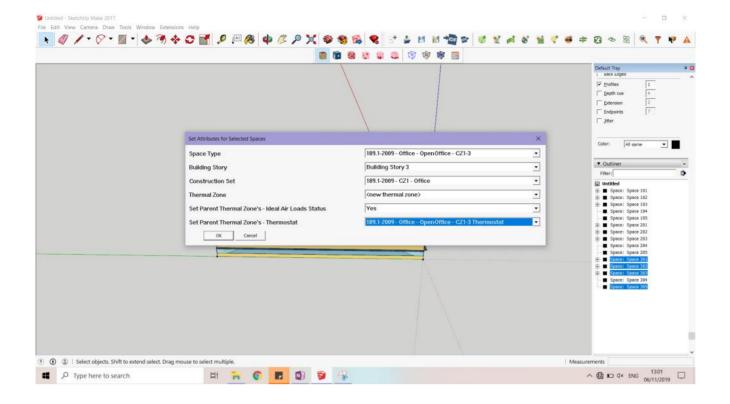


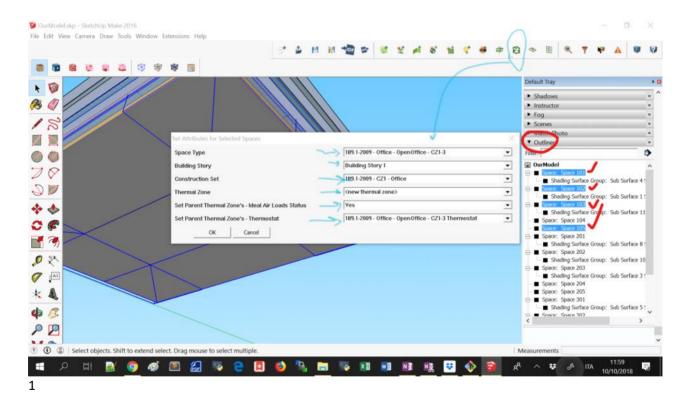


After choosing the mentioned button:

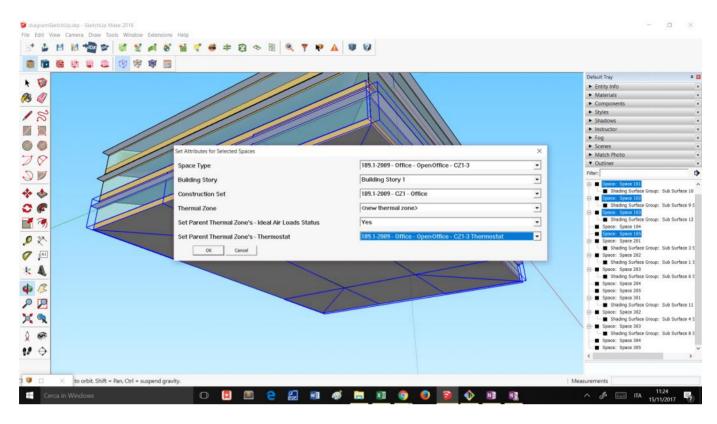


For each floor 104 204 304

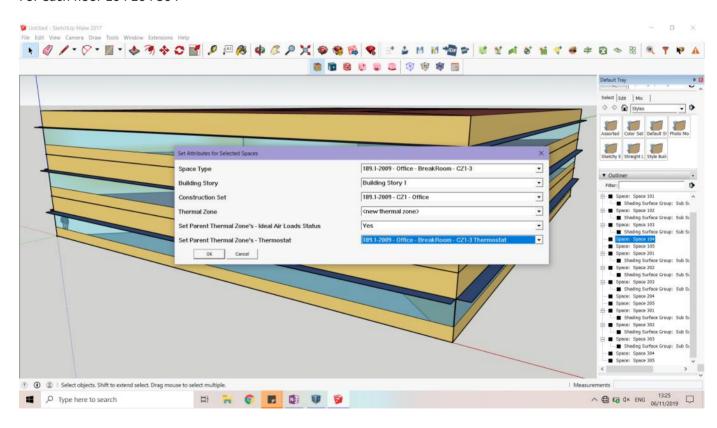


First you will need to launch Openstudio using sketchUpNext you will need to add the weather Data

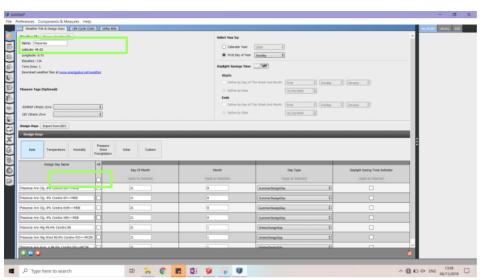

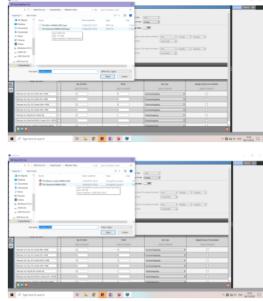


Close the skp file. And open open studio Load the weather diagrams of piacenza.


When open op select file →open file (the skp file) and then discard and load again the weather data.

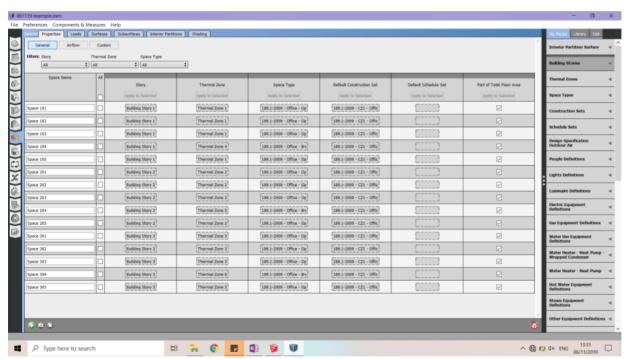


Next you simply run the model:

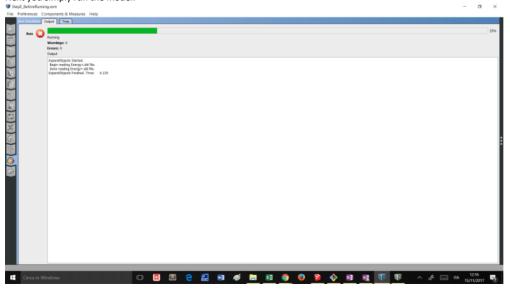

To see the results of the weather data:

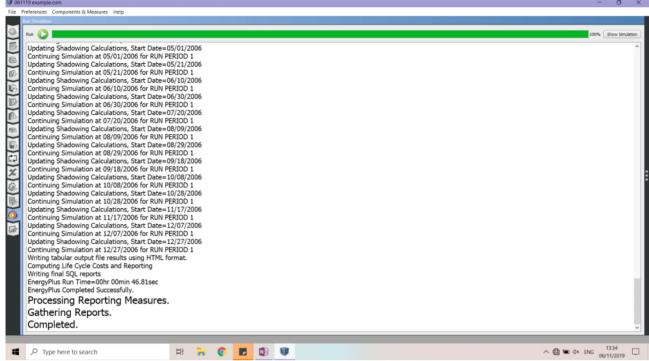

After the simulation has finish go to results summery.

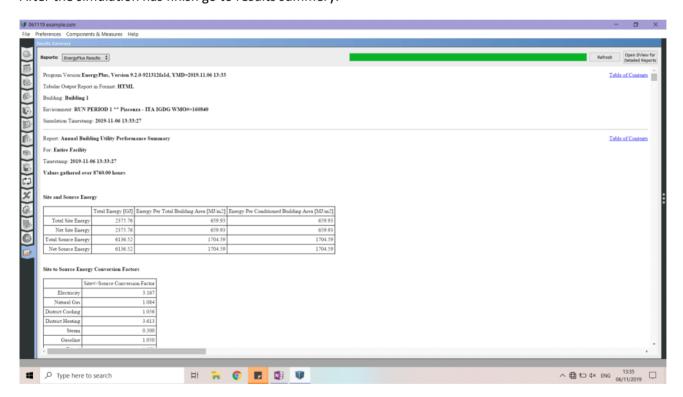

Finally you can review your results in the last tab

