MICROPROCESSOR BASED SYSTEM DESIGN

TASK 8

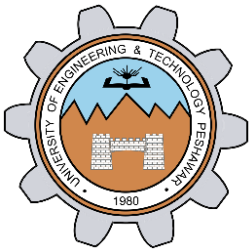

Spring 2021

CSE307 MBSD

Submitted by: **Shah Raza**

Registration No. : **18PWCSE1658**

Class Section: **B**

"On my honor, as student of University of Engineering and Technology, I have neither given nor received unauthorized assistance on this academic work."

Student Signature: _____

Submitted to:

Dr. Bilal Habib

Sunday, June 27, 2021

Department of Computer Systems Engineering

University of Engineering and Technology, Peshawar

Task:

In this project you are required to interface a temperature sensor to 89C51 using an ADC as shown below in figure 1.

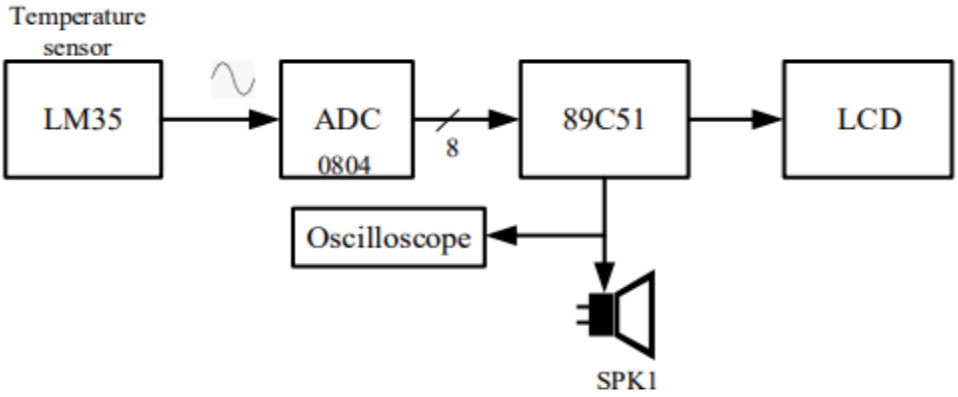

Figure 1: Sensor interfaced to Microcontroller

If temperature > 35C or below 10C then generate a 100Hz beep using speaker/sound card in Proteus. It has a 25% duty cycle and verify it using an oscilloscope. Sampling rate of ADC = 1K samples/sec.

Problem Analysis:

LM35 Temperature sensor:

The LM35 temperature sensor can generate voltage for -55 °C to 155 °C.
It has 3 pins. Pin1 is connected to Vcc, Pin2 is connected to ground and Pin 3 is Vout pin, it generates voltage according to the temperature value.
The formula for Vout is:

Vout = 10mV x Temperature

For example if temperature is 30,

Vout = 10mV x 30
Vout = 300mV

Now this Vout value needs to be Converted to Digital value by ADC.

ADC:

ADC is used for analog to digital conversion. It has an internal Clock which is 640KHz by default which gives us approximately 9700 samples per sec. But our task requires a sampling rate of 1K. The minimum internal clock value can be set to 100kHz which gives us 1237 sample/sec which is approximately equal to 1K.

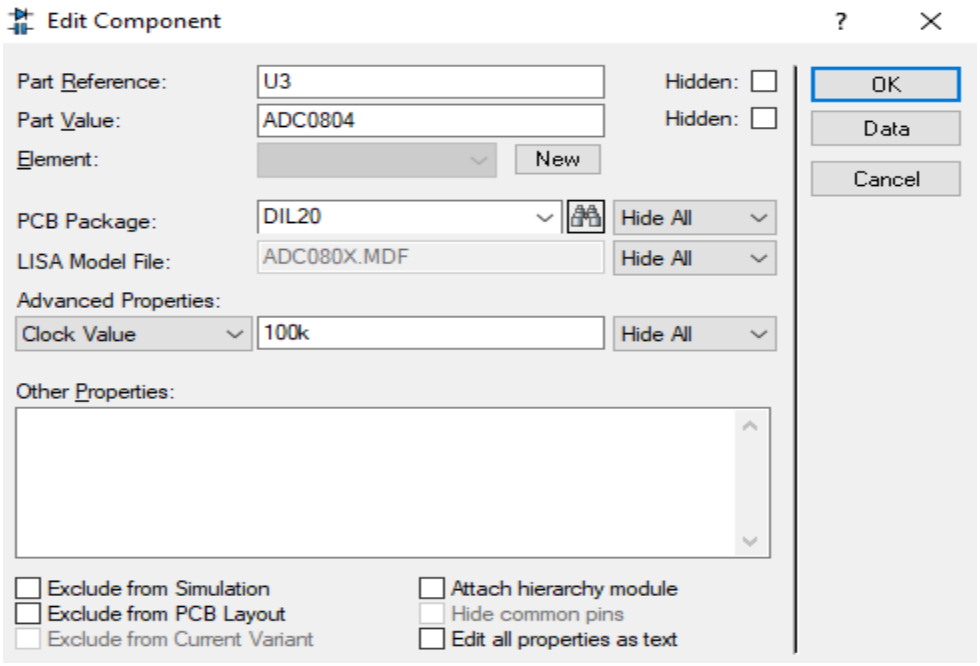

It has a Vin pin which is connected to Vout pin of LM35. The converted result is send to Dout(8-bits). The formula for Dout is:

Dout = Vin/Step-size

Since we are getting Vin from LM35 so Vin = Vout(LM35) = 10mV x Temperature.
So, Dout becomes

Dout = (10mV x Temperature)/Step-size.

Now we want step-size such that Dout = Temperature. So, our step-size should be 10mV

Dout = (10mV x Temperature)/10mV

Dout = Temperature

For step-size to be equal to 10mV, Vref/2 should be 1.28V.
Calculation:

Vref/2 = 1.28

Vref = 2.56

Step-size = Vref/255

Step-size = 2.56/255

Step-size = 10mV

This Dout is sent to P1 of 8051 microcontroller, if P1 is less than 10 or it is greater than 36 then we need to generate a sound of 100Hz with a duty cycle of 25%.

Frequency	Time Period(1/f)	Duty Cycle	ON	OFF
100Hz	10 ms	25%	2.5ms	7.5ms

TMOD:

Timer1				Timer0				
Gate	C/T	M1	M0	Gate	C/T	M1	M0	
0	0	0	0	0	0	0	1	(Hex= 1)

Timer 0: Used as Timer with mode 1

IE:

EA	--	--	ES	ET1	EX1	ET0	EX0
1	0	0	0	0	0	1	0

Timer 0 (Used as timer in Mode 1):

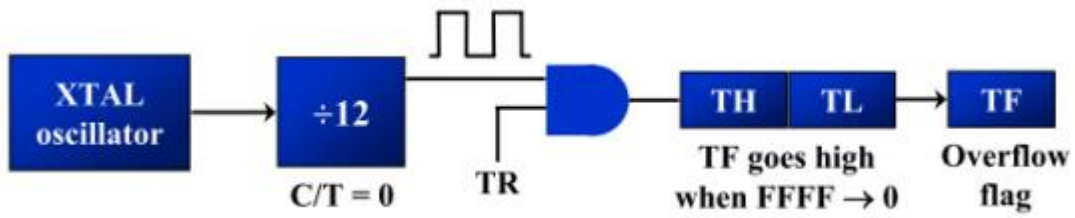

Code:

```
#include <reg51.h>
#include <stdio.h>

sbit SPK = P3^4;        //Speaker is connected to P3.4

sbit RD_n = P3^0;       //P3.0 is connected to the RD pin of ADC
sbit WR_n = P3^1;       //P3.1 is connected to the WR pin of ADC
sbit INTR = P3^2;       //P3.2 is connected to the INTR pin of ADC

sbit RS = P3^7;         //P3.7 is connected to the RS pin of LCD
sbit E = P3^6;          //P3.6 is connected to the E pin of LCD

unsigned char temperature;
unsigned char i;
unsigned char cmd[] = {0x38,0x01,0x06,0x0C,0x82};        //Command that needs to be sent to
LCD

void delay(unsigned int);       //Function of creating Delays
void writecmd(int);                     //Function that sends commands to LCD
void writedata(char);           //Function that writes data to LCD
void convert(unsigned char);  //Function that converts the Integer value to char and display it on
LCD
void SetTimer(int,int);         //Function that set the TH0 and TL0 values
void Init(void);                        //Function that initializes the timer values
void StartTimer(void);          //Fnction that starts Timer 0
void StopTimer(void);           //Function to Stop Timer 0
void Ext0(void);                //Function that is called after the ADC is done with conversion

/*Timer 0 interrupt is called when the temperature is less that 10 or greater than 36.
It will generate a Sound of 100Hz with a Duty cycle of 25% to P3.4 */
void timer0() interrupt 1
{
  if(SPK )       //if the Speaker is ON
  {
    SPK = 0;   //Turn it OFF
    SetTimer(0xE2,0xB3);     //Set Delay to 7.5msec
  }
  else   //if the Speaker is OFF
  {
    SPK =  1;  //Turn it ON
    SetTimer(0xF6,0x3B);     //Set the delay to 2.5msec
  }
}
```

```
void main(void)
 {
   SPK = 0;     //Turn the Speaker OFF
   P1 = 0xFF;  //Set P1 as an input Port
   P2 = 0x00;  //Set P2 as an output Port
   INTR = 1;   //Set P3.2 as an input pin

   for(i = 0;i<5;i++)
   {
     writecmd(cmd[i]);          //Send the Commands to LCD
     delay(10); //Give some delay
   }

   writedata('T');
   writedata('e');
   writedata('m');
   writedata('p');
   writedata('e');
   writedata('r');
   writedata('a');
   writedata('t');
   writedata('u');
   writedata('r');
   writedata('e');
   writedata(':');

   Init();          //Initialize timer values

  while (1)
  {
    RD_n = 1; //Set the RD pin to High
    WR_n = 0;//WR = Low
    WR_n = 1;//Low-->High
    while(INTR==1);  //Wait for the ADC to Convert the given voltage
     Ext0();               //Call the Ext0 function

  }
 }

 void writedata(char t)
{
  RS = 1;            // This is data
  P2 = t;           //Data transfer
  E  = 1;           // => E = 1
  delay(150);
  E  = 0;           // => E = 0
```

```
  delay(150);
}

void writecmd(int z)
{
  RS = 0;            // This is command
  P2 = z;            //Data transfer
  E  = 1;            // => E = 1
  delay(150);
  E  = 0;            // => E = 0
  delay(150);
}

void convert(unsigned char value)
{
  writecmd(0xc6);       //command to set the cursor to 6th position of 2nd line on 16*2 lcd
  writedata(((value/100)+48));          //Convert the hundredth place int to char and display on
LCD
  writedata((((value/10)%10)+48));   //Convert the tenth place int to char and display on LCD
  writedata(((value%10)+48));          //Convert the unit place int to char and display on LCD
  writedata(0xDF);                              //Hex value for displaying the Degree sign
  writedata('C');                               //Write C to LCD
}

void SetTimer(int xx, int yy)
{
  TH0 = xx;    //Set the value of TH0 to xx
  TL0 = yy;    //Set the value of TL0 to yy
}

void Init()
{
  TMOD = 0x1;         //Timer 0 is Mode 1
  EA = 1;                       //Enable Global interrupt
  ET0 = 1;                //Enable timer overflow interrupt for timer 0
  SetTimer(0xF6,0x3B);        //Set the values of TH0 and TL0 for a delay of 2.5ms
}

void StartTimer()
{
  TR0 = 1;      //Start Timer 0;
}

void StopTimer()
{
  TR0 = 0;      //Stop Timer 0
```

```
}

void delay(unsigned int t)
{
  unsigned int i,j;
  for(i = 0; i<t;i++)
    for(j  = 0;j<125;j++);
}

//Ext0 is used for displaying the temperature value to LCD and generating sound at P3.4
void Ext0()
{
  RD_n = 0;    //Set the RD pin of ADC from HIGH to LOW
  //The ADC sends the converted value to P1
  temperature = P1;    //Store the value at P1 in temperature
  convert(temperature);          //Display temperature on LCD
  if(temperature<10 || temperature>36)         //If the is less than 10 or it is greater than 36
  {
    SPK = 1;   //Turn the speaker ON
    StartTimer();         //Start the Timer

  }
  else   //if the temperature is in-between 10 and 36
  {
    if(TR0 == 1)         //if the Timer 0 is satarted
    {
        StopTimer();  //stop the timer
        SetTimer(0xF6,0x3B);          //Set a delay of 2.5ms
    }
    SPK = 0;   //Turn the Speaker OFF
  }

}
```

Output / Graphs / Plots / Results:

Schematic:

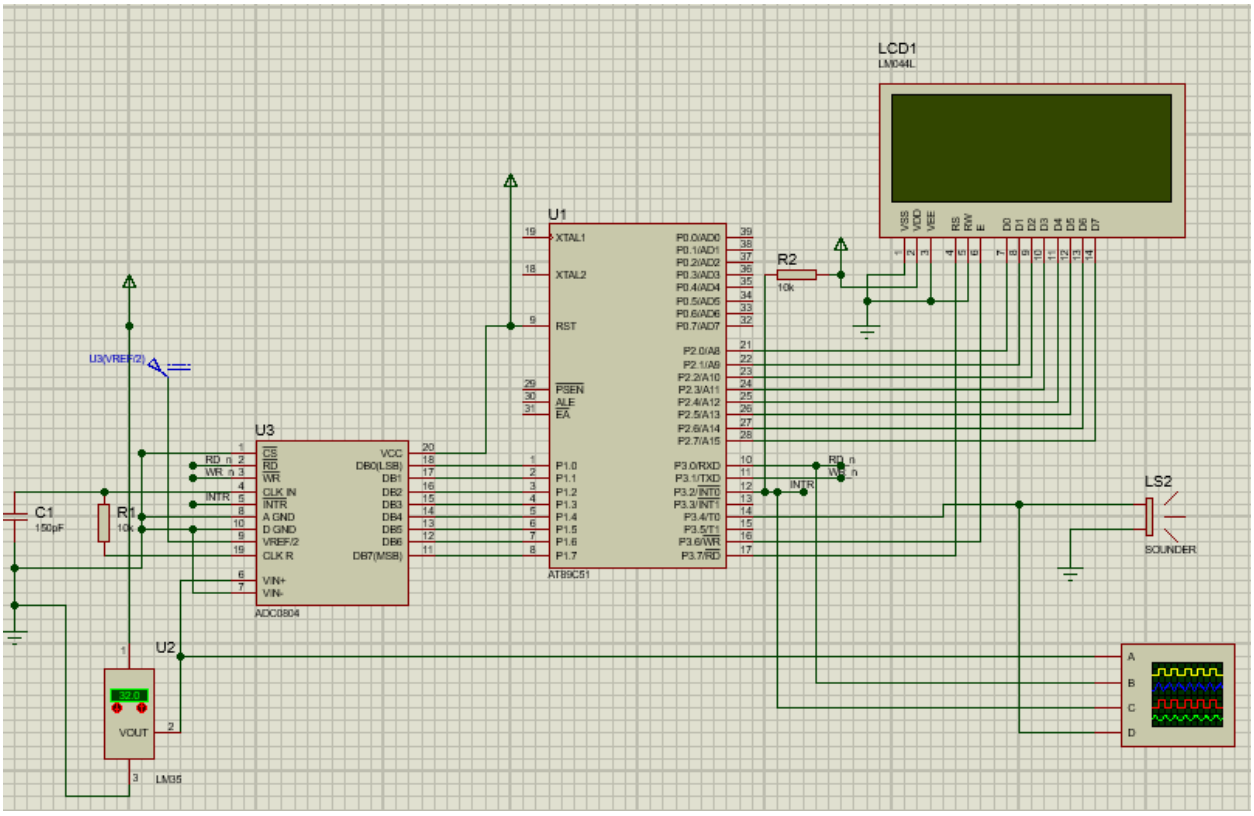

Temperature<10:

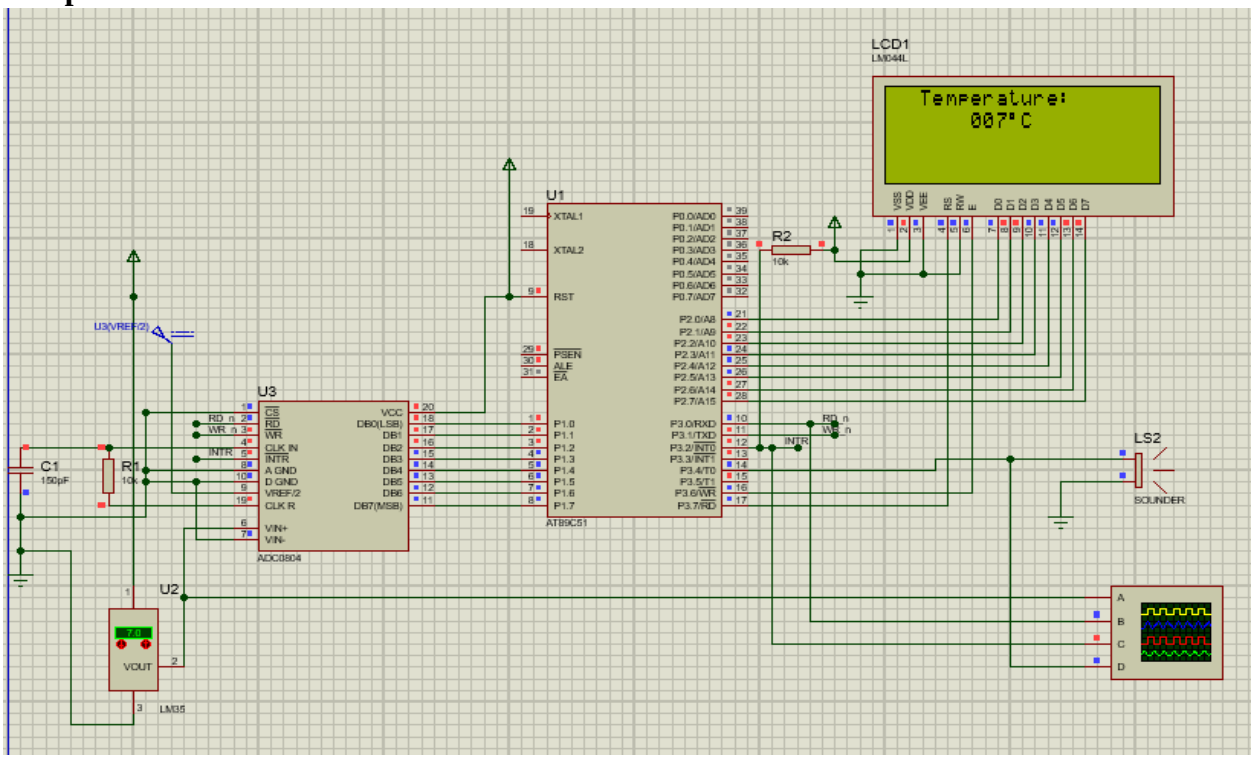

Oscilloscope Output:

Since the temperature is less than 10 so a sound of 100Hz with a Duty Cycle 25% will be generated.

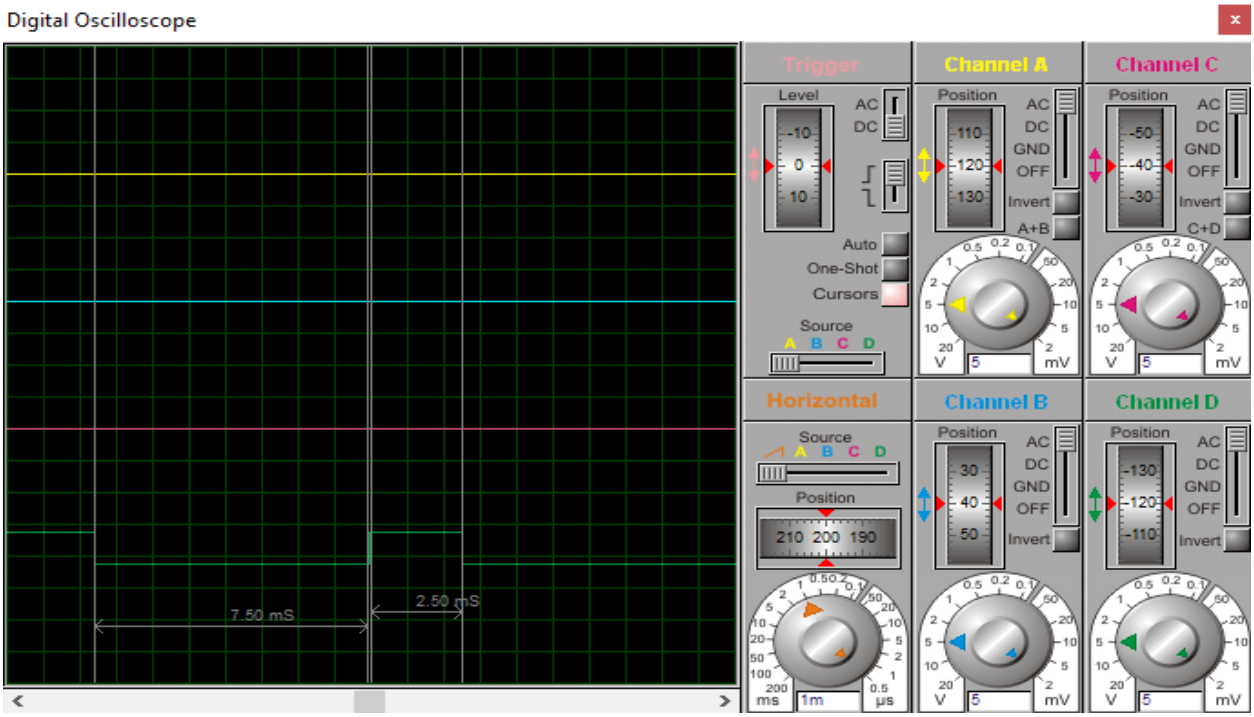

10<Temperature<36:

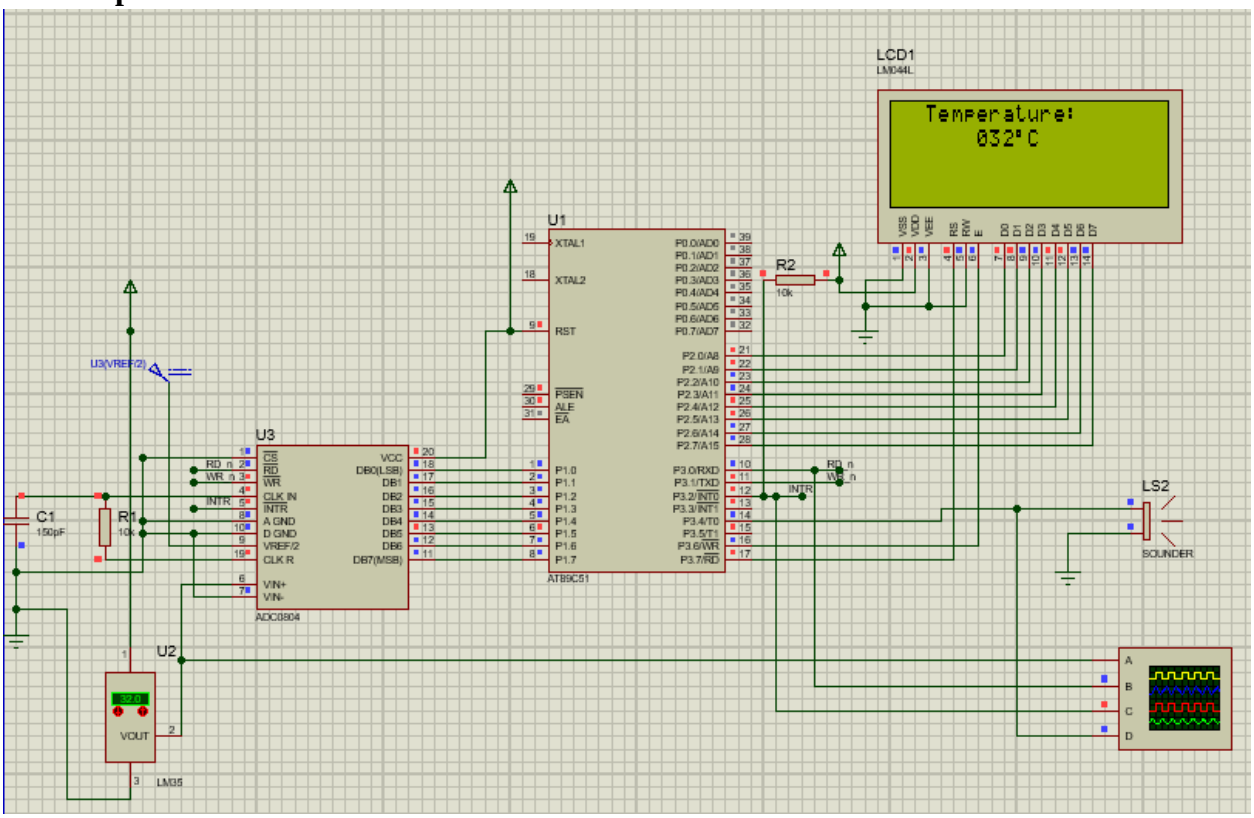

Oscilloscope Output:

No Signal should be generated in this case so a flat line.

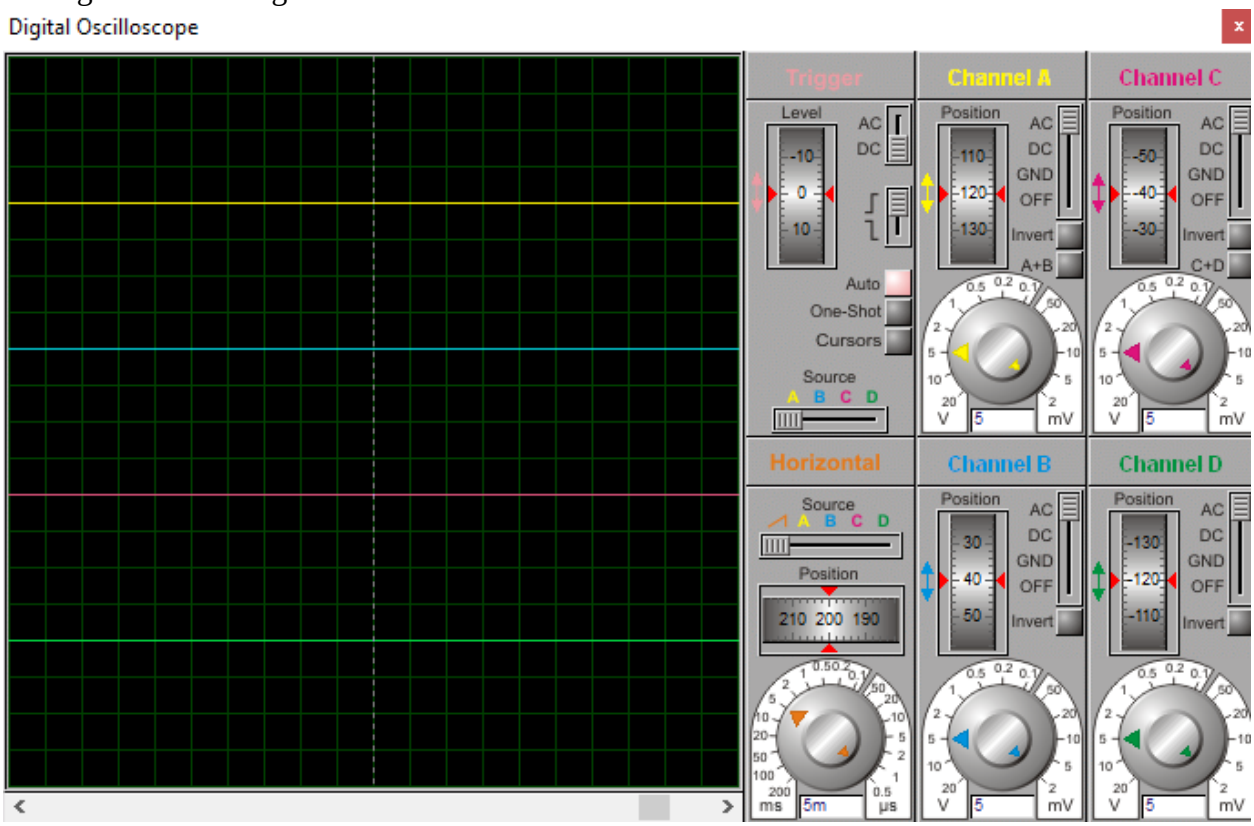

Temperature>36:

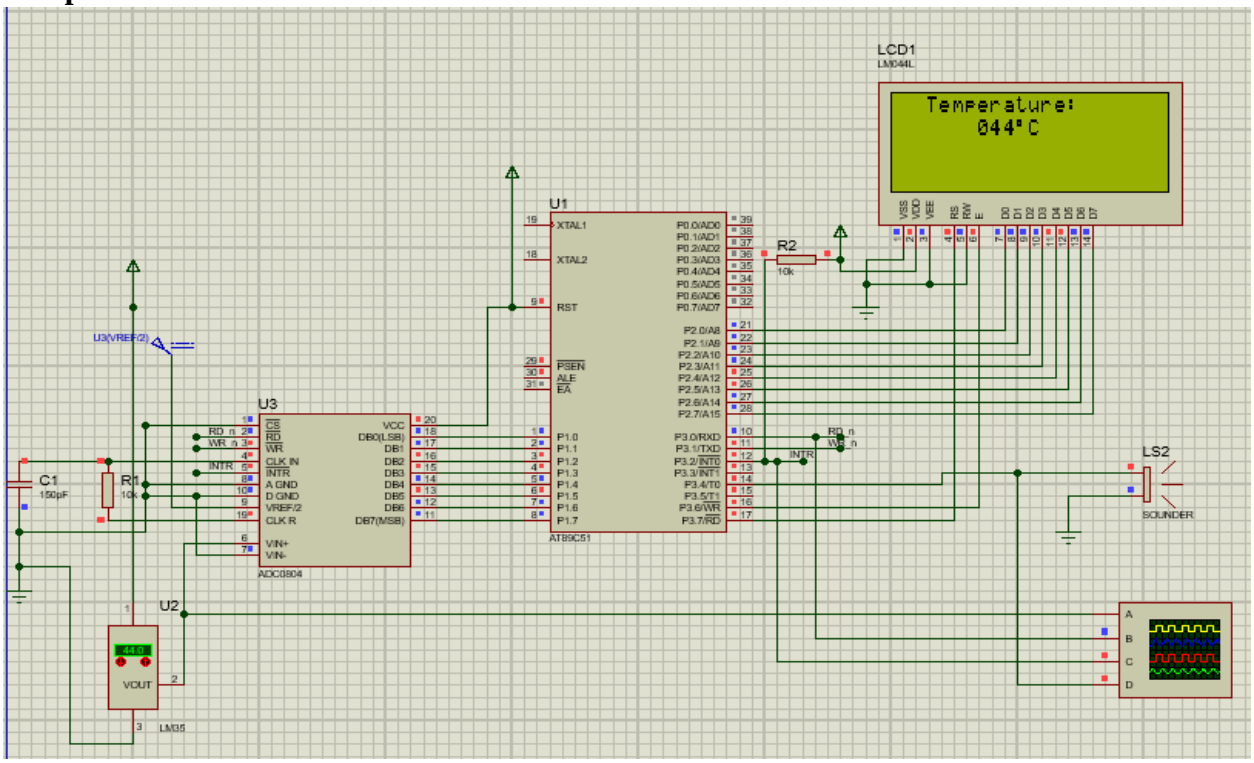

Oscilloscope Output:

Since the temperature is greater than 36 so a sound of 100Hz with a Duty Cycle 25% will be generated.