

ZoneCast

User Manual


Illustrated guide to the dashboard's features

Application version 1.6.0 — September 2026

Table of contents

1. Login
2. Live playback
3. Live announcement on busy speakers
4. Speakers — list and actions
5. Adding/editing a speaker
6. Zones
7. Zone members
8. Media — upload and audio analysis
9. Schedules and holidays
10. Overlapping schedule refused
11. Custom dates
12. Users
13. System — admin panel
14. Automatic backup
15. Language, theme, version/changelog and login alerts
16. Event log
17. Backup archive
18. Account security — 2FA

1. Login

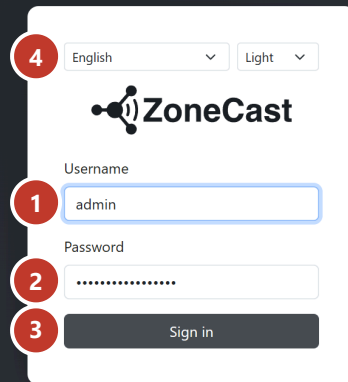

The image shows a login form for ZoneCast on a dark background. The form is white and contains the following elements: a language dropdown (English) and a theme dropdown (Light) at the top, both with red callout circles numbered 4; the ZoneCast logo in the center; a Username field with the text 'admin' and a red callout circle numbered 1; a Password field with masked characters and a red callout circle numbered 2; and a 'Sign in' button with a red callout circle numbered 3.

The login page is reachable at the server's address (e.g. `http://192.168.187.10`).

1. **Username** field — the username assigned by the administrator.
2. **Password** field.
3. **Sign in** button — if the account has 2FA enabled, after submitting you're also asked for the 6-digit authenticator app code (or a recovery code).
4. **Language** and **theme** (light/dark/automatic) pickers — see section 15.

After 5 failed attempts within 5 minutes, login for that user is temporarily blocked (429 — Too many attempts).

2. Live playback

The screenshot shows the ZoneCast web interface. On the left is a dark sidebar with a 'Play' button (1) and other menu items. The main area is titled 'Live playback' and contains an 'Audio file' dropdown (2) set to 'Shift start bell.mp3', a 'Destination' dropdown (3) set to 'All speakers', and a 'Play now' button (4). To the right is a 'Playback history' table (5) with columns for Date/time, File, Destination, Source, and Status. The table lists several playback events with their outcomes (completed, failed, stopped).

Live playback

Audio file: Shift start bell.mp3

Destination: All speakers

4 Play now


Playback history

Date/time	File	Destination	Source	Status
9/29/2026, 2:43:24 PM	Evacuation - alarm.wav	Zone: Entrance	Manual — Administrator	completed
9/29/2026, 2:10:24 PM	Shift end bell.mp3	All speakers	Scheduled	failed
9/29/2026, 1:20:24 PM	Gates closing announcement.mp3	Zone: Yard	Manual — Administrator	stopped
9/28/2026, 6:55:24 PM	Lunch break.mp3	Zone: Offices	Scheduled	completed
9/28/2026, 12:55:24 PM	Shift start bell.mp3	All speakers	Scheduled	completed

This is the landing screen: it lets you start an immediate announcement to one or more speakers.

1. Sidebar menu — switch between dashboard sections.
2. **Audio file** — choose among the files already uploaded in Media.
3. **Destination** — "All speakers", a zone or a single speaker; for a zone or a speaker a **Select** list appears below to pick which one.
4. **Play now** button — starts multicast playback immediately. If some of the chosen speakers are already playing, you're asked what to do first (see section 3).
5. **Playback history** — date/time, file, destination, source (Manual with the user's name, or Scheduled) and outcome (completed/stopped/failed) of every playback. A playback still running shows a **Stop** button.

3. Live announcement on busy speakers

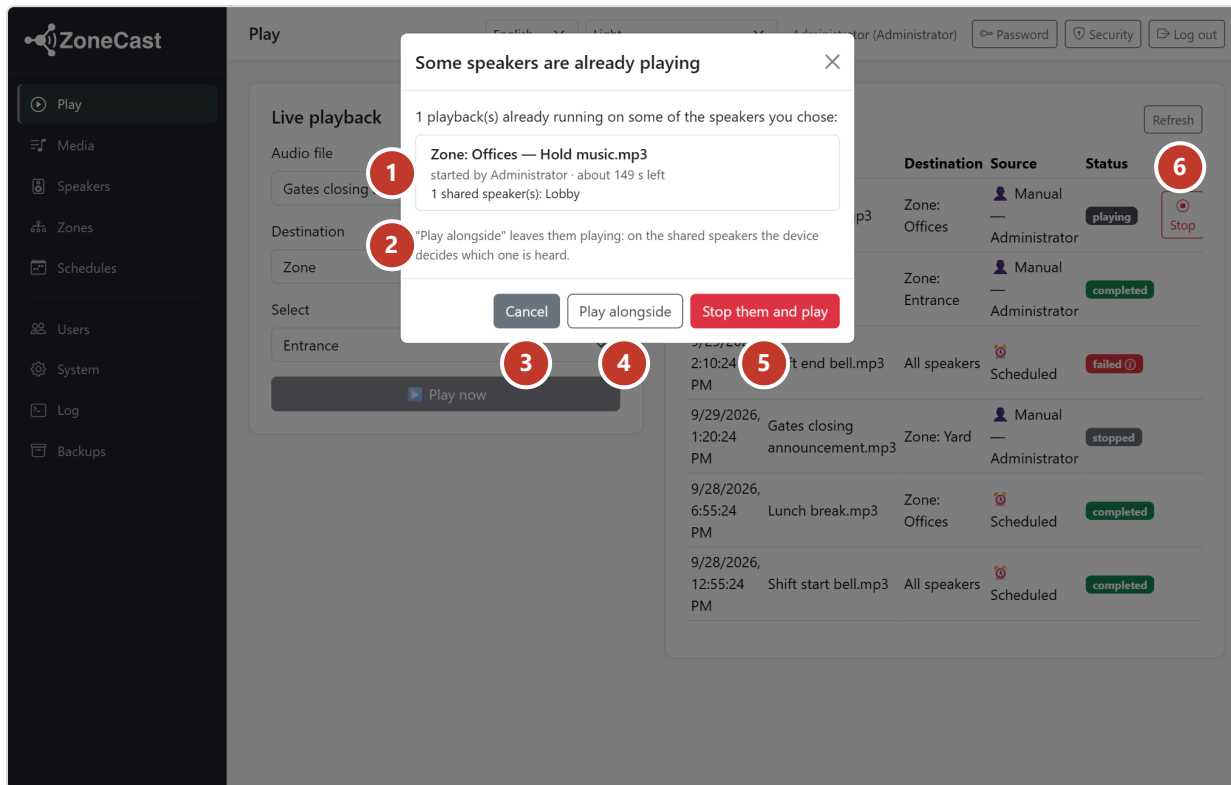

If some of the speakers you chose are already playing (another announcement or a schedule), **Play now** doesn't cut in straight away: a dialog shows what is playing and lets you decide.

1. What is already playing — destination and file, who started it (or which schedule), about how many seconds are left, and the **shared speakers**. A playback on exactly the same destination is marked: it will be stopped whatever you choose.
2. Reminder of what "Play alongside" does.
3. **Cancel** (default) — nothing is started.
4. **Play alongside** — leaves the other playback running; on the shared speakers the device decides which one is heard.
5. **Stop them and play** — stops the listed playbacks and starts yours.
6. **Stop** — stops a running playback from the history.

Schedules due while your announcement plays are also listed: a bell **waits** for the announcement to end (up to 60 s) and then plays; if the announcement lasts longer, the dialog says it won't play (it is recorded as failed in the history).

4. Speakers — list and actions

The screenshot shows the ZoneCast web interface for managing speakers. The left sidebar contains navigation links: Play, Media, Speakers (highlighted), Zones, Schedules, Users, System, Log, and Backups. The main content area is titled 'Speakers' and includes a top bar with language and theme selectors, user information, and login/logout buttons. Below this is a table of registered speakers. The table columns are Status, Name, IP, Zones, Multicast group, and Model. Each row represents a speaker and includes a set of action buttons: Ping, Preview, Apply now, Backup, Edit, and Delete. Numbered callouts (1-9) highlight specific features: 1. '+ New speaker' button; 2. Status indicator (green dot for online, red dot for offline, and a yellow 'Not in sync' badge); 3. Zone setup badges ('Updating...' and 'Not in sync'); 4. Zones column; 5. Multicast group column; 6. Ping button; 7. Preview button; 8. Apply now button; 9. Backup, Edit, and Delete buttons.

Status	Name	IP	Zones	Multicast group	Model	Actions
● offline Not in sync	Canteen	198.18.20.7	Canteen	239.1.2.17:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Car park horn	198.18.20.9	Outdoor area	239.1.2.19:5004	Algo 8186	Ping Preview Manual config. Edit Delete
● online	Loading yard	198.18.20.8	Yard, Outdoor area	239.1.2.18:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Lobby	198.18.20.2	Entrance, Offices	239.1.2.12:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Offices floor 1	198.18.20.3	Offices	239.1.2.13:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Offices floor 2	198.18.20.4	Offices	239.1.2.14:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Reception	198.18.20.1	Entrance	239.1.2.11:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Warehouse north	198.18.20.5	Warehouse, Outdoor area	239.1.2.15:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Warehouse south	198.18.20.6	Warehouse	239.1.2.16:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete

List of all registered speakers, with real-time online/offline status.

1. **+ New speaker** — opens the creation form (see section 5).
2. **Status** dot — green online, red offline.
3. Zone setup badges: **Updating...** while the new zone setup is being sent to the device; **Not in sync** if the device didn't accept it (e.g. offline or wrong credentials). It is re-sent automatically as soon as the device answers again, and admins get a login alert.
4. **Zones** — all the zones the speaker belongs to (a speaker can be in several zones).
5. **Multicast group** assigned to that speaker (dedicated address:port).
6. **Ping** — checks the device's reachability right away.
7. **Preview** — shows what would be sent to the device without actually applying it.
8. **Apply now** — writes the multicast configuration to the device (supported brands only; otherwise "Manual config." is shown).
9. **Backup / Edit / Delete** — back up the device's configuration, edit its data, delete it (backups remain available in the archive even after deletion).

5. Adding/editing a speaker

The screenshot shows the ZoneCast web interface with the 'Speakers' tab selected. A modal window titled 'Speaker' is open, allowing for the addition or editing of a speaker. The modal contains the following fields:

- Name:** Vehicle gate
- IP address:** 198.18.20.30
- Zones:** — (Note: Zones are assigned from the Zones tab.)
- Dedicated multicast group:** 239.1.2.40
- Port:** 5004
- Brand:** Fanvil
- Model:** A233
- Paging volume:** Not managed by ZoneCast (leave unchanged on device)
- Location:** East gate
- Web admin user:** admin
- Web admin password:** leave empty to keep unchar

A 'Save' button is located at the bottom right of the modal. The background shows a list of speakers with their status (offline, Not in sync, online) and a table of speaker details including Brand, Model, and various action buttons (Ping, Preview, Apply now, Backup, Edit, Delete).

1. **Name** — the label shown everywhere in the dashboard.
2. **IP address** of the device on the LAN.
3. **Zones** — read-only: the zones this speaker is in ("—" if none). Zones are assigned from the Zones tab (see section 7).
4. **Dedicated multicast group** and **Port** — used to reach this single speaker.
5. **Brand** and **Model** — dropdown with the most common multicast brands (Fanvil, Algo, CyberData, Grandstream, Axis, Tiptel, Akuvox); choosing **Other** lets you type a name freely. The Apply now/Backup buttons only appear for brands with supported automatic actions.
6. **Paging volume** (supported brands only) — "Not managed by ZoneCast" leaves the device's setting unchanged; otherwise choose "Device default" or a level from 1 to 9.
7. **Location** — where the speaker is; it also helps find it in the zone member list.
8. **Web admin user/password** — used by the app to apply configurations; the password is encrypted at rest in the database (leave it empty to keep the saved one).

6. Zones

ZoneCast

Play

Media

Speakers

Zones

Schedules

Users

System

Log

Backups

Zones

English Light Administrator (Administrator) Password Security Log out

1

+ New zone

Name	Description	Multicast group	Members	
Canteen		239.1.3.23:5004	1 Canteen	4 Edit Delete
Entrance	Reception and lobby	239.1.3.20:5004	2 Lobby, Reception	Edit Delete
Offices	Floors 1 and 2	239.1.3.21:5004	3 Lobby, Offices floor 1, Offices floor 2	Edit Delete
Outdoor area	Car park and yard	239.1.3.25:5004	3 Car park horn, Loading yard, Warehouse north	Edit Delete
Warehouse	Main hall	239.1.3.22:5004	2 Warehouse north, Warehouse south	Edit Delete
Yard	Loading area	239.1.3.24:5004	1 Loading yard	Edit Delete

Zones group multiple speakers together (e.g. a floor, a department) so you can reach them together from Playback or from Schedules. The same speaker can be in several zones (e.g. "Lobby" is in both Entrance and Offices).

- + New zone** — name, description, zone multicast group and members (see section 7).
- Multicast group** of the zone (address:port).
- Members** — how many speakers belong to the zone, with their names underneath.
- Edit / Delete** — changing a zone's members, address or name automatically updates the affected devices in the background.

Sort any column with a clickable header (A→Z / Z→A arrows) in the Speakers, Zones, Media and Schedules tables.

A zone, speaker or audio file used by a schedule can't be deleted: the message lists the schedules to change first.

7. Zone members

The screenshot shows the 'Zone' configuration form in the ZoneCast interface. The form is titled 'Zone' and has a close button (X) in the top right corner. The fields are as follows:

- 1. Name:** A text input field containing 'Offices'.
- 2. Multicast group:** A text input field containing '239.1.3.21'.
- 3. Members:** A counter showing '3' members.
- 4. Search box:** A text input field for filtering the speaker list by name, IP, or location.
- 5. Selected only:** A radio button option to filter the list to only selected speakers.
- 6. Select shown:** A button to tick every speaker currently shown.
- 7. Clear:** A button to untick all speakers.
- 8. Speaker list:** A list of speakers with columns for a tick box, status dot, name, IP, location, and other zones. The 'Lobby' and 'Offices floor 1' and 'Offices floor 2' are selected.
- 9. Not in sync:** A yellow badge indicating a speaker whose device has reached its zone limit.

Tick	Status	Name	IP	Location	Other zones	Notes
☐	Red dot	Canteen	198.18.20.7	Dining room		
☐	Green dot	Car park horn	198.18.20.9	Staff car park	also in 1 other zone(s)	
☐	Green dot	Loading yard	198.18.20.8	Dock 3	also in 2 other zone(s)	
☒	Green dot	Lobby	198.18.20.2	Ground floor	also in 1 other zone(s)	
☒	Green dot	Offices floor 1	198.18.20.3	Corridor		
☒	Green dot	Offices floor 2	198.18.20.4	Meeting room		
☐	Green dot	Reception	198.18.20.1	Main entrance	also in 1 other zone(s)	
☐	Green dot	Warehouse north	198.18.20.5	Bay 1	also in 2 other zone(s)	
☐	Green dot	Warehouse south	198.18.20.6	Bay 6	also in 1 other zone(s)	

A zone's speakers are chosen in the zone form (+ **New zone** or **Edit**), then saved with **Save** at the bottom.

- 1. Name and Description.**
- 2. Multicast group and Port** of the zone.
- 3.** Member counter — how many speakers are selected.
- 4.** Search box — filters the list by name, IP or location.
- 5. Selected only** — shows only the ticked speakers.
- 6. Select shown** — ticks every speaker currently shown (e.g. after a search).
- 7. Clear** — unticks all.
- 8.** One row per speaker: tick box, status dot, name, IP and location.
- 9.** How many **other zones** the speaker is already in, and its "Not in sync" badge if any. A speaker whose device has reached its zone limit (18 zones on a Fanvil) is greyed out and can't be ticked.

8. Media — upload and audio analysis

ZoneCast

Play

Media

Speakers

Zones

Schedules

Users

System

Log

Backups

Media

English Light Administrator (Administrator) Password Security Log out

Upload audio file

Supported formats: MP3, WAV, M4A/AAC, OGG, FLAC, WMA, OPUS, AIFF — max 50 MB, max duration 10.0 minutes.

Scegli file Nessun file selezionato Upload

File	Duration	Size	Uploaded on	Audio analysis	
Shift start bell.mp3	4.0s	0.06 MB	9/26/2026, 2:55:23 PM	B 18% · M 67% · H 15% Amplify +1.2 dB	Download Delete
Shift end bell.mp3	4.0s	0.06 MB	9/26/2026, 2:55:23 PM	B 20% · M 65% · H 15% Amplify +1.2 dB	Download Delete
Lunch break.mp3	6.0s	0.09 MB	9/26/2026, 2:55:23 PM	B 35% · M 50% · H 15%	Download Delete
Evacuation - alarm.wav	30.0s	0.46 MB	9/26/2026, 2:55:23 PM	B 12% · M 73% · H 15% Amplify +1.2 dB	Download Delete
Gates closing announcement.mp3	12.0s	0.18 MB	9/26/2026, 2:55:23 PM	B 42% · M 43% · H 15%	Download Delete
Hold music.mp3	150.0s	2.29 MB	9/26/2026, 2:55:23 PM	B 58% · M 27% · H 15%	Download Delete

Every uploaded file is automatically analyzed and assessed for playback on PA horns (which reproduce low frequencies poorly).

1. Pick a file and press **Upload** — MP3, WAV, M4A/AAC, OGG, FLAC, WMA, OPUS, AIFF (max 50 MB, max 10 minutes), automatically converted for playback.
2. **Audio analysis** badge — share of bass (B), mid (M) and high (H) frequencies, colored green/yellow/red depending on how dominant the bass is: hovering shows a tooltip with the details. If an **"Amplify +N dB"** button also appears, the file has headroom to be brought up to maximum volume without distortion (one click applies the gain).
3. **Download / Delete** the file.

A yellow or red badge signals that the audio might sound weak or unclear on PA horns: it doesn't prevent playback, it's just a hint.

- Play
- Media
- Speakers
- Zones
- Schedules**
- Users
- System
- Log
- Backups

English
Light
Administrator (Administrator)
Password
Security
Log out

Schedules

1
+ New schedule

Name	File	Destination	Time	Days	Holidays and dates	Active
Morning shift start	Shift start bell.mp3	All speakers	06:00	Mon Tue Wed Thu Fri	Exclude holidays (IT) Skips: Summer closure	3 Edit Delete
Stocktaking Saturday	Shift start bell.mp3	Zone: Warehouse	08:00	Sat	Ignore (always play) Only: Stocktaking	2 Edit Delete
Lunch break	Lunch break.mp3	Zone: Offices	12:30	Mon Tue Wed Thu Fri	Exclude holidays (IT) Skips: Company holidays	4 Edit Delete
Shift end	Shift end bell.mp3	All speakers	14:00	Mon Tue Wed Thu Fri	Exclude holidays (IT) Skips: Summer closure	5 Edit Delete
Gates closing	Gates closing announcement.mp3	Zone: Yard	19:00	Mon Tue Wed Thu Fri Sat	Ignore (always play)	6 Edit Delete

Custom dates

4
+ New list

Closures, exam days, events: lists of days a schedule can skip or be limited to.

Name	Dates	Used by
Company holidays Repeat every year	2 date(s) Jun 24 (Patron saint), Dec 24 – Jan 6 (Christmas)	1 schedule(s)
Stocktaking Stocktaking Saturdays	2 date(s) Jun 27, 2026 (Summer stocktake), Dec 19, 2026 (Year-end stocktake)	1 schedule(s)
Summer closure August holidays	1 date(s) Aug 10, 2026 – Aug 21, 2026 (Holidays)	2 schedule(s)

Plan automatic playback of a file at recurring times and days. Every schedule has a name, a media file, a destination (all speakers/zone/speaker), a time, the days of the week and an optional date range.

- + New schedule** — opens the schedule form (see section 10).
- Holidays and dates** — the holiday rule with its country (e.g. "Exclude holidays (IT)", "Ignore (always play)") and, underneath, the custom dates used: **"Skips: ..."** or **"Only: ..."**.
- Active** — an inactive schedule is kept but doesn't play.
- + New list** — creates a list of custom dates (see section 11).
- Dates** — number of dates in each list and the dates themselves (∞ = every year).
- Used by** — how many schedules use the list.

A **warning triangle** next to a schedule means it already plays on the same speakers at the same time as another one (e.g. after a zone's members or a list of dates changed): hover it to see which. Admins also get a login alert.

A bell due while a live announcement is playing on some of the same speakers waits for it to end (up to 60 s) and then plays.

- 1. + New schedule** — opens the schedule form (see section 10).
- 2. Holidays and dates** — the holiday rule with its country (e.g. "Exclude holidays (IT)", "Ignore (always play)") and, underneath, the custom dates used: **"Skips: ..."** or **"Only: ..."**.
- 3. Active** — an inactive schedule is kept but doesn't play.
- 4. + New list** — creates a list of custom dates (see section 11).
- 5. Dates** — number of dates in each list and the dates themselves (∞ = every year).
- 6. Used by** — how many schedules use the list.

A bell due while a live announcement is playing on some of the same speakers waits for it to end (up to 60 s) and then plays.

10. Overlapping schedule refused

The screenshot shows the ZoneCast Schedules management interface. A modal window is open for editing the 'Lunch break' schedule. The modal contains fields for 'Select' (Entrance), 'Time' (12:30), 'From (opt.)' (gg/mm/aaaa), 'To (opt.)' (gg/mm/aaaa), 'Days of the week' (Mon, Tue, Wed, Thu, Fri, Sat, Sun), 'Holiday handling' (Ignore (always play)), 'Holiday calendar' (Italia), 'Custom dates' (Company holidays: Skip these days, Stocktaking: Not used, Summer closure: Not used), and an 'Active' checkbox which is checked. A red box with a white '3' highlights a warning message: 'Not saved: it would play on the same speakers at the same time as' followed by a bullet point: 'Lunch break — Zone: Offices, 12:30 (Mon Tue Wed Thu Fri). First time: Wed, Sep 30, 2026, 12:30 PM. 1 shared speaker(s): Lobby'. Below this is a link 'Open it' and a note: 'Change the time, the days, the dates or the destination, or change the other schedule.' A red box with a white '4' highlights the 'Custom dates' section. The background shows a list of schedules with columns for Name, Time, From, To, Days of the week, Holiday handling, Holiday calendar, Custom dates, and Active. The 'Lunch break' schedule is highlighted in red.

ZoneCast

Schedules

Select

Entrance

Time

12:30

From (opt.)

gg/mm/aaaa

To (opt.)

gg/mm/aaaa

Days of the week

Mon Tue Wed Thu Fri Sat Sun

Holiday handling

Ignore (always play)

Holiday calendar

Italia

Custom dates

Company holidays

Skip these days

Stocktaking

Not used

Summer closure

Not used

Active

Not saved: it would play on the same speakers at the same time as

- Lunch break — Zone: Offices, 12:30 (Mon Tue Wed Thu Fri). First time: Wed, Sep 30, 2026, 12:30 PM. 1 shared speaker(s): Lobby

[Open it](#)

Change the time, the days, the dates or the destination, or change the other schedule.

Custom dates

Closures, exam days, events: lists or days a schedule can skip or be limited to.

Holidays and dates

Active

Exclude holidays (IT)

Skips: Summer closure

Ignore (always play)

Only: Stocktaking

Exclude holidays (IT)

Skips: Company holidays

Exclude holidays (IT)

Skips: Summer closure

Ignore (always play)

Edit

Delete

Edit

Delete

Edit

Delete

Edit

Delete

+ New schedule

+ New list

The lower part of the schedule form: time, optional From/To dates, days of the week, holidays, custom dates and **Active**.

- 1. Holiday handling and Holiday calendar** — pick a country (Italy, United States, United Kingdom, France, Germany, Spain, Japan, China) and whether to exclude its holidays, ignore them (always play) or play *only* on holidays.
- 2. Custom dates** — one selector per list: **Not used**, **Skip these days** or **Only on these days**.
- 3.** If the schedule would play on the same speaker at the same time as another active schedule, **it is not saved**: the box shows the schedule in the way (destination, time, days), **when they would first clash** and the **shared speakers**.
- 4. Open it** — opens the other schedule, to change it instead.

To fix it, change the time, the days, the dates or the destination — or change the other schedule. The check also counts speakers shared through zones and "All speakers".

11. Custom dates

The screenshot shows the 'Custom dates' dialog box in the ZoneCast interface. The dialog has a dark sidebar on the left with navigation links: Play, Media, Speakers, Zones, Schedules (highlighted), Users, System, Log, and Backups. The main content area of the dialog is white and contains the following elements:

- 1** Name: A text input field containing 'Stocktaking'.
- Description: A text input field containing 'Stocktaking Saturdays'.
- Dates: A section with two rows of date inputs. Each row has a date field (e.g., '27/06/2026'), a format dropdown (set to 'gg/mm/aaaa'), a label field (e.g., 'Summer stocktake'), and an 'Every year' checkbox with a red 'X' icon.
- 2** First day of the date (or range).
- 3** Last day — optional, only for a range.
- 4** Label — e.g. "Christmas".
- 5** Every year — repeats the date each year; a yearly range may cross New Year (e.g. Dec 24 – Jan 6). The red X removes the row.
- 6** + Add date — adds an empty row.
- 7** Paste dates: A section with a text area for pasting dates and an 'Add these dates' button below it.

Below the dialog, a portion of the 'Schedules' list is visible, showing entries like 'Summer closure' and 'August holidays' with their respective date ranges and the number of schedules.

Named lists of days (closures, exam days, events) that a schedule can skip or be limited to. Open with **+ New list** or **Edit** under the schedules list.

- 1. Name** and **Description** of the list.
- 2.** First day of the date (or range).
- 3.** Last day — optional, only for a range.
- 4. Label** — e.g. "Christmas".
- 5. Every year** — repeats the date each year; a yearly range may cross New Year (e.g. Dec 24 – Jan 6). The red X removes the row.
- 6. + Add date** — adds an empty row.
- 7. Paste dates** — one date or range per line (2026-12-24 , 24/12/2026 , or 2026-12-24 2027-01-06 Christmas : the rest of the line becomes the label), then **Add these dates**.

A list used by schedules can't be deleted: remove it from them first. Editing a list may make two schedules overlap: this is reported after saving and flagged in the schedules list.

12. Users

The screenshot displays the ZoneCast Users management page. On the left is a dark sidebar with navigation links: Play, Media, Speakers, Zones, Schedules, Users (selected), System, Log, and Backups. The main content area has a header with 'Users', language and theme dropdowns, and user role/permissions buttons. Below the header is a table of users:

User	Name	Role	
admin default	Administrator	Administrator	
maintenance	Emma Brown	Administrator	
operator1	John Smith	Operator	

Only administrators can see and manage this section.

- + New user** — available roles: **Administrator** (full access, including the Users/System/Log/Backups sections) and **Operator** (playback, managing speakers/zones/media/schedules).
- The **default** admin user created on first startup can't be deleted (always guarantees a way back in).
- Edit / Delete** — an administrator can also reset another user's password from here.

Every user can change their own password (**Password** button at the top) and enable 2FA on their own (see section 18).

13. System — admin panel

The screenshot shows the ZoneCast System admin panel. The interface is divided into several sections, each highlighted with a red circle and a number:

- 1. Network**: The 'Interface' section at the top left, showing IP address, subnet, gateway, and DNS servers.
- 2. Server time**: The 'Server time' section at the top right, showing local time, timezone, NTP sync status, and NTP servers.
- 3. Host resources**: The 'Host resources' section in the middle left, showing disk usage, RAM, and CPU usage.
- 4. Information**: The 'Information' section in the middle right, showing theme and version.
- 5. Export full configuration**: The 'Export full configuration' section at the bottom left, showing a button to export and download the configuration.
- 6. Import configuration**: The 'Import configuration' section at the bottom right, showing fields for config file, password, and an 'Import and restart' button.
- 7. Automatic backup**: The 'Automatic backup' section at the bottom, showing settings for automatic backups, including frequency, time, and destination.

Visible only to administrators.

- 1. Network** (native install only) — the interface's IP address with subnet, gateway and DNS; changes are applied on trial and must be confirmed within a few minutes from the dashboard reached at the new address, otherwise they revert on their own.
- 2. Server time** — local time, timezone, NTP sync status, the timezone schedules run in (with a warning if it differs from the system's), NTP servers, and **Set time manually** if the server has no NTP access. NTP/timezone changes are only available on a native install; on Docker they are read-only.
- 3. Host resources** — disk usage (with a color-coded bar warning when space is running low), RAM and CPU.
- 4. Information** — installed version; click it to see the changelog (see section 15).
- 5. Export full configuration** — database, media and encryption key in a single file, optionally password-protected, to transfer the installation to a new machine. It contains sensitive data: handle it with care.
- 6. Import configuration** — choose the exported file, type its password and press **Import and restart**: it replaces the current data (a copy of it is still saved) and restarts the service. This is also how you restore an automatic backup.
- 7. Automatic backup** — see section 14.

14. Automatic backup

Automatic backup

The full configuration, as in Export, on a schedule: kept on this server and, if you want, copied to an FTP server or a network share.

☒ Make backups automatically **1**

How often **2** Time

Every day **3** 02:30 **4**

☒ Include the audio files **5**

Copies kept on this server **6** Copies kept at the destination **7**

3 30

Backup password (at least 12 characters) **8**

A password is saved: leave empty to keep it.
☐ I have stored this password somewhere safe: without it no backup can be restored.

Also copy to **9**

Network share (SMB / Windows) **10**

Server **11** Port

nas.local 445

Share Folder

backup zonecast

Username Password

zonecast

A password is saved: leave empty to keep it.
☒ Encrypt the transfer (SMB 3) **12**

Save Test connection Back up now

Status **13** **14**

Last run	9/29/2026, 2:55:26 PM completed 15
Last successful backup	9/29/2026, 2:55:26 PM
Next run	9/30/2026, 2:30:00 AM

Backups on this server **16**

zonecast-a4d0dc9e-20260929T125524Z.zcbundle 35 KB

System > Automatic backup (admins only): the full configuration, as in Export, made on a schedule, kept on this server and optionally copied to an FTP server or a network share.

- 1. Make backups automatically** — turns the schedule on.
- 2. How often** (every day / every week, with the day) and **Time**.
- 3. Include the audio files** in the backup.
- 4. Copies kept** on this server and at the destination; older ones are deleted.
- 5. Backup password** (at least 12 characters) and the confirmation "*I have stored this password somewhere safe*".
- 6. Also copy to** — nowhere else (this server only), FTP server with encryption (**FTPS**), network share (**SMB / Windows**), or FTP without encryption (only after ticking the consent that password and backup travel unencrypted).
- Destination details: **Server**, **Port**, **Share** (SMB), **Folder**, **Username**, **Password** (leave empty to keep the saved one).
- 8. Encrypt the transfer (SMB 3)**. For FTPS with a self-signed certificate there is a **trusted certificate fingerprint** field instead: *Test connection* shows the server's fingerprint and offers **Trust this certificate** — trust it only if it matches the one on the server.
- 9. Test connection** — writes and deletes a test file at the destination.
- 10. Back up now** — runs a backup immediately.
- 11. Status** — last run and its outcome, last successful backup, next run, and the error if the last one failed.
- 12. Backups on this server** — with size, download and delete buttons.

Without the backup password no backup can be restored. To restore, use System > **Import configuration** with the backup file and its password. A failed or overdue backup raises a login alert; backups are paused if the settings came from another installation (after an import) until you save them again here.

15. Language, theme, version/changelog and login alerts

Date/time	File	Destination	Source	Status
9/29/2026, 2:56:25 PM	Hold music.mp3	Zone: Offices	Manual — Administrator	stopped
9/29/2026, 2:43:24 PM	Evacuation - alarm.wav	Zone: Entrance	Manual — Administrator	completed
9/29/2026, 2:10:24 PM	Shift end bell.mp3	All speakers	Scheduled	failed
9/29/2026, 1:20:24 PM	Gates closing announcement.mp3	Zone: Yard	Manual — Administrator	stopped
9/28/2026, 6:55:24 PM	Lunch break.mp3	Zone: Offices	Scheduled	completed
9/28/2026, 12:55:24 PM	Shift start bell.mp3	All speakers	Scheduled	completed

Selectors available to **every** user (not just admins), always visible at the top of the dashboard and on the login page; on small screens they're found in the pop-out sidebar menu.

- 1. Language** — English, Italian, Chinese, Japanese, German, Spanish, French: translates the whole interface, including the audio-analysis tooltips and error messages.
- 2. Theme** — light, dark (shown here), or **automatic** (default): switches from light to dark following the real local sunrise/sunset time.

The language and theme choice stays saved in the browser: each user can have their own preference independently of others.

ZoneCast

System

Play
Media
Speakers
Zones
Schedules
Users
System
Log
Backups

Host resources

Disk
RAM
CPU (2 cores)

Export full configuration

Full backup of database and sensitive data: handle with care

Backup password

Changelog

v1.6.0 2026-09-28

- A speaker can belong to several zones (up to 18 on a Fanvil). Zone members are now chosen from the Zones tab, with a searchable list of speakers; the speaker form shows its zones read-only
- Each speaker shows whether its device accepted the latest zone setup ("Not in sync" badge and a login alert); a device that was offline gets it again as soon as it answers
- Starting a live announcement on speakers that are already playing (another announcement or a schedule) now asks first: stop them and play, play alongside, or cancel
- A bell that falls during a live announcement on some of the same speakers now waits for it to end (up to 60 s) instead of cutting in
- Custom dates: lists of days (closures, exam days, events, yearly dates such as Dec 24 - Jan 6) that a schedule can skip or be limited to
- A schedule that would play on the same speakers at the same time as another one is refused when saved, naming the schedule in the way; overlaps created later by zone members or custom dates are reported, flagged in the list and shown as a login alert
- Automatic backup (System tab): the full configuration on a daily or weekly schedule, kept on the server and optionally copied to an FTPS/FTP server or an SMB share, with retention, a connection test, "back up now" and alerts when a backup fails
- The database is copied next to itself before any schema upgrade, and a backup exported by a newer version is refused instead of breaking the next start
- The dashboard no longer loads anything from the internet, runs under a strict Content Security Policy, and every API error is shown in the viewer's language
- Deleting a zone, speaker or audio file used by a schedule is refused with the list of schedules to fix first

v1.5.8 2026-09-28

- Security: names, file names and log messages are now always shown as text — before, a crafted value (even a username typed at the login form) could be injected into the HTML and JavaScript of the interface

4

3

3. Version in the System > Information card — click it to open the changelog.

4. Changelog — the list of changes per release, newest first: useful for quickly checking what changed after an update.

Login alerts — on the first login of the day, administrators see a summary when something needs attention:

- scheduled playbacks that failed in the last 24 hours;
- disk space running low or critically low;
- speakers that didn't accept their latest zone setup (Not in sync);
- schedules that play on the same speakers at the same time;
- automatic backup failed, overdue, or paused because its settings came from another installation.

16. Event log

ZoneCast

Play

Media

Speakers

Zones

Schedules

Users

System

Log

Backups

Log

English Light Administrator (Administrator) Password Security Log out

1

2

3

4

Event log

All levels Search message... Refresh Export CSV Export JSON Clear log

Keep history for 30 days ☒ Never (no automatic deletion) Save

5

Date/time	Level	Source	Message
9/29/2026, 2:56:06 PM	INFO	zonecast.auth	Login riuscito: utente 'admin' da 127.0.0.1
9/29/2026, 2:55:28 PM	INFO	zonecast.backup	Backup automatico: impostazioni salvate da admin (attivo, smb)
9/29/2026, 2:55:28 PM	INFO	zonecast.auth	Login riuscito: utente 'admin' da 127.0.0.1
9/29/2026, 2:55:26 PM	INFO	zonecast.backup	Backup automatico completato: zonecast-a4d0dc9e-20260929T125524Z.zcbundle (local)
9/29/2026, 2:55:24 PM	INFO	zonecast.backup	Backup automatico avviato a mano da admin
9/29/2026, 2:55:24 PM	INFO	zonecast.backup	Backup automatico: impostazioni salvate da admin (attivo, local)
9/29/2026, 2:55:24 PM	INFO	zonecast.backup	Backup automatico: impostazioni salvate da admin (attivo, smb)
9/29/2026, 2:55:23 PM	INFO	zonecast.calendars	Date personalizzate 'Stocktaking' create (2 voci, utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.calendars	Date personalizzate 'Company holidays' create (2 voci, utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.calendars	Date personalizzate 'Summer closure' create (1 voci, utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Outdoor area': aggiunti [Car park horn, Loading yard, Warehouse north], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Yard': aggiunti [Loading yard], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Canteen': aggiunti [Canteen], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Warehouse': aggiunti [Warehouse north, Warehouse south], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Offices': aggiunti [Lobby, Offices floor 1, Offices floor 2], rimossi [] (utente admin)

Persistent record of logins, device communication, playbacks, schedules, zone and date changes and backups — survives a service restart. Admins only.

1. Filter by **level** (Info/Warning/Error).
2. Search the message text.
3. **Export CSV / Export JSON** — downloads the full history (not limited to the current view) for archiving or sharing.
4. **Clear log** — deletes the whole history permanently (asks for confirmation).
5. **Keep history for N days**, or **Never** (no automatic deletion), then **Save**.

17. Backup archive


The screenshot shows the ZoneCast web interface. On the left is a dark sidebar with the ZoneCast logo and a menu with items: Play, Media, Speakers, Zones, Schedules, Users, System, Log, and Backups (which is highlighted). The main content area is titled 'Backups' and includes a language dropdown (English), a theme dropdown (Light), and user information (Administrator (Administrator) with links for Password, Security, and Log out). Below this is a section titled 'Backup archive' containing a table. A red circle with the number '1' points to the first column of the table, 'Date'. The table has one row with the following data: Date: 3/28/2026, 2:55:24 PM; Speakers: Lobby; IP: 198.18.20.2; Format: txt; Size: 47.1 KB; Created by: Administrator. A second red circle with the number '2' points to the 'Download' and 'Discard' buttons located at the end of the table row.

Date	Speakers	IP	Format	Size	Created by	
3/28/2026, 2:55:24 PM	Lobby	198.18.20.2	txt	47.1 KB	Administrator	Download Discard

All device configuration backups (made with the **Backup** button in Speakers), including ones whose speakers have since been deleted from the app. Configuration backups of ZoneCast itself are in System > Automatic backup (section 14).

1. Each row shows the date, the speaker's name/IP *at the time of the backup* (not its current one — so it stays identifiable even if the device was removed or reassigned), format, size and who created it.
2. **Download** or **Discard** (permanently delete) a backup.

18. Account security — 2FA

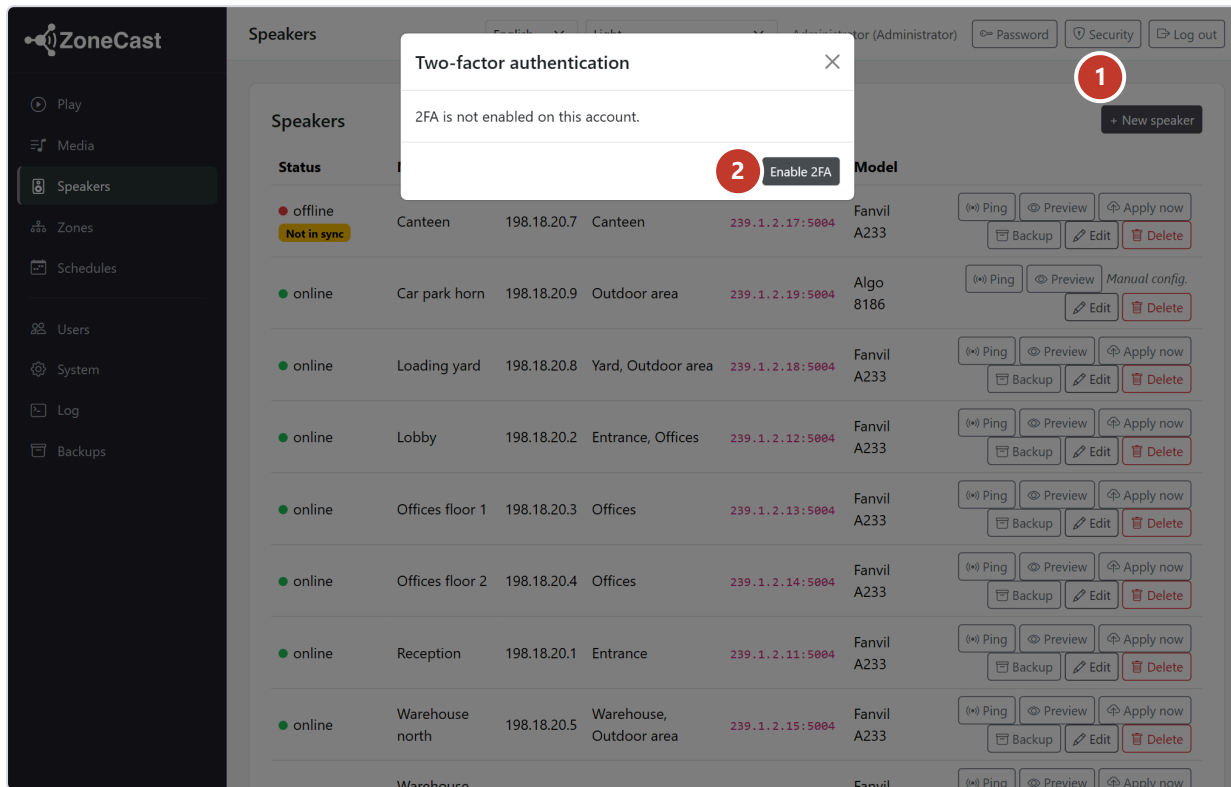

Accessible to any user, regardless of role — 2FA is optional, not enforced by the administrator.

1. **Security** button at the top — opens the two-factor authentication window.
2. **Enable 2FA** — shows a QR code to scan with an authenticator app (Google Authenticator, Authy, etc.); after confirming with the first 6-digit code, 10 single-use recovery codes are generated, shown only once. From here you can later disable 2FA or regenerate the recovery codes, confirming with your password.

Keep the recovery codes somewhere safe: they're the only way in if you lose the phone with the authenticator app.