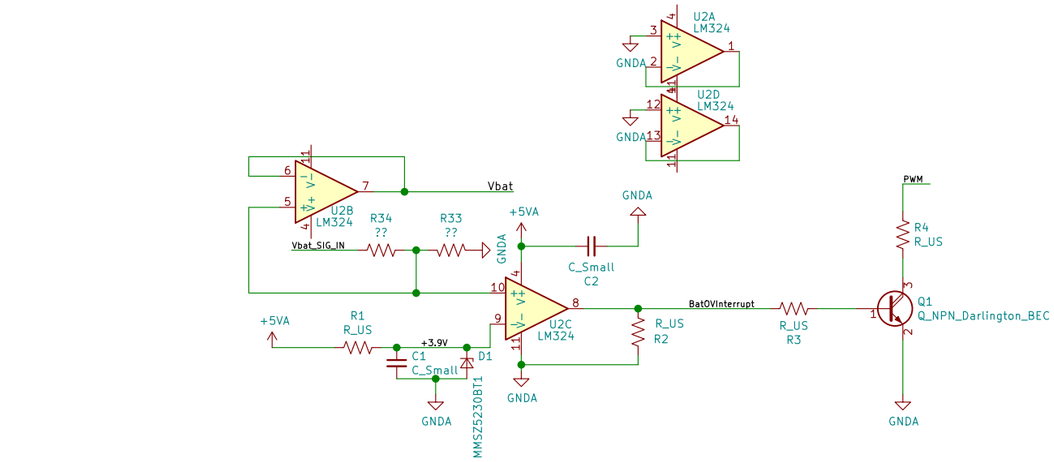

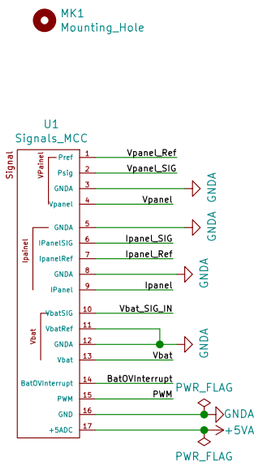

This signal is a current up to 12.5mA.
120 Ohms will produce 1.5V.
It means that this overall bock needs to have a gain of 2 to produce 3V for the microcontroller.

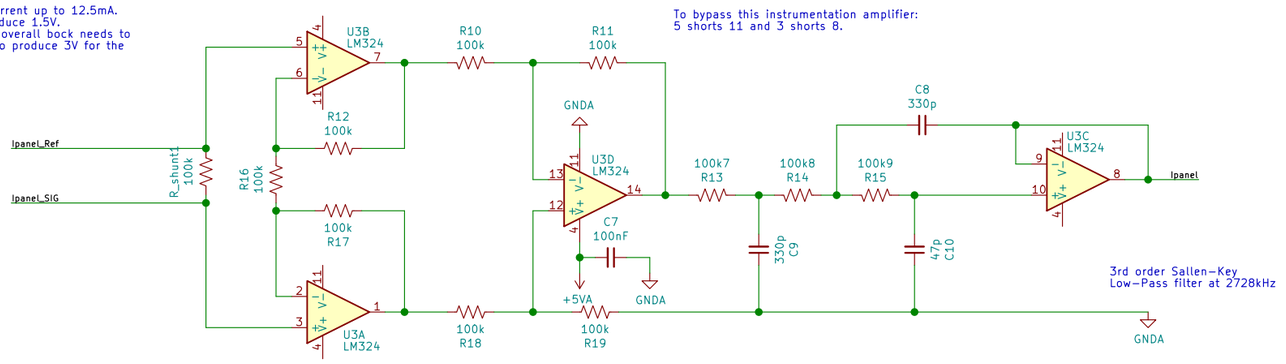

To bypass this instrumentation amplifier:
5 shorts 11 and 3 shorts 8.

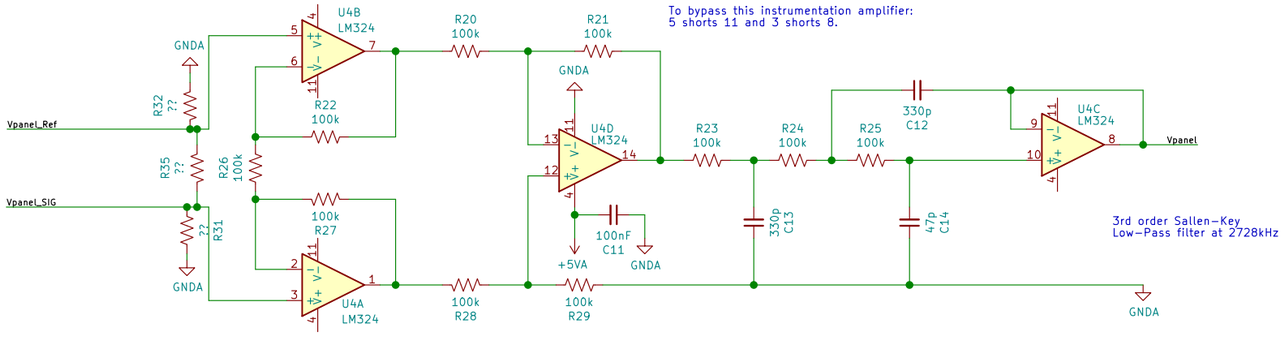

To bypass this instrumentation amplifier:
5 shorts 11 and 3 shorts 8.

Sheet: /		
File: Signal.sch		
Title:		
Size: A3	Date:	**Rev:**
KiCad E.D.A. kicad (5.0.0-rc2-dev-586-g888c43477)		Id: 1/1