


Solution to unable to connect



If you cannot connect during the rst run, please click here to install or repair NET6.0

1.No display on the screen:

Check that the device's data cable is connected to the motherboard's built-in USB socket. Check if the data cable is connected to the USB-C port of the device(For products with USB-C port)

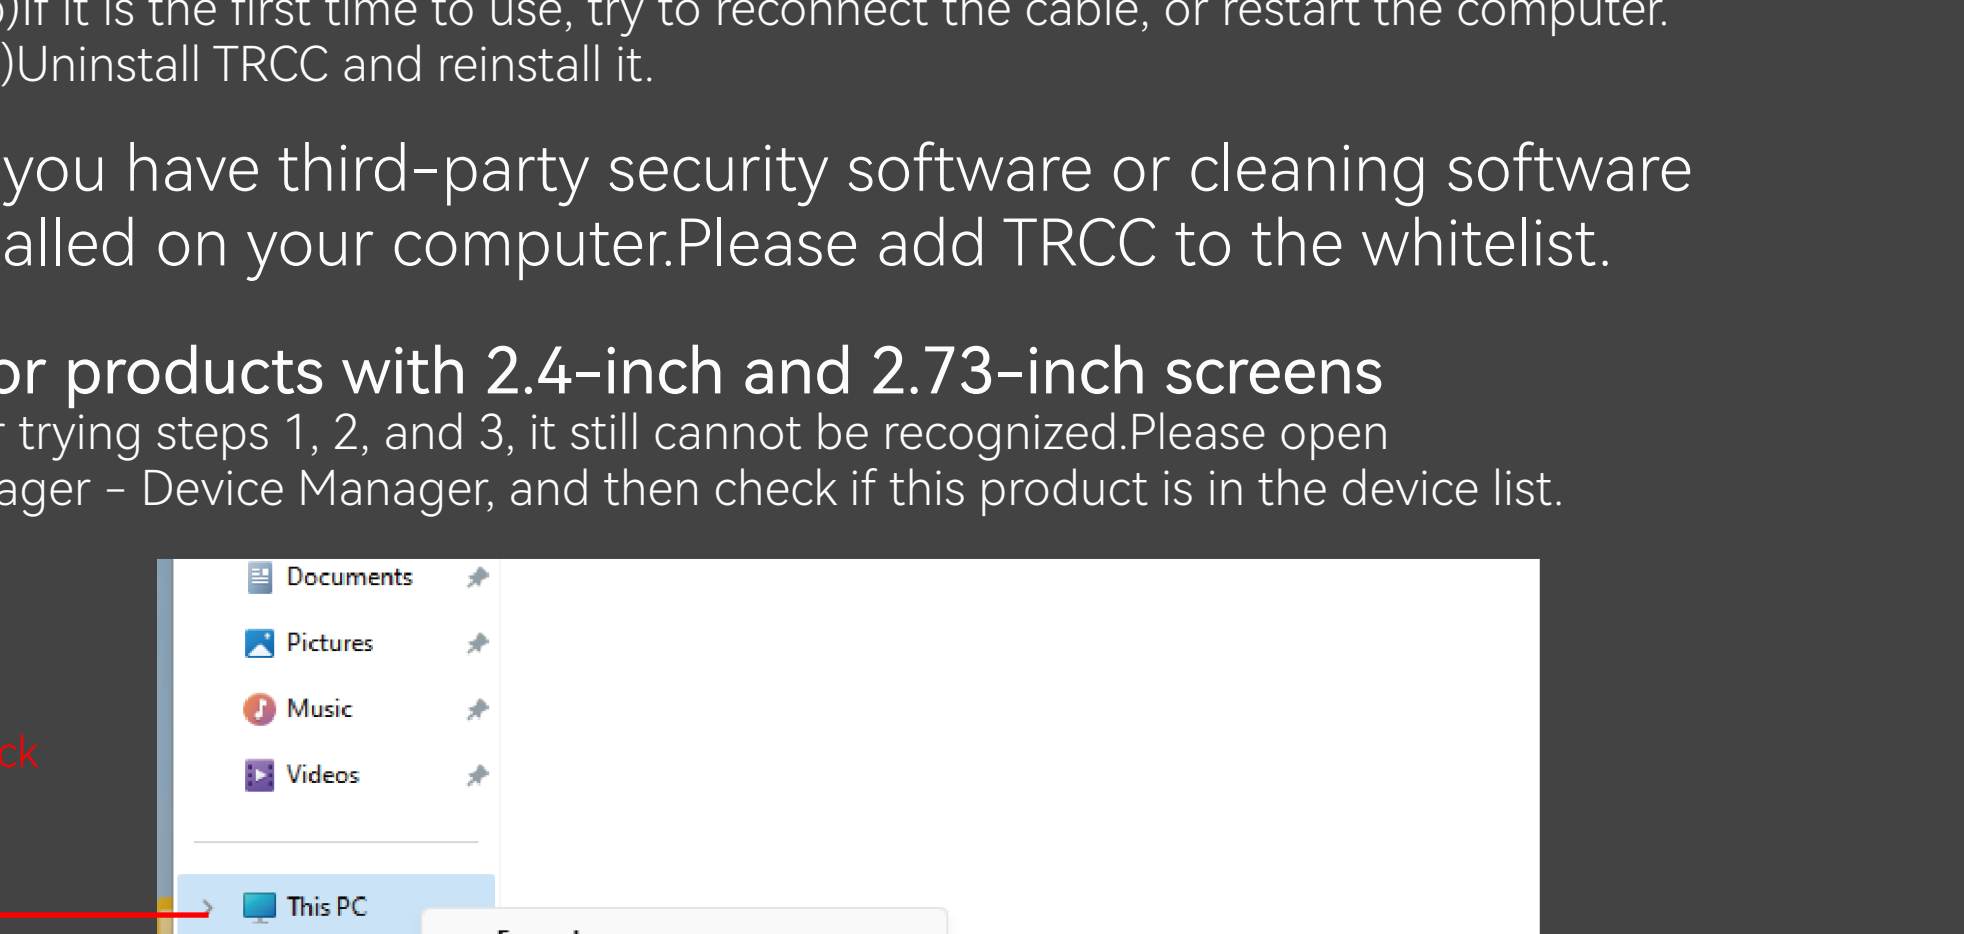



2.When the device is connected correctly and the screen is on, TRCC still cannot recognize the device:

- Try restarting TRCC.
- If it is the first time to use, try to reconnect the cable, or restart the computer.
- Uninstall TRCC and reinstall it.




3.If you have third-party security software or cleaning software installed on your computer.Please add TRCC to the whitelist.

4.For products with 2.4-inch and 2.73-inch screens

After trying steps 1, 2, and 3, it still cannot be recognized.Please open Manager - Device Manager, and then check if this product is in the device list.

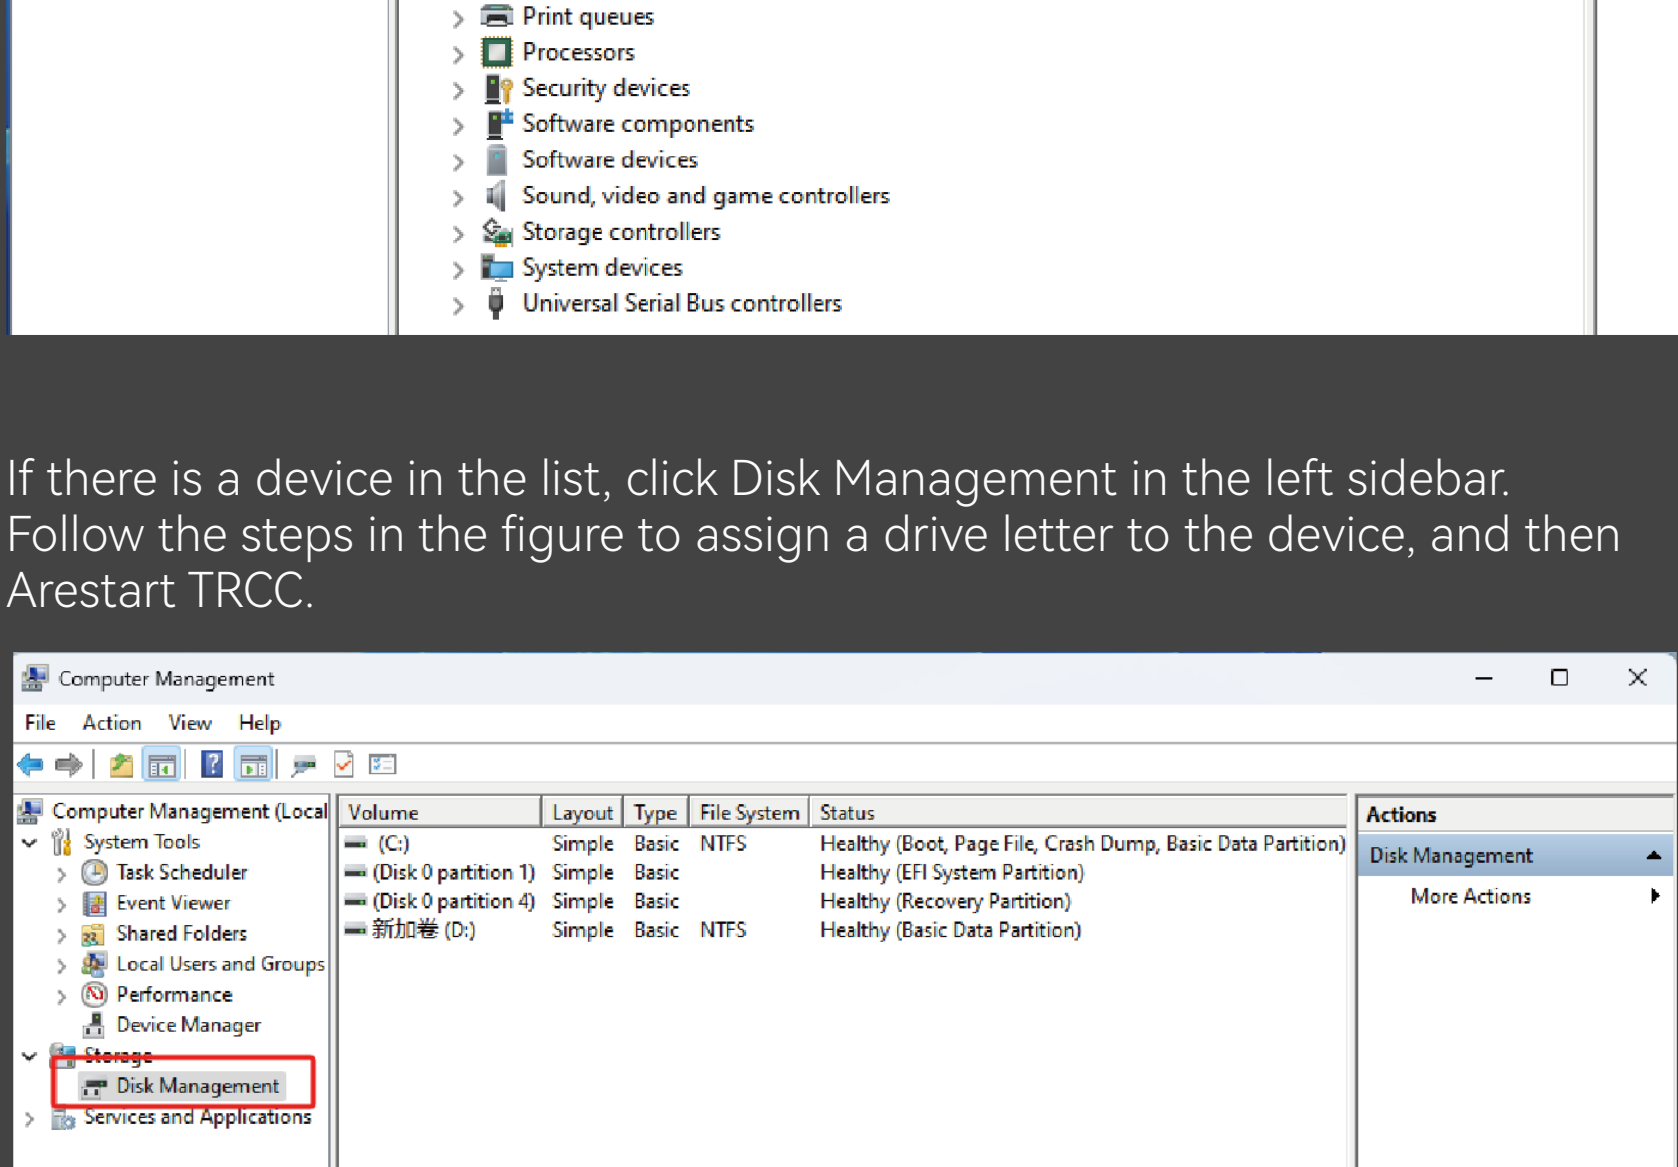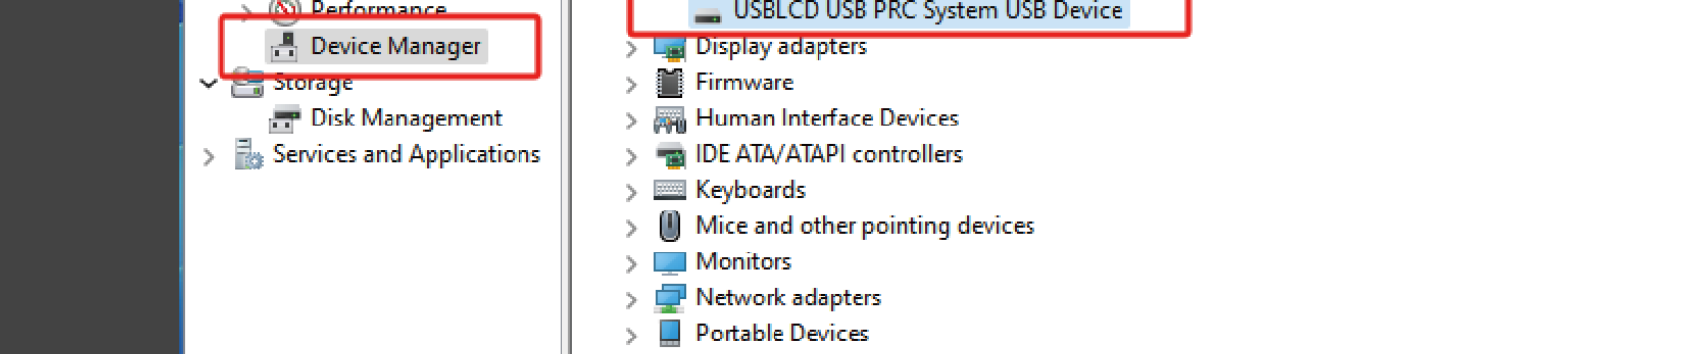


If there is a device in the list, click Disk Management in the left sidebar. Follow the steps in the figure to assign a drive letter to the device, and then Restart TRCC.

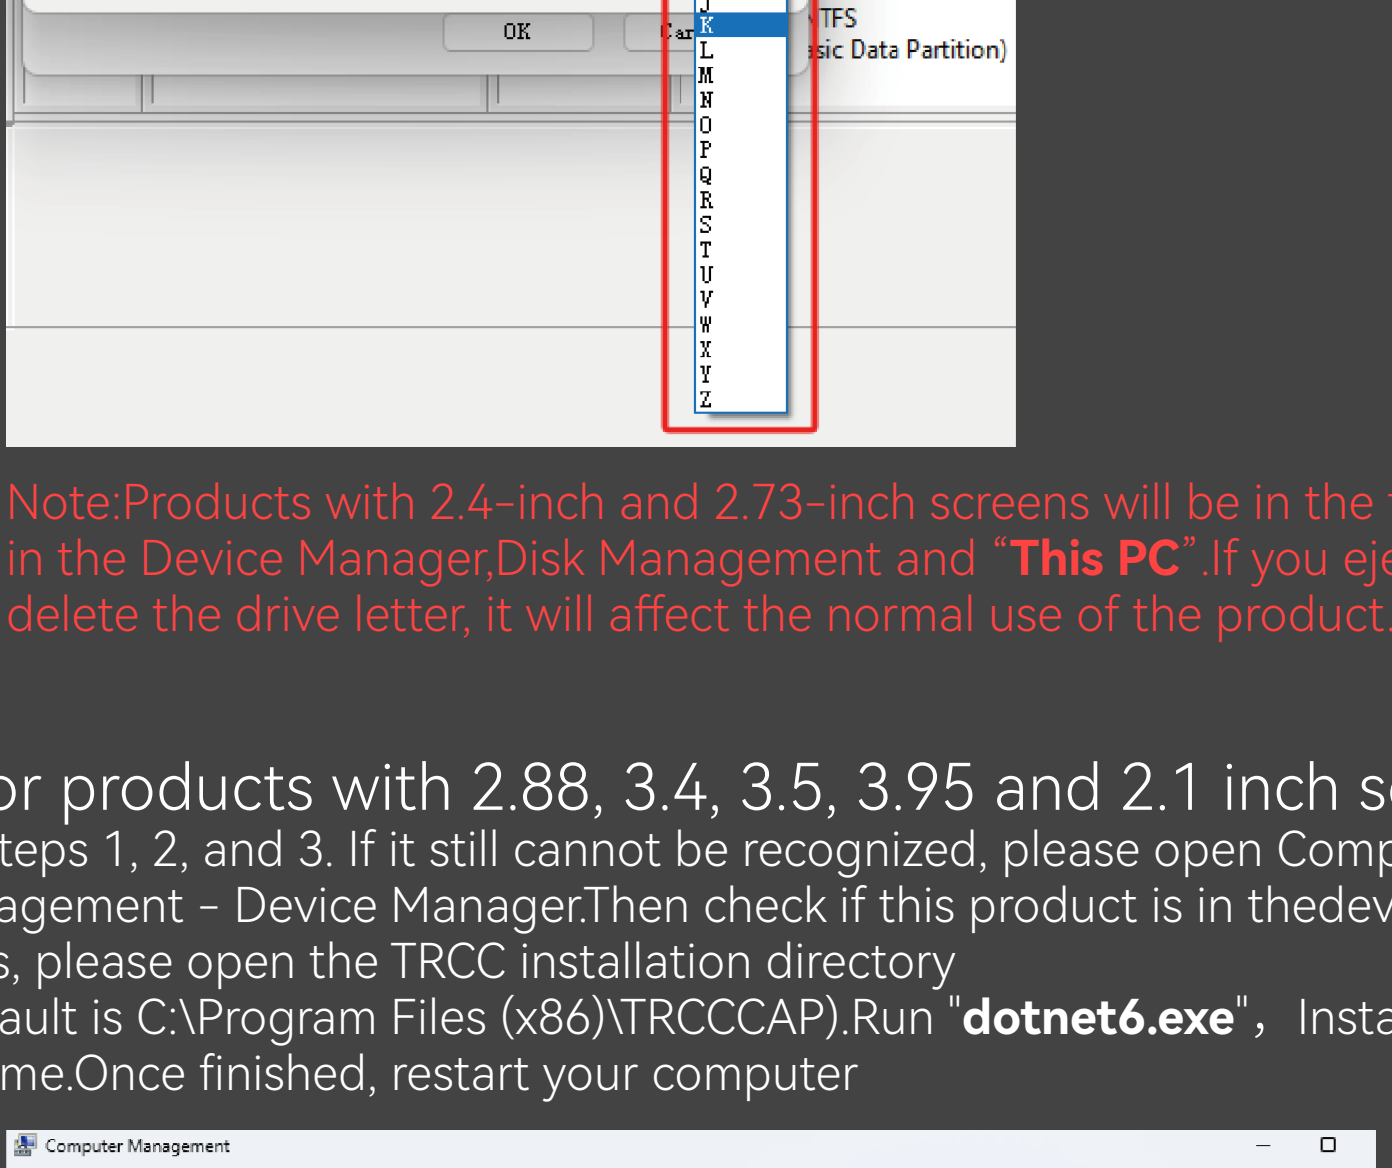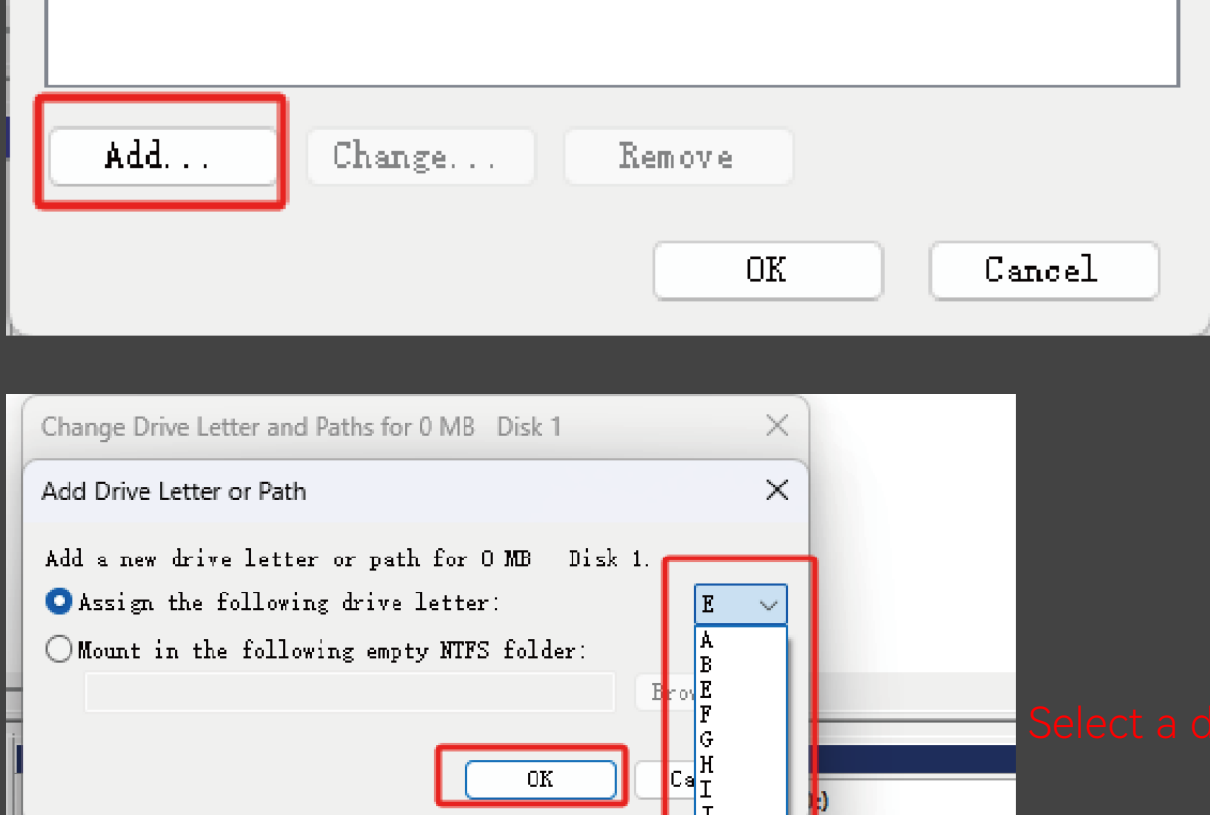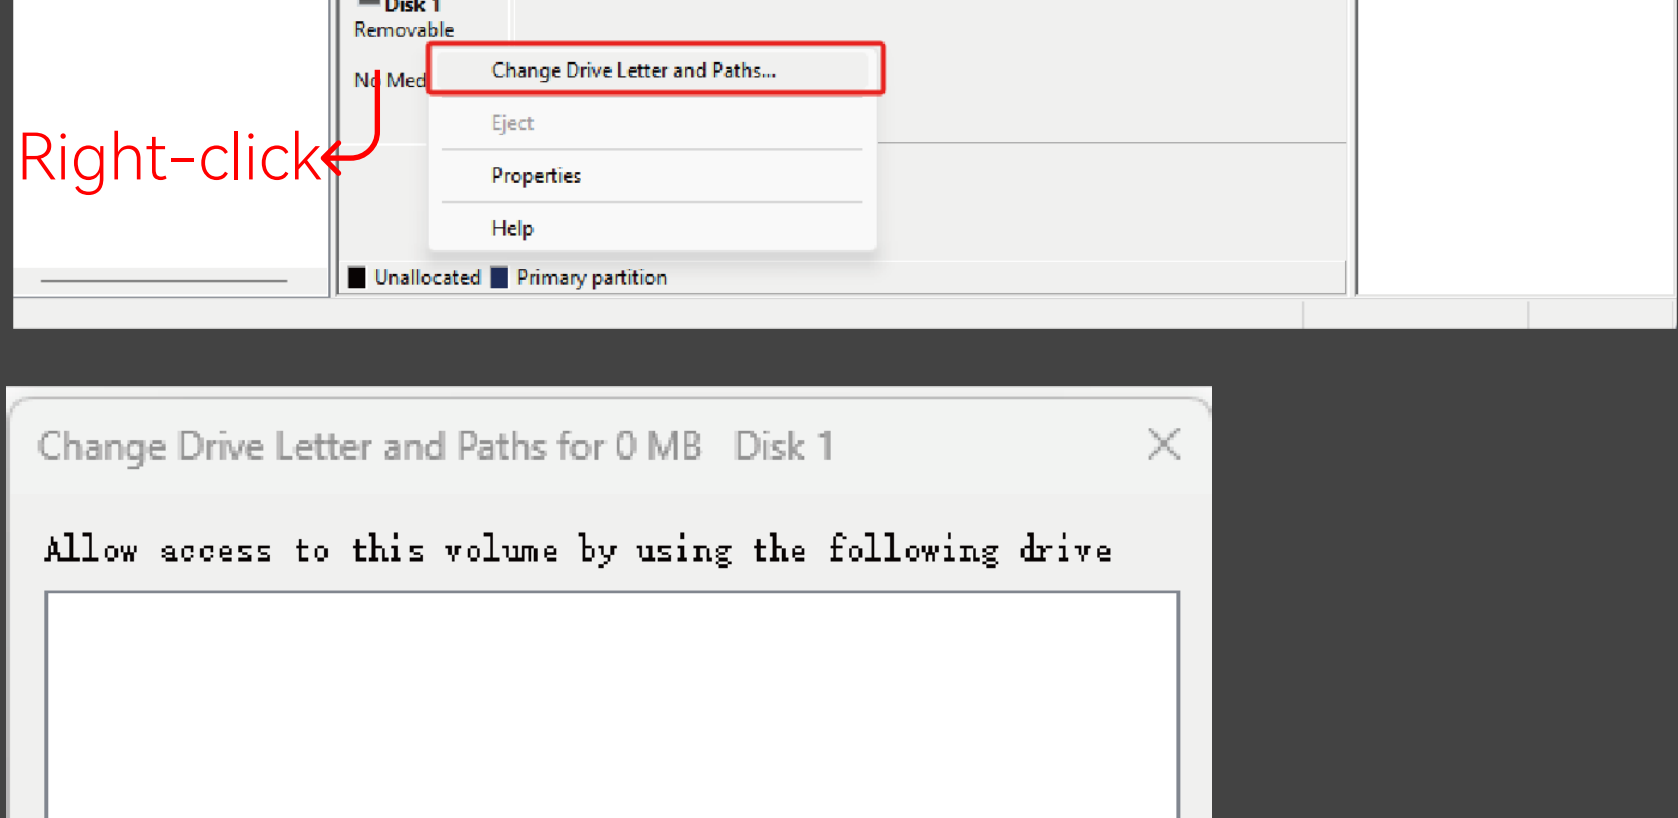

Note:Products with 2.4-inch and 2.73-inch screens will be in the form of disks in the Device Manager.Disk Management and "This PC". If you eject this disk and delete the drive letter, it will affect the normal use of the product.


5.For products with 2.88, 3.4, 3.5, 3.95 and 2.1 inch screens

Try steps 1, 2, and 3. If it still cannot be recognized, please open Computer Management - Device Manager.Then check if this product is in the device list. If yes, please open the TRCC installation directory (default is C:\Program Files (x86)\TRCCAP).Run "dotnet6.exe", Install.NET 6.0 runtime.Once finished, restart your computer

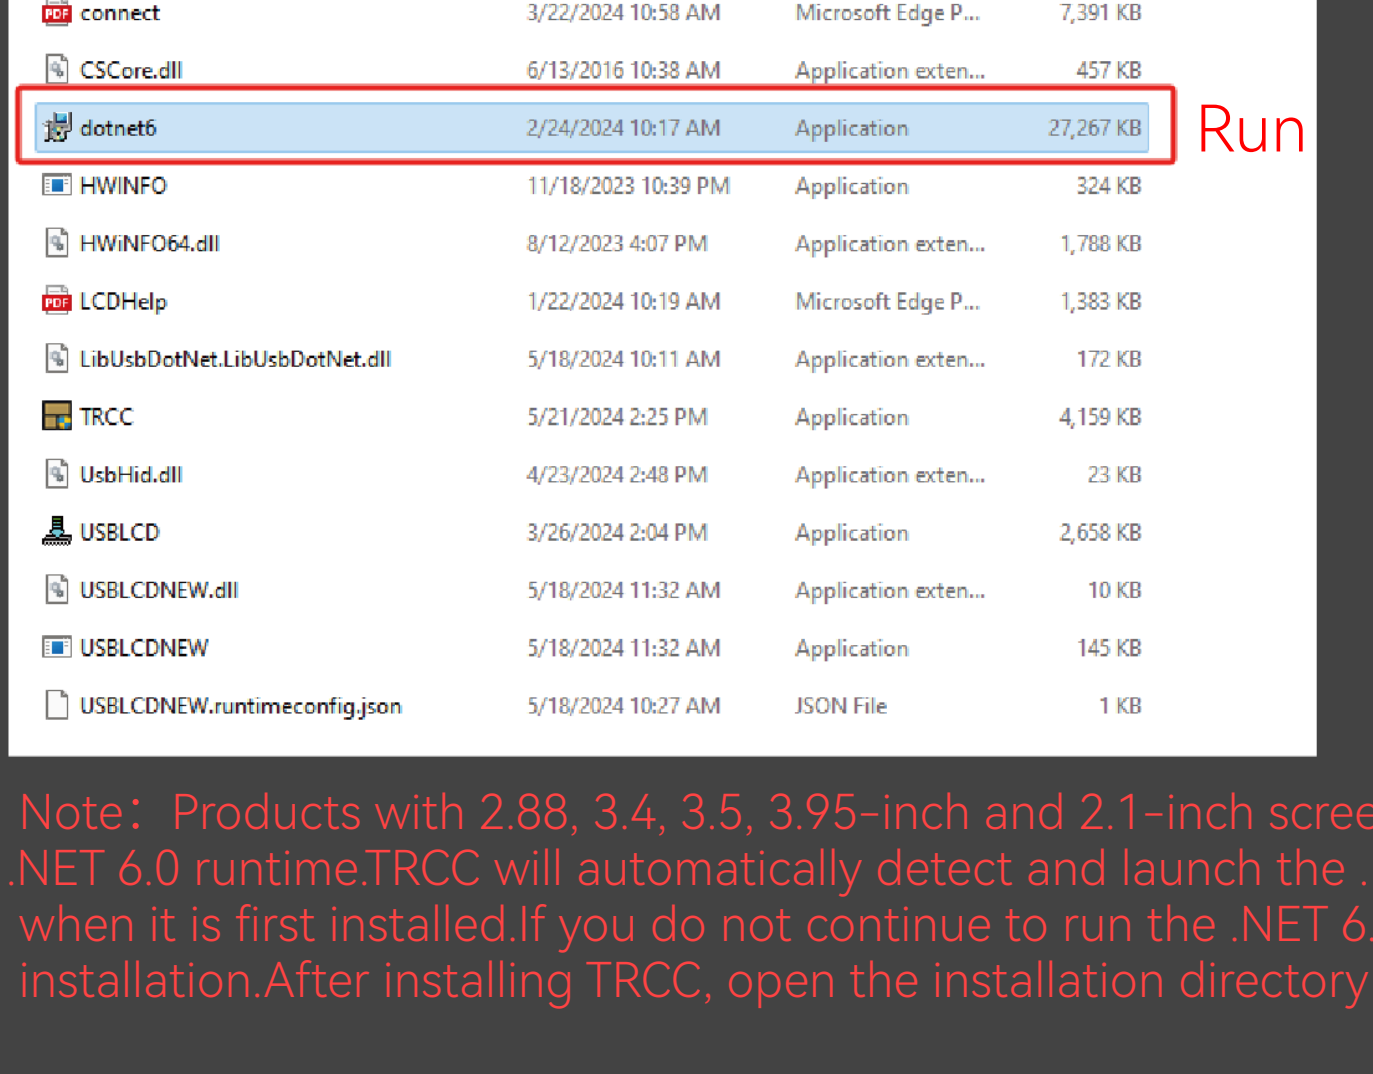


Note: Products with 2.88, 3.4, 3.5, 3.95-inch and 2.1-inch screens require .NET 6.0 runtime.TRCC will automatically detect and launch the .NET 6.0 installer when it is first installed.If you do not continue to run the .NET 6.0 installer during installation.After installing TRCC, open the installation directory and run "dotnet6.exe"




If the system is Windows 11 and is still not recognized after trying the above methods.Please open Manager - Device Manager. Double-click the "USBDISPLAY" item in the device list to open the device properties.

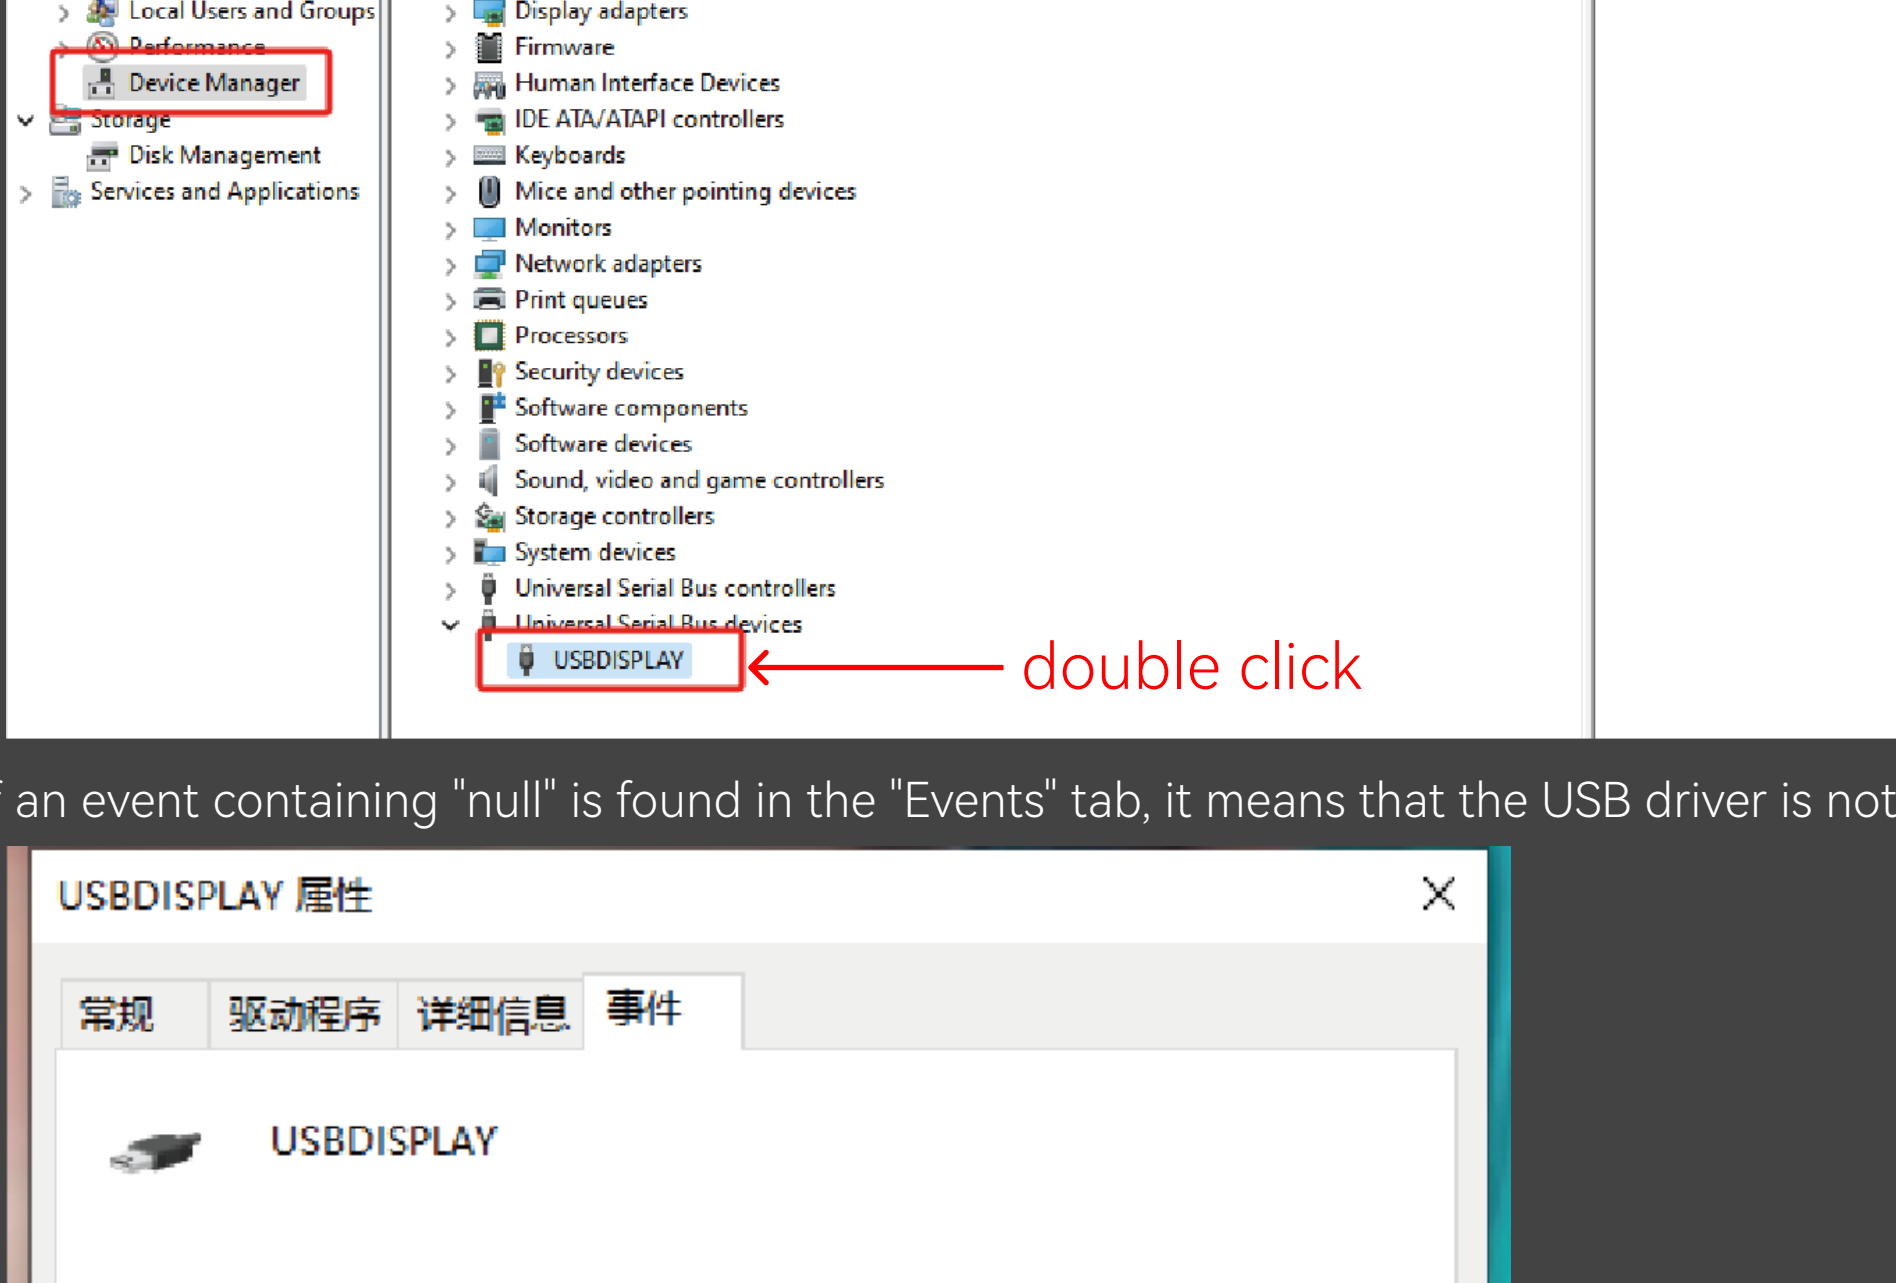

If an event containing "null" is found in the "Events" tab, it means that the USB driver is not loaded correctly.

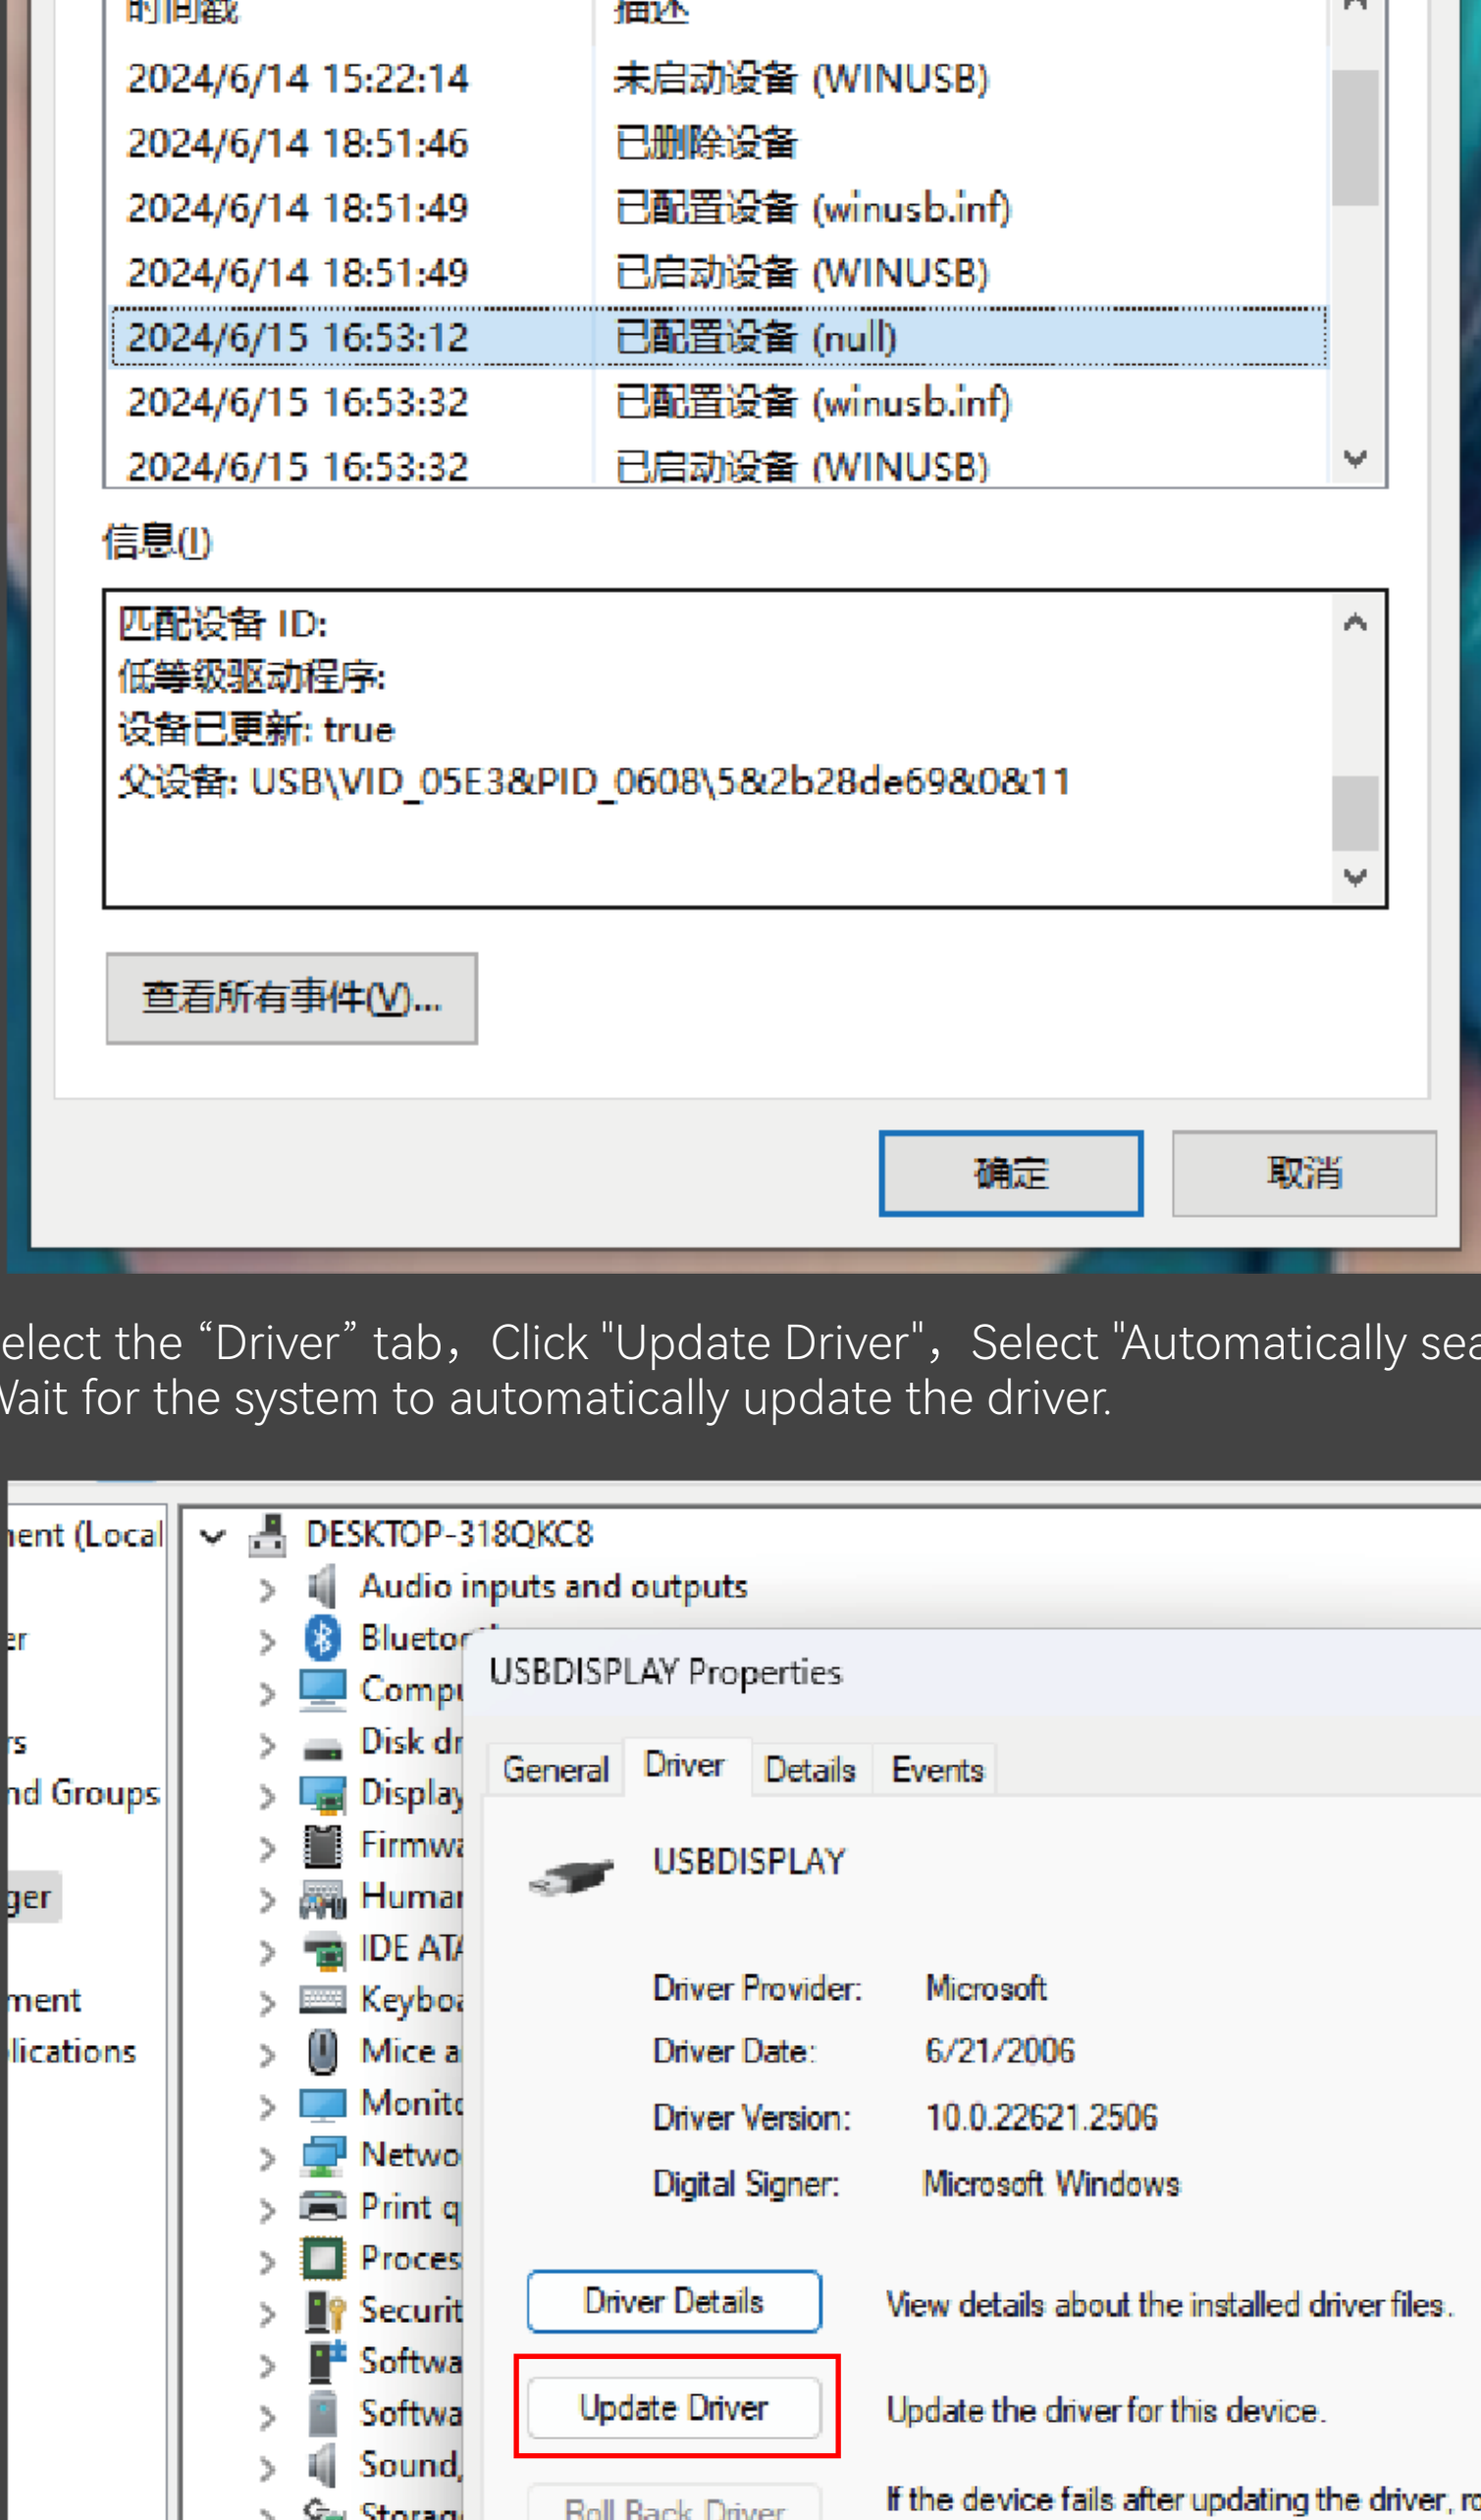

Select the "Driver" tab,"Update Driver", Select "Automatically search for drivers". Wait for the system to automatically update the driver.

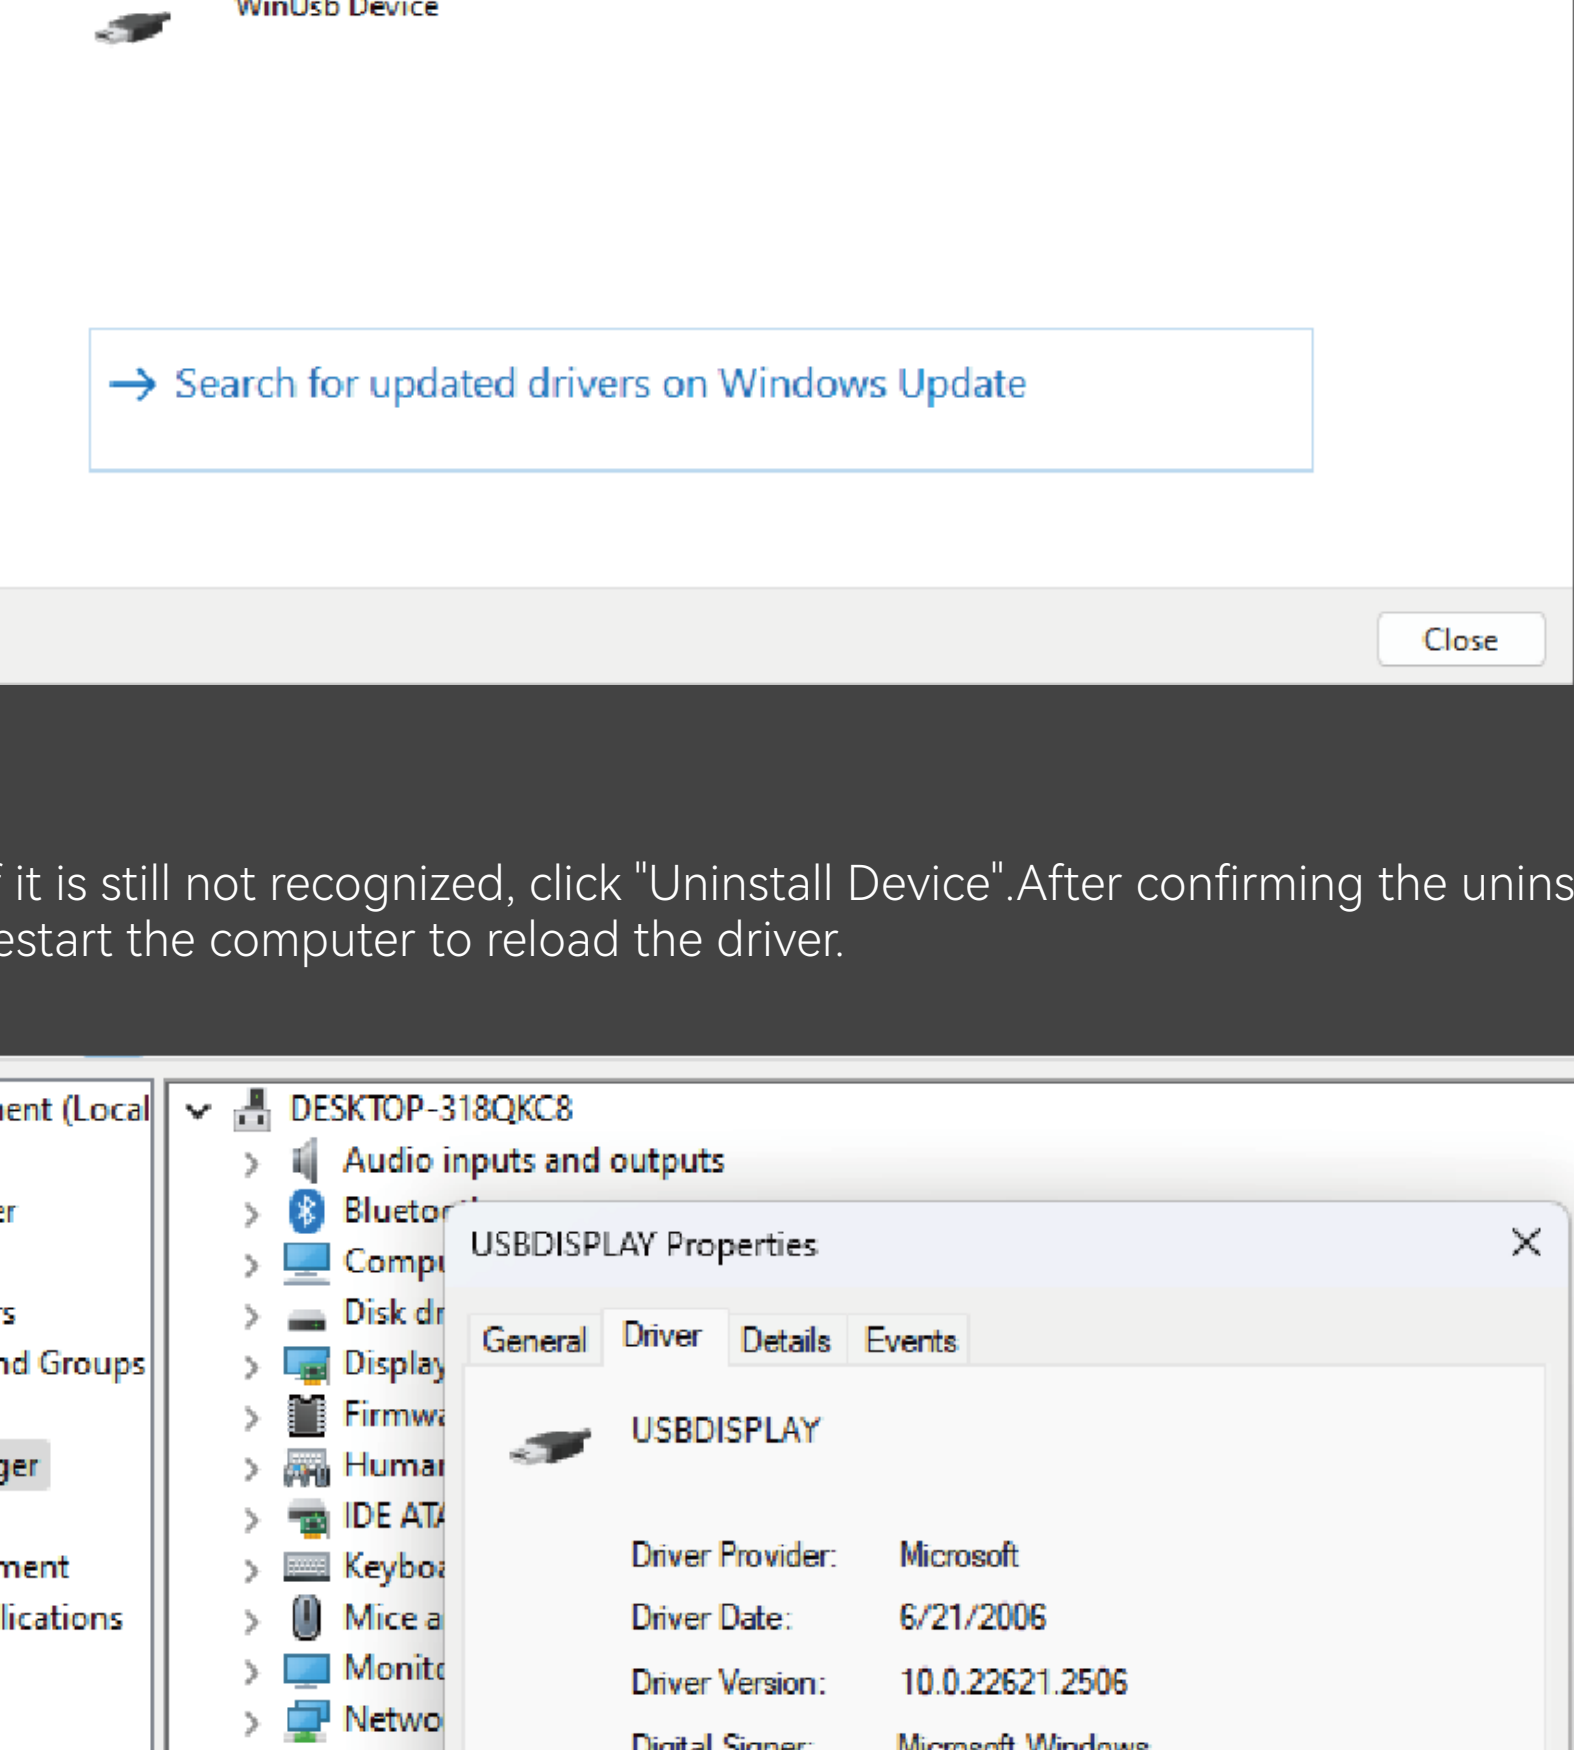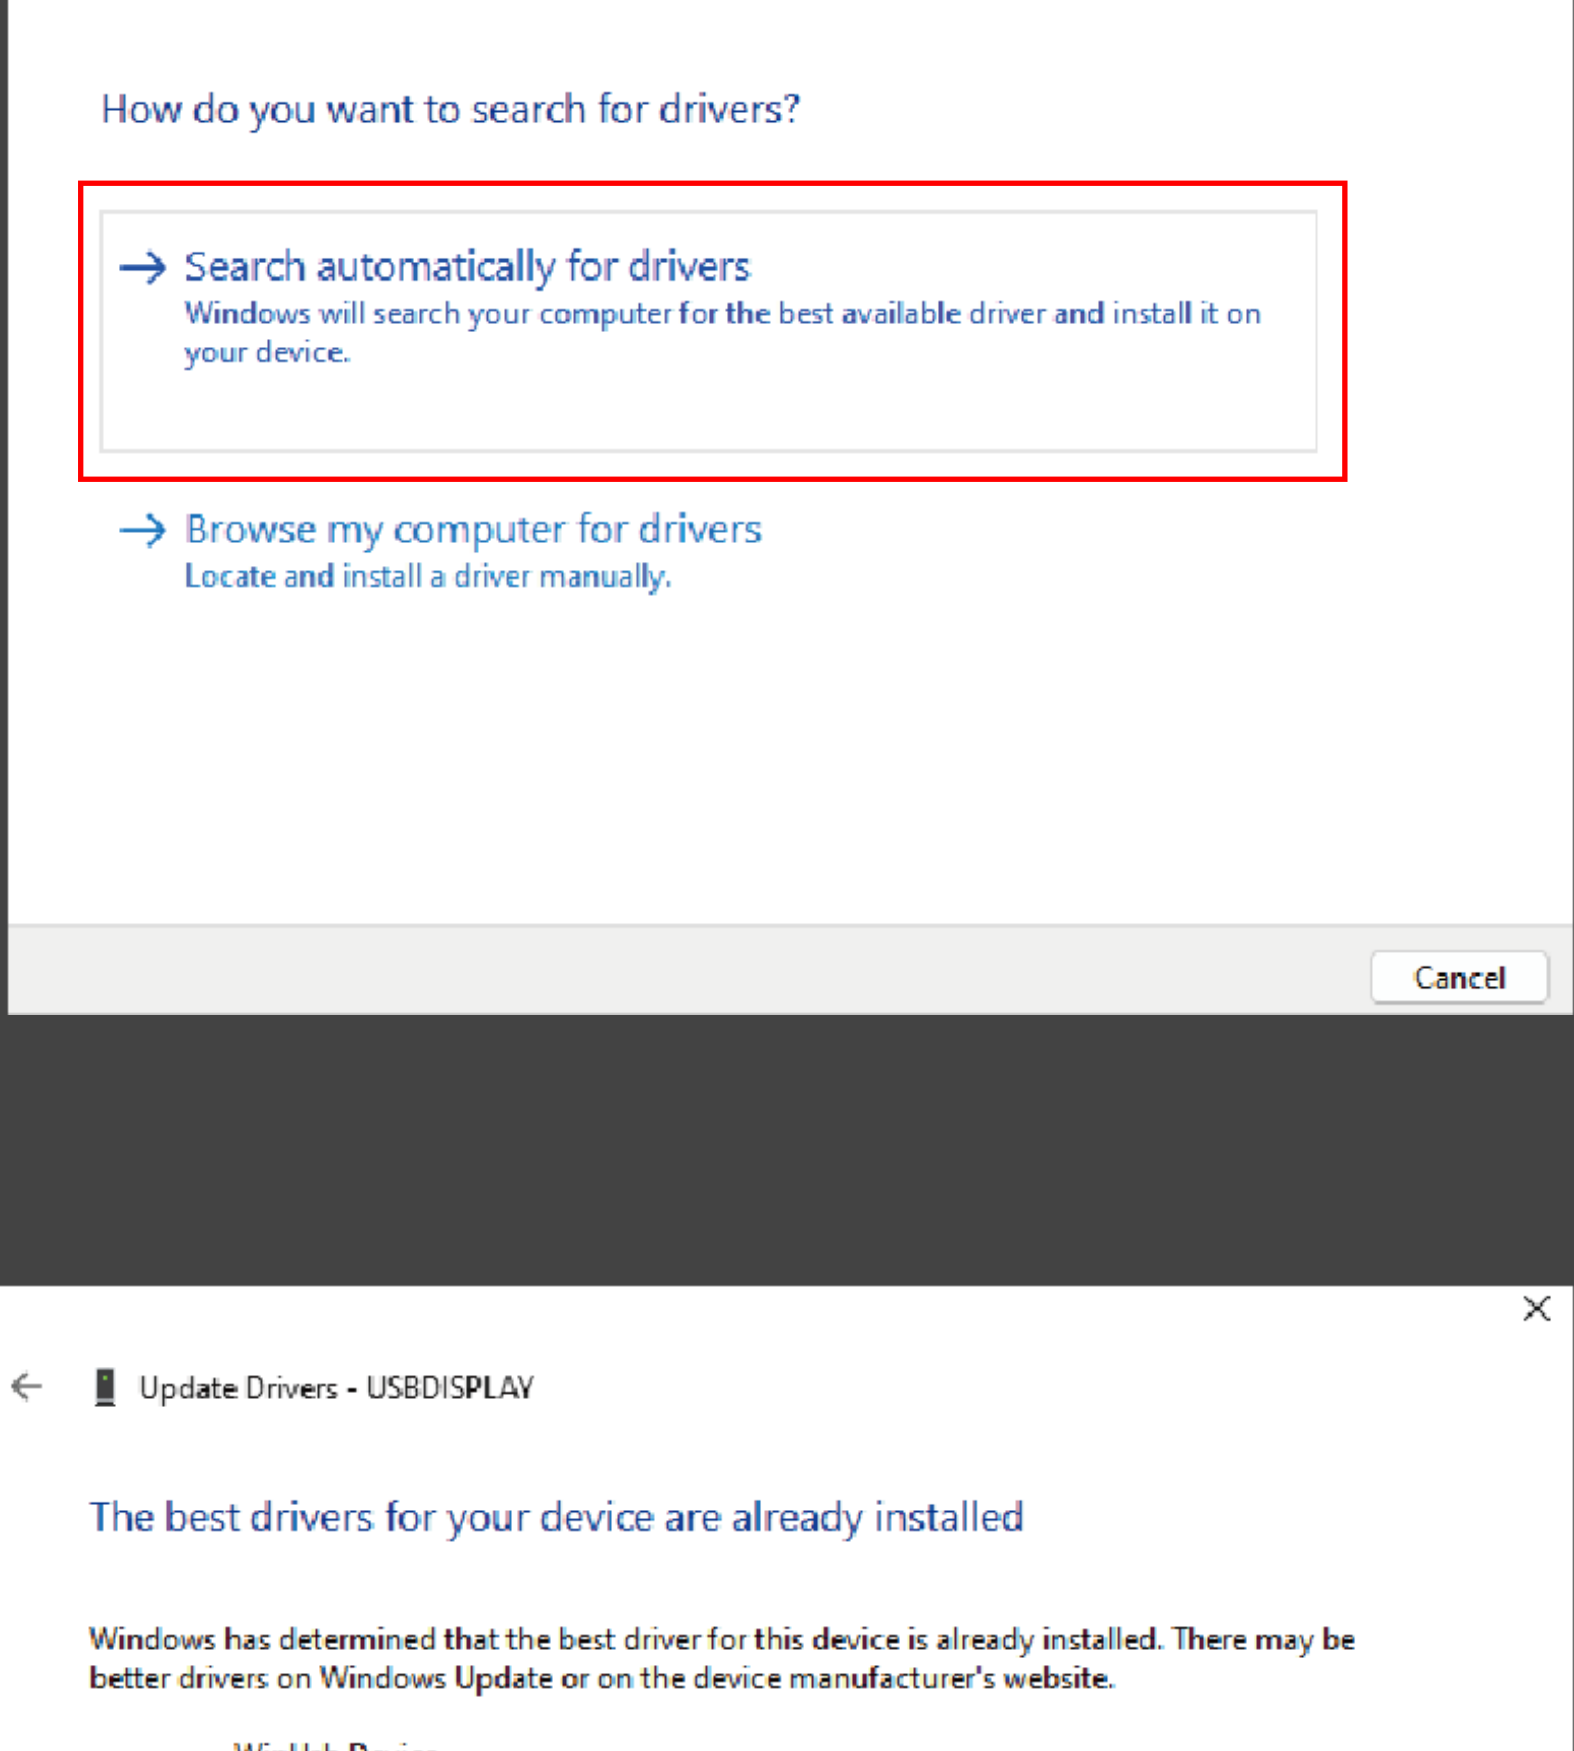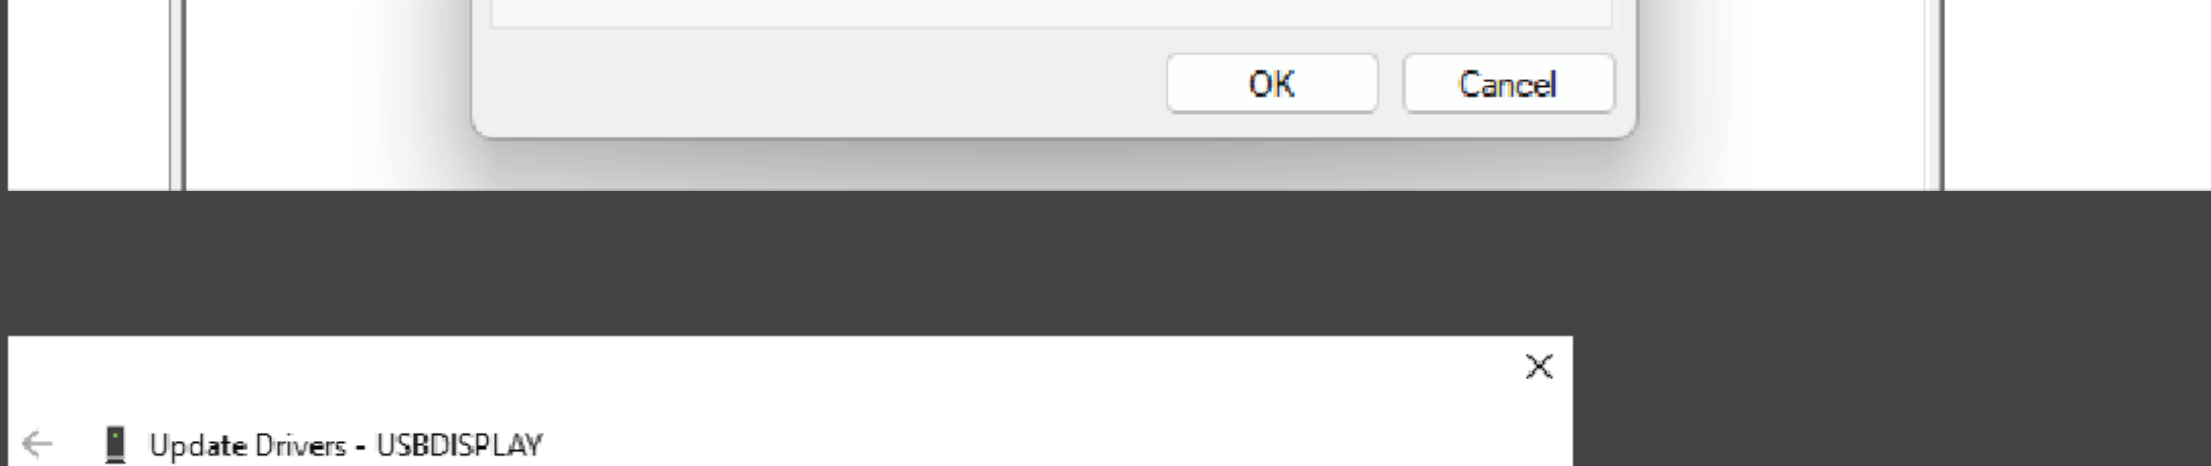

If it is still not recognized, click "Uninstall Device".After confirming the uninstallation, restart the computer to reload the driver.

