



Quick Start: Mounting a ProEM:1600² or ProEM:1600⁴ to an Acton Series Spectrograph

Tools:

5/32" Hex wrench

3/32" Hex wrench

Phillips screwdriver

(3) 10-32 x 9/16" Pan Head Phillips, Stainless Steel screws (provided in Spectrometer Kit bag)




Procedure:


1. Using the 5/32" hex wrench, remove shipping plate. Store plate and screws.



2. Remove spacer. Set spacer to the side: you will need it for Step 5. Store screws.

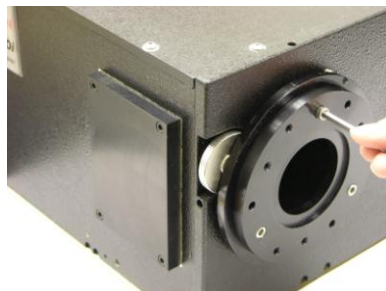

3. Loosen the 2 setscrews with the 3/32" hex wrench.

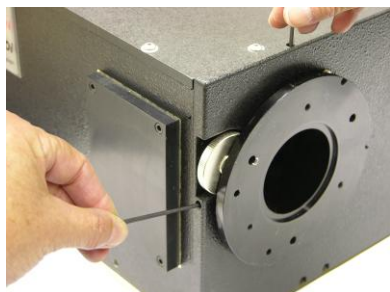


4. Gently rotate and pull sliding tube out. Set tube to the side: you will need it for Step 6.






5. With camera on end, place spacer on front of camera. Align 3 through holes in spacer to the holes in the camera face as shown.
6. Put sliding tube on top of spacer. Align 3 pan head screws so they go through the tube flange, spacer, and enter the holes on the camera face.

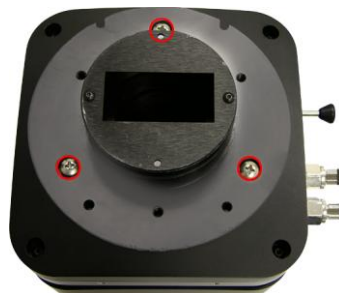

7. Tighten the screws.

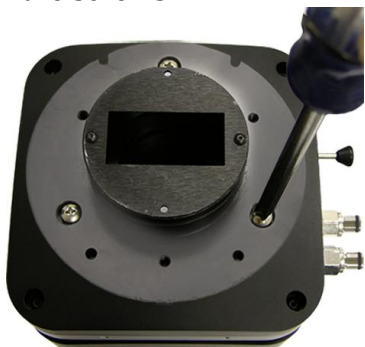

8. Gently rotate the camera while inserting the sliding tube into the spectrograph.



9. Tighten the 2 setscrews.

