7.3 Peeling roller replacement






Wear the glove when you touch the chuck table. Touching the chuck table with bare hands cause of burn injuries.

Failure to observe the caution may cause of injuries to human body and damage/performance decrement of the equipment.

<Peeling roller (Lower) replacement>

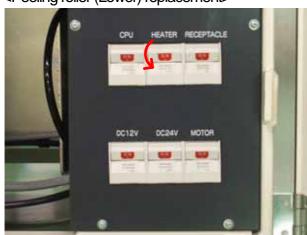


(1) Turn off the [HEATER] switch of the power box. Check whether the chuck table temperature is fallen.



Do not use the cutter knife. It may give damages to the rollers.

(2) Cut the peeling tape with the scissor.

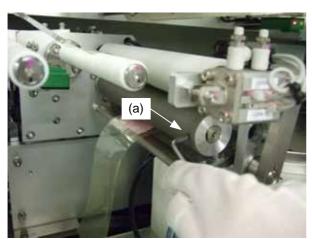


(3) Loosen the screw (a), and remove the peeling roller (Lower). Adjust the screw (a) position to turn the peeling roller (Lower) using manual operation if necessary.

7.3 Peeling roller replacement (Continued)



(4) Place a new peeling roller (Lower), and adjust the flat part of the shaft is beneath the screw hole of (a).



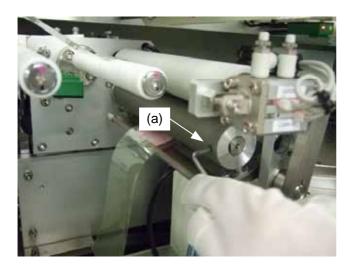

(5) Tighten the screw (a).