



COORDINATED SAFETY PLAN
EFFECTIVE | REVISION DATE: 2-20-2023

Technology Services

3422 General Hudnell, San Antonio, Texas 78226
(210) 488-9066 • <http://www.cdi-tech.net>

Table of Contents

POLICY STATEMENT ON SAFETY	1
DUTIES AND RESPONSIBILITIES	2
COMPLIANCE AND ENFORCEMENT	5
SAFETY COMMITTEE	7
COMMUNICATION	8
CODE OF SAFE PRACTICES	9
ELECTRICAL SAFETY PROGRAM	25
PPE PROGRAM	30
BLOODBORNE PATHOGENS	35
HEAT ILLNESS AND PREVENTION	38
SILICA DUST EXPOSURE CONTROL PLAN	40
SCAFFOLDS	43
AERIAL LIFTS	45
AERIAL LIFT RESCUE PLAN	47
HAZARD IDENTIFICATION AND ASSESSMENT	50
HAZARD PREVENTION, CORRECTION, AND CONTROL	52
HAZARD COMMUNICATION PROGRAM	53
FIRST AID AND MEDICAL EMERGENCY PROCEDURES	59
ACCIDENT / EXPOSURE INVESTIGATION	61
TRAINING AND INSTRUCTION	64
FIRE PREVENTION AND EMERGENCY ACTION PLAN	66
FLEET AND DRIVER SAFETY	69
FALL PROTECTION	72
LOCK-OUT / TAG-OUT PROGRAM	76
CONFINED SPACE OPERATIONS	80
FORKLIFTS	83
HYDROGEN SULFIDE	85
LEAD AWARENESS	88
RECORDKEEPING	90
HEARING CONSERVATION	91
NFPA 70E	98
COVID-19	102
PTP/JHA/JSA	103
MATERIAL HANDLING	104
APPENDIXES	105

Technology Services

POLICY STATEMENT ON SAFETY

The management of CDI is very interested in working with you to provide a safe place in which to work. The prevention of accidents and injuries to our employees is the prime objective.

All company personnel are expected to take an active and constant interest in the prevention of accidents. We call upon all employees to use good common sense and in all their actions, take a second to think of the consequences to your fellow employees. We cannot overemphasize that all employees must do their part to minimize accidents.

Please show your support by demonstrating the following:

1. OBSERVING COMPANY SAFETY RULES.
2. KEEPING WORK AREAS FREE OF UNSAFE CONDITIONS.
3. AVOIDING AND ELIMINATING UNSAFE ACTS.
4. PROMPTLY REPORTING UNSAFE ACTS AND CONDITIONS.
5. REPORTING ALL ACCIDENTS IMMEDIATELY.

Accidents cause suffering and pain. We value each of you as individuals and hope you will cooperate with us in this important endeavor.

Any constructive criticism or suggestions toward improving safety on any of our jobs will be given prompt and careful consideration.

Regards,

CDI Management

Technology Services

DUTIES AND RESPONSIBILITIES

A successful Safety and Injury and Illness Prevention Program can only be achieved and maintained when there is active interest, participation, and accountability at all levels of the organization. To ensure this, CDI delegates the following safety duties to all management personnel. In some cases, employees will need to perform safety duties outside their regular responsibilities to prevent accidents.

The Safety Program Administrator must plan, organize, and administer the program by establishing policy, setting goals and objectives, assigning responsibility, motivating subordinates, and monitoring results. Company management will support and maintain an ongoing Safety and Injury and Illness Prevention Program through the following:

1. Providing clear understanding and direction to all management and employees regarding the importance of safety through the development, implementation, monitoring and revision of policies and procedures.
2. Providing budgetary support for the Safety / Injury and Illness Prevention Program through the provision of adequate funds for the purchase of necessary safety materials, safety equipment, proper personal protective equipment, adequate time for employee safety training, and maintenance of tools and equipment.
3. Overseeing development, implementation, and maintenance of the safety manual, IIPP, and other required safety programs.
4. Maintaining a company commitment to accident prevention by expecting safe conduct on the part of all managers, supervisors, and employees.
5. Holding all levels of management and employees accountable for accident prevention and safety.
6. Reviewing all accident investigations and create safety bulletin to address.

Managers and Supervisors play a key role in the prevention of accidents on the job. They have direct contact with the employees and know the safety requirements for various jobs. Safety responsibilities for these individuals include:

1. Enforce all safety rules in the Code of Safe Practices and ensure safe work procedures.
2. Verifying corrective action has been taken regarding safety hazards and accident investigations.
3. Conducting periodic documented inspections of the work sites to identify and correct unsafe actions and conditions that could cause accidents.
4. Act as a leader in company safety policy and setting a good example by following all safety rules.
5. Becoming familiar with local, state, and federal safety regulations. The Safety Coordinator is available for assistance.
6. Train all new and existing employees in proper safety procedures and the hazards of the job.
7. Instruct all employees, under their supervision, in safe work practices and job safety requirements.
8. Hold daily and/or weekly safety meetings with employees.
9. Ensure employee proficiency when assigning work requiring specific knowledge, special operations or equipment.
10. Ascertain that all machinery, equipment, and workstations are maintained in safe working condition and operate properly.

11. Correct unsafe acts and conditions that could cause accidents.
12. Communicate with all employees about safety and accident prevention activities.
13. Correct the cause of any accident as soon as possible.
14. Ascertain that proper first aid and fire-fighting equipment is maintained and used when conditions warrant its use.
15. Maintain good housekeeping conditions at all times.
16. Investigate all injuries and accidents to determine their cause and potential corrective action.
17. Ascertain that all injuries involving our employees that require medical attention are properly treated and promptly reported to the office.

The Safety Program Administrator acts as a safety resource for CDI and is responsible for maintaining program records. They will also be our primary person to deal with outside agencies regarding the safety program and its contents. Additional duties include:

1. Coordination of all loss prevention activities as a representative of management. Acting as a consultant to management in the implementation and administration of the Safety Program.
2. Develop and implement loss prevention policies and procedures designed to ensure compliance with the applicable rules and regulations of all federal, state, and local agencies.
3. Review all accident reports to determine cause and preventability.
4. Conduct periodic reviews of the program and job sites to evaluate performance, discuss problems and help solve them.
5. Consult with representatives of our insurance companies in order that their loss control services will support the Safety Program.
6. Review Workers' Compensation Claims. Help supply the insurance carrier with information about injured employees in order to keep loss reserves as low as possible.

Every employee is responsible for working safely, both for self-protection and for protection of fellow workers. Employees must also support all company safety efforts. Specific employee safety responsibilities include:

1. If you are unsure how to do any task safely, ask your supervisor.
2. Read and abide by all requirements of the Safety Manual.
3. Know and follow the Code of Safe Practices and all company safety policies and rules.
4. Wear **ALL** required personal protective equipment.
5. Report all accidents and injuries, no matter how minor, to your supervisor immediately.
6. Do not operate any equipment you have not been trained and authorized to use.
7. Report any safety hazards or defective equipment immediately to your supervisor.

8. Do not remove, tamper with or defeat any guard, safety device or interlock.
9. Never use any equipment with inoperative or missing guards, safety devices or interlocks.
10. Never possess, or be under the influence of, alcohol or controlled substances while on the premises.
11. Never engage in horseplay, bullying, harassment or fighting.
12. Participate in, and actively support, CDI safety program.



COMPLIANCE AND ENFORCEMENT

The compliance of all employees with our Safety Manual / IIPP is mandatory and shall be considered a condition of employment. Failure to comply with the policies and procedures in this manual is a safety violation. Random workplace inspections are conducted to ensure employees are following safety rules and policies.

The following programs will be utilized to ensure employee compliance with the safety program and all safety rules.

- Training programs
- Retraining
- Disciplinary action
- Optional safety incentive programs.

Training Programs

The importance of safe work practices and the consequences of failing to abide by safety rules will be covered in the New Employee Safety Orientation and safety meetings. This will help ensure that all employees understand and abide by company safety policies.

Retraining

Employees that are observed performing unsafe acts or not following proper procedures or rules will be retrained by their supervisor. A Safety Contact Report may be completed by the supervisor to document the training. If multiple employees are involved, additional safety meetings will be held.

Safety Incentive Programs

Although strict adherence to safety policies and procedures is required of all employees, CDI may choose to periodically provide recognition of safety-conscious employees and job sites without accidents through a safety incentive program.

Disciplinary Action:

The failure of an employee to adhere to safety policies and procedures can have a serious impact on everyone concerned. An unsafe act can threaten not only the health and well-being of the employee committing the unsafe act but can also affect the safety of his/her coworkers and customers. Accordingly, any employee who violates any of CDI's safety policies will be subject to disciplinary action.

Note: Failure to promptly report any on-the-job accident, injury or near miss, on the same day as the occurrence, is considered a serious violation of CDI's Code of Safe Practices. Any employee who fails to immediately report a work-related accident or injury, no matter how minor shall be subject to disciplinary action.

Employees will be disciplined for infractions of safety rules and unsafe work practices that are observed, not just those that result in an injury. Often, when an injury occurs, the accident investigation will reveal that the injury was caused because the employee violated an established safety rule and/or safe work practice(s). In any disciplinary action, the supervisor should be cautious that discipline is given to the employee for safety violations, and not simply because the employee was injured on the job or filed a Workers' Compensation claim.

Violations of safety rules and the Code of Safe Practices are to be considered equal to violations of other company policy. Discipline for safety violations will be administered in a manner that is consistent with CDI's system of progressive discipline. If, after training, violations occur, disciplinary action will be taken as follows:

1. Oral warning. Document it, including date and facts on the "Safety Contact Report" form. Add any pertinent witness statements. Restate the policy and correct practice(s).

2. Written warning. Retrain as to correct procedure/practice.
3. Written warning with suspension.
4. Termination

As in all disciplinary actions, each situation is to be carefully evaluated and investigated. The particular step taken in the disciplinary process will depend on the severity of the violation, employee history, and regard to safety. Managers and supervisors should consult with the office if there is any question about whether or not disciplinary action is justified. Employees may be terminated immediately for willful or extremely serious violations. Union or contract employees are entitled to the grievance process specified by their contract.

Note: YOU must be consistent in the enforcement of all safety rules.



SAFETY COMMITTEE

Purpose

The purpose of the safety committee is to promote workplace safety and health by increasing the communication, education, and involvement of company personnel. The Safety Program Administrator holds permanent membership in the safety committee in order to ensure that responsibility is delegated appropriately.

Membership

The safety committee membership shall be represented by the safety program administrator, Operation Manager, Electrical Services Director, one construction foreman, and one service technician.

Meetings

There will be one committee meeting every quarter. The dates will be determined by the members' schedules. All committee meetings and training will be conducted during working hours. All committee members will be compensated at their normal rate of pay during the meetings, committee specific training, and any other committee related duties.

Emergency Meetings

The committee may conduct an emergency meeting if the majority of the members feel that such a meeting is necessary. If an emergency meeting is called outside regular working hours, the non-salaried employees will be compensated at their overtime rate.

Recordkeeping

Complete and accurate records of the functions and proceedings of the safety committee will be maintained by the Corporate Office with copies distributed to each worksite.

Meetings will be recorded and minutes will be prepared following each committee meeting. Copies of the minutes will be kept at each worksite. These documents will be made available for inspection upon request by any employee.

Communication

All original written communications between CDI and the committee, or true copies thereof, will be maintained at each jobsite and made readily available for inspection by government agencies.

CDI shall issue a timely written response to all written questions and recommendations from the safety committee.

COMMUNICATION

This section establishes procedures designed to develop and maintain employee involvement and interest in the Safety Manual. These activities will also ensure effective communication between management and employees on safety related issues that is of prime importance to CDI. The following are some of the safety communication methods that may be used:

1. Periodic safety meetings with employees that encourage participation and open, two-way communication.
2. New employee safety orientation and provision of the Code of Safe Practices.
3. Provision and maintenance of employee bulletin boards discussing safety issues, accidents, and general safety suggestions.
4. Written communications from management or the Safety Program Manager, including memos, postings, payroll stuffers, and newsletters.
5. Anonymous safety suggestion program.

Employees will be kept advised of highlights and changes relating to the safety program. Management shall relay changes and improvements regarding the safety program to employees, as appropriate. Employees will be involved in future developments and safety activities, by requesting their opinions and comments, as necessary.

All employee-initiated safety related suggestions shall be properly answered, either verbally or in writing, by the appropriate level of management. Unresolved issues shall be relayed to the program manager or safety committee members.

All employees are encouraged to bring any safety concerns they may have to the attention of management. CDI will not discriminate against any employee for raising safety issues or concerns.

CDI also has a system of anonymous notification whereby employees who wish to inform the safety department of workplace hazards without identifying themselves may do so by phoning or sending written notification to the main office.

Technology Services

CODE OF SAFE PRACTICES

ALL EMPLOYEES

Housekeeping

1. All project wastes, trash, and/or scrap materials will be taken into consideration prior to work being performed to ensure proper disposal.
2. Prior to disposing of waste employees are to be specifically trained in proper disposal methods to ensure safe practices.
3. Do not place material such as boxes or trash in walkways and passageways.
4. Keep floors clear of items such as paper clips, pencils, tacks, or staples.
5. Clean up spills or leaks immediately by using a paper towel, rag or a mop and bucket.
6. Mop up water around drinking fountains, drink dispensing machines, and ice machines.
7. Do not store or leave items on stairways.
8. Do not block or obstruct stairwells, exits, or accesses to safety and emergency equipment such as fire extinguishers or fire alarms.
9. Straighten or remove rugs and mats that do not lie flat on the floor.
10. Return tools to their storage places after use.
11. Do not use gasoline for cleaning purposes.
12. Use caution signs or cones to barricade slippery areas such as freshly mopped floors.
13. Obey all posted safety and danger signs.
14. If waste material can be recycled please recycle in proper storage containers

Ergonomics and Video Display Terminals

1. Take periodic rest breaks from repetitive or prolonged activities by standing up and stretching.
2. Use a chair that is padded, is stable, mobile, swivels, and allows operator movement.
3. Sit straight up in your chair, and when needed use a footrest that has an adjustable height and is large enough to allow operator movement.
4. Adjust your computer screen and keyboard so that they are directly in front of you. Use a table large enough to hold keyboard, the display screen and all necessary documents.
5. Place the keyboard low enough so that the operator is not required to reach up or out to the keys.
6. Keep wrists and hands in a straight position while keystroking by keeping forearms parallel to the floor and elbows at your sides.

Hazardous Materials

1. Follow the instructions on the label and in the corresponding Safety Data Sheet/SDS for each chemical product used in your workplace.
2. Use personal protective clothing or equipment such as neoprene gloves, rubber boots, shoe covers, rubber aprons, and protective eyewear, when using chemicals labeled "Flammable", "Corrosive", and "Caustic" or "Poisonous".
3. Ensure proper handling, organization, and storage of waste and scrap materials to minimize potential impact to the humans and environment.
4. Each time you use your gloves, wash your gloves before removing them using cold tap water and normal hand washing motion. Always wash your hands after removing the gloves.
5. Use a rubber cradle when transporting unpackaged, glass bottles of chemicals.
6. Do not store chemical containers labeled "Oxidizer" with containers labeled "Corrosive" or "Caustic".
7. Wear chemical goggles and a face shield when using, applying, or handling chemical liquids or powders from containers labeled "Caustic" or "Corrosive".

Lifting Procedures

1. Plan the move before lifting; remove obstructions from your chosen pathway.
2. Test the weight of the load before lifting by pushing the load along its resting surface.
3. Single employees may carry up to 40lbs, team lift from 40-80lbs and mechanical means after 80lbs.
4. Any material longer than 10' requires a team lift or mechanical means of transport.
5. If the load is too heavy or bulky, use lifting and carrying aids such as hand trucks, dollies, pallet jacks and carts, or get

assistance from a co-worker.

6. If assistance is required to perform a lift, coordinate and communicate your movements with those of your co-worker.
7. Position your feet 6 to 12 inches apart with one foot slightly in front of the other.
8. Face the load.
9. Bend at the knees, not at the back.
10. Keep your back straight.
11. Get a firm grip on the object with your hands and fingers. Use handles when present.
12. Never lift anything if your hands are greasy or wet.
13. Wear protective gloves when lifting objects with sharp corners or jagged edges.
14. Hold objects as close to your body as possible.
15. Perform lifting movements smoothly and gradually; do not jerk the load.
16. If you must change direction while lifting or carrying the load, pivot your feet and turn your entire body. Do not twist at the waist.
17. Set down objects in the same manner as you picked them up, except in reverse.
18. Do not lift an object from the floor to a level above your waist in one motion. Set the load down on a table or bench and then adjust your grip before lifting it higher.
19. Slide materials to the end of the tailgate before attempting to lift them off a pick-up truck. Do not lift over the walls or tailgate of the truck bed.
20. Wear protective gloves when lifting objects that have sharp corners or jagged edges.

Ladders and Step Ladders

1. Read and follow the manufacturer's instructions label affixed to the ladder if you are unsure how to use the ladder.
2. Ladders must have OSHA/ANSI approval.
3. Only Fiberglass ladders Type IA (300lbs) and IAA (375lbs) are allowed for use, Type I (250lb) and II (225lb) are not allowed on any jobsite
4. Ladders must be inspected each time prior to use.
5. Do not use ladders that have loose rungs, cracked, or split side rails, missing rubber footpads, or other visible damage.
6. Keep ladder rungs clean and free of grease. Remove buildup of material such as dirt or mud.
7. Any ladders deemed defective should be tagged with "Do Not Use", replaced and disposed of.
8. Do not place a ladder in a passageway or doorway without posting warning signs or cones that detour pedestrian traffic away from the ladder. Lock the doorway that you are blocking with the ladder and post signs that will detour traffic away from your work.
9. Allow only one person on the ladder at a time.
10. Do not exceed the weight limits indicated on the ladder.
11. Face the ladder when climbing up or down.
12. Maintain three-points of contact by keeping both hands and one foot or both feet and one hand on the ladder at all times when climbing up or down.
13. When performing work from a ladder, face the ladder and do not lean backward or sideways from the ladder.
14. Do not stand on the top two rungs of any ladder.
15. Do not stand on a ladder that wobbles, or that leans to the left or right.
16. When using an extension ladder, extend the top of the ladder at least 3 feet above the edge of the landing at a 4:1 incline.
17. Secure the ladder in place by having another employee hold it.
18. Only use a ladder for the purpose at which it was designed for.
19. Do not move a rolling ladder while someone is on it.
20. Do not place ladders on barrels, boxes, loose bricks, pails, concrete blocks, or other unstable bases.
21. Do not carry items in your hands while climbing up or down a ladder.
22. Do not try to "walk" a ladder by rocking it. Climb down the ladder, and then move it.
23. Do not use a ladder as a horizontal platform.
24. If working at heights greater than 6' fall protection is required

Carts

1. Do not exceed the rated load capacity noted on the manufacturer's label on the cart.
2. Ask a spotter to help guide carts around corners and through narrow aisles.

3. Do not stand on a cart or float or use it as a work platform.

Hand Truck Operations

1. When loading hand trucks, keep your feet clear of the wheels.
2. Do not exceed the manufacturer's load rated capacity. Read the capacity plate on the hand truck if you are unsure.
3. Place the load so that it will not slip, shift, or fall. Use the straps, if they are provided, to secure the load.
4. For extremely bulky or pressurized items such as gas cylinders, strap or chain the items to the hand truck.
5. Tip the load slightly forward so that the tongue of the hand truck goes under the load.
6. Push the tongue of the hand truck all the way under the load that is to be moved.
7. Keep the center of gravity of the load as low as possible by placing heavier objects below the lighter objects.
8. Push the load so that the weight will be carried by the axle and not the handles.
9. If your view is obstructed, ask a spotter to assist in guiding the load.
10. Do not walk backward with the hand truck, unless going up stairs or ramps.
11. When going down an incline, keep the hand truck in front of you so that it can be controlled at all times.
12. Move hand trucks at a walking pace.
13. Store hand trucks with the tongue under a pallet, shelf, or table.

Storeroom/Stockroom:

1. Use long handled snips when cutting strapping bands away from a shipping container.
2. Wear your safety glasses and gloves when cutting strapping bands, uncrating materials, and driving nails.
3. Stand to the side of the strapping band when cutting it. Use extreme care when removing bands from pipe on round stock loads. Chock or block loads before removing band to prevent a load shift.
4. Do not use pallets or skids that are cracked or split or have other visible damage.
5. Stack heavy or bulky storage containers on middle and lower shelves of the storage rack.
6. Do not run on stairs or take more than one-step of a staircase at a time.
7. Do not jump from elevated places such as truck beds, platforms, or ladders.
8. Do not lift slippery or wet objects; use a hand truck.
9. Follow the safe handling instructions listed on the label of the container or listed on the corresponding Safety Data Sheet when handling each chemical stored in the stockroom.
10. Do not handle or load any containers of chemicals if their containers are cracked or leaking.

Driving Safety

Fueling Vehicles

1. Turn the vehicle off before fueling.
2. Do not smoke while fueling a vehicle.
3. Wash hands with soap and water if you spill gasoline on your hands.

Driver Safety Rules

1. The use of a vehicle while under the influence of intoxicants and other drugs is forbidden and is sufficient cause for discipline, including dismissal.
2. No driver shall operate a vehicle when his/her ability to do so safely has been impaired by illness, fatigue, injury, or prescription medication.
3. A 360° vehicle inspection is required prior to each use of any company vehicle.
4. All drivers and passengers operating or riding in vehicles must wear seat belts, even if air bags are available.
5. No unauthorized personnel (e.g. Hitchhikers) are allowed to ride in vehicles (Refer to driving policy).
6. Headlights shall be used 1/2 hour after sunset and 1/2 hour before sunrise, or during inclement weather or at any time when a distance of 500 feet ahead of the vehicle cannot be seen clearly.
7. All other state laws, local laws, or D.O.T. Motor Carrier Safety Regulations must be obeyed.

Defensive Driving Rules

1. Drivers are always required to maintain a safe following distance. To estimate your following distance, pick a stationary object ahead of you. As the vehicle in front of you passes the object, begin counting 1001, 1002, 1003, etc. until you reach the same object. This counts the number of seconds between you and the vehicle ahead of you.
2. Drivers of passenger vehicles should keep a two-second interval between their vehicle and the vehicle immediately

ahead. During slippery road conditions, the following distance should be increased to at least four-seconds.

3. Drivers must yield the right of way at all traffic control signals and signs requiring them to do so. Drivers should also be prepared to yield for safety's sake at any time. Pedestrians and bicycles in the roadway always have the right of way.
4. Avoid driving in other driver's blind spots; attempt to maintain eye contact with the other driver, either directly or through mirrors.
5. Drivers must honor posted speed limits. In adverse driving conditions, reduce speed to a safe operating speed that is consistent with the conditions of the road, weather, lighting, and volume of traffic. Tires can hydroplane on wet pavement at speeds as low as 40 MPH.
6. Turn signals must be used to show where you are heading; while going into traffic and before every turn or lane change.
7. When passing or changing lanes, view the entire vehicle in your rear-view mirror before pulling back into that lane.
8. Be alert of other vehicles, pedestrians, and bicyclists when approaching intersections. Never speed through an intersection on a caution light. Approach a stale green light with your foot poised over the brake to reduce your reaction time should it be necessary to stop. When the traffic light turns green, look both ways for oncoming traffic before proceeding.
9. When waiting to make left turns, keep your wheels facing straight ahead. If rear-ended, you will not be pushed into the lane of oncoming traffic.
10. When stopping behind another vehicle, leave enough space so you can see the rear wheels of the car in front. This allows room to go around the vehicle if necessary, and may prevent you from being pushed into the car in front of you if you are rear-ended.
11. Avoid backing where possible, but when necessary, keep the distance traveled to a minimum and be particularly careful.
12. Check behind your vehicle. Operators of large vehicles should walk around their vehicle before backing and/or have someone guide you.
13. Back to the driver's side. Do not back around a corner or into an area of no visibility.

What to Do in Case of An Accident

In an attempt to minimize the results of an accident, the driver must prevent further damages or injuries, obtain all pertinent information, and report it accurately.

1. Call for medical aid if necessary.
2. Secure accident scene -- pull onto shoulder or side of road, redirect traffic, set up road flares/reflectors, etc.
3. Call the police. All accidents, regardless of severity, must be reported to the police. If the driver cannot get to phone, he should write a note giving location to a reliable appearing motorist and ask him to notify the police.
4. Record names and addresses of driver, witnesses, and occupants of the other vehicles and any medical personnel who may arrive at the scene.
5. Obtain pertinent information including: license number of other drivers, insurance company names and policy numbers of other vehicles, make, year, model of other vehicles, date and time of accident, overall road and weather conditions.
6. Draw a diagram of the accident scene and note the street names and locations of traffic signs, signals, etc.
7. Do not discuss the accident with anyone at the scene except the police. Do NOT accept any responsibility for the accident. DO NOT argue with anyone.
8. Provide the other party with your name, address, phone number, drivers' license number, and insurance information.
9. Immediately report the accident to your supervisor. Provide a copy of the accident record and/or your written description of the accident.
10. Cooperate fully with any follow-up from claims personnel.

OFFICE EMPLOYEES

General Rules

1. Do not stand on furniture to reach high places.
2. Do not kick objects out of your pathway; pick them up or push them out of the way.

3. Do not jump from ladders or stepstools.
4. Do not block your view by carrying large or bulky items; use the dolly or hand truck or get assistance from a fellow employee.
5. Do not throw matches, cigarettes or other smoking materials into trash baskets.
6. Do not tilt the chair you are sitting in. Keep all chair legs on the floor.
7. Use a ladder or step stool to retrieve or store items that are located above your head.

Doors

1. Keep doors in hallways fully open or fully closed.
2. Use the handle when closing doors.

Files

1. Open only one file cabinet drawer at a time. Close the filing cabinet drawer you are working in before opening another filing drawer in the same cabinet.
2. Put heavy files in the bottom drawers of file cabinets.
3. Use the handle when closing drawers and files.

Sharp Objects

1. Store sharp objects, such as pens, pencils, letter openers or scissors in drawers or with the tips pointing down in a container.
2. Carry pencils, scissors, and other sharp objects with the tips pointing down.

Paper Cutter/Shredder

1. Position hands and fingers on the handle of the paper cutter before pressing down on the blade.
2. Keep the paper cutter handle in the closed or locked position when it is not being used.
3. Do not use paper-cutting devices if the finger guard is missing.
4. Do not place your fingers in or near the feed of a paper shredder.

Staplers

1. Point the ejector slot away from yourself and bystanders when refilling staplers.
2. Keep fingers away from the ejector slot when loading or testing stapling devices.
3. Use a staple remover, not your fingers, for removing staples.

Electrical

1. Do not use frayed, cut, or cracked electrical cords.
2. Do not connect multiple electrical cords into a single outlet.
3. Do not use extension or power cords that have the ground prong removed or broken off.
4. Use a cord cover or tape the cord down when running electrical cords across aisles, between desks or across entrances or exits.
5. Turn the power switch to "Off" and unplug office machines before adjusting, lubricating or cleaning them.

Fans

1. Do not use fans that have excessive vibration or missing guards.
2. Do not place floor type fans in walkways, aisles, or doorways.

Stairs

1. Use the handrails when ascending or descending stairs or ramps.
2. Do not run on stairs or take more than one-step at a time.

Phone Use

1. Sit up straight in your chair.
2. Keep your feet on floor.

3. If the chair height is too high, use a book or other object as a footrest.
4. If you use a traditional handset, do not hold the receiver by bending your neck to trap the receiver between your head and shoulder. Hold the receiver with your hand.
5. Use your headset for extended phone use.
6. For additional lower back support, place a pillow or bundled clothing in the chair at the small of your back.

ELECTRICIANS/APPRENTICES/TECHNICIANS/MECHANICS

General Rules

1. Plan your work and ***plan for safety***

2. Avoid wet working conditions and other dangers.

3. Use Ground Fault Circuit Interrupters. GFCI's are electrical devices that are designed to detect ground faults (when current is "leaking" somewhere outside its intended pathway). If your body provides the path to ground for the leaking current, you could receive a shock or be electrocuted. GFCI's should be used in all wet locations and on outside outlets.

4. **Avoid overhead power lines:** Position yourself so that the longest conductive object you are using (saws, poles, tools, brooms, etc.) cannot come closer than at least 10 feet to any unguarded, energized overhead line.

Use proper wiring and connectors

Use extension cords properly and ***temporarily***:

Cords must be UL listed and have 3 prongs

Power bars must have a fuse or breaker

Do not use 2-prong, ungrounded cords in a lab

Do not run cords through walls, doors, under rugs, or across aisles

Do not repair cords--buy new ones

Make sure the total number of watts connected to the cord does not exceed the rating of the cord.

Use and maintain tools properly.

Avoid wearing items such as jewelry, watch bands, bracelets, rings, key chains, necklaces, etc. that might come into contact with exposed, energized parts.

Wear correct PPE:

Hard hats rated "Class E" (KASK Helmet)

ANSI-Rated Cut 4 approved safety gloves

ANSI-Rated approved footwear coded "EH"

ANSI Z87 Rated Safety Glasses

Extension cords used with portable electrical tools and appliances shall be three wire types. Never remove grounds from extension cords.

Cords shall be inspected and marked with the color-code assigned for that specific month. Wrap a piece of phasing tape in the colors indicated on both ends in the colors in the chart below to indicate compliance.

Assured Equipment Grounding Conductor Program Color Code			
Month #	Month Tested	Color of Tape(s) to apply to cord	
1	January	White	
2	February	White +	Yellow
3	March	White +	Blue
4	April	Green	
5	May	Green +	Yellow
6	June	Green +	Blue
7	July	Red	
8	August	Red +	Yellow
9	September	Red +	Blue
10	October	Orange	
11	November	Orange +	Yellow
12	December	Orange +	Blue

Temporary lights shall be equipped with guards to prevent accidental contact with the bulb. Guards are not required when reflector is constructed in such a way that the bulb is deeply recessed.

Temporary lights shall not be suspended by their electrical cords unless cords and lights are designed for this means of suspension.

Panel boxes shall have a cover on them at all times, except when being serviced. When a temporary cover is in place, it should be marked "HOT" to denote live current.

Explain to the employees which ground fault system is being used, either ground fault circuit interrupters or assured equipment grounding conductor program (1999 NEC 305-6(b).)

Lockout/Tag out

NOTE: Devices such as padlocks shall be provided for locking out the source of power at the main disconnect switch. Before any maintenance, inspection, cleaning, adjusting or servicing of equipment (hydraulic, electrical, mechanical or air) that requires entrance into or close contact with the machinery or equipment, the main power disconnect switch or valve, or both, controlling its source of power or flow of material, shall be locked-out or blocked off with a padlock, blank flange or similar device.

1. Do not perform any maintenance, inspection, cleaning, adjusting or servicing of any equipment without following the employer lockout / tag out program.
2. If required to work on powered equipment (hydraulic, electrical, air, etc.), you must have your personal padlock with your name on it and personal key on your person at all times.
3. Attach your own lock or tag when you need to isolate an energy source.

4. Do not remove a lock from any equipment unless you placed it there yourself. Each person shall place his/her own lock/tag when required to isolate an energy source.
5. Do not start any adjustment, service or repair without verifying that the tag/lock out switch or control cannot be by-passed or over-ridden.
6. Disconnect and padlock all machine power disconnects in the off position before removing guards for the purpose of working "ON" or "IN" the machinery or its approaching unguarded parts. (NOTE: When more than one employee is working on a single piece of equipment, each employee must use his own padlock along with lockout tongs to lock out the equipment. When the work is completed, he must remove only his lock.)
7. Lockout verification:
 - Verify that the locked-out switch or control cannot be overridden.
8. Test the equipment to be certain that the locked-out switch is de-energized and not simply malfunctioning.
 - Press all start buttons to see if the equipment starts.
 - Ensure the system you will be working on is the same one that has been locked out.
9. Before restarting the equipment, verify the following:
 - All tools and other items have been removed.
 - All machine guards are in place.
 - All electric systems are reconnected.
 - All employees are clear of equipment.
10. Before machinery is put back into use after LOCKOUT/TAGOUT, give a verbal announcement / sound warning to fellow employees.

Lifting Equipment (Chains, Cables, Ropes, Slings, etc.)

1. Do not use chain slings if links are cracked, twisted, stretched, or bent.
2. Fabricate all wire in wire rope slings by using thimbles; do not form eyes by using wire clips or knots.
3. Do not shorten slings by using makeshift devices such as knots or bolts.
4. Do not use a kinked chain.
5. Protect slings from the sharp edges of their loads by placing pads over the sharp edges of the items that have been loaded.
6. Do not place your hands between the sling and its load when the sling is being tightened around the load.
7. Wear work gloves when handling rough, sharp-edged, or abrasive material such as chains, cables ropes, or slings.
8. Do not alter or remove the safety latch on hooks. Do not use a hook that does not have a safety latch, or if the safety latch is bent.
9. Lift the load from the center of hooks, not from the point.

Bucket Truck Operations

1. Only bucket truck operators are to operate the bucket lift.
2. If you are the remote bucket control operator, do not leave your controls while someone is in the bucket.
3. Do not drive the truck while someone is in the bucket.
4. Engage the parking brake and use the wheel blocks to chock the wheels before lifting anyone in the bucket.
5. Do not touch the truck when the bucket is in operation.
6. Keep the bucket at least 10 feet away from energized power lines.
7. Keep both feet on the floor of the bucket while working from the bucket. Do not climb on the bucket's edge.
8. Do not lean out of the bucket.
9. Do not operate the bucket during electrical storms or when lightning is seen or thunder is heard.
10. Do not operate the bucket in windy weather.
11. Use the safety belt and lanyard when working from the bucket.

Aerial Lifts

Aerial lifts include the following types of vehicle-mounted aerial devices used to elevate personnel to work at above ground elevations:

1. Extensible boom platforms
2. Articulating boom platforms
3. Vertical towers
4. Aerial ladders
5. A combination of any of the above

Aerial equipment may be powered or manually operated and are deemed aerial lifts whether or not they are capable of rotating about a substantially vertical axis. Specific requirements:

1. Ladder trucks and tower trucks - Ladders shall be locked in lowered and stowed position prior to highway travel.
2. Extensible and articulating boom platforms
 - a. Lift controls shall be tested each day prior to use to determine that such controls are in safe working condition.
 - b. Only authorized persons shall operate an aerial lift.
 - c. Belting off to an adjacent pole, structure, or equipment while working from an aerial lift shall not be permitted.
 - d. Employees shall always stand firmly on the floor of the basket, and shall not sit or climb on the edge of the basket or use planks, ladders or other devices for a work position.
 - e. A body harness shall be worn and a lanyard attached to the boom or basket when working from an aerial lift.
 - f. 100% tie off is required while operating aerial lifts
 - g. Boom and basket load limits specified by the manufacturer shall not be exceeded.
 - h. The brakes shall be set and when outriggers are used, they shall be positioned on pads or a solid surface. Wheel chocks shall be installed before using an aerial lift on an incline provided they can be safely installed.
 - i. An aerial lift truck shall not be moved when the boom is elevated in a working position with men in the basket, except for equipment which is specifically designed for this type of operation in accordance with the provisions of 1926.556(a)(1) and (2).
 - j. Articulating boom and extensible boom platforms, primarily designed as personnel carriers, shall have both platform (upper) and lower controls. Upper controls shall be in or beside the platform within easy reach of the operator. Lower controls shall provide for overriding the upper controls. Controls shall be plainly marked as to their function. Lower level controls shall not be operated unless permission has been obtained from the employee in the lift, except in case of emergency.
 - k. Climbers shall not be worn while performing work from an aerial lift
 - l. The insulated portion of an aerial lift shall not be altered in any manner that might reduce its insulating value.
 - m. Before moving an aerial lift for travel, the boom(s) shall be inspected to see that it is properly cradled, and outriggers are in stowed position except as provided in paragraph h. above.

Aerial Work Platforms

Man lifts and scissor lifts are two pieces of equipment that many workers cannot imagine working without. This equipment, if used correctly, provides quick and safe access to work areas that at one time could only be reached from scaffolding or a crane's man basket. These lifts, collectively called Aerial Work Platforms, are important tools. However, as with any tool, there are right and wrong ways to use them safely.

The most important tip to remember before operating any aerial lift platform is always read and follow the manufacturer's safety and operation manual! This information must be kept on the rig and can usually be found in a PVC tube that is tied to the machine's frame or rails.

Safe Operating Procedures for Both Man lifts and Scissor Lifts:

- Only trained and authorized people should operate the lift. A qualified instructor must make sure that every operator reads and/or understands the equipment's safety and operating instructions. This includes all of the warning decals and labels mounted on the machine.
- 100% tie off is required while operating an aerial work platform
- Always check for overhead obstructions before driving or elevating the platform.
- Refuel tanks only when the unit is turned off. If battery powered, the batteries should be charged only in a well-ventilated area, away from any open flame.
- Prior to each shift a safety inspection should be completed by the operator; this includes both a visual inspection and a function test. If a problem is found, get the lift repaired.
- Elevate the platform only when it is on a firm, level surface. Although many lifts look like a rough terrain piece of equipment, they are not. Their large tires do allow the equipment to access somewhat difficult areas, but once in position

they are designed to be out of level only 5° while in operation. This amounts to 10 inches in a 10-foot wheel span. In addition, the lift must have a tilt alarm that activates when the machine is more than 5° out of level.

Scissor lifts are efficient one-direction lifts. They provide a solid surface to work from, but always remember:

- Guardrail, mid-rails, and toe boards must be in place. The toe board can be omitted at the door.
- The platform must be equipped with a mechanical parking brake that will hold the unit securely on any slope it is capable of climbing. The brake should be tested periodically.
- Never use the lift's rails, planks across the rails, or a ladder, to gain additional height.

Unique hazards for man lifts: Man-lifts can move in more than a single direction, increasing the risk of mishaps, so it is important to remember the following:

- Whenever working out of a man lift, a full body harness must be worn, and properly attached to the basket. A sudden jolt has thrown people from man lifts, before they could react.
- Always maintain a safe distance from debris piles, drop-offs, floor openings, etc.
- Never drive the man lift when it is elevated above the limit the manufacturer considers safe. Each piece of equipment will state what the maximum extension can be while being driven.

Used correctly, aerial work platforms can be priceless, timesaving assets. Operate them without regard to their limitations, and this same equipment will put you and those around you, at undue risk.

Hand Tools

1. Use tied-off containers to keep tools from falling off scaffolds and other elevated work platforms.
2. Keep the blades of all cutting tools sharp.
3. Carry all sharp tools in sheaths or holsters.
4. Tag worn, damaged, or defective tools "Out of Service" and do not use them.
5. Do not use a tool if its handle has splinters, burrs, cracks, splits or if the head of the tool is loose.
6. Do not use impact tools such as hammers, chisels, punches, or steel stakes that have mushroomed heads.
7. When handing a tool to another person, direct sharp points and cutting edges away from yourself and the other person.
8. Do not chop at heights above your head when working with a hand axe.
9. Do not carry sharp or pointed hand tools such as screwdrivers, scribes, aviation snips, scrapers, chisels or files in your pocket unless the tool or pocket is sheathed.
10. Do not perform "make-shift" repairs to tools.
11. Do not use "cheaters" on load binders or "boomers."
12. Do not carry tools in your hand when climbing. Carry tools in tool belts or hoist the tools to the work area with a hand line.
13. Do not throw tools from one location to another, from one employee to another, from scaffolds or other elevated platforms.

Chisels

1. Keep the cutting edge of the chisel sharp.
2. Do not use chisels with damaged striking ferrules.
3. Hold a chisel with a tool holder if possible.
4. Clamp a small work piece in a vise and chip towards the stationary jaw when working with a chisel.

Clamps

1. Do not use the C-clamp for hoisting materials.
2. Do not use the C-clamp as a permanent fastening device.

Files/Rasps

1. Do not use a file as a pry bar, hammer, screwdriver, or chisel.
2. When using a file or a rasp, grasp the handle in one hand and the toe of the file in the other.
3. Do not hammer on a file.

Hammers

1. Use a claw hammer for pulling nails and driving nails.
2. Do not strike nails or other objects with the cheek of the hammer.
3. Do not strike a hardened steel surface, such as a cold chisel, with a claw hammer.

4. Do not strike one hammer against another hammer.
5. Do not use a hammer if your hands are oily, greasy, or wet.
6. Do not use a hammer as a wedge, a pry bar or for pulling large spikes.
7. Use only a sledge-type hammer on a striking face wrench.

Knives/Sharp instruments

1. When handling knife blades and other cutting tools, direct sharp points and edges away from you.
2. Store knives in knife blocks or in sheaths after use.
3. Do not use knives with dull blades.
4. Do not use honing steels that do not have disc guards.
5. Do not attempt to catch a falling knife.
6. Use knives for the operation for which they are named.
7. Do not use knives with broken or loose handles.
8. Do not use knives as screwdrivers, pry bars, can openers or ice picks.
9. Do not pick up knives by their blades.
10. Carry knives with their tips pointed towards the floor.

Pliers

1. Do not attempt to force pliers by using a hammer on them.
2. Do not slip a pipe over the handles of pliers to increase leverage.
3. Use pliers with insulated handles for electrical work.
4. Do not use pliers that are cracked, broken, or sprung.
5. When using diagonal cutting pliers, shield the loose pieces of cut material from flying into the air by using a cloth or your gloved hand.

Saws

1. Do not use an adjustable blade saw such as a hacksaw, coping saw, keyhole saw, or bow saw, if the blade is not taut.
2. Do not use a saw that has dull saw blades.
3. Keep hands and fingers away from the saw blade while using the saw.
4. Do not carry a saw by the blade.
5. When using a handsaw, hold the work piece firmly against the worktable.
6. Do not use woodworking equipment such as circular saws, radial saws, or jointers if they do not have guards on the saw blade.
7. Keep control of saws by decreasing downward pressure at the end of the stroke.
8. When operating scroll saws, stop the machine before removing scrap pieces from the table.
9. Clamp work when using a holesaw.

Screwdrivers

1. Always match the size and type of screwdriver blade to fit the head of the screw.
2. Do not hold the work piece against your body while using a screwdriver.
3. Do not put your fingers near the blade of the screwdriver when tightening a screw.
4. Use an awl, drill or a nail to make a starting hole for screws.
5. Do not force a screwdriver by using a hammer or pliers on it.
6. Do not use a screwdriver as a punch, chisel, pry bar or nail puller.
7. Use a screwdriver that has an insulated handle for electrical work.
8. Do not use a screwdriver if your hands are wet, oily, or greasy.
9. Do not use a screwdriver to test the charge of a battery.
10. When using a spiral ratchet screwdriver, push down firmly and slowly.

Snips

1. Wear safety glasses or safety goggles when using snips to cut materials.
2. Wear work gloves when cutting materials with snips.
3. Do not use straight cut snips to cut curves.
4. Keep the blade aligned by tightening the nut and bolt on the snips.

5. Do not use snips as a hammer, screwdriver, or pry bar.
6. Use the locking clip on the snips after use.

Vises

1. When clamping a long work piece in a vise, support the far end of the work piece by using an adjustable pipe stand, sawhorse, or box.
2. Position the work piece in the vise so that the entire face of the jaw supports the work piece.
3. Do not use a vise that has worn or broken jaw inserts, or has cracks or fractures in the body of the vise.
4. Do not slip a pipe over the handle of a vise to gain extra leverage.

Electrically Powered Tools

1. Do not use power equipment or tools on which you have not been trained.
2. Keep power cords away from the path of drills, saws, vacuum cleaners, floor polishers, mowers, slicers, knives, grinders, irons, and presses.
3. Do not carry plugged-in equipment or tools with your finger on the switch.
4. Do not carry equipment or tools by the cord.
5. Disconnect the tool from the outlet by pulling on the plug, not the cord.
6. Turn the tool off before plugging or unplugging it.
7. Do not leave tools that are "On" unattended.
8. Do not handle or operate electrical tools when your hands are wet or when you are standing on wet floors.
9. Do not operate spark inducing tools such as grinders, drills, or saws near containers labeled "Flammable" or in an explosive atmosphere such as a paint spraybooth.
10. Turn off electrical tools and disconnect the power source from the outlet before attempting repairs or service work. Tag the tool "Out of Service."
11. Do not connect multiple electrical tools into a single outlet.
12. Do not run extension cords through doorways, through holes in ceilings, walls, or floors.
13. Do not drive over, drag, step on or place objects on a cord.
14. Do not operate a power hand tool or portable appliance with a two-pronged adapter or a two-conductor extension cord.
15. Do not use a power hand tool while wearing wet cotton gloves or wet leather gloves.
16. Never operate electrical equipment barefooted. Wear rubber-soled or insulated workboots.
17. Do not operate a power hand tool or portable appliance while holding a part of the metal casing or holding the extension cord in your hand. Hold all portable power tools by the plastic handgrips or other nonconductive areas designed for gripping purposes.
18. Do not operate a power hand tool or portable appliance that has a frayed, worn, cut, improperly spliced, or damaged power cord.
19. Do not operate a power hand tool or portable appliance if the ground pin from the three-pronged power plug is missing or has been removed.

Power Saws

1. Wear safety goggles, protective gloves, a dust mask, and hearing protection when operating a power saw.
2. Do not wear loose clothing or jewelry.
3. Clean any residue from the blade or cutting head before making a new cut with the power saw.
4. Do not use a power saw that has cracked, broken, or loose guards or other visible damage.
5. Keep your hands away from the exposed blade.
6. Operate the saw at full cutting speed, with a sharp blade, to prevent kickbacks.
7. Do not alter the anti-kickback device or blade guard.
8. Do not perform cutting operations with the power saw while standing on a wet or slippery floor.
9. When using the power saw, do not reach across the cutting operation.
10. Cut away from your body and below your shoulder level when you are using a power saw.
11. If the saw becomes jammed, turn the power switch of the saw to "Off" before pulling out the incomplete cut.

Pneumatic Tools

1. Do not point a compressed air hose at bystanders or use it to clean your clothing.
2. Do not use tools that have handles with burrs or cracks.

3. Do not use compressors if their belt guards are missing. Replace belt guards before use.
4. Turn the tool "off" and let it come to a complete stop before leaving it unattended.
5. Disconnect the tool from the airline before making any adjustments or repairs to the tool.
6. Engage positive locks on hoses and attachments before use.
7. Shut off pressure valve and disconnect airline when not in use.
8. Tag damaged or defective pneumatic tools "Out of Service" to prevent usage of the tool by other employees.

Powder Actuated Tools

1. Only employer-authorized personnel, with a valid certification card may operate powder-actuated tools.
2. Wear safety glasses, goggles, or face shields when operating powder actuated tools.
3. Wear earplugs or earmuffs when making fastenings.
4. Do not permit bystanders in the area when using a powder-actuated tool.
5. Do not load tool until ready to make a fastening.
6. Keep tool pointed in a safe direction (away from personnel).
7. Post a sign alerting co-worker that a powder actuated tool is being used.
8. After use, lock powder actuated tools and powder loads in a container and store in a safe place such as a locker or the trunk of a car.

Heat Exhaustion/Sun Exposure

1. Keep your shirt on to avoid dehydration and sunburn.
2. Drink plenty of clear liquids during your breaks.
3. Take breaks in shaded areas.

Work Area Protection

1. Wear the international orange reflective vest when present in the service work area.
2. Wear reflective vests and gloves when near traffic and use lighted batons when you are directing traffic at any time between one hour before sunset and one hour after sunrise or during inclement weather.
3. Erect protective barriers or guards and warning signs (lights) well in advance of the work area to permit upcoming motorists time to react.
4. Place orange warning cones, triangles, flares and/or "detour" signs at the roadside and behind your vehicle before beginning service work.
5. Position the work vehicle to guard the work area while work is in progress.
6. Do not walk into traffic lanes outside of the "coned off" work area.
7. Do not step backward without first looking to see that it is clear.

Portable Welding/Soldering Operations

1. Do not perform welding or soldering tasks while wearing wet cotton gloves or wet leather gloves.
2. Use the insulated work gloves when using welding or soldering equipment.
3. Do not use the welding or soldering apparatus if the power cord is cut, frayed, split or otherwise visibly damaged or modified.
4. Do not perform "hot work" such as welding, soldering, or other spark producing operations within 50 feet of containers labeled "Flammable" or "Combustible."

Stringing/Removing Deenergized Conductors

1. Keep conductors that are being strung in or removed under positive control to prevent accidental contact with energized circuits.
2. Do not exceed the load rating for stringing lines, pulling lines, sock connections or load-bearing hardware and accessories.
3. Do not use defective pulling lines or defective accessories. Mark the defective items and turn them in for repair or replacement.
4. Do not use conductor grips on wire ropes unless the grips are designed for that particular purpose.
5. If an existing line that crosses over a conductor is to be deenergized, ground the line on both sides of the crossing or treat

the conductor being crossed as energized.

Bus/Bus Room Safety

1. Do not enter or work in the bus room alone.
2. Do not leave the busroom doors open.
3. Do not carry any tools or materials above your waist while in the bus room.
4. Do not work on any bus, bus structure, cable, or disconnect switch unless it is grounded.

General Electrical Device/Fixture Installation Safety

1. Assume all electrical wires as live wires.
2. Turn the main switch to "Off" before removing and replacing power fuses.
3. Do not wear watches, rings or other metallic objects that could act as conductors of electricity around electrical circuits.
4. Before leaving the job, test insulators, and equipment to ensure they are free from defects.
5. Do not work near any circuit that is in service without first installing barricades approved by your supervisor.
6. Do not touch field brushes or a synchronous motor until the motor is up to synchronous speed and the field switch is closed.

Confined Spaces

1. Do not enter the confined space without reading and following the "confined space entry procedure."
2. Obtain a confined space entry permit from your supervisor before entering a confined space.

Prior to Entry

1. Get locking devices and labels from your supervisor to lock out and tag "Out of Service" all equipment in the confined space before entering the confined space.
2. Open all windows, doors, or manholes of the confined space for ventilation.
3. Use a Combustible Gas Analyzer to test the confined space for an oxygen deficiency or accumulated combustible gases. Do not enter the confined space if the reading for the Combustible Gas Analyzer is above 10% LFL and the oxygen level is below 19.5% or greater than 23.5%.

When Entering

1. Do not enter the confined space unless an assigned observer or lookout person posted at the entrance to the confined space. If you are assigned as the outside observer, do not go inside the confined space under any circumstances and keep the entrant in your view at all times.
2. Stay in constant view of the observer when you are working inside the confined space.

Access and Egress Safety

1. Use ladders, structural ramps, or stairways as a means of access or egress from excavations or restricted spaces.
2. Do not climb a ladder unless it extends at least three (3) feet or three (3) rungs beyond the edge of the trench.

WAREHOUSE PERSONNEL

General Warehouse Safety

1. Wear leather gloves when handling materials such as copper or aluminum wire.
2. Do not attempt to catch falling materials.
3. Do not try to kick objects out of pathways. Push or carry them out of the way.
4. Move slowly when approaching blind corners.
5. Do not run on stairs or take more than one-step at a time.
6. Do not jump from elevated places such as truck beds, platforms, or ladders.
7. Do not lift slippery or wet objects; use a hand truck.
8. Obey all safety and danger signs posted in the workplace.

Stocking Shelves

1. When stocking shelves by hand, position the materials to be shelved slightly in front of you, so you do not have to twist when lifting and stacking materials.
2. Place items on shelves so that they lie flat and do not wobble.
3. Place heavier loads on the lower or middle shelves.
4. Do not stack bulky merchandise on crushed boxes.
5. Do not let items overhang from shelves into walkways.
6. Remove one object at a time from shelves.
7. Do not climb the racking to stock or retrieve merchandise; use a ladder.

Compressed Gas Cylinders

Storage and Handling

1. Do not handle oxygen cylinders if your gloves are greasy or oily.
2. Store all compressed gas cylinders in the upright position.
3. Place valve protection caps on compressed gas cylinders that are in storage or are not being used.
4. Do not lift compressed gas cylinders by the valve protection cap.
5. Do not store compressed gas cylinders in areas where they can come in contact with chemicals labeled "Corrosive."
6. Hoist compressed gas cylinders on the cradle, sling board, pallet, or compressed gas cylinder basket.
7. Do not place compressed gas cylinders against electrical panels or live electrical cords where the cylinder can become part of the circuit.

Forklifts – Pre-Use Inspection

Do not use forklift if any of the following conditions exist:

1. The mast has broken or cracked weld-points.
2. The roller tracks are not greased, or the chains are not free to travel.
3. Forks are unequally spaced, or cracks exist along the blade or at the heels.
4. Hydraulic fluid levels are low.
5. Hydraulic line and fitting have excessive wear or are crimped.
6. Fluid is leaking from the lift or the tilt cylinders.
7. The hardware on the cylinders is loose.
8. Tires are excessively worn, split, or have missing tire material.
9. Air-filled tires are not filled to the operating pressure indicated on the tire.
10. Batteries have cracks or holes, uncapped cells, frayed cables, broken cable insulation, loose connections, or clogged vent caps.

Starting the Forklift

- Apply the foot brake and shift gears to neutral before turning the key.

Picking Up a Load

1. Square up on the center of the load and approach it straight on with the forks in the travel position.
2. Stop when the tips of your forks are about a foot from the load.
3. Level the forks and slowly drive forward until the load is resting against the backrest of the mast.
4. Lift the load high enough to clear whatever is under it.
5. Back up about one foot, and then slowly and evenly tilt the mast backwards to stabilize the load.

Putting a Load Down

1. Square up and stop about one foot from desired location.
2. Level the forks and drive to the loading spot.
3. Slowly lower the load to the floor.
4. Tilt the forks slightly forward so that you do not hook the load.
5. When the path behind you is clear of obstructions, back straight out until the forks have cleared the pallet.

Stacking One Load on Top of Another

1. Stop about one foot away from the loading area and lift the mast high enough to clear the top of the stack.
2. Slowly move forward until the load is squarely over the top of the stack.
3. Level the forks and lower the mast until the load is no longer supported by the forks.
4. Look over both shoulders for obstructions and back straight out if the path is clear.

Forklift Safety Rules

1. Do not exceed the lift capacity of the forklift. Read the lift capacity plate on the forklift if you are unsure.
2. Follow the manufacturer's guidelines concerning changes in the lift capacity before adding an attachment to a forklift.
3. Lift the load an inch or two to test for stability: If the rear wheels are not in firm contact with the floor, take a lighter load or use a forklift with a higher lift capacity.
4. Do not raise or lower a load while you are en route. Wait until you are in the loading area and have stopped before raising or lowering the load.
5. After picking up a load, adjust the forks so that the load is tilted slightly backward for added stability.
6. Drive with the load at a ground clearance height of 4-6 inches at the tips and 2 inches at the heels in order to clear most uneven surfaces and debris.
7. Drive at a walking pace and apply brakes slowly to stop when driving on slippery surfaces such as icy or wet floors.
8. Do not drive over objects in your pathway.
9. Do not drive into an area with a ceiling height that is lower than the height of the mast or overhead guard.
10. Steer wide when making turns.
11. Do not drive up to anyone standing or working in front of a fixed object such as a wall.
12. Do not drive along the edge of an unguarded elevated surface such as a loading dock or staging platform.
13. Obey all traffic rules and signs.
14. Sound horn when approaching blind corners, doorways, or aisles to alert other operators and pedestrians.
15. Stay a minimum distance of three truck lengths from other mobile equipment in use.
16. Drive in reverse and use a signal person when your vision is blocked by the load.
17. Look in the direction that you are driving; proceed when you have a clear path.
18. Do not use bare forks as a man-lift platform.
19. Do not drive the forklift while people are on the attached man-lift platform.
20. Drive loaded forklifts forward up ramps.
21. Raise the forks an additional two inches to avoid hitting or scraping the ramp surface as you approach the ramp.
22. Drive loaded forklifts in reverse when driving down a ramp.
23. Drive unloaded forklifts in reverse when going up a ramp and forward when going down a ramp.
24. Do not attempt to turn around on a ramp.
25. Do not use "Reverse" to brake.
26. Lower the mast completely, turn off the engine, and set the parking brake before leaving your forklift.

Loading Docks

1. Keep the forklift clear of the dock edge while vehicles are backing up to the dock.
2. Do not begin loading or unloading until the supply truck has come to a complete stop, the engine has been turned off, the dock lock has been engaged, and the wheels have been chocked.
3. Attach the bridge or dock plate before driving the forklift into the truck.
4. Do not drive the forklift into a truck bed that has soft or loose decking or other unstable flooring.
5. Drive straight across the bridge plates when entering or exiting the trailer.
6. Use dock lights or headlights when working in a dark trailer.

ELECTRICAL SAFETY PROGRAM

Purpose

The purpose of this program is to establish company safe work practices for electrical tools, equipment and their related components.

Scope

The scope of this program covers all permanent and temporary employees and contractors while working on company owned sites. If CDI does not own a particular site; the site owner's program shall be used on that site unless the site owners' program is less stringent.

Responsibilities

Safety Manager

- Develop electrical safety programs & procedures in accordance with regulatory standards and as required by each individual site.
- Ensure that all employees receive and comply with this program.
- Ensure that no unqualified employees work on energized electrical circuit equipment or their parts.

Supervisors

- Ensure that only qualified employees and / or qualified contractors perform electrical repairs and installations.
- Ensure that electrical programs and procedures address site specific hazards or hazards that are presented by unique circumstances at their respective areas of responsibility.
- Ensure that no unqualified employees work on energized electrical circuit equipment or their parts.

Qualified Employees

- Ensure that no unqualified employees work on energized electrical circuit equipment or their parts.
- Ensure individual familiarity with the use of special precautionary techniques, personal protective equipment, insulated tools, insulating materials and shielding materials.

Employees

- Ensure that only qualified employees work on energized electrical circuit equipment or other related parts.
- Report all potential electrical hazards to supervisors immediately.

Definitions

Class I hazardous locations - areas having the presence of *flammable gases or vapors* in the air, such as natural gas or gasoline vapor. When these materials are found in the atmosphere, a potential for explosion exists, which could be ignited if an electrical or other source of ignition is present. The Code writers have referred to this first type of hazard as *Class I*. So, a *Class I Hazardous Location* is one in which *flammable gases or vapors* may be present in the air in sufficient quantities to be explosive or ignitable. Some typical Class I locations are:

- Petroleum refineries, and gasoline storage and dispensing areas;
- Dry cleaning plants where vapors from cleaning fluids can be present;
- Spray finishing areas;
- Aircraft hangars and fuel servicing areas; and
- Utility gas plants, and operations involving storage and handling of liquefied petroleum gas or natural gas.

- All of these are Class I gas or vapor hazardous locations. All require special Class I hazardous location equipment.

Class II hazardous locations - areas made hazardous by the presence of combustible *dust*. These are referred to in the Code as "Class II Locations." Finely pulverized material, suspended in the atmosphere, can cause as powerful an explosion as one occurring at a petroleum refinery. Some typical Class II locations are:

- Grain elevators;
- Flour and feed mills;
- Plants that manufacture, use or store magnesium or aluminum powders;
- Producers of plastics, medicines and fireworks;
- Producers of starch or candies;
- Spice-grinding plants, sugar plants and cocoa plants; and
- Coal preparation plants and other carbon handling or processing areas.

Class III hazardous locations - areas where there are *easily-ignitable fibers or filings* present, due to the types of materials being handled, stored, or processed. The fibers and filings are not likely to be suspended in the air, but can collect around machinery or on lighting fixtures and where heat, a spark or hot metal can ignite them. Some typical Class III locations are:

- Textile mills, cotton gins;
- Cotton seed mills, flax processing plants; and
- Plants that shape, pulverize or cut wood and create sawdust or filings.

Qualified Person - A person who currently trained in the operation, repair, maintenance, construction and implementation of electrical equipment and electrical hazards.

Circuit Breaker – An automatic switch that stops the flow of electric current in a suddenly overloaded or otherwise abnormally stressed electric circuit.

Disconnecting Means - A device or other means by which circuit conductors can be disconnected from a power supply.

Disconnecting Switch – A device, which is used to isolate a circuit or equipment from a power source.

Double Insulated Tool - Tools which are constructed using non-conductive materials that do not require grounded, 3 wire plugs.

Grounded Conductor - A conductor that is used to connect equipment or the grounding circuit of a wiring system to a grounding electrode or several grounding electrodes.

Ground Fault Circuit Interrupter (GFCI) - A device that interrupts the electrical circuit to the load when a fault current to the ground exceeds a predetermined value that is less than what is required to operate the over current protective device of the supply circuit.

Safe Work Practices

General

1. All electrical equipment, tools and related components must be inspected prior to each use.
2. Equipment, tools and related components, which are unserviceable or faulty, shall be removed from service and tagged appropriately with the date of inspection, the name of the inspecting employee and signature of inspecting employee.

3. Only qualified personnel may repair electrical tools, cords and other related equipment.
4. Only licensed electricians may repair or conduct maintenance on electrical equipment and wiring systems.
5. The site supervisor shall verify contract electrician credentials before work begins.
6. Employees shall not wear conductive apparel such as rings, watches, etc. unless they are rendered non-conductive by covering, wrapping or other insulating means.
7. When working on or near exposed de-energized parts, those parts shall be treated as live.
8. Outlets connected to circuits with different voltages must use a design such that the attachment plugs on the circuits are not interchangeable.
9. Multiple outlet boxes must be plugged into a wall receptacle.
10. Multiple outlet boxes must not be used to provide power to microwave ovens, toasters, space heaters, hot plates, coffeepots, or other high-current loads.
11. Double insulated tools must have the factory label intact indicating the tool has been approved to be used without a three-wire grounded supply cord connection.
12. Double insulated tools must not be altered in any way, which would negate the factory rating.
13. Insulating shields/barriers are used where necessary in accordance with manufacturer specifications.
14. It is the Manager/Supervisors responsibility to verify the contractor's certification.

Extension Cords

1. Use only three-wire, grounded, extension cords and cables that conform to a hard service rating of 14 amperes or higher, and grounding of the tools or equipment being supplied.
2. Only commercial or industrial rated-grounded extension cords may be used in shops and outdoors.
3. Cords for use other than indoor appliances must have a rating of at least 14 amps.
4. Cords must have suitable strain relief provisions at both the plug the receptacle ends.
5. Work lamps (drop light) used to power electrical tools must have a 3 wire, grounded outlet, unless powering insulated tools.
6. Adapters that allow three wire, grounded prongs, connected to two wire non-grounded outlets are strictly prohibited.
7. Cords must have a service rating for hard or extra-hard service and have S, AJ, ST, SO, SJO, SJT, STO, or SJTO printed on the cord.
8. Cords may not be run through doorways, under mats or carpets, across walkways or aisles, concealed behind walls, ceilings or floors, or run through holes in walls, or anywhere where they can become a tripping hazard.
9. High current equipment or appliances should be plugged directly into a wall outlet whenever possible.
10. All extension cords shall be plugged into one of the following:
11. A GFCI outlet;
12. A GFCI built into the cord;
13. A GFCI adapter used between the wall outlet and cord plug.
14. All extension cords and or electrical cords shall be inspected daily or before each use, for breaks, plug condition and ground lugs, possible internal breaks, and any other damage. If damage is found, the extension cord or electrical cord shall be removed from service and repaired or replaced.
15. Extension cords shall not be used on compressor skid to operated heat tapes or any other type of equipment on a temporary basis. Heat tapes or other equipment shall be hard wired per applicable electrical codes.

Illumination

1. Employees shall not enter spaces containing exposed energized parts unless qualified and proper illumination exists to enable employees to work safely.

Switches, circuit breakers, and disconnects

1. All electrical equipment and tools must have an on and off switch and may not be turned on or off by plugging or unplugging the supply cord at the power outlet.
2. Circuit breaker panel boxes and disconnects must be labelled with the voltage rating.
3. Each breaker within a breaker panel must be labelled for the service it provides.
4. Disconnect switches providing power for individual equipment must be labelled accordingly.

Ladders

1. Portable ladders must have non-conductive side rails.
2. Ladders must be manufactured using non-conductive materials such as fiberglass or wood.
3. Aluminum or metal ladders are strictly prohibited.
4. Ladders shall be free of defects and defective components.
5. Ladders shall be used per the manufacturer's recommendations only.

Energized and Overhead High Voltage Power Lines & Equipment

1. A minimum clearance of 10 feet from overhead and high voltage lines must be maintained when work is being performed or operating vehicular and mechanical equipment such as forklifts, cranes, winch trucks, and other similar equipment.
2. When possible, power lines shall be de-energized and grounded or other protective measures shall be provided before work is started.
3. Minimum approach distance to energized high power voltages lines for unqualified employees is 10 feet.
4. Minimum approach distance for qualified employees shall be followed per 29 CFR 1910.333(c)(3)(i) Qualified – Table S5 Selection and Use of Work Practices - Approach Distances for Qualified Employees – Alternating Current). Approach distances are 10' for 50kV plus 4" for every additional 10kV.

Confined or Enclosed Work Spaces

1. When an employee works in a confined or enclosed space that contains exposed energized parts, the employee shall isolate the energy source and turn off the source and lock and tag out the energy source (Only qualified electricians can work on an exposed energy source).
2. Protective shields, protective barriers or insulating materials as necessary shall be provided.

Enclosures, Breaker Panels, and Distribution Rooms

1. A clear working space must be maintained in the front, back and on each side of all electrical enclosures and around electrical equipment for a safe operation and to permit access for maintenance and alteration.
2. A minimum two-foot working floor space in front of panels and enclosures shall be painted yellow.
3. Employees may not enter spaces containing exposed energized parts unless illumination is provided that enables the employees to work safely.
4. Housekeeping in distribution rooms must receive high priority to provide a safe working and walking area in front of panels and to keep combustible materials to the minimum required to perform maintenance operations.
5. All enclosures and distribution rooms must have "Danger: High Voltage – Authorized Personnel Only" posted on the front panel and on entrance doors.
6. Flammable materials are strictly prohibited inside distribution rooms (Boxes, rags, cleaning fluids, etc.)

Lock Out/Tag Out

1. No work shall be performed on (or near enough to them for employees to be exposed due to the dangers of tools or other equipment coming into contact with the live parts) live parts and the hazards they present.
2. If any employee is exposed to contact with parts of fixed electric equipment or circuits which have been deenergized, the circuits energizing the parts shall be locked out or tagged or both.
3. Conductors and parts of electrical equipment that have been de-energized but not been locked or tagged out shall be treated as live parts.
4. Per company policy all electrical will be and performed only by qualified and licensed electrical employees who are familiar with the use of special precautionary techniques, PPE, insulating and shielding materials and insulated tools. Any equipment being made ready for maintenance will be locked out using CDI's Lock Out/Tag Out Program. Lockouts are performed by the Safety Manager, Shop Foreman or Branch Manager. Designated employees in some branches may be trained by local management to lock out equipment. If live sources are to be worked, it will only be performed with the knowledge of local management. Only certified electricians may work on electric circuit parts or equipment.
5. Only authorized personnel may perform lock out/tag out work on electrical equipment and will follow the Control of Hazardous Energy – Lock out/Tag Out Program.
6. Authorized personnel will be trained in lock out/tag out procedures.
7. Affected personnel will be notified when lock out/tag out activities are being performed in their work area.

Fire Extinguishers

1. Approved fire extinguishers must be provided near electrical breaker panels and distribution centers.
2. Water type extinguishers shall not be located closer than 50 feet from electrical equipment.

Electric Shock-CPR

1. If someone is discovered that has received an electric shock and is unconscious, first check to see if their body is in contact with an electrical circuit. Do not touch a person until you are sure there is no contact with an electrical circuit.
2. When it is safe to make contact with the victim, begin CPR if the person's heart has stopped or they are not breathing.
3. Call for help immediately.

Electric Welders

1. A disconnecting means shall be provided in the supply circuit for each motor-generator arc welder, and for each AC transformer and DC rectifier arc welder which is not equipped with a disconnect mounted as an integral part of the welder.
2. A switch or circuit breaker shall be provided by which each resistance welder and its control equipment can be isolated from the supply circuit. The ampere rating of this disconnecting means may not be less than the supply conductor ampacity.

Equipment Grounding

1. All gas compressors, air compressors, separators, vessels, etc. shall be grounded by means of using a lug and ground strap, nominal in size to a ½" bolt or larger, attached to a ground rod six feet or longer.
2. Equipment bonding jumpers shall be of copper or other corrosion-resistance material.
3. The transfer of hazardous or flammable material from a metal or plastic container with a flash point of 100 degrees F or less shall have a ground strap from the container and attached to the skid or a ground rod placed in the ground.

Assured Grounding

OSHA requires that employers shall use either ground fault circuit interrupters (GFCI) or an assured equipment grounding conductor program to protect personnel from electrical shock while working.

1. Employees shall use GFCI's in lieu of an assured grounding program.

Ground Fault Circuit Interrupters

All 120-volt, single-phase 15 and 20 ampere receptacle outlets on construction or maintenance sites, which are not part of the permanent wiring of the building or structure and which are in use by employees, shall have approved ground fault circuit interrupters for personnel protection.

1. All hand portable electric tools and extension cords shall use a GFCI.
2. Additionally, approved GFCI's shall be used for 240-Volt circuits in the same service as described above.
3. GFCI's must be used on all 120 volt, single-phase 15-amp and 20-amp receptacles within 6 feet of a sink, damp areas or on installed outdoor equipment.
4. The GFCI must be the first device plugged into a permanent receptacle.
5. The GFCI must be tested before each use.

Voltage Range (phase to phase)	Minimum Approach Distance
Over 300V, not over 750V	1 ft. 0 in. (30.5 cm)
Over 750V, not over 2kV	1 ft. 6 in. (46 cm)
Over 2kV, not over 15kV	2 ft. 0 in. (61 cm)
Over 15kV, not over 37kV	3 ft. 0 in. (91 cm)
Over 37kV, not over 87.5kV	3 ft. 6 in. (107 cm)
Over 87.5kV, not over 121kV	4 ft. 0 in. (122 cm)
Over 121kV, not over 140kV	4 ft. 6 in. (137 cm)

PPE PROGRAM

General

Provide protective equipment, including personal protective equipment (for head, eyes, face, and extremities), respiratory devices, protective clothing, and protective shields and barriers. This protective equipment must be used wherever injury or impairment of function of any body part (through absorption, inhalation or physical contact) is likely that because of process or environmental hazards, radiological hazards, chemical hazards, or mechanical irritants. All PPE shall be provided, used and maintained in a sanitary and reliable condition. Prior to use employees should be trained in selecting, using and care of PPE. Training on PPE should be documented and kept for duration of employment. Failure to comply with CDI Technology Services Policy will result in retraining and further disciplinary action.

PPE Replacement Schedule

PPE	ISSUED	LOST REPLACEMENT CHARGE
Safety Glasses	6 Months	\$15
Gloves	3 Months	\$11
Vest	Yearly	\$22
Hard Hat (KASK Zenith Full Suspension)	10 Years	\$150
Work Boots	Employee Provided	\$0

*** Any consumable (examples: Safety Glasses, or vests) shall be turned in at any time for a no charge replacement.

Employees are NOT allowed to use employee-owned equipment, except prescription safety glasses and safety footwear.

Defective or damaged equipment or PPE shall not be used and must be tagged or destroyed and replaced.

All issued personal protective equipment will be cost-free to the employee. All employees must understand and follow the procedures identified in this program.

Eye Protection

When exposed to facial or eye hazards from flying fragments, chemicals, acids or caustic liquids, melted metal, or chemical gases or vapours, employees must use the required eye or face protection. PPE used to protect the eyes and face must be in compliance with ANSI Standard Z87.1-2003 (Z87+), *Occupational and Educational Personal Eye and Face Protective Devices*.

Safety Glasses

While on company property, employees, subcontractors, and visitors must wear safety glasses with side shields that meet ANSI Z-87.1-2003 standards with "high Impact lenses". Requirements as described below:

1. In shops and warehouses, and at field locations, except in striped safety zones that have been designated and approved.
2. In all yard work zones. Everyone in the vicinity of loading or unloading equipment. All employees who perform mechanic or maintenance work, operate equipment (e.g., forklift and welding), test stand operations, or do any work that may potentially cause an eye injury.
3. In a restroom, office, or any other building when performing work that may potentially cause an eye injury.
4. Provide with visitor glasses. If approved prescription safety glasses are not available for an individual, they must wear "Over the glass" type safety goggles or glasses over their regular prescription glasses until they obtain approved prescription safety glasses.
5. Employees are not required to wear safety glasses in parking lots when traveling to and from vehicles, or office buildings using main doors that do not enter shops.

Goggles

1. When handling or mixing liquid chemicals, solvents, paints, etc., employees must wear chemical splash proof goggles as recommended on the Safety Data Sheet for the material being handled.
2. When blowing equipment down with air the employee must wear dust proof goggles. They must also be worn when the employee is performing a job task where safety glasses do not do an adequate job of preventing airborne particles from entering the openings around the lenses and side shields.

Face Shields

When operating a hand held or immobile grinder with a wire or abrasive wheel the employee must wear a full face shield over safety glasses. The full-face shield must also be used when chipping paint or concrete. Also, when performing job tasks where flying objects may potentially strike the face, if safety glasses or goggles do not provide adequate protection, the employee must wear a full-face shield over safety glasses.

Head Protection

When working in areas where a head injury is possible due to employee-initiated impact, or impact from falling or other moving objects, employees must wear protective helmets. To include but not limited to entering ceiling, utilizing a ladder, operating forklifts or other machinery. Helmets must be in compliance with ANSI Standard Z89.1-2014 Class E, *American* head protection or must be equally effective.

1. Hardhats must be worn when working in areas where head injury is possible from falling objects. Ensure chin strap is secured.
2. Secure overall fit of hard hat as well as chin strap to ensure proper fit of hard hat.
3. Hardhats must be worn at all warehouse, field, and shop locations, or any location where it is determined to be necessary as per the location's PPE Hazard Assessment.
4. Never alter hardhats in any way.
5. Never paint or apply unauthorized stickers on hardhats, unless approved by Safety Department.
6. Never drill, cut, bend, or apply heat to a hardhat.
7. Never alter the suspension system of a hardhat.
8. Employees must inspect hardhat regularly for chips, scratches, cracks, signs of heat exposure (sun cracks), etc.
9. Immediate replace any defective hardhats.
10. Never place a hardhat in the rear window of a vehicle (they can degrade in the sun or may become a projectile in a vehicle accident).
11. Hardhats must be made available to visitors.
12. Company will provide hardhats.
13. Train employees in the use, care and maintenance of head protection equipment.

Hearing Protection

While in posted "High Noise" areas, all employees, subcontractors, and visitors must wear hearing protection.

All areas that are known, or suspected to have excessive noise (constantly or intermittently) must have warning signs posted.

When noise caused by machinery, tools, etc., prevents normal conversations to be clearly heard, employees shall wear hearing protection even if warning signs are not posted.

General rule of thumb: If you must yell to be heard, you require hearing protection.

Types

1. Preformed Inserts (ear plugs)
2. Canal Caps (head band type)
3. Muff, either headband or hard hat mounted
4. Supply ear muffs and ear plugs employees in sizes and configurations that are comfortable for the employee.

Care and Maintenance

1. Employees must inspect hearing protection before each use.
2. Keep hearing protection clean to prevent ear infections.
3. Discard disposable ear plugs when they become dirty, greasy, or cracked.
4. Replace any ear muffs that have cracked seals, deteriorated foam inserts, or are defective.

Fit

1. Because everyone is different, hearing protection must be selected for the individual. The employee must try a variety of styles to find one that is comfortable and provides adequate protection.
2. Instruct employees in how to obtain the proper fit.

Hand Protection

Gloves

1. When performing all work tasks that may expose the hands to extreme temperatures, cuts and abrasions, or exposure to chemicals, employees **must** wear gloves.
2. Welding: When performing arc welding or oxy/gas cutting, employees must wear welding gloves made of leather or other heat resistant materials.
3. Chemical: When handling chemicals that specify gloves as PPE, the employee must impervious (chemical resistant) gloves.
4. To select the correct glove type, refer to the specific chemical's Safety Data Sheet.
5. Employees who work with chemicals, i.e., solvent vats, will be issued their own gloves for hygienic purposes.
6. Leather: When working with sharp materials, or when handling rigging equipment, employees must wear leather gloves.
7. Cloth: When handling objects or materials that could cause blisters, splinters, cuts, etc., the employee must wear cloth gloves.

8. Heat Resistant: When handling hot bearings, races, or other materials or objects (heated beyond room temperature), employees must wear heat resistant gloves.
9. Insulated: To prevent frostbite in extreme cold climates, employees must wear insulated gloves.
10. Gloves are NOT to be altered, IE tips of gloves shall not be removed.
11. Glove Inspections
 - i. Prior to each use, inspect gloves for holes, tears, and worn areas.
 - ii. Periodically air test chemical gloves for pinholes by tightly twisting the cuff, expand the glove by applying low air pressure, and submersing the glove in water to check for bubbles.
 - iii. Immediately discard any defective gloves.

Foot Protection

All employees with regular duties at field locations, in shops and warehouses must wear safety footwear.

1. Visitors and office workers entering these areas infrequently are not required to wear foot protection if they stay away from the work being performed.
2. If visitors or office workers must be in the proximity of the work, the work must be stopped while in the area or safety footwear must be worn.
3. When in shops, warehouses, field locations and parts departments, employees must wear leather or equivalent boots (lace up or pull up).
4. Boots must provide ankle protection and have must have soles that are designed to protect the feet from punctures, and must have defined heels for climbing ladders.
5. When job tasks there is a risk of equipment or material crushing the foot, toe guards must be worn.
6. Safety footwear must comply with ANSI Z41-1999 standards.
7. Some client locations may require everyone to wear safety footwear. Before visiting field locations, check with the local supervisor for client requirements.

Fall Protection

When performing certain elevated jobs (over six feet), employees must use personal fall protection. Refer to Fall Protection Program.

Worksite Hazard Assessment

Hazard assessments must be performed to determine PPE requirements, the Hazard assessment is to be signed by the person that completed it and documented. If it is determined that a hazard exists or is likely to exist, a PPE must be used. Following are some hazard sources that may be identified:

1. High or low temperatures
2. Chemical exposure (see SDS for guidance)
3. Flying fragments, melted metal or other face, eye, or skin hazards
4. Falling objects, or the possibility of dropping an object
5. Employee falling from a height in excess of 6'
6. Sharp objects
7. Rolling or pinching that could crush hands or feet
8. Electrical hazards

Anytime that these hazards may cause injury to employees, PPE must be selected to eliminate or substantially reduce the potential for injury. Employees will be notified for the selection and reason.

Each affected employee will be apprised of the results of this assessment, and a copy of the assessment will be kept at the local office.

Each affected employee must be fitted with the selected/identified PPE. The Training section of this program addresses fitting (including proper donning, and doffing), cleaning and maintenance of PPE. All PPE use exemptions must be supported by the PPE hazard assessment.

Monitoring

Site managers and supervisors must monitor worksite tasks to identify changes in hazards, or the introduction of new hazards. If the site manager or supervisor discovers a new hazard, they must advise the Safety Manager. The Safety Manager conducts a hazard assessment for appropriate PPE for the new hazard.

The Safety Manager monitors how effective the PPE Procedure is and recommends improvements to management.

BLOODBORNE PATHOGENS

Exposure Control Plan Access

Employees shall be provided training and have access to a copy of the exposure control plan by request from their supervisor or the safety manager who will supply it in a reasonable time, place and manner.

Procedure Reviews and Updates

The exposure control procedure must be reviewed and updated whenever a new procedure, activity or function with the potential to expose employees to biohazards is introduced into a worksite.

Universal Precautions

Your employees shall observe universal precautions by treating all human blood and certain human body fluids as if they are known to be infectious for HIV, HBV and other pathogens even under circumstances where exposure is highly unlikely.

Exposure Controls

Exposure controls are designed to reduce or eliminate employee exposure to blood or potentially infectious materials and should be re-evaluated and revised if necessary, on a regular basis to maximize their effectiveness in controlling employee exposure. Therefore:

1. Hand washing facilities are readily available at all work locations except those that cannot support or simply do not have such facilities. In these cases, appropriate antiseptic solutions and / or towelettes are available for use.
2. All sharps containers shall have a biohazard-warning label or a specific color to identify it as a biohazard, shall be resistant to punctures and shall be leak proof. The same characteristics shall apply to all secondary sharps containers.

Safe Work Practices

Safe work practices are designed to support exposure controls and further minimize or eliminate occupational exposure.

1. Employees must wash hands and other applicable body parts as soon as potentially contaminated gloves or other PPE are removed to further prevent contamination.
2. If any part of the body has contact with blood or any other infectious material, employees must wash hands and other exposed body parts with soap and water immediately.
3. Only trained and authorized personnel are allowed to handle sharps, sharps containers and any other potentially sharp and infectious needles or equipment.
4. Activities such as applying make up, handling contact lenses, smoking or any other hand and eye, mouth, nose, ear or other body part contact is prohibited in areas where exposure to biohazards is possible.
5. Storage areas such as pantries, freezers, refrigerators and others that may contain potentially infectious materials shall not contain food or drink.
6. All equipment and surfaces that have had contact with blood or other infectious materials must be properly cleaned and decontaminated.
7. All biological specimens must be contained in leak proof containers for handling, storage and transport to minimize potential contact with other surfaces and employees.
8. In cases where the exterior surface of the specimen container is contaminated; the container must be placed into another leak proof container, which shall be labeled as "for handling and storage".
9. All emergency responder, first aid or other potentially infectious supplies must be disposed of immediately and appropriately after contamination.

Personal Protective Equipment (PPE)

PPE shall be provided by your company at no cost to the employee and must be of proper fit, adequate for the task at hand and readily available. Defective or damaged PPE must be discarded / replaced or repaired in order to ensure maximum effectiveness.

The following safe work practices shall be followed with regard to biohazards and PPE:

1. Protective garments that are penetrated by blood or other infectious materials must be removed and properly disposed of immediately.
2. PPE that may be contaminated must be removed and properly stored / contained before leaving the work area.
3. PPE such as protective gloves must be worn whenever contact with potentially infectious material exposure is anticipated.
4. Disposable PPE such as rubber gloves must be replaced as soon as practical when contamination has occurred or when they are rendered ineffective by a tear, puncture or other occurrence.
5. Masks and eye protection (such as goggles, face shields, etc.) are used whenever splashes or sprays may generate droplets of infectious materials.
6. Whenever infectious material splashes, sprays or other similar occurrences are possible, PPE such as face shields, goggles, head garments or other appropriate PPE shall be used to protect face, eyes etc.
7. Adequate PPE must be used unless temporarily declined by the employee and approved by the safety manager.
8. PPE should be cleaned, laundered & properly disposed of if contaminated.
9. All PPE must be cleaned, maintained, used, stored and disposed of properly when applicable.

Post-Exposure Requirements

All potential blood or infectious material exposure incidents shall be investigated by the employer thoroughly to ensure that hazards are abated and that affected employees receive the necessary treatment needed to minimize the impact of potential or actual exposure.

All reported exposure incidents shall be formally investigated by the exposure control officer / safety manager or supervisor when the safety manager cannot be present. A detailed report of the incident outlining root cause, corrective actions and the current status of affected employees is then completed and reviewed by employer to help prevent re-occurrence. Additionally, the following confidential information shall be provided to exposed employees:

1. All documentary reports and information of the exposure incident and its circumstances.
2. The identity of the exposure source individual unless applicable laws prevent such identification.

Upon completion of the above procedures, the exposed employee shall be appointed to a qualified healthcare professional who will evaluate the exposed employee, provide information to the employee about his or her medical status and initiate treatment where applicable.

Employer shall provide the following information to the healthcare professional:

1. A copy of the biohazard's standard.
2. A detailed description of the exposure incident.
3. Additional information that is relevant to the healthcare professional.

The following information will be provided to the employer by the healthcare professional as a “written report” and copied to the exposed employee upon completion of the healthcare professional’s evaluation of exposed employee:

1. If a Hepatitis B vaccination is recommended for the exposed employee.
2. Provide Hepatitis B vaccine to employees with occupational exposure
3. If the exposed employee has received the Hepatitis B vaccination since the incident.
4. Verification that the exposed employee has received results information of the medical evaluation.
5. Verification that the exposed employee was made aware of medical conditions caused by the exposure incident that require additional medical evaluation or treatment. All other medical information remains confidential and will not be a part of the written report.



HEAT ILLNESS AND PREVENTION

All managers and supervisors will implement and maintain the Heat Illness Program in their respective work areas. High heat procedures are to be followed when the temperature exceeds 95° Fahrenheit. High heat procedures shall include, but are not limited to:

1. Effective communication by voice, observation or electronic means
2. Will observe employees for alertness and signs/symptoms of heat illness often
3. Reminding employees to drink water throughout the shift
4. Closely supervise new employees for their first 14 days of employment
5. The provisions of this procedure

Provision of Water

Employees shall have access to potable drinking water. Where it is not plumbed or otherwise continuously supplied, it shall be provided in sufficient quantity at the beginning of the work shift.

Access to Shade

Employees must have access to shade. At or below 85 degrees Fahrenheit the employee shall have timely access to shade upon request. For temperatures at or above 85 degrees Fahrenheit, one or more areas with shade shall be provided at all times while employees are present. There should be enough shade for at least 25% of employees on the shift at any one time to use.

Employees suffering from heat illness or those who believe a preventative recovery period is needed shall be provided access to an area with shade that is either open to the air or provided with ventilation or cooling for a period of no less than five minutes. Such access to shade shall be permitted at all times. See definition of "Shade".

Written Procedures

The heat prevention program/procedures shall be in writing and shall be made available to employees.

Each work site shall develop site specific procedures which shall include the minimum:

1. Make available at least 2 quarts of water per employee at the start of the shift. The supervisors or designated persons will monitor water containers every 30 minutes. Employees are encouraged to report to the supervisor/designated person water that is dirty or an inadequate water supply.
2. Supervisors will provide frequent reminders to employees to drink frequently.
3. Workers will be reminded every morning of the importance of frequent consumption of water throughout the shift during hot weather.
4. Place water containers as close as possible to the workers.
5. Water levels should not fall below the point that will provide adequate water for all employees during the time necessary to effect replenishment.
6. Disposable/single use drinking cups will be provided to employees or provisions will be made to supply employees their own cups.
7. Supervisors will set-up an adequate number of umbrellas, canopies or other portable devices at the start of the shift and will relocate them to be closer to the crew, as needed.
8. Non-agricultural employers can use other cooling measures if they demonstrate that these methods are as effective as shade.
9. Working hours will be modified to work during the cooler hours of the day, when possible.
10. More water and rest breaks will be provided when a modified or shorter work-shift is not possible.

11. Supervisors will continuously monitor all employees and stay alert to the presence of heat related symptoms.
12. Supervisors will carry cell phones or other means of communication, to ensure that emergency services can be called.
13. They will check that all means of communication are functional at the work-site prior to each shift.
14. Every morning, workers will be reminded about the address and directions to their work-site so as to inform medical responders.
15. All newly hired workers will be assigned a buddy or experienced coworker to ensure they receive proper training and are following CDI procedures in regard to heat illness prevention.



SILICA EXPOSURE CONTROL PLAN

CDI Technology Services recognizes that exposure to silica dust can be harmful to your health and have negative long-term effects. Here at CDI, the whole company as a community takes responsibility for protecting the safety and health of its employees. The effects of silica can stay hidden and manifest themselves long after our tenure in the workforce ends, so even if you feel fine today, in time with continued frequent exposure that may not be the case.

Our silica exposure control plan includes the following parts:

1. Hazard Identification
2. Employee Training
3. Housekeeping Procedures
4. Engineering Controls
5. Personal Protective Equipment
6. Medical Examinations and Evaluation
7. Emergency First Aid Procedures for Silica Dust
8. Spill and Disposal Procedures

Hazard Identification

CDI Technology Services recognizes that it may be necessary to drill into concrete, CMU (Concrete Masonry Unit) or cut drywall as a part of our scope to complete a project or a task. These tasks can possibly expose you to silica dust. CDI cares about the wellbeing of everyone working with and around us. When any of these jobs/tasks are performed by anyone employed by CDI, they will be required to inform the competent person on the project to assess the possibility of silica exposure. There will always be at least one competent person overseeing any assignment. It could be a Project Manager, Foreman, Journeyman, Technician or any appointed designee by management. An assessment will be made as to the best way to mitigate exposure to everyone in and around the area. If there is any doubt who the competent person on your project may be, call your project manager or company Safety Manager. Do not begin any task that could expose you to a hazard without consulting the competent person to find a safer way to perform your job or task at hand.

Employee Training

All employees performing job/tasks that have been identified by the competent person as a task where possible exposure to silica could take place are required to have already completed a training course prior to working in and around the exposure area. Training for the Occupational Silica Dust Exposure will include the following topics:

1. Health hazards of silica dust exposure (including signs and symptoms of silicosis).
2. Operations and materials that can produce silica dust exposure.
3. Engineering and work practice controls used to protect them from exposures.
4. The importance of proper equipment and control maintenance.

5. Housekeeping procedures.
6. Proper fit and function of respirators as well as their limits.
7. Personal Hygiene procedures to reduce exposures.
8. How smoking increases the risk of developing silicosis and other lung damage.
9. The details of the Occupational Silica Dust Exposure Control Program.

Training will be performed by either the Safety Manager or a qualified person. Re-training and reference material will be made available upon request to employees.

Housekeeping Procedures

Dry sweeping and the use of compressed air are prohibited for removing dust in jobs/task identified in part one. Work areas and equipment covered by dust will be cleaned during and after the task using a HEPA filter vacuum only. Waiting until the end of the day is not an option. Clean as you work. All material and tools to perform the task will be available before the task is to begin. Wet clean up may also be used to remove residue after vacuuming with HEPA vacuum. The competent responsible for ensuring that work areas are free from dust after each task identified in Part 1 is complete.

Engineering Controls

CDI Technology Services employees shall use engineering controls whenever possible. Any drill used in a task identified in Part 1, should have an on-board dust extractor. Outfitting a drill with a separate HEPA vacuum will be an acceptable substitute, but only under direct supervision of the competent person while in use. Access to the areas identified in part 1 will be limited to the employees performing the task and the competent person. Acceptable ways to restrict access can be barricade tape, delineators, or watch personnel who are not assigned to any other task to direct people away from the area.

Medical Surveillance

Per OSHA's respirable crystalline silica standard for the construction industry – 29 CFR 1926.1153, medical monitoring is not required because the employees that could possibly be exposed to silica shall not be exposed or required to wear a respirator for more than 30 days.

Emergency First Aid Procedures for Silica Dust

1. Eye Exposure

If crystalline silica dust gets into the eyes, wash immediately with large amounts of water, lifting the lower and upper lids occasionally. If irritation is present after washing, get medical attention.

2. Breathing

If a person breathes in large amounts of crystalline silica dust, move the exposed person to fresh air immediately. If breathing has stopped, perform artificial respiration. Keep the affected person warm and at rest. Get medical attention as soon as possible.

Spill and Disposal Precautions

If crystalline silica is spilled or released in hazardous concentrations, the following steps must be taken:

1. Ventilate the area of the spill or release.
2. Persons doing the clean-up are required to wear appropriate respirators.
3. Collect spilled material in the most convenient and safe manner for reclamation or disposal.
4. A HEPA vacuum will be used for final cleaning. A wet towel will be used if any residue remains. The cloth will be disposed of with the silica waste.



SCAFFOLDS

General Requirements

When work cannot be performed safely from the ground, or from solid construction, scaffolds must be supplied and erected according to the applicable standards for the employees involved. In the case that ladders are used, the work must conform to ladder safety standards.

Scaffolds must be erected by a qualified individual (someone who can certify that the scaffolding is safe to use).

Scaffolds must be set on footings or anchored to material that is sound, rigid, and able to support the maximum intended load without settling or shifting. Never use unstable objects such as loose boards, barrels, or boxes to support scaffolds or planks.

Only use scaffolds (and components) that are capable supporting (without failure) at least four times the maximum intended load. All scaffold components must comply with OSHA requirements 29 CFR 1910.28 and 29 CFR 1926.451.

If using wood scaffold planks, they must be cross-supported every 8 feet. Cleat, wire or nail scaffold deck boards into place.

You must completely floor all working levels of scaffolds except where space is required for openings for internal ladders.

Maintenance of scaffolds and other components described in this program is required to keep them in safe condition. Never alter or move (horizontally) a scaffold that is occupied.

Immediately repair any damaged or weakened scaffold. Never use a damaged or weakened scaffold until repairs have been completed.

Never load a scaffold in excess of the working load that it is intended for.

Always use properly sized bolts in the construction of scaffolds and use sufficient number at each connection to create the designed strength of the scaffold.

Always overlap platforms (minimum of 12 inches) and secure them from any movement.

Always provide an access ladder or equivalent safe access.

Always extend scaffold planks over their end supports by not less than 6 inches and not more than 18 inches.

Ensure that poles, legs, and uprights of scaffolds are plumb, and are rigidly braced and secured to prevent swaying and shifting.

Always apply a tag line to materials being hoisted onto a scaffold.

Always provide overhead protection workers on a scaffold if they are exposed to overhead hazards.

If a scaffold or platform is erected over 6 feet off the ground, always install toe boards and guardrails. Where workers are required to work or pass under the scaffold, always install a screen between the toe board and the guardrail (along the entire opening), consisting of No. 18 gauge wire one-half inch mesh or the equivalent.

Never perform work on a scaffold during storms or high winds.

Never perform work on a scaffold that is covered with snow or ice, unless all the snow and ice is removed, and planking is sanded to prevent slipping.

Do not accumulate tools, material, and debris on a scaffold such that it presents a hazard.

Inspections

Scaffolding must be inspected by a qualified individual as per the manufacturer's recommendations. The qualified individual must also conduct inspections prior to each use and periodically throughout each shift.

1. A qualified individual inspects the scaffold after it is erected, prior to the start of the work day, and at the beginning of a shift change to ensure the scaffold is safe prior to and during use. At a minimum, the following shall be inspected:
 - i. Ensure there is no settling in the ground or surface footing.
 - ii. Check for any signs of damage, missing pins, bolts and any locks and/or safety keepers on all main supports and cross braces.
 - iii. Check for damage, proper placement and any possible movement of all walking surfaces and/or planks.
 - iv. Check that all walkways and planks are secure to prevent movement.
2. The inspection will ensure that the scaffold is stable, and movement is prevented.
3. If a defect or damage to the scaffold is discovered during the inspection, the scaffold must be tagged out by the qualified individual. Use of the scaffold will be prohibited until the necessary repairs are made.

Mandatory Signs and Tags

Signs and tags must be visible at all times when performing work and must be promptly removed or covered when the hazard are abated. Tags shall also be used when defective equipment or unsafe conditions are found.

The qualified individual will tag out any defective or unsafe equipment or conditions (e.g., improper footings) shall using a weather resistant tag that is secured to the scaffolding structure on all four sides.

Only use danger signs where an immediate hazard exists. To alert other workers of possible danger from falling objects, post danger signs in the immediate area of the scaffold.

Caution - To mark off a larger area around scaffolding and warn other workers to use caution, use signs and/or barricade tape.

Modifications

A qualified person must perform all modifications and repairs. This qualified person must be able to certify that the scaffolding is safe to use to ensure that non-qualified personnel do not create additional hazards.

Only employees who are trained and certified shall perform any work, modifications or repairs. Unqualified employees who fail to comply may receive disciplinary action and or termination.

Training should consist of knowing the type of scaffold, understanding weight capacity/worker capacity, checking for signs and tags, and understanding procedures to control or minimize hazards.

Retraining should be conducted after 5 years or within 48 hours of noncompliance.

AERIAL LIFTS

The purpose of this program is to establish safe operating standards and requirements for aerial lift devices and their related components. This program shall cover all the company owned, leased, rented or otherwise used aerial lifts and all employees who may use aerial lifts during the course of employment.

Key Responsibilities

Safety Manager

- Implement and enforce this program.
- Ensure that this program complies with regulatory standards and update the program accordingly.
- Ensure that all aerial lift devices and related equipment comply with applicable regulatory standards and manufacturer recommendations.

Supervisors

- Ensure that all employees who may operate aerial lifts are properly trained.
- Ensure that horseplay and other unsafe acts are addressed through refresher training and / or disciplinary action if applicable.

Employees

- Comply with all parts of this program.
- Ensure they are properly trained and comfortable operating the aerial lift equipment prior to use.

Procedure

The following procedures shall be followed in order to achieve compliance with regulatory standards and ultimately keep employees safe on the job:

1. Only authorized persons are allowed to operate aerial lift equipment.
2. Aerial lift load limits shall not be exceeded beyond those recommended by the manufacturer.
3. All aerial lift equipment will have a working back-up alarm. A spotter may be used in unusual circumstances or when the back-up alarm does not serve as an effective warning device.
4. The minimum clearance between electrical lines and any part of the equipment is at least 10 feet.
5. Employees shall stand firmly on the floor and shall not climb on the rails or the edge of the basket.
6. An approved fall restraint system shall be attached to the boom or basket and worn by the operator while working from an aerial lift.
7. While operating lift, 100% tie off is required. At no point while suspended in air is operator to remove harness or lifeline
8. Removing lifeline while operating lift will result in retraining and may result in disciplinary action taken for operator and spotter.

Inspections and Maintenance

All aerial lift devices and equipment shall be inspected and maintained in accordance with the following:

1. Only authorized personnel shall perform maintenance and make repairs.
2. Replacement parts must meet the original design specifications of the manufacturer.
3. Modification to the equipment shall not be made without written approval from the manufacturer.
4. Lift controls and equipment shall be tested/inspected before each use.
5. Inspection shall be made at least daily and prior to each shift.

6. If an inspection reveals any defect or hazardous condition, the equipment must be placed out of service until the necessary repairs are made and the equipment passes inspection.
7. Lifts shall be maintained in a safe, reliable condition; free of excess grease, oil and other lubricants.
8. Only noncombustible cleaning agents shall be used to clean the equipment whenever possible.



AERIAL LIFT RESCUE PLAN

1.0 PURPOSE

The purpose of this rescue template is to establish company-wide guidelines for responding to falls from height. This rescue plan is intended to reduce risks to an employee's health after a fall arrest event. The rescue plan should also minimize the amount of at-risk behavior of the rescuer during the rescue attempt and help to ensure that the rescue is conducted promptly in a safe and professional manner.

2.0 APPLICATION

- 2.1 This rescue plan applies to all locations where personnel are employed to work at height.
- 2.2 The requirements of this rescue plan must be observed by all personnel involved in working at heights.
- 2.3 This rescue plan must be reviewed or included in any job safety analysis or pre-task planning for activities that require working at heights.

3.0 DEFINITIONS

- 3.1 RESCUE PLAN: A strategy or procedure, planned in advance, to safely retrieve a person who has fallen from an elevated work surface and is suspended in a full body harness. This includes self-rescue or mechanically aided rescue.
- 3.2 SELF RESCUE: An act or instance of an employee using his fall protection equipment to rescue him or herself.
- 3.3 MECHANICALLY AIDED RESCUE: A strategy or procedure, planned in advance, to safely retrieve a person who has fallen from an elevated work surface using mechanical means.
- 3.4 SUSPENSION TRAUMA: A serious medical condition that can lead to unconsciousness, injury or death, which can occur when a worker is suspended in a harness for too long after a fall.
- 3.5 PROMPT RESCUE: The recommended goal for rescue subject contact is less than six minutes, per ANSI Z359.2-6.1

4.0 RESPONSIBILITIES

4.1 EMPLOYEES:

- Must be trained in and familiar with the Fall Protection Program.
- Must understand and be able to evaluate the risks associated with working at heights.
- Must be trained and competent in the use of fall protection equipment prior to conducting work at heights.
- Must report unsafe conditions or behaviors to the Person-In-Charge.
- Must be familiar with and understand the company's rescue plan to provide prompt rescue in the event of an arrested fall event.

4.2 AUTHORIZED RESCUER:

- Must be trained by a competent rescuer trainer before being exposed to a fall hazard or potential rescue application.
- Must be re-trained when the nature of the work, workplace, or methods of control or rescue change to an extent that prior training is no longer adequate.
- Must be trained on how to inspect, anchor, assemble and use the fall protection and rescue equipment used in locations where employees work. Training must include physical demonstrations by trainees.
- Training must include at least the following:
 - o Fall hazard recognition
 - o Fall hazard elimination and control methods
 - o Applicable fall protection and rescue regulations
 - o How to use written fall protection and rescue procedures
 - o Inspection of equipment components and systems before use.

- Refresher training must occur at least every two years for the authorized rescuer to stay current with fall protection and rescue educational requirements per ANSI.
- Must be evaluated by a competent rescuer or competent rescuer trainer at least annually to ensure competency of the duties assigned. This evaluation must include both a written examination and a physical demonstration of usage of all equipment the person is authorized to operate.

4.3 COMPETENT RESCUER:

- Must be trained by a competent rescuer trainer.
- Must be trained on how to inspect, anchor, assemble and use the fall protection and rescue equipment used in locations where employees work. Training must include physical demonstrations by trainees.
- Training must include use of all types of equipment and systems used in locations where rescues may be required, including inspection of systems prior to use, installation, component compatibility, descent control, secondary systems, packaging methods, dismantling, storage and the common hazards associated with each system and component.
- Training must include at least the following information:
 - o Fall hazard elimination and control methods
 - o Applicable fall protection and rescue regulations
 - o Assessment of fall hazards to determine rescue methods
 - o Responsibilities of designated persons under this standard
 - o Detailed inspection and recording of rescue equipment components and systems
 - o Rescue systems assessment and determination of when a system is unsafe
 - o Development of written fall protection rescue procedures
 - o Selection and use of non-certified anchorages.
- Refresher training for Competent Person Rescuers must be conducted at least every year per ANSI.

5.0 PROCEDURE

5.1 A rescue plan must be a part of the Job Safety Analysis for any job that requires work at height. The rescue plan must include consideration of the following rescue types and circumstances:

5.1.1 SELF RESCUE: If the person working at heights has properly selected and used his or her fall protection equipment, 90% of workers will be able to perform a Self Rescue, which should include these steps:

1. Climbing back up to the level from which he fell (from a few inches to 2-3 feet).
2. Returning to the floor or ground to be evaluated for possible medical attention per OSHA.
3. Removing all components of fall arrest system impacted by the fall event from service and documenting (bag and tag) the components with name, date and activity at time of fall and giving the equipment to management.

5.1.2 ASSISTED SELF RESCUE WITH MECHANICALLY AIDED HAULING/ROPE SYSTEM: If self-rescue is not possible, then an Assisted Self Rescue will be needed. The following guidelines should be used during a mechanically aided rescue:

1. The Capital Safety Rollgliss™ R550 or other compliant rescue and descent device will be secured to an anchor that is rated for at least 3,000 lbs.
2. The haul line may be swung over or lowered to the fallen worker, who will grab the rescue lifeline snap hook and secure it to the appropriate D-ring on his body support. A positive connection to the D-ring must be verified by one of the rescue team members.
3. The rescue team will raise or lower the fallen employee to the appropriate work platform or ground and provide medical aid as required by OSHA.
4. Remove all components of fall arrest system impacted by the fall event from service and document (bag and tag) the components with name, date and activity at time of fall and give the equipment to management.

5.1.3 MECHANICALLY AIDED *(UNCONSCIOUS) WITH HAULING/ROPE SYSTEM: If the worker's injuries prevent the worker from attaching to the rescue system, both self-rescue and assisted self-rescue are not options, and a fully Assisted Rescue is necessary:

1. The Capital Safety Rollgliss™ R550 or other compliant rescue and descent device will be secured to an anchor that is rated for at least 3,000 lbs.
2. A rescue team member must attach the haul line to the worker's fall arrest system. This can be performed by accessing the fallen worker and then attaching the rescue system directly to a D-ring on the worker's harness, or by using a rescue pole for the attachment. The rescue team could also attach a rescue grab to the lanyard or vertical lifeline.
3. The rescue team must raise or lower the fallen worker to the appropriate work platform or ground and provide medical aid as required by OSHA.
4. Remove all components of fall arrest system impacted by the fall event from service and document (bag and tag) the components with name, date and activity at time of fall and give the equipment to management.

5.1.4 ASSISTED RESCUE WITH MECHANICALLY AIDED AERIAL LIFT: If Another means of performing a fully Assisted Rescue is to use an aerial lift under the following guidelines:

1. A rescuer will get into the aerial lift and make sure there is a second fall protection device, such as a shock absorbing lanyard or self-retracting lifeline available for the fallen worker.
2. The aerial lift must be maneuvered into position (raised up underneath the fallen worker) so that the rescuer can perform the rescue.
3. Attach the second lanyard or self-retracting lifeline in the aerial lift to the fallen worker.
4. Disconnect the rescued worker from the impacted fall arrest equipment.
5. Lower the worker to the ground and provide medical aid as required by OSHA.
6. Remove all components of fall arrest system impacted by the fall event from service and document (bag and tag) the components with name, date and activity at time of fall and give the equipment to management.

Technology Services

HAZARD IDENTIFICATION AND ASSESSMENT

To assist in the identification and correction of hazards, CDI has developed the following procedures. These procedures are representative only and are not exhaustive of all the measures and methods that will be implemented to guard against injury from recognized and potential hazards in the workplace. As new hazards are identified or improved work procedures developed, they will be promptly incorporated into our Safety Manual. The following methods will be utilized to identify hazards in the workplace:

- Loss analysis of accident trends
- Accident investigation
- Employee observation
- Employee suggestions
- Regulatory requirements for our industry
- Outside agencies such as the fire department and insurance carriers
- Periodic safety inspections

Loss Analysis

Periodic loss analyses will be conducted by the safety program administrator. These will help identify areas of concern and potential job hazards. The results of these analyses will be communicated to management, supervision, and employees through safety meetings and other appropriate means.

Accident Investigations

All accidents and injuries will be investigated in accordance with the guidelines contained in this program. Accident investigations will focus on all causal factors and corrective action including the identification and correction of hazards that may have contributed to the accident.

Employee Observation

Superintendents and foremen shall be continually observing employees for unsafe actions and taking corrective action as necessary.

Employee Suggestions

Employees are encouraged to report any hazard they observe to their supervisor. No employee is to ever be disciplined or discharged for reporting any workplace hazard or unsafe condition. However, employees who do NOT report potential hazards or unsafe conditions that they are aware of will be subject to disciplinary action.

Regulatory Requirements

All industries are subject to government regulations relating to safety. Many of these regulations are specific to our type of business. Copies of pertinent regulations can be obtained from the Safety Program Administrator.

Outside Agencies

Several organizations may assist us in identifying hazards in our workplace. These include safety officers from other contractors, insurance carrier safety and health consultants, private industry consultants, the fire department, and State OSH Consultants.

Periodic Safety Inspections

Periodic safety inspections ensure that physical and mechanical hazards are under control and identify situations that may become potentially hazardous. Inspections shall include a review of the work habits of employees in all work areas. These inspections will be conducted by the Supervisor, Manager, Program Administrator or other designated individual.

Periodic safety inspections will be conducted:

1. When new substances, process, procedures or equipment are used.
2. When new or previously unrecognized hazards are identified.
3. Periodically by the Supervisor.
4. Periodically by the Safety Program Administrator.

These inspections will focus on both unsafe employee actions as well as unsafe conditions. The following is a partial list of items to be checked.

1. The proper use, condition, maintenance and grounding of all electrically operated equipment.
2. The proper use, condition, and maintenance of safeguards for all power-driven equipment.
3. Compliance with the Code of Safe Practices.
4. Housekeeping and personal protective equipment.
5. Hazardous materials.
6. Proper material storage.
7. Provision of first aid equipment and emergency medical services.

Any and all hazards identified will be corrected as soon as practical in accordance with CDI hazard correction policy.

If imminent or life-threatening hazards are identified, which cannot be immediately corrected, all employees must be removed from the area, except those with special training required to correct the hazard, who will be provided necessary safeguards.

Documentation of Inspections

Safety inspections will be documented to include the following:

1. Date on which the inspection was performed.
2. The name and title of person who performed the inspection.
3. Any hazardous conditions noted or discovered, and the steps or procedures taken to correct them.
4. Signature of the person who performed the inspection.

One copy of the completed form should be sent to the office. All reports shall be kept on file.

HAZARD PREVENTION, CORRECTION, AND CONTROL

The following procedures will be used to evaluate, prioritize and correct identified safety hazards. Hazards will be corrected in order of priority: the most serious hazards will be corrected first.

Hazard Evaluation

Factors that will be considered when evaluating hazards include:

1. Potential severity - The potential for serious injury, illness or fatality
2. Likelihood of exposure - The probability of the employee coming into contact with the hazard
3. Frequency of exposure - How often employees come into contact with the hazard
4. Number of employees exposed
5. Possible corrective actions - What can be done to minimize or eliminate the hazard
6. Time necessary to correct - The time necessary to minimize or eliminate the hazard

Techniques for Correcting Hazards

1. Engineering Controls: Could include machine guarding, ventilation, noise reduction at the source, and provision of material handling equipment. These are the first and preferred methods of control.
2. Administrative Controls: The next most desirable method would include rotation of employees or limiting exposure time.
3. Personal Protective Equipment: Includes back support belts, hearing protection, respirators and safety glasses. These are often the least effective controls for hazards and should be relied upon only when other controls are impractical.

Documentation of Corrective Action

All corrective action taken to mitigate hazards should be documented. Depending on the circumstances, one of the following forms should be used:

1. Safety Contact Report
2. Safety Meeting Report
3. Memo or letter
4. Safety inspection form

All hazards noted on safety inspections will be rechecked on each subsequent inspection and notations made as to their status.

HAZARD COMMUNICATION PROGRAM

Purpose

The purpose of this program is to ensure that the hazards of all chemicals and substances identified and evaluated, and that the information concerning their hazards is communicated to employees, emergency response organizations, state and federal agencies, and other employers and contractors, as necessary. This hazard information will be clearly communicated and displayed in accordance with this Hazard Communication Program.

CDI is firmly committed to providing each of its employees a safe and healthy work environment. It is recognized that workers may use chemicals or substances that have potentially hazardous properties. When using these substances, workers must be aware of the identity, toxicity or hazardous properties of a chemical or substance. We believe an informed employee is more likely to be a safe employee. To this end, we have established and implemented a written Hazard Communication Program.

Scope

This program is applicable to all employees who may come in contact with hazardous chemicals while working. This document is to be followed by all employees and contractors on company owned premises. In addition, this program is to be used in the event an operator program does not exist or is less stringent than our own.

Definitions

Chemical - any element, chemical compound, or mixture of elements and/or compounds.

Chemical Inventory List - a list of chemicals used at this facility, or by personnel that report to this facility.

Electronic Access – using electronic media (telephone, fax, internet, etc.) to obtain Safety Data Sheets or health information.

Facility - an establishment at one geographical location containing one or more work areas.

(GHS) Globally Harmonized System - The Globally Harmonized System (GHS) is an international approach to hazard communication, providing agreed criteria for classification of chemical hazards, and a standardized approach to label elements and safety data sheets. NOTE: Most new GHS requirements apply to substance manufacturers or distributors since they are responsible for including safety data sheets with purchased substances. However, all employers are still required to train each employee on the new label elements and safety data sheets format.

Hazardous Chemical - any chemical that is a physical hazard, a health hazard, or has a Permissible Exposure Limit established for it.

Hazardous Substance - see hazardous chemical.

Hazard Communication Program Coordinator - the person who has overall responsibility at a facility for that facility's Hazard Communication Program.

Health Hazard - a substance for which there is statistically significant evidence based on at least one study conducted in accordance with established scientific principles that acute or chronic adverse health effects may occur in exposed employees.

IDLH - immediately dangerous to life and health.

Immediate Use - the chemical will be under the control of and used only by the person who transfers it from a labeled container and only within the work shift in which it is transferred.

Job Site - an area remote from a facility where hazardous chemicals are stored or used, and employees are present for the purpose of business.

(NFPA) National Fire Protection Association Labeling - a common industry labeling method developed by the National Fire Protection Association to identify the hazards associated with a particular chemical.

(PEL) Permissible Exposure Limit - the maximum eight-hour time weighted average of any airborne contaminant to which an employee may be exposed.

Readily Available - when an employee has access during the course of his/her normal work shift.

(SDS) Safety Data Sheet – a written or printed document containing chemical hazard and safety handling info, prepared in accordance with the new HAZCOM GHS requirements.

Substance - see Chemical.

(TLV) Threshold Limit Value - the airborne concentration of a substance that represents conditions under which it is believed that nearly all normal workers may be repeatedly exposed day after day without adverse effect.

Work Area - a room or defined space in a facility where hazardous chemicals are stored or used and where one or more employees are present.

Workplace - see Facility.

Workplace Chemical List - see Facility Chemical List.

Responsibilities

A written hazard communication program shall be developed, implemented and maintained at each workplace. The program will describe how labels and other forms of warning, safety data sheets/SDS and employee information will be kept, maintained, and disseminated.

The Safety Manager is responsible for developing and implementing the Hazard Communications Program. Managers are responsible for maintaining Safety Data Sheets and the Chemical Inventory List for their respective locations. The Safety Manager reviews the SDS files and Chemical Inventory List at each location at least annually to ensure they are current and complete.

The project leader or Foreman is responsible for ensuring that all containers from manufacturers or distributors have the correct and updated labels per the new GHS requirements and for ensuring that all applicable employees are trained on the new label elements and safety data sheets format.

Employees are responsible for following the requirements set forth in the Hazard Communication Program, to use proper personal protective equipment, to report containers without labels immediately to their supervisor and to never deface any label.

Any employee who transfers any material from one container to another is responsible for labeling the new container with all required information.

All employees are responsible for learning the requirements of this section and for applying them to their daily work routine.

Requirements

Introduction

This Hazard Communication Program was prepared for use by your company to explain how we meet the requirements of the federal Occupational Safety and Health Administration's (OSHA's) Hazard Communication Standard (29 CFR 1910.1200). It spells out how we inventory chemicals stored and used, how we obtain and use safety data sheets/SDS, how we maintain labels on chemical substances, and how we train employees about the hazards of chemicals they are likely to come in contact with on the job.

Preparation of this program indicates our continuing commitment to safety among our employees in all our job sites.

1. Each facility is expected to follow this program and maintain its work areas in accordance with these requirements.
2. Employees, their designated representatives, and government officials must be provided copies of this program upon request.
3. As part of our ongoing hazard communication effort, we will make available other information in addition to the program to any worker requesting it.
4. Asking to see this information is an employee's right,
5. Using this information is part of our shared commitment to a safe, healthy workplace.

List of Hazardous Chemicals

Maintains a listing of all known hazardous chemicals known to be present at each job site by using the identity it is referenced by on the appropriate safety data sheet (SDS). This identity is often a common name, such as the product or trade name (i.e., Lime-A-Way).

The Chemical Inventory List is updated annually by the Hazard Communication Program Coordinator or their designee with additional updates being made when necessary.

The facility Chemical Inventory List must be available for review upon request. Additionally, a written hazard communication program must be developed, implemented & maintained at each workplace.

"Safety Data Sheets"

Chemical manufacturers are responsible for developing SDS's. Company shall have an SDS for each chemical used with the exception of consumer products. SDS's must be obtained for each required chemical from the chemical manufacturer, supplier, or vendor. The purchasing of any potentially hazardous chemical products from any supplier that does not provide an appropriate Safety Data Sheet in a timely fashion is strictly prohibited.

SDS's shall be maintained and readily accessible in each workplace. SDS's can be maintained at the primary work site, however, they should be immediately available in case of emergency. SDS's must be made available upon request to employees, their designated representatives, the Assistant Secretary of Labor, and to the Director of OSHA.

Safety Data Sheets are filed alphabetically, and by material classification, in the SDS Book. A Chemical Inventory List is provided in the front of the SDS Book, listing all SDS' contained therein. This inventory serves as the index of the SDS Book. The SDS Book shall be displayed in a prominent location in the work area where it is accessible to all employees.

A copy of a SDS request form is located in the first section of the SDS Book. An employee may use a copy of this form to request an SDS or he may ask the Manager for one. In either case, the requested SDS must be given to the employee within 24 hours of being requested.

The Safety Data Sheet must be kept in the SDS library for as long as the chemical is used by the facility.

Electronic access (telephone, fax, Internet, etc.) may be used in the acquisition of any needed SDS and to maintain SDS libraries and archives.

The Manager is responsible for seeing that the Chemical Inventory List inventory is maintained, is current, and is complete. He will review and update the inventory and the SDS Book at least annually. When a hazardous material has been permanently removed from the work place, its SDS is to be removed from the SDS's Book and the Chemical Inventory List. The SDS is then placed in a "dead file" in case it is needed in the future.

SDS's for hazardous materials to which employees have been exposed must be maintained after the employee leaves your employment.

Employees will be advised of all special instructions, PPE, and the hazards associated with chemicals-including chemicals contained in unlabeled pipes-in their work areas. The Manager will inform employees of the hazards of non-routine tasks by presenting a copy of the site-specific hazardous materials list, ensuring that the employee is aware of their presence should a non-routine task with unfamiliar materials present itself.

Employees have the right to request SDS on any chemical, which must then be provided without any issues. Labels,

Labeling and Warnings:

The Manager will ensure that all hazardous chemicals used or stored in the facility are properly labeled.

1. Damaged labels or labels with incomplete information shall be reported immediately,
2. Damaged labels on incoming containers of chemicals will not be removed,
3. New labels shall be provided as needed so that all containers are labeled correctly,
4. Only containers into which an employee transfers a chemical for their own immediate use will not require labeling,
5. Employees who are unsure of the contents of any container, vessel, or piping must contact their supervisor for information regarding the substance including:
 - i. The name of the substance,
 - ii. The hazards associated with the substance,
 - iii. The safety precautions required for working with the substance.

Labels, tags, or markings on containers shall use the following 16-section (GHS) formatting convention and headings:

1. Identification
2. Hazard(s) identification
3. Composition/information on ingredients
4. First-Aid measures
5. Fire-fighting measures
6. Accidental release measures
7. Handling & Storage
8. Exposure controls/personal protection
9. Physical and chemical properties
10. Stability and reactivity
11. Toxicological information
12. Ecological information
13. Disposal considerations
14. Transport information
15. Regulatory information
16. Other information, including date of preparation or last revision

All containers must be labeled correctly under the new GHS HAZCOM standard (this responsibility usually falls upon the manufacturers shoulders. However, if labels are not present for any reason, employers are responsible for labeling containers. Upon transferring the content of one container to another, the employee must label the new container with all required information. This information can be obtained from the labeling of the original container or from the material's SDS. Any container of a potentially hazardous material that will not be emptied during one shift must be labeled, without exception.

Personnel in the Shipping and Receiving Departments are responsible for the proper labeling of all containers shipped by company and for the inspection of all incoming materials for correct labeling. Chemicals received from vendors that are improperly labeled must be rejected.

NFPA Standard 704 labels shall be the preferred hazard identification method used in company facilities and on materials containers used on client sites. All employees, clients, subcontractors, and visitors who may come in contact with a hazardous substance must be briefed to ensure understanding of the NFPA 704 labeling system.

Training

Employees shall be provided with appropriate, effective information and training on the hazardous chemicals in their work area at the time of their initial assignment, and upon the introduction of a new physical or health hazard into their work area. Information and training may be designed to cover categories of hazards (e.g., flammability, carcinogenic) or specific chemicals. However, chemical-specific information must always be available through labels and safety data sheets.

Additional training will be provided whenever a new chemical hazard is introduced into the work area. Supervisors will conduct supplementary training when deemed necessary in order to reinforce the importance of the proper use and handling of chemicals.

Only facility employees and individuals knowledgeable with company Hazard Communication program will conduct training sessions.

The Manager shall ensure records of employee training are maintained properly.

When an outside contractor, such as a pest control worker or a carpenter, enters a company site in order to perform a service for company, they must first present SDS' for any and all hazardous chemicals which will be used. These SDS' will be treated with the same training requirements as the SDS' kept on site for regularly used chemicals and materials. The Manager will be responsible for contacting each contractor prior to work commencing, in order to gather and disseminate any information concerning chemical hazards the contractor is bringing into the work place.

The Hazard Communication Program documented training shall, as a minimum, include:

1. Requirements, details, and rights of the employee as contained in the Hazard Communication regulation,
2. Operations and work areas where hazardous chemicals are present,
3. Location of the written Hazard Communication Program, SDS's and the Chemical Inventory List,
4. How to access SDS's or SDS information,
5. How to read labels and Safety Data Sheets for pertinent hazard information,
6. How employees can obtain and use the appropriate hazard information,
7. Methods and observations that may be used to detect the presence or release of hazardous chemicals by use of monitoring devices, visual appearance or odor,
8. The physical & health hazards of chemicals in the immediate work area,
9. Protection measures utilized for the prevention of hazards related to exposure
10. Appropriate work practices
11. Emergency procedures
12. The use of proper PPE

Multiple Work Sites

Where employees must travel between work places during a work shift, the written HAZCOM Program shall be kept at a primary job site. If there is no primary job site, then the program shall be sent with employees.

The program shall be made available, upon request, to employees, their designated representatives, the Assistant Secretary, and the Director in accordance with requirements of 29 CFR 1910.1020(e).

Multiple Employer Job Sites

A pre-job briefing shall be conducted with the contractor before work commences on site.

- During this pre-job briefing, contractors shall provide to company current copies of all Safety Data Sheets along with the label information for every hazardous substance brought on-site.
- Must notify and provide required SDS and label information for all hazardous materials the contractor may encounter on the job,
- Labeling systems and precautionary measures to be taken by the contractor during both normal conditions and emergencies shall be addressed,
- By providing such information to other employers, company does not assume any obligations that other employers have for the safety of their employees,
- In this regard, other employers working on company property, or for company on client's property, remain fully responsible for developing and implementing their own compliant hazard communication programs.

Hazard Warnings / NFPA 704

The NFPA 704 Diamond is a means of disseminating hazard warning and information for a specific material. The diamond is divided into four sections. Each of the first three colored sections has a number in it associated with a particular hazard. The higher the number is, the more hazardous a material is for that particular characteristic. The fourth section includes special hazard information. The four sections and an explanation of the numbers in them are provided as a reference below:

NFPA Rating Explanation Guide					
RATING NUMBER	HEALTH HAZARD	FLAMMABILITY HAZARD	INSTABILITY HAZARD	RATING SYMBOL	SPECIAL HAZARD
4	Can be lethal	Will vaporize and readily burn at normal temperatures	May explode at normal temperatures and pressures	ALK	Alkaline
3	Can cause serious or permanent injury	Can be ignited under almost all ambient temperatures	May explode at high temperature or shock	ACID	Acidic
2	Can cause temporary incapacitation or residual injury	Must be heated or high ambient temperature to burn	Violent chemical change at high temperatures or pressures	COR	Corrosive
1	Can cause significant irritation	Must be preheated before ignition can occur	Normally stable. High temperatures make unstable	OX	Oxidizing
0	No hazard	Will not burn	Stable	☸	Radioactive
				W	Reacts violently or explosively with water
				W OX	Reacts violently or explosively with water and oxidizing

FIRST AID AND MEDICAL EMERGENCY PROCEDURES

CDI will ensure the availability of emergency medical services for its employees at all times. We will also ensure the availability of a suitable number of appropriately trained persons to render first aid. The Safety Program Administrator will maintain a list of trained individuals and take steps to provide training for those that desire it. First-Aid training providers shall be either Red Cross or American Heart Association instructors in good standing with their organizations.

First-Aid Kits

Every work site shall have access to at least one first-aid kit in a weatherproof container. The first-aid kit will be inspected regularly to ensure that it is well stocked, in sanitary condition, and any used items are promptly replaced. The contents of the first-aid kit shall be arranged to be quickly found and remain sanitary. The kits will be properly sized for the number of people it is to serve. First-aid dressings shall be sterile and in individually sealed packages.

Drugs, antiseptics, eye irrigation solutions, inhalants, medicines, or proprietary preparations shall not be included in first-aid kits unless specifically approved, in writing, by an employer-authorized, licensed physician. Other supplies and equipment, if provided, shall be in accordance with the documented recommendations of an employer-authorized licensed physician upon consideration of the extent and type of emergency care to be given based upon the anticipated incidence and nature of injuries and illnesses and availability of transportation to medical care.

First Aid

The designated first aid person on each site with four or more employees will be available at all times to render appropriate first aid for injuries and illnesses. Proper equipment for the prompt transportation of the injured or ill person to a physician or hospital where emergency care is provided, or an effective communication system for contacting hospitals or other emergency medical facilities, physicians, ambulance and fire services, shall also be provided. The telephone numbers of the following emergency services in the area shall be posted near the job telephone, or otherwise made available to the employees where no job site telephone exists:

1. A company authorized physician or medical clinic, and at least one alternate if available.
2. Hospitals.
3. Ambulance services.
4. Fire-protection services.

Prior to the commencement of work at any site, the Supervisor or Manager shall locate the nearest preferred medical facility and establish that transportation or communication methods are available in the event of an employee injury.

Each employee shall be informed of the procedures to follow in case of injury or illness through our new employee orientation program, Code of Safe Practices, and safety meetings.


Where the eyes or body of any person may be exposed to injurious or corrosive materials, suitable facilities for drenching the body or flushing the eyes with clean water shall be conspicuously and readily accessible.

Accident Procedures

These procedures are to be followed in the event of an employee injury in the course of employment.

1. Any Texas MedClinic will be an acceptable treatment center for minor injuries. If more advanced care is needed, the closest hospital can provide stabilization care. For severe accidents call 911 and request the Paramedics.
2. Employees must report all work-related injuries to their Supervisor immediately. Even if they do not feel that it requires medical attention.

3. The Supervisor, employee, and first aid person should determine whether or not outside medical attention is needed. When uncertainty exists on the part of any individual, the employee should be sent for professional medical care.
4. If medical attention is not desired or the employee refuses treatment, you must still fill out a company "Accident Report" in case complications arise later. The incident must be immediately reported to the Safety Manager and Project Manager when the decision is made to not seek medical treatment.
5. For no reason will an employee be allowed or asked to take themselves to seek medical care alone. Another employee will transport the injured for treatment.
6. As soon as reasonably possible, the Safety Manager and Project Manager shall both be notified of the incident and location of where the treatment will be performed.
7. In the event of a serious accident involving hospitalization for more than 24 hours, amputation, permanent disfigurement, loss of consciousness or death, phone contact should be made with the main office. Contact must also be made with the nearest Federal or State (if applicable) OSHA office.

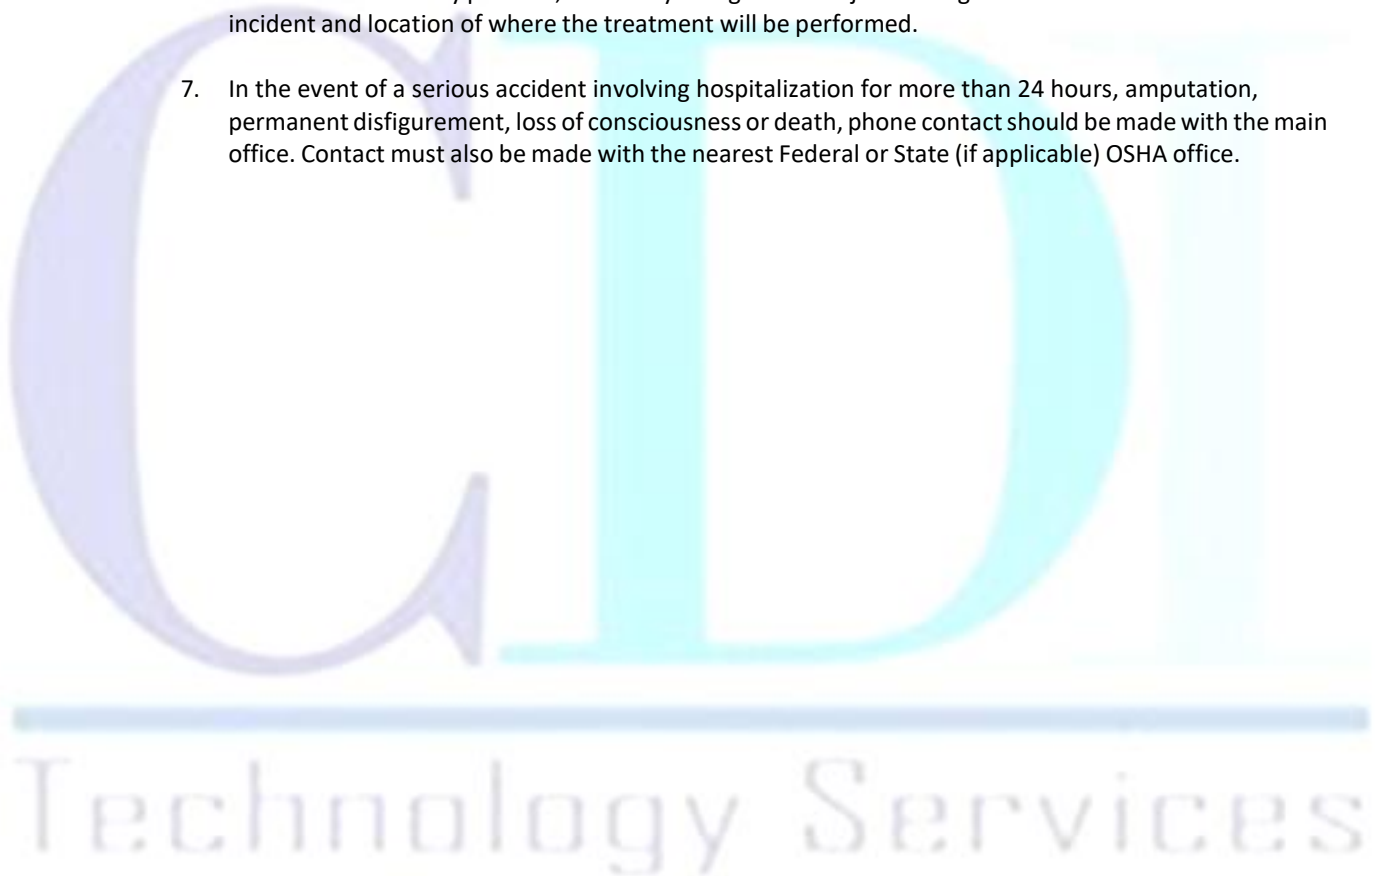

ACCIDENT / EXPOSURE INVESTIGATION

The Supervisor, Manager, or other designated individual will investigate all work-related accidents in a timely manner. This includes minor incidents and "near accidents", as well as serious injuries. An accident is defined as any unexpected occurrence that results in injury to personnel, damage to equipment, facilities, or material, or interruption of normal operations.

Responsibility for Accident Investigation

Immediately upon being notified of an accident, the Supervisor, Manager, or other designated individual shall conduct an investigation. The purpose of the investigation is to determine the cause of the accident and corrective action to prevent future reoccurrence; not to fix blame or find fault. An unbiased approach is necessary in order to obtain objective findings.

The Purpose of Accident Investigations:

1. To prevent or decrease the likelihood of similar accidents.
2. To identify and correct unsafe work practices and physical hazards. Accidents are often caused by a combination of these two factors.
3. To identify training needs. This makes training more effective by focusing on factors that are most likely to cause accidents.

What Types of Incidents Do We Investigate?

1. Fatalities
2. Serious injuries
3. Minor injuries
4. Property damage
5. Near misses

Procedures for Investigation of Accidents

Immediately upon being notified of an accident the Supervisor, Manager, or other designated individual will:

1. Visit the accident scene, as soon as possible, while facts and evidence are still fresh and before witnesses forget important details and to make sure hazardous conditions to which other employees or customers could be exposed are corrected or have been removed;
2. Provide for needed first aid or call 911 emergency for the injured employee(s).
3. If possible, interview the injured worker at the scene of the accident and verbally "walk" him or her through a re-enactment. All interviews should be conducted as privately as possible. Interview all witnesses individually and talk with anyone who has knowledge of the accident, even if they did not actually witness it.
4. Report the accident to the main office. Accidents will be reported by the office to the insurance carrier within 24 hours. All serious accidents will be reported to the carrier as soon as possible.

5. Consider taking signed statements in cases where facts are unclear or there is an element of controversy.
6. Thoroughly investigate the accident to identify all accident causes and contributing factors. Document details graphically. Use sketches, diagrams and photos as needed. Take measurements when appropriate.
7. All accidents involving death, disfigurement, amputation, loss of consciousness or hospitalization for more than 24 hours must be reported to Federal or State (if applicable) OSHA immediately.
8. Focus on causes and hazards. Develop an analysis of what happened, how it happened, and how it could have been prevented. Determine what caused the accident itself, not just the injury.
9. Every investigation must also include an action plan. How can such accidents be prevented in the future?
10. In the event a third party or defective product contributed to the accident, save any evidence as it could be critical to the recovery of claim costs.

Accurate & Prompt Investigations

- Ensures information is available
- Causes can be quickly corrected
- Helps identify all contributing factors
- Reflects management concern
- Reduces chance of recurrence

Investigation Tips

- Avoid placing blame
- Document with photos and diagrams, if needed
- Be objective, get the facts
- Reconstruct the event
- Use open-ended questions

Questions to Ask

When investigating accidents, open-ended questions such as who?, what?, when?, where?, why?, and how? will provide more information than closed-ended questions such as "Were you wearing gloves?"

Examples include:

- How did it happen?
- Why did it happen?
- How could it have been prevented?
- Who was involved?
- Who witnessed the incident?
- Where were the witnesses at the time of the incident?
- What was the injured worker doing?
- What was the employee working on?
- When did it happen?
- When was the accident reported?
- Where did it happen?
- Why was the employee assigned to do the job?

The single, most important question that must be answered as the result of any investigation is:

"What do you recommend be done (or have you done) to prevent this type of incident from recurring?"

Once the Accident Investigation is Completed

- Take or recommend corrective action
- Document corrective action
- Management and the Safety Program Administrator will review the results of all investigations
- Consider safety program modifications

Information obtained through accident investigations can be used to update and improve our current program.



TRAINING AND INSTRUCTION

Every new employee will be given instruction by their Supervisor in the general safety requirements of their job. A copy of our Code of Safe Practices shall also be provided to each employee.

Managers, Supervisors, and employees will be trained yearly on various accident prevention topics.

Training provides the following benefits:

- Makes employees aware of job hazards
- Teaches employees to perform jobs safely
- Promotes two-way communication
- Encourages safety suggestions
- Creates interest in the safety program
- Fulfills Federal or State (if applicable) OSHA requirements

Employee training will be provided at the following times:

1. All new employees will receive a safety orientation their first day on the job.
2. All new employees will be given a copy of the Code of Safe Practices and required to read and sign for it.
3. All employees given a new job assignment for which training has not been previously provided will be trained before beginning the new assignment.
4. Whenever new substances, processes, procedures or equipment that represent a new hazard are introduced into the workplace.
5. Whenever CDI is made aware of a new or previously unrecognized hazard.
6. Whenever management believes that additional training is necessary.
7. After all serious accidents.
8. When employees are not following safe work rules or procedures.

Training topics will include, but not be limited to:

- Employee's safety responsibility
- General safety rules
- Code of Safe Practices
- Safe job procedures
- Ergonomics
- Use of hazardous materials
- Use of equipment
- Emergency procedures
- Safe lifting and material handling practices
- Contents of safety program

Documentation of Training

All training will be documented on one of the following three forms:

- New Employee Safety Orientation
- Employee Safety Contact Form
- Safety Meeting Report

The following training method should be used. Actual demonstrations of the proper way to perform a task are very helpful in most cases.

- Tell them how to do the job safely
- Show them how to do the job safely
- Have them tell you how to do the job safely
- Have them show you how to do the job safely
- Follow up to ensure they are still performing the job safely



FIRE PREVENTION AND EMERGENCY ACTION PLAN

CDI has developed the following emergency plan to cover those designated actions that must be taken to ensure employee safety from fire and during other emergencies. Any questions about this plan should be directed to The Safety Program Administrator.

Facility Emergency Evacuation and Fire Prevention

The Safety Program Administrator is responsible for ensuring the following:

1. That all required emergency exits are clearly identified in the office, shop, and warehouse a fire extinguisher is readily available
2. Training all exposed employees on the procedures to be followed in the event of fire, earthquake or other emergency including how to properly notify other affected employees.
3. Identifying potential fire hazards in the office, shop and warehouse and ensuring that adequate steps are taken to prevent fires.
4. Ensuring that combustible trash and materials are removed promptly from the facility, and that all flammable and combustible liquids are properly stored and handled.

During an Emergency

In the event of an emergency such as earthquake or fire, all employees are expected to evacuate the premises immediately. The Safety Program Manager or Safety Committee members may assign some employees the task of shutting off the gas or electricity, if needed. At no time will any employee be expected to jeopardize their own safety to do this.

Employees will be notified of emergencies through one of the following:

- Fire alarm
- Intercom
- Emergency horn
- Direct voice communication

After the emergency evacuation has been completed, a head count will be taken to ensure everyone is out of the building.

If necessary, the Safety Program Administrator or Safety Committee members may assign some employees to rescue trapped employees.

Fire Prevention in Shops and Warehouses

The following procedures will be used to prevent fires in shops and warehouses.

1. All accumulated combustible trash and debris will be removed as soon as practical.
2. Flammable liquids will only be stored and dispensed from UL approved safety containers designed for that purpose.
3. All rags soaked with flammable or combustible liquids will be properly stored in closed metal containers.

4. Appropriate precautions will be taken to prevent fires when torch cutting, welding or soldering.
5. Compressed gas cylinders containing flammable or explosive gasses will be properly stored in the upright position with their caps on and protected from heat or puncture. Fuel gas and oxygen shall be separated at least 20 feet when stored.
6. Smoking or open lights are prohibited within 50 feet of flammable liquid or gas storage and dispensing areas.
7. Flammable solvents will not be used for cleaning purposes.
8. A fire extinguisher, rated not less than 2A, shall be provided for each 3,000 square feet of the floor area, or fraction thereof. Where the floor area is less than 3,000 square feet, at least one extinguisher shall be provided.
9. Travel distance from any point of the protected area to the nearest fire extinguisher shall not exceed 75 feet.
10. At least one fire extinguisher, rated not less than 2A, shall be provided on each floor. In multi-story buildings, at least one fire extinguisher shall be located adjacent to the stairway at each floor level.
11. A fire extinguisher, rated not less than 10B, shall be provided within 50 feet of wherever more than 5 gallons of flammable or combustible liquids or 5 pounds of flammable gas are being used on the job site. This requirement does not apply to the integral fuel tanks of motor vehicles.
12. Portable fire extinguishers shall be inspected monthly, or at more frequent intervals by the employer, and serviced at least annually by a person licensed or registered by the State Fire Marshal. NOTE: Inspection is a "quick check" that an extinguisher is available and will operate. It is intended to give reasonable assurance that the extinguisher is fully charged and operable. This is done by seeing that it is in its designated place, that it has not been actuated or tampered with, and that there is no obvious or physical damage or condition to prevent operation.
13. Suitable fire control devices, such as portable fire extinguishers, shall be available at locations where flammable or combustible liquids are stored.
14. At least one portable fire extinguisher, having a rating of not less than 20-B units, shall be located outside of, but not more than 10 feet from, the door opening into any room used for flammable liquid storage.
15. At least one portable fire extinguisher, having a rating of not less than 20-B units, shall be located not less than 25 feet, nor more than 75 feet, from any flammable liquid storage area located outside.
16. Only employees that have successfully completed fire extinguisher training provided by the company may operate extinguishers.
17. Employee retraining to be completed annually prior to expiration of certification.

Procedure

Selection and Distribution

Portable fire extinguishers shall be provided for trained employee use and selected and distributed based on the classes of anticipated workplace fires and on the size and degree of the hazard which would affect their use. Fire extinguishers used by this company are for four classes of fires:

- Class A Fire Extinguishers. Use on ordinary combustibles or fibrous material such as wood, paper, cloth, rubber and some plastics. Travel distance for employees to any extinguisher is 75 feet or less
- Class B Fire Extinguishers. Use on flammable or combustible liquids such as gasoline, kerosene, paint, paint thinners, and propane. Travel distance from the Class B hazard area to any extinguisher is 50 feet or less
- Class C Fire Extinguishers. Use on energized electrical equipment, such as appliances, switches, panel boxes and power tools.

Travel distance from the Class C hazard area to any extinguishing agent is 50 feet or less

- Class D Fire Extinguishers. Use on combustible metals such as magnesium, titanium, potassium and sodium. Travel distance from the combustible metal working area to any extinguishing agent is 75 feet or less



FLEET AND DRIVER SAFETY

CDI has established the following guidelines and procedures for our drivers and vehicles to protect the safety of individuals operating any motor vehicle on company business. Protecting our employee drivers, their passengers, and the public is of the highest priority. The commitment of management and employees is critical to the success of this program. Clear communication of, and strict adherence to, the program's guidelines and procedures are essential.

Vehicle Fleet Purpose

Company vehicles are provided to support business activities and are to be used only by qualified and authorized employees. They are not to be considered a part of an employee's compensation and must not be used as an inducement for employment. In all cases, these vehicles are to be operated in strict compliance with motor vehicle laws of the jurisdiction in which they are driven and with the utmost regard for their care and cost efficient use.

- Company vehicles may not be used for business activities of other companies.
- Company vehicles may not be driven to Mexico.

Driver Licensing

Company drivers and anyone authorized to drive CDI vehicles must have a valid driver's license issued in the state of residence for the class of the vehicle being operated and must be able to drive a vehicle. Obtaining a driver's license is a personal expense.

Driver Qualifications

Driver qualifications are as follows:

1. Authorized employee of company.
2. Must be at least 18 years of age.
3. Have at least one year of experience in the class of vehicle operated.
4. Must meet licensing requirements.
5. Will not qualify for a company vehicle if, during the last 36 months, the driver had any of the following experiences:
 - i. Been convicted of a felony.
 - ii. Been convicted of sale, handling or use of drugs.
 - iii. Has automobile insurance canceled, declined or not renewed by a company.
 - iv. Been convicted of an alcohol- or drug-related offense while driving.
 - v. Had driver's license suspended or revoked.
 - vi. Been convicted of three or more speeding violations or one or more other serious violations.
 - vii. Been involved in three or more chargeable accidents.

Review of Motor Vehicle Record

State Motor Vehicle Records (MVRs) will be used as the source for verifying driver history. MVRs will be obtained and reviewed at least annually on employee. (The insurance company requires that we provide them with the driver's license number and date of birth for anyone who may drive a company vehicle.) Driving privileges may be withdrawn or suspended and/or the CDI vehicle removed from any authorized driver not meeting the above requirements. In addition, appropriate disciplinary action may be taken, up to and including termination of employment.

Personal Use

Company vehicles are provided primarily for business purposes; however, occasional personal use is permitted. Personal use is a privilege extended only to the authorized employee. The privilege of personal use may be withdrawn at any time by CDI.

Rules Applying to Use of Company Vehicles:

- Only authorized employees. Employees must meet all driver qualifications and rules in this agreement.
- Personal trailers, including boat and recreational vehicles, are not to be pulled.
- Company vehicle is not to be driven while under the influence of alcohol or any controlled substance.

- Possession, transportation or consumption of alcohol or illegal drugs by anyone in the vehicle is not allowed.
- Driver and all passengers must wear available personal restraints.
- Report any accident immediately to police and your manager.
- Employee will be financially responsible for any damages to vehicle sustained during personnel use or with failure to report accident in a timely manner.
- Illegal or illicit materials are not allowing in the vehicles at any time.
- Any exceptions to these rules requires advance, written approval by approved company manager or officer. Violation of these rules will result in disciplinary action from removal of driving privileges to termination of employment.

Maintenance

Authorized drivers are required to properly maintain their company vehicles at all times. Vehicles should not be operated with any defect that would inhibit safe operation during current and foreseeable weather and lighting conditions. Preventive maintenance such as, but not limited to regular oil changes, lubrication, tire pressure, tire replacement, brake pad & rotor replacement and fluid checks determine to a large extent whether you will have a reliable, safe vehicle to drive and support work activities. You should have preventive maintenance scheduled on your vehicle, with shop as required in the owner's manual. In the case you are assigned a vehicle, you should schedule and have maintenance done after business hours. M thru F 8am to 5pm.

Traffic Violations

Fines for parking or moving violations, towing storage or impoundment are the personal responsibility of the assigned operator. CDI will not condone nor excuse ignorance of any motor vehicle violations that result in court summons being directed to itself as owner of the vehicle.

Each driver is required to report all moving violations to Fleet Manager within 24 hours. This requirement applies to violations involving the use of any vehicle (company, personal or other) while on company business. Failure to report violations will result in appropriate disciplinary action, including revoking of driver privileges and possible termination of employment.

Please be aware that motor vehicle violations incurred during non-business (personal use) hours will also affect your driving status as well and are subject to review.

Cellular/mobile phones

Cellular/mobile phones should not be used while operating a vehicle. Using a cell phone while driving leads to an increased risk of having an accident through a lack of attention to driving. Inattention is the #1 cause of vehicle accidents in America. Inattention can also involve adjusting the radio, eating, smoking, daydreaming, talking to passengers, things outside the vehicle, and other distractions.

- Allow voice mail to handle your calls and return them at your safe convenience.
- Use Bluetooth for call if necessary.
- NO Texting while Driving.
- If you need to place or receive a call pull off the road to a safe location.
- Ask a passenger to make or take the call.
- Inform regular callers your driving schedule, and when you will be available to talk.
- Keep your hands on the wheel and your eyes and mind on the road while driving.
- As a precaution, activate the DO NOT DISTURB FUNCTION WHILE DRIVING, on your phone.

Accidents Involving Company Vehicles

In the event of an accident:

- Call the police on all accidents and obtain a copy of the police report.
- Do not admit negligence or liability.
- Do not attempt settlement, regardless of how minor.
- Get name, address and phone number of injured person and witnesses if possible.
- Exchange vehicle identification, insurance company name and policy numbers with the other driver.
- Take a photograph of the scene of accident if possible.
- Complete the accident report in your vehicle.

- Employee will be financially responsible for any damages to vehicle if accident is not report accident in a timely manner.
- Turn all information over to– Fleet Manager within 24 hours.

Thefts

In the event of the theft of a company vehicle, notify local police and Fleet Manager immediately.

Driver Responsibilities

Each driver is responsible for the actual possession, care and use of the CDI vehicle in their possession. Therefore, a driver's responsibilities include, but are not limited to, the following:

- Operation of the vehicle in a manner consistent with reasonable practices that avoid abuse, theft, neglect or disrespect of the equipment.
- Obey all traffic laws.
- Keep vehicle clean and neat.
- The use of seat belts and shoulder harness is mandatory for driver and passengers.
- Adhering to manufacturer's recommendations regarding service, maintenance and inspection. Vehicles should not be operated with any defect that would prevent safe operation.
- Attention to and practice of safe driving techniques and adherence to current safety requirements.
- Restricting the use of vehicles to authorized driver, spouse or significant other.
- Reporting the occurrence of moving violations.
- Accurate, comprehensive and timely reporting of all accidents by an authorized driver and thefts of a company vehicle to the CDI Fleet Manager.

Failure to comply with any of these responsibilities will result in disciplinary action, up to and including termination of employment.

Driver Reports

In the normal course of business, the public may call the office to commend or complain about an employee driving. In the event a commendation is received, employee will receive a company promotional item and a lunch with manager. Promo item not to exceed \$ 15.00. Example Company logo T shirt, company Cap, etc. CDI implement the following when bad driving is reported.

These calls may include but not be limited to: texting while driving, excessive speed, offensive driving and recklessness for others. All calls will be documented in employees personnel file and employee will be notified.

Upon 1st call: Drive will be notified of call and informed of report.

Upon 2 calls in a 3-month period, employee will be counselled and required to take a company paid defensive driving course.

Upon 3 reports in a 6-month period, employee will receive a written warning.

Upon 4 reports in any 12-month period, disciplinary action will be exercised at CDI's discretion, vehicle privilege may be revoked, additional written counselling and up to and including termination of employment.

FALL PROTECTION

CDI has the following requirements for fall protection at all of our work-sites. All employees will be trained in its proper use prior to performing any work requiring it by a qualified person. Training will be valid for 2 years from training date, unless re-training is determined to be necessary. Records will be kept indefinitely via Viewpoint One.

Fall Protection is 100% Required While Working at Heights Greater than 6'

When working where there is a hazard of falling more than 6 feet from the perimeter of a structure, unprotected sides and edges, leading edges, through shaft ways and openings, sloped roof surfaces steeper than 7:12, or other sloped surfaces steeper than 40 degrees not otherwise adequately protected. Fall protection is also required when working in aerial lifts or while using a ladder greater than 6' in height. One of the following four types of fall protection systems will be used when our employees are exposed to fall hazards in excess of 6 feet:

Fall Protection Types

1. Standard guardrails, cables or floor hole covers
2. Personal fall arrest system
3. Positioning devices
4. Fall restraint systems

Standard Guardrails, Safety Cables, or Covers

These are the easiest and most cost-effective methods of providing fall protection and have a very high success rate. Standard guardrails, safety cables, floor hole and sky light covers are our preferred means of fall protection on job sites. The following rules will be followed when using them:

1. Railings shall be constructed of wood, or in an equally substantial manner from other materials, and shall consist of a top rail not less than 42 inches or more than 45 inches in height measured from the upper surface of the top rail to the floor, platform, runway or ramp level and a mid-rail. The mid rail shall be halfway between the top rail and the floor, platform, runway or ramp. "Selected lumber" free from damage that affects its strength, shall be used.
2. Wooden posts shall be not less than 2 inches by 4 inches in cross section, spaced at 8-foot or closer intervals.
3. Wooden top railings shall be smooth and of 2-inch by 4-inch or larger material. Double, 1-inch by 4-inch members may be used for this purpose, provided that one member is fastened in a flat position on top of the posts and the other fastened in an edge-up position to the inside of the posts and the side of the top member. Mid rails shall be of at least 1-inch by 6- inch material.
4. The rails shall be placed on the side of the post that will afford the greatest support and protection.
5. All guardrails, including their connections and anchorage, shall be capable of withstanding a load of 13 pounds per linear foot applied either horizontally or vertically downward at the top rail.
6. Railings receiving heavy stresses from employees trucking or handling materials shall be provided additional strength by the use of heavier stock, closer spacing of posts, bracing, or by other means.
7. Floor, roof and skylight openings shall be guarded by a standard railing and toe boards or cover. Covering shall be capable of safely supporting the greater of the weight of a 200-pound person or the weight of worker(s) and material(s) placed thereon.

8. Coverings shall be secured in place to prevent accidental removal or displacement, and shall bear a pressure sensitized, painted, or stenciled sign with legible letters not less than one inch high, stating: "Opening--Do Not Remove." Markings of chalk or keel shall not be used.
9. Ladder way floor openings or platforms shall be guarded by standard railings with standard toe boards on all exposed sides, except at the entrance to the opening, with the passage through the railing either provided with a swinging gate or so offset that a person cannot walk directly into the opening.
10. Floor holes, into which persons can accidentally walk, shall be guarded by either a standard railing with standard toe boards on all exposed sides, or a floor hole cover of standard strength and construction that is secured against accidental displacement. While the cover is not in place, the floor hole shall be protected by standard railings.
11. Wall openings, from which there is a drop of more than 4 feet, and the bottom of the opening is less than 3 feet above the working surface, shall be guarded with either a standard rail or intermediate rail or both.
12. An extension platform outside a wall opening onto which materials can be hoisted for handling shall have side rails or equivalent guards of standard specifications. One side of an extension platform may have removable railings in order to facilitate handling materials.
13. Wall opening protection barriers shall be of such construction and mounting that, when in place at the opening, the barrier is capable of withstanding a load of at least 200 pounds applied in any direction (except upward).
14. All elevator shafts in which cages are not installed and which are not enclosed with solid partitions and doors shall be guarded on all open sides by standard railings and toe boards.
15. A full body harness and lanyard are required when using boom lifts.

Personal Fall Arrest Systems

Personal fall arrest systems consist of a full body harness and a lanyard attached to rated anchorage. They are also an effective means of preventing fall accidents. The system does not actually stop you from falling, but catches you and safely stops you from hitting the level below. Fall arrest systems will be our preferred means of protection when standard guardrails, safety cables, or covers are not practical. The following rules, in addition to the manufacturer's requirements and OSHA regulations, will be observed:

1. Ropes and straps (webbing) used in lanyards, lifelines, and strength components of body harnesses shall be made from synthetic fibers except when they are used in conjunction with hot work where the lanyard may be exposed to damage from heat or flame.
2. Anchorages used for attachment of personal fall arrest equipment shall be independent of any anchorage being used to support or suspend platforms and capable of supporting at least 5,000 pounds per employee attached, or shall be designed, installed, and used as part of a complete personal fall arrest system which maintains a safety factor of at least two; and under the supervision of a qualified person.
3. The attachment point of the body harness shall be located in the center of the wearer's back near shoulder level, or above the wearer's head.
4. Where practical, the anchor end of the lanyard shall be secured at a level not lower than the employee's waist, limiting the fall distance to a maximum of 4 feet.
5. Harnesses, lanyards, and other components shall be used only for employee protection as part of a personal fall arrest system and not to hoist materials.

6. Personal fall arrest systems and components subjected to impact loading shall be immediately removed from service and shall not be used again for employee protection until inspected and determined by a competent person to be undamaged and suitable for reuse.
7. CDI shall provide for prompt rescue of employees in the event of a fall or shall assure that employees are able to rescue themselves.
8. Personal fall arrest systems shall be inspected prior to each use for wear, damage and other deterioration, and defective components shall be removed from service.
9. Any lanyard, safety harness, or drop line subjected to in-service loading, as distinguished from static load testing, shall be immediately removed from service and shall not be used again for employee safeguarding.
10. Personal fall arrest systems shall not be attached to guardrails, unless the guardrail is capable of safely supporting the load.
11. Each personal fall arrest system shall be inspected not less than twice annually by a competent person in accordance with the manufacturer's recommendations. The date of each inspection shall be documented.
12. Personal fall arrest systems will be rigged such that an employee can neither free fall more than 4 feet, nor contact any lower level.
13. Personal fall arrest systems will bring an employee to a complete stop. They will also limit maximum deceleration distance an employee travels to 3.5 feet and have sufficient strength to withstand twice the potential impact energy of an employee free falling a distance of 6 feet, or the free fall distance permitted by the system, whichever is less.

Positioning Device Systems

Positioning device systems are designed to allow employees to work with both hands free at elevated locations. By their very nature, they provide some level of fall protection. They are not as effective as railings or fall arrest systems. Positioning device systems may be used together with a fall arrest system for greater safety. Their use shall conform to the following provisions:

1. Positioning devices shall be rigged such that an employee cannot free fall more than 2 feet.
2. Positioning device systems shall be inspected prior to each use for wear, damage, and other deterioration, and defective components shall be removed from service.
3. Body belts, harnesses, and components shall be used only for employee protection (as part of a personal fall arrest system or positioning device system) and not to hoist materials.
4. The use of non-locking snap hooks is prohibited.
5. Anchorage points for positioning device systems shall be capable of supporting two times the intended load or 3,000 pounds, whichever is greater.

Personal Fall Restraint

Fall restraint systems are designed to prevent the wearer from reaching the edge or danger area and thus prevent them from falling. A full body harnesses must be used for personal fall restraint.

1. A body belt is not an acceptable replacement for a full body harness.
2. Anchorage points used for fall restraint shall be capable of supporting 4 times the intended load.
3. Restraint protection shall be rigged to allow the movement of employees only as far as the sides of the working level or working area.

Incident Investigation

In the case of a fall or near-miss incident, the fall protection administrator should appoint a competent or qualified person to conduct an incident investigation. The investigation will help determine if the fall protection program has established the appropriate control method for a given hazard, if the training is adequate, and what improvements are needed to ensure such an incident does not reoccur.

Systems of root-cause analysis help identify the underlying causes of incidents and are valuable for determining what corrective measure should be taken as a result of the lessons learned. Many times, the result of an incident investigation is that worker error is identified as the main contributing factor. When root-cause analysis is used, multiple underlying causes are usually uncovered.

LOCK-OUT / TAG-OUT/TRY PROGRAM

CDI has developed the following procedures to protect our employees and reduce the risk of accidents. We will also conduct a periodic review of electrical safety, energy control procedures, and lock-out / tag-out, at least annually, to ensure that the procedure and the requirements of this section are being followed. Retraining should occur annually or immediately in the event of failure to comply. Documentation should be kept for duration of employment.

This procedure is binding upon all employees. All employees will be instructed in the significance of electrical safety, energy control procedures, and lock-out / tag-out. Each new employee shall be instructed by their Supervisor in the purpose and use of these procedures.

All Equipment and Installations

1. Only trained, qualified, and authorized employees will be allowed to make electrical repairs or work on electrical equipment or installations.
2. All electrical equipment and systems shall be treated as energized until tested or otherwise proven to be de-energized.
3. All energized equipment and installations will be de-energized prior to the commencement of any work. If the equipment or installation must be energized for test or other purposes, special precautions will be taken to protect against the hazards of electric shock.
4. All equipment shall be locked out to protect against accidental or inadvertent operation when such operation could cause injury to personnel. Do not attempt to operate any switch, valve, or other energy-isolating device bearing a lock.
5. Safety grounds shall always be used where there is a danger of shock from back feeding or other hazards.
6. Polyester clothing or other flammable types of clothing shall not be worn near electrical circuits. Cotton clothing is much less likely to ignite from arc blast. Employees working on live circuits shall be provided Nomex or equivalent fire resistant clothing.
7. Suitable eye protection must be worn at all times while working on electrical equipment.
8. Always exercise caution when energizing electrical equipment or installations. Take steps to protect employees from arc blast and exploding equipment in the event of a fault.
9. All power tools will be grounded or double insulated. Tools with defective cords or wiring shall not be used.
10. Suitable temporary barriers or barricades shall be installed when access to open enclosures containing exposed energized equipment is not under the control of an authorized person.

Energized Equipment or Systems

Work shall not be performed on exposed energized parts of equipment or systems until the following conditions are met:

1. Responsible supervision has determined that the work is to be performed while the equipment or systems are energized.
2. Involved personnel have received instructions on the work techniques and hazards involved in working on energized equipment and appropriate equipment to perform the job has been provided.

3. Suitable personal protective equipment has been provided and is used. Suitable insulated gloves shall be worn for voltages in excess of 300 volts, nominal.
4. Suitable eye protection, including face shield and safety glasses or goggles, has been provided and is used.
5. Fire resistant clothing such as Nomex suits is worn.
6. Where required, suitable barriers, barricades, tags, or signs are in place for personnel protection.

After the required work on an energized system or equipment has been completed, an authorized person shall be responsible for:

1. Removing from the work area any personnel and protective equipment.
2. Reinstalling all permanent barriers or covers.

De-energized Equipment or Systems

A qualified person shall be responsible for completing the following before working on de-energized electrical equipment or systems, unless the equipment is physically removed from the wiring system:

1. Notifying all involved personnel.
2. Locking the disconnecting means in the "open" position with the use of lockable devices, such as padlocks, combination locks or disconnecting of the conductor(s) or other positive methods or procedures which will effectively prevent unexpected or inadvertent energizing of a designated circuit, equipment or appliance.
3. Tagging the disconnecting means with suitable accident prevention tags.
4. Effectively blocking the operation or dissipating the energy of all stored energy devices which present a hazard, such as capacitors or pneumatic, spring-loaded and like mechanisms. This may require the installation of safety grounds.
5. Testing the equipment to ensure it is de-energized.

Energizing (or Re-energizing) Equipment or Systems

A qualified and authorized person shall be responsible for completing the following before energizing equipment or systems that have been de-energized:

1. Determining that all persons are clear from hazards which might result from the equipment or systems being energized including arc blast or explosions caused by unexpected faults.
2. Removing locking devices and tags. Only the employee who placed them may remove locking devices and tags. Locking devices and tags shall be removed upon completion of the work and after the installation of the protective guards and/or safety interlock systems.

Accident Prevention Tags

Suitable accident prevention tags shall be used to control a specific hazard. Such tags shall provide the following minimum

information:

1. Reason for placing tag.
2. Name of person placing the tag and how that person may be contacted.
3. Date tag was placed.

Lock-out / Tag-out

Machinery or equipment capable of movement shall be stopped and the power source de-energized or disengaged, and locked out. If necessary, the moveable parts shall be mechanically blocked or secured to prevent inadvertent movement during cleaning, servicing or adjusting operations unless the machinery or equipment must be capable of movement during this period in order to perform the specific task. If so, the hazard of movement shall be minimized.

Equipment or power-driven machines equipped with lockable controls, or readily adaptable to lockable controls, shall be locked out or positively sealed in the "off" position during repair work and setting-up operations. In all cases, accident prevention signs and/or tags shall be placed on the controls of the equipment or machines during repair work.

CDI will provide a sufficient number of accident prevention signs or tags and padlocks, seals or other similarly effective means that may be required by any reasonably foreseeable repair.

Sequence of Lockout Procedure

1. Notify all affected employees that a lockout is required and the reason therefore.
2. If the equipment is operating, shut it down by the normal stopping procedure (such as: depress stop button, open toggle switch).
3. Operate the switch, valve, or other energy isolating devices so that the energy source(s) (electrical, mechanical, hydraulic, other) is disconnected or isolated from the equipment.
4. Stored energy, such as that in capacitors, springs, elevated machine members, rotating fly wheels, hydraulic systems, and air, gas, steam or water pressure, must also be dissipated or restrained by methods such as grounding, repositioning, blocking, bleeding down.
5. Lockout energy isolating devices with an assigned individual lock.
6. After ensuring that no personnel are exposed and as a check on having disconnected the energy sources, operate the push button or other normal operating controls to make certain the equipment will not operate. CAUTION: Return operating controls to neutral position after the test.

Procedure Involving More Than One Person

If more than one individual is required to lock out equipment, each shall place his/her own personal lock on the energy isolating device(s). One designated individual of a work crew or a Supervisor, with the knowledge of the crew, may lock out equipment for the whole crew and be responsible for shift changes as well. In such cases, it may be the responsibility of the individual to carry out all steps of the lockout procedure and inform the crew when it is safe to work on the equipment. Additionally, the designated individual shall not remove a crew lock until it has been verified that all individuals are clear.

Testing Equipment during Lockout

In many maintenance and repair operations, machinery may need to be tested, and for that purpose energized, before additional maintenance work can be performed. This procedure must be followed:

1. Clear all personnel to safety.
2. Clear away tools and materials from equipment.
3. Remove lockout devices and re-energize systems, following the established safe procedure.
4. Proceed with tryout or test.
5. Neutralize all energy sources once again, purge all systems, and lockout prior to continuing work.

Equipment design and performance limitations may dictate that effective alternative worker protection be provided when the established lock-out procedure is not feasible.

Restoring Equipment to Service

After the work is completed and the equipment is ready to be returned to normal operation, this procedure must be followed:

1. Remove all non-essential items.
2. See that all equipment components are operationally intact, including guards and safety devices. Repair or replace defective guards before removing lockouts.
3. Remove each lockout device using the correct removal sequence.
4. Make a visual check before restoring energy to ensure that everyone is physically clear of the equipment.

Technology Services

CONFINED SPACE OPERATIONS

Occasionally in our work, we may encounter confined spaces. Confined space work requires special safety precautions to ensure that employees are not overcome by dangerous air contaminants or oxygen deficiency. In some cases, there may be fire or explosion hazards in confined spaces that do not exist in open areas. Many workers have been killed or seriously injured in confined spaces. To avoid this, employees must adhere to the following rules. This section prescribes minimum standards for preventing employee exposure to dangerous air contamination and/or oxygen deficiency in confined spaces. In some cases, extra precautions may be necessary. As always, if you are unsure, ask for assistance.

Definitions

A confined space has the following properties:

1. Existing ventilation is insufficient to remove dangerous air contamination and/or oxygen deficiency that may exist or develop.
2. Ready access or egress for the removal of a suddenly disabled employee is difficult due to the location and/or size of the opening(s).
3. The area is not designed for continuous human occupancy.

Dangerous air contamination means an atmosphere presenting a threat of causing death, injury, acute illness, or disablement due to the presence of flammable and/or explosive, toxic, or otherwise injurious or incapacitating substances.

Dangerous air contamination due to the flammability of a gas or vapor is defined as an atmosphere containing the gas or vapor at a concentration greater than 20 percent of its lower explosive (lower flammable) limit.

Dangerous air contamination due to a combustible particulate is defined as a concentration greater than 20 percent of the minimum explosive concentration of the particulate.

Dangerous air contamination due to the toxicity of a substance is defined as the atmospheric concentration immediately hazardous to life or health. This definition of dangerous air contamination due to the toxicity of a substance does not preclude the requirement to control harmful exposures to toxic substances at concentrations less than those immediately hazardous to life or health.

Oxygen deficiency. An atmosphere containing oxygen at a concentration of less than 19.5 percent by volume.

Oxygen rich. An atmosphere containing oxygen at a concentration of more than 22 percent by volume. This creates additional fire hazards.

Entrant/Attendant. A designated person who has received training in confined space entry and will remain inside the confined space and maintain constant communication with all confined space entrants or outside supervisors through radio contact. This person will have completed all confined space training requirements.

Supervisor/Qualified Person. A person who has been trained in confined space entry and has demonstrated the ability to: Recognize confined spaces and determine the class (A, B, C) based on atmospheric test results anticipate, recognize, and evaluate exposure and physical hazards an employee might encounter in the confined space execute pre-entry, entry, work, and if necessary provide emergency rescue procedures operate Atmospheric Testing Equipment issue and sign the entry permit and keep appropriate. Can advise and remove attendants from confined space based on monitor reading.

Typical Confined Spaces:

- Vaults
- Pits
- Tubs
- Vats
- Ducts
- Boilers
- Silos
- Sewers
- Compartments

Prior to Confined Space Entry:

1. Before any work is to begin, a confined space entry permit will be completed, and the Safety Officer will need to be made aware of the work. Written, understandable operating and rescue procedures shall be developed and shall be provided to affected employees. The operating procedures shall include provision for the surveillance of the surrounding area to avoid hazards such as drifting vapors from tanks, piping and sewers.
2. All employees, including standby persons if needed, will be trained in the operating and rescue procedures, including instructions as to the hazards they may encounter.
3. Prior to entry an observation of atmospheric tests must be completed to ensure safety of any expected occupants
4. Any lines, pipes or hoses which may convey flammable, injurious, or incapacitating substances into the space shall be disconnected, blinded, or blocked off by other positive means to prevent the development of dangerous air contamination and/or oxygen deficiency within the space. The disconnection or blind shall be so located or done in such a manner that inadvertent reconnection of the line or removal of the blind are effectively prevented.
5. The space shall be emptied, flushed, or otherwise purged of flammable, injurious or incapacitating substances to the extent feasible.
6. The air shall be tested with an appropriate device or method to determine whether dangerous air contamination and/or an oxygen deficiency exists, and a written record of such testing results shall be made and kept at the work site for the duration of the work. Affected employees and/or their representative shall be afforded an opportunity to review and record the testing results.
7. Where interconnected spaces are blinded off as a unit, each space shall be tested, and the results recorded. The most hazardous condition found shall govern the entry procedures to be followed.

Confined Space Entry if Tests Show No Hazard

If dangerous air contamination and/or oxygen deficiency does not exist within the space, as demonstrated by tests performed in accordance with the pre-entry procedures, entry into and work within the space may proceed subject to the following provisions:

1. Air testing, in accordance with the pre-entry procedures, shall be conducted with sufficient frequency to ensure that the development of dangerous air contamination and/or oxygen deficiency does not occur during the performance of any operation.
2. Work stops, employees exit, and additional precautions are taken if dangerous air contamination and/or oxygen deficiency

does develop.

Confined Space Entry if Tests Show Hazards are Present or are Likely to Develop

Where the existence of dangerous air contamination and/or oxygen deficiency is demonstrated by tests performed in accordance with the pre-entry procedures or if the development of dangerous air contamination and/or an oxygen deficiency is imminent, the following requirements shall also apply:

1. Existing ventilation shall be augmented by appropriate means.
2. When additional ventilation has removed dangerous air contamination and/or oxygen deficiency as demonstrated by additional testing conducted (and recorded), entry into and work within the space may proceed.
3. No source of ignition shall be introduced until the implementation of appropriate provisions of this section have ensured that dangerous air contamination due to flammable and/or explosive substances does not exist.
4. Whenever oxygen-consuming equipment such as welding torches, furnaces and the like are to be used, measures shall be taken to ensure adequate combustion air and exhaust gas venting.
5. To the extent feasible, provision shall be made to permit ready entry and exit.
6. Where it is not feasible to provide for ready exit from spaces equipped with automatic fire suppression systems employing harmful design concentrations of toxic or oxygen-displacing gases, or total foam flooding, such systems shall be deactivated. Where it is not practical or safe to deactivate such systems, the use of respiratory protective equipment, such as SCBA, shall apply during entry into and work within such spaces.

Confined Spaces Where Dangerous Air Contamination Cannot be Removed by Ventilation

It is the policy of CDI to only work in a confined space if it can be made safe by the means listed above. We will not work in confined spaces where there is an ongoing hazard of air contamination or oxygen deficiency. These operations require extra measures and precautions beyond our immediate ability to perform. If such work does become necessary, a separate program will be developed.

Technology Services

FORKLIFTS

Each year about 100 workers are killed and almost 95,000 injured in industrial truck accidents across the country. To properly protect our employees from such accidents, CDI has adopted the following Forklift Safety Program.

General

CDI will ensure that each powered industrial truck operator is competent to operate a powered industrial truck safely, as demonstrated by the successful completion of the training and evaluation specified below.

Prior to permitting an employee to operate a powered industrial truck (except for training purposes), CDI shall ensure that the employee has successfully completed a training program.

Training Program Implementation.

Trainees may operate a powered industrial truck only:

- under the direct supervision of persons who have the knowledge, training, and experience to train operators and evaluate their competence; and
- where such operation does not endanger the trainee or other employees.

Training shall consist of a combination of formal instruction (e.g., lecture, discussion, interactive computer learning, video tape, written material), practical training (demonstrations performed by the trainer and practical exercises performed by the trainee), and evaluation of the operator's performance in the workplace.

All operator training and evaluation shall be conducted by qualified persons who have the knowledge, training, and experience to train powered industrial truck operators and evaluate their competence.

Note: This section does not require that the training be given by any particular individual or organization. The trainer must only be able to demonstrate that they have appropriate knowledge, training and experience to train others and evaluate their competence.

Training Program Content.

Powered industrial truck operators shall receive initial training in the following topics.

1. Operating instructions, warnings, and precautions for the types of truck the operator will be authorized to operate;
2. Differences between the truck and the automobile;
3. Truck controls and instrumentation: where they are located, what they do, and how they work;
4. Engine or motor operation;
5. Steering and maneuvering;
6. Visibility (including restrictions due to loading);
7. Fork and attachment adaptation, operation, and use limitations;
8. Vehicle capacity;
9. Vehicle stability;

10. How to perform daily inspections (pre-shift inspections for use on multiple shifts)
11. Refueling and/or charging and recharging of batteries;
12. Operating limitations
13. Any other operating instructions, warnings, or precautions listed in the operator's manual for the types of vehicle that the employee is being trained to operate.
14. Workplace-related topics:
15. Surface conditions where the vehicle will be operated;
16. Composition of loads to be carried and load stability;
17. Load manipulation, stacking, and unstacking;
18. Pedestrian traffic in areas where the vehicle will be operated;
19. Narrow aisles and other restricted places where the vehicle will be operated;
20. Hazardous locations where the vehicle will be operated;
21. Ramps and other sloped surfaces that could affect the vehicle's stability;
22. Closed environments and other areas where insufficient ventilation or poor vehicle maintenance could cause a buildup of carbon monoxide or diesel exhaust;
23. Other unique or potentially hazardous environmental conditions in the workplace that could affect safe operation;
24. The use of truck chocks, supports, and dock plates prior to loading/unloading.

Refresher Training and Evaluation.

Refresher training, including an evaluation of the effectiveness of that training, shall be conducted to ensure that the operator has the knowledge and skills needed to operate the powered industrial truck safely.

Refresher training in relevant topics shall be provided to the operator when:

1. The operator has been observed to operate the vehicle in an unsafe manner;
2. The operator has been involved in an accident or near-miss incident;
3. The operator has received an evaluation that reveals that the operator is not operating the truck safely;
4. The operator is assigned to drive a different type of truck; or
5. A condition in the workplace changes in a manner that could affect safe operation of the truck.

An evaluation of each powered industrial truck operator's performance shall be conducted at least once every three years.

Avoidance of Duplicative Training.

If an operator has previously received training in a topic specified above, and such training is appropriate to the truck and working conditions encountered, additional training in that topic is not required if the operator has been evaluated and found competent to operate the truck safely.

Note: This section reduces the training requirement for previously trained operators provided we can demonstrate that the operator knows the material. Since some of the required training is unique to the area where the lift will be operated, we must still cover these areas even if the employee was previously trained.

Certification.

CDI shall certify that each operator has been trained and evaluated as required by this paragraph (I). The certification shall include the name of the operator, the date of the training, the date of the evaluation, and the identity of the person(s) performing the training or evaluation.

HYDROGEN SULFIDE (H₂S)

Background:

Hydrogen sulfide presents a potential hazard to workers at the work site. It usually occurs as an unwanted by-product and can result in worker exposure in many different industries or occupations. To ensure protection against exposure to hydrogen sulfide, both workers and employers must be aware of its properties, how it affects the body and what to do in emergency situations. The Safety Manager shall ensure that all personnel who will be working at the job site will be properly trained in Hydrogen sulfide awareness and contingency procedures.

Occurrence of Hydrogen Sulfide:

Hydrogen sulfide exposures usually occur during the drilling for or production of natural gas, crude oil and petroleum products. Hydrogen sulfide is also produced by the petrification of organic matter and may accumulate in sewers, sewage treatment plants or hide storage pits in the tanning industry. Well drillers and tunnel workers, as well as miners, may be exposed when underground pockets of hydrogen sulfide are encountered.

Hydrogen sulfide may be used in the manufacture of inorganic sulfides, sulfuric acid and mercaptans.

Characteristics of Hydrogen Sulfide:

Hydrogen sulfide (H₂S) is a colorless gas with a powerful nauseating smell of rotten eggs. The odor is a poor warning property because hydrogen sulfide exposure quickly deadens the sense of smell. The gas is heavier than air and may collect in low areas such as sewers, pits, tunnels or gullies. High airborne levels of hydrogen sulfide (between 4.3 and 46.0 percent of gas by volume in the air) may catch fire if there is a source of ignition. If the gas is burned, toxic products such as sulfur dioxide will be formed. Hydrogen sulfide is incompatible with oxidizing agents, such as nitric acid and chlorine trifluoride, and may react violently or ignite spontaneously.

Health Effects on the Body:

Hydrogen sulfide is extremely toxic. It may cause death instantaneously in high airborne concentrations. Low levels may be extremely irritating to the lungs, nose, throat and eyes.

Hydrogen sulfide can be detected by smell at levels as low as 0.13 parts hydrogen sulfide per million parts air (ppm). Odor cannot be used as a warning because the gas can deaden the sense of smell within 2 to 15 minutes in exposures of approximately 100 ppm. A single breath of hydrogen sulfide at about 1000 ppm may paralyze the respiratory system and result in coma and death. Convulsions may also occur. Prolonged exposure at about 250 ppm hydrogen sulfide may cause the lung tissue to swell and fill up with water (pulmonary edema).

This effect may occur after the exposed worker recovers from the irritant effects of the gas. Exposures of 20 to 50 ppm hydrogen sulfide for one hour may cause inflammation of the cornea and the delicate lining of the eye and eyelid (a condition called keratoconjunctivitis). Exposures for long periods at 50 ppm may cause severe irritation of the nose, throat and lungs. Workers exposed to lower concentrations of hydrogen sulfide may develop headaches, eye disorders and chronic bronchitis.

Purpose:

The purpose of this Program is to protect public health and safety and those personnel essential to maintaining control of the well. This Program identifies the Company's uniform national requirements and minimum standards of performance expected from operators when conducting operations involving oil or gas or other work that is known or could reasonably be expected to contain hydrogen sulfide (H₂S) or which results in the emission of sulfur dioxide (SO₂) as a result of flaring H₂S. This Program also identifies the gravity of violations, probable corrective action(s), and normal abatement periods.

Scope:

This Program is applicable to all onshore oil and gas lease when drilling, completing, testing, reworking, producing, injecting, gathering, storing, treating operations, and/or operations that are being conducted in zones which are known or could reasonably be expected to contain H₂S or which, when flared, could produce SO₂, in such concentrations that upon release could constitute a hazard to human

life. The requirements and minimum standards of this Program do not apply when operating in zones where H₂S is presently known not to be present or cannot reasonably be expected to be present in concentrations of 100 parts per million (ppm) or more in the gas stream. In the event the Company is hired to perform work for another Contractor, the Company shall be aware of the Contractor's contingency and emergency plan provisions.

Strict adherence to the Company's Confined Space Entry Program shall be observed when employees will be working inside tanks, vessels or in other situations that fall into the Confined Space Entry Program. Employees shall be trained per the requirements of CFR 1910.146(g).

Personal Protective Equipment:

When exposure to personnel is anticipated and engineering controls fail to reduce breathing zone concentrations to below 10 ppm averaged over 8 hours, or 20 ppm for a maximum of 15 minutes, individuals shall be required to wear appropriate respiratory protection. A good rule of thumb to follow would be to automatically mask up for gauging those tanks that have H₂S levels in excess of 20 ppm. When respiratory protection is required, a full-face piece supplied-air respirator, operated in the positive pressure mode, shall be used. If an airline respirator is used, it must be equipped with an emergency egress bottle. Personal, Portable and Fixed H₂S Monitors Three basic types of continuous reading monitors (personal, portable, fixed) can be used when work tasks involve potential exposure to H₂S. These monitors shall be selected based on the various requirements of each work area. Personal Monitors When routine and/or maintenance tasks involve potential exposure to H₂S at or above 10 ppm in the breathing zone, or 20 ppm or more at the source, the use of continuous direct reading personal monitors with audible, visual and/or vibrator alarms is required. The following requirements are applicable:

- Personal monitors shall be set to alarm at 10 ppm.
- Personal monitors shall be properly maintained and calibrated in accordance with the manufacturer's recommendation.
- Calibration shall be performed no less frequently than every 3 months; or more frequently if recommended by the manufacturer.
- Monitors shall be challenged, or "bumped", with span gas prior to each use.
- Personal monitors must be worn on the outside of all clothing.
- If monitor alarms sound all employees are to evacuate the area immediately

Note: The use of personal monitors by each individual working in a H₂S area is strongly recommended. However, when a group of personnel are working in the same area, with the same exposure potentials, it is not mandatory for each individual to wear a personal monitor.

Warning Signs:

Warning signs shall be posted to remind personnel of potential hazards at all H₂S facilities. In some cases, a facility may be designated as an H₂S facility based upon a single source above 20 ppm. If a facility is classified based on one source (e.g., an amine unit above 10 ppm with all other sources less than 10 ppm), signs may be posted only in that area of the facility. The following are additional warning sign requirements:

- For offshore operations, signs are to be located on the outboard sides of the facility to inform boaters of a potential H₂S danger.
- Signs for offshore use shall be a minimum of 8 feet wide and 4 feet high, with wording a minimum of 12 inches in height.
- The sign(s) shall be high-visibility yellow color with black lettering.
- The sign shall be legible and large enough to be read by all persons approaching the facility.
- All signs, and when appropriate, flags, shall be visible to all personnel when approaching the facility under normal lighting and weather conditions

Emergency Response Plan:

The site-specific emergency response or contingency plan should provide an organized immediate action plan for alerting and protecting employees and the public in the event of a major H₂S release. The contingency plan must contain information on, but not limited to, the following subjects:

- 1) Emergency Procedures (to include)
 - Responsibilities of personnel
 - Immediate Action Plan
 - Telephone numbers and communication methods
 - Safety equipment and supplies available (e.g., number and location of breathing air equipment)

- Location of first aid kits, litter or Stokes basket, resuscitators, and spare oxygen bottles

Training:

Personnel who work in areas where there is a potential for exposure to H₂S shall be instructed and trained initially on the following subjects:

- Hazards, characteristics, properties, and sources of H₂S • Proper use of H₂S detectors and monitoring equipment • Symptoms of overexposure to H₂S
- First aid for H₂S victims, including resuscitators
- Proper selection, use and maintenance of respiratory protection equipment
- Safe work procedures and precautions
- Wind direction awareness and routes of egress
- Job hazards
- Effects of H₂S on equipment (corrosion, hydrogen embrittlement, etc.)
- Confined spaces
- Emergency procedures



LEAD AWARENESS

Lead based paint is commonly found in homes built before 1978 and many industrial paints today still contain lead. Lead overexposure is one of the leading causes of workplace illnesses in the United States. The Lead Management Program helps ensure compliance with the **OSHA Lead in Construction standard, 29 CFR 1926.62** and the **EPA Renovation, Repair and Painting (RRP) rule 40 CFR 745**.

Lead exposure can occur through the inhalation or ingestion of lead containing dust that is generated during construction, repair or renovation activities. The primary lead hazard on campus involves the disturbance of lead-based paint. Paint must be tested in order to determine if it contains lead and paint that has not been tested must be assumed to contain lead. Additional materials on campus that may contain lead include lead solder, glazings, stained glass, sink liners, sink traps, fume hood counterweights, roofing materials, gutters and downspouts

Responsibilities

Management will implement, maintain & monitor effectiveness of:

- entire lead safety program, including semi-annual revisions and updates to reflect the current status of the program
- engineering & administrative controls for lead exposure
- employee training and awareness • medical surveillance program
- respiratory protection program
- lead disposal program
- housekeeping program
- protective clothing issue, storage and disposal

Supervisors will:

- provide effective and continuous control of all lead operations
- immediately inform management of any deficiencies in engineering or administrative controls
- conduct routine assigned inspections and monitoring
- immediately correct any deviation from operational safety requirements
- provide immediate on-the-spot training for any employee who shows lack of knowledge or application of required operational lead safety requirements
- ensure all employees are properly trained before commencing any operation that may contribute to lead exposure

Employees will:

- follow all operational and lead safety procedures
- seek immediate supervisor guidance to resolve questions
- conduct operations in accordance with company provided training
- immediately report to a supervisor any deficiency in engineering or administrative controls
- properly use, store and dispose of issued and assigned personal protective clothing.
- maintain change and shower areas neat and orderly

Health Effects

Lead adversely affects numerous body systems and causes forms of health impairment and disease that arise after periods of exposure as short as days (acute exposure) or as long as several years (chronic exposure). The frequency and severity of medical symptoms increases with the concentration of lead in the blood. Common symptoms of acute lead poisoning are loss of appetite, nausea, vomiting, stomach cramps, constipation, difficulty in sleeping, fatigue, moodiness, headache, joint or muscle aches, and

anemia. Acute health poisoning from uncontrolled occupational exposures has resulted in fatalities. Long term (chronic) overexposure to lead may result in severe damage to the nervous, urinary, and reproductive systems.

Protective Measures The following protective measures shall be implemented when disturbing lead containing materials:

- A Site-Specific Lead Compliance Plan shall be completed prior to beginning work.
- If lead materials are found in the job site employees are not to disturb the materials unless PPE and proper ventilation is provided.
- Work sites are to be monitored closely when multi-trades are present in order to ensure employees are kept safe from Lead based materials
- Lead safe work practices aimed at minimizing lead dust and fumes shall be utilized (wet work methods and avoid use of power tools).
- The proper PPE shall be worn including disposable coveralls, gloves, eye protection and the respiratory protection.
- The work area shall be isolated using negative pressure ventilation machines, polyethylene sheeting and signs posted warning of potential lead exposure.
- Surfaces must be protected from contamination with polyethylene sheeting and the waste generated must be collected. The waste will be tested by EH&S to determine if it needs to be disposed of as hazardous waste.
- Clean up shall be performed with a HEPA vacuum or wet mop (do not use a shop vac or compressed air).
- PPE must be removed before leaving the work area.
- Workers must wash their hands and face before eating and drinking and at the end of the shift.

Training & Medical Monitoring

All employees who are involved with the demolition, renovation, or repair of surfaces or materials containing lead must attend lead awareness training. The training must be repeated annually and cover topics including the contents of standard 1926.62, engineering controls, lead safe work practices, respiratory protection, adverse health effects and medical monitoring. Additional training requirements apply to work covered by the EPA RRP rule. Training records are to be kept for the duration of employment plus 3 years.

Medical monitoring is available to all employees occupationally exposed on any day to lead at or above the action level of 30 ug/m³, 8-hour TWA. Testing will include blood sampling and analysis for lead and zinc protoporphyrins. A continuing medical surveillance program is available to all employees exposed at the action level for more than 30 days in a 12-month period.

RECORDKEEPING

The program administrator will ensure the maintenance of all Safety Program records, for the listed periods, including:

- | | | |
|-----|---|------------------------------------|
| 1. | New Employee Safety Orientation Forms | Length of employment |
| 2. | Code of Safe Practices Receipt | Length of employment |
| 3. | Disciplinary actions for safety | 1 year |
| 4. | Safety inspections | 2 years |
| 5. | Safety meeting reports | 2 years |
| 6. | Safety Contact Reports | 2 years |
| 7. | Accident investigations | 5 years |
| 8. | Federal or State OSHA log of injuries | 5 years |
| 9. | Inventory of Hazardous Materials (if any) | Indefinite |
| 10. | Employee exposure or medical records | Length of employment plus 30 years |

Records are available for review at the main office.

HEARING CONSERVATION

The following hearing conservation program is provided only as a guide to assist supervisors and employees in complying with the requirements of OSHA's Hearing Conservation Standard, 29 CFR 1910.95, as well as to provide other helpful information. It is not intended to supersede the requirements of the standard. CDI Technology Services will continue to review the standard for particular requirements which are applicable to employee's individual situation and make adjustments to this program that are specific to CDI Technology Services.



**Hearing Conservation Program
Table of Contents**

- I. Objective
- II. Assignment of Responsibility
 - A. Management/Safety
 - B. Employees
- III. Procedures
 - A. Noise Monitoring
 - B. Employee Training
 - C. Hearing Protection
 - D. Audiograms/Hearing Tests
- IV. Attachments
 - A. Hearing Conservation Training Log
 - B. Record of Hearing Protection Needs



Hearing Conservation Program for CDI Technology Services

I. OBJECTIVE

The objective of the CDI Technology Services Hearing Conservation Program is to minimize occupational hearing loss by providing hearing protection, training, and annual hearing tests to all persons working in areas or with equipment that have noise levels equal to or exceeding an eight-hour time-weighted average (TWA) sound limit of 85 dBA (decibels measured on the A scale of a sound level meter). A copy of this program will be maintained by all affected departments. A copy of OSHA's Hearing Conservation Standard, 29 CFR 1910.95, can be obtained from the CDI Safety Department. A copy of the standard will also be posted in areas with affected employees.

II. ASSIGNMENT OF RESPONSIBILITY

A. Management/Safety

1. Use engineering and administrative controls to limit employee exposure.
2. Provide adequate hearing protection for employees.
3. Post signs and warnings in all high noise areas.
4. Conduct noise surveys annually or when new equipment is needed.
5. Conduct annual hearing test for all employees.
6. Conduct hearing conservation training for all new employees.
7. Conduct annual hearing conservation training for all employees.

B. Employees

1. Use company-issue approved hearing protection in designated high noise areas.
2. Request new hearing protection when needed.
3. Exercise proper care of issued hearing protection.

III. PROCEDURES

A. Noise Monitoring

1. Monitoring for noise exposure levels will be conducted by CDI Safety, job foreman or job lead. It is the responsibility of the individual departments to notify CDI Safety Department when there is a possible need for monitoring. Monitoring will be performed with the use of sound level meters and personal dosimeters at the discretion of job Foreman/Lead.
2. Monitoring will also be conducted whenever there is a change in equipment, process or controls that affect the noise levels. This includes the addition or removal of machinery, alteration in building structure, or substitution of new equipment in place of that previously used. The responsible supervisor must inform ALL **EMPLOYEES IN AREA** when these types of changes are instituted.

B. Employee Training

1. Affected employees will be required to attend training concerning the proper usage and wearing of hearing protection. The training will be conducted by CDI Safety Department, or a designated representative, within a month of hire and annually thereafter. Upon failure to properly use hearing protection employees will be retrained within 48 hours of incident.

2. Training shall consist of the following components:

- a. how noise affects hearing and hearing loss;
- b. review of the OSHA hearing protection standard;
- c. explanation of audiometric testing;
- d. rules and procedures;
- e. locations within company property where hearing protection is required; and
- f. the purpose of hearing protectors, the advantage and disadvantages of various types, and instructions on how to use and care for them

3. Training records will be maintained by CDI Front Office for duration of employment. (see Attachment A).

C. Hearing Protection

Management, supervisors, and employees shall properly wear the prescribed hearing protection while working or traveling through any area that is designated as a high noise area.

1. Hearing protection will be provided at no cost to employees who perform tasks designated as having a high noise exposure and replaced as necessary. It is the supervisor's responsibility to require employees to wear hearing protection when noise levels reach or exceed 85 dBA. Those employees will have the opportunity to choose from at least two different types of hearing protection. Hearing protection will be evaluated for specific environments where it will be used.
2. Personal stereo headsets are not approved for hearing protection and are not permitted in any operating area of company property.
3. Signage is required in areas that necessitate hearing protection. It is the responsibility of the CDI Safety Department; job foreman or job lead to provide signage to the appropriate areas.
4. Preformed earplugs and earmuffs should be washed periodically and stored in a clean area. Foam inserts should be discarded after each use. Hands should be washed before handling preformed earplugs and foam inserts to prevent contaminants from being placed in the ear.
5. CDI Safety Department, job foreman or job lead will keep a log of the areas or job tasks designated as requiring hearing protection, as well as the personnel affected by this Hearing Conservation Program (see Attachment B). records to be kept for duration of employment plus 30 years.

D. Audiograms/Hearing Tests

1. Employees subject to the Hearing Conservation Program who have time-weighted average (TWA) noise exposures of 85 dBA or greater for an eight (8) hour work shift will be required to have both a baseline and annual audiogram. The audiograms will be provided by CDI Technology Services and conducted by the CDI Safety Department_ with no cost to the employee.
2. The baseline audiogram will be given to an employee within six (6) months after their initial first expose with CDI Technology Services and before any exposure to high noise levels. Annual audiograms will be performed within one year from the date of the previous audiogram. It is the responsibility of the individual and the CDI Safety Department to schedule the annual audiogram.
3. If an annual audiogram shows that an employee has suffered a standard threshold shift, the employee will be retested within thirty (30) days of the annual audiogram. If the retest confirms the occurrence of a standard threshold shift, the employee will be notified in writing within twenty-one (21) days of the confirmation. Employees who do experience a standard threshold shift will be refitted with hearing protection and provided more training on

the effects of noise. Employees should not be exposed to workplace noise for 14 hours before the baseline test.



Hearing Conservation Training Log

Training Conducted by: _____

[illegible]

NFPA 70E

Before starting an electrical job that involves working on or with electrical equipment all personnel instructed to work on equipment must be properly trained on specific hazards associated with electrical energy and no more than 3 years shall pass prior to retraining. All training records should be kept for the duration of employment. Any employee found not in compliance with safety practices is to be retrained immediately. Any untrained or unqualified employees are not to approach equipment and must comply with the Limited Approach Boundary provided on equipment. In designated areas untrained employees are not to enter work area A “Qualified Electrical Worker” must complete a written Job Safety Plan. Once the plan is completed and prior to beginning the job the “Qualified Electrical Worker” is required to complete a Pre-Job Safety Briefing with the employees that are involved in that job and verbally alert to any potential hazards with the task or in the area. Include the energized electrical work permit, if applicable, in your briefing. Provide employees with a new job briefing if any aspect of the job safety plan changes

The following steps are required to meet the new “Job Safety Plan” under the new proposed standard.

- (1) The Job Safety Plan and Pre-Job Safety Briefing must be documented (written down)
- (2) A description of the job (everything that needs to be completed)
- (3) A description of each individual task (what the task involves)
- (4) Identification of the electrical hazards associated with each task (electrical hazards only)
 - a. Advise host employer of any unique hazards that have presented themselves and what course of action we are taking to mitigate all hazards
- (5) A Shock Risk Assessment

Estimate the likelihood of the occurrence and severity of shock to determine if any additional protective measures are required. To estimate the likelihood of getting shocked while performing a job, a risk assessment matrix can be used which focuses on three main variables that determine an acceptable risk level you are willing to take. Note a “Qualified Electrical Worker” is the only employee to complete: testing, troubleshooting and voltage measuring.

Likelihood of a worker to get shocked:

- Frequent: Most likely to get shocked
- Probable: Very Likely to get shocked
- Occasional: Likely to get shocked
- Remote: Not likely to get shocked
- Improbable: May assume that shock will not happen

Severity/Consequences of being shocked:

- Negligible: First aid or minor medical treatment only
- Marginal: Minor injury, (could be an OSHA lost workday incident)
- Critical: Disability for more than 3 months
- Catastrophic: Death or permanent disability

Risk Level

- Low: Risk level is acceptable (below 50 volts)
- Medium: Utilize the appropriate “Hierarchy of Risk Control Methods” on page 4
- Serious: High priority action - utilize the “Hierarchy of Risk Control Methods” at the top level
- High: Operation not permissible - must de-energize (High voltage)

(6) An Arc Flash Risk Assessment

Estimate the likelihood of the occurrence of arc flash and the severity, to determine if any additional protective measures are required. To estimate the likelihood of an arc flash occurring while performing a job, a risk assessment matrix that is similar to the one used for a shock risk assessment. Below is the risk assessment matrix for an arc flash:

Likelihood of an arc flash to occur:

- Frequent: Most likely for an arc flash to occur
- Probable: Very likely for an arc flash to occur
- Occasional: Likely to have an arc flash
- Remote: Not likely to have an arc flash
- Improbable: May assume that an arc flash will not happen (below 1.2 cal/cm²)

Severity/consequences of being shocked:

- Negligible: First aid or minor medical treatment only (below 1.2 cal/cm²)
- Marginal: Minor injury/burns, (could be an OSHA lost workday incident)
- Critical: Severe burns and disability (more than 3 months)
- Catastrophic: Death or permanent disability (high cal/cm² level above 40)

Risk Level:

- Low: Risk level is acceptable (below 50 volts)
- Medium: Utilize the appropriate “Hierarchy of Risk Control Methods” *on page 4*
- Serious: High priority action - utilize the “Hierarchy of Risk Control Methods” at the top level
- High: Operation not permissible, must de-energize (high voltage)

- (7) Specific safe work procedures involved with each task (inspecting prior to use and putting on appropriate PPE, using insulated tools, verifying the absence of voltage with a voltage meter, ensure testing instruments are in proper working order before and after an absence of voltage test is performed and rated for circuits/equipment in which they are to be used for)
- (8) Go over any special precautions that may be necessary (using a second person as a spotter, having a rescue hook available, proper illumination of work area, etc.)
- (9) If any energy source controls are necessary, equipment may need to be locked out and tagged
- (10) Give a pre-job briefing before work begins with employees involved (this is a verbal meeting with all workers involved to go over the “job safety plan”)
- (11) Audit field work on an annual basis

A “Qualified Person” should follow the “Hierarchy of Risk Control Methods” as part of the risk assessment procedure to determine which control methods can be used to help reduce the hazard. The hierarchy pyramid is set up with the safest control methods at the top. The list of controls can be found in Section 110.1(G) in the NFPA 70E Standard.

Hierarchy of Risk Control Methods

Elimination

This step focuses on eliminating the hazard to create an electrically safe work condition.

Substitution

Workers can opt to substitute less hazardous equipment, such as non-electrical or battery operated tools.

Engineering Controls

These options can automatically reduce risks, such as ground fault circuit interrupter (GFCI) protection and installed barriers.

Awareness

This step requires that people be alerted to the hazard which can include installing permanent or temporary signs, labels, and barricades.

Administrative Controls

This method involves planning processes, training, permits, job planning, and work procedures intended to create safer work conditions.

Personal Protective Equipment (PPE)

This needs to be available when needed. The last resort method is PPE, which includes insulated tools, clothing, and gloves, and is intended.

Limited Approach Boundary

Only qualified persons are permitted to enter spaces identified as a Limited Approach Boundary containing energized electrical conductors and circuit parts operating at 50 volts or more or where an electrical hazard exists

A qualified person shall be trained to:

- Distinguish exposed energized electrical conductors and circuit parts from other electrical equipment.
- Determine the normal voltage of exposed energized electrical conductors and circuit parts.
- Know the specified approach distances specified (Table 130.2(C))

- A qualified person shall be trained to:
 - Distinguish exposed energized electrical conductors and circuit parts from other electrical equipment.
 - Determine the normal voltage of exposed energized electrical conductors and circuit parts.
 - Know the specified approach distances specified (Table 130.2(C))
 - The decision-making process necessary to determine the degree and extent of the hazard and the personal protective equipment and job planning necessary to perform the task safely.
 - Safe work practices for working within the limited approach boundary include: Evaluations; anticipating unexpected events; initially considering all electrical parts are live; Electrical arc flash hazard analysis Before starting work in the Limited Approach Boundary the company shall identify a hazard/risk evaluation that contains: event scarcity, frequency, or probability and avoidance to determine the level of safe practices employed. The decision-making process necessary to determine the degree and extent of the hazard and the personal protective equipment and job planning necessary to perform the task safely.

Safe work practices for working within the limited approach boundary include: Evaluations; anticipating unexpected events; initially considering all electrical parts are live; Electrical arc flash hazard analysis Before starting work in the Limited Approach Boundary the company shall identify a hazard/risk evaluation that contains: event scarcity, frequency, or probability and avoidance to determine the level of safe practices employed.

Test Intervals for Rubber Insulated PPE

Rubber Insulating Equipment, Voltage Requirements

Class of equipment*	Maximum use voltage ¹ AC rms	Retest voltage ² AC rms	Retest voltage ² DC avg
00	500	2,500	10,000
0	1,000	5,000	20,000
1	7,500	10,000	40,000
2	17,000	20,000	50,000
3	26,500	30,000	60,000
4	36,000	40,000	70,000

*Class of equipment will vary based on rubber insulating equipment required for job

Rubber Insulating Equipment, Maximum Test Intervals

Rubber Insulating Equipment	When to Test	Governing Standard for Test Volt
Blankets	Before first issue; every 12 months thereafter+	ASTM F 479
Covers	If insulating value is suspect	ASTM F 478
Gloves	Before first issue: every 6 months thereafter+	ATM F 496
Line hose	If insulating value is suspect	ASTM F 478
Sleeves	Before first issue: every 12 months thereafter+	ASTM F 496

*ASTM F 478, standard specification for in-service care of insulating line hose and covers; ASTM F 479, standard specification for in-service care of insulating blankets; ASTM F 496, standard specification for in-service care of insulating gloves and sleeves.

+If the insulating equipment has been electrically tested but not issued for service, it is not permitted to be placed into service unless it has been electrically tested within the previous 12 months.

COVID-19

- Optional use of face coverings-
 - Nose, mouth and chin to be covered
 - KN-95 masks are provided by CDI to all employees as requested
- Employees are to minimize person to person contact whenever possible, utilizing 6' social distancing rule
- Employees required to wash hands regularly for a minimum of 20 seconds
- Employees are provided hand sanitizers on the job site
- Employees are provided disinfecting wipes upon request for use for tools and material they will be handling
- Employees given Lysol Disinfecting Spray and/or OdoBan Disinfecting Spray to use as needed, with all SDS paperwork made available to the employee.
- When an employee experiences COVID-19 like symptoms-
 - Employee is to call into the shop and call their Foreman
 - Employee is provided with COVID-19 antigen tests to test and monitor for the virus
 - Employee is advised to stay home, seek medical attention and COVID-19 lab testing
 - Employee is to inform CDI HR of COVID-19 status once they receive results
 - Once a COVID-19 exposure is confirmed, all close contacts on the jobsite are issued notification within 24 hours. All possible close-contacts are provided with COVID-19 antigen tests to test and monitor for possible exposures, and advised to seek medical attention.
- Employees who contract COVID-19 will be required to quarantine for 5 days; per CDC guidelines. Upon completion of quarantine, they will be required to be masked upon returning to the job site for 5 days; per CDC guidelines.
- Employees making travel plans are advised to discuss their travel plans with CDI Management prior to making any travel reservations and will need to consider possible restrictions on their ability to return to work.
- CDI reports local COVID-19 county status weekly with toolbox topic.

Technology Services

MATERIAL HANDLING and STORAGE

OSHA recommends that employers establish a formal training program to teach workers how to recognize and avoid materials handling hazards. The training should reduce workplace hazards by emphasizing the following factors:

- Dangers of lifting without proper training.
- Avoidance of unnecessary physical stress and strain.
- Awareness of what a worker can comfortably handle without undue strain.
- Need for assistance when lifting
- When to utilize mechanical or powered means of assistance
- Use of equipment properly
- How to secure all loads
- Recognition of potential hazards and how to prevent or correct them

Because of the high incidence of back injuries, both supervisors and employees should demonstrate and practice safe manual lifting techniques. The weight limit one person can handle may vary. CDI recommends that 1 employee can handle only 40lbs of weight any weight greater than 40lbs will require the help of another employee. It is recommended that 2 employees should only handle 80lbs any weight greater than this should be managed by mechanical means (flat cart, pallet jack, furniture dolly, etc.) anything greater than the limits (typically 600-800lbs, of mechanical means will require the use of a powered industrial vehicle. Proper ergonomics and PPE are required when handling all material loads regardless of weight to limit the potential injuries sustained while in the process of material handling and storing.

Mechanical Means – two or more people are required when using a pallet jack, flat cart or furniture dolly due to the need to load the material or the length of material. Any material longer than 10 feet will require the need for a spotter on the front of the material as well as rear.

Powered Means – two or more people are required when using a forklift, Sky Trak, crane/hoist as well as certified documented training. A documented pre-task plan is required on all powered lift requirements. All loads are to be secured by a competent person prior to attempting to move, bracing may be required depending on load. Spotters and flaggers are also required once load is determined secure.

Storage – all storage areas and passageways where material will be stored must be clear of any and all debris. Remember to chock any items with wheels. Housekeeping is to be maintained in all areas of storage to eliminate potential fire hazards as well as any trips hazards.

Glossary

- **Bracing** - A diagonal piece of structural material that serves to strengthen something.
- **Chock** - A wedge or block for steadying a body and holding it motionless, for filling in excess space, or for preventing the movement of a wheel.
- **Competent person** - one who can identify health and safety hazards in the workplace and has the authority to correct them.
- **Powered industrial Vehicle** - Forklift trucks, tractors, platform lift trucks, motorized hand trucks, and other specialized industrialized trucks powered by electrical or internal combustion engines.


PTP, JSA and/or JHA

A Pre-Task Plan (PTP), Job Safety Analysis (JSA) or Job Hazard Analysis (JHA) is an analysis of the job steps, hazards/risk associated which focus on identifying and controlling hazards. Utilizing a PTP, JSA or JHA will provide a process for analyzing the work activities that will identify the tools, materials and equipment needed to develop work methods and procedures for accomplishing the task.

CDI utilizes a company provided document (PTP) to be utilized prior to each job. Job steps are to be listed in sequential order followed by hazard for each job step, finalized by how the hazard will be eliminated.

PTP is valid for five (5) workdays granted there is no change in job description. PTP updates are required when job description changes and when personnel is added or removed.

Employees are required to cover PTP daily during morning huddle.

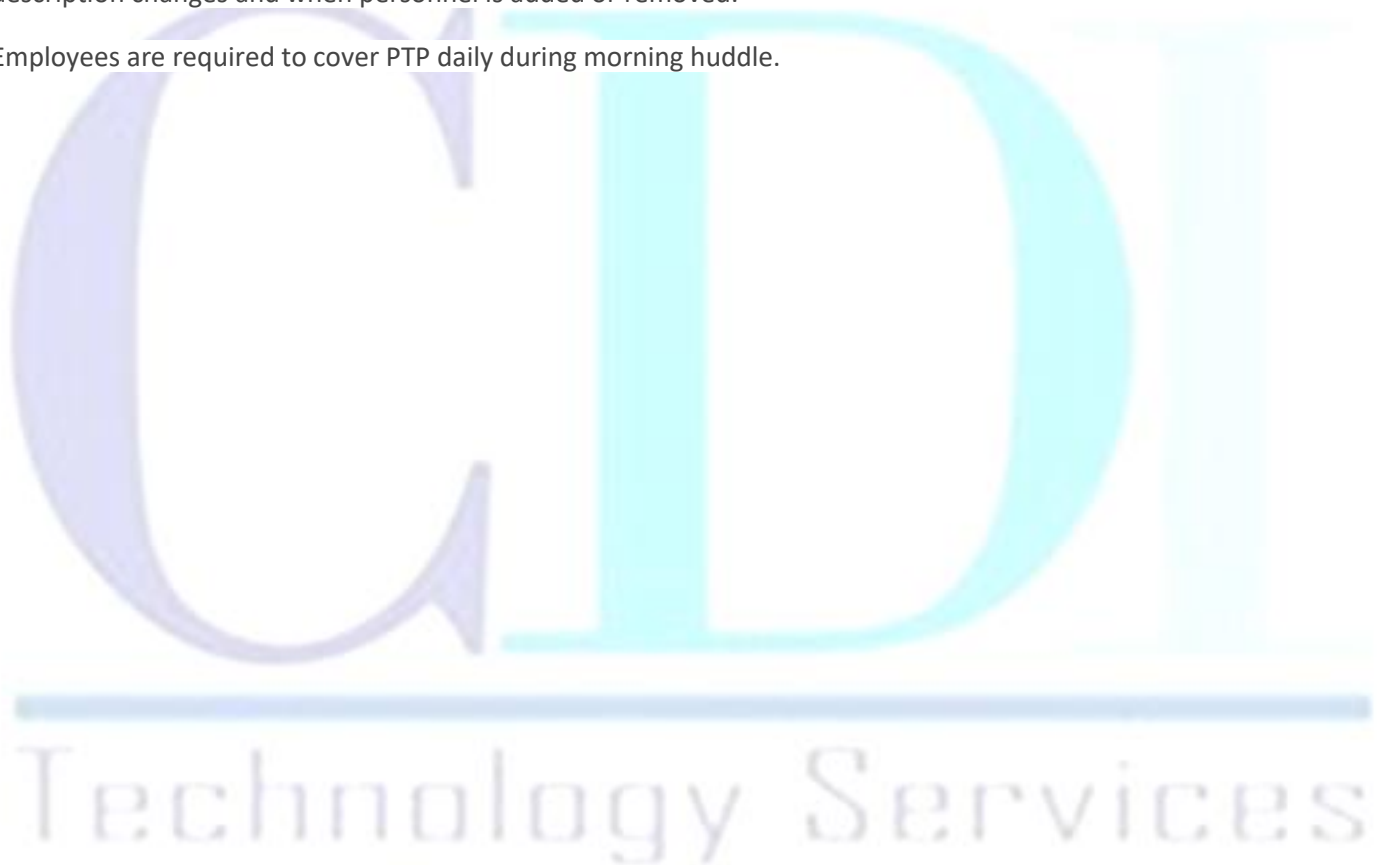

APPENDIXES

1. HAZARD ASSESSMENT AND CORRECTION RECORD
2. INCIDENT INVESTIGATION REPORT
3. EMPLOYEE SAFETY CONTACT REPORT
4. NEW EMPLOYEE SAFETY ORIENTATION
5. CODE OF SAFE WORK PRACTICES RECEIPT
6. COMPANY VEHICLE POLICY RECEIPT
7. SAFETY COMMITTEE MEETING MINUTES
8. SAFETY MEETING MINUTES
9. FACILITY INSPECTION CHECKLISTS
10. ELECTRICAL SAFETY/ ENERGIZED WORK POLICY
11. VEHICLE ACCIDENT REPORT FORM
12. SIGNS FOR PRINT

HAZARD ASSESSMENT AND CORRECTION RECORD

Date of Inspection: _____

Person Conducting Inspection: _____

Unsafe Condition or Work Practice:

Corrective Action Taken:

Date of Inspection: _____

Person Conducting Inspection: _____

Unsafe Condition or Work Practice:

Corrective Action Taken:

Date of Inspection: _____

Person Conducting Inspection: _____

Unsafe Condition or Work Practice:


Corrective Action Taken:

INCIDENT INVESTIGATION REPORT

Instructions: Complete this form as soon as possible after an incident that results in serious injury or illness.
(Optional: Use to investigate a minor injury or near miss that *could have resulted in a serious injury or illness.*)

This is a report of a: ☐ Death ☐ Lost Time ☐ Dr. Visit Only ☐ First Aid Only ☐ Near Miss	
Date of incident:	This report is made by: ☐ Employee ☐ Supervisor ☐ Team ☐ Other

Step 1: Injured employee (complete this part for each injured employee)

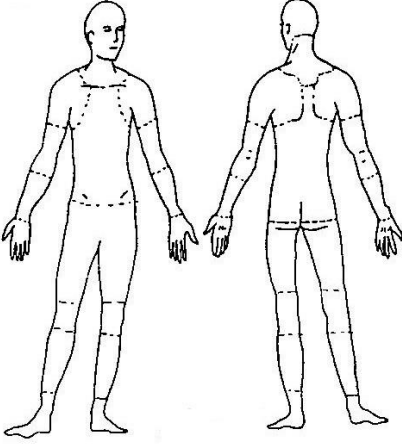Name:	Sex: ☐ Male ☐ Female	Age:
Department:	Job title at time of incident:	
Part of body affected: (shade all that apply) 	Nature of injury: (most serious one) ☐ Abrasion, scrapes ☐ Amputation ☐ Broken bone ☐ Bruise ☐ Burn (heat) ☐ Burn (chemical) ☐ Concussion (to the head) ☐ Crushing Injury ☐ Cut, laceration, puncture ☐ Hernia ☐ Illness ☐ Sprain, strain ☐ Damage to a body system: ☐ Other	This employee works: ☐ Regular full time ☐ Regular part time ☐ Seasonal ☐ Temporary
		Months with this employer
		Months doing this job:

Step 2: Describe the incident

Exact location of the incident:	Exact time:		
What part of employee's workday? ☐ Entering or leaving work ☐ Doing normal work activities ☐ During meal period ☐ During break ☐ Working overtime ☐ Other			
Names of witnesses (if any):			
Number of attachments:	Written witness statements:	Photographs:	Maps / drawings:

What personal protective equipment was being used (if any)?
Describe, step-by-step the events that led up to the injury. Include names of any machines, parts, objects, tools, materials and other important details. Description continued on attached sheets: D

Step 3: Why did the incident happen?	
Unsafe workplace conditions: (Check all that apply) ☐ Inadequate guard ☐ Unguarded hazard ☐ Safety device is defective ☐ Tool or equipment defective ☐ Workstation layout is hazardous ☐ Unsafe lighting ☐ Unsafe ventilation ☐ Lack of needed personal protective equipment ☐ Lack of appropriate equipment / tools ☐ Unsafe clothing ☐ No training or insufficient training ☐ Other:	Unsafe acts by people: (Check all that apply) ☐ Operating without permission ☐ Operating at unsafe speed ☐ Servicing equipment that has power to it ☐ Making a safety device inoperative ☐ Using defective equipment ☐ Using equipment in an unapproved way ☐ Unsafe lifting ☐ Taking an unsafe position or posture ☐ Distraction, teasing, horseplay ☐ Failure to wear personal protective equipment ☐ Failure to use the available equipment / tools ☐ Other:
Why did the unsafe conditions exist?	
Why did the unsafe acts occur?	
Is there a reward (such as “the job can be done more quickly”, or “the product is less likely to be damaged”) that may have encouraged the unsafe conditions or acts? ☐ Yes ☐ No If yes, describe:	
Were the unsafe acts or conditions reported prior to the incident?	☐ Yes ☐ No
Have there been similar incidents or near misses prior to this one?	☐ Yes ☐ No

EMPLOYEE SAFETY CONTACT REPORT

Work site: _____

Manager / Supervisor: _____

Employee name _____

Date _____

Job title _____

Safety concern:

Corrective action:

Signed: _____

Employee

Signed: _____

Manager / Supervisor

NEW EMPLOYEE SAFETY ORIENTATION

The Supervisor will verbally cover the following items with each new employee on the first day of their employment.

Employee Name: _____

Start Date: _____

Job Title / Position: _____

Instruction has been received in the following areas.

- ☐ 1. Code of Safe Practices*
- ☐ 2. Hazard Communication (chemicals) Employee Training Handbook*
- ☐ 3. Driving Safety Rules*
- ☐ 4. Safety rule enforcement procedures
- ☐ 5. Necessity of reporting ALL injuries, no matter how minor, IMMEDIATELY
- ☐ 6. Proper method of reporting safety hazards
- ☐ 7. Emergency procedures and First Aid
- ☐ 8. Proper work clothing & required personal protective equipment
- ☐ 9. List all special equipment, such as lifts, employee is trained and authorized to use
- ☐ 10. Emergency Exits and Fire Extinguishers

* Give a copy of these items to the employee.

I agree to abide by all company safety policies and the Code of Safe Practices. I also understand that failure to do so may result in disciplinary action and possible termination.

Signed _____ Date _____
Employee

Signed _____ Date _____
Supervisor

CODE OF SAFE PRACTICES RECEIPT

This is to certify that I have received a copy of the Code of Safe Practices. I have read these instructions, understand them, and will comply with them while working for CDI.

I understand that failure to abide by these rules may result in disciplinary action and possible termination of my employment with CDI.

I also understand that I am to report any injury to my Supervisor or Manager immediately and report all safety hazards.

I further understand that I have the following rights.

- I am not required to work in any area I feel is not safe.
- I am entitled to information on any hazardous material or chemical I am exposed to while working.
- I am entitled to see a copy of the Safety Manual and Injury and Illness Prevention Program.
- I will not be discriminated against for reporting safety concerns.

Print Name

Sign Name

Date

Technology Services

COMPANY VEHICLE POLICY RECEIPT

This is to certify that I have received a copy of the Driving Safety Rules and Company Vehicle Policy. I have read these instructions, understand them, and will comply with them while driving company vehicles.

I understand that failure to abide by these rules will result in disciplinary action and possible suspension of my driving privileges.

I also understand that I am to report any accident to the office immediately.

Print Name

Sign Name

Date

Technology Services

SAFETY COMMITTEE MEETING MINUTES

Date of Committee Meeting: _____ *Location:* _____

Minutes prepared by: _____ *Date:* _____

Review of Safety Inspection and Plan of Correction:

Previous Business: _____

New Business: _____

Review of Accidents: _____

Plan of Correction: _____

Employee Suggestions: _____

Recommended Safety Training: _____

Additional Comments: _____

Safety Committee Meeting Attendance:

1. _____
2. _____
3. _____
4. _____
5. _____

6. _____
7. _____
8. _____
9. _____
10. _____

SAFETY MEETING MINUTES (CONTINUED)

Project: _____ *Department:* _____

Presenter: _____ *Date:* _____

Safety Topic Discussed:

Additional items addressed other than topic:

Suggestions and Comments:

Safety Meeting Attendance:

- | | |
|----------|-----------|
| 1. _____ | 6. _____ |
| 2. _____ | 7. _____ |
| 3. _____ | 8. _____ |
| 4. _____ | 9. _____ |
| 5. _____ | 10. _____ |

FACILITY INSPECTION CHECKLIST

Department/Division: _____

Date of Inspection: _____

Location: _____

Inspector: _____

Criteria	Check One Yes No		Comments
- Are work areas properly illuminated? - Is the ventilation system appropriated for the work performed? - Are restrooms and washrooms kept clean and sanitary? - Is potable water provided for drinking and washing? - Are outlets for water not suitable for drinking clearly identified? - Where heat stress is a problem, do all fixed work areas have air conditioning?	☐	☐	
- Is the work area clean and orderly? - Are floors kept clean and dry or have you taken appropriate measures to make floors slip resistant?	☐	☐	
- Are floors free from protruding nails, splinters, holes, etc.? - Are permanent aisles and passageways clearly marked? - Are aisles and passageways kept clear? - Are pits and floor openings covered or guarded? - Is combustible trash removed from the worksite daily? - Are spilled materials or liquids cleaned up immediately? - Is there safe clearance in aisles where motorized or mechanical handling equipment travel?	☐	☐	
FLOOR AND WALL OPENINGS, STAIRS AND STAIRWAYS			
- Are floor openings guarded by covers or guardrails on all sides? - Do skylights have screens or fixed railings that would prevent someone on the roof from falling through?	☐	☐	
- Are open pits and trap doors guarded? - Are grates or similar type covers over floor openings such as floor drains, designed so that foot traffic or rolling equipment are not affected by grate spacing?	☐	☐	
- Are open-sided floors, platforms and runways having a drop of more than 4 feet guarded by a standard railing or toe board? - Are standard stair rails or handrails on all stairways having four or more risers?	☐	☐	
- Are all stairways at least 22 inches wide? - Do stairs have at least a 6-½ foot overhead clearance? - Are step risers on stairs uniform from top to bottom? - Are steps on stairs and stairways designed or provided with a slip-resistant surface?	☐	☐	
Are stairway handrails located between 30 and 34 inches above the leading edge of stair treads?	☐	☐	

GENERAL WORK ENVIRONMENT

Criteria	Check One		Comments
	Yes	No	
Are stairway handrails capable of withstanding a load of 200 pounds, applied in any direction?	☐	☐	
ELEVATED SURFACES			
Is the vertical distance between stairway landings limited to 12 feet or less?	☐	☐	
Are stairways adequately illuminated?	☐	☐	
Are signs posted showing the elevated surface load capacity?	☐	☐	
Do elevated work areas have a permanent means of access and egress?	☐	☐	
Are materials on elevated surfaces piled, stacked or racked in a manner to prevent tipping, falling, collapsing, rolling or spreading?	☐	☐	
EXITS AND EXIT DOORS			
Are all exits marked with an exit sign and illuminated by a reliable light source?	☐	☐	
Are exit routes clearly marked?	☐	☐	
Are doors, passageways or stairways that are neither exits nor access to exits, appropriately marked "NOT AN EXIT" or "STOREROOM" etc.?	☐	☐	
Are all exits kept free of obstructions?	☐	☐	
Are there sufficient exits to permit prompt escape in case of emergency?	☐	☐	
Do exit doors open in the direction of exit travel?	☐	☐	
Are doors that swing in both directions provided with viewing panels in each door?	☐	☐	
Are exits and exit routes equipped with emergency lighting?	☐	☐	
ADDITIONAL REMARKS:			

Additional information regarding this safety program manual can be obtained through the safety program administrator or safety committee.

ELECTRICAL SAFETY/ENERGIZED WORK POLICY

All electrical work performed by CDI employees in all locations and of all forms shall be in compliance with the rules and regulations of the National Fire Protection Association specifically their Standard 70, the National Electric Code as approved by the American National Standards Institute provided that work has not been specifically exempted. Listed, labeled or certified equipment shall be installed and utilized in accordance with the instructions included in the listing, labeling or certification.

Purpose

The purpose of this program is to establish company safe work practices for electrical tools, equipment and their related components.

Scope

The scope of this program covers all permanent and temporary employees and contractors while working on company project sites. If CDI does not own a particular site, the site owner's program shall be used on that site unless the site owners' program is less stringent.

Responsibilities

Safety Manager

- Develop electrical safety programs & procedures in accordance with regulatory standards and as required by each individual site.
- Ensure that employees fully comply with this program.
- Ensure that no unqualified employees work on energized electrical circuit equipment or their parts.

Supervisors (General Foreman/Foreman)

- Ensure that only qualified employees and / or qualified contractors perform electrical repairs and installations.
- Ensure that electrical programs and procedures address site specific hazards or hazards that are presented by unique circumstances at their respective areas of responsibility.
- Ensure that no unqualified employees work on energized electrical circuit equipment or their parts.

Qualified Employees (Trained JIW)

- Ensure that no unqualified employees work on energized electrical circuit equipment or their parts.
- Ensure individual familiarity with the use of special precautionary techniques, personal protective equipment, insulated tools, insulating materials and shielding materials.

Employees

- Ensure that only qualified employees work on energized electrical circuit equipment or other related parts.
- Report all potential electrical hazards to supervisors immediately.

Definitions

Class I hazardous locations - areas having the presence of *flammable gases or vapors* in the air, such as natural gas or gasoline vapor. When these materials are found in the atmosphere, a potential for explosion exists, which could be ignited if an electrical or other source of ignition is present. The Code writers have referred to this first type of hazard as *Class I*. So, a *Class I Hazardous Location* is one in which *flammable gases or vapors* may be present in the air in sufficient quantities to be explosive or ignitable. Some typical Class I locations are:

- Petroleum refineries, and gasoline storage and dispensing areas;
- Dry cleaning plants where vapors from cleaning fluids can be present;
- Spray finishing areas;
- Aircraft hangars and fuel servicing areas; and
- Utility gas plants, and operations involving storage and handling of liquefied petroleum gas or natural gas.
- All of these are Class I gas or vapor hazardous locations. All require special Class I hazardous location equipment.

Class II hazardous locations - areas made hazardous by the presence of combustible *dust*. These are referred to in the Code as "Class II Locations." Finely pulverized material, suspended in the atmosphere, can cause as powerful an explosion as one occurring at a petroleum refinery. Some typical Class II locations are:

- Grain elevators;
- Flour and feed mills;
- Plants that manufacture, use or store magnesium or aluminum powders;
- Producers of plastics, medicines and fireworks;
- Producers of starch or candies;
- Spice-grinding plants, sugar plants and cocoa plants; and
- Coal preparation plants and other carbon handling or processing areas.

Class III hazardous locations - areas where there are *easily-ignitable fibers or filings* present due to the types of materials being handled, stored, or processed. The fibers and filings are not likely to be suspended in the air, but can collect around machinery or on lighting fixtures where heat, a spark or hot metal can ignite them. Some typical Class III locations are:

- Textile mills, cotton gins;
- Cotton seed mills, flax processing plants; and
- Plants that shape, pulverize or cut wood and create sawdust or filings.

Qualified Person - A person who is currently trained in the operation, repair, maintenance, construction and implementation of electrical equipment and electrical hazards.

Circuit Breaker - An automatic switch that stops the flow of electric current in a suddenly overloaded or otherwise abnormally stressed electric circuit.

Disconnecting Means - A device or other means by which circuit conductors can be disconnected from a power supply.

Disconnecting Switch - A device which is used to isolate a circuit or equipment from a power source.



Double Insulated Tool - Tools which are constructed using non-conductive materials that do not require grounded, 3 wire plugs.

Grounded Conductor - A conductor that is used to connect equipment or the grounding circuit of a wiring system to a grounding electrode or several grounding electrodes.

Ground Fault Circuit Interrupter (GFCI) -A device that interrupts the electrical circuit to the load when a fault current to the ground exceeds a predetermined value that is less than what is required to operate the over current protective device of the supply circuit.

Safe Work Practices

General

- All electrical equipment, tools and related components must be inspected prior to each use.
- Equipment, tools and related components, which are unserviceable or faulty, shall be removed from service and tagged appropriately with the date, the name of the inspecting employee and signature of inspecting employee.
- Only qualified personnel may repair electrical tools, cords and other related equipment.
- Only certified electricians may repair or conduct maintenance on electrical equipment and wiring systems.
- Employees shall not wear conductive apparel such as rings, watches, etc. unless they are rendered non-conductive by covering, wrapping or other insulating means.
- When working on or near exposed de-energized parts, those parts shall be treated as live until locked out, tagged out and proved to be de-energized by testing.
- Outlets connected to circuits with different voltages must use a design such that the attachment plugs on the circuits are not interchangeable.
- Double insulated tools must have the factory label intact indicating the tool has been approved to be used without a three-wire grounded supply cord connection.
- Double insulated tools must not be altered in any way which would negate the factory rating.
- Only approved, certified, electrical contractors may perform construction and service work on CDI or client property.
- It is the responsibility of the foreman to determine before any work operation begins if there are any energized circuits that the employees may come into contact with and to provide protection from and warning against all electrical hazards.
- Prior to performing work on any electrical circuit, the employee shall personally inspect the circuit with as a minimum a non-contact voltmeter to ensure that it is not energized. Proper meter test procedures must be followed (test on live circuit to verify operation of test equipment, test circuit, and re-test on live circuit to verify operation.) Work on energized circuits is not allowed and CDI Lockout/Tagout procedure must be followed.

Extension Cords

- Use only three-wire, grounded, extension cords and cables that conform to a hard service rating of 20 amperes or higher, and grounding of the tools or equipment being supplied.
- Only commercial or industrial rated grounded extension cords may be used in shops and outdoors. Cords must have suitable strain relief provisions at both the plug the receptacle ends.
- Work lamps (drop light) used to power electrical tools are not allowed

- Adapters that allow three wire, grounded prongs, connected to two wire non-grounded outlets are strictly prohibited unless the grounding conductor is attached to a permanent ground.
- Cords must have a service rating for hard or extra-hard service and have S, AJ, ST, SO, SJO, SJT, STO, or SJTO printed on the cord.
- Cords may not be run on the floor through doorways, under mats or carpets, across walkways or aisles, concealed behind walls, ceilings or floors, or run through holes in walls, or anywhere where they can become a tripping hazard.
- All extension cords shall be plugged into one of the following:
 - o A GFCI outlet;
 - o A GFCI built into the cord;
 - o A GFCI adapter used between the wall outlet and cord plug.
- In lieu of GFCI's, the assured grounding program may be utilized per 29 CFR 1926.404(b).
- All extension cords and or electrical cords shall be inspected daily or before each use for breaks, plug condition and ground lugs, possible internal breaks, and any other damage. If damage is found, the extension cord or electrical cord shall be removed from service and repaired or replaced.

Illumination

- Employees shall not enter spaces containing exposed energized parts.
- All electrical equipment and tools must have an on and off switch and may not be turned on or off by plugging or unplugging the supply cord at the power outlet.
- Circuit breaker panel boxes and disconnects must be labelled with the voltage rating.
- Each breaker within a breaker panel must be labelled for the service it provides.
- Disconnect switches providing power for individual equipment must be labelled accordingly.
- General construction areas, stairwells, ramps, runways, corridors, offices, shops, warehouses, tunnels and storage areas must be lighted to not less than 5 foot-candles.
- Temporary lighting must have guards to prevent accidental contact with the bulb except where the bulb is deeply recessed in the reflector or enclosed in an approved tube guard.
- Temporary light fixtures shall not be suspended by the cord unless the fixture was specifically designed for the application, as with trouble lights.

Ladders

- Only Fiberglass ladders Type IA (300lbs) and IAA (375lbs) are allowed for use, Type I (250lb) and II (225lb) are not allowed on any jobsite
- Portable ladders must have non-conductive side rails.
- Ladders must be manufactured using non-conductive materials such as fiberglass or wood.
- Aluminum or metal ladders are strictly prohibited.
- Ladders shall be free of defects and defective components.
- Ladders shall be used per the manufacturer's recommendations only.
- A-frame type ladders shall not be used in a "closed" position or leaned against a wall during use. Spreaders must be fully opened and locked prior to ascending the ladder.

Energized and Overhead High Voltage Power Lines & Equipment

- A minimum clearance of 10 feet from high voltage lines must be maintained when operating vehicular and mechanical equipment such as forklifts, cranes, winch trucks, and other similar equipment.
- When possible, power lines shall be de-energized and grounded or other protective measures shall be provided before work is started.

- Minimum approach distance to energized high power voltages lines for unqualified employees is 10 feet. (1910.133(c)(iii)(A))
- Minimum approach distance for qualified employees shall be followed per 29 CFR 1910.333(c)(3)(i) Qualified - Table S5 Selection and Use of Work Practices - Approach Distances for Qualified Employees - Alternating Current). Approach distances are 10' for 50kV plus 4" for every additional 10kV. See also NFPA 70E.

Confined or Enclosed Work Spaces

- When an employee works in a confined or enclosed space that contains exposed energized parts, the employee shall isolate the energy source and turn off the source and lock and tag out the energy source (Only electricians qualified, trained and wearing proper PPE can work on an exposed energy source).
- Protective shields, protective barriers or insulating materials as necessary shall be provided.

Enclosures, Breaker Panels, and Distribution Rooms

- A clear working space must be maintained in the front, back and on each side of all electrical enclosures and around electrical equipment for a safe operation and to permit access for maintenance and alteration.
- Housekeeping in distribution rooms must receive high priority to provide a safe working and walking area in front of panels and to keep combustible materials to the minimum required to perform maintenance operations.
- All enclosures and distribution rooms must have "Danger: High Voltage - Authorized Personnel Only" or equivalent posted on the front panel and on entrance doors.
- Flammable materials are strictly prohibited inside distribution rooms (Boxes, rags, cleaning fluids, etc.)

Lock Out/Tag Out

- No work shall be performed on live parts (or near enough to them for employees to be exposed due to the dangers of tools or other equipment coming into contact with the live parts) and the hazards they present.
- If any employee is exposed to contact with parts of fixed electric equipment or circuits which have been de-energized, the circuits energizing the parts shall be locked out or tagged or both.
- Conductors and parts of electrical equipment that have been de-energized but have not been locked or tagged out shall be treated as live parts.
- Per CDI policy all electrical work will be performed only by qualified, trained and licensed electricians who are familiar with the use of special precautionary techniques, PPE, insulating and shielding materials and insulated tools. Any equipment being made ready for maintenance will be locked out using CDI's Lock Out/Tag Out Program. Lockouts are performed by the Safety Manager, Foreman or project supervisor. Designated employees may be trained by management to lock out equipment. If live sources are to be worked, it will only be performed with the knowledge of local management. Only authorized personnel may perform lock out/tag out work on electrical equipment and will follow the Lock out/Tag Out Program outlined in this safety manual.
- Authorized personnel will be trained in lock out/tag out procedures.

- Affected personnel will be notified when lock out/tag out activities are being performed in their work area.

Fire Extinguishers

- Approved fire extinguishers must be provided on sites as required.
- Water type extinguishers shall not be located closer than 50 feet from electrical equipment.

Electric Shock-CPR

- Follow the Three C's-Check, Call, Care
- If someone is discovered that has received an electric shock and is unconscious, first check to see if their body is in contact with an electrical circuit. Do not touch a person until you are sure there is no contact with an electrical circuit.
- When it is safe to make contact with the victim, check the victim and if necessary, call 911 for help immediately.
- Begin CPR if the person's heart has stopped or they are not breathing.

Electric Welders

- A disconnecting means shall be provided in the supply circuit for each motor-generator arc welder, and for each AC transformer and DC rectifier arc welder which is not equipped with a disconnecting means mounted as an integral part of the welder.
- A switch or circuit breaker shall be provided by which each resistance welder and its control equipment can be isolated from the supply circuit. The ampere rating of this disconnecting means may not be less than the supply conductor ampacity.

Equipment Grounding

- All gas compressors, air compressors, separators, vessels, etc. shall be grounded by means of using a lug and ground strap, nominal in size to a 3/16" bolt or larger, attached to a ground rod.
- Equipment bonding jumpers shall be of copper or another corrosion-resistance material.
- The transfer of hazardous or flammable material from a metal or plastic container with a flash point of 100 degrees F or less shall have a ground strap from the container and attached to the skid or a ground rod placed in the ground.

Assured Grounding

OSHA requires that employers shall use either ground fault circuit interrupters (GFCI) or an assured equipment grounding conductor program to protect personnel from electrical shock while working.

- Employees may use GFCI's in lieu of an assured grounding program or vice versa.

Ground Fault Circuit Interrupters

All 120-volt, single-phase 15 and 20 ampere receptacle outlets on construction or maintenance sites, which are not part of the permanent wiring of the building or structure and which are in use by employees, shall have approved ground fault circuit interrupters for personnel protection unless AEGP is used. In the event GFCI's are used:

- All hand portable electric tools and extension cords shall use a GFCI.

- Additionally, approved GFCI's shall be used for 240-Volt circuits in the same service as described above.
- GFCI's must be used on all 120 volt, single-phase 15 amp and 20-amp receptacles within 6 feet of a sink, damp areas or on installed outdoor equipment.
- The GFCI must be the first device plugged into a feed receptacle.
- The GFCI must be tested before each use by pressing the on-board testswitch.

Training

- All CDI employees in the electrical trade, both temporary and full time shall be trained in electrical safety practices and procedures to minimize the risk of electrical shock.
- Unqualified employees who may be exposed to electric shock shall receive training and acquire familiarity with electric safety workpractices.
- All CDI employees both temporary and full time shall be trained in safety related work practices that pertain to their respective jobassignments.
- Safe work practices shall be used to prevent electric shock or other related incidents as a result of energy source contact while working near or on energized equipment or circuits.

Work on any Energized Circuit

No employee is authorized to perform any work on any energized electrical circuit without first receiving specific permission from the Vice President, Service Manager, Director of Electrical, Account Manager or Safety Manager. Our policy is to remove the shock hazard by working on de- energized circuits and using CDI's written "LOCKOUT/TAGOUT" procedure.

Work on an energized circuit includes, but is not limited to:

- Energized taps, connections, wire pulling in raceways with energized conductors and tie-ins.
- Energized line work, or any work on energized medium or high voltage systems.
- Temporary power additions to energized circuits.
- Work within, installation, or removal of power distribution units (POU), fused switches, breakers, disconnects, power whips, receptacles, switches, junction boxes, transformers, or other utilization devices while they are energized.
- Installation or removal of light fixtures connected to an energized circuit.
- Equipment connections within Panels, Switchboards, Junction Boxes, Generators, UPS Systems, Mechanical Equipment, Alarms, Security Devices, Computers and all other similar equipment while energized.

If there is an instance where work must be done on an energized electrical circuit, the following procedure shall be followed:

1. The General Foreman / Foreman / Qualified Employee (highest level of supervision on the work site) shall provide a written Method of Procedure to Vice President, Service Manager, Director of Electrical Services, or Safety Manager **prior** to proceeding with any work to review the necessity of performing work on an energized circuit and to review the specific safety plan for performing the work. Include in the discussion the following:
 - a. Why the circuit cannot be turned off and locked out.
 - b. A specific description of the work.

- c. Who are we proposing to have physically perform the work? There shall be a minimum of two (2) journeymen electricians for any energized work. The foreman may be one (1) of the two (2) journeymen, if appropriate.
 - d. Who will be directly supervising the energized work? Direct supervision is required and shall always mean physically present (within sight) and able to communicate.
 - e. When the work will be performed and the estimated duration.
 - f. Specifics as to how we will be performing the work.
 - g. Confirmation that appropriate Personal Protective Equipment (PPE) is in place prior to the start of any work. Required PPE includes, but is not limited to class "B" hardhats, safety glasses, minimum of 8 cal/cm² Arc Thermal Performance Exposure Value (ATPV) rated face shields, minimum of 8 cal/cm² ATPV long sleeved protective outer wear (or ATPV rated flash suits if necessary), and insulated tools. Insulating (rubber) blankets & mats and insulating gloves, insulating shields/barriers to be used where necessary.
 - h. Confirmation that a first aid kit, with burn supplies, is readily available.
 - i. Confirmation that a Class "C" fire extinguisher is readily available.
 - j. Confirmation that an "emergency" plan is in place for the project.
 - k. Confirmation that you and the affected workers' have a complete understanding of the facility "one-line" diagram and equipment location(s). The intent is to ensure that operation of breakers can be done without hesitation and in a safe manner.
2. After the Vice President, Service Manager, Director of Electrical, or Safety Manager has given approval; we shall inform all affected parties. This would include the General Contractor, any affected craft(s), building management, building engineer, tenant, owner and/or end user of the need to perform work on their energized electrical system. We will not proceed until we have permission from the affected party (ies) and we have fully informed them of the potential hazards and consequences of performing work on energized circuits including the possibility of permanent damage to their equipment should any arc incident occur. We will not proceed until they agree to hold CDI harmless in the event an arc incident should occur.
 3. The General Foreman/Foreman/Qualified Employee (highest level of supervision on the work site) shall report to the approving manager after the work is completed. The "MOP" shall be closed out at that time.
 4. Any changes to the anticipated work listed in the MOP shall require the manager be contacted immediately and modifications be discussed and listed prior to proceeding further with the work.


ACCIDENT REPORT FORM

Keep this form in your vehicle.
Complete the report in case of accident and
return promptly to:

CDI Main Office

ACCIDENT DIAGRAM

Show names of streets, locations of vehicles, travel directions of vehicles, and prominent objects. Clearly indicate the direction of North.

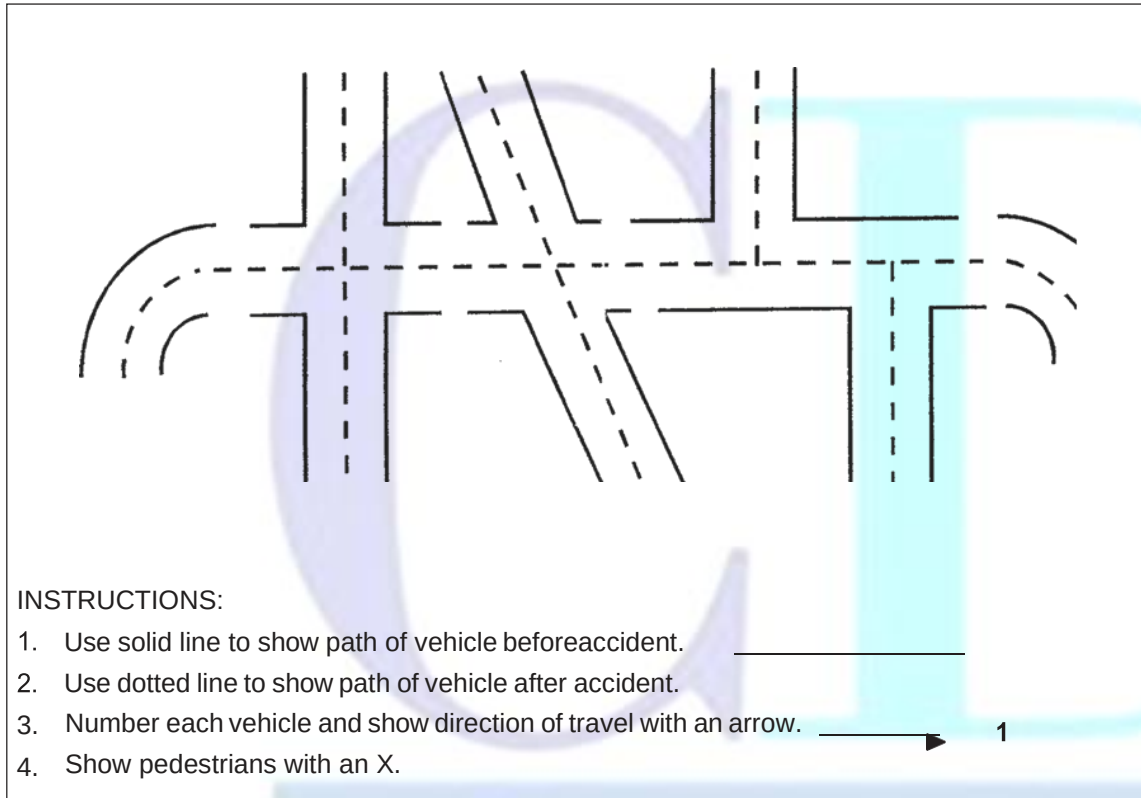

INSTRUCTIONS:

1. Use solid line to show path of vehicle before accident.
2. Use dotted line to show path of vehicle after accident.
3. Number each vehicle and show direction of travel with an arrow.
4. Show pedestrians with an X.

Police Officer Information

Accident Report Number

Officer Name(s) & Badge Number(s)

DRIVER'S RESPONSIBILITY

Any driver involved in a traffic accident is responsible for completing an accident report. Following an accident, the driver must contact Safety at (210) 844-0061 and collect all information requested on the accident report form. Even minor incidents should be brought quickly to management's attention in order to protect against potential claims.

Your accident report and conduct at the accident scene is very important. What is said and done at the accident scene can either help or hinder the successful settlement of an accident case. All drivers must know and understand what to do and say, and be equipped to handle situations as they arise.

The following steps should be taken at the scene of a traffic accident in which you are involved:

1. Stop the vehicle immediately and shut off engine. Failure to stop at the scene of an accident in which you are involved is a criminal offense which may subject you to the penalty of the law in addition to disciplinary action by your employer.
2. Turn on the 4-way flashers and (if available) set out emergency markers (reflectors or flares) in accordance with DOT regulations—one marker 100 feet in each direction from the scene and one near the scene. If the accident occurs near a curve or hill crest, set the markers further away, but not further than 500 feet from the scene.
3. Assist any injured person, but DO NOT move them unless absolutely necessary to prevent further injury (i.e., from fire). Keep any injured person as warm and quiet as possible while waiting for the arrival of emergency personnel.
4. See that help, such as police and ambulance, are summoned to the scene.
5. If you are the victim of a hit-and-run, or if the other party of an accident refuses to remain at the scene or give you information, notify the police and give them all the details you can. This way, your report is kept on the police log and protects you if the other party tries to make a claim against you at a later date.
6. Be polite. Provide only the information on your driver's license and the insurance card in your accident packet. Do not offer information concerning the accident to anyone except the police.
7. Complete the accident report form and return it to the Fleet Manager as promptly as possible. The following information must be recorded.



THE ACCIDENT

Date: _____ Hour: _____ ☐ A.M. ☐ P.M.

Location: _____

On which side of the street were you? _____

Driving which way? _____

How far from curb? _____

Did you sound horn? ☐ Yes ☐ No

Were your lights lit? ☐ Yes ☐ No

Condition of weather: _____

Road conditions: _____

Describe how accident occurred: _____

DAMAGE TO PROPERTY OF OTHERS

Name of owner: _____

Address: _____

Name of driver: _____

Address: _____

Driver's License No.: _____

Name of Insurance Company. _____

Policy Number: _____

Nature of Damage: _____

Name of owner: _____

Address: _____

Name of driver: _____

Address: _____

Driver's License No.: _____

Nature of Damage: _____

INJURED PERSONS

Name: _____

Address: _____

Nature of injuries: _____

Where taken after accident: _____

By Whom: _____

Attending Physician: _____

Address: _____

Name: _____

Address: _____

Nature of injuries: _____

Where taken after accident: _____

By Whom: _____

Attending Physician: _____

Address: _____

1. TO PASSENGERS AND OTHERS

My employer requires that I report details of all accidents. If you witnessed this one, please assist me by writing your name below. Write a brief description of your version of the accident on the reverse side, even if you consider me at fault.

Name. _____

Home Address.

Tel.. _____

Business Address.

Tel.: _____

Date: _____

2. TO PASSENGERS AND OTHERS

My employer requires that I report details of all accidents. If you witnessed this one, please assist me by writing your name below. Write a brief description of your version of the accident on the reverse side, even if you consider me at fault.

Name. _____

Home Address:

Tel.: _____

Business Address.

Tel.: _____

Date: _____

3. TO PASSENGERS AND OTHERS

My employer requires that I report details of all accidents. If you witnessed this one, please assist me by writing your name below. Write a brief description of your version of the accident on the reverse side, even if you consider me at fault.

Name: _____

Home Address:

Tel.. _____

Business Address:

Tel.: _____

Date: _____

Technology Services

1.

2.

3.



CAUTION

**Hard Hat
Area**

CAUTION

**Construction
Area Authorized
Personnel Only**

DANGER

**Do Not Enter
Authorized
Personnel Only**



Laser Wear Eye Protection

DANGER

**No Smoking Or
Open Flames
Within 50 Feet**



DANGER

**High Voltage
Turn Off Power
Before Servicing**

DANGER

**Do Not
Enter**

DANGER

**No Smoking
Within 50 Feet**



**Highly
Flammable**

DANGER

**Electrical Hazard
Authorized
Personnel Only**



**High Voltage
Electrical
Equipment**



**Flammable
Storage**



**No
Smoking**



**Hazardous
Voltage Inside**



**High Voltage
Overhead**



**High Voltage
Keep Away**

WARNING

**RESTRICTED
AREA**

NOTICE

**Restricted Area
Authorized
Personnel Only**