
emgteach · Agonist / antagonist practical, wrist

Six steps

1 Electrodes

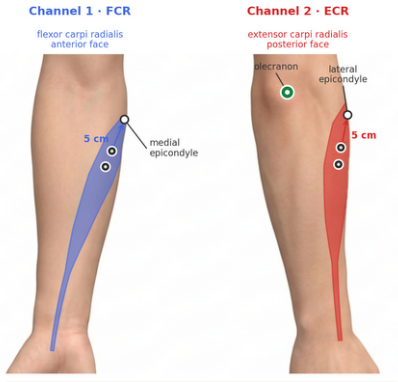


channel 1 FCR · channel 2 ECR · one reference, on the olecranon

2 Connect




with the board switched on · in «Test identifier», a code, never a name

3 Record

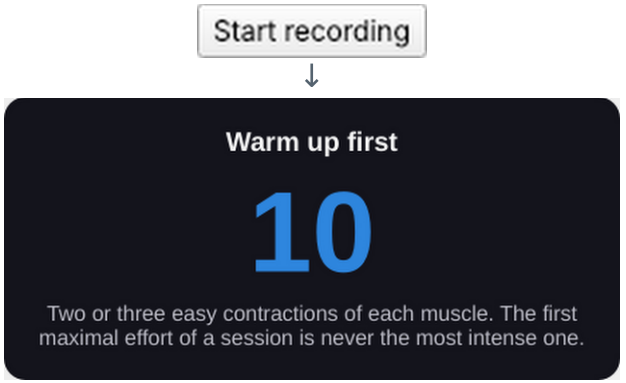


warm-up: 10 s, two or three easy contractions

4 Calibration

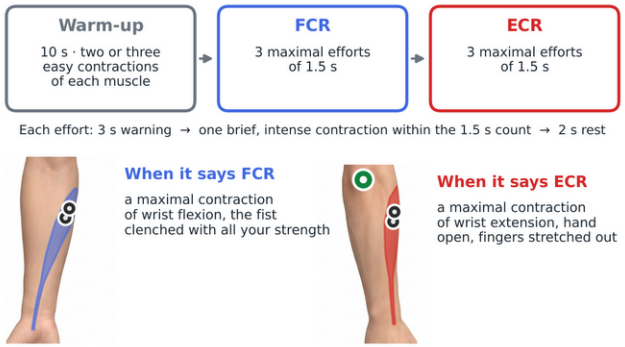


3 × FCR · 3 × ECR · one brief, intense contraction in the 1.5 s of each cue

5 The task

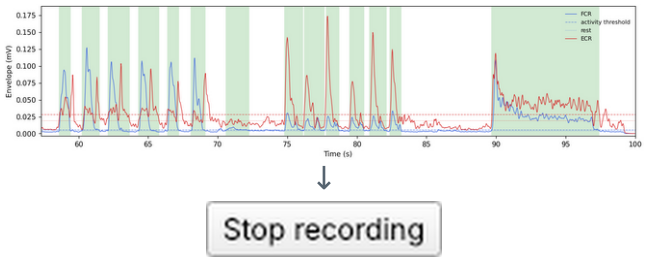

6 flexions · 6 extensions · 1 grip of 8 s closing the hand on the ball · 2 s still in between

6 Analyse

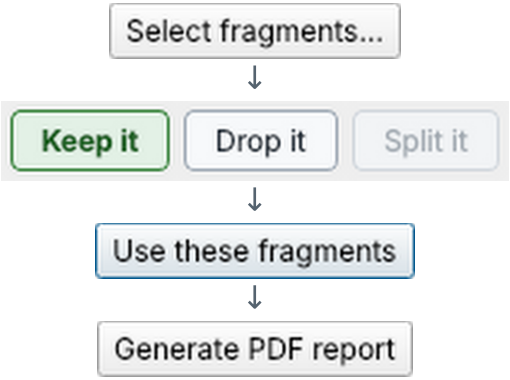

the yellow line says the step; last, the PDF report

If it does not connect: if the board does not answer, wait for the warning and press «Retry»; if Windows gives an error opening the port, switch the board off and on and press «Start recording» again.

In the analysis: check that every contraction has its row; the very brief ones may come out dotted or unmarked, and are added by hand (clicking the dotted one or with «Add fragment»).

Questions? The «?» on each box of the application explains it.