


BBOXX Home

Disassembling the Case



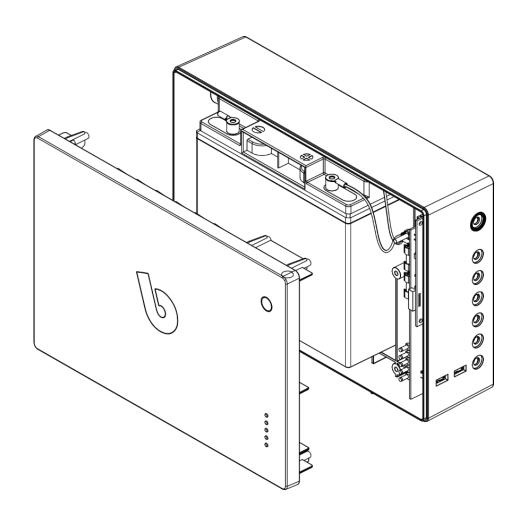


Introduction

This guide will show you how to correctly access the internal components of a BBOXX Home by taking the case apart.

Requirements

For this guide you will need the following tools:

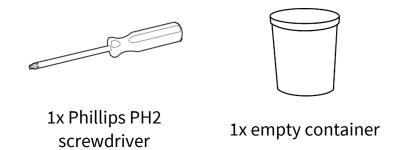

Prerequisites

This guide has no prerequisites.


Instructions

Follow the instructions below to learn how to disassemble the casing of a BBOXX Home.

13 Jun 2016 **2** of 8



Step 1 – Starting position

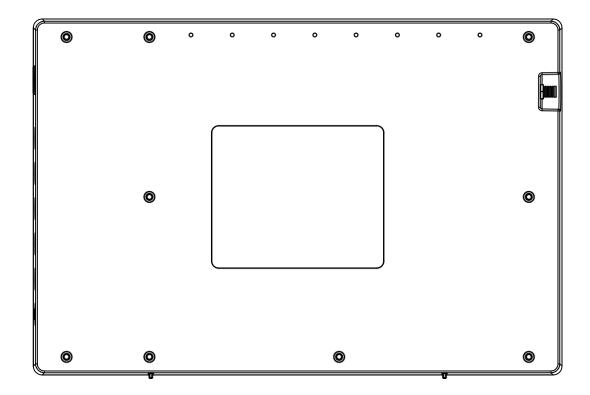


• Place the BBOXX Home on a flat surface with the logo facing down.

13 Jun 2016 **3** of 8



Step 2 – Remove the screws

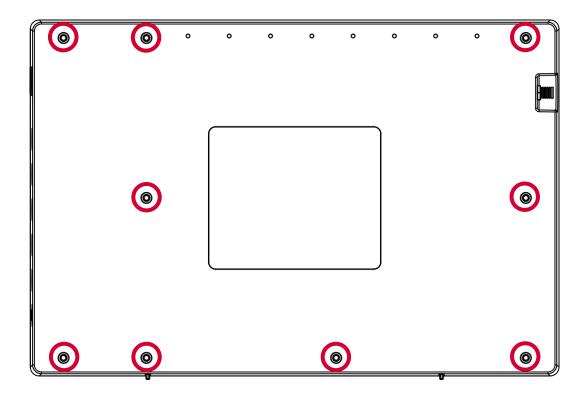


- Using the screwdriver unscrew and remove the 9 screws which hold the base and lid together.
- If you're unable to get the screws out of the holes, leave them in there. However, be sure they are all fully unscrewed before moving to the next step.
- Place any screws you can remove into the empty container to keep them safe.

13 Jun 2016 **4** of 8



Step 3 – Flip Over

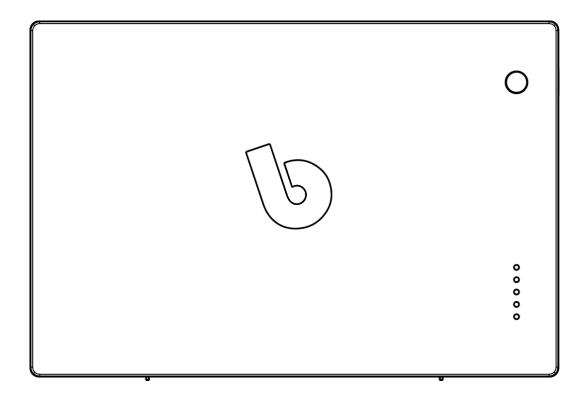


- Flip the BBOXX Home over on your work surface, keeping the lid and base together.
- Be aware of any screws that may fall if you couldn't remove them in the previous step.

13 Jun 2016 **5** of 8



Step 4 – Remove the lid

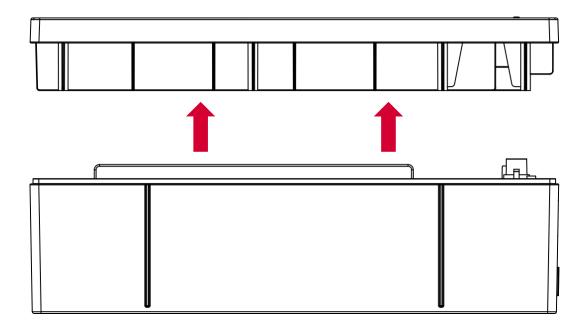


- Gently wiggle and lift the lid straight up.
- Once clear of the base and switch, place the lid to the side.

13 Jun 2016 **6** of 8



Step 5 – Remove the button

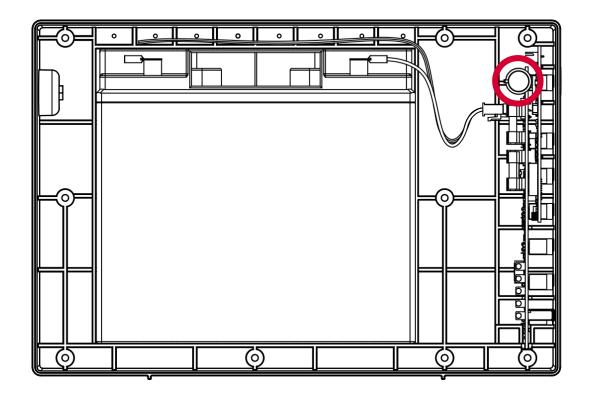

• Remove the button cap and place it in the container to keep safe.

You have now disassembled the BBOXX Home case.

13 Jun 2016 **7** of 8



Additional Support

If any of the below are true please contact BBOXX Product Support directly for help.

- I did not find this document helpful
- One or more of the steps in this document are confusing to follow
- There are errors in this document

Contact us at

products@bboxx.co.uk

13 Jun 2016 **8** of 8