

Fitting Instructions					
Page 1					
Make	Ford	Model	Kuga	Derivative	MK III REV A



Fitting Instructions					
Page 2					
Make	Ford	Model	Kuga	Derivative	MK III REV A




Starting vehicle images.



Remove the false floor.




Remove the polystyrene compartments and battery cover.

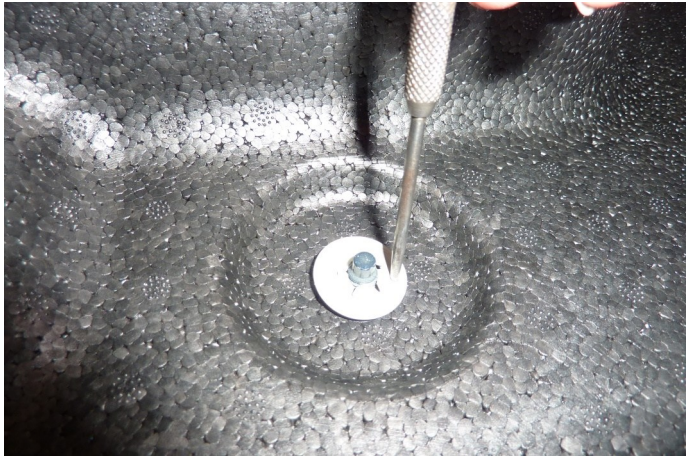

Fitting Instructions					
Page 3					
Make	Ford	Model	Kuga	Derivative	MK III REV A



Remove the boot sill by removing the plastic rivets and luggage loops.

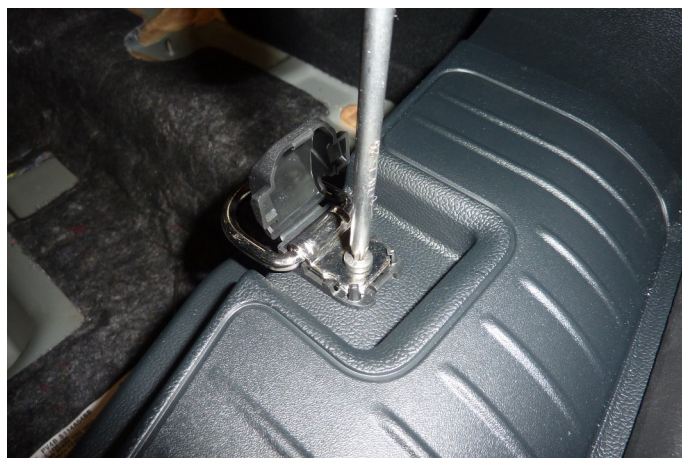

A T25 torx drive is required for removal of luggage loops.



Remove the side panel.



Note: there is a hidden screw behind the seat release lever.



The plastic panel at the RHS rear door sill will need to be removed to allow the boot side panel to come out.

Fitting Instructions					
Page 4					
Make	Ford	Model	Kuga	Derivative	MK III REV A




The side panel can then be pulled to one side without the need to disconnect the seat release cable.



The upper, inner and outer legs can be attached to the a-frame.



The outer leg is attached via 4x M10x20mm Countersunk Set Screws supplied.

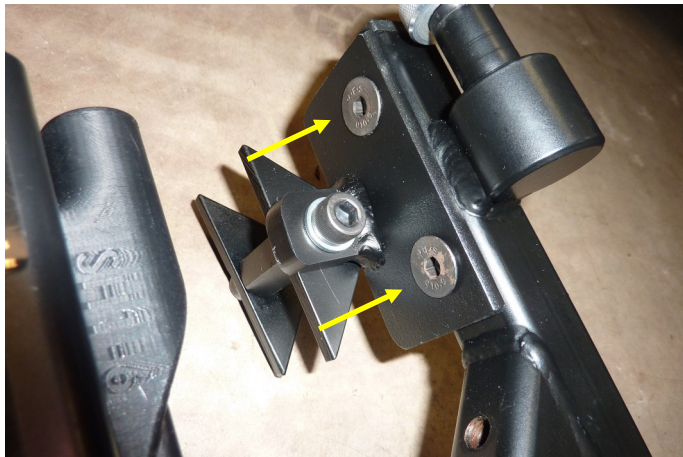

The upper leg is attached via 2x M10x20mm Countersunk Set Screws supplied.



The inner leg is attached via 2x M10x50mm Countersunk Set Screws supplied.

Fitting Instructions

Page 5

Make	Ford	Model	Kuga	Derivative	MK III	REV A
-------------	------	--------------	------	-------------------	--------	-------



Remove the rear seat fixing nut shown (19mm socket).



Temporarily position the hoists inner leg on this stud in order to mark out and drill the upper and outer leg fixing holes.



Ensure the a-frame is as vertical as possible (taking into consideration whether the vehicle is parked on a flat surface).

Fitting Instructions					
Page 6					
Make	Ford	Model	Kuga	Derivative	MK III REV A



Drill for the upper leg attachment.

Ensure the use of a drill stop so you cannot drill too far.



Place the backplate in from the rear so the stud shows through the drilled hole.



Attach the front plate.




Fasten the pylon in place for the upper fixing.

Fitting Instructions					
Page 7					
Make	Ford	Model	Kuga	Derivative	MK III REV A



Drill and temporarily attach the outer leg.
The head of the screw can be held in place using the grub screw in the ring.

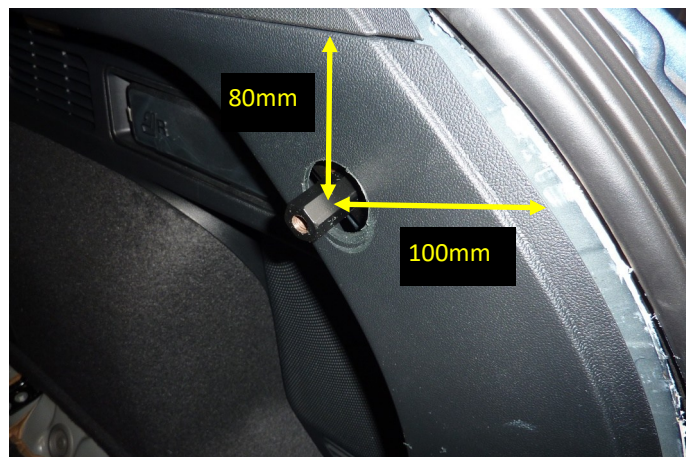

Remove the a-frame and re-attach the side panel and sill plastics. A hole will need to be drilled for the upper leg pylon to protrude.

Approximate measurements to the centre of the hole are shown above.



Use a rubber pylon flange to cover the hole around the pylon.

Fitting Instructions					
Page 8					
Make	Ford	Model	Kuga	Derivative	MK III REV A




Once the plastics are re-fitted, the a-frame can be tightened into the vehicle.





Appropriate underseal should be used to protect the outer leg spreader plate.

The control box can be attached and wired to the 12V battery located in the boot space.
Red to Yellow (12V) / Black to Green (Earth)
Note: photograph shows old style a-frame

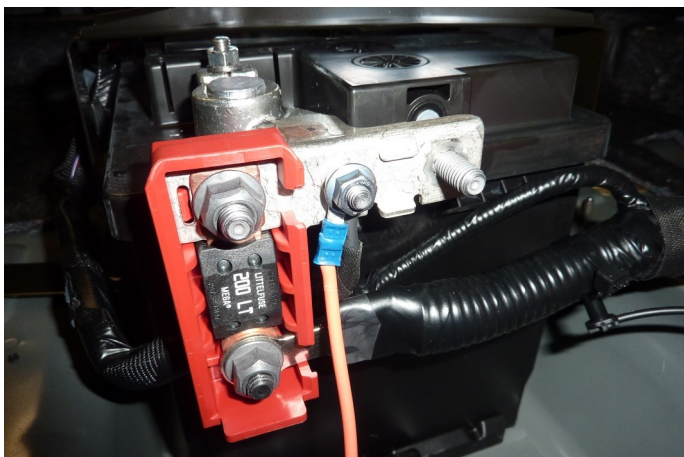


Use a suitable chassis earthing point.

Fitting Instructions						
Page 9						
Make	Ford	Model	Kuga	Derivative	MK III	REV A

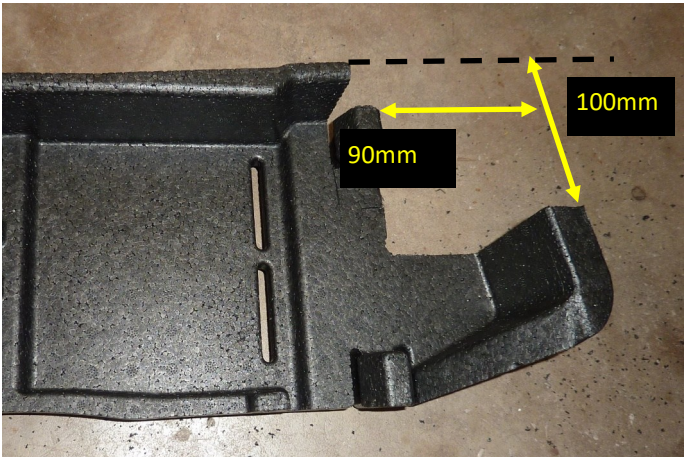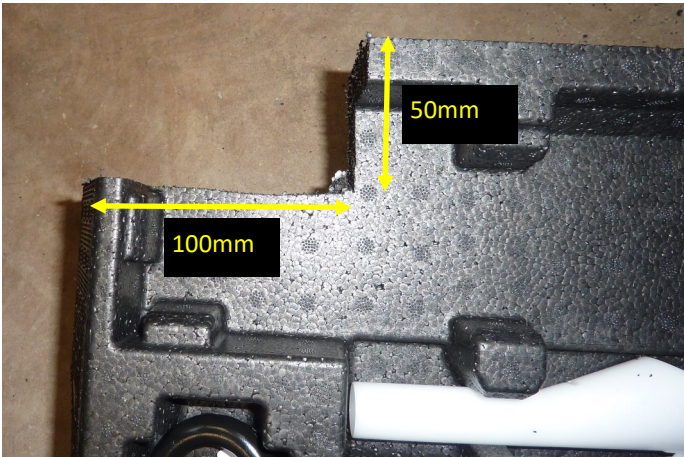

The polystyrene inserts can be trimmed and replaced.

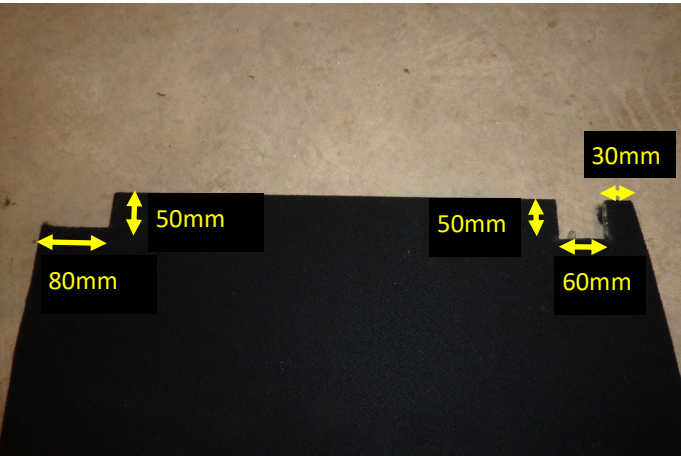

The false floor can also be trimmed.



Fit the floor once trimmed.



The fitting instructions show the older style of a-frame. Please use the provided kit to mount the control box, restraint reel and restraint buckle in suitable locations.

Fitting Instructions

Page 10

Make	Ford	Model	Kuga	Derivative	MK III	REV A
------	------	-------	------	------------	--------	-------

