

Fitting Instructions						
Page 1						
Make	Kia	Model	Sportage	Derivative	MK V	REV B



Fitting Instructions						
Page 2						
Make	Kia	Model	Sportage	Derivative	MK V	REV B



Pre-installation pictures.



Remove the false floor.



Remove the polystyrene sub-tray.



Remove the boot sill. This is held in by 2x plastic rivets.

Fitting Instructions						
Page 3						
Make	Kia	Model	Sportage	Derivative	MK V	REV B



Remove the 3x screws holding in the side panel base.



Unclip and lift up the second row seat base.



Then remove the hidden plastic rivet shown in order to remove the rear door plastic sill.

Fitting Instructions					
Page 4					
Make	Kia	Model	Sportage	Derivative	MK V REV B



Remove the screw shown that retains the side panel.



Remove the side panel.



Remove (10mm socket) and unclip the sub-woofer.




Fitting Instructions						
Page 5						
Make	Kia	Model	Sportage	Derivative	MK V	REV B



Attach the upper leg pylon into the existing hole by placing the threaded backplate behind the d-pillar.



Attach the pylon, using the washer as shown.

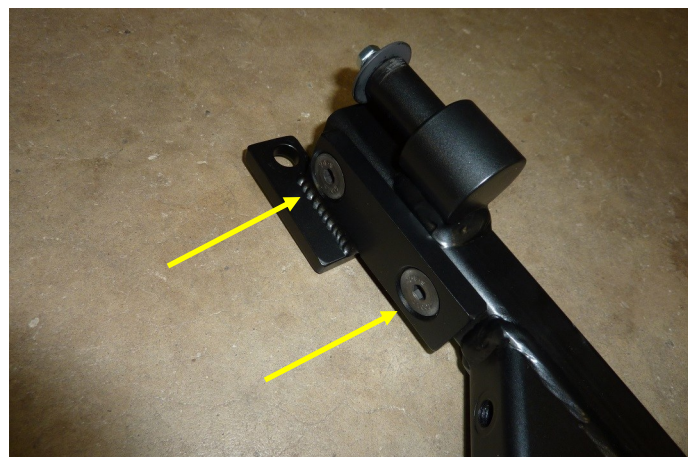


Attach the rest of the upper leg bracketry to the frame as shown.

2x M10x20mm Countersunk Set Screw



Attach the inner leg to the frame:

2x M10x20mm Countersunk Set Screw

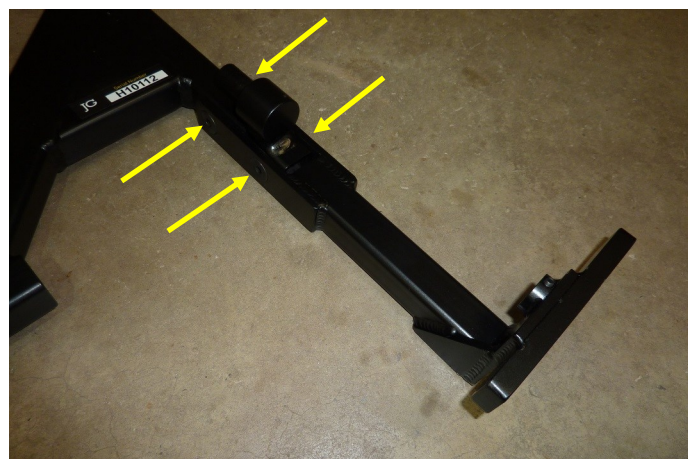

Attach the outer leg to the frame:

4x M10x20mm Countersunk Set Screw

Fitting Instructions					
Page 6					
Make	Kia	Model	Sportage	Derivative	MK V REV B



The frame is now assembled as shown.




Temporarily attach the a-frame into the vehicle via the upper leg pylon and then mark the holes for the inner and outer legs.



Drill the marked holes. Ensure the use of a drill stop.


Fitting Instructions						
Page 7						
Make	Kia	Model	Sportage	Derivative	MK V	REV B

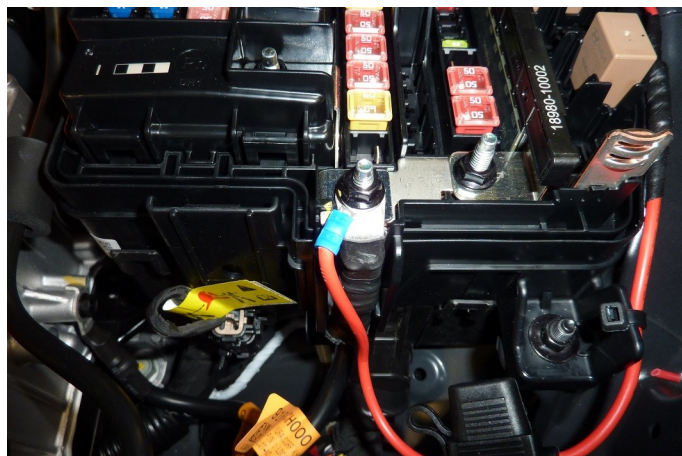

Remove the frame from the vehicle and install the power wire. On the design vehicle the 12V battery supply was in the engine bay as shown.



The wire was routed through an existing loom grommet at the passenger side.

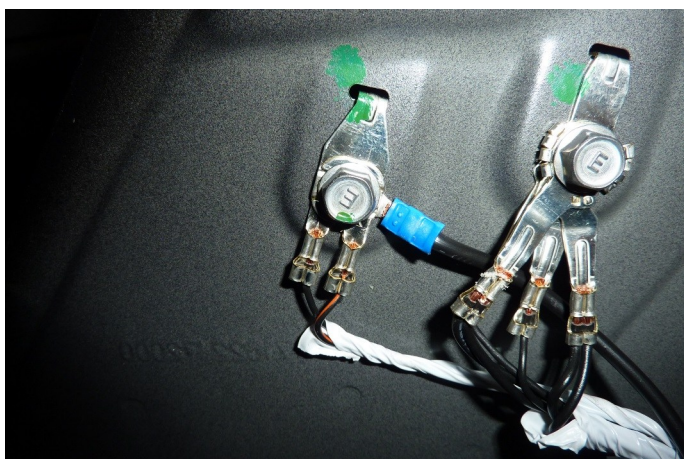


A suitable earthing point was found behind the boot side panel.


Fitting Instructions						
Page 8						
Make	Kia	Model	Sportage	Derivative	MK V	REV B



Re-fit the sub-woofer, side panel and rear door plastic sill. Drill a clearance hole for the upper leg pylon to protrude.

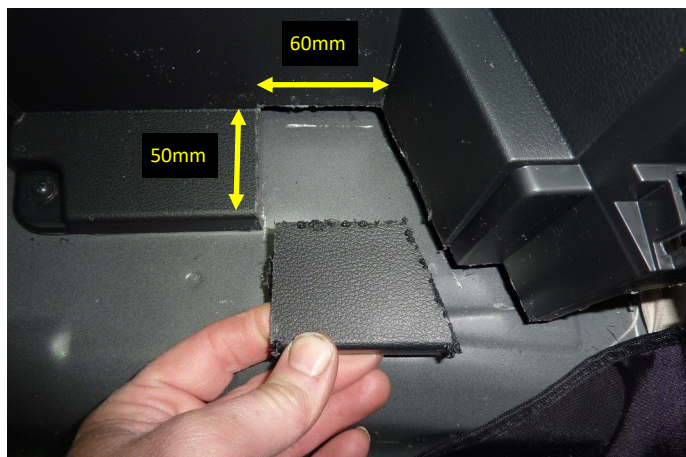

The cut outs for the inner and outer legs can be done in situ, using the following photos as a guide.


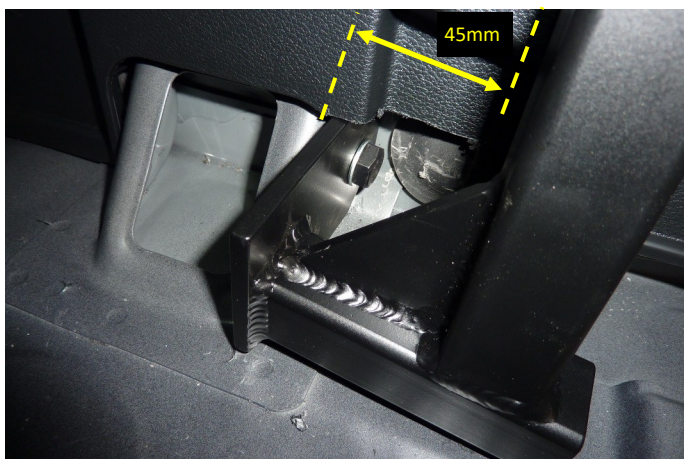


The boot sill can be refitted and will require a small cut out.

Fitting Instructions						
Page 9						
Make	Kia	Model	Sportage	Derivative	MK V	REV B




The inner leg now straddles cooling pipes.
 Take care when drilling to not disturb or damage these pipes.

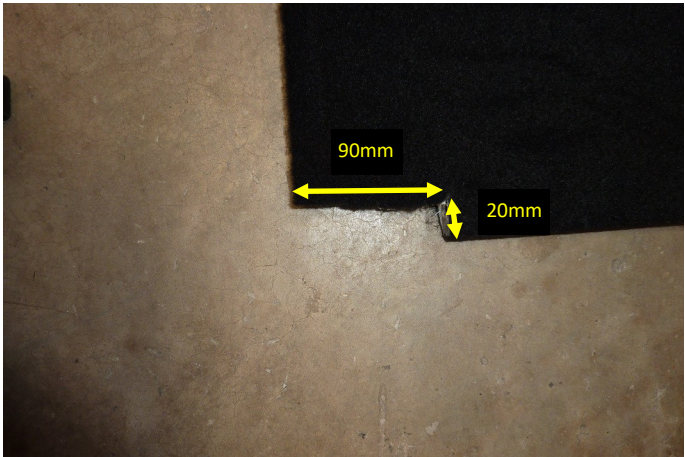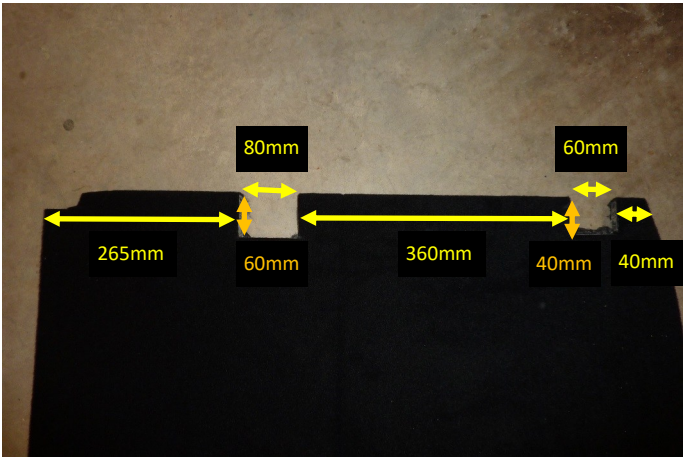

The false floor can be cut using the photos as a guide.

Fitting Instructions						
Page 10						
Make	Kia	Model	Sportage	Derivative	MK V	REV B

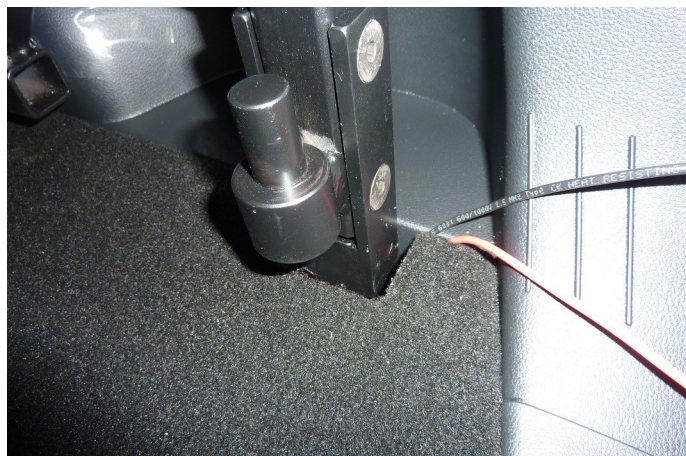

Once the frame is fitted, the false floor will sit around the legs as shown.



Cover the hole by the upper leg pylon using a pylon flange.



The inner and outer legs can be attached as shown. The inner leg fixing is internal. For the outer leg, Use the 4mm spreader plates under the vehicle and apply an appropriate corrosion resistant seal-ant. The grub screw and ring can be used to assist in holding the hex head set screw in place inside the vehicle whilst tightening underneath.

Fitting Instructions						
Page 11						
Make	Kia	Model	Sportage	Derivative	MK V	REV B



Fully setup the hoist in the vehicle.

The fitting instructions show the older style of a-frame. Please use the provided kit to mount the control box, restraint reel and restraint buckle in suitable locations.



Ensure the wiring is complete, all fixings are secure and the hoist operates.

Fitting Instructions						
Page 12						
Make	Kia	Model	Sportage	Derivative	MK V	REV B



Setup the hoist for the mobility device.

